


Item # : LM030-66TV

Assembly Instructions

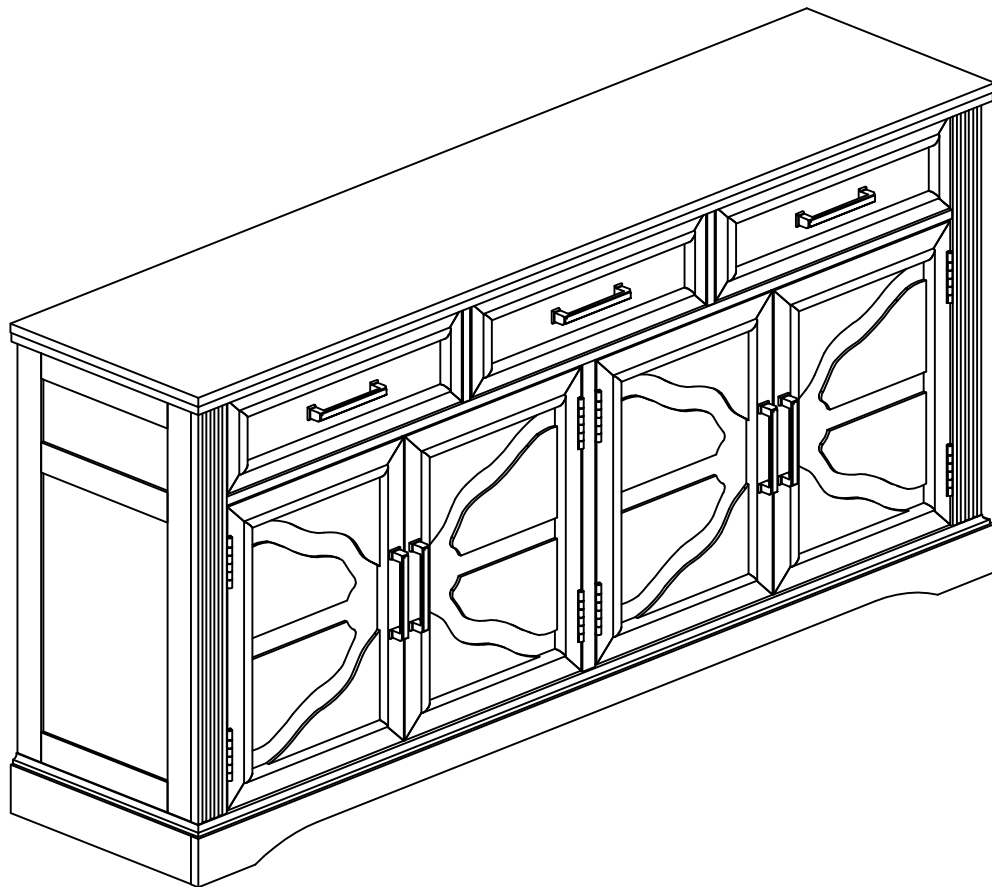


Customer Service E-mail Address: LINGMU1703583851@163.com


Revsied 01/07/2023

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

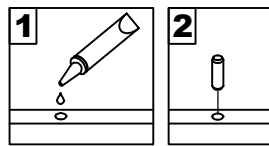


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

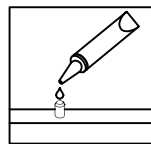


- VI. A Phillips head screwdriver is required for the assembly of this product .

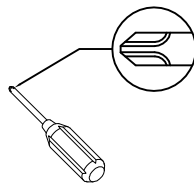


- VII. Power tools should not be used to assemble this product .

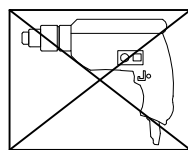


- VIII. Concealed hinges are three-way adjustable.

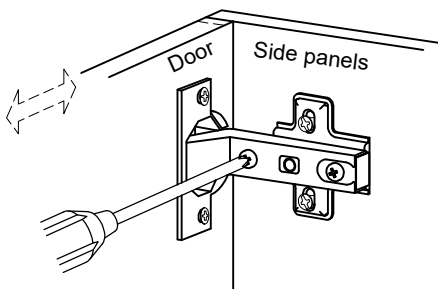

Horizontal
by screw adjustment

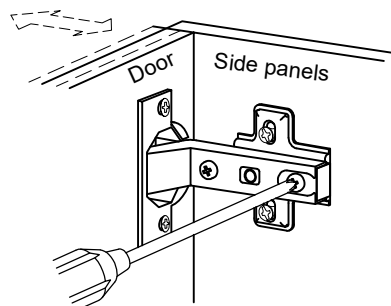


In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

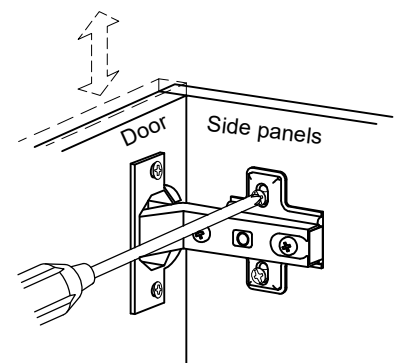
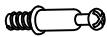



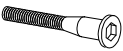


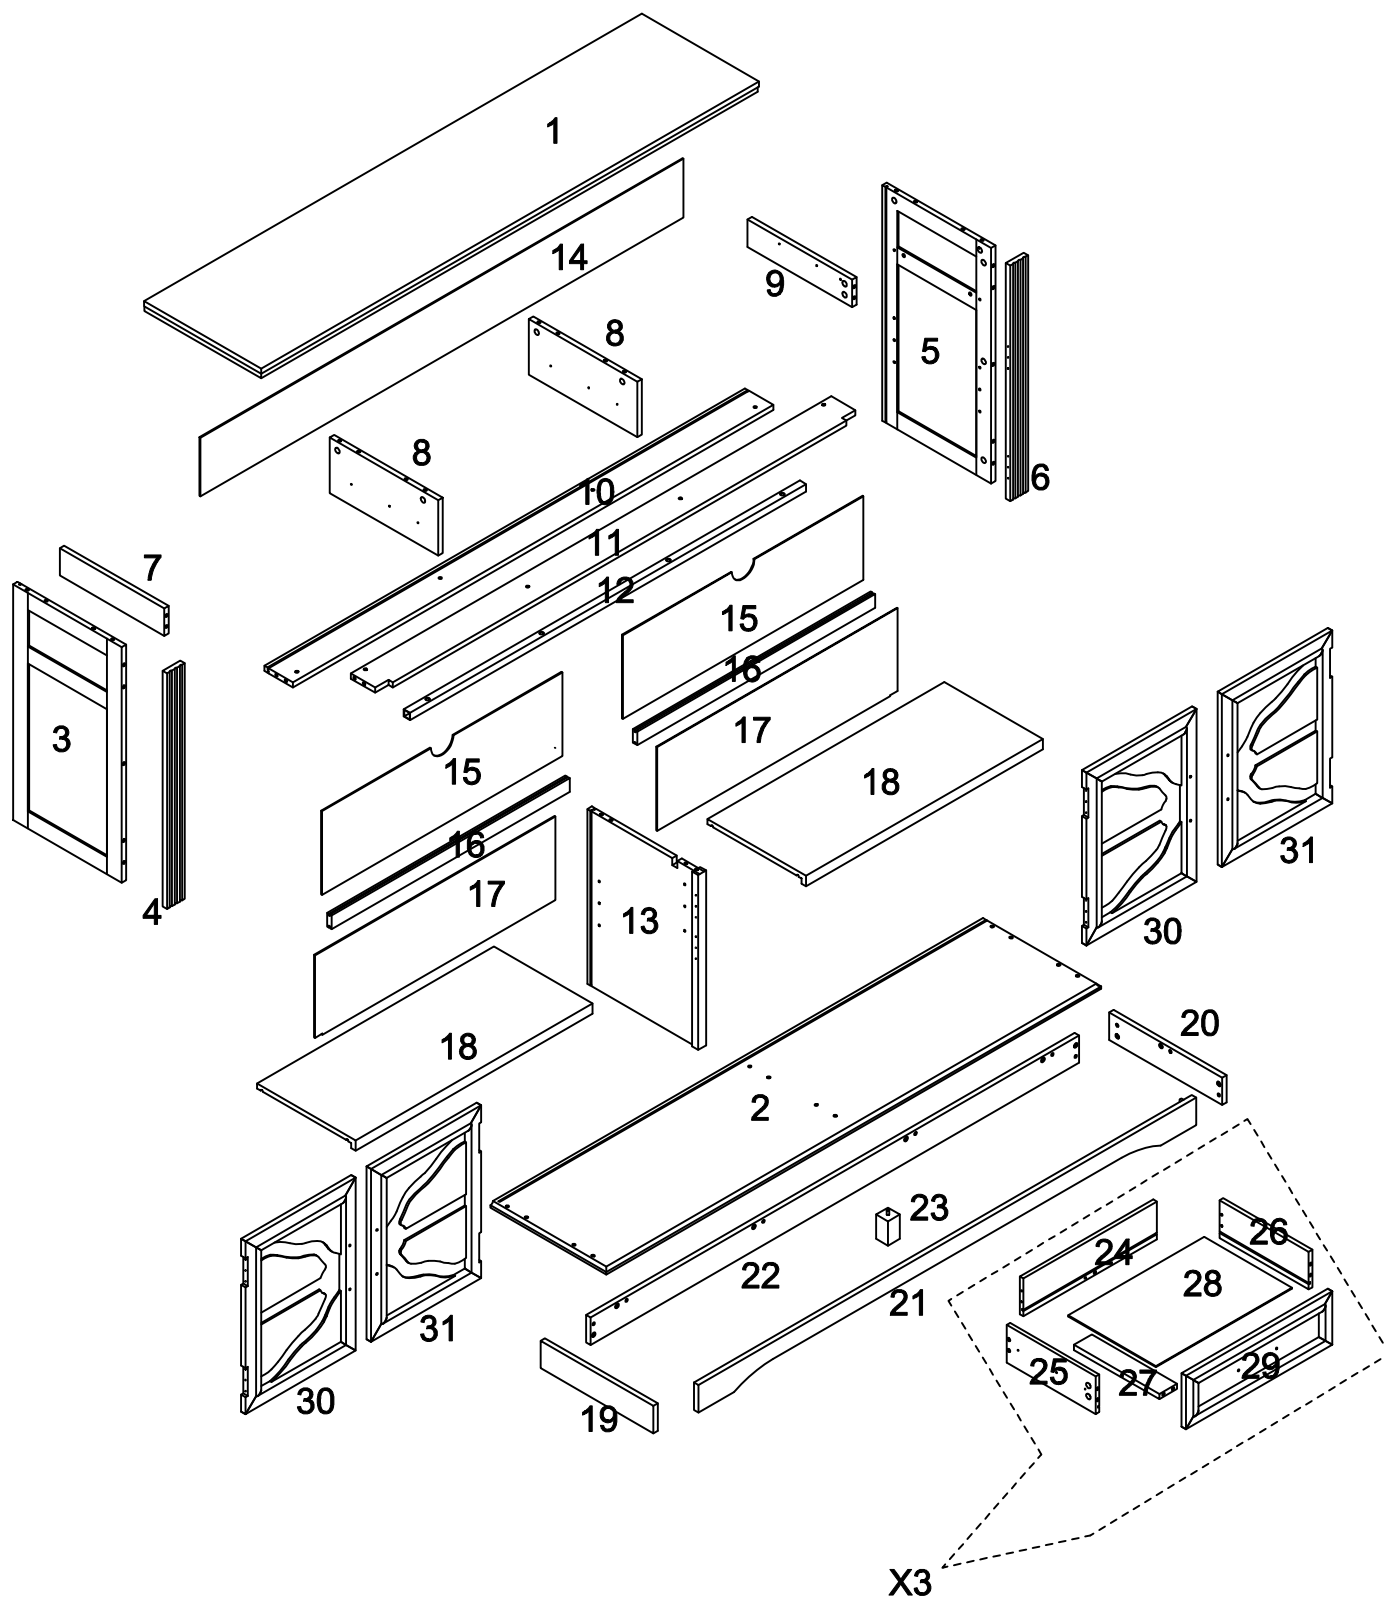












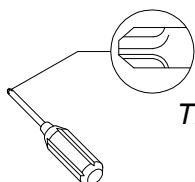
Vertical
Via slots in the mounting
plate or via cam adjustment

Parts List



Hardware List

| | | | | |
|---|---|-----------|-------------------|--------|
| A |  | Ø8x30mm | Wooden dowel | 30 pcs |
| B |  | Ø6x35mm | Cam lock | 39 pcs |
| C |  | Ø15x11mm | Cam lock | 27 pcs |
| D |  | Ø15x9mm | Cam lock | 12 pcs |
| E |  | Ø30mm | Sticker | 39 pcs |
| F |  | Ø6x50mm | Bolt | 14 pcs |
| G |  | M 4 | Hex Key | 1 pc |
| H |  | M6*12mm | Screw | 28 pcs |
| I |  | | Angular Code | 14 pcs |
| J |  | M6*28mm | Screw | 4 pcs |
| K |  | | Hold hands | 7 pcs |
| L |  | Ø4x9mm | Screw | 6 pcs |
| M |  | Ø4x19mm | Screw | 8 pcs |
| N |  | Ø8x5x16mm | Shelf support pin | 8 pcs |
| O |  | | Bolt | 4 pcs |
| P |  | Ø3x15mm | Screw | 4 pcs |
| Q |  | | Door stopper | 2 pcs |
| R |  | Ø3.5x15mm | Screw | 64 pcs |
| S |  | | Hinge | 8 pcs |




Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Hardware List


| | | | | |
|----|---|---------------------|-----------------------|--------|
| T |  | | Plastic wedge | 18 pcs |
| U |  | Ø3x17mm | Screw | 18 pcs |
| V |  | | Anti falling hardware | 4 pcs |
| W |  | Ø4x15mm | Screw | 4 pcs |
| X |  | Ø4x35mm | Screw | 4 pcs |
| Y |  | | House lizard | 4 pcs |
| Z |  | | Strip | 2 pcs |
| AA |  | Individually packed | Drawer slider | 3 pcs |
| BB |  | Ø3x12mm | Screw | 42 pcs |
| CC |  | Ø4x32mm | Screw | 15 pcs |
| DD |  | | Small White Glue | 1 pc |

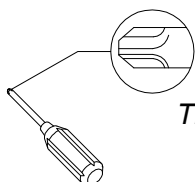

Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*


Step 1

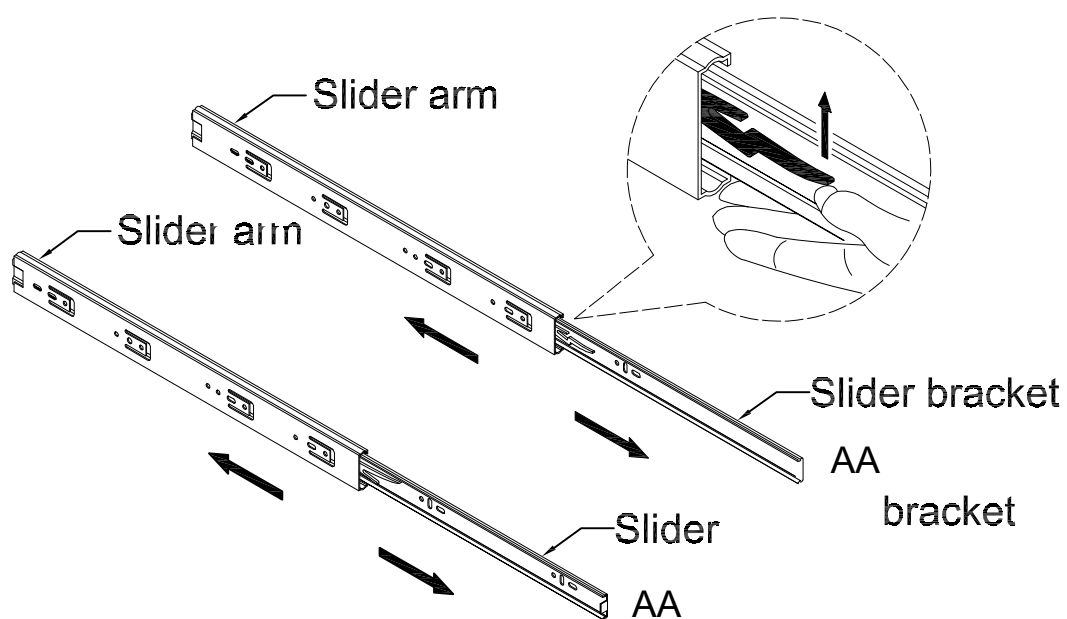


Put slider bracket into slider arm as per diagram.


Step 2

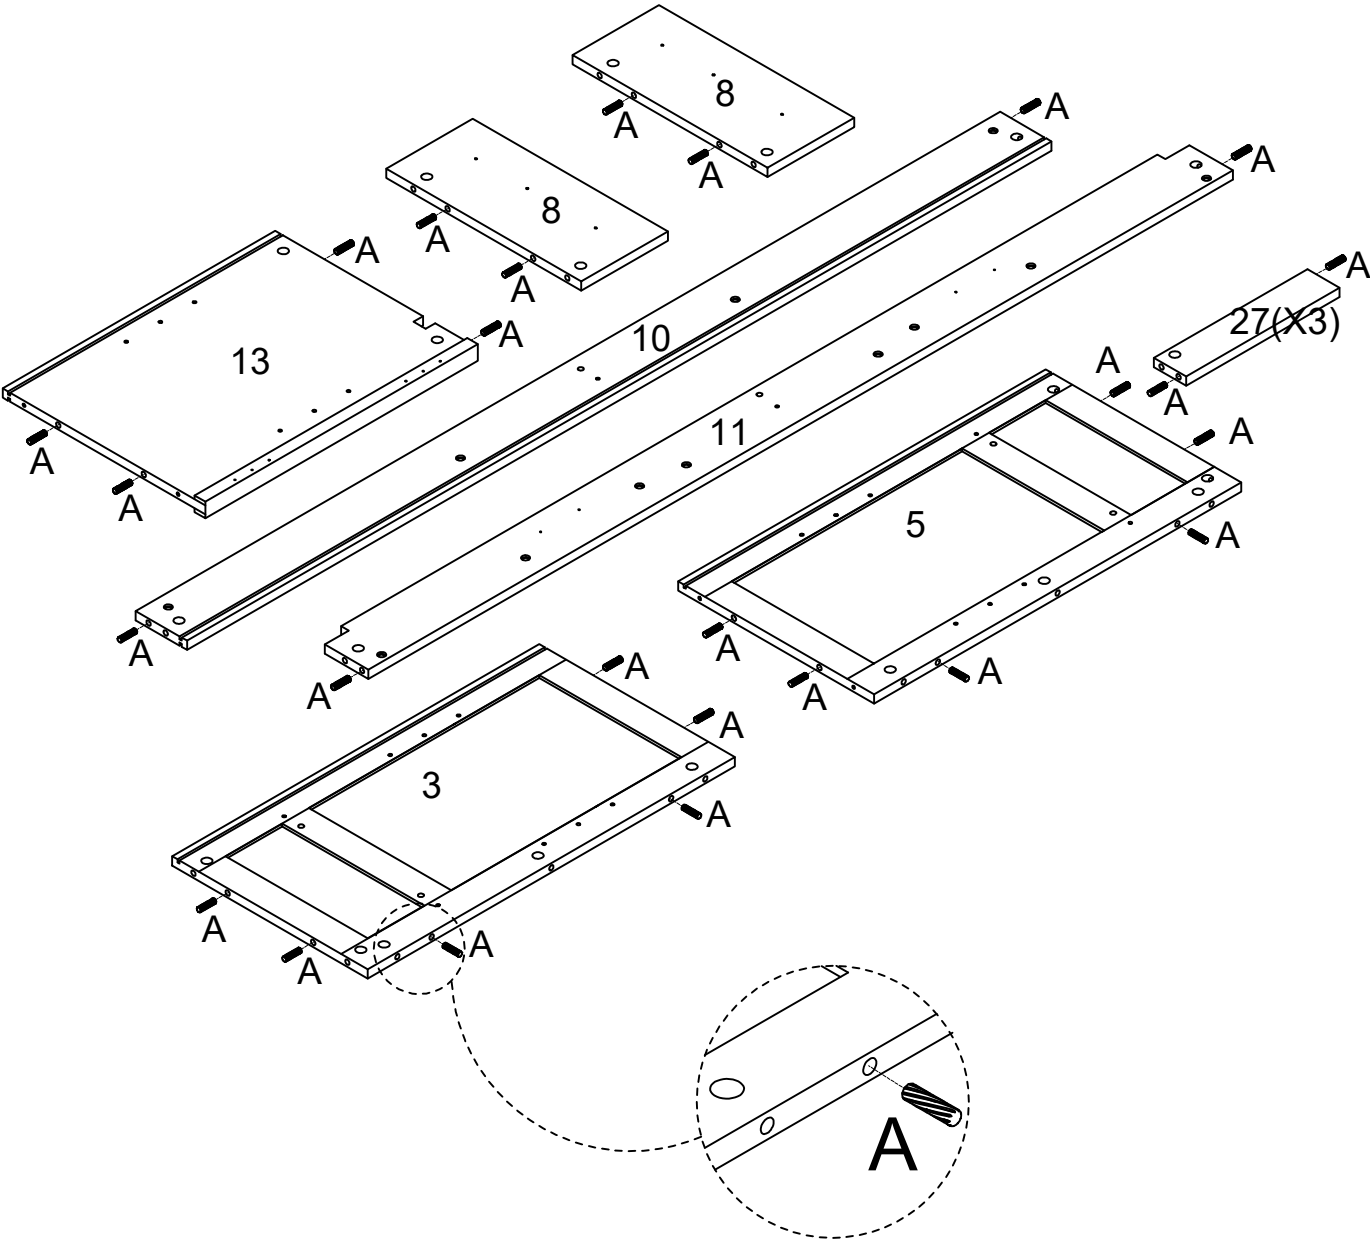


| |
|---|
| A |
|  |
| X30 |

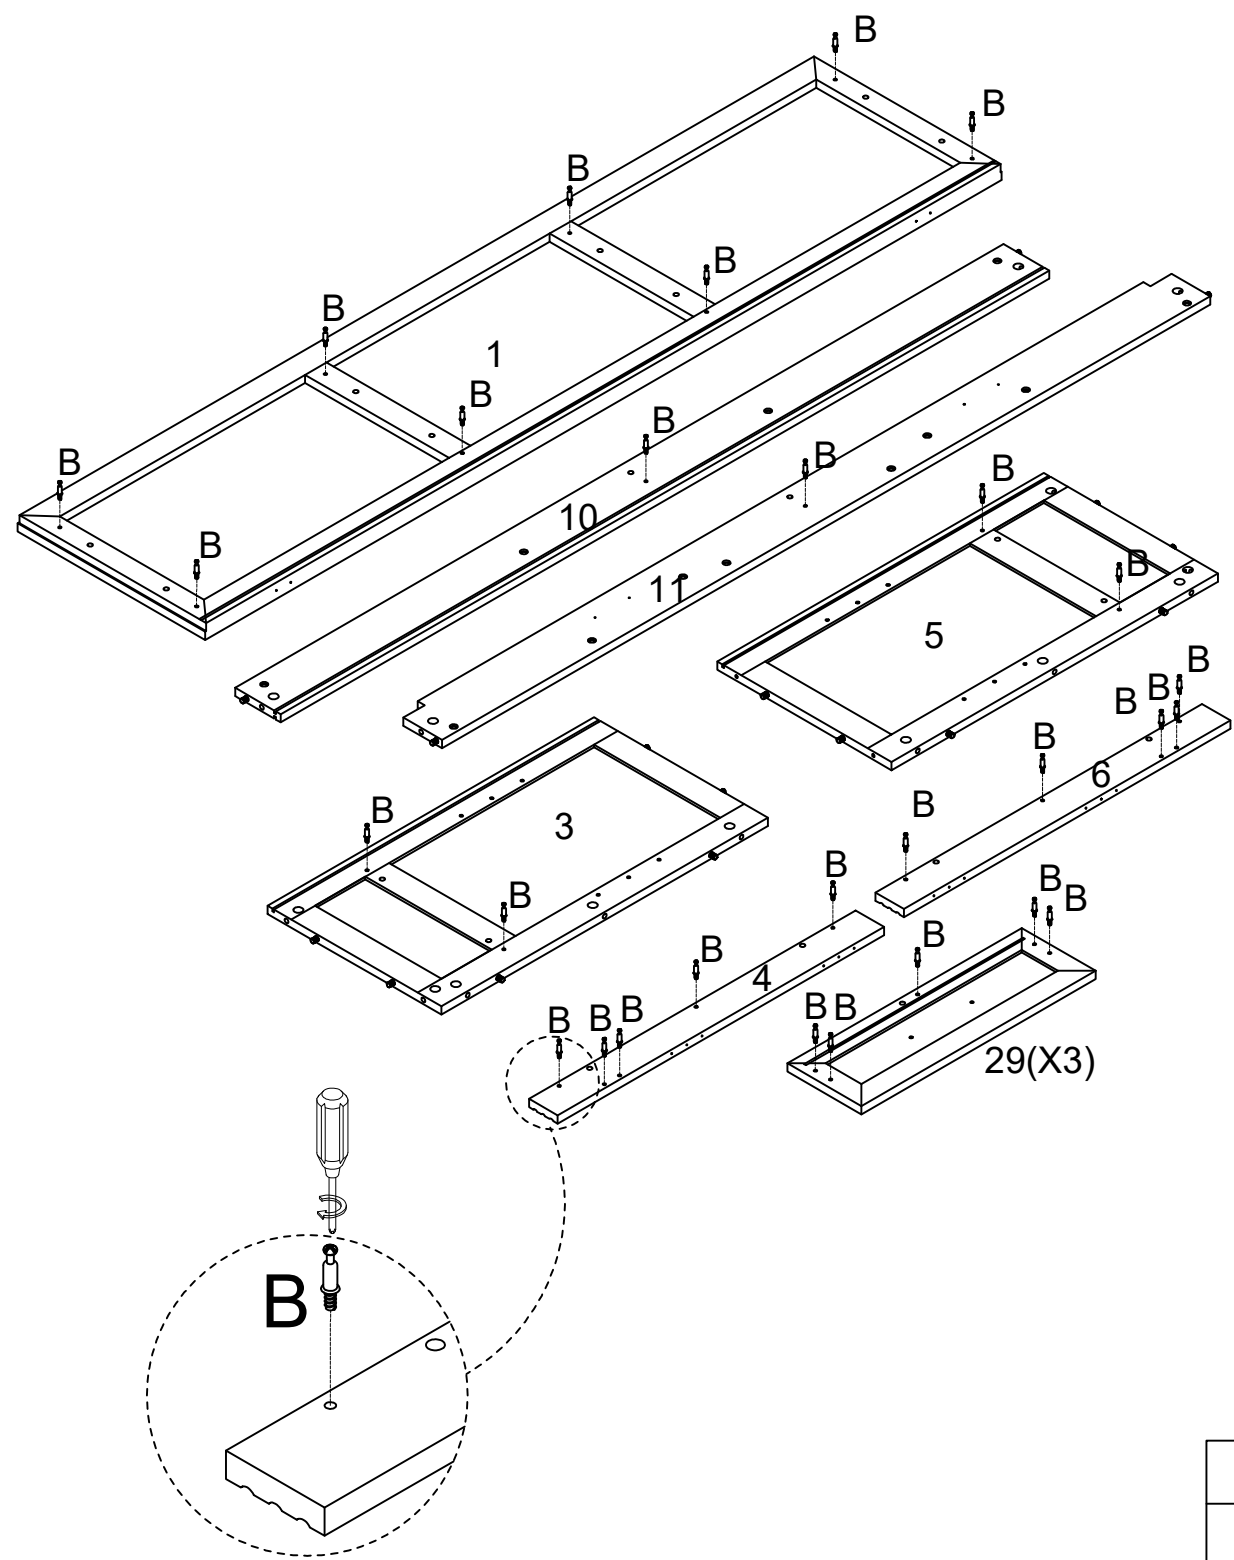

Step 3




| |
|---|
| B |
|  |
| X39 |

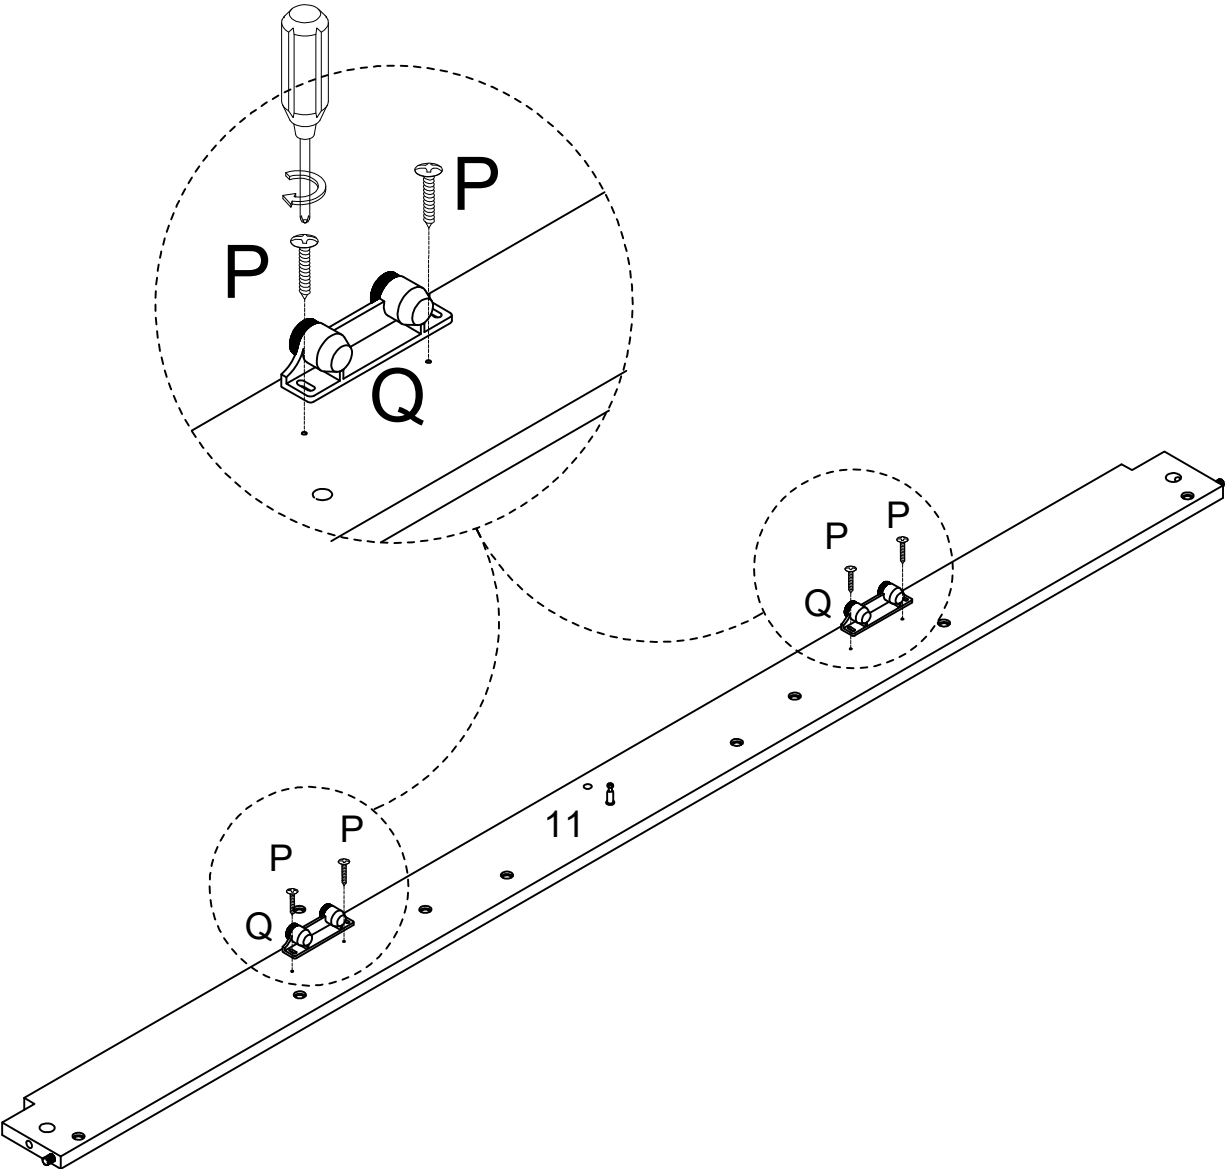

Step 4





| Q | P |
|---|---|
|  |  |
| X2 | X4 |

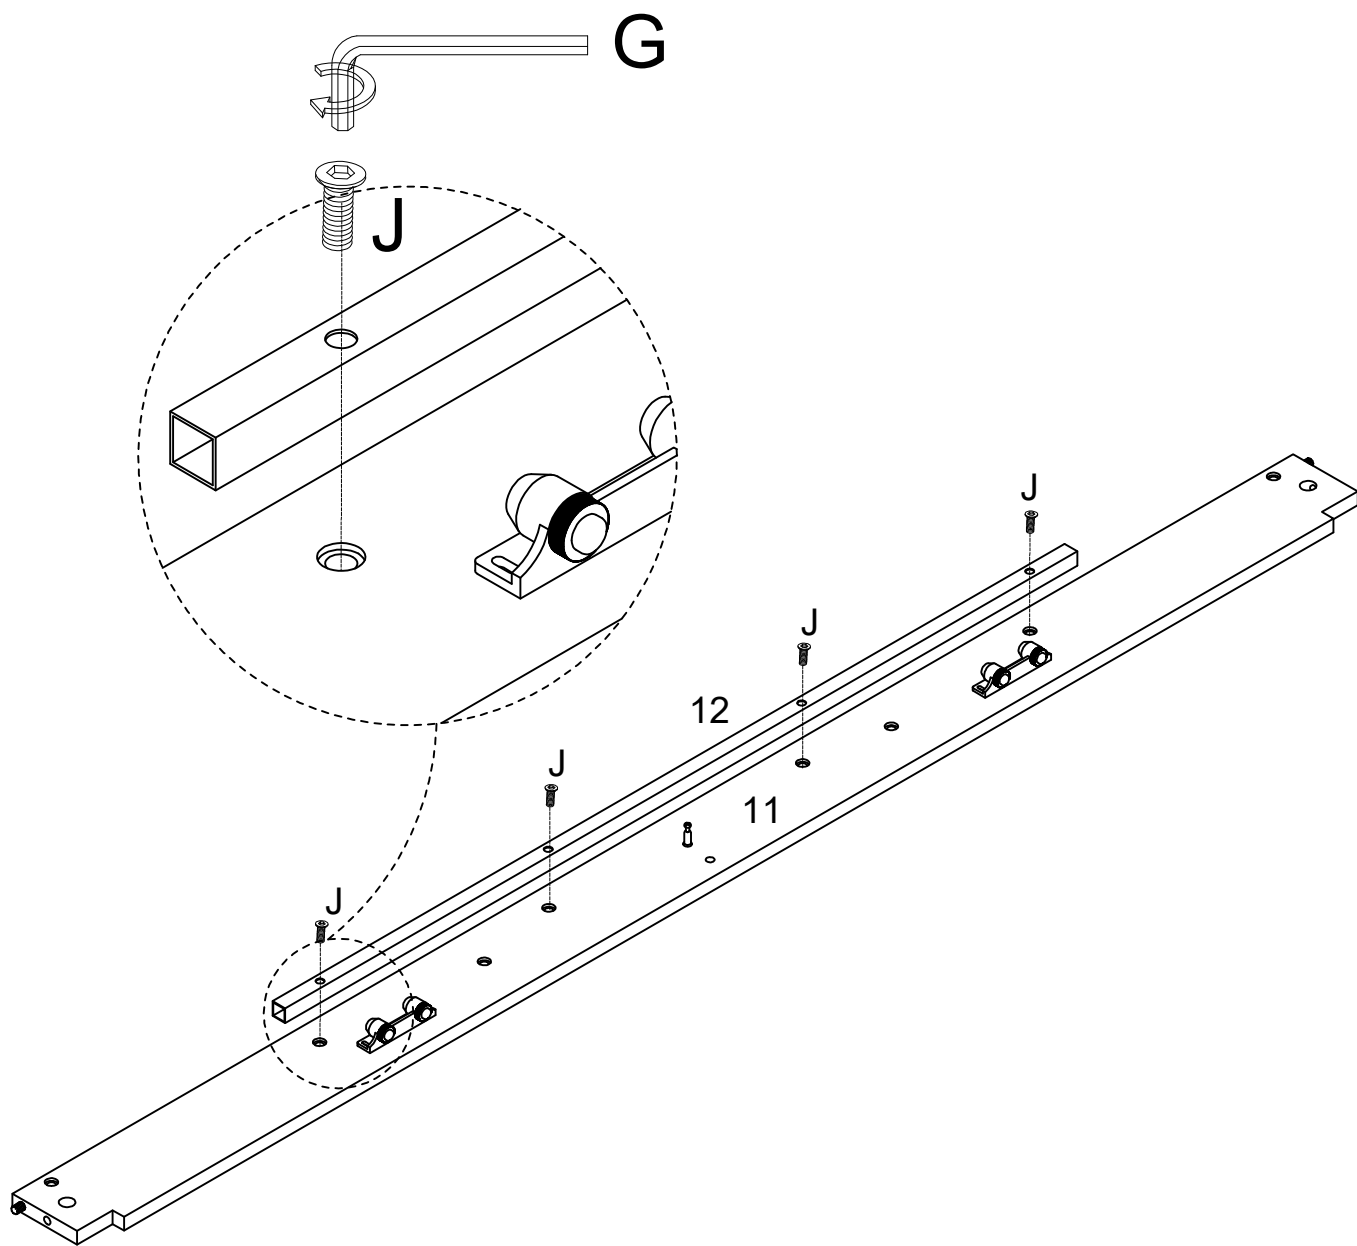
Step 5





| G | J |
|---|---|
|  |  |
| X1 | X4 |


Step 6

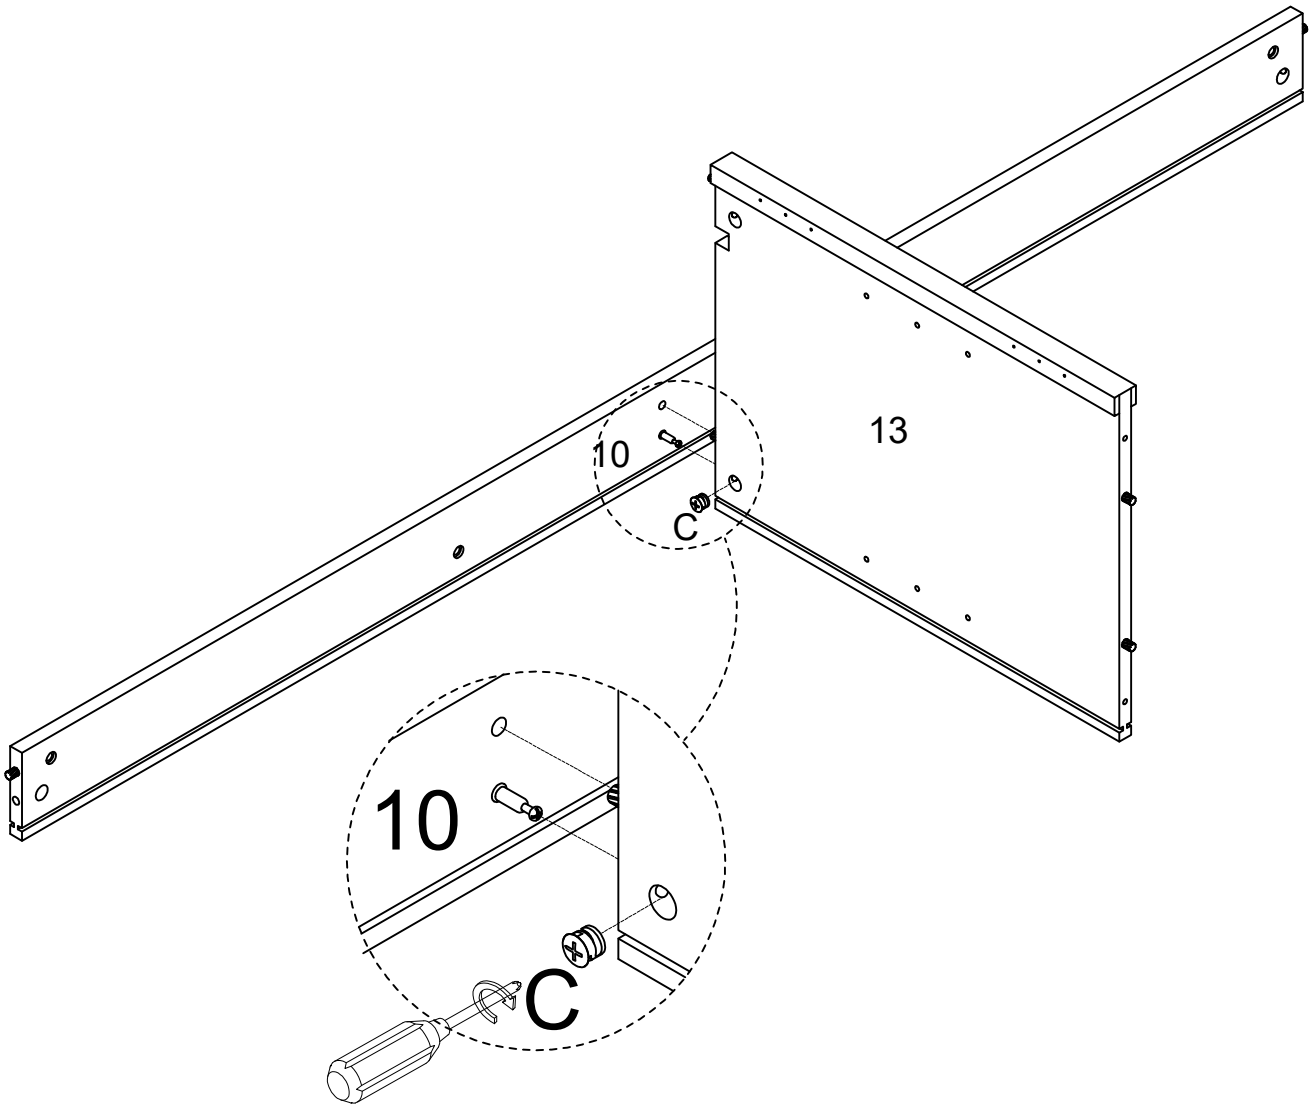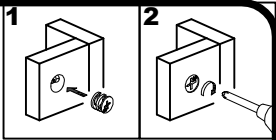



| |
|---|
| C |
|  |
| X1 |


Step 7

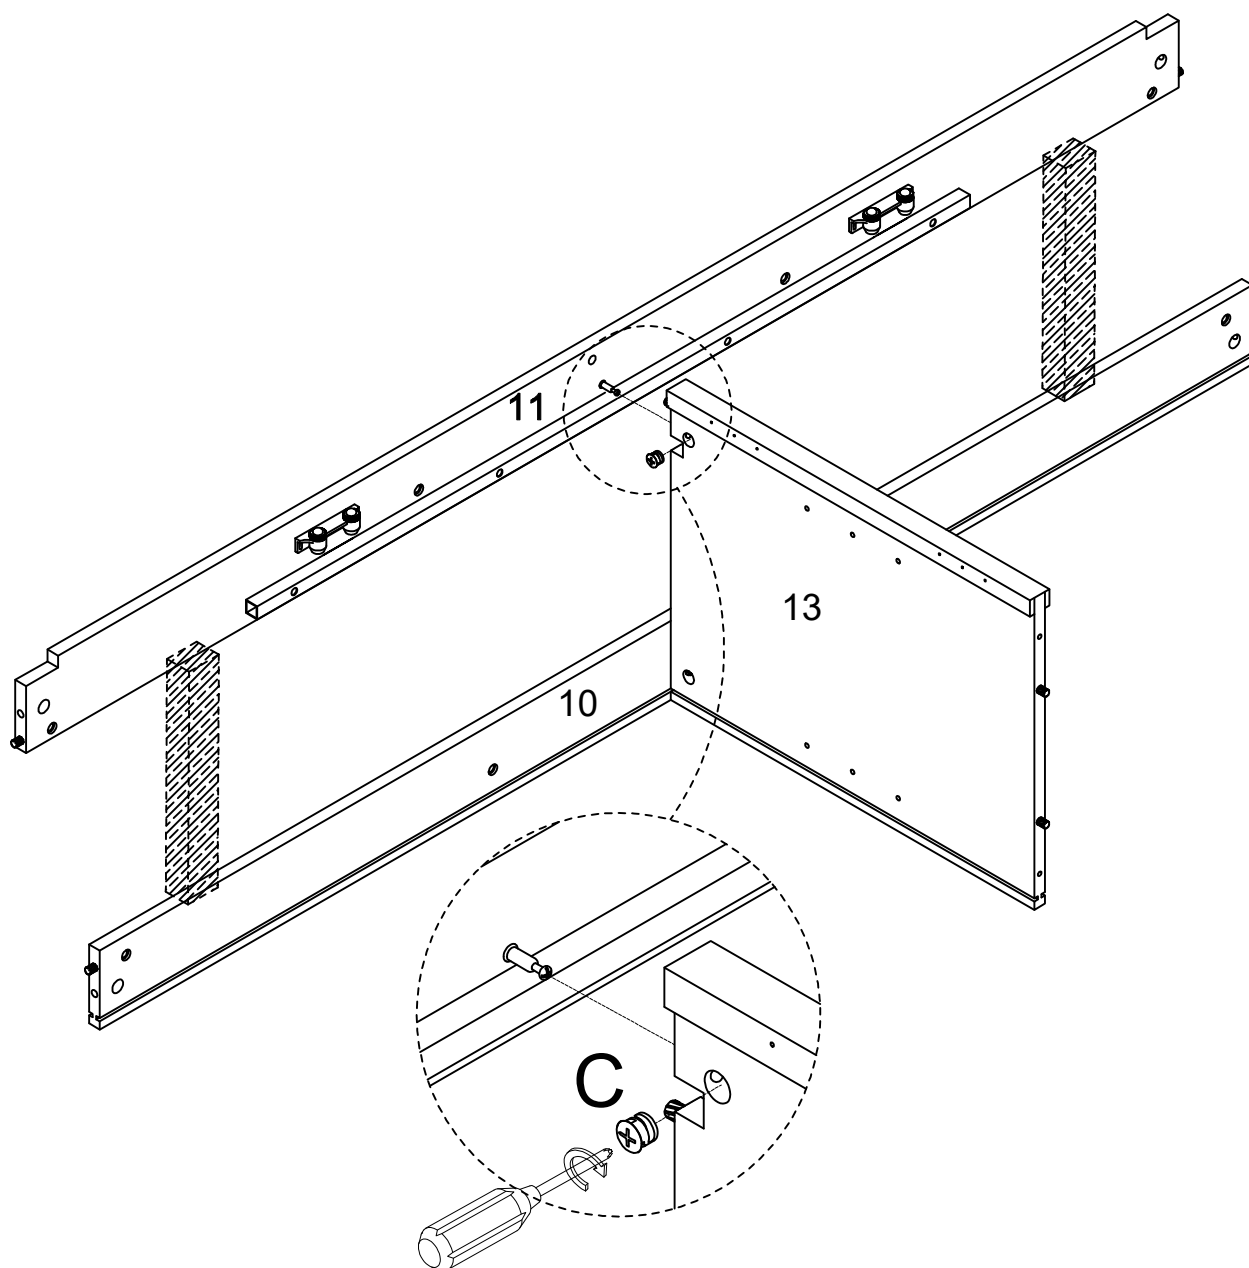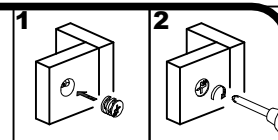



| |
|---|
| C |
|  |
| X1 |


Step 8

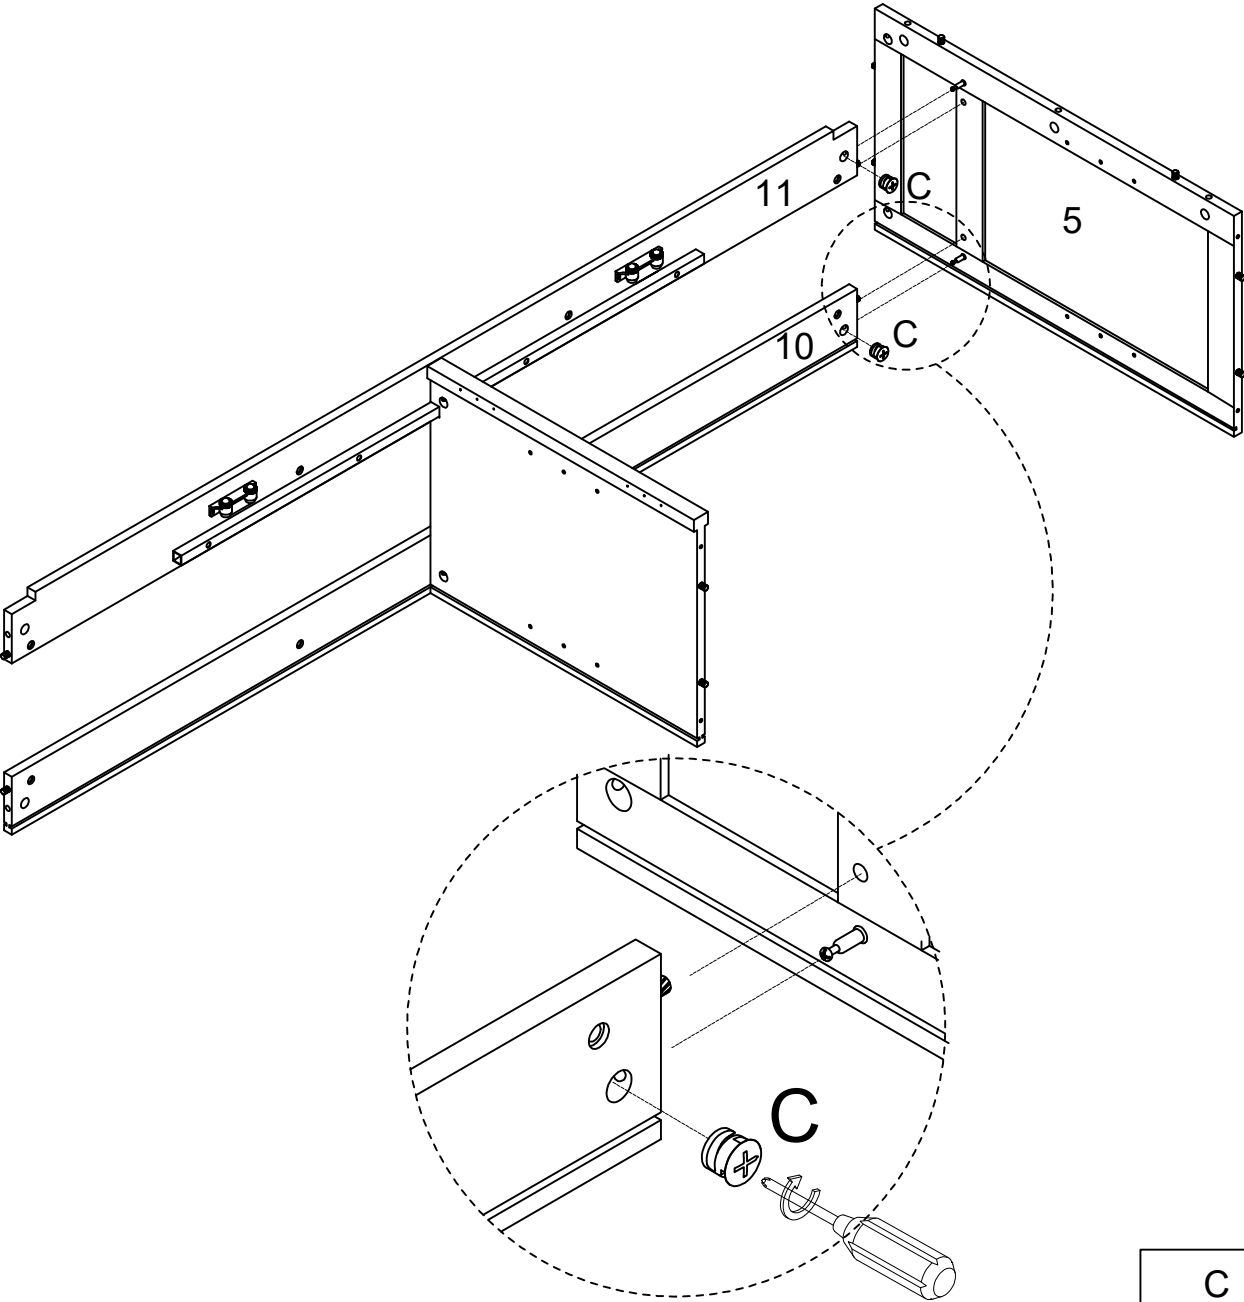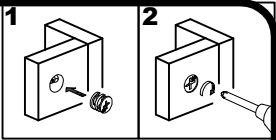


| |
|---|
| C |
|  |
| X2 |

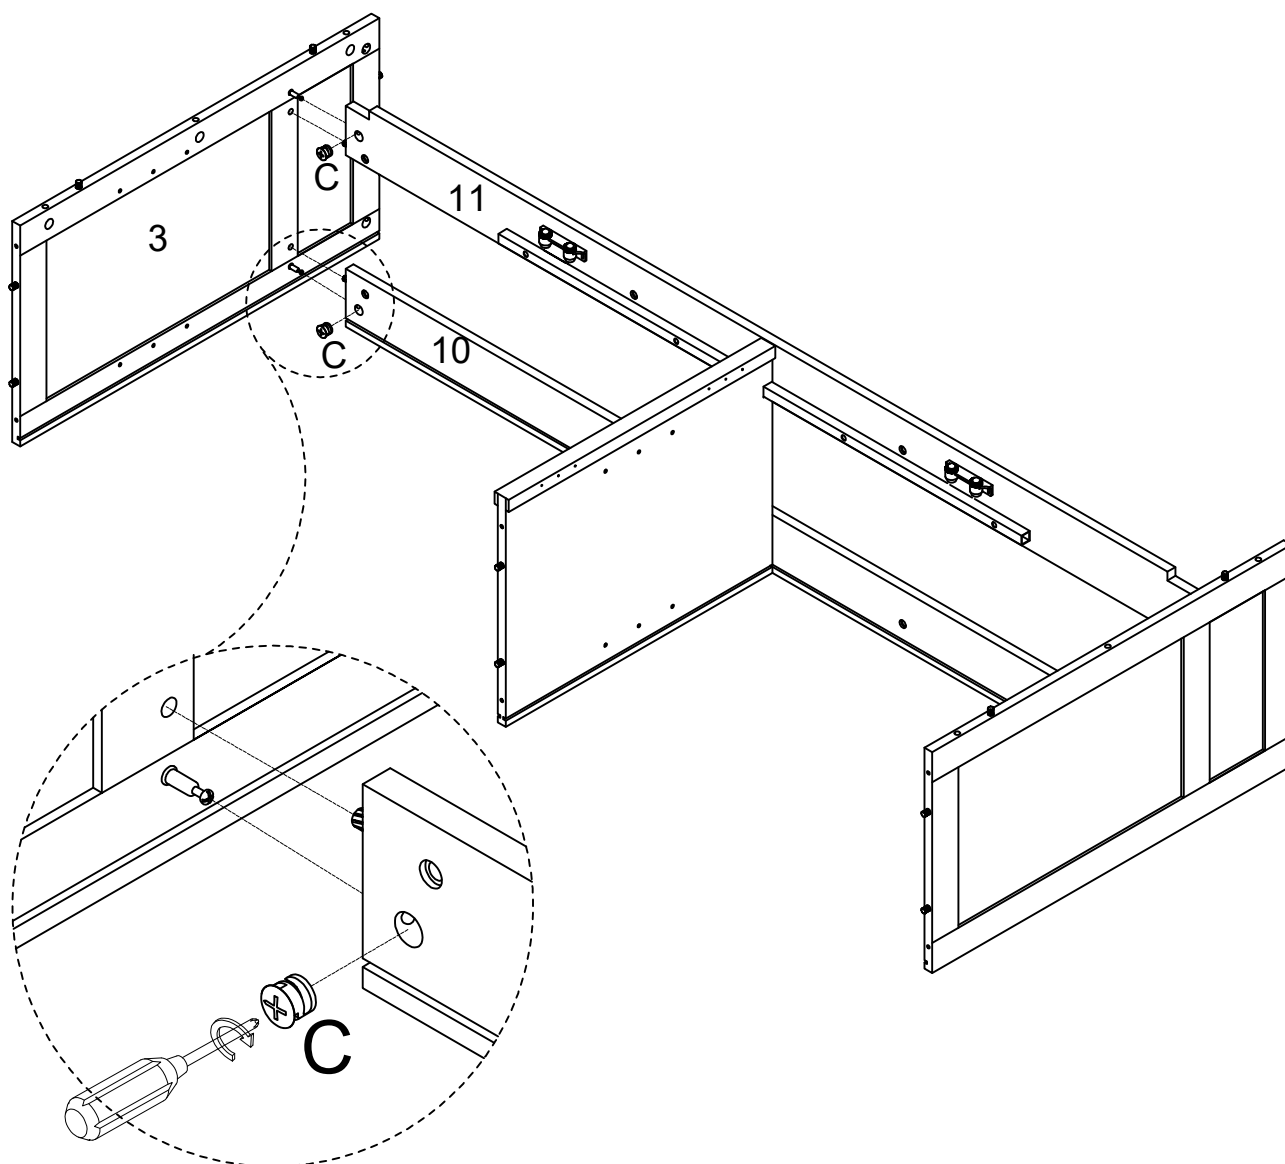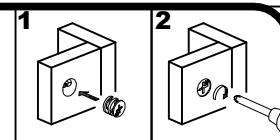

Step 9




| |
|---|
| C |
|  |
| X2 |

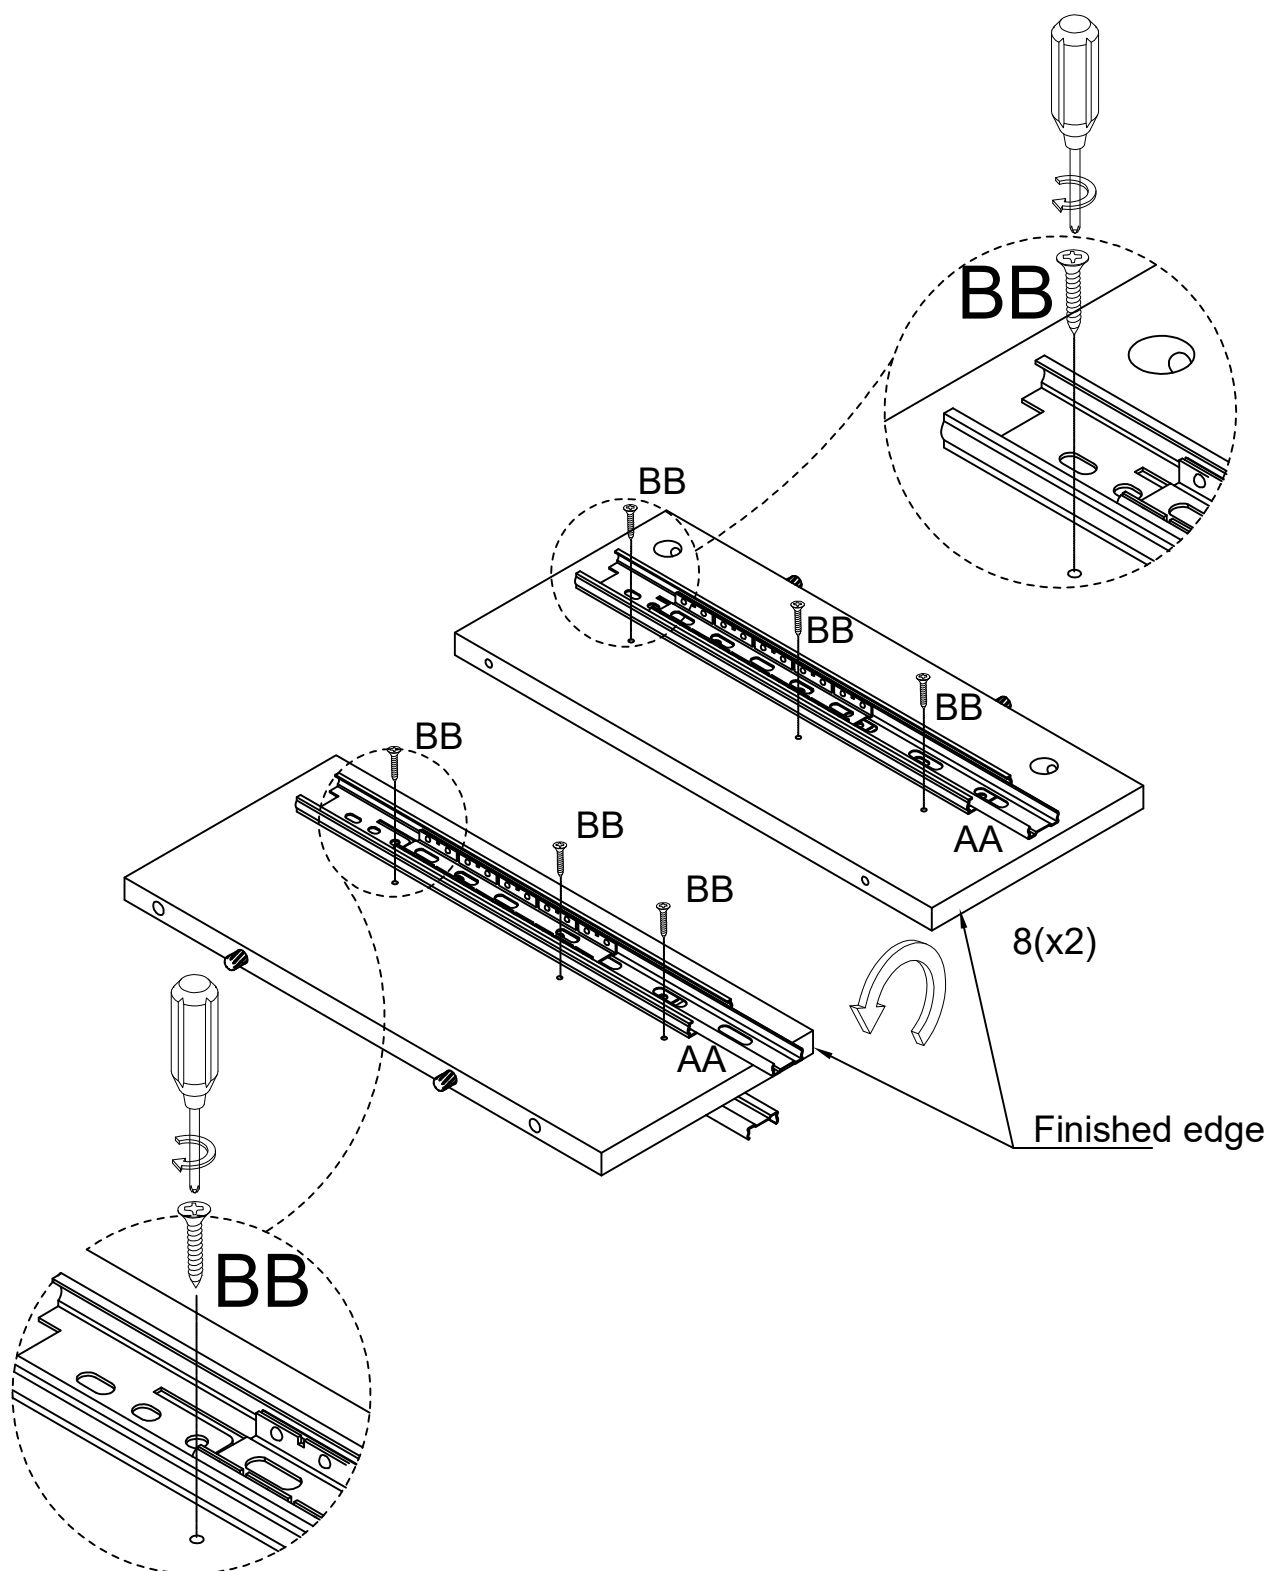

Step 10





| AA | BB |
|---|---|
|  |  |
| X2 | X12 |

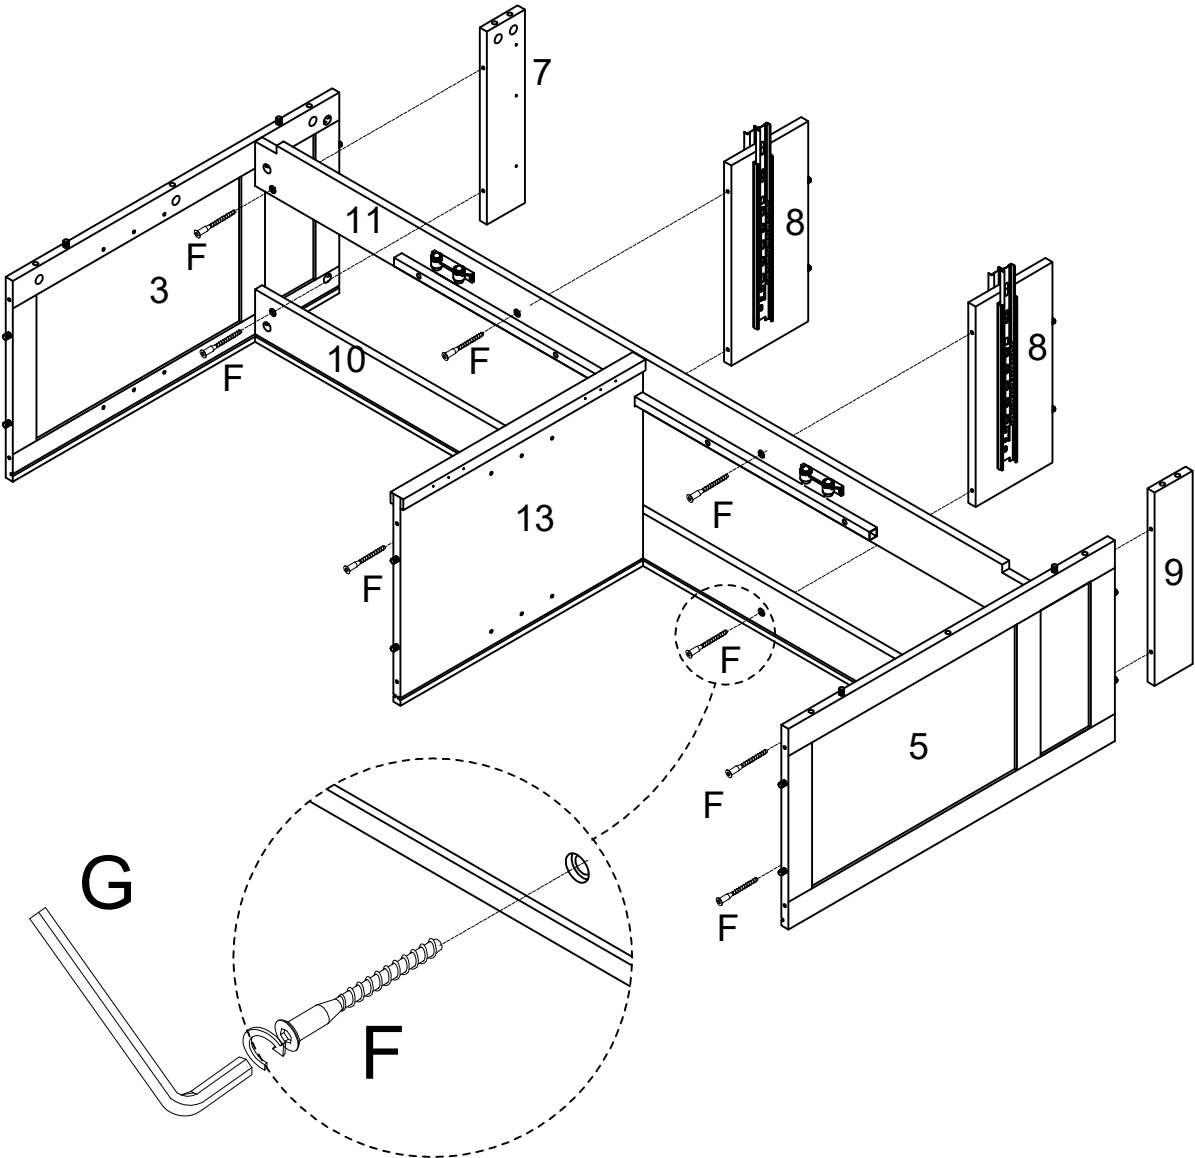
Step 11





| G | F |
|---|---|
|  |  |
| X1 | X8 |


Step 12

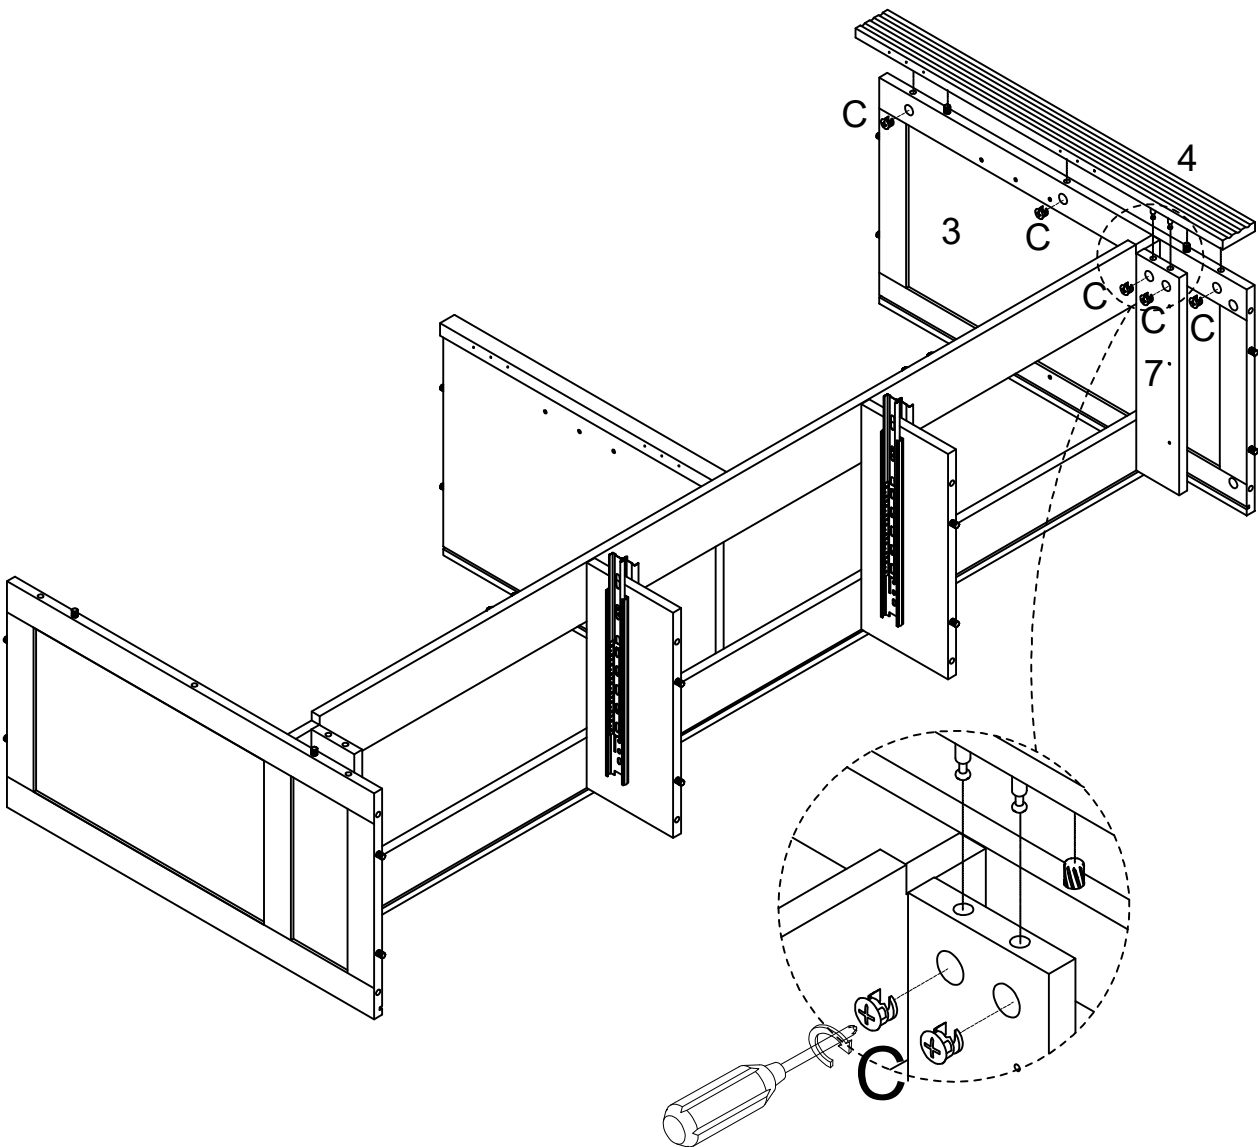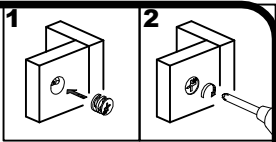


| |
|---|
| C |
|  |
| X5 |

Step 13

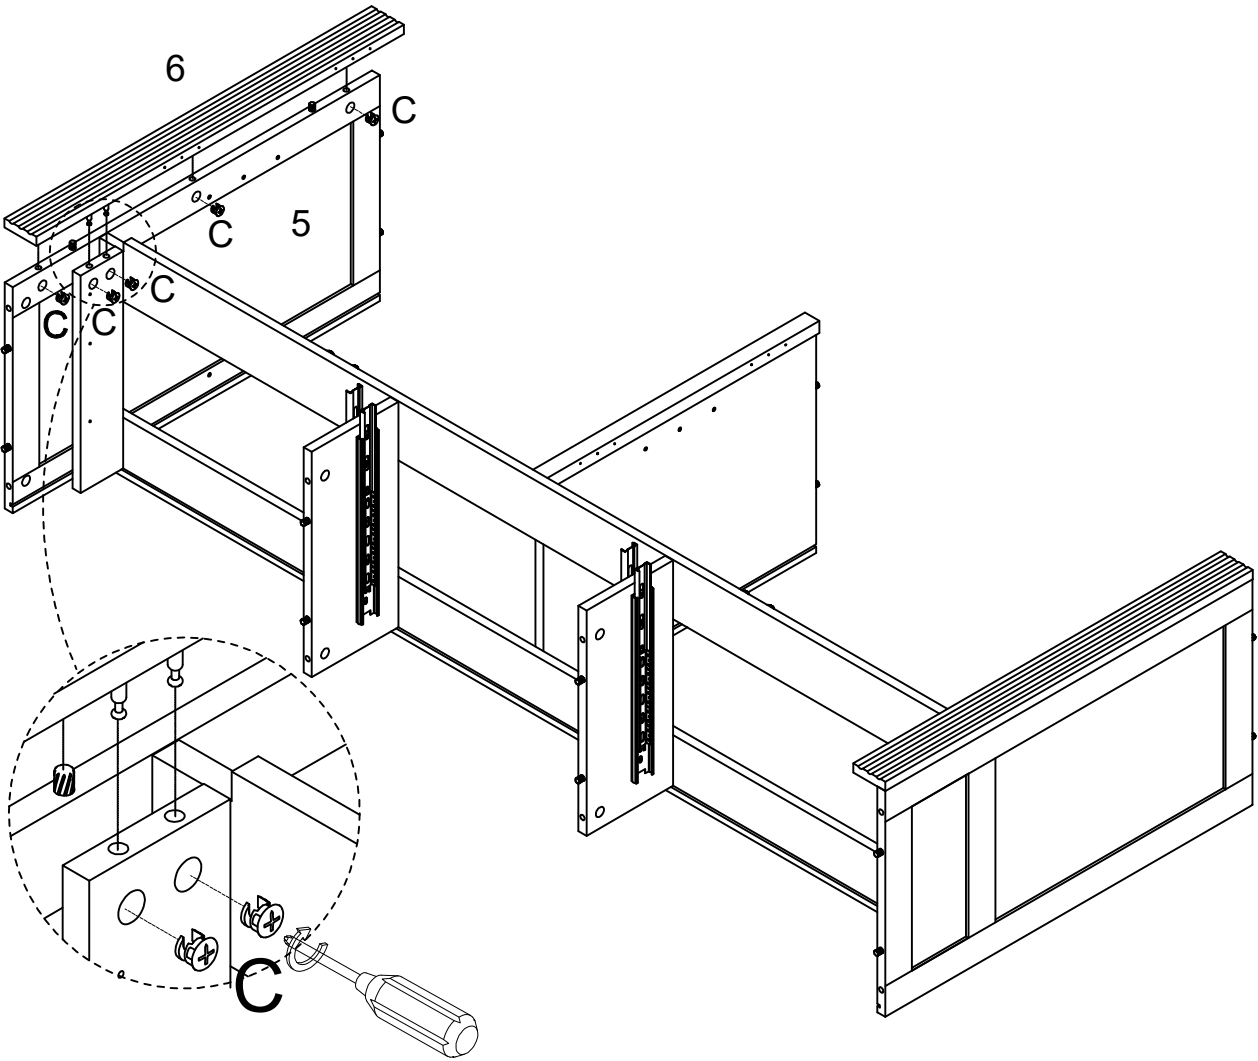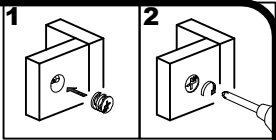




| |
|---|
| C |
|  |
| X5 |

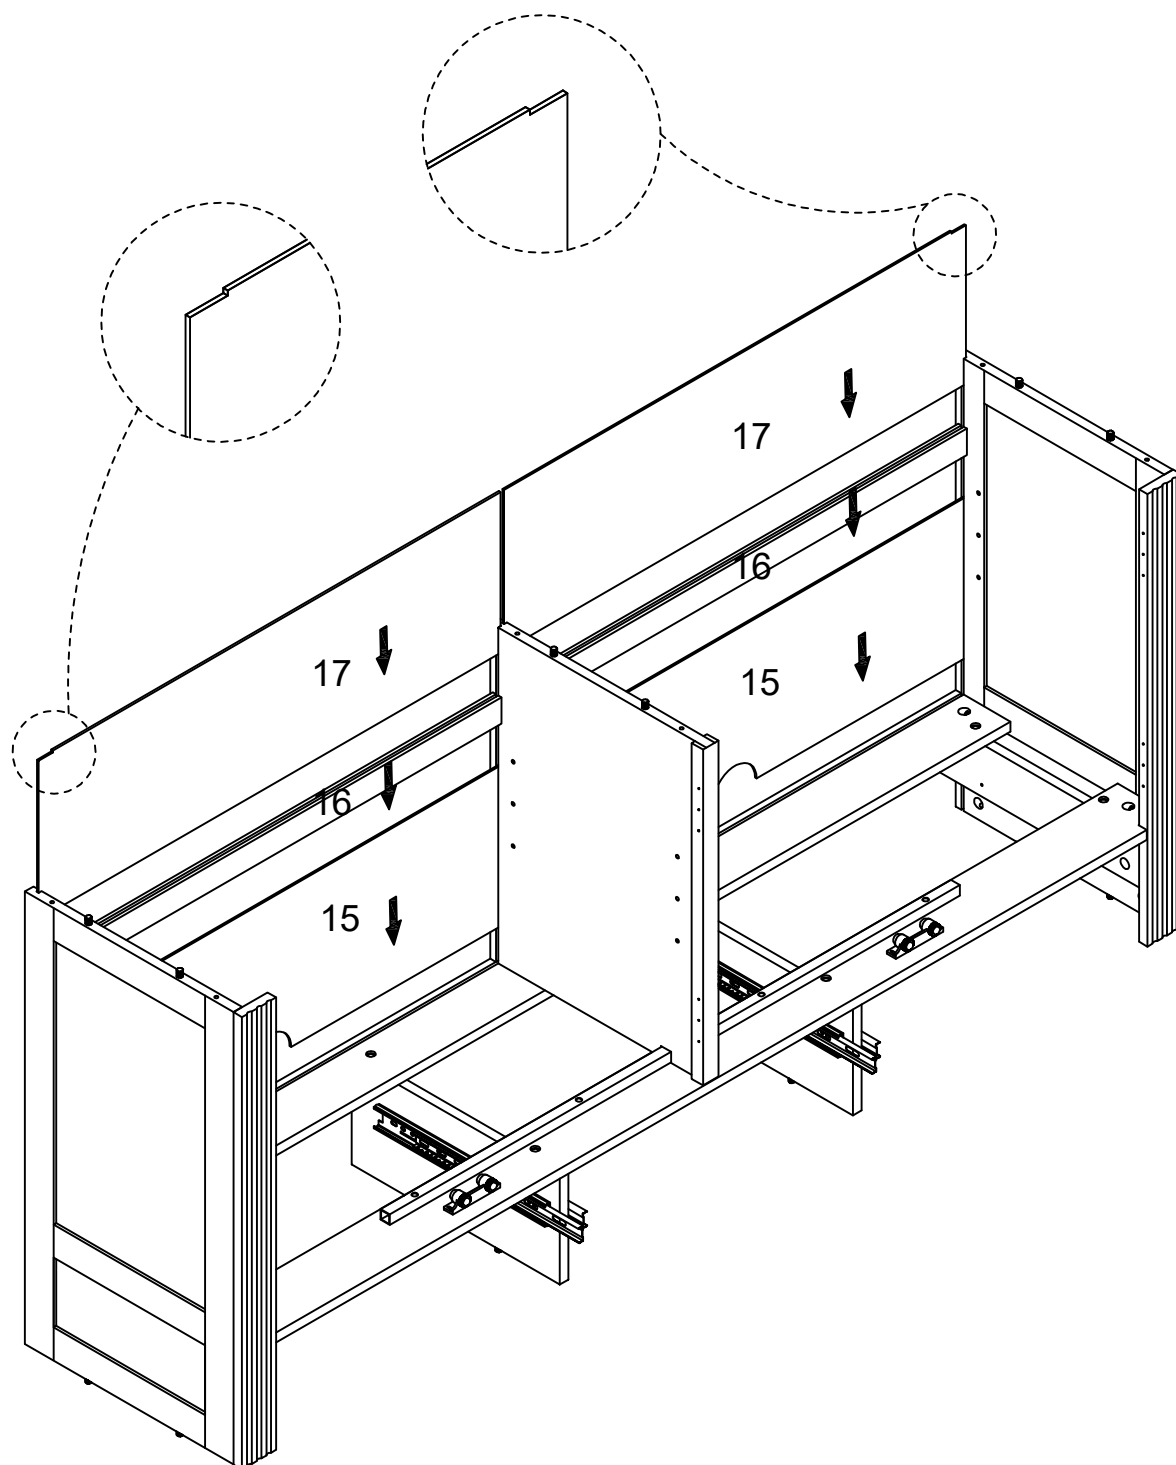Step 14




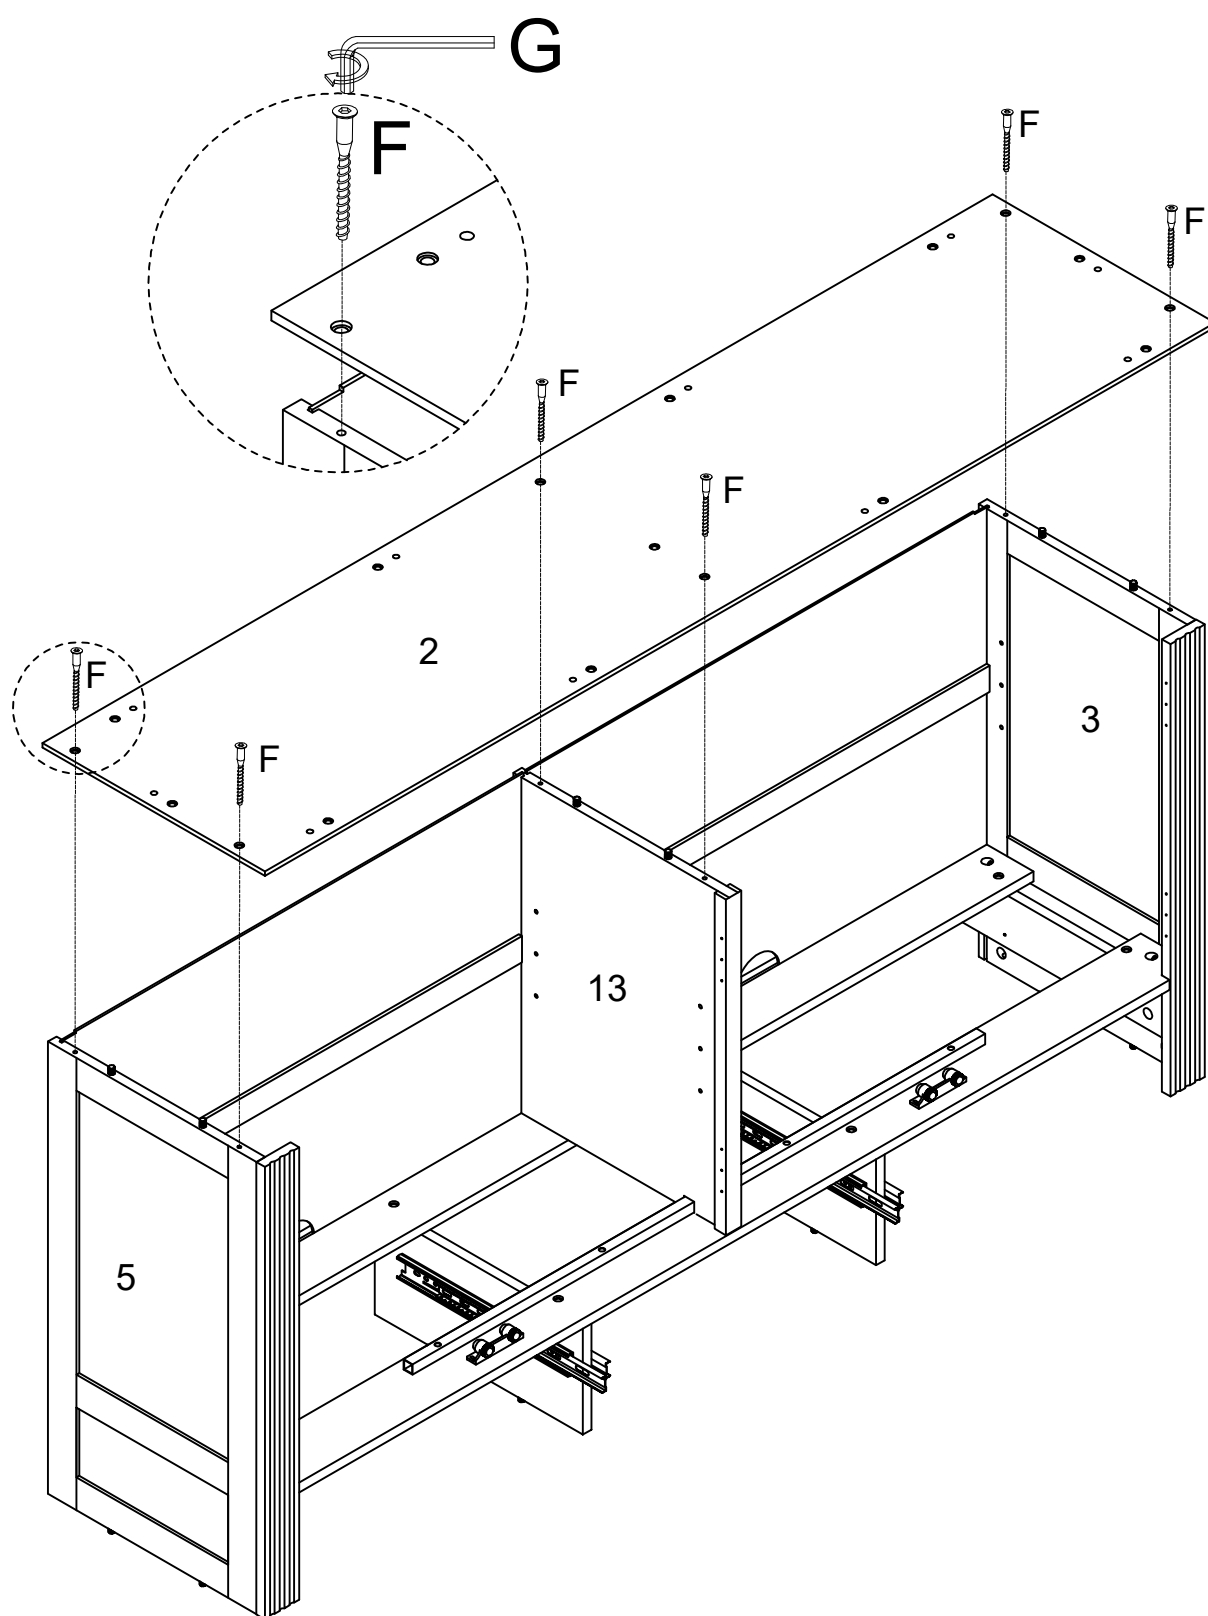


Step 15




| F | G |
|---|---|
|  |  |
| 6 | X1 |

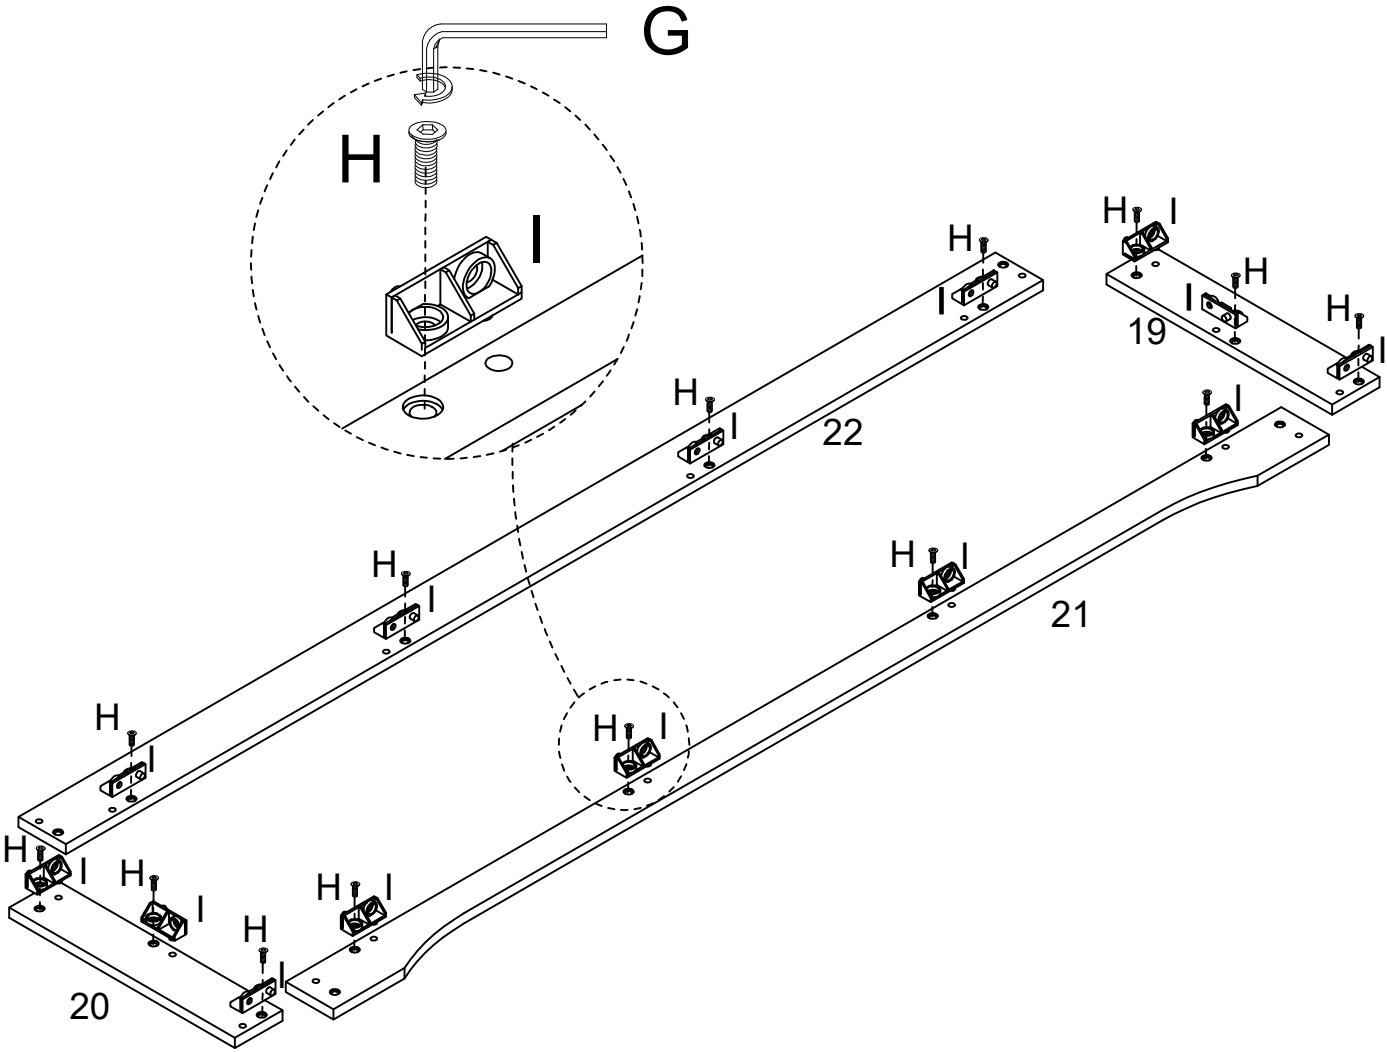
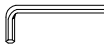
Step 16




| I | H | G |
|---|---|---|
|  |  |  |
| X14 | X14 | X1 |


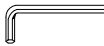
Step 17

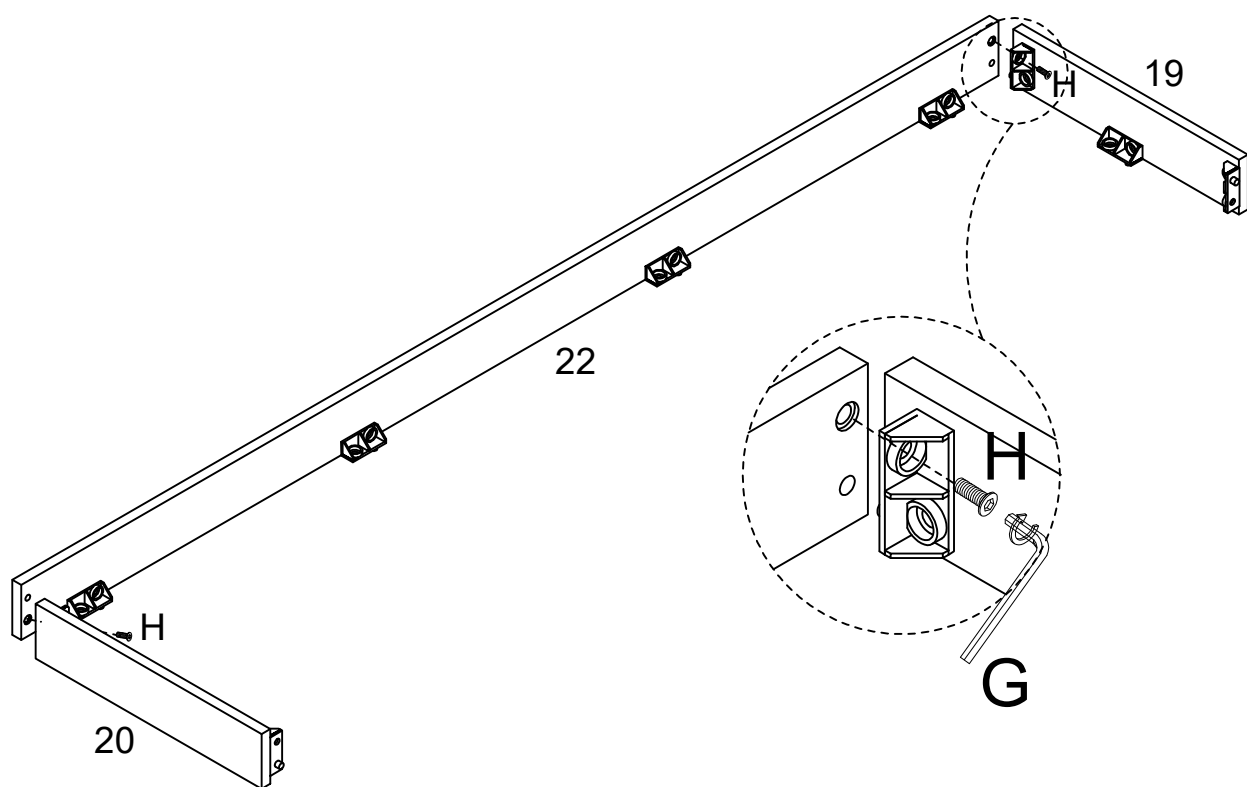


| H | G |
|---|---|
|  |  |
| X2 | X1 |

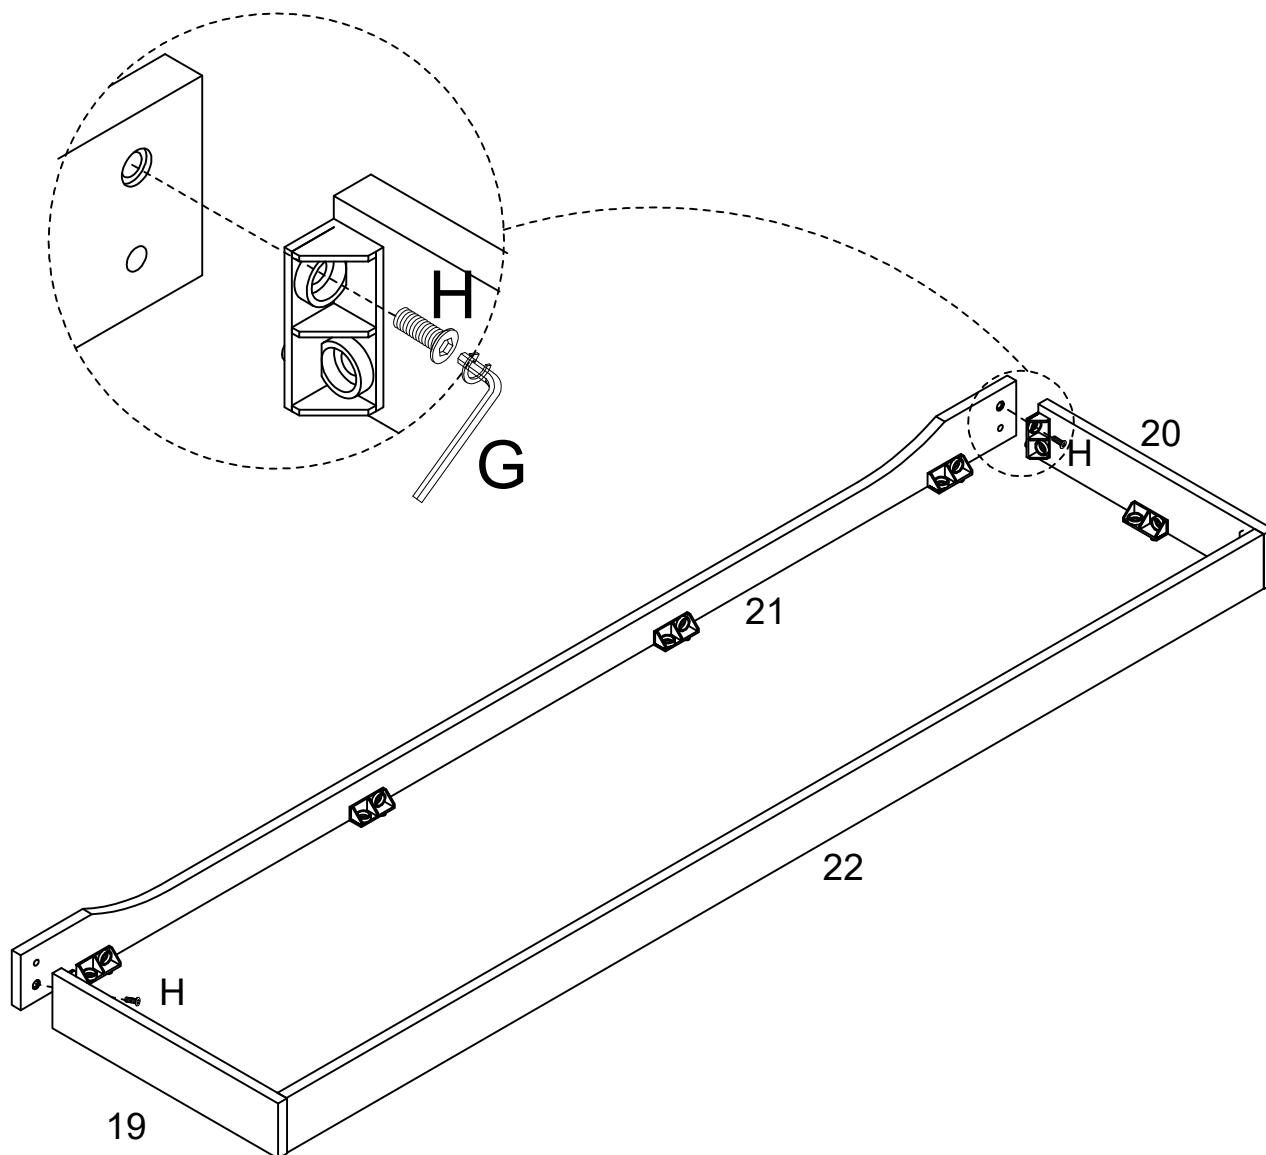

Step 18




| H | G |
|---|---|
|  |  |
| X2 | X1 |

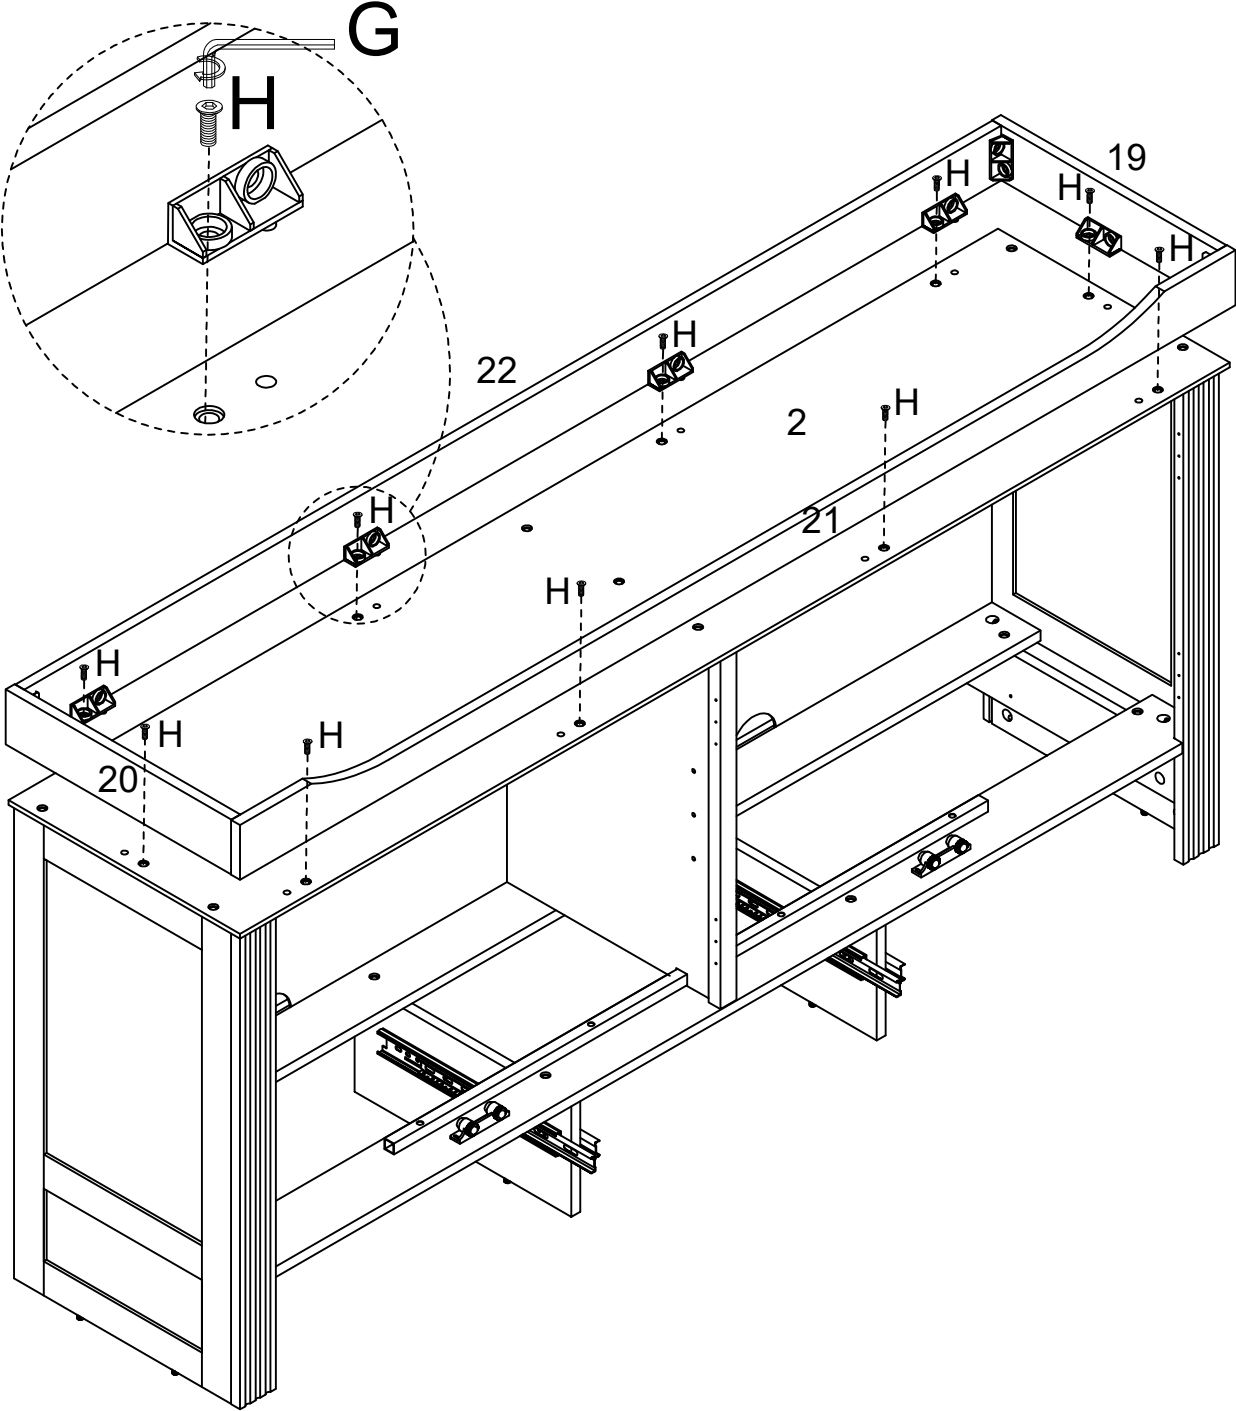Step 19




| H | G |
|---|---|
|  |  |
| X10 | X1 |

Step 20

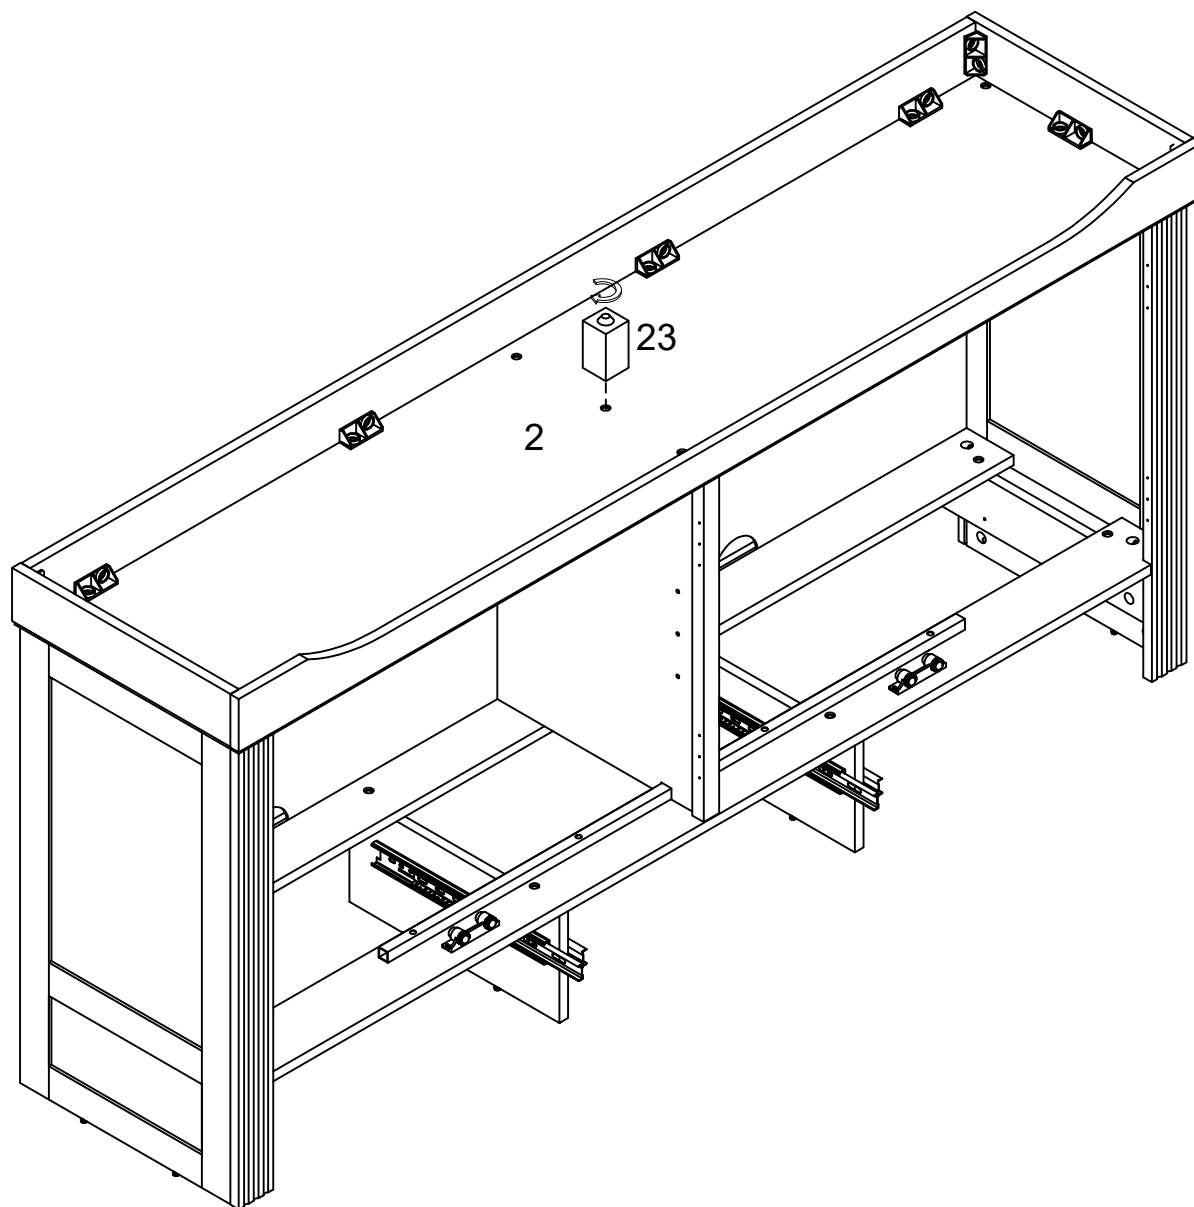


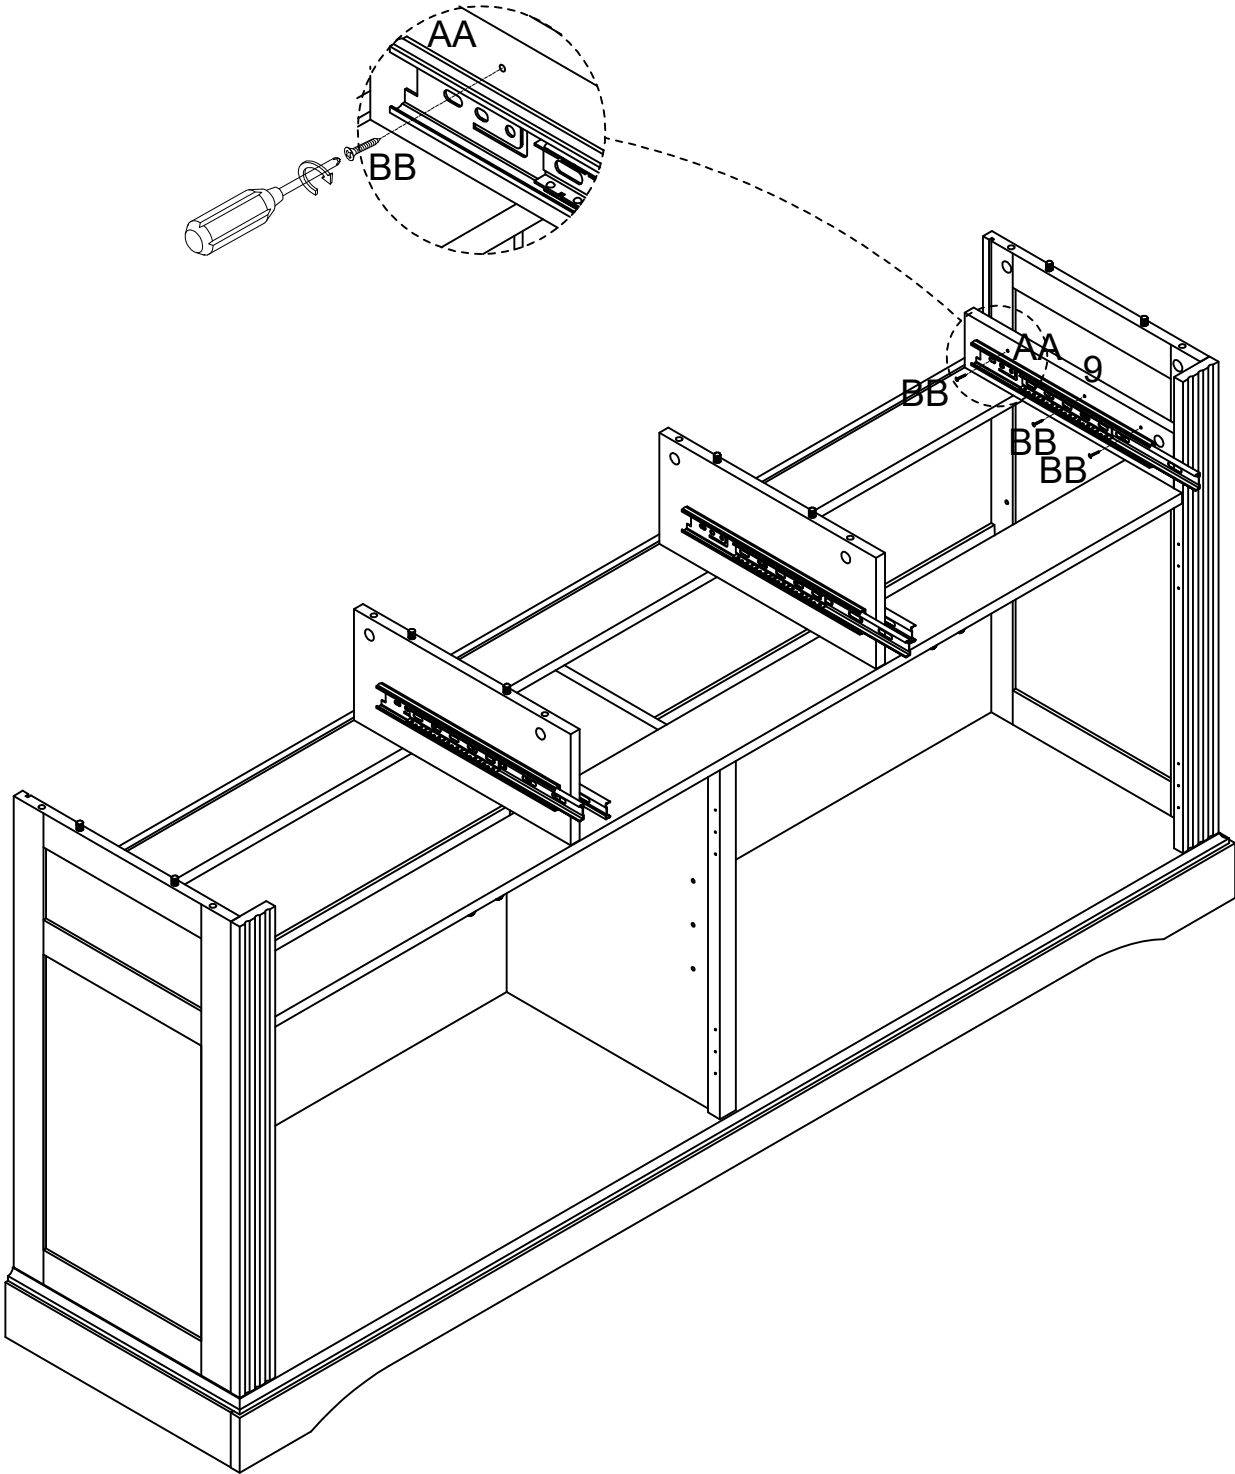

Step 21




| AA | BB |
|----|----|
| | |
| X1 | X3 |

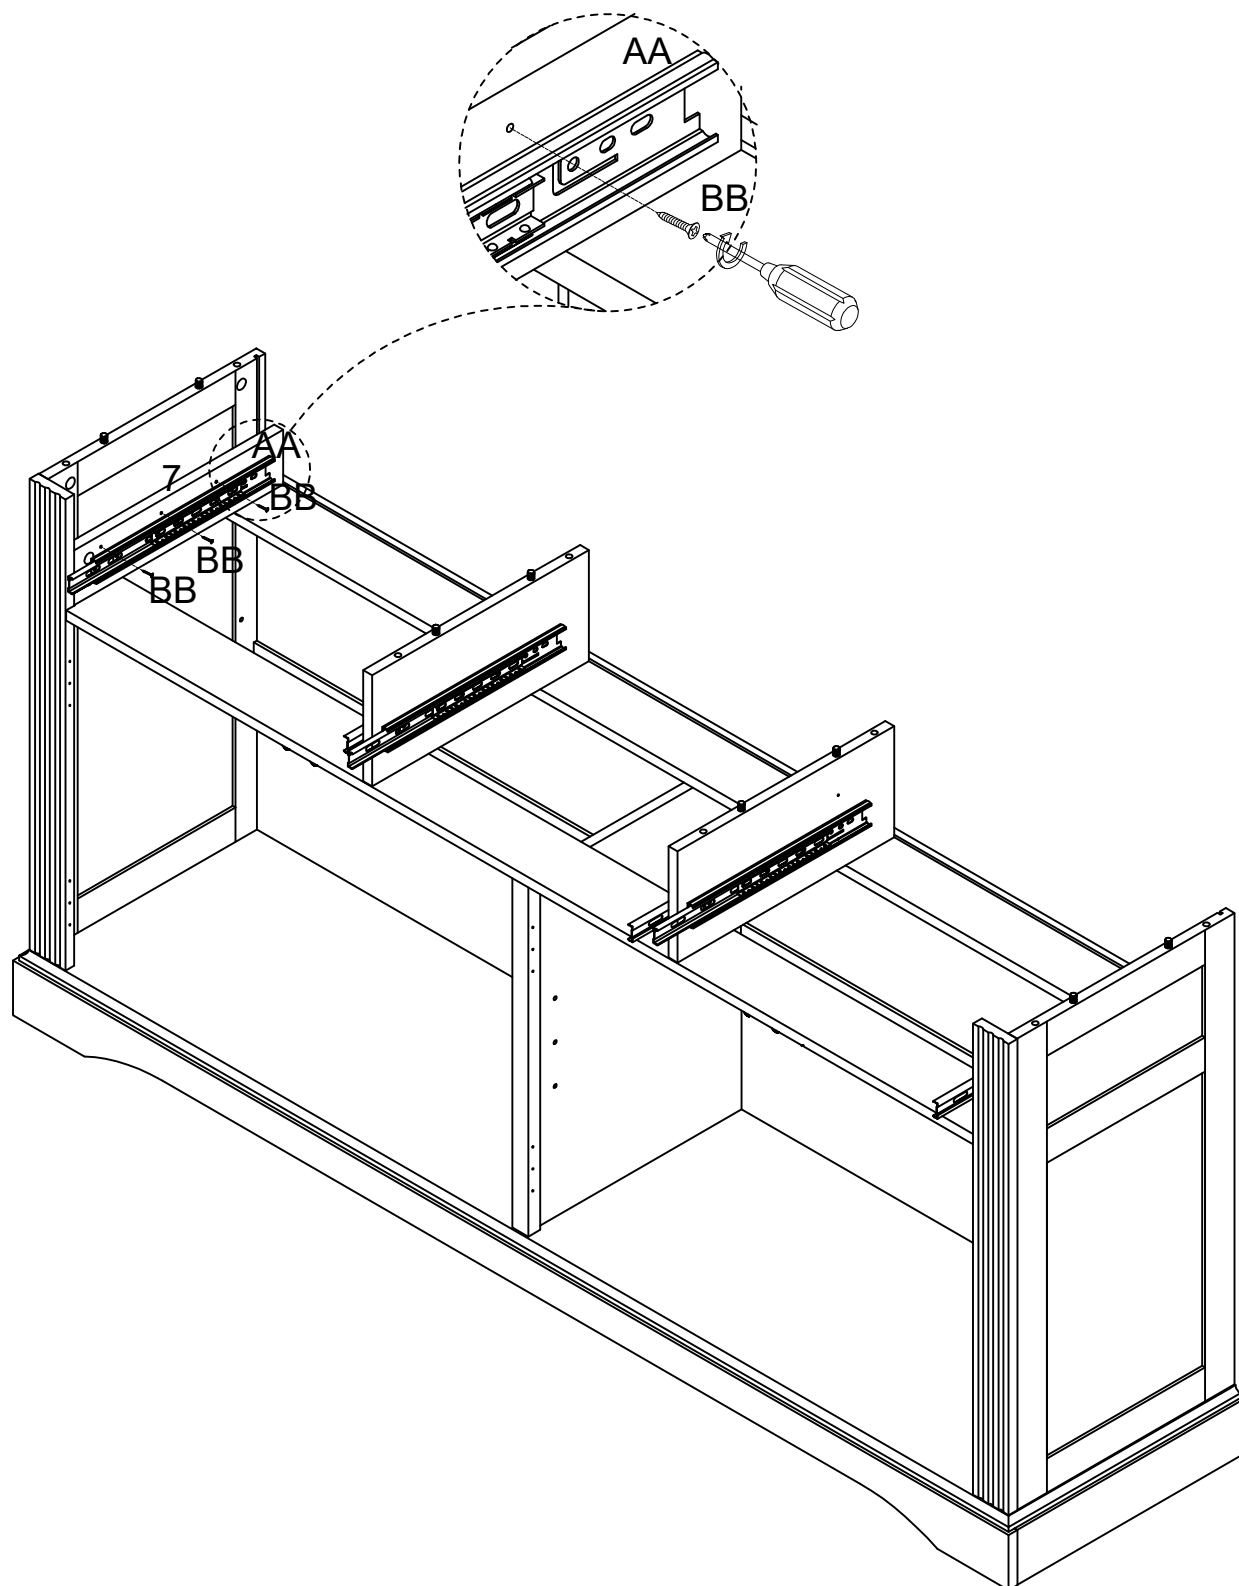Step 22






| AA | BB |
|---|---|
|  |  |
| X1 | X3 |

Step 23


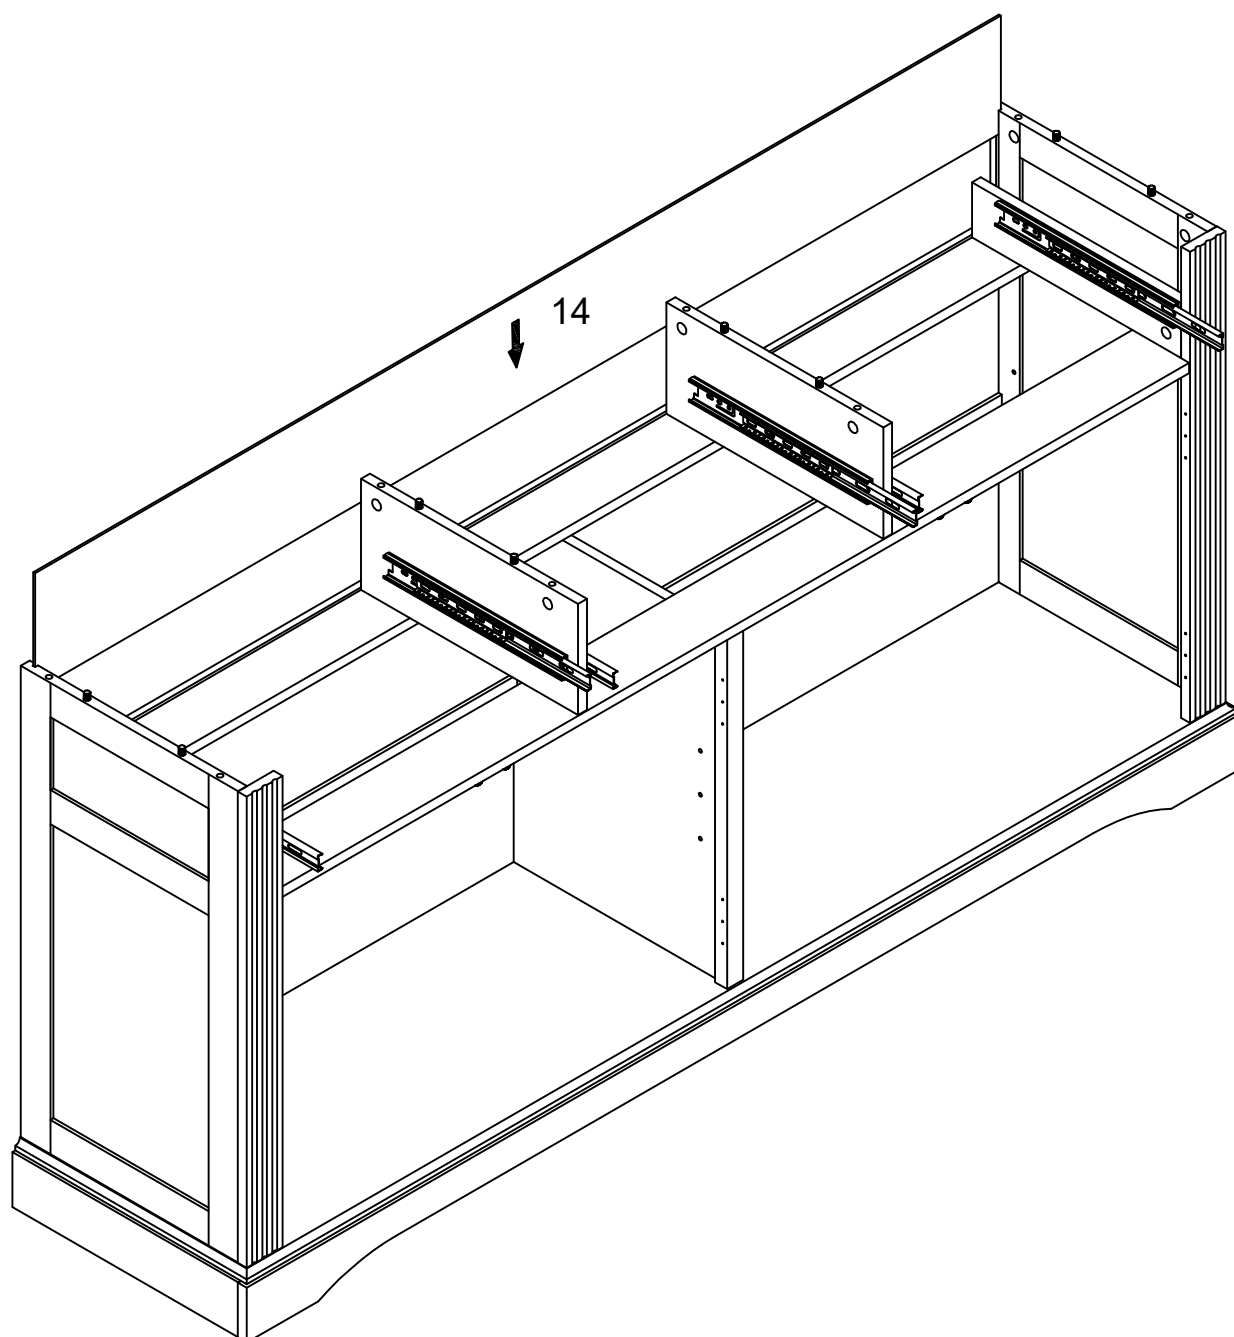


Step 24

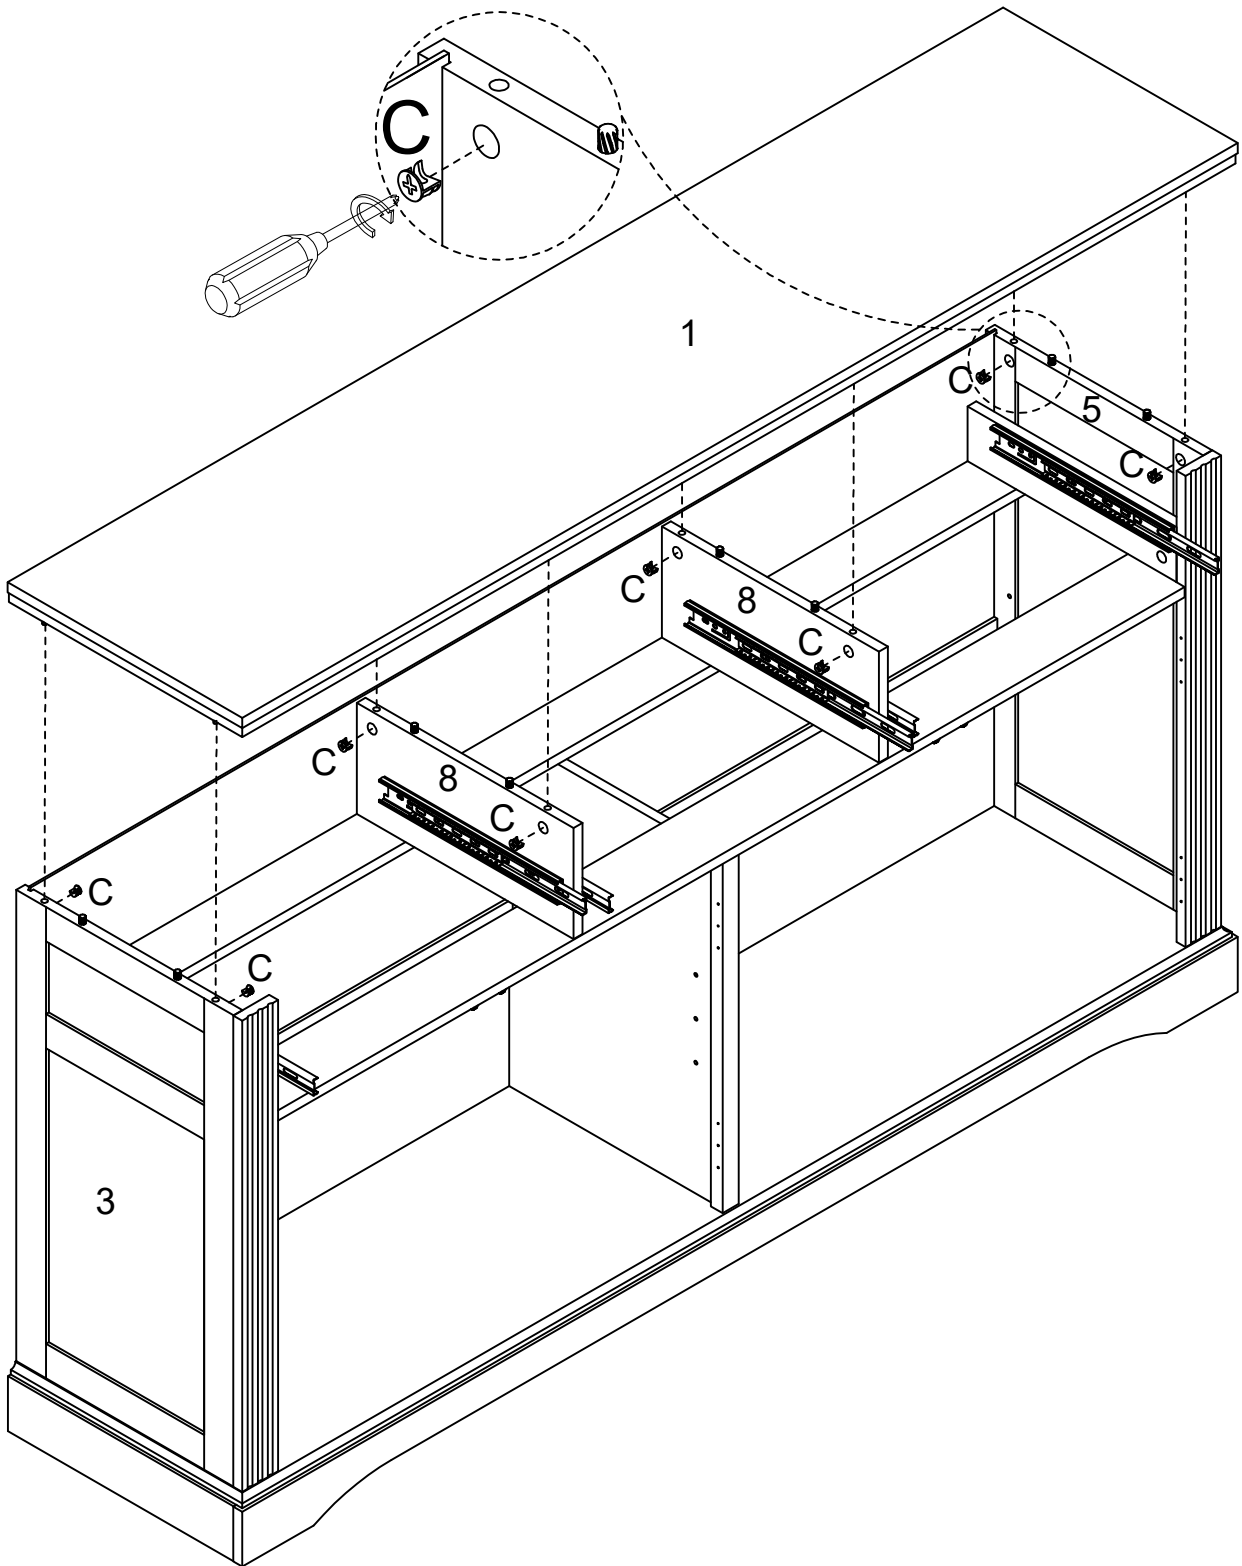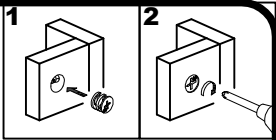



| |
|---|
| C |
|  |
| X8 |

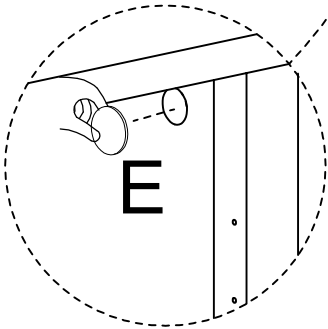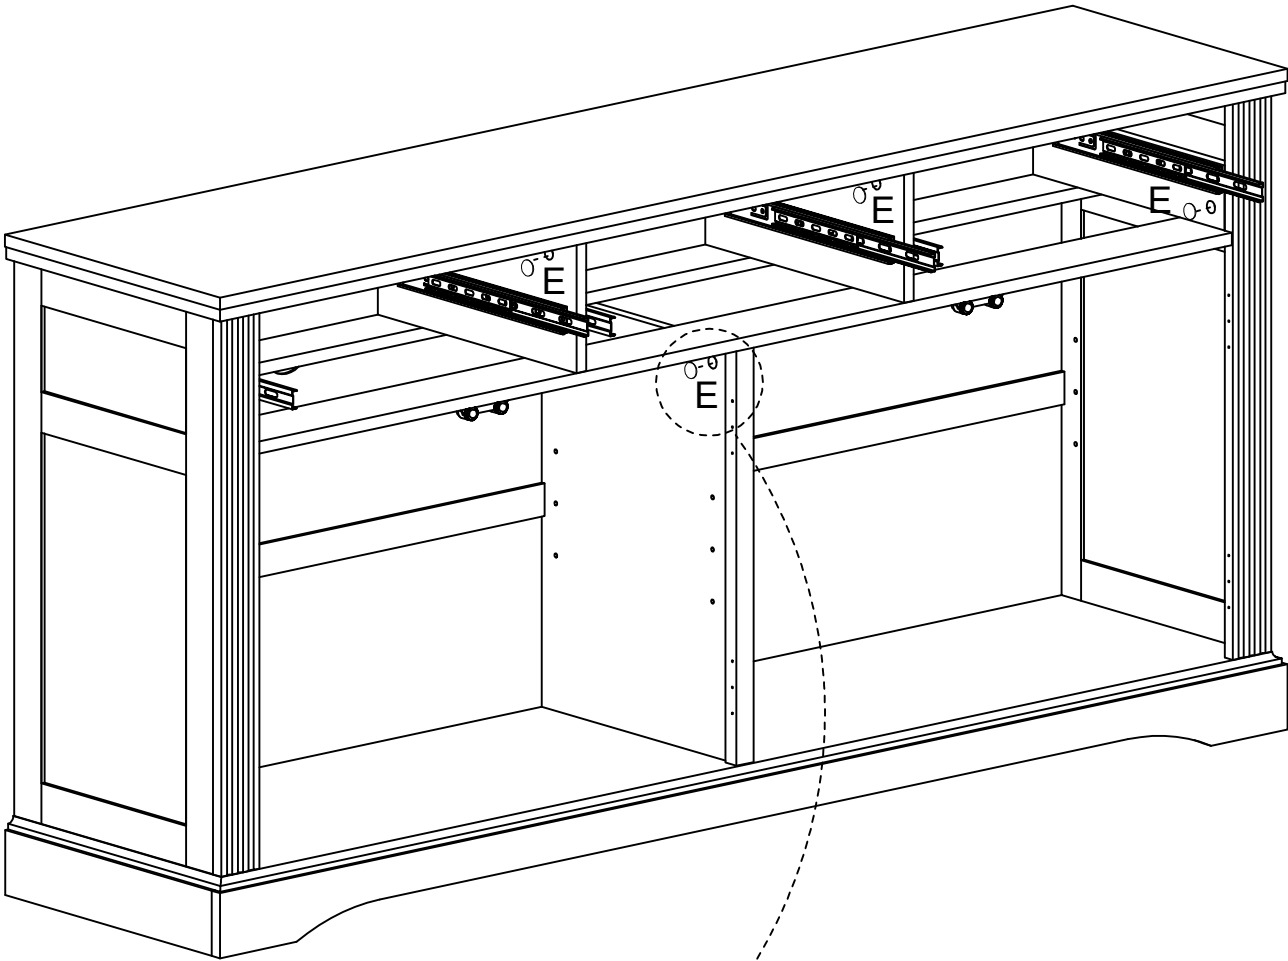

Step 25




| |
|-----|
| E |
| O |
| X24 |

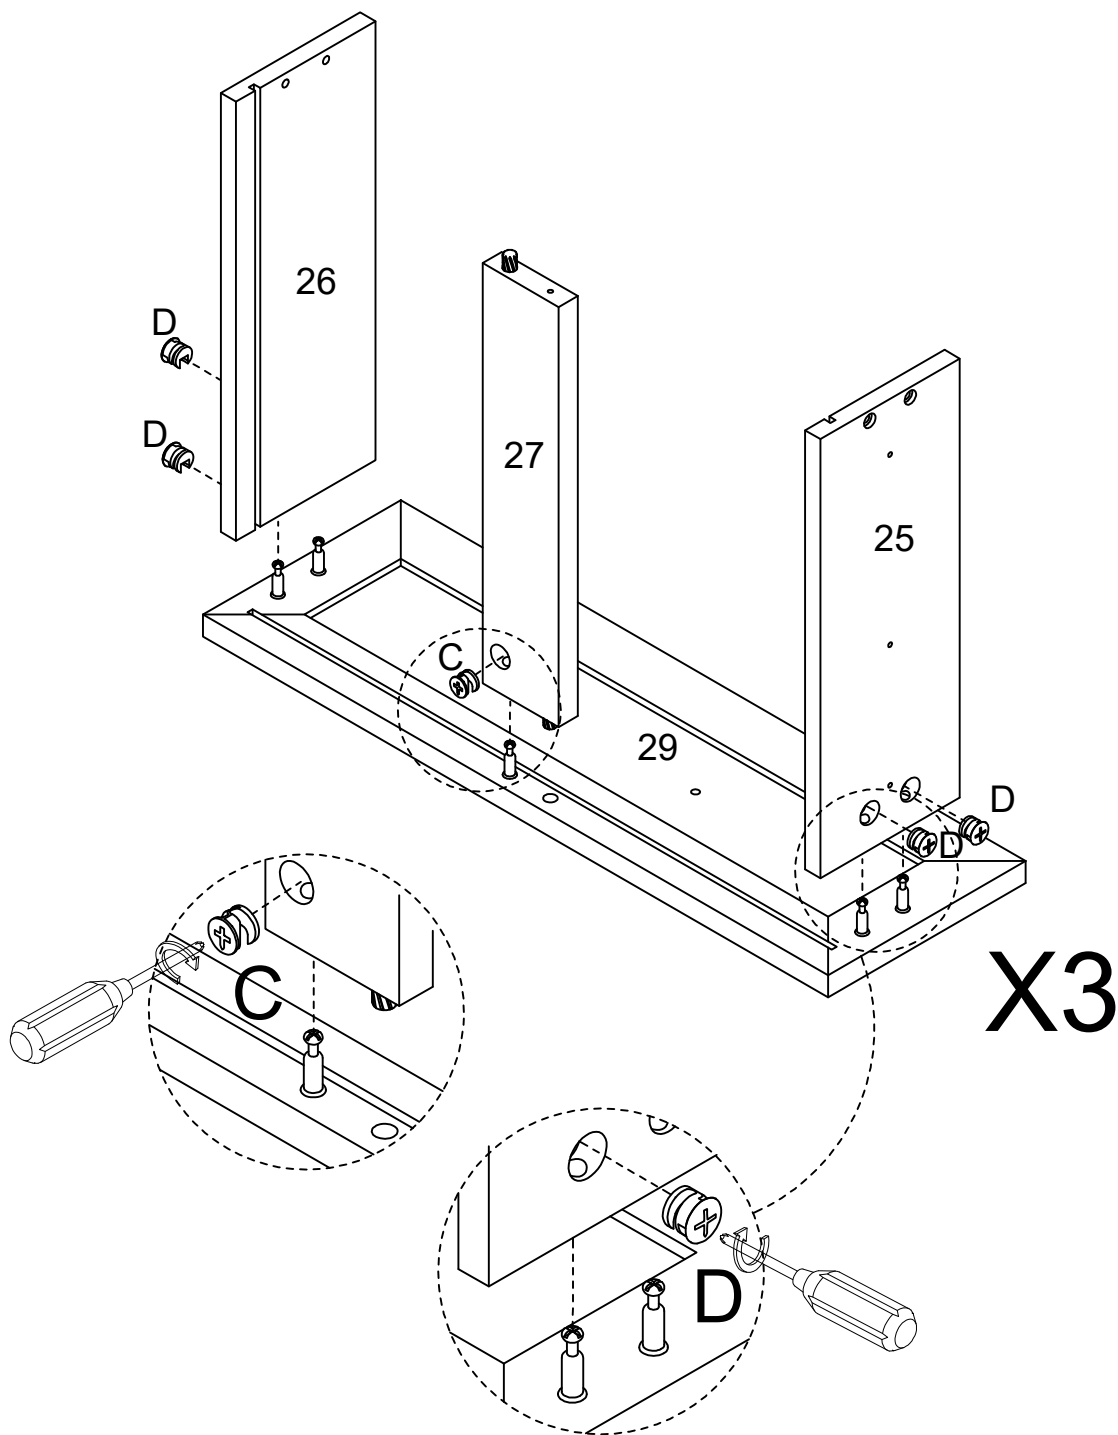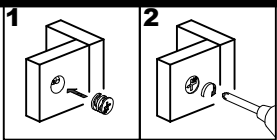Step 26




| D | C |
|---|---|
|  |  |
| X12 | X3 |


Step 27

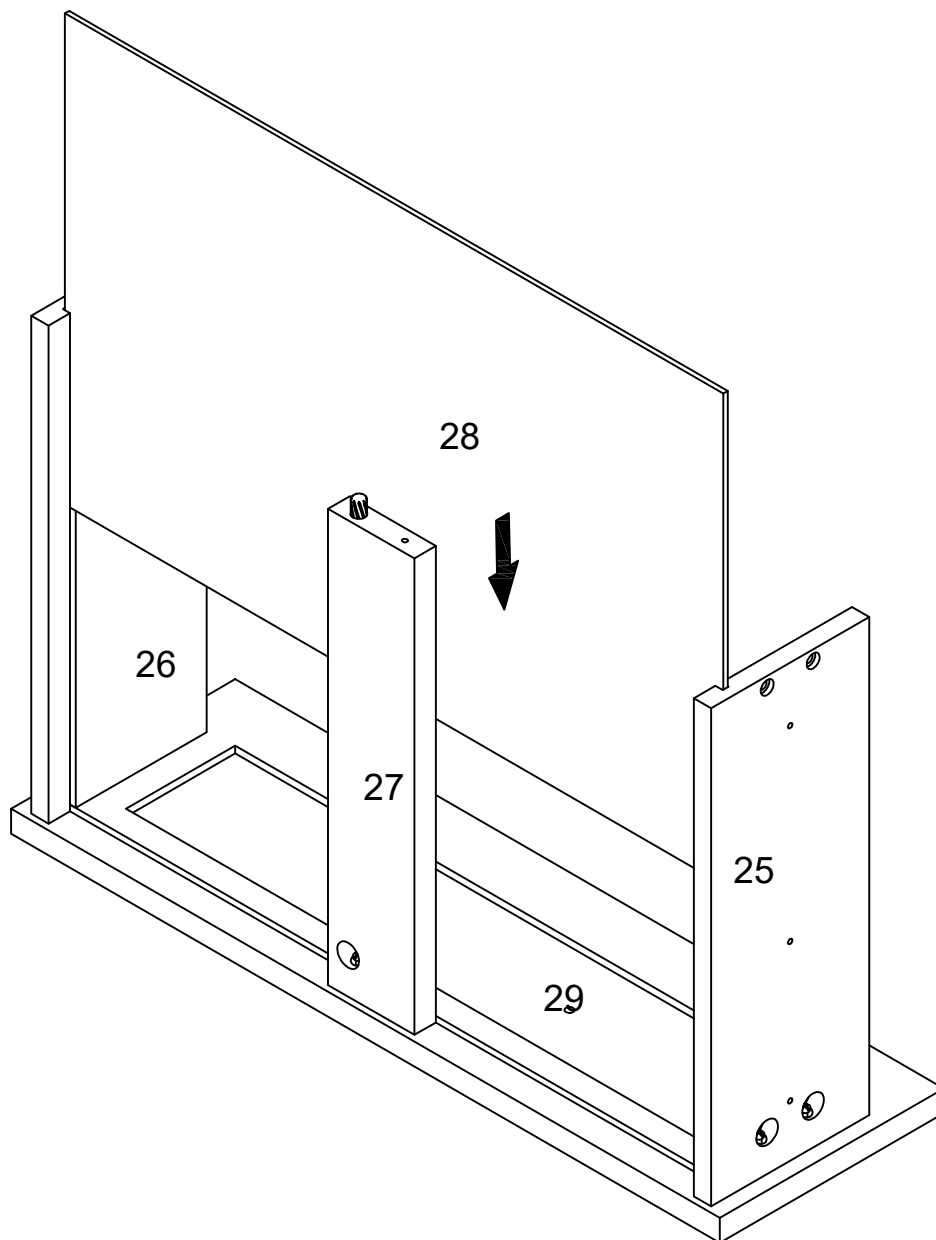


X3

Step 28

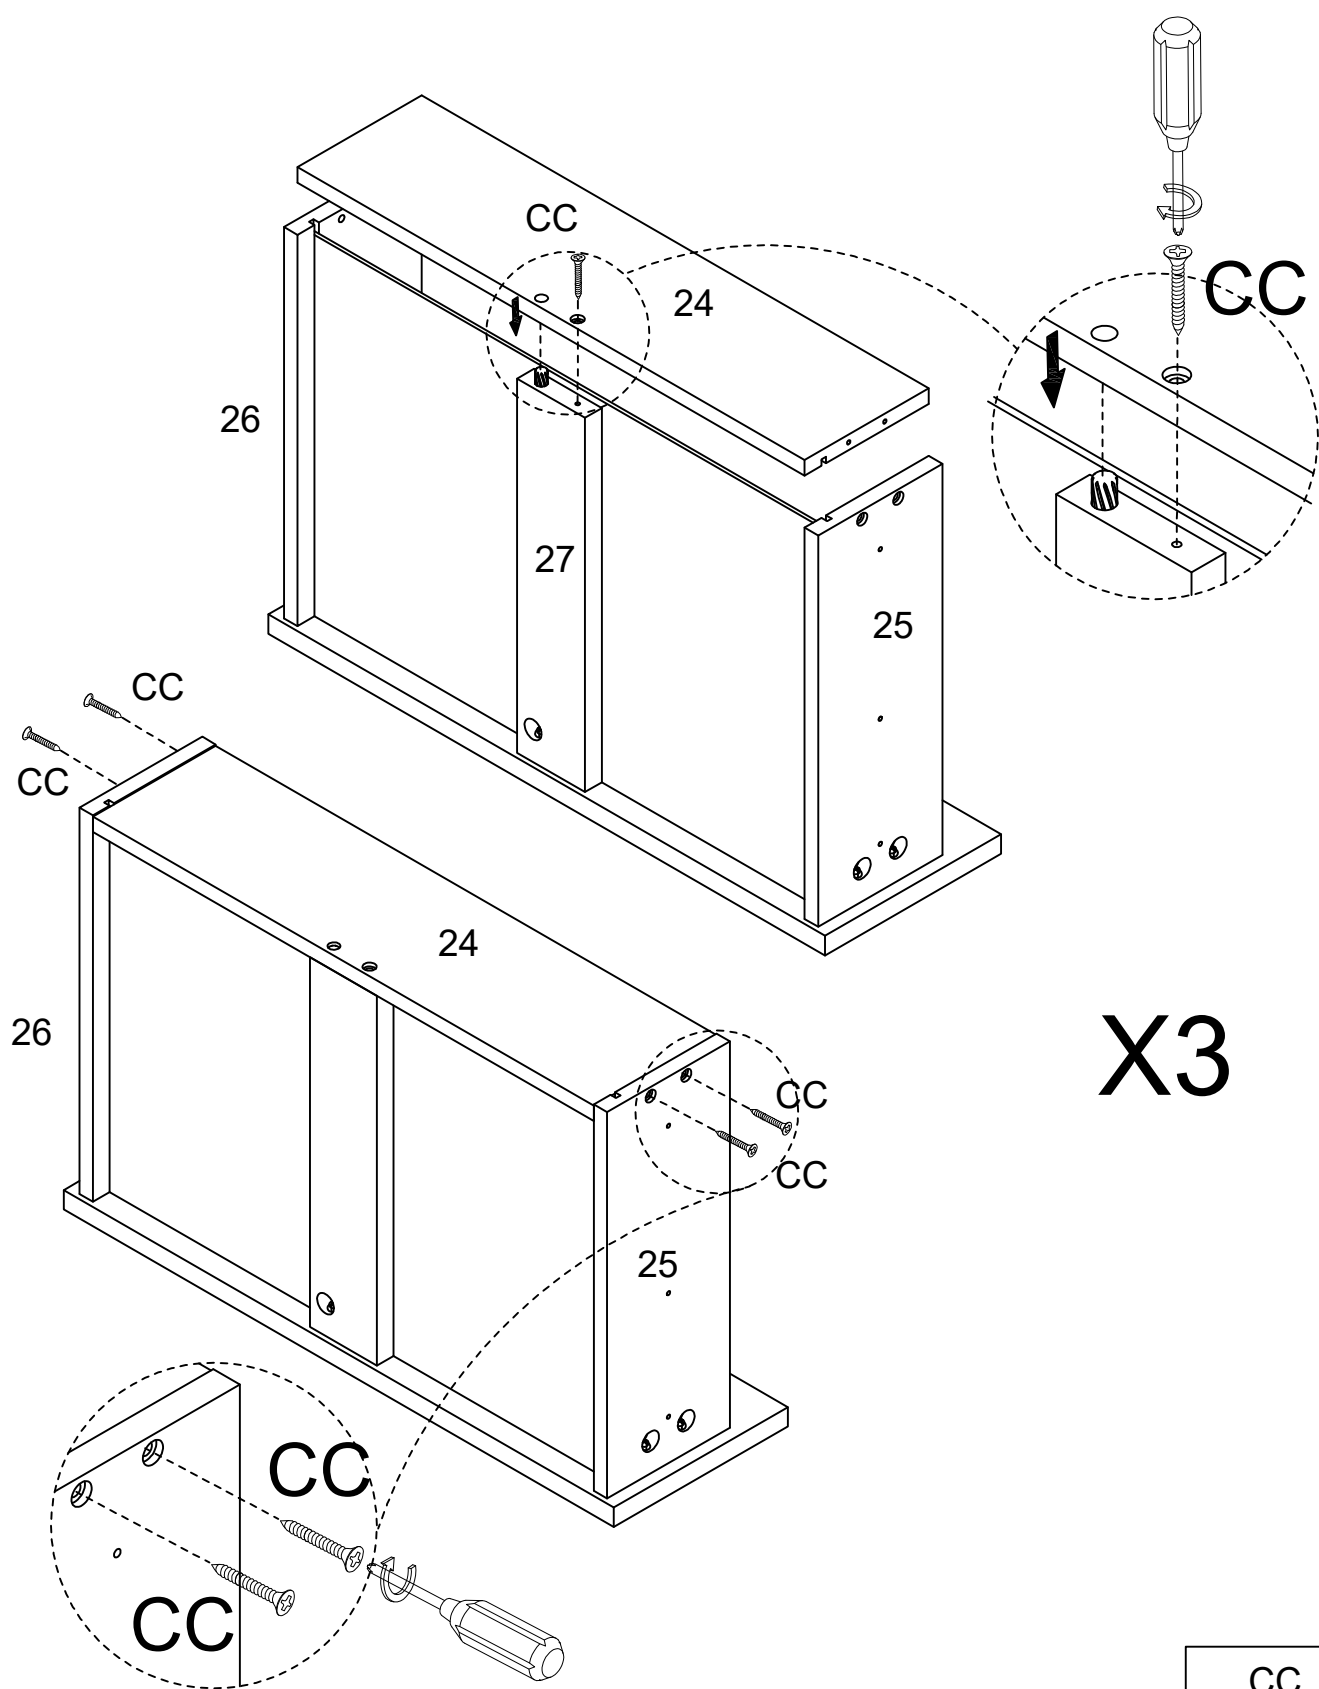


| |
|---|
| CC |
|  |
| X15 |

Step 29

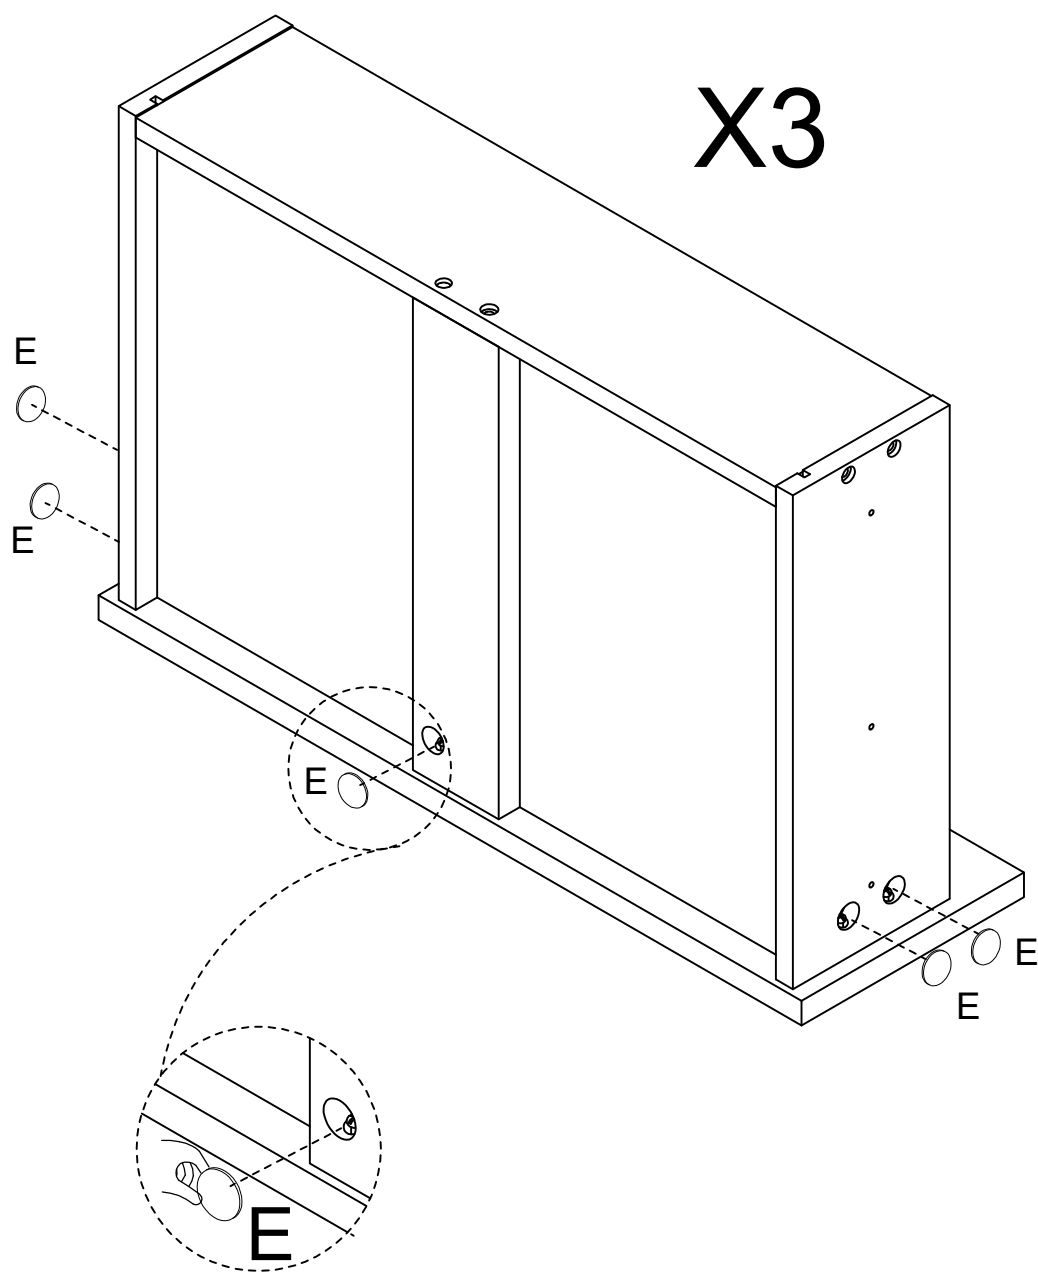


| |
|-----|
| E |
| O |
| X15 |



Step 30

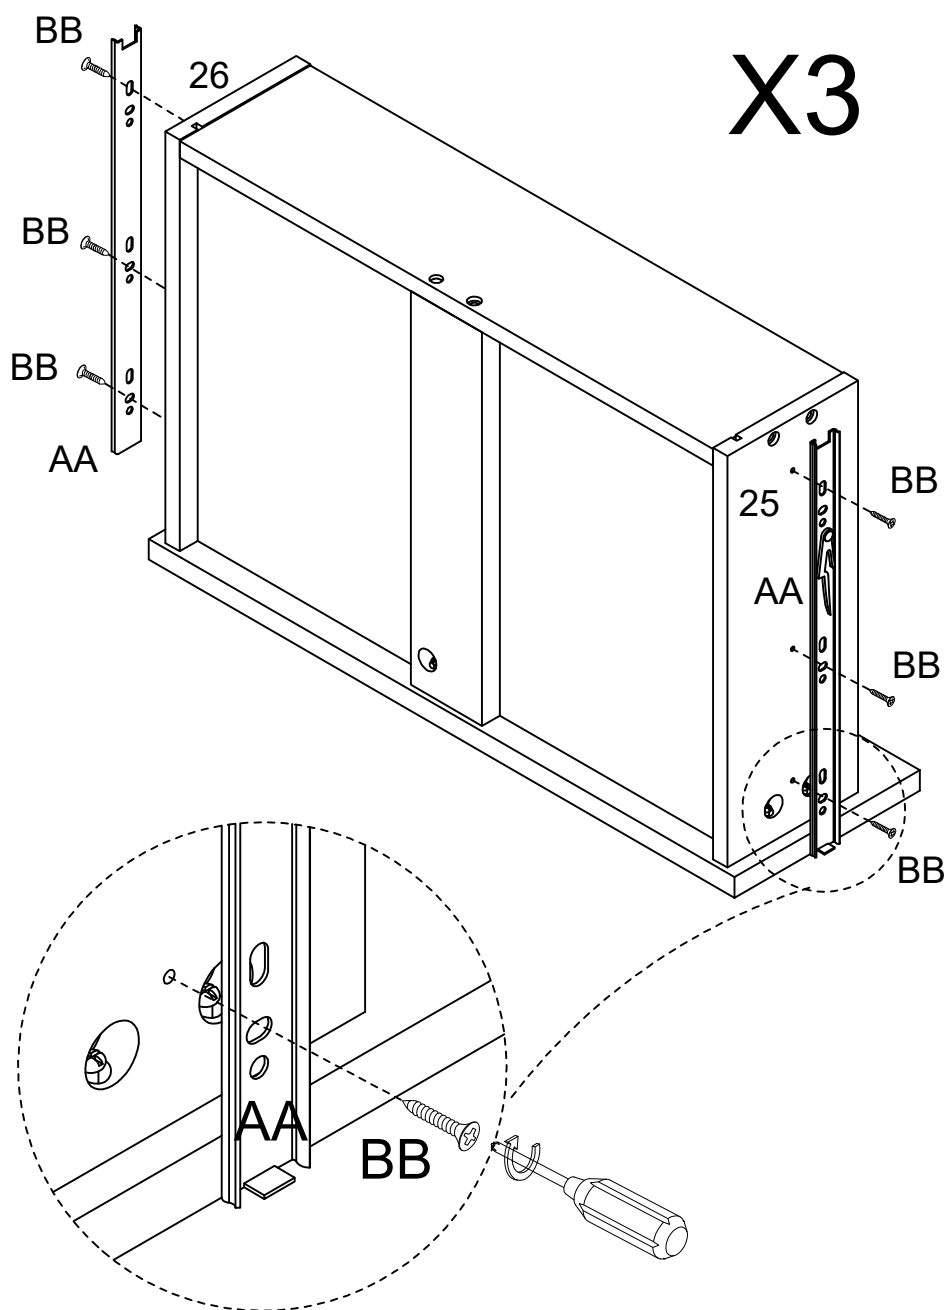


| AA | BB |
|----|-----|
| | |
| X3 | X18 |

Step 31

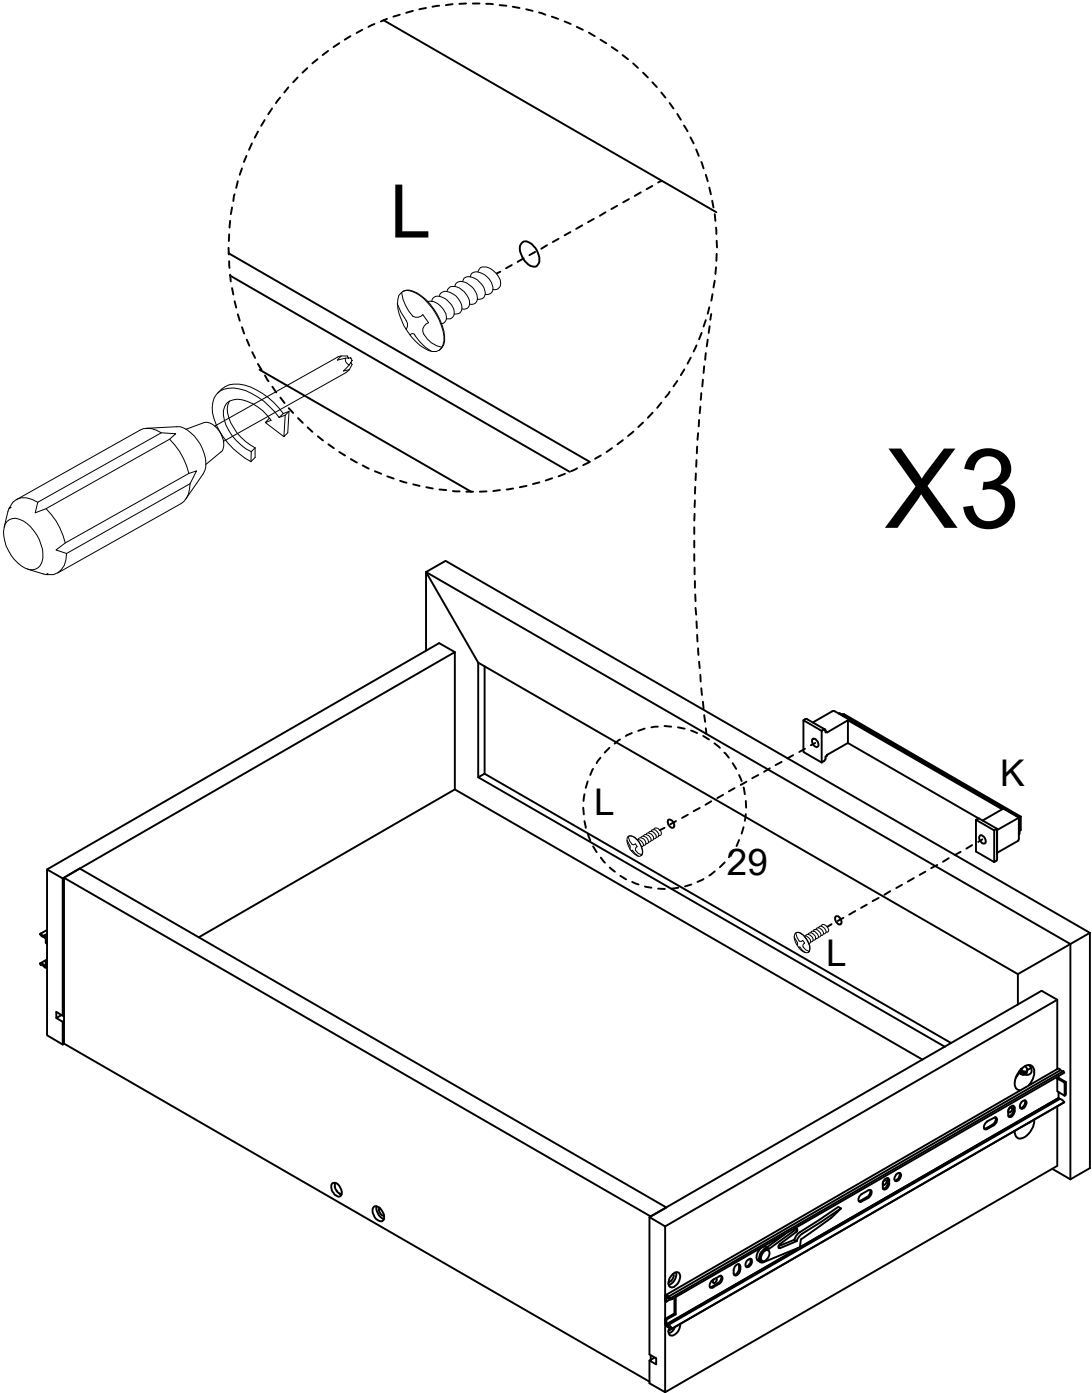

| L | K |
|---|---|
|  |  |
| X6 | X3 |

Step 32

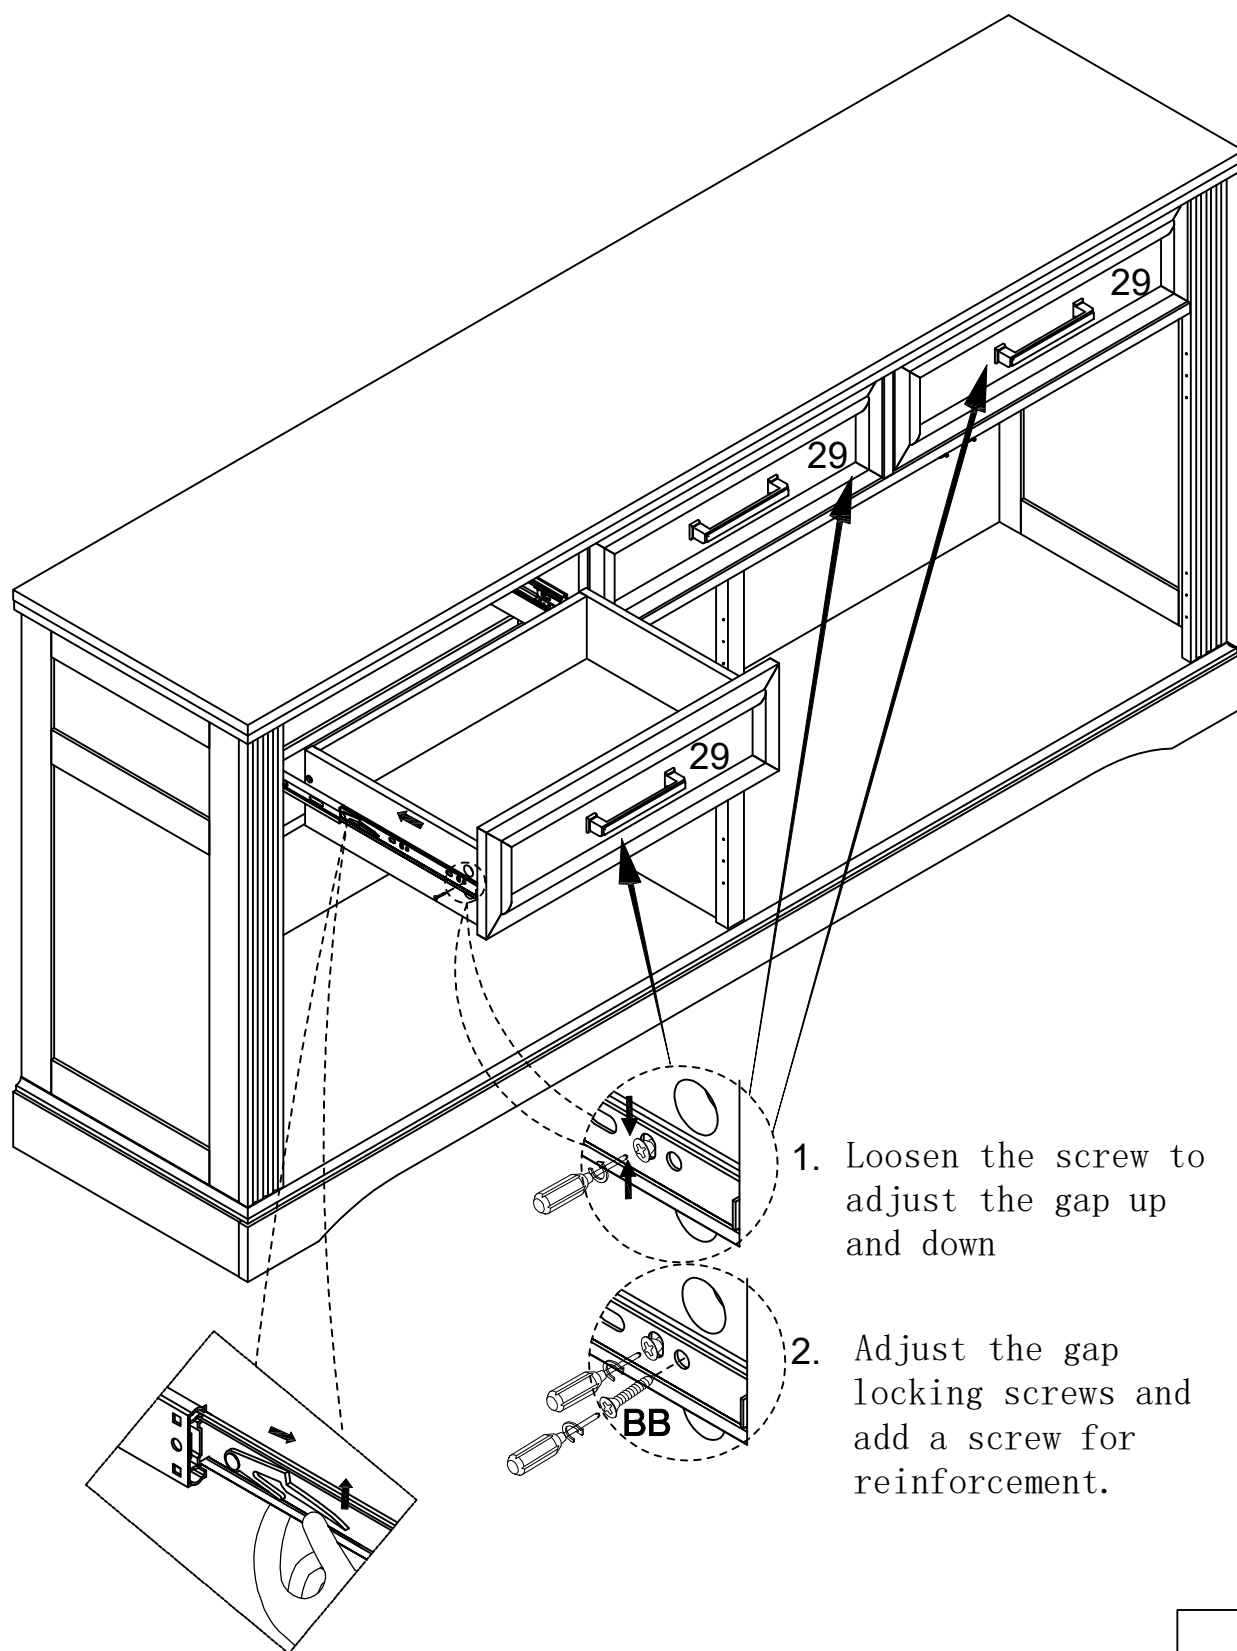

1. Loosen the screw to adjust the gap up and down


2. Adjust the gap locking screws and add a screw for reinforcement.


BB




X6

Step 33

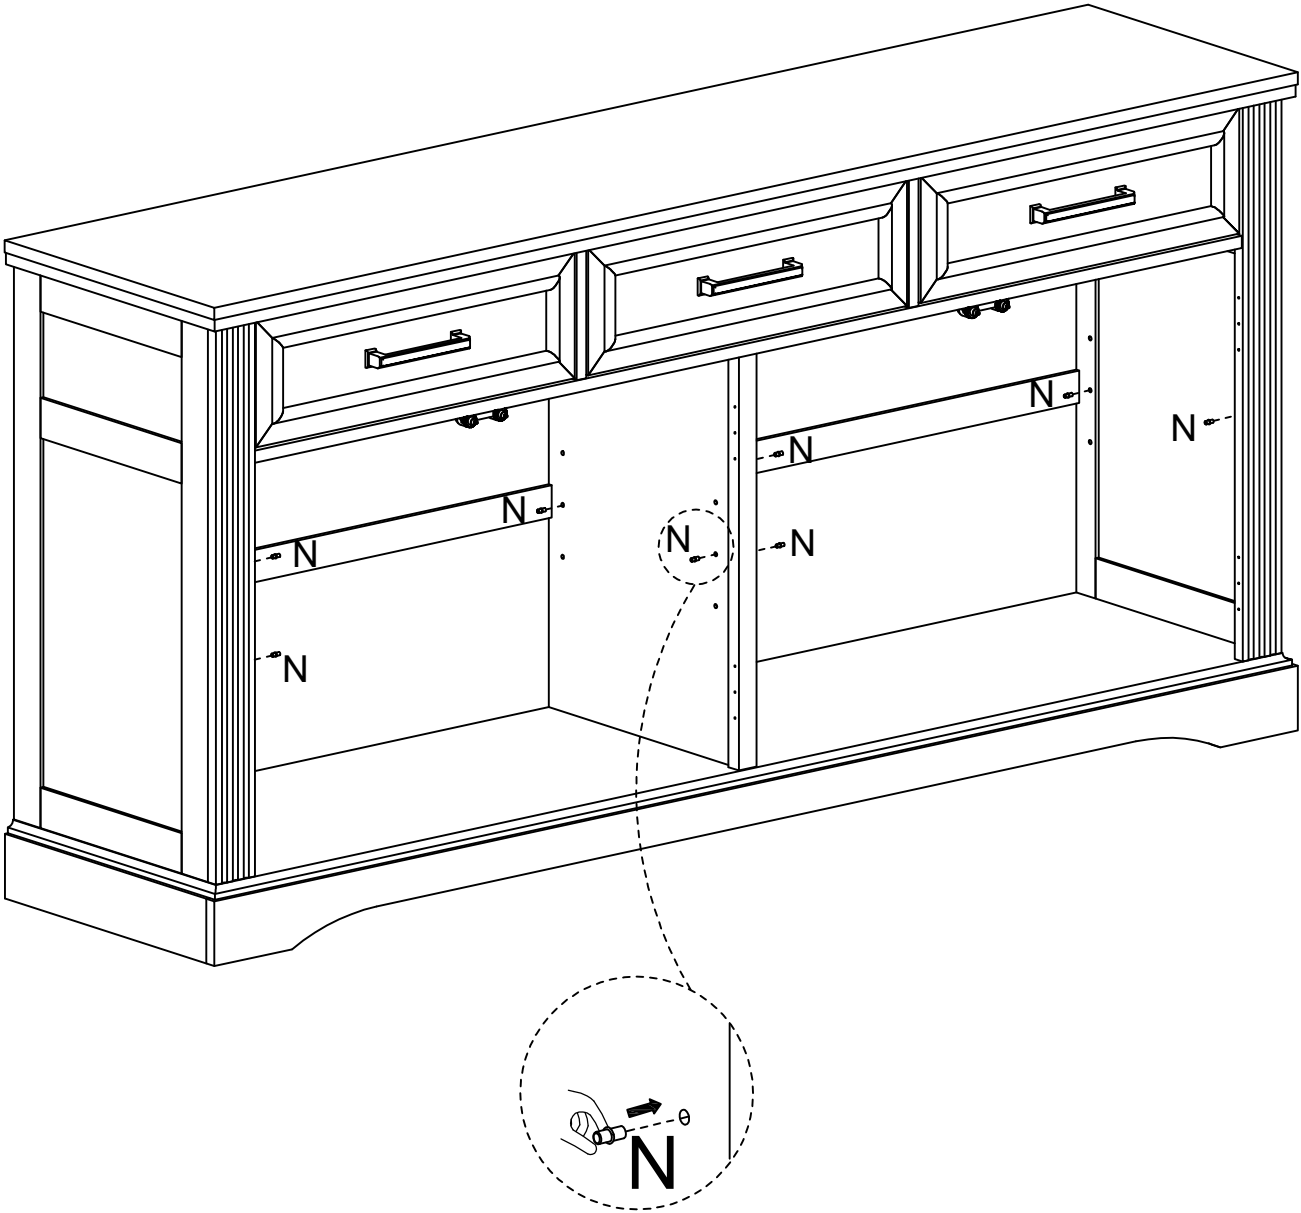


| |
|---|
| N |
|  |
| X8 |

Step 34

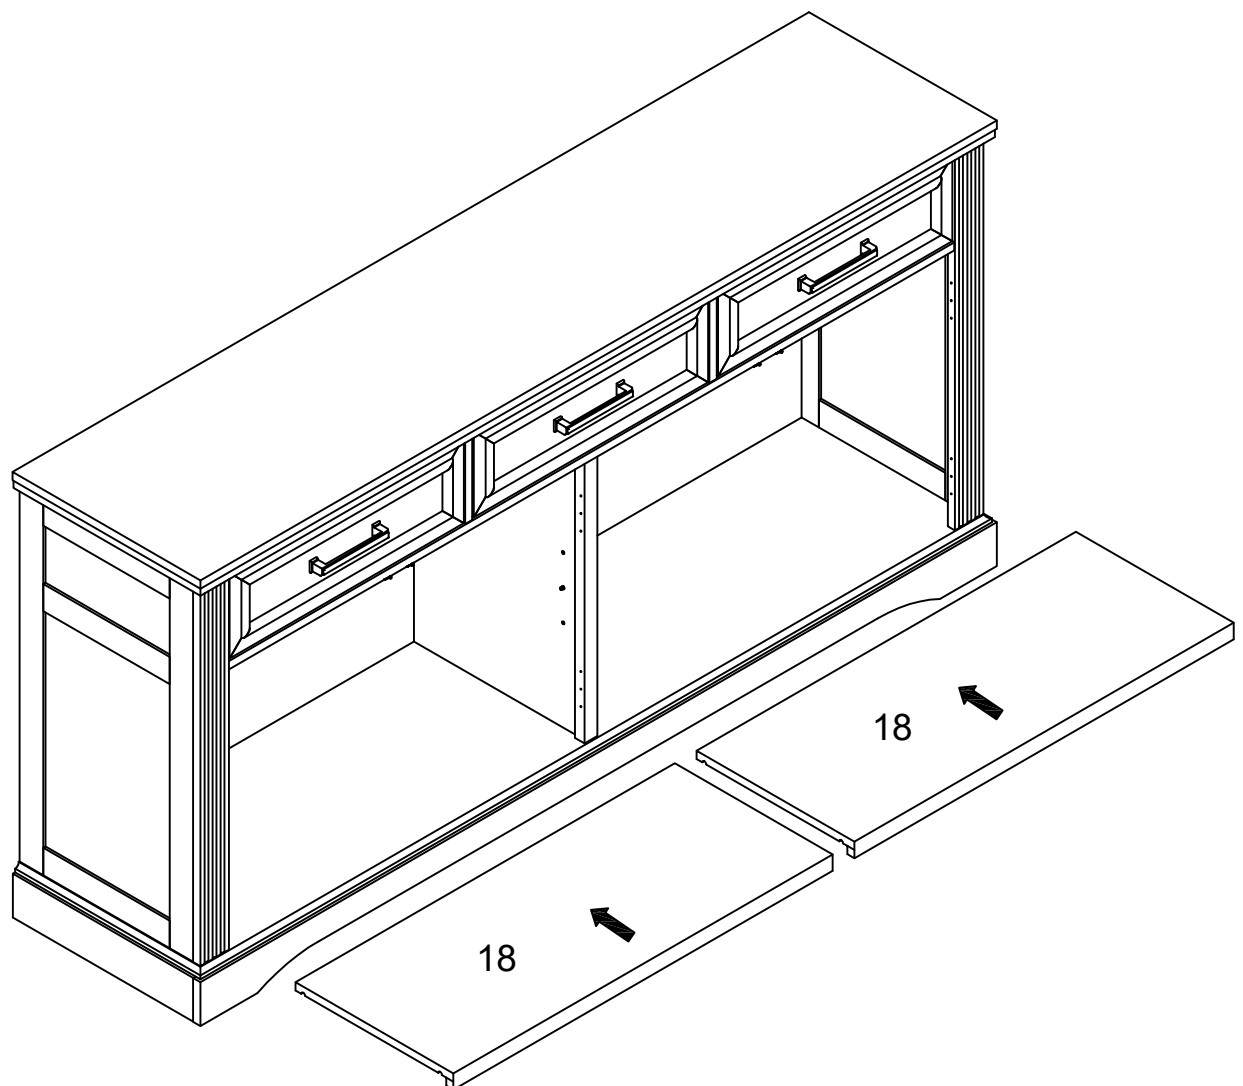





Step 35

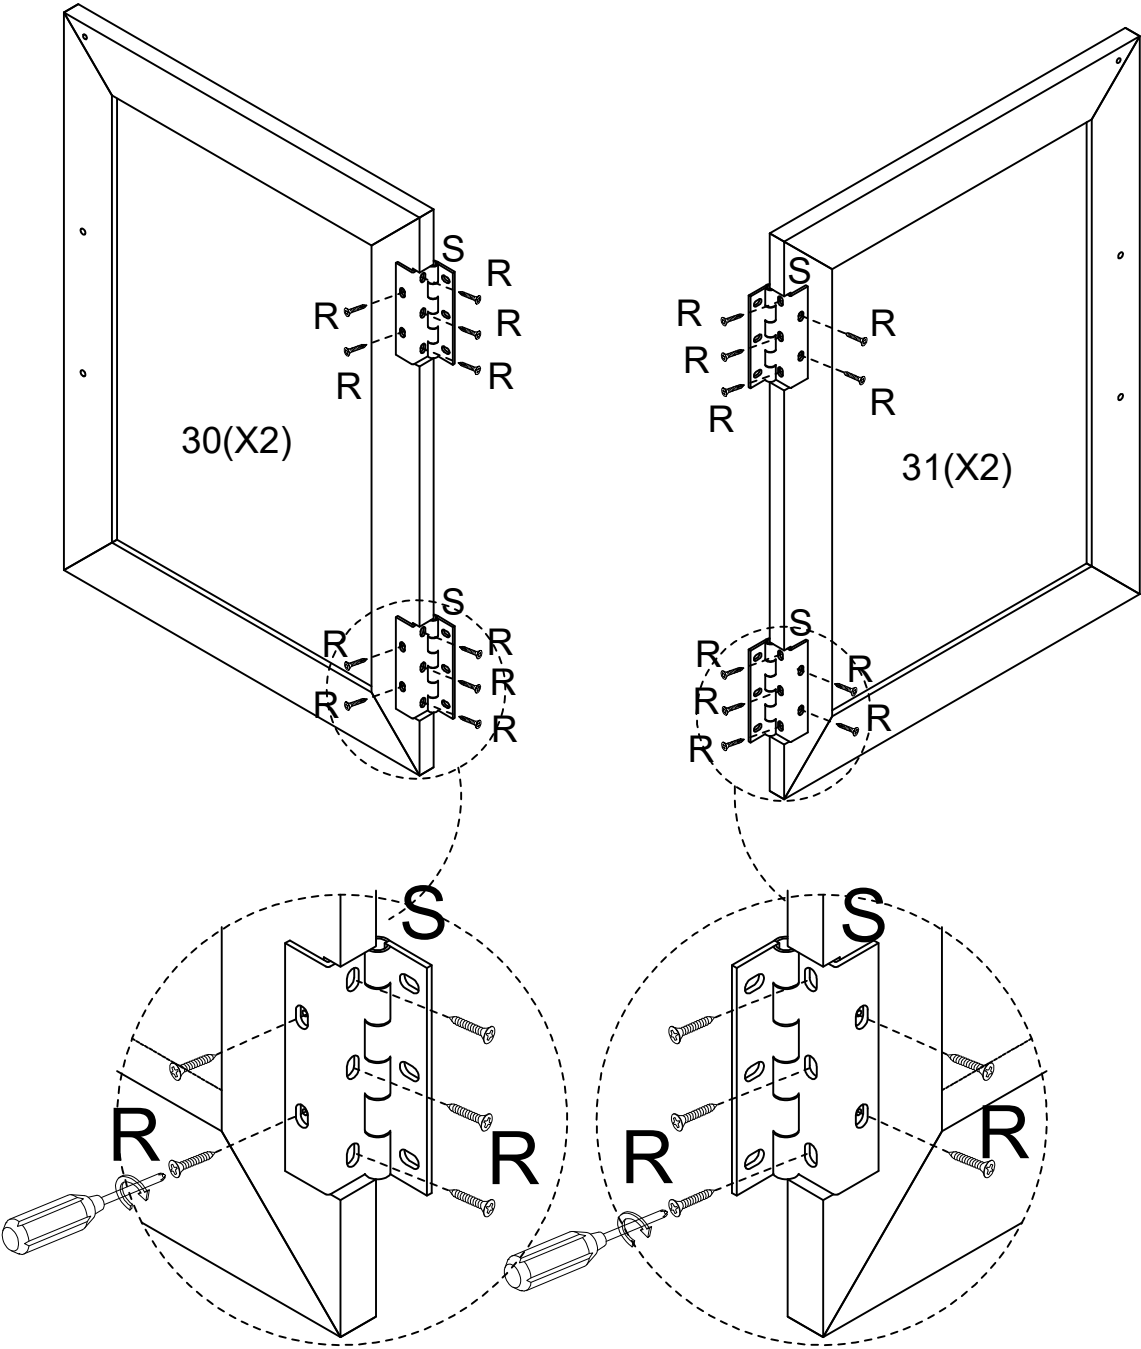


| S | R |
|----|-----|
| | |
| X8 | X40 |


Step 36

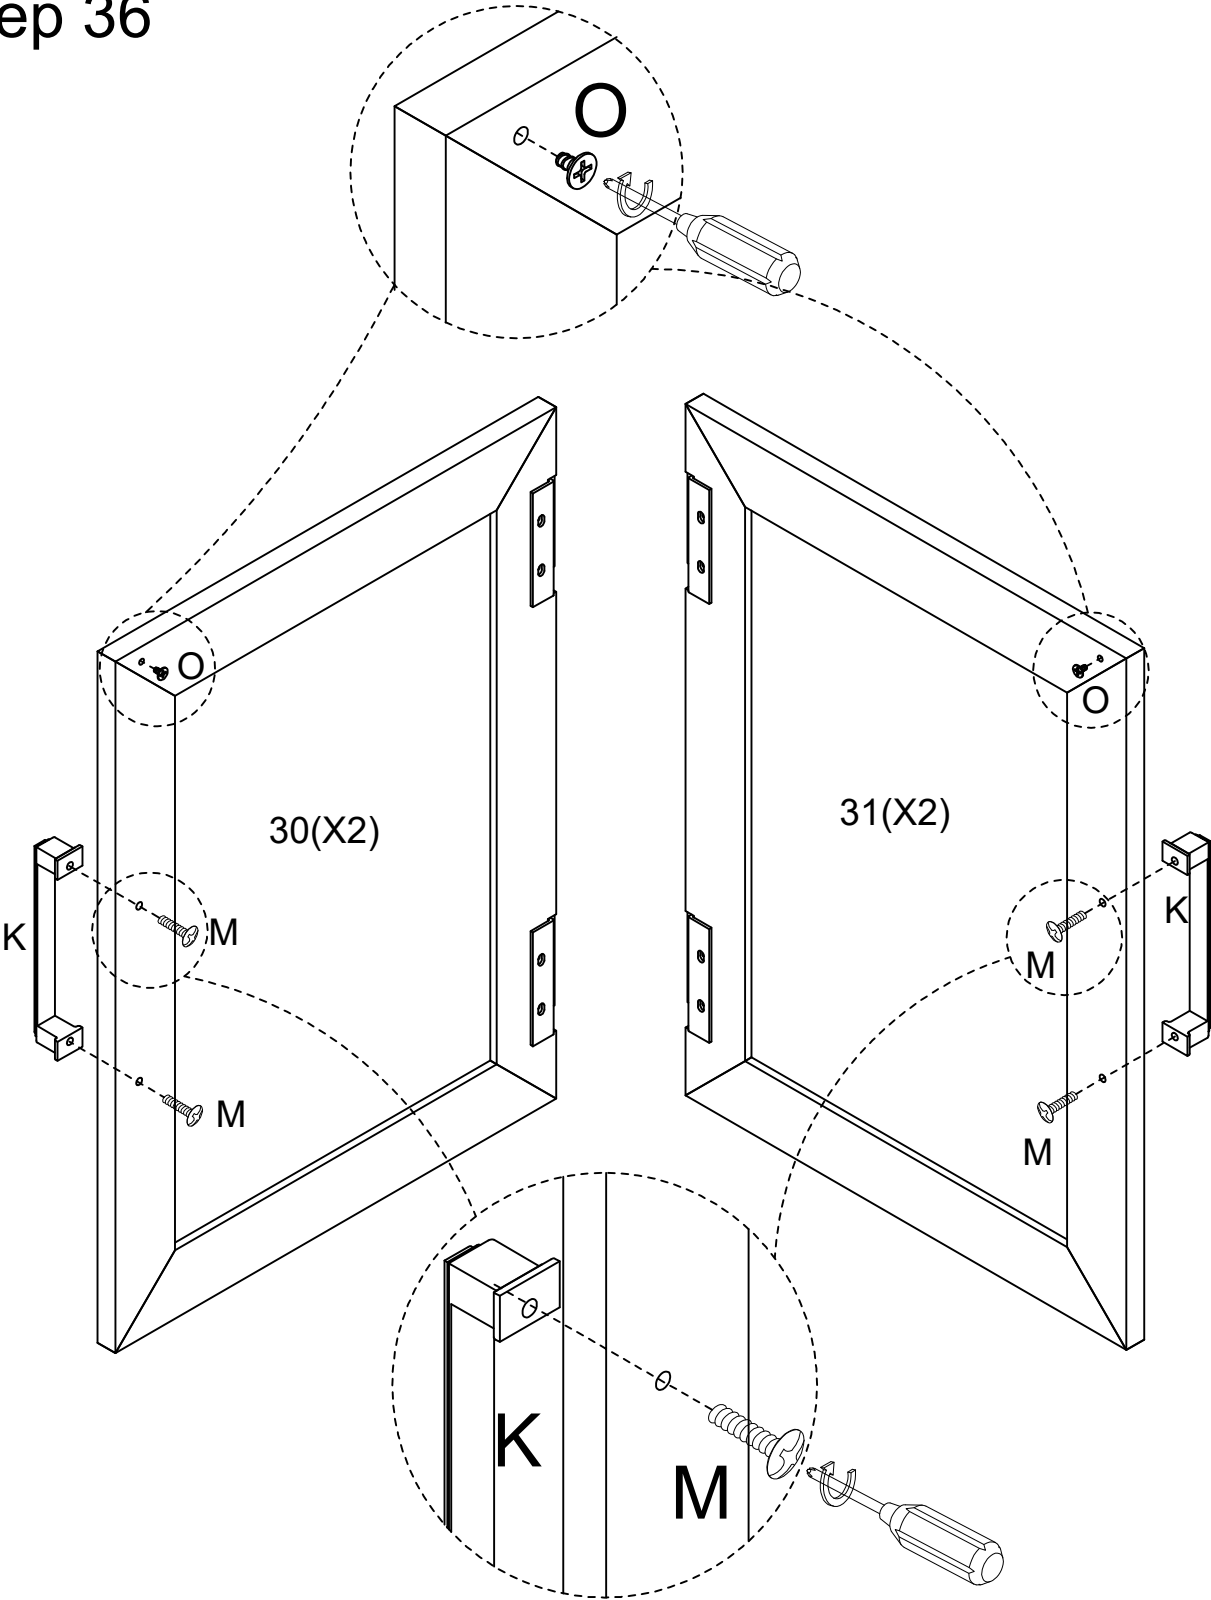


| O | M | K |
|---|---|---|
|  |  |  |
| X4 | X8 | X4 |


Step 37

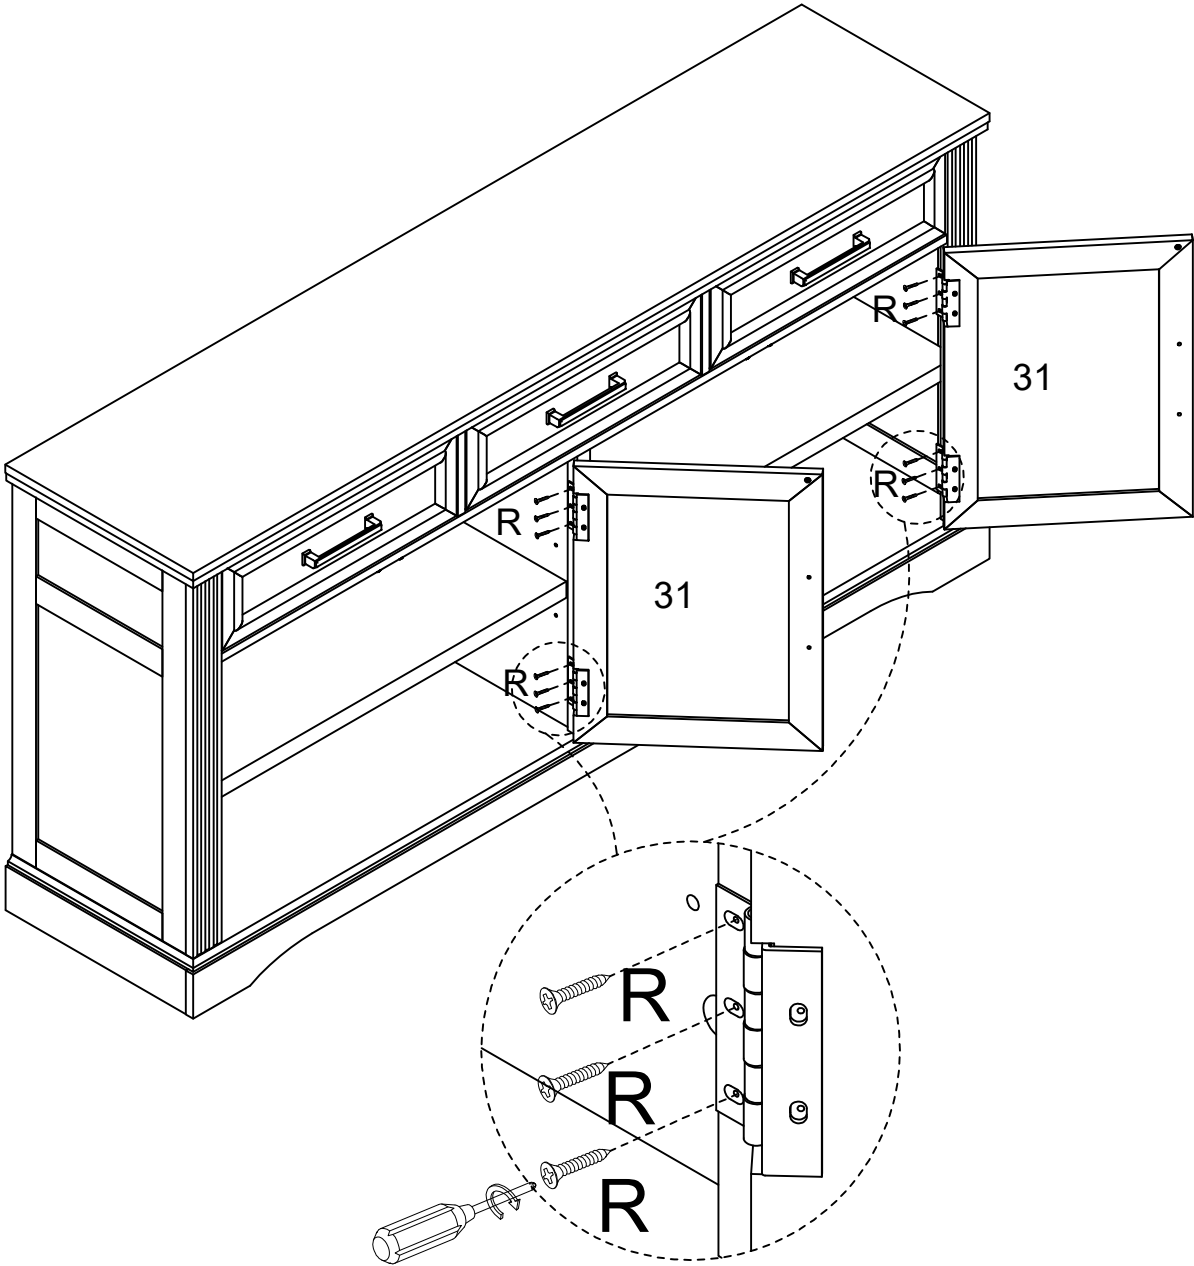


| |
|---|
| R |
|  |
| X12 |

Step 38

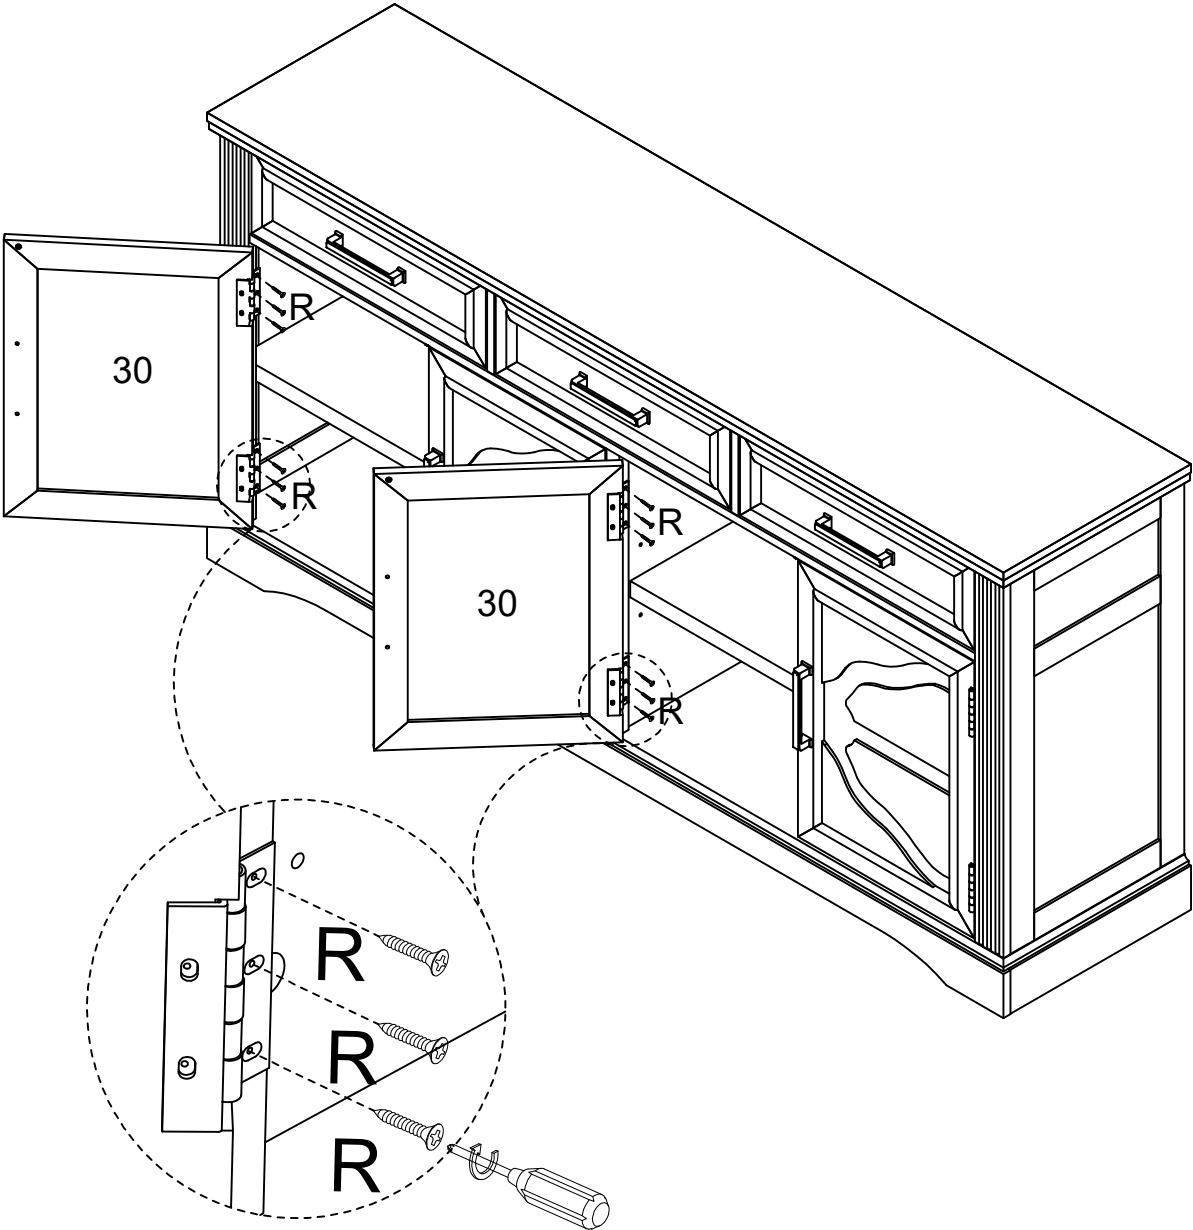



| |
|---|
| R |
|  |
| X12 |

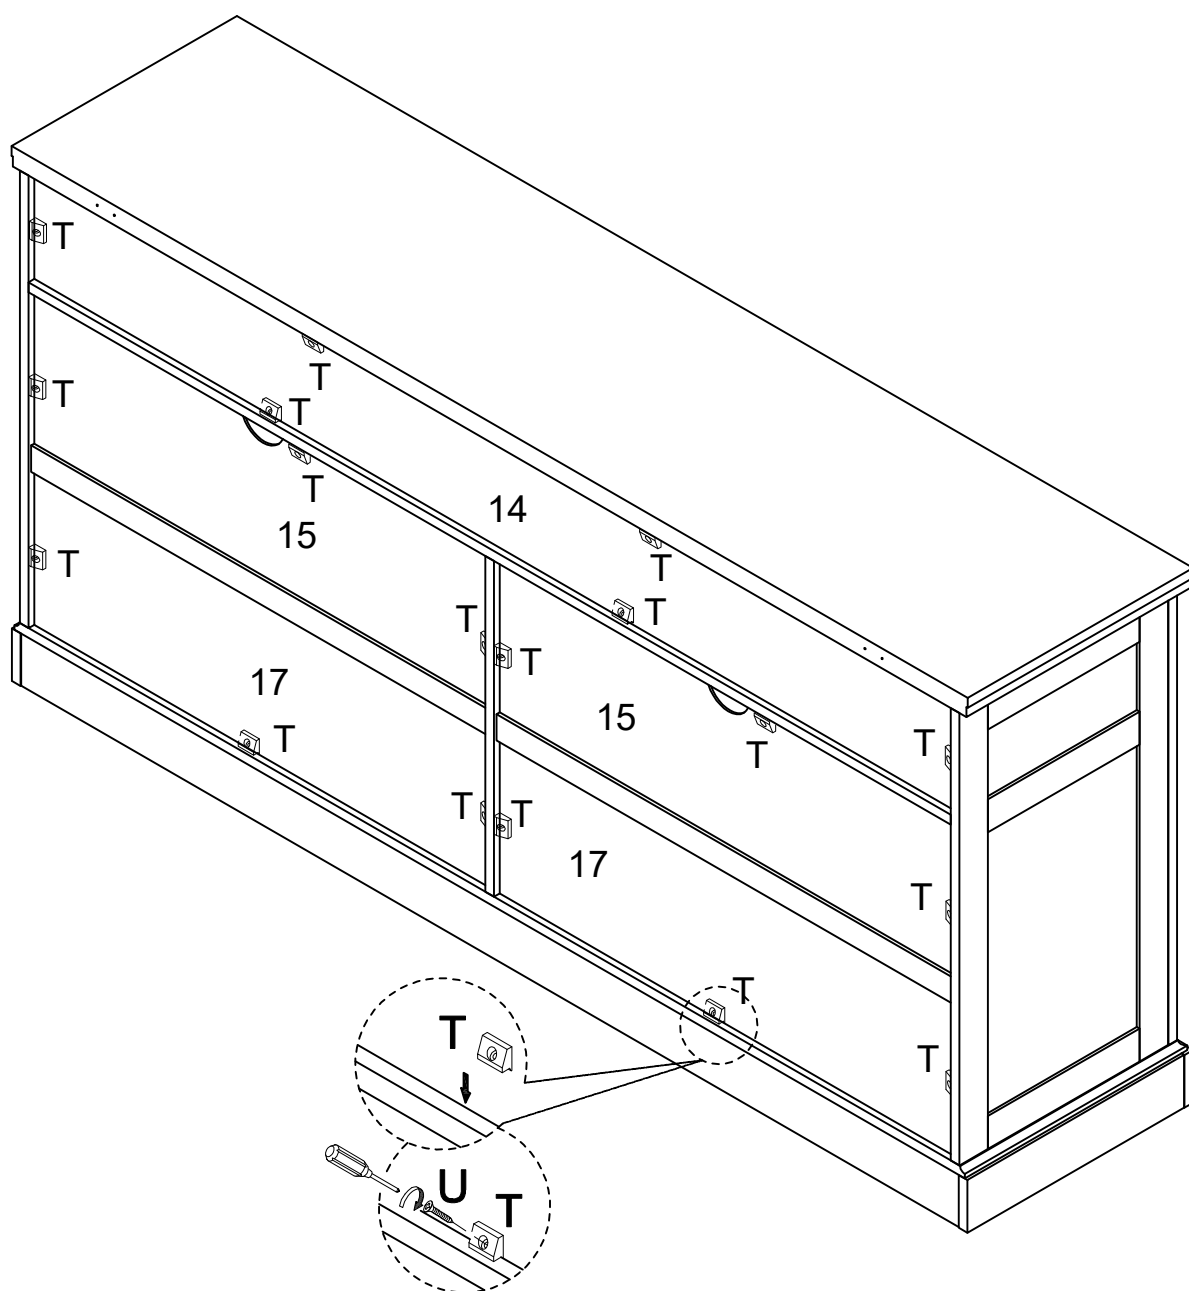

Step 39



| U | T |
|-----|-----|
| | |
| X18 | X18 |

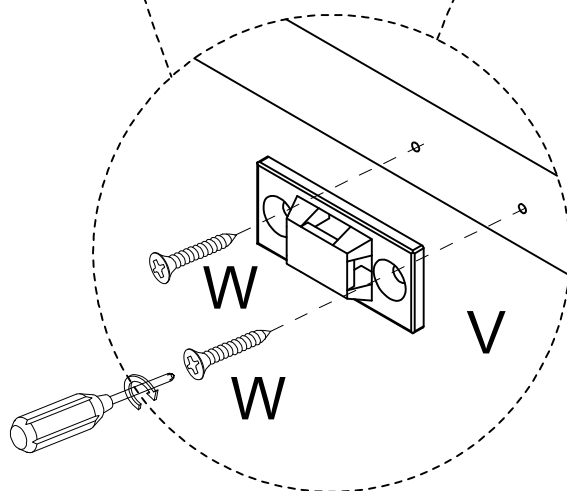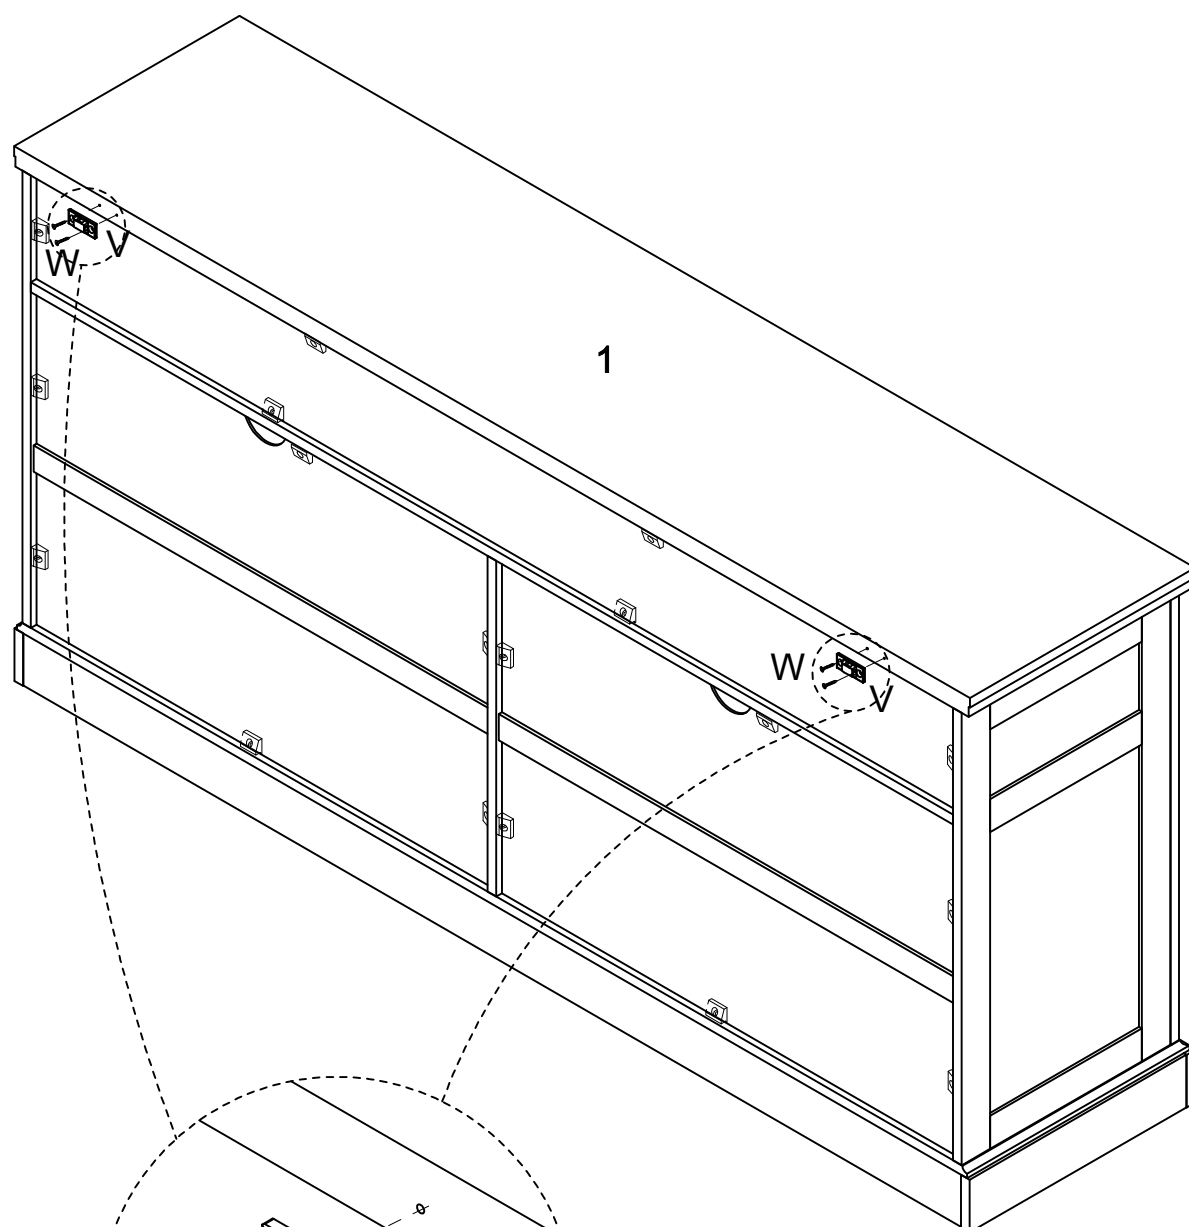
Step 40



| W | V |
|---|---|
|  |  |
| X4 | X2 |


Step 41


Make Four holes 45MM deep

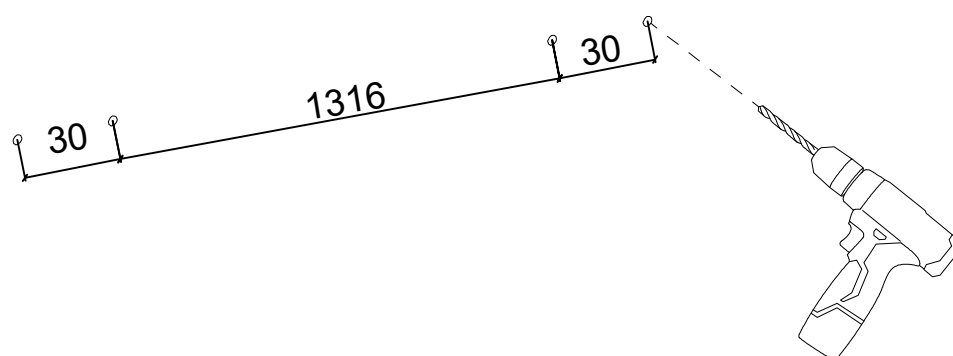


Wall



Step 42

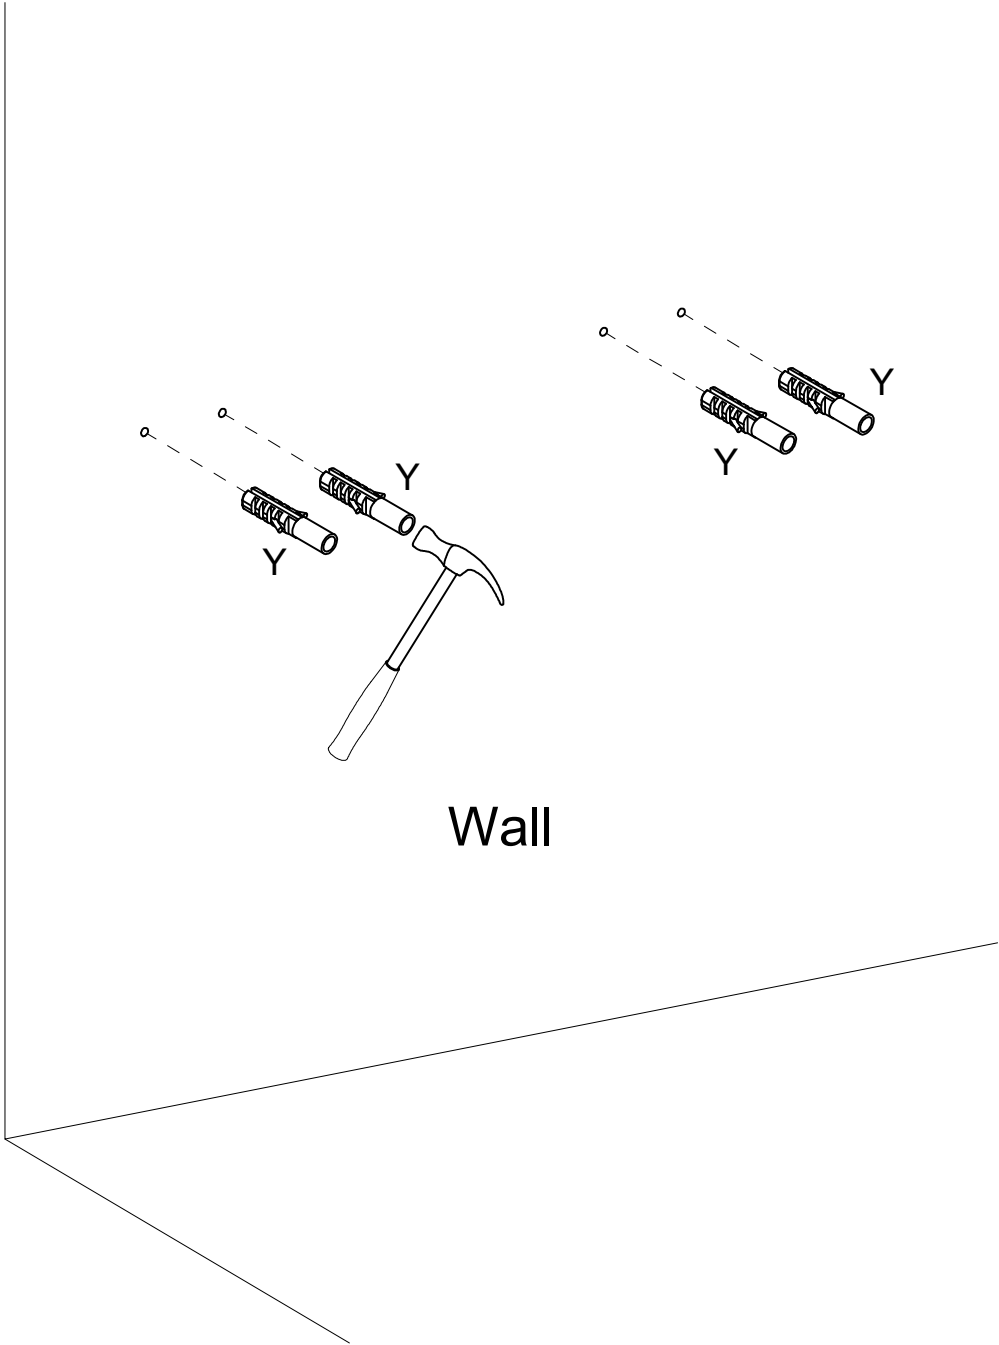


| |
|---|
| Y |
|  |
| X4 |


Step 43

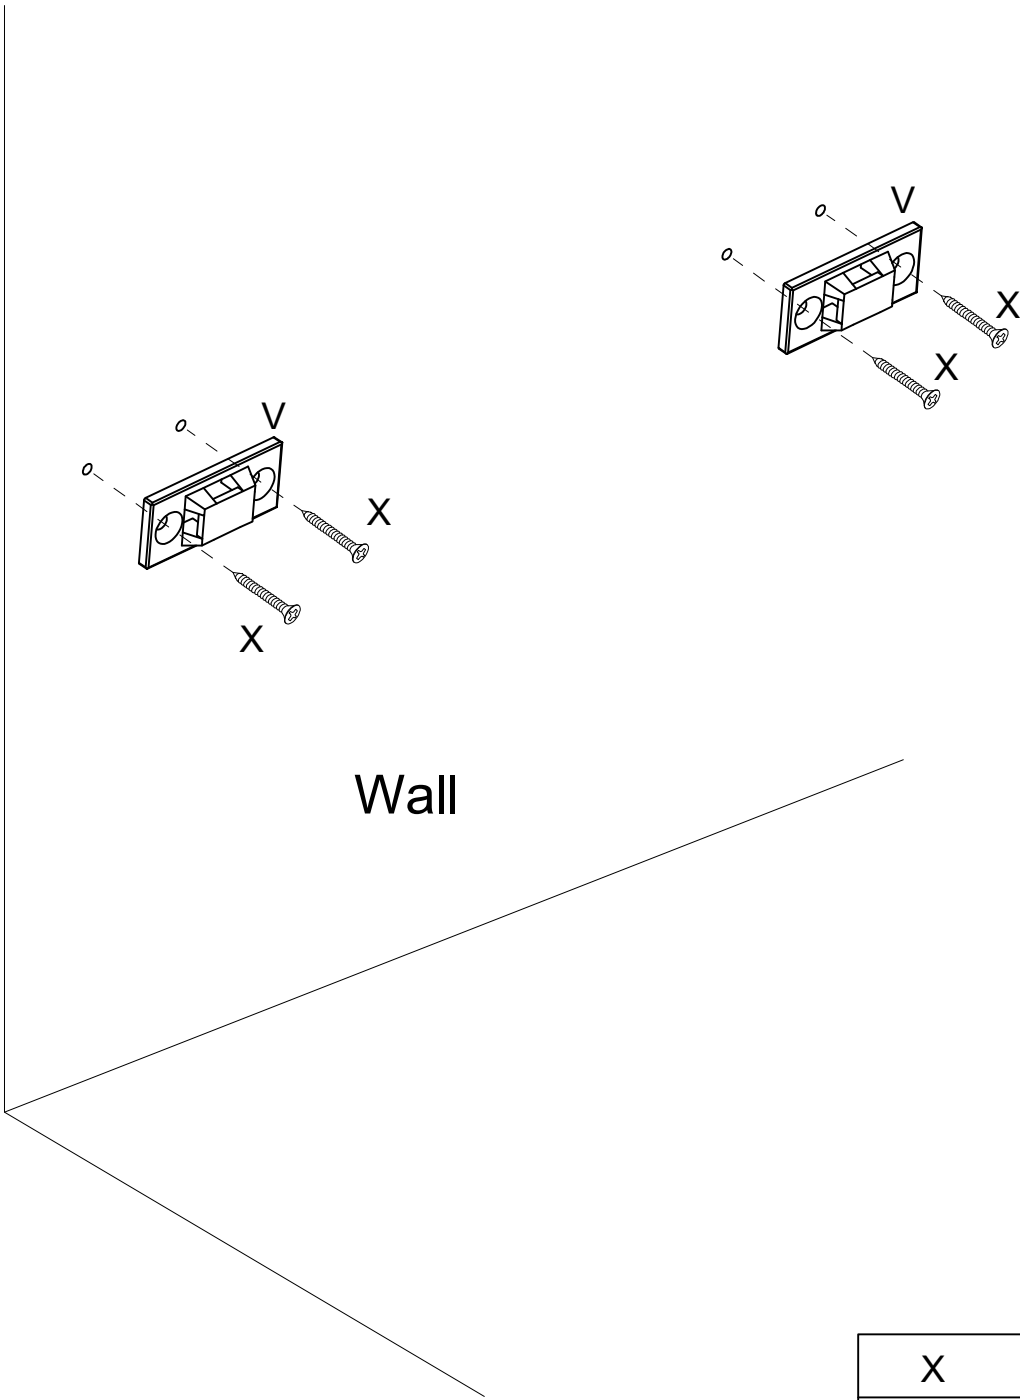

| X | V |
|---|---|
|  |  |
| X4 | X2 |

Step 44

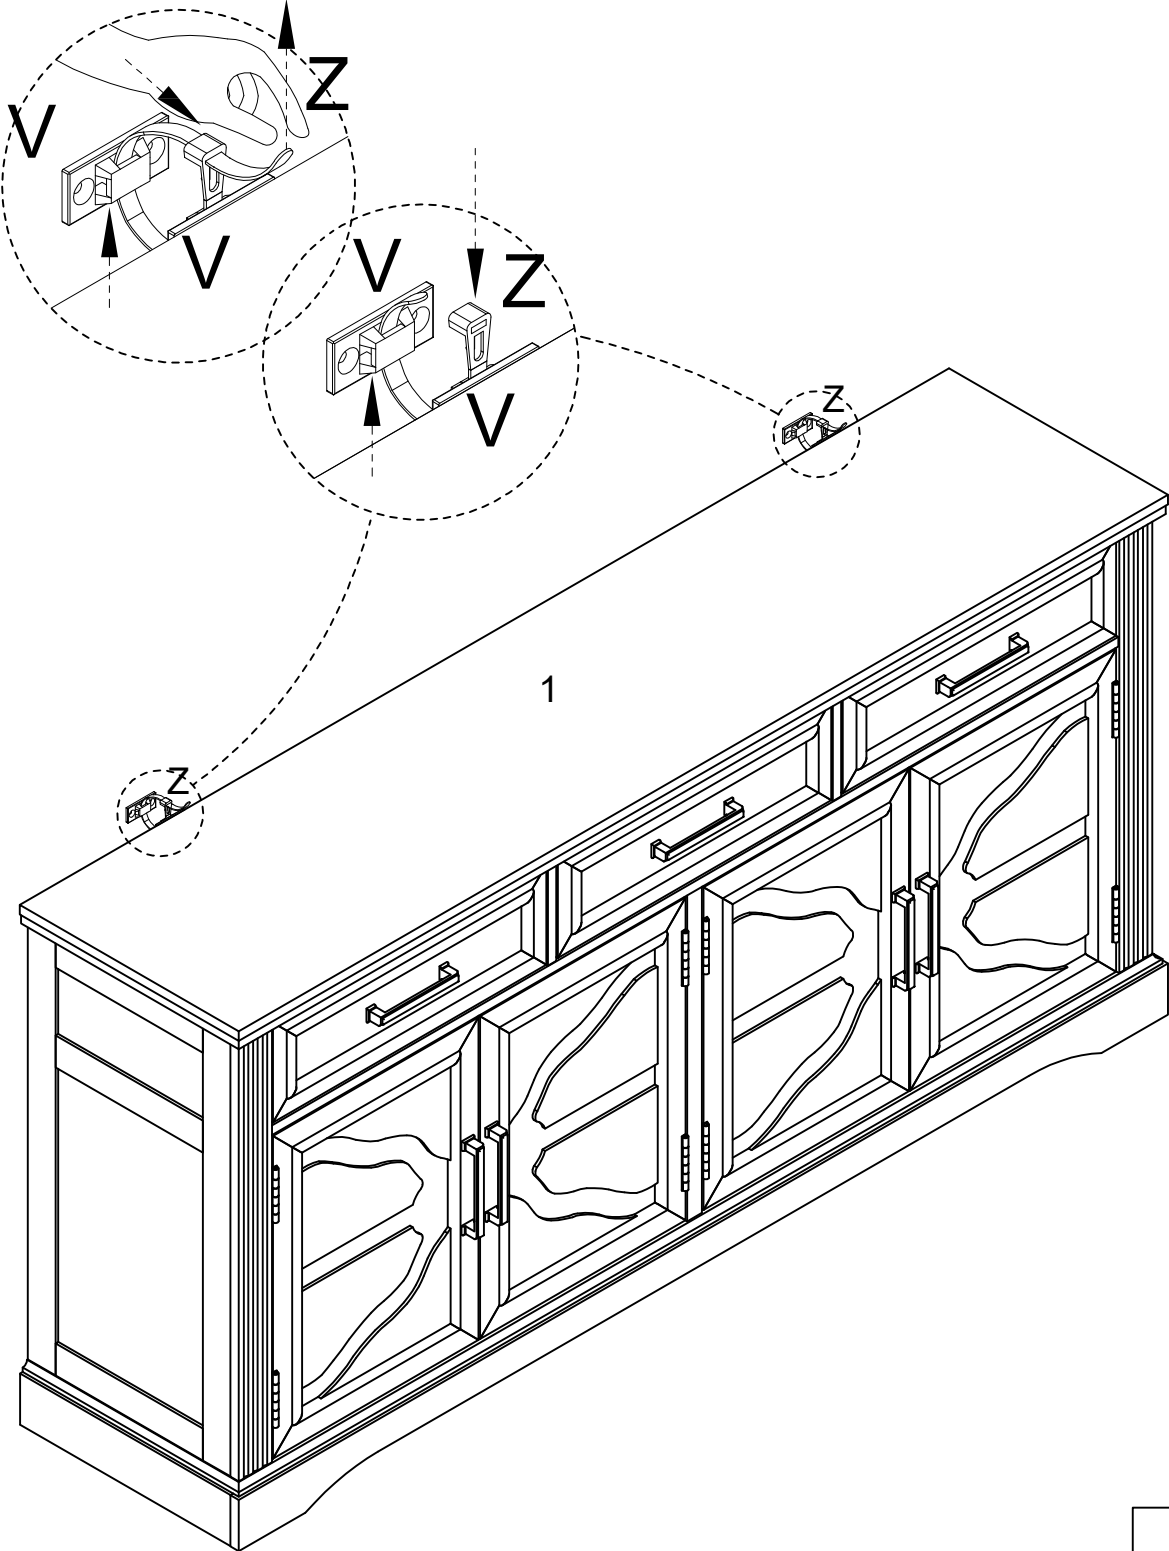

| |
|---|
| Z |
|  |
| X2 |

Step 45

