


Item # : LM035-242D

Assembly Instructions

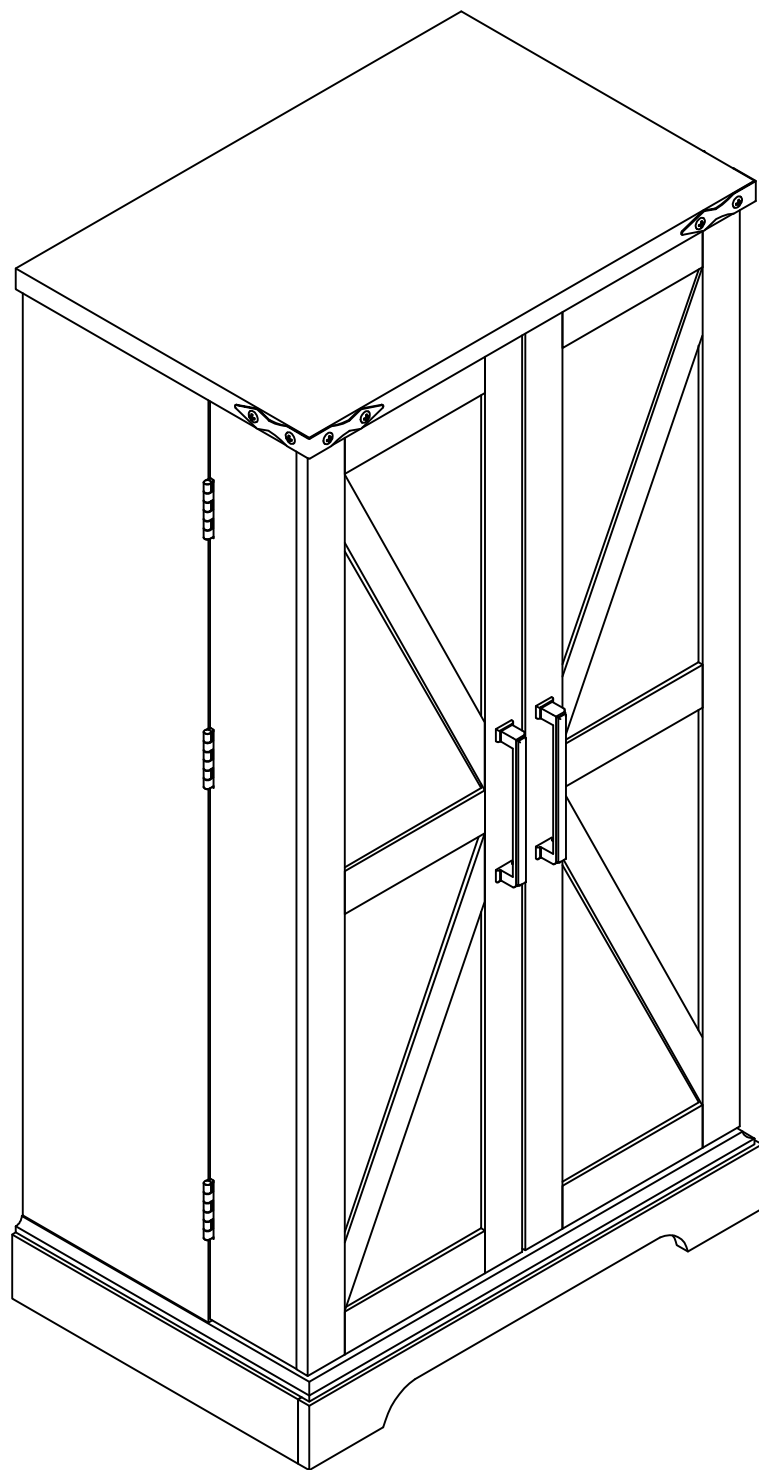


Customer Service E-mail Address: LINGMU1703583851@163.com


Revsied 27/11/2023

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

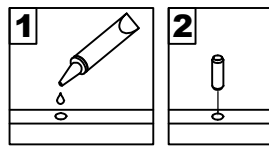


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

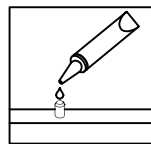


- VI. A Phillips head screwdriver is required for the assembly of this product .

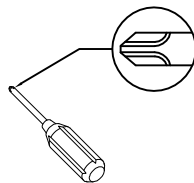


- VII. Power tools should not be used to assemble this product .

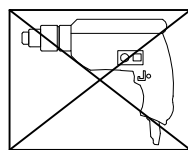


- VIII. Concealed hinges are three-way adjustable.

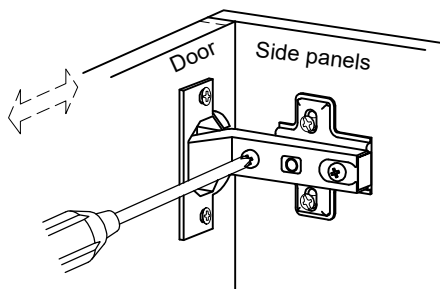

Horizontal
by screw adjustment

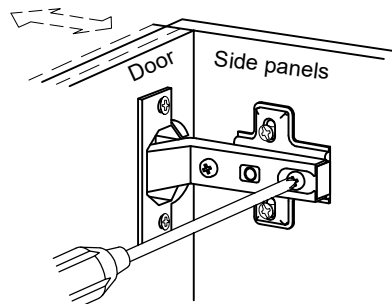


In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

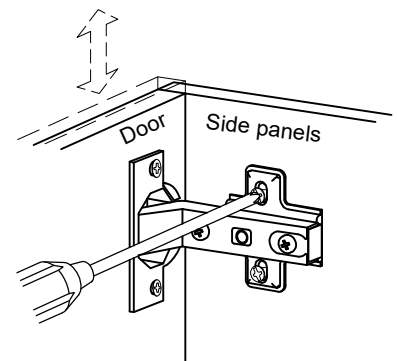
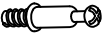







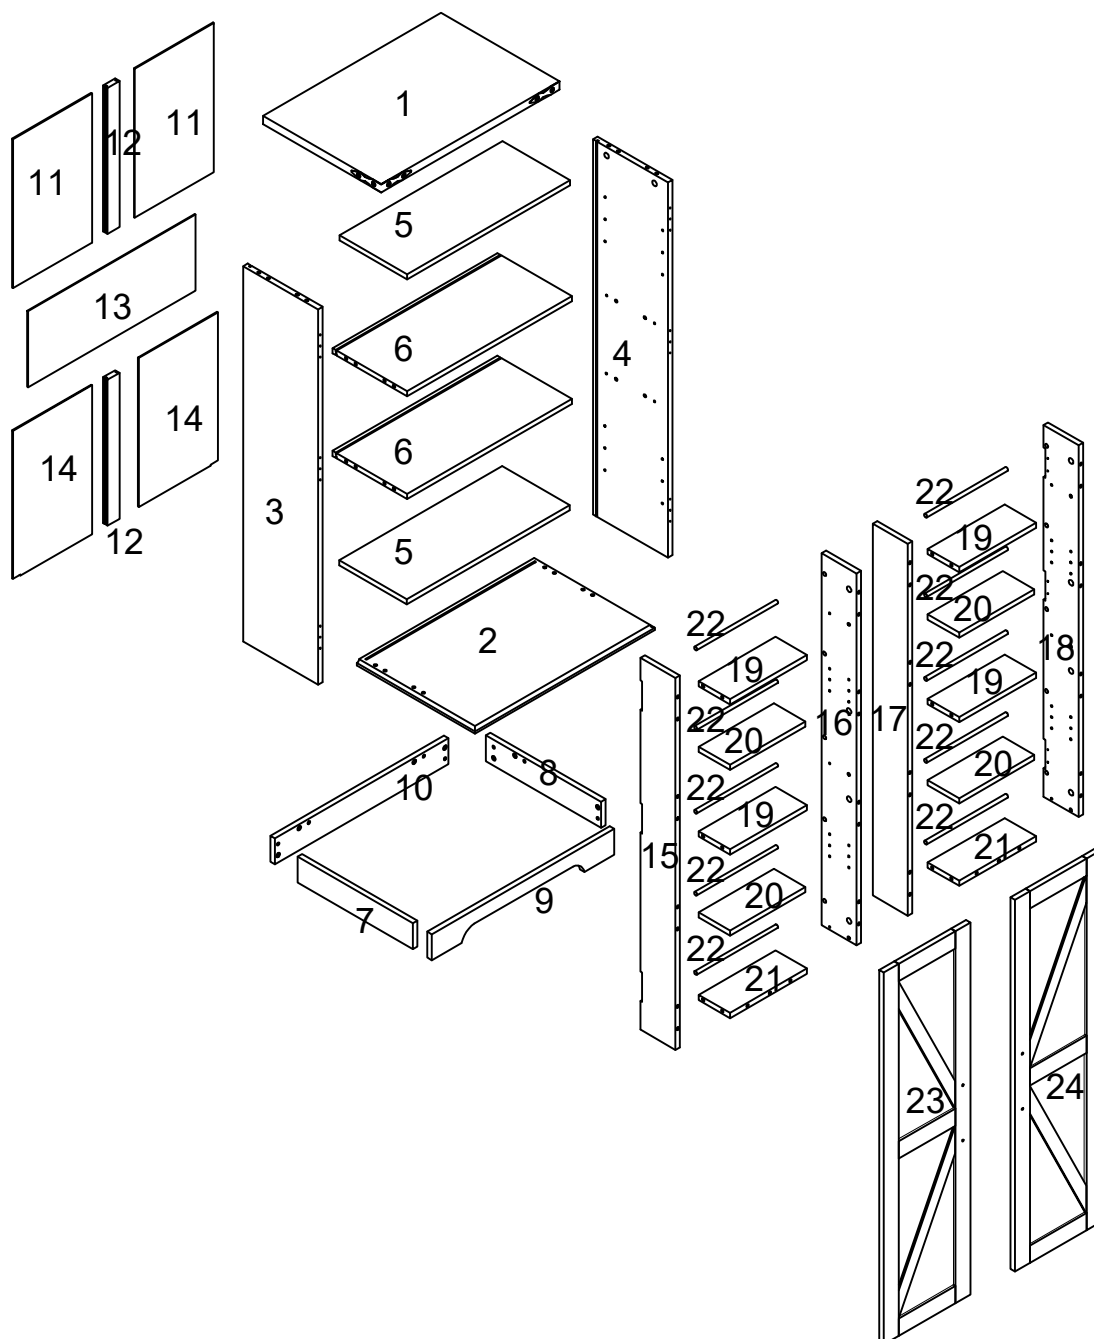






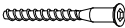



Vertical
Via slots in the mounting
plate or via cam adjustment

Parts List



Hardware List







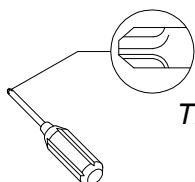

A		Ø8x30mm	Wooden dowel	46 pcs
B		Ø6x35mm	Cam lock	44 pcs
C		Ø15x11mm	Cam lock	44 pcs
E		Ø30mm	Sticker	44 pcs
F		Ø6x50mm	Bolt	4 pcs
G		M 4	Hex Key	1 pc
H			Hold hands	2 pcs
I			Angular Code	10 pcs
J		Ø3x12mm	Screw	14 pcs
K			Metal piece	2 pcs
L			Door stopper	2 pcs
M		Ø3x15mm	Screw	4 pcs
N		Ø5x13x26mm	Shelf support pin	24 pcs
O		Ø3.5x15mm	Screw	48 pcs
P			Hinge	6 pcs
Q		M6*12mm	Screw	20 pcs
R		Ø4x19mm	Screw	4 pcs




Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Hardware List


S			Anti-inversion hardware	4 pcs
T		Ø4*15mm	Screw	4 pcs
U			House lizard	4 pcs
V		Ø4x35mm	Screw	4 pcs
W			Strip	2 pcs
X			Plastic wedge	20 pcs
Y		Ø3x17mm	Screw	20 pcs
Z			Small White Glue	1 pc

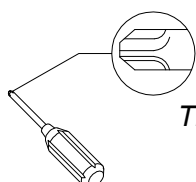


Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*


Step 1

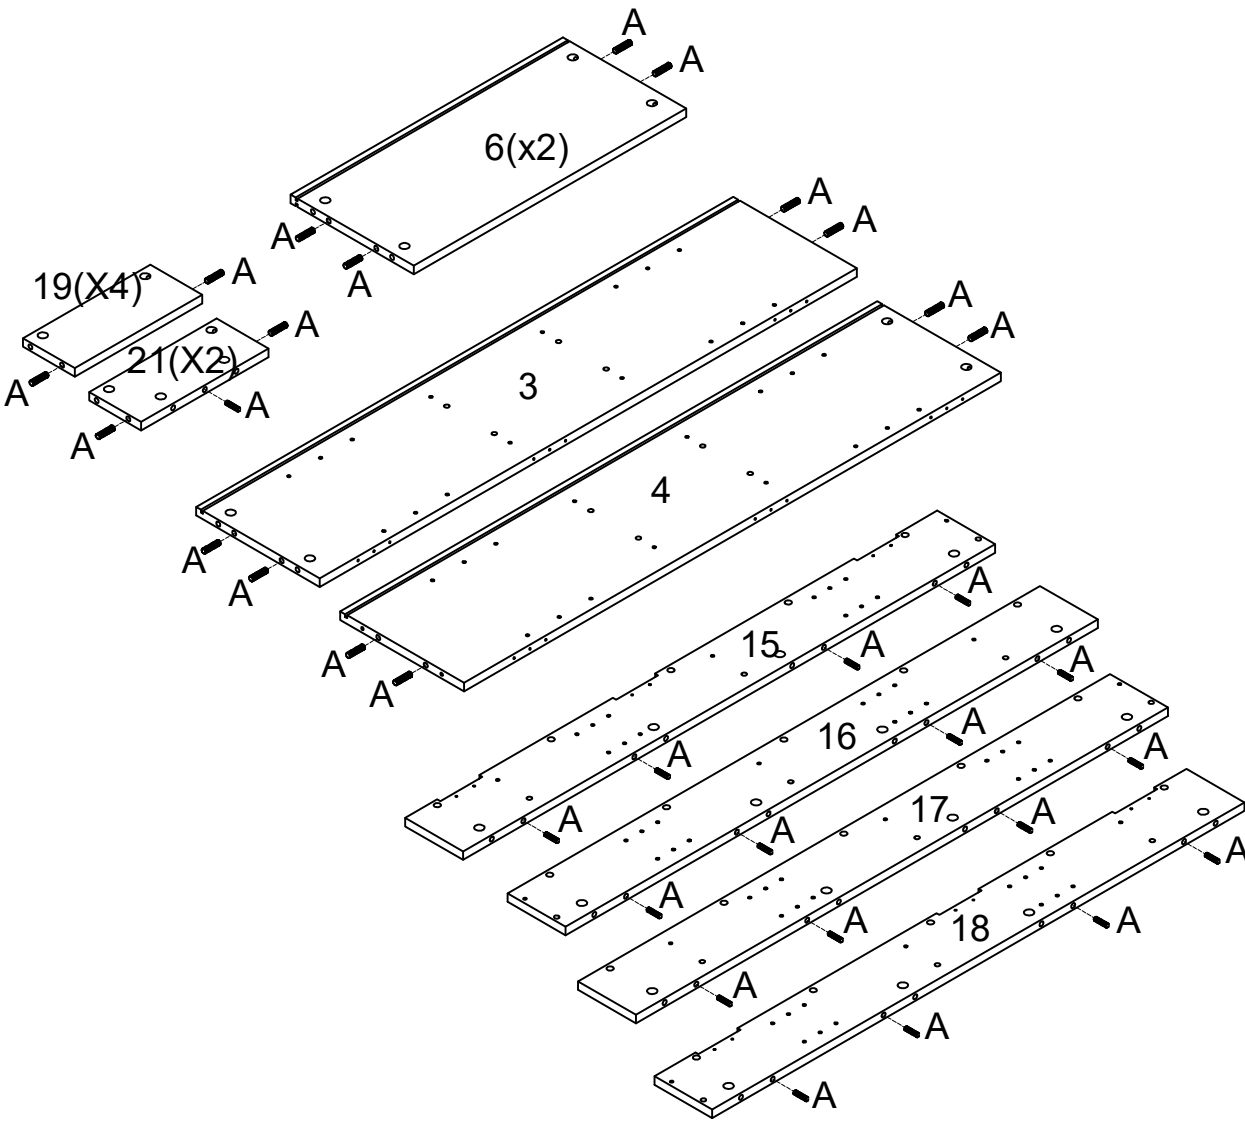


A

X46

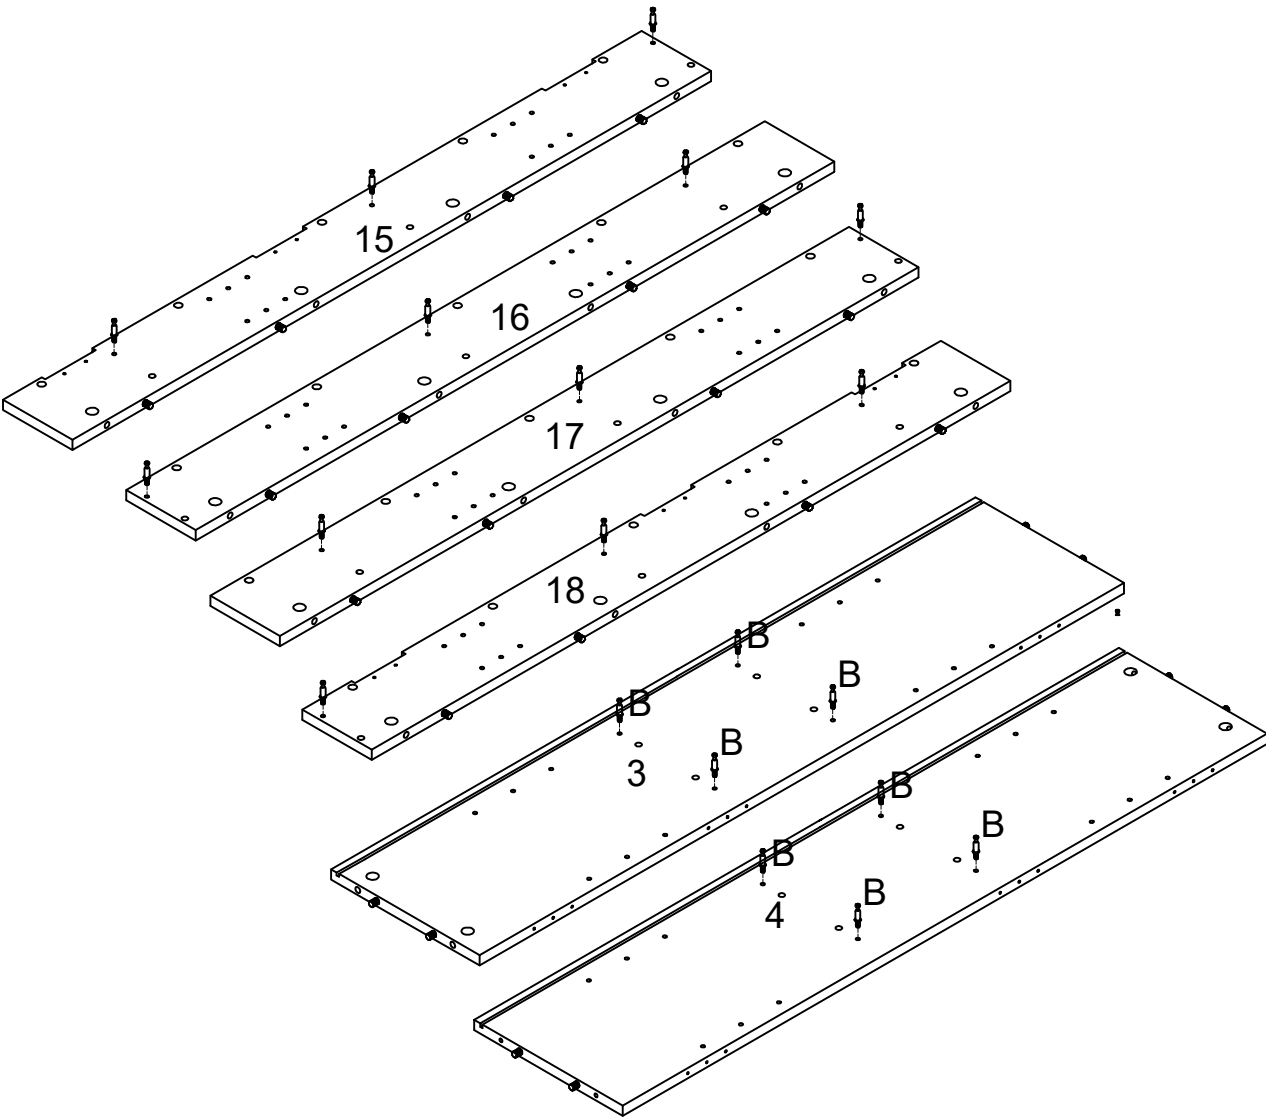
Step 2





B

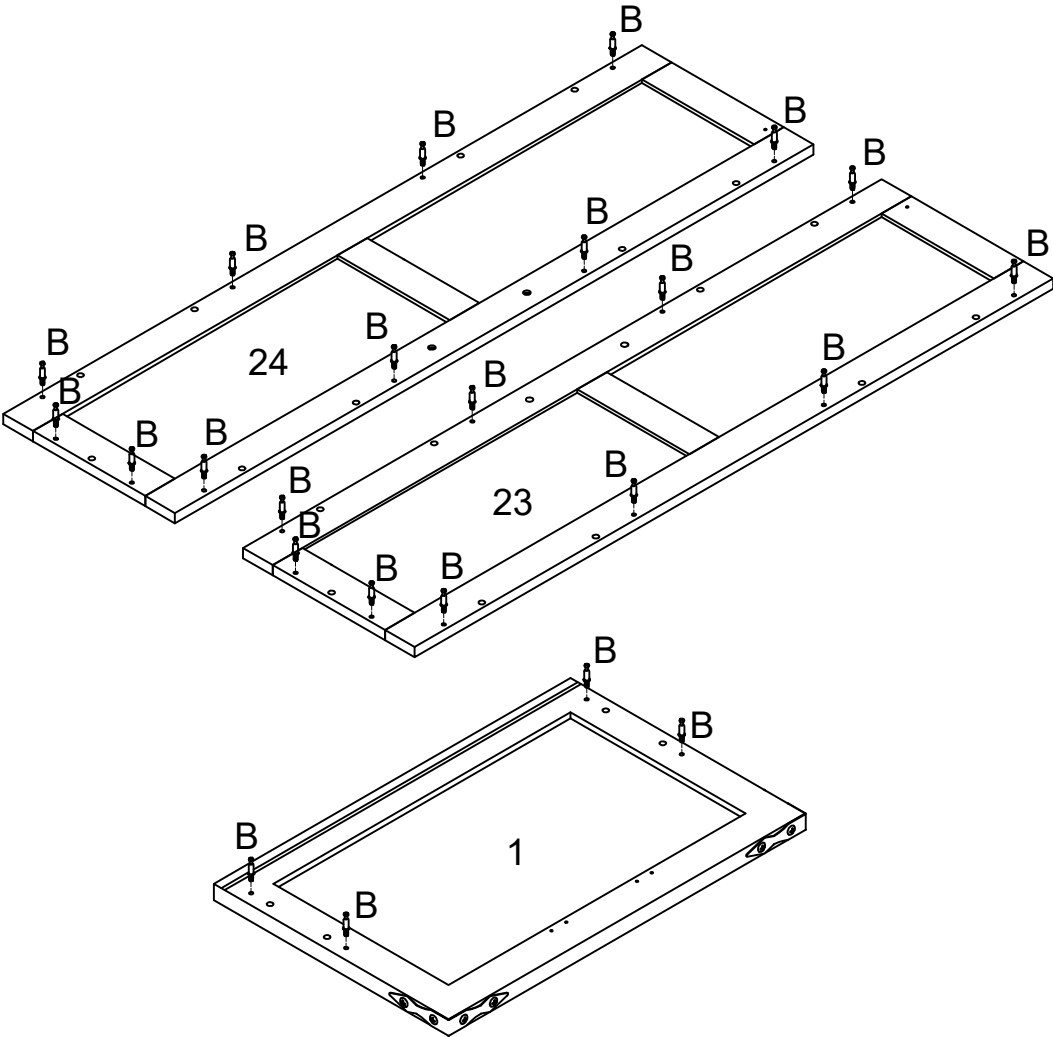X20


Step 3




B

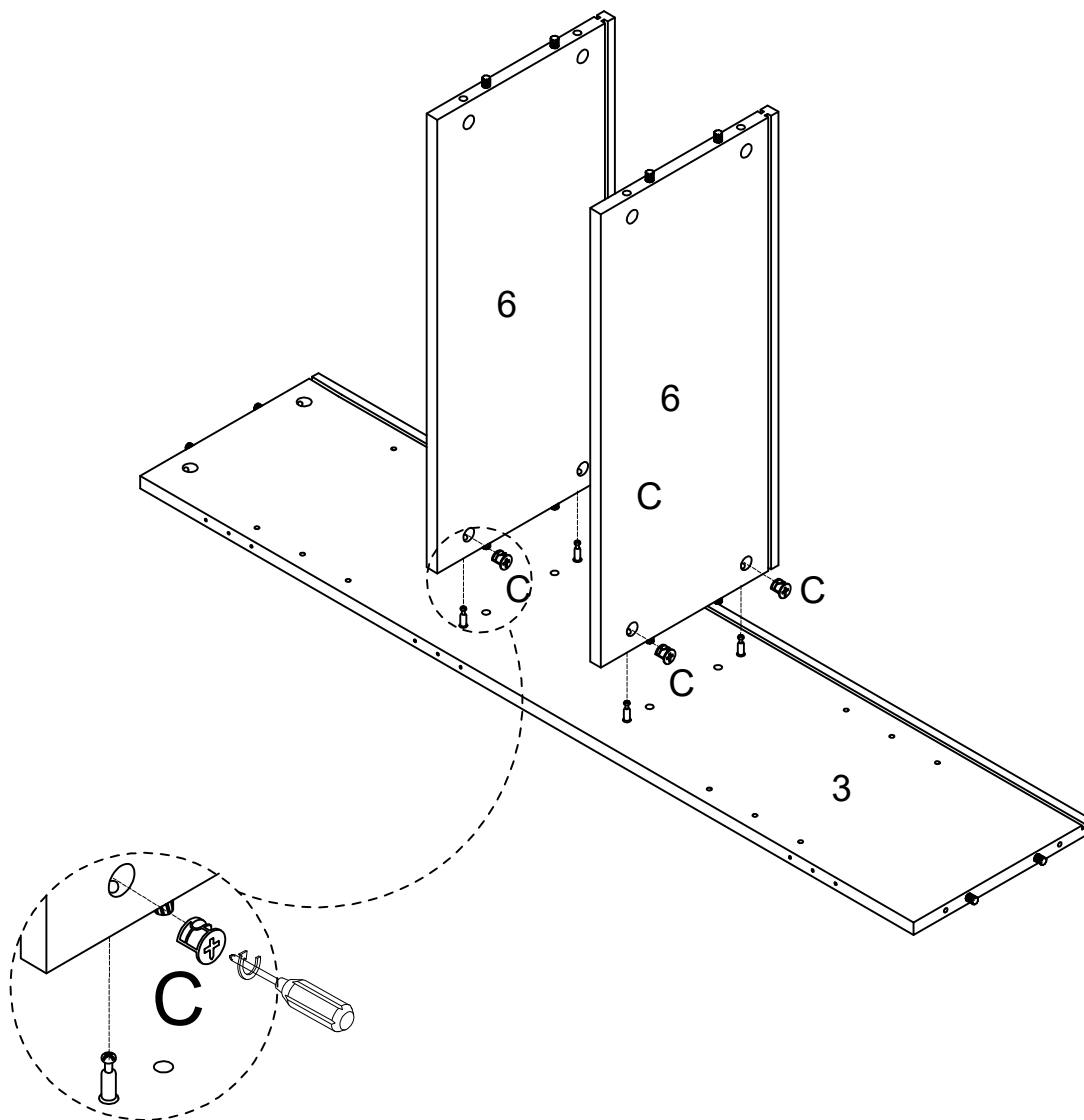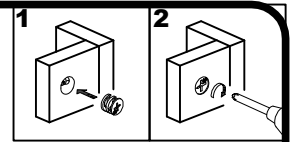X24

Step 4






C

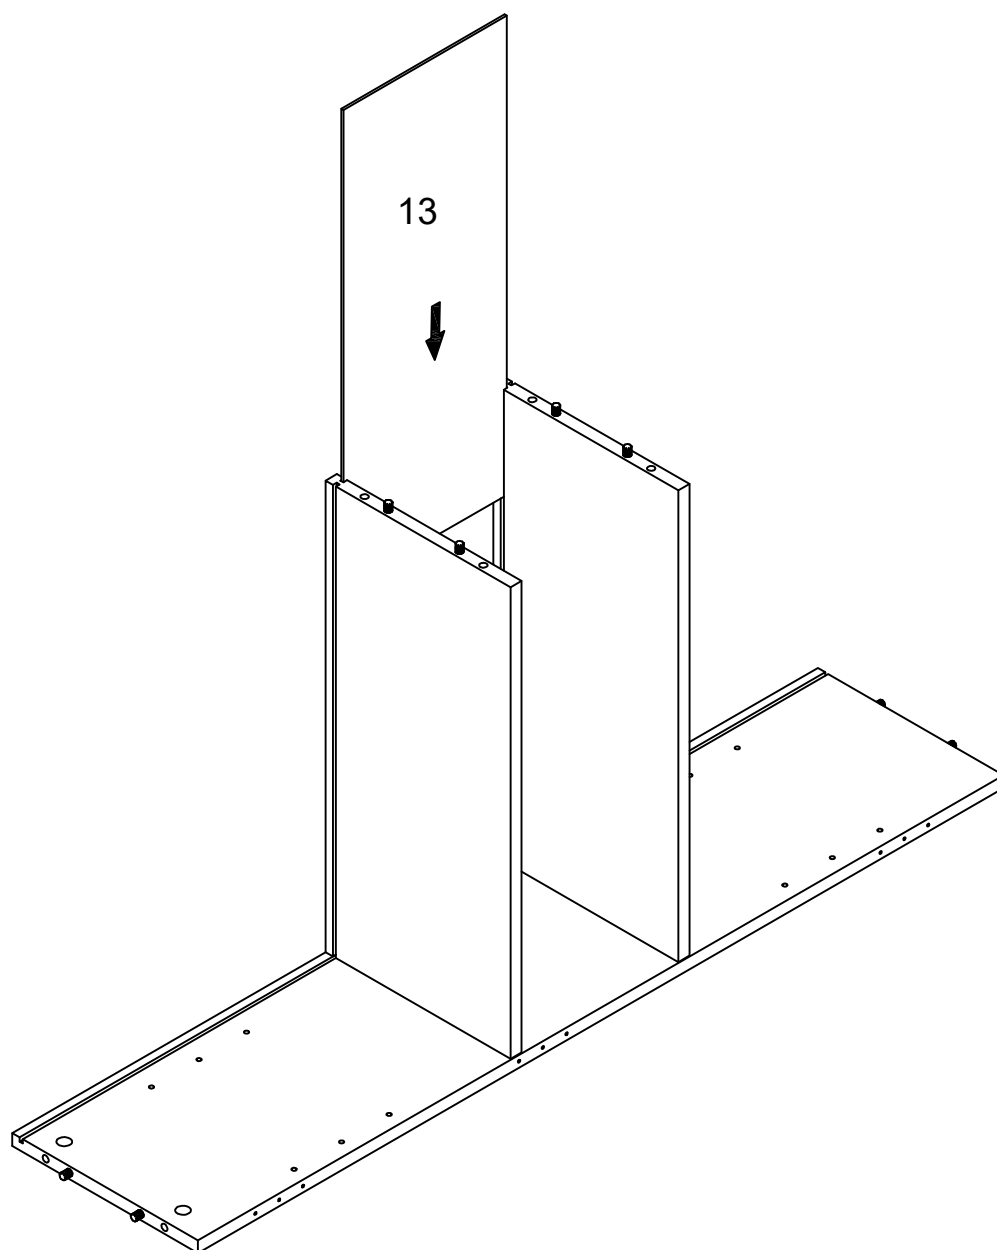X4

Step 5

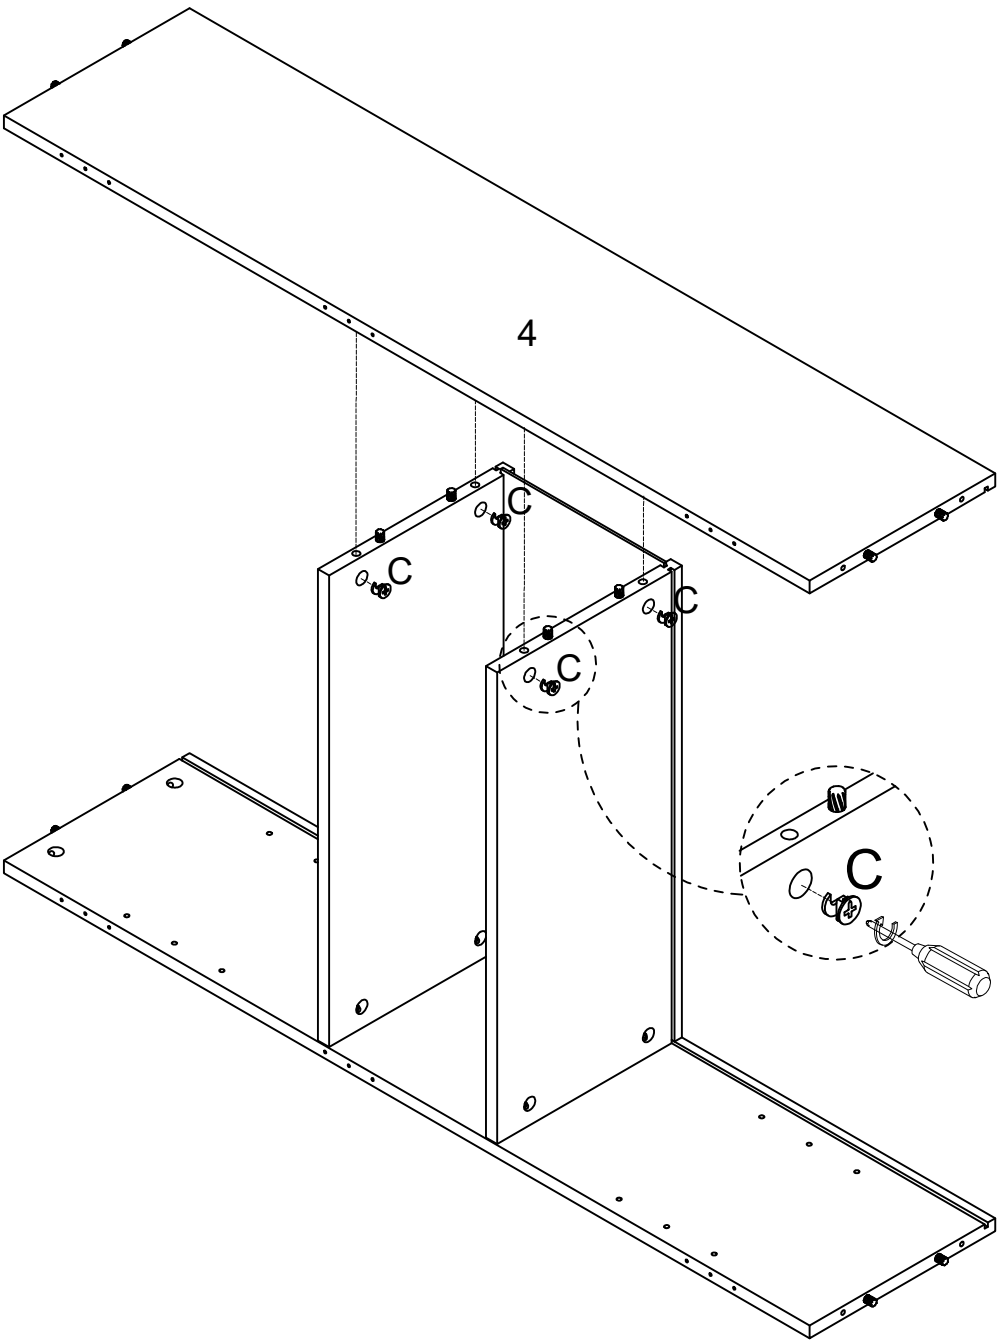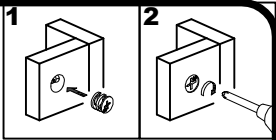


Step 6





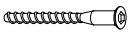
C

X4

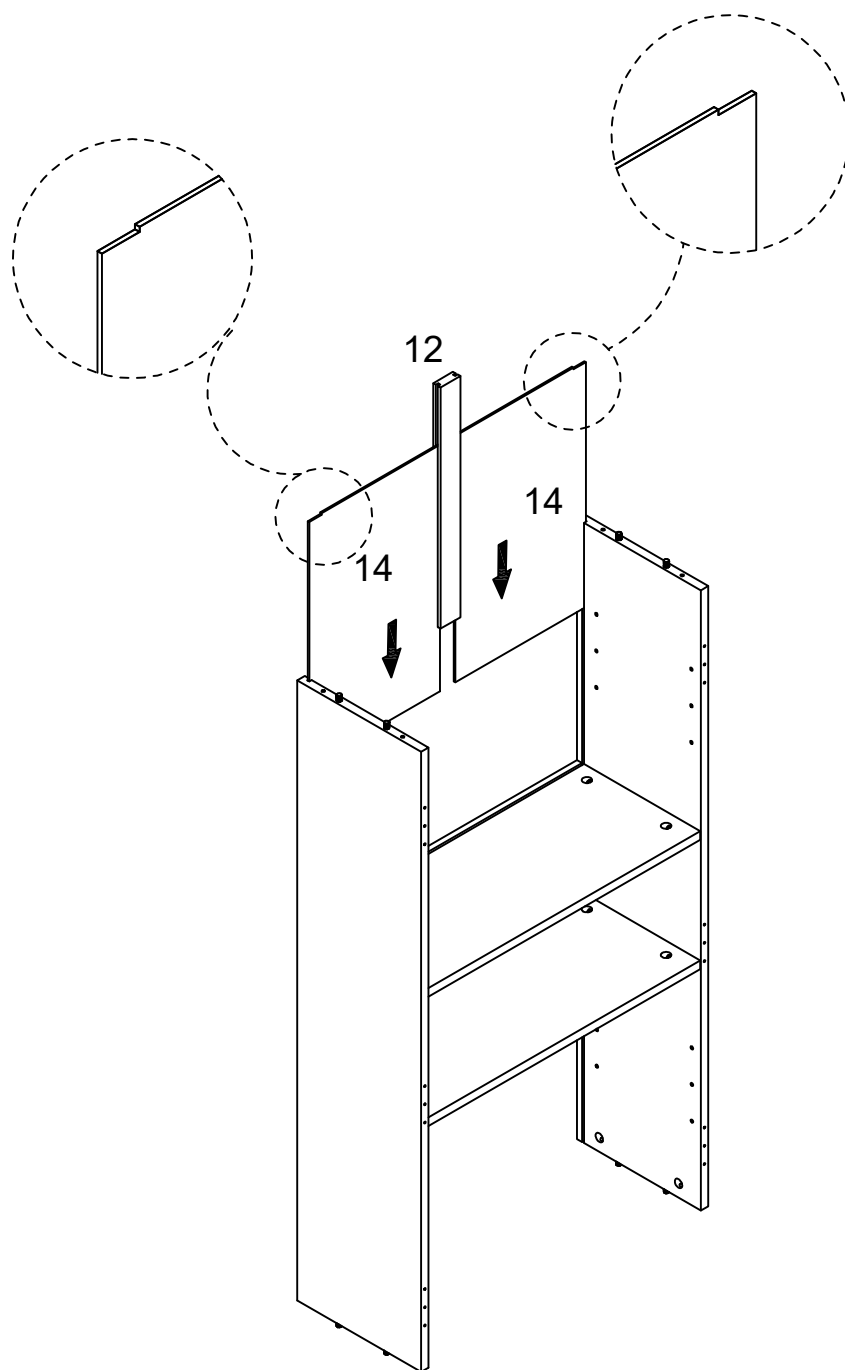Step 7




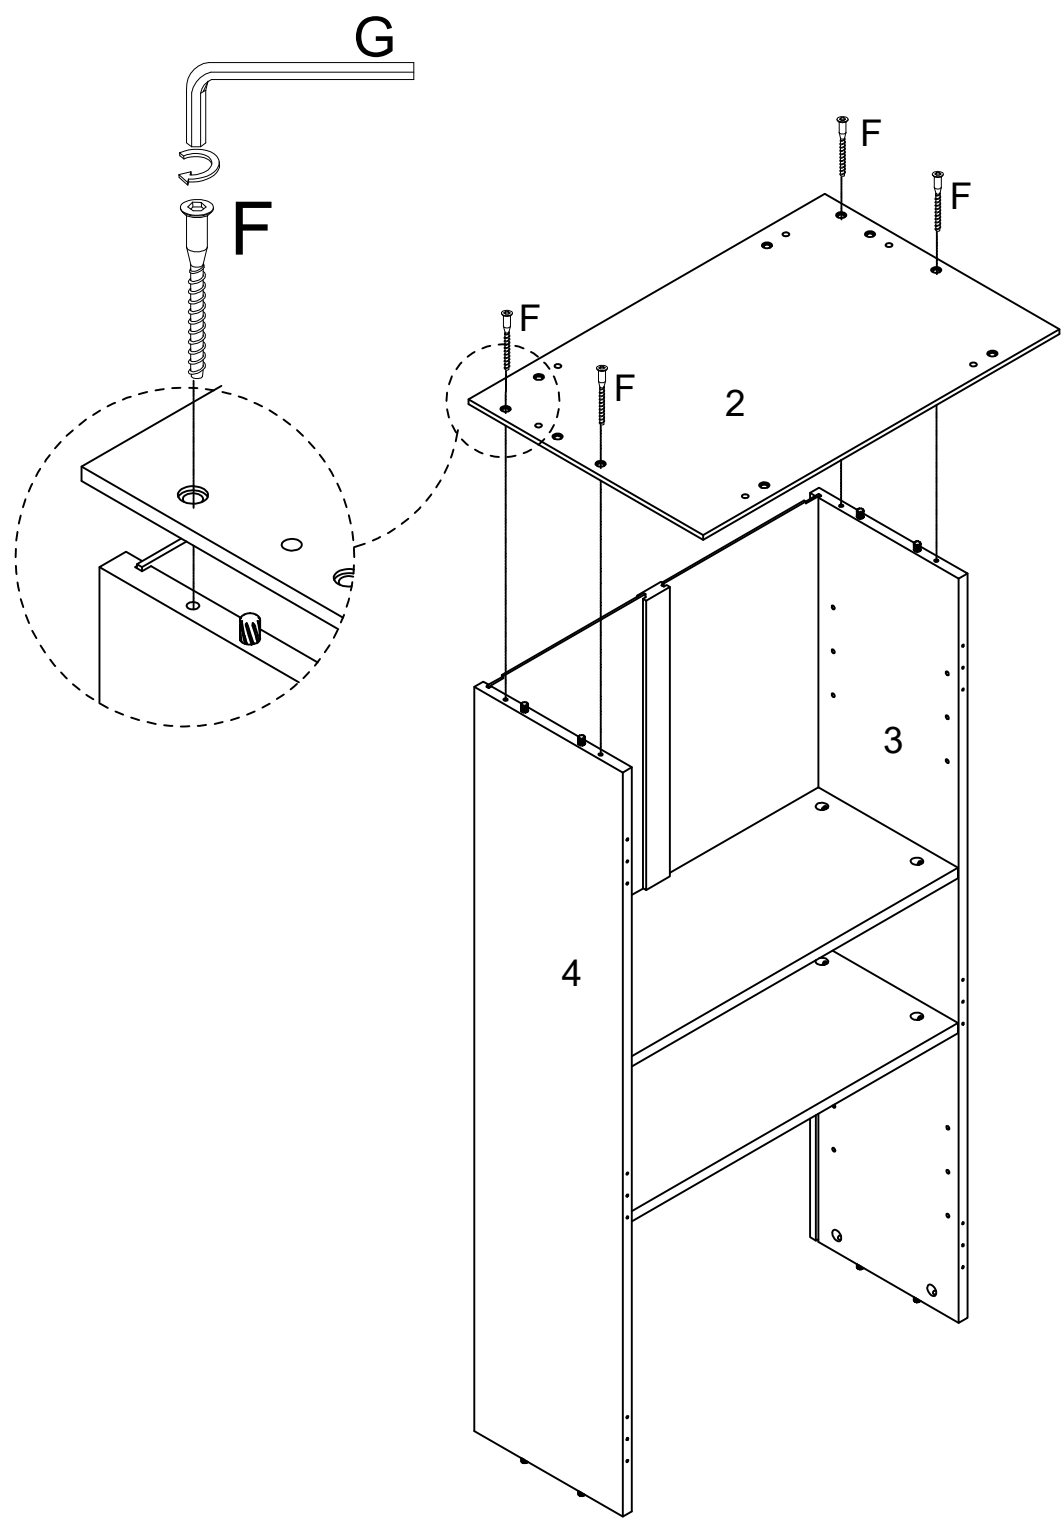


Step 8




G	F
	
X1	X4

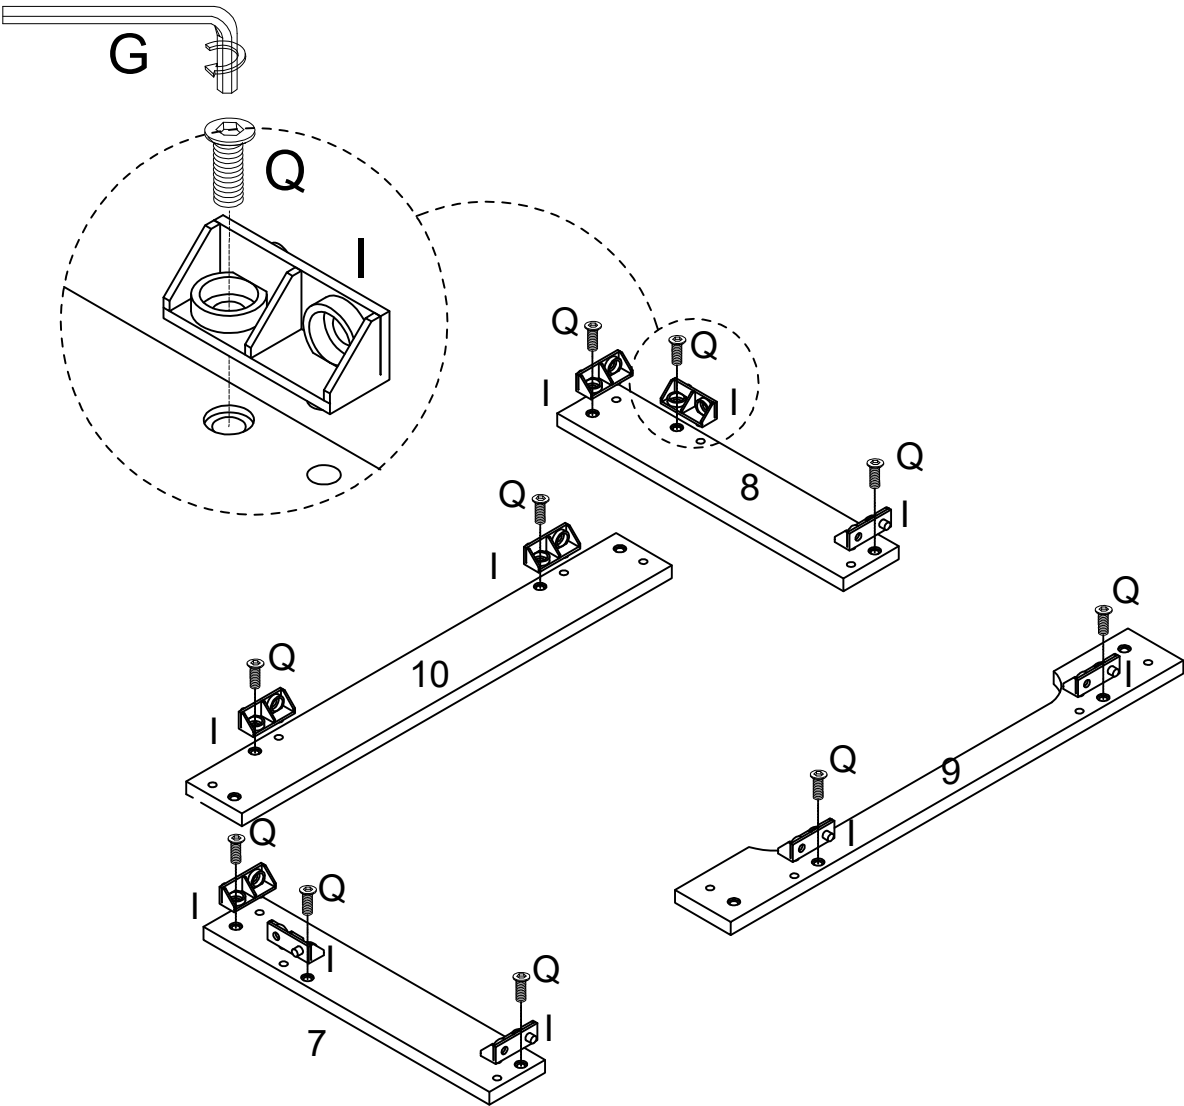

Step 9




G	Q	I
		
X1	X10	X10

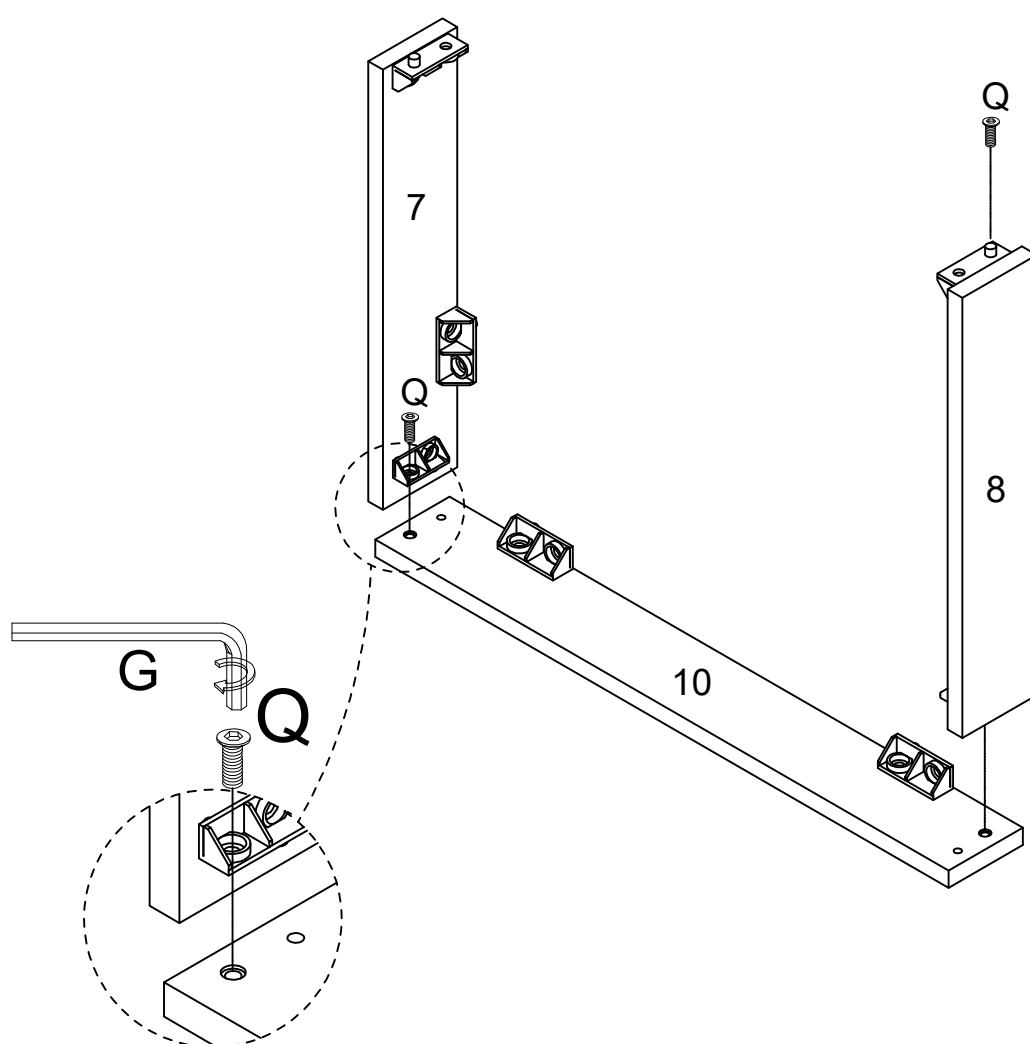

Step 10




G	Q
	
X1	X2

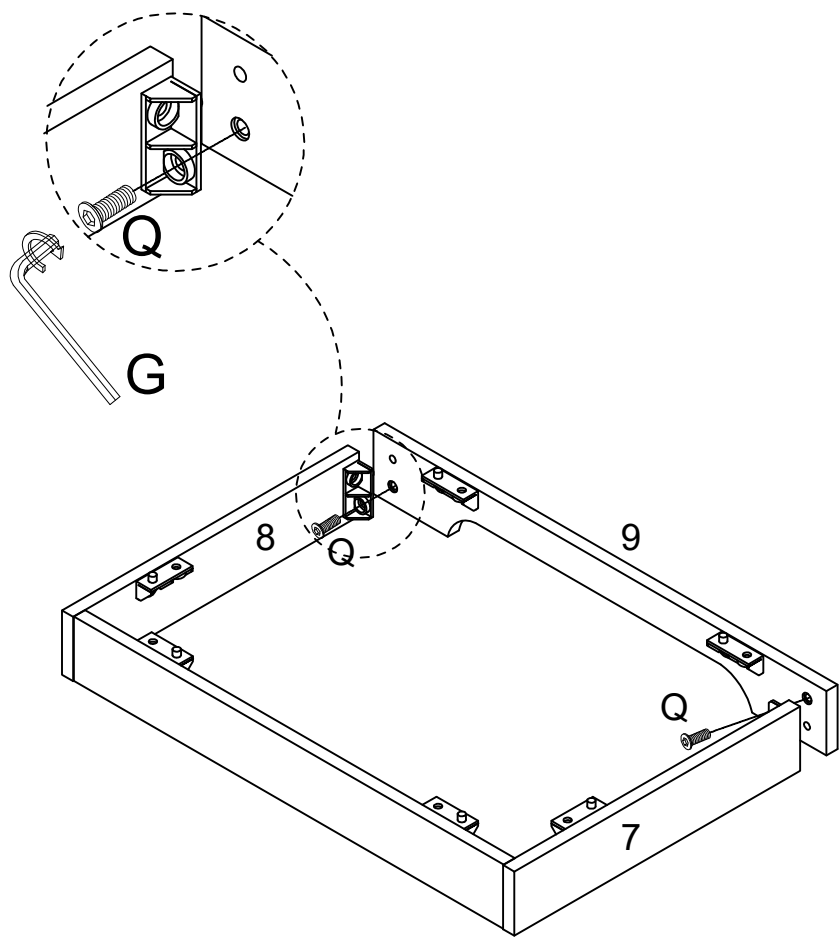

Step 11




G	Q
	
X1	X2

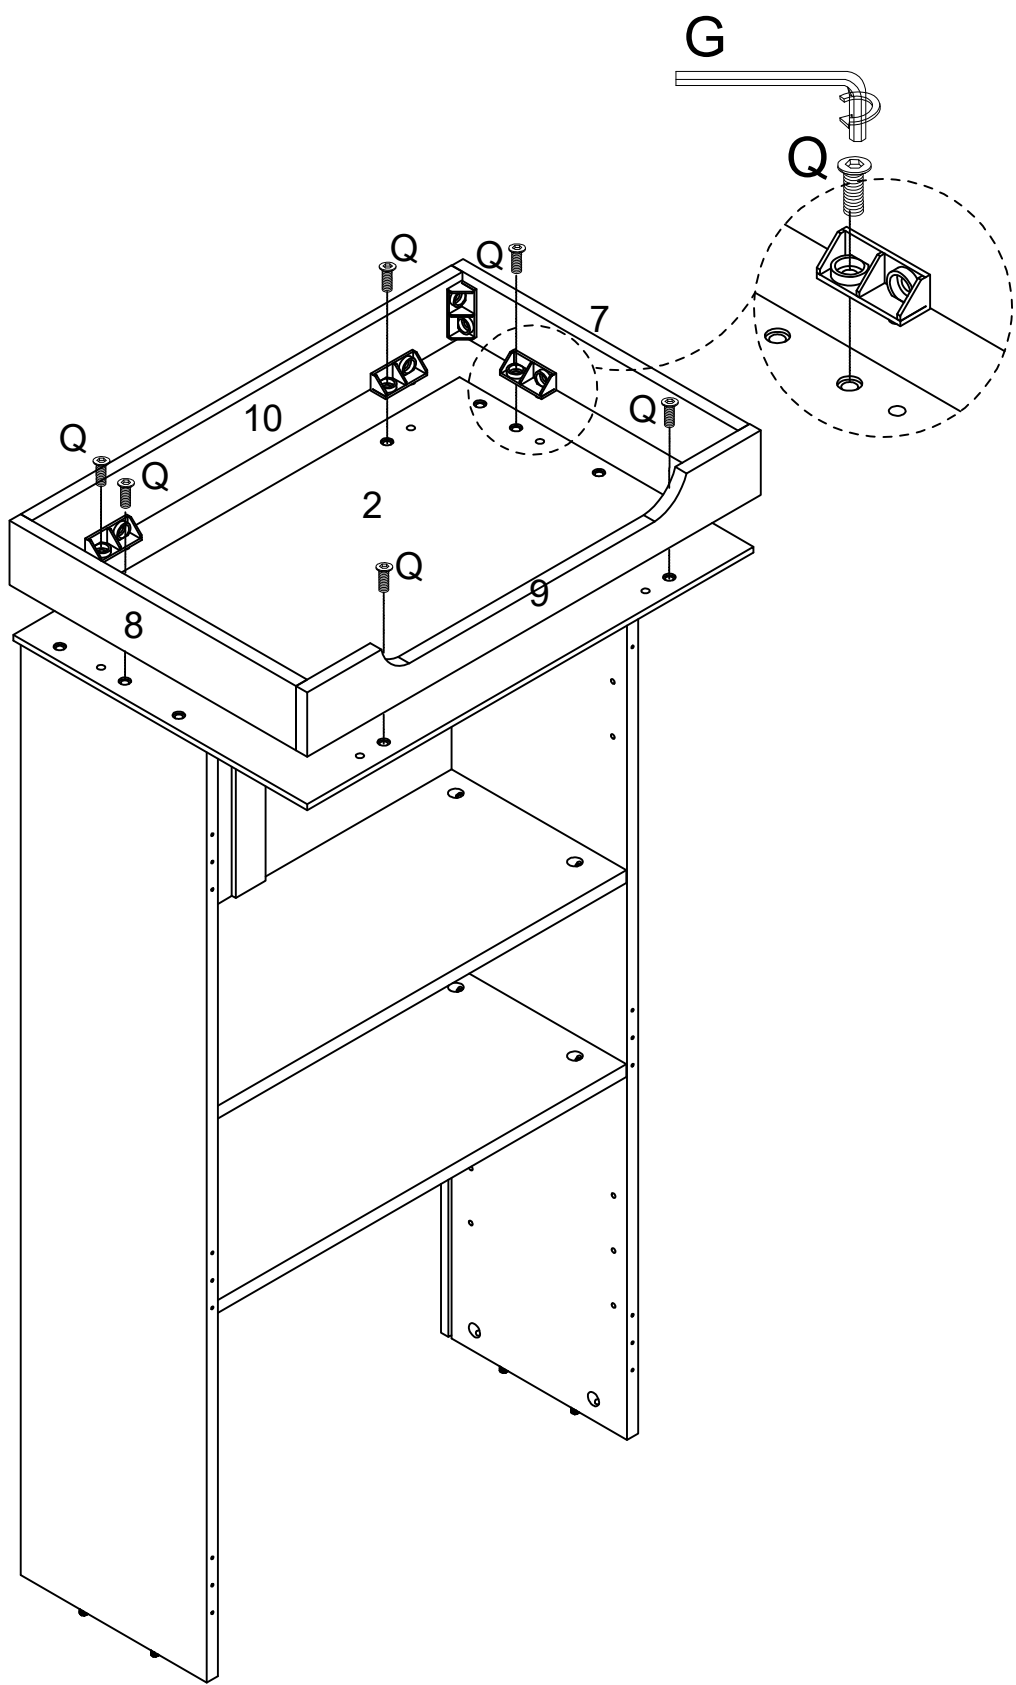Step 12






G	Q
	
X1	X6

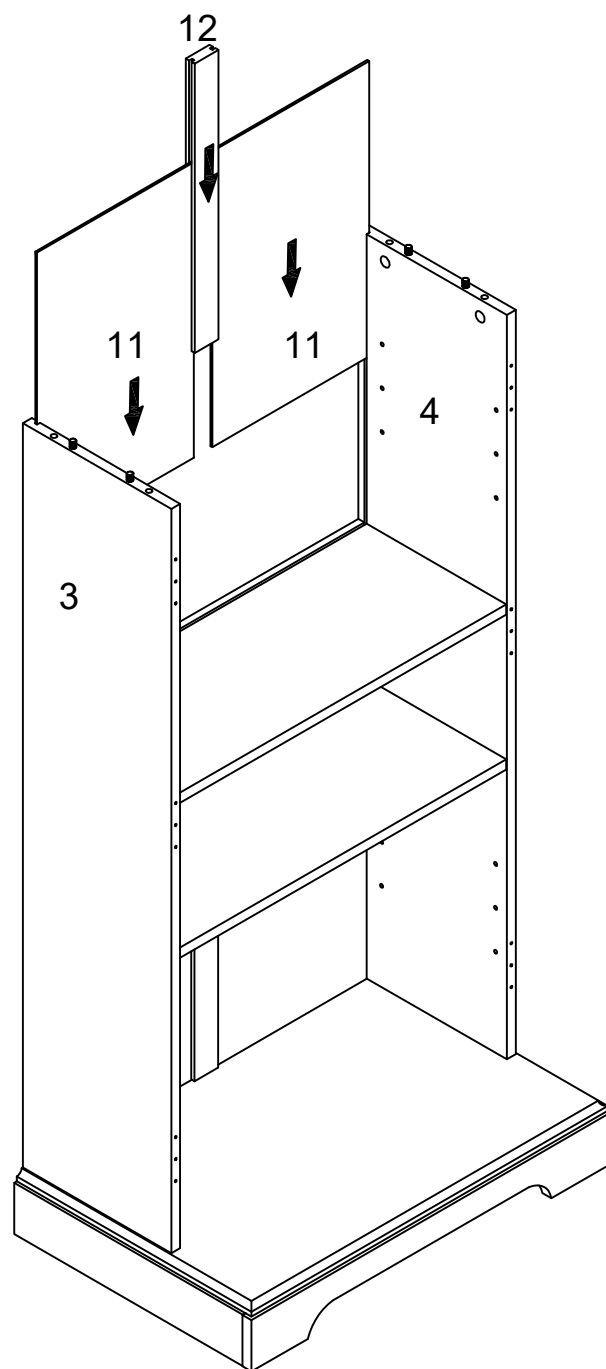Step 13


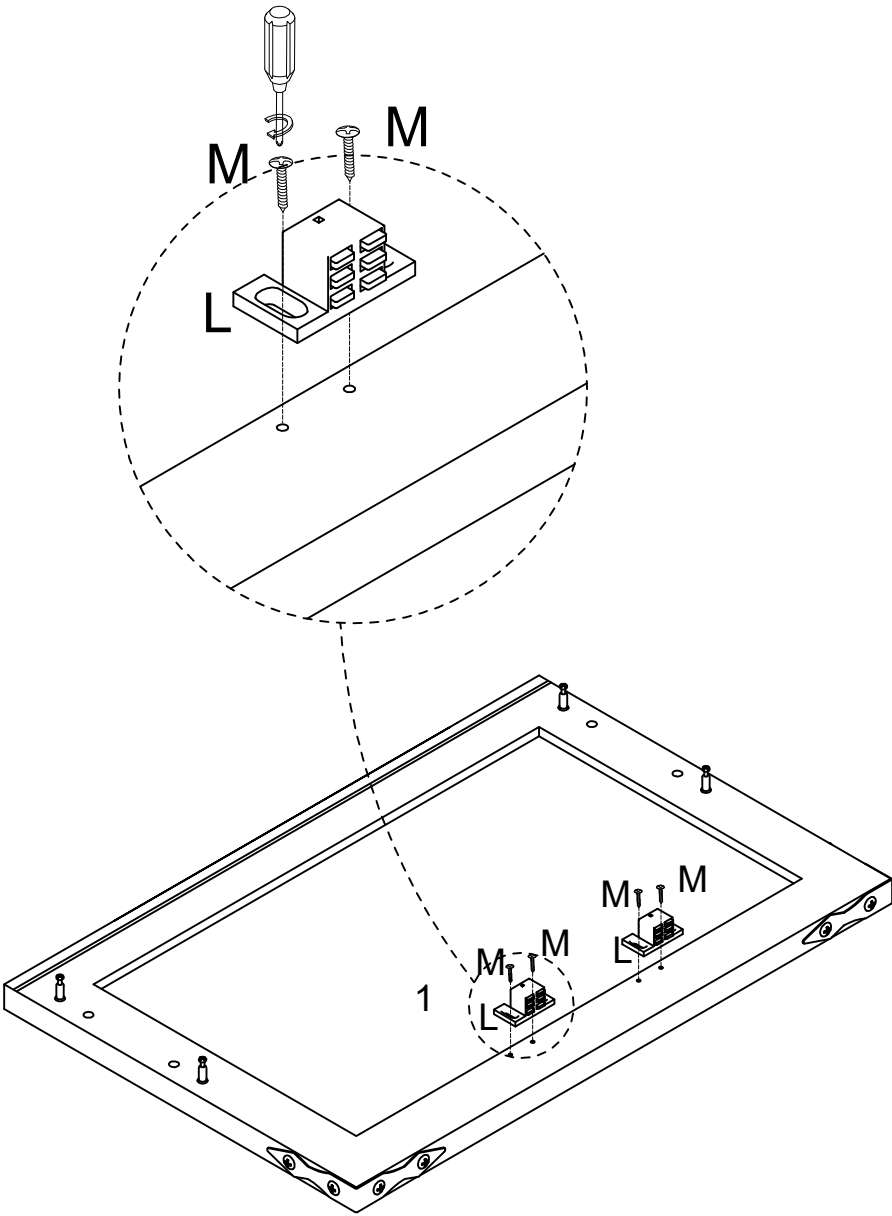



Step 14




L	M
	
X2	X4


Step 15

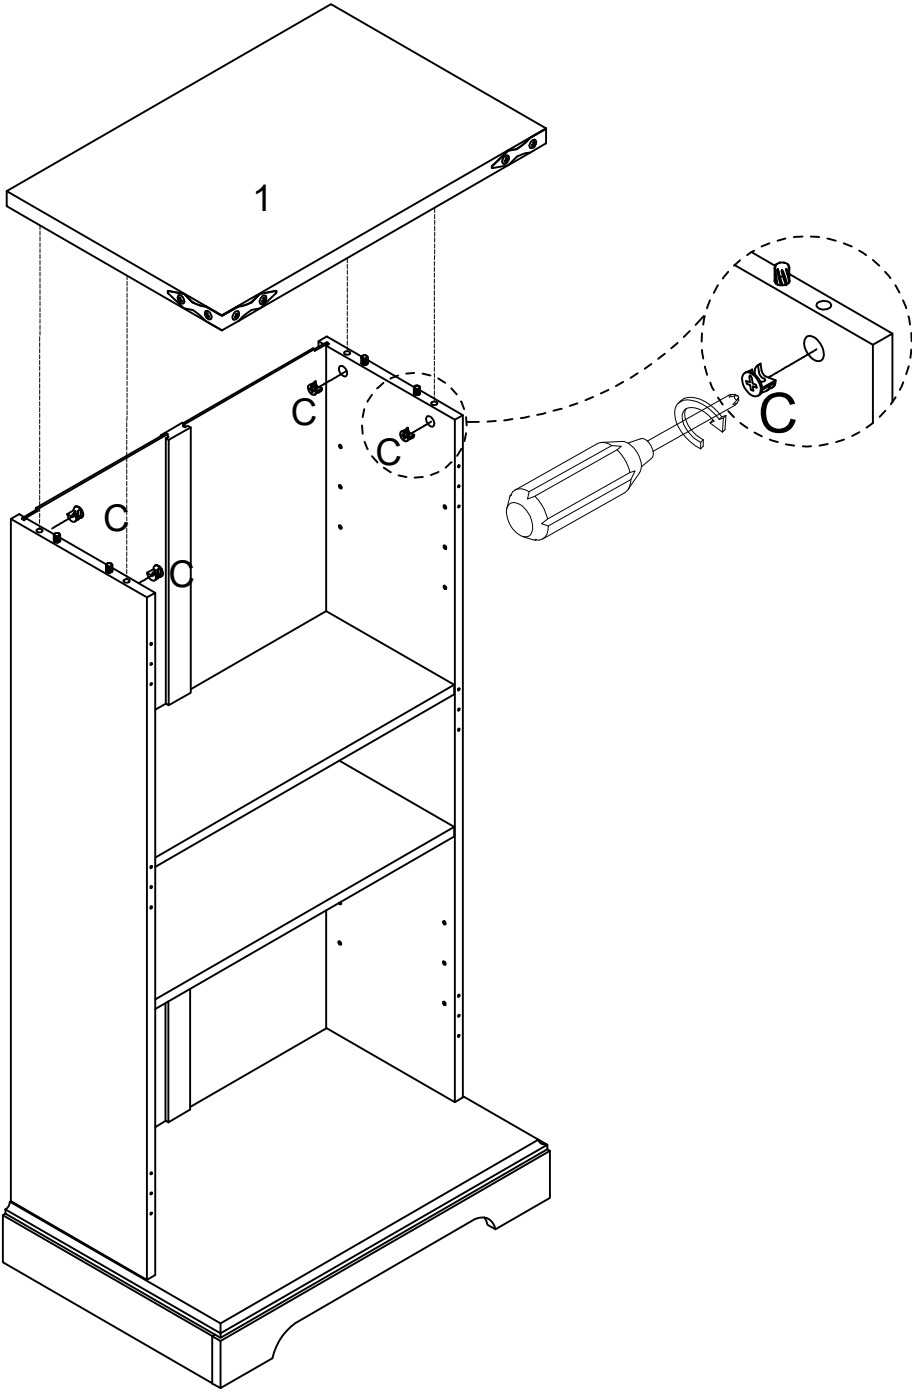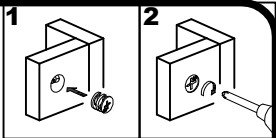


C

X4

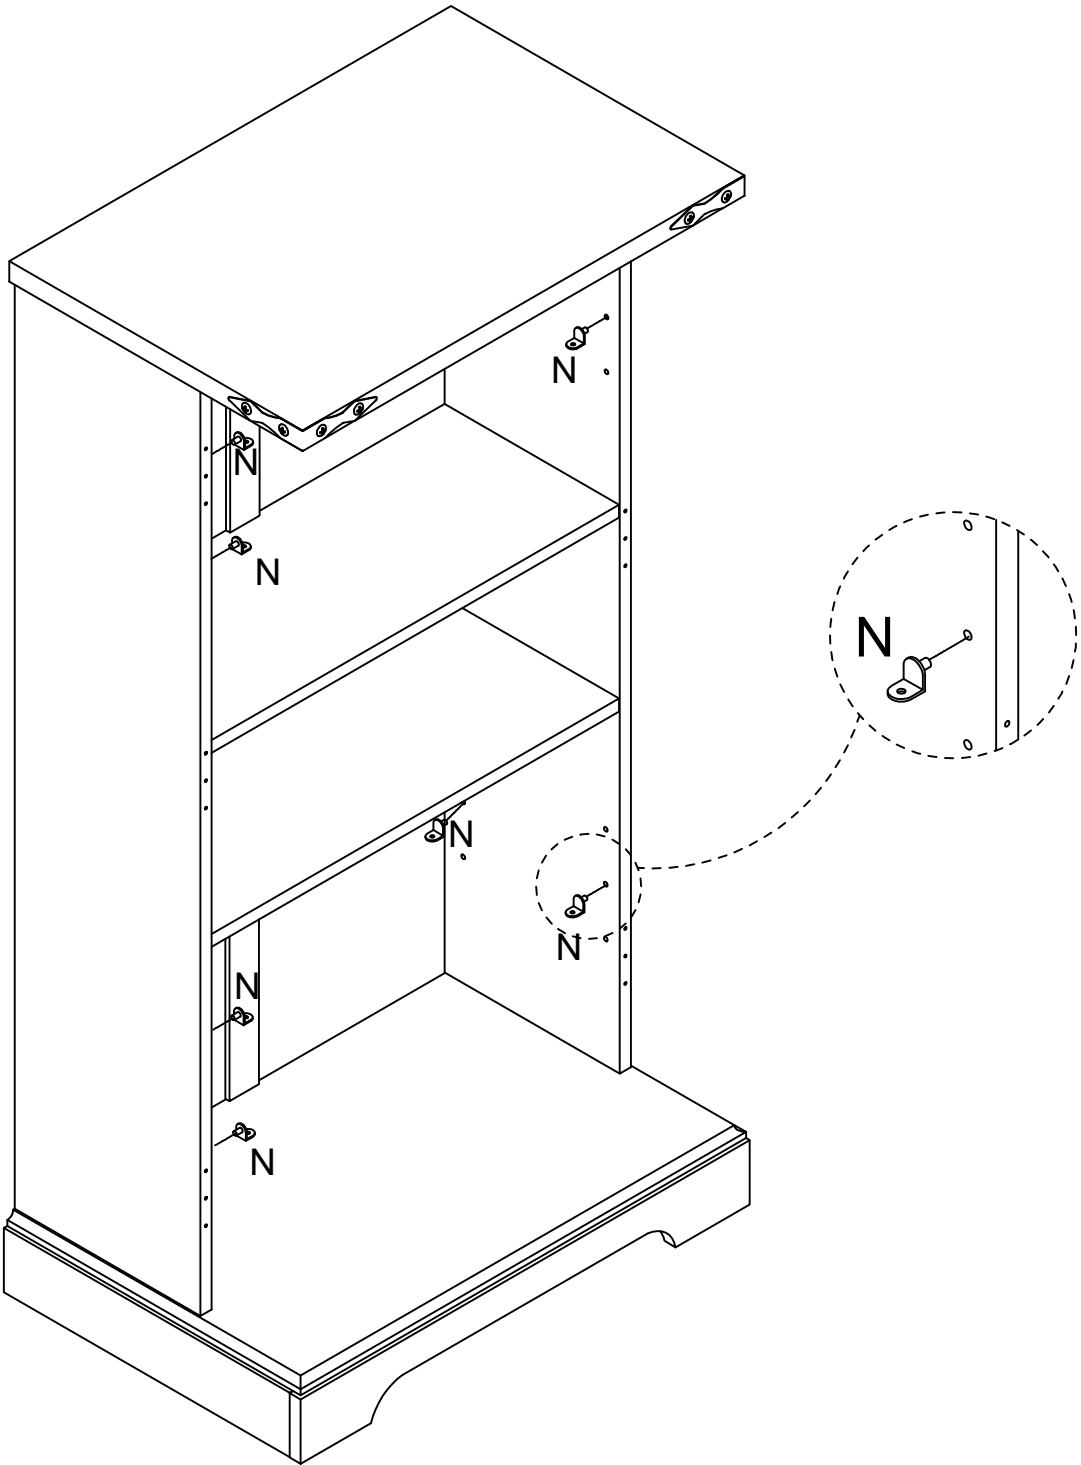Step 16






N

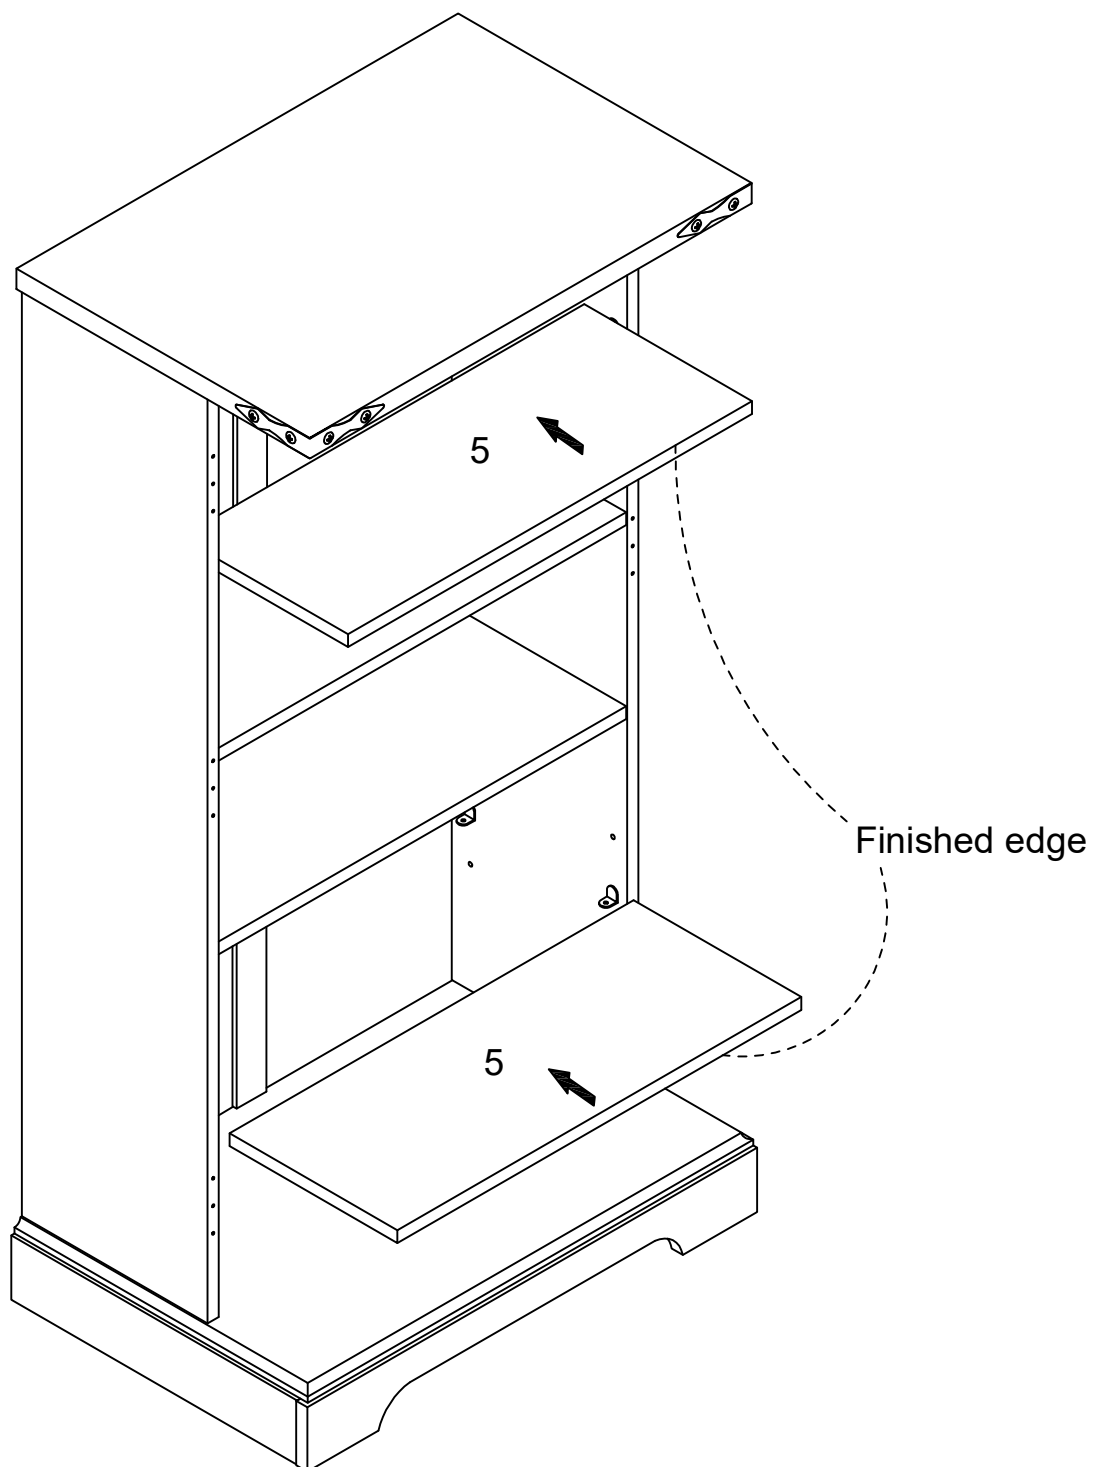X8

Step 17

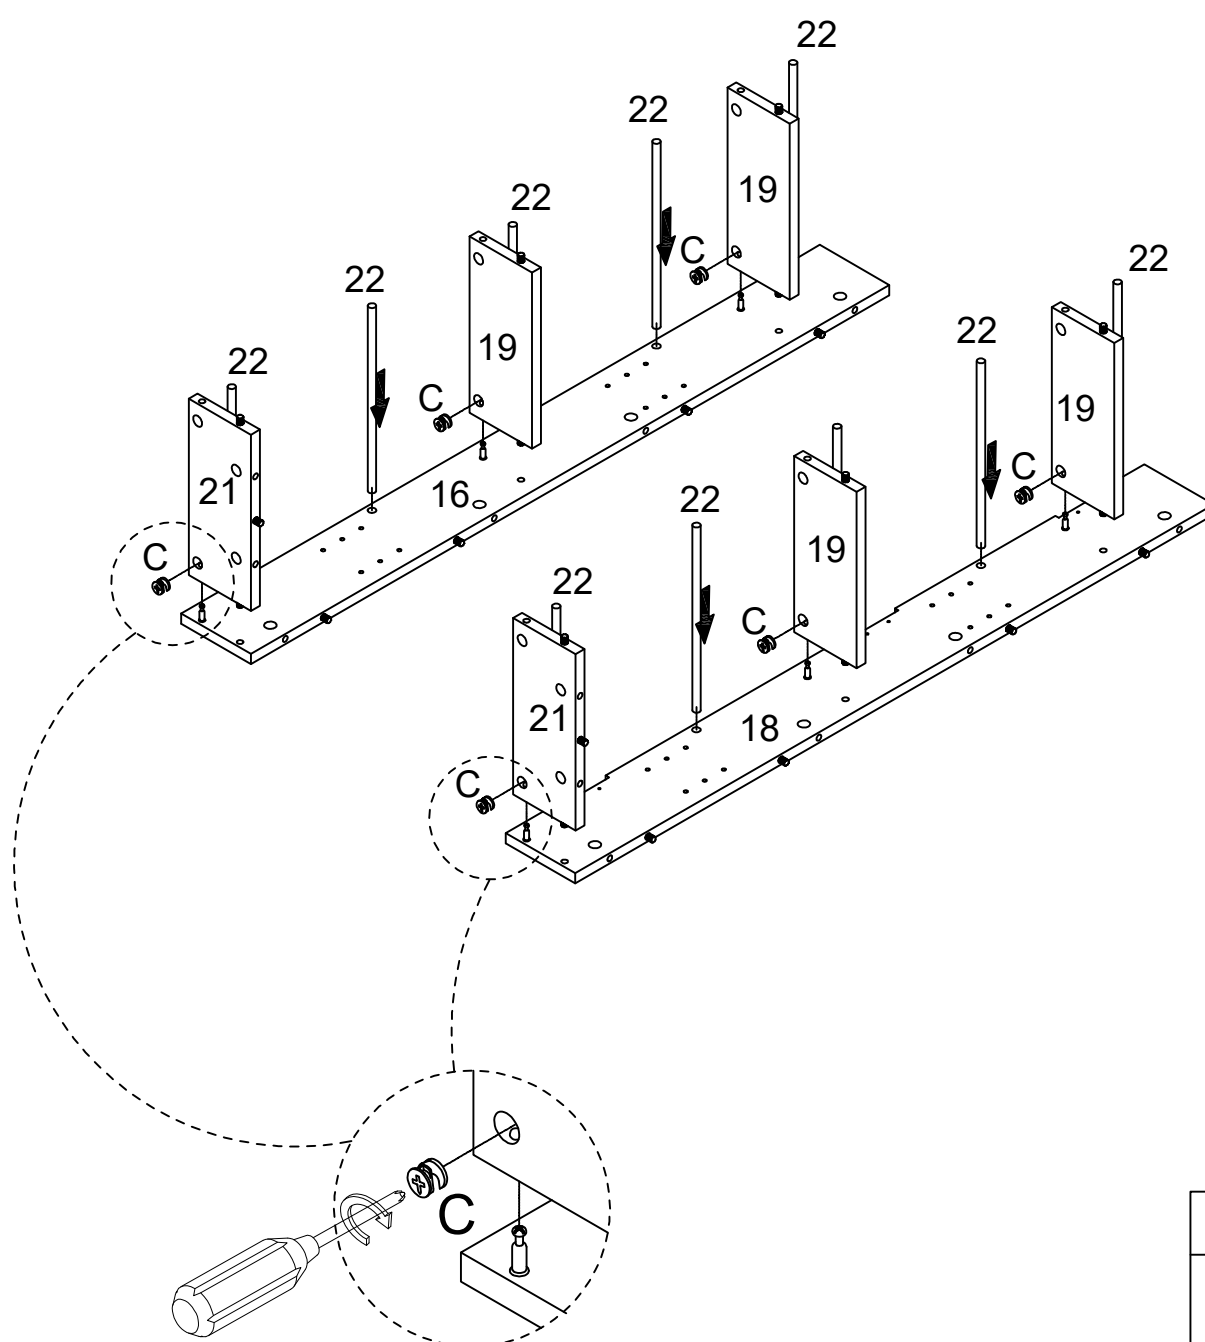
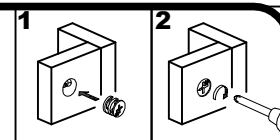



Step 18





C

X6

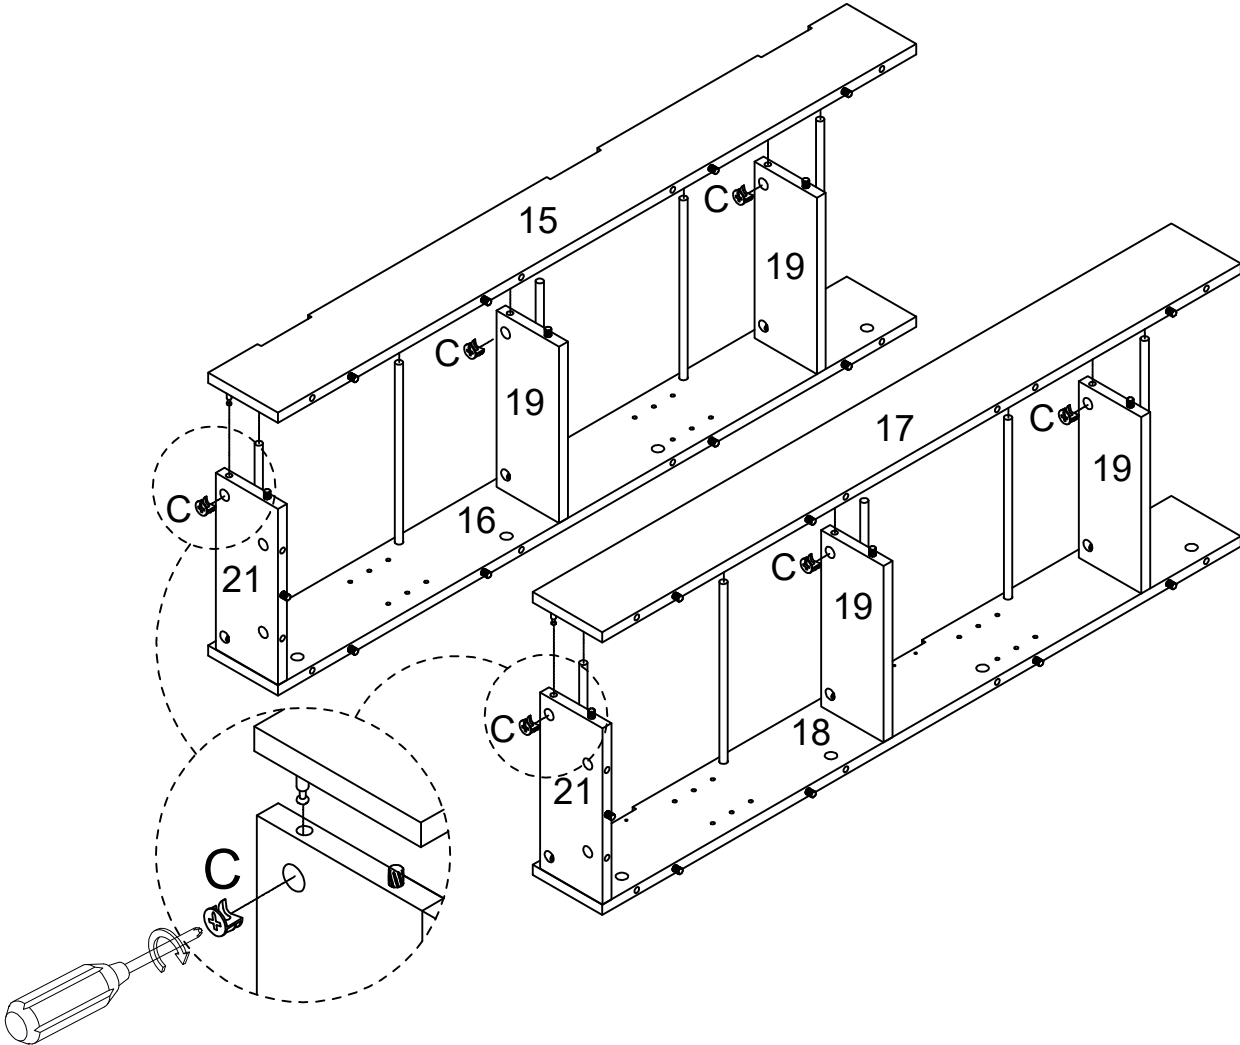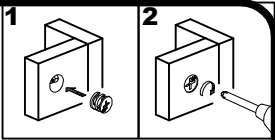
Step 19




C

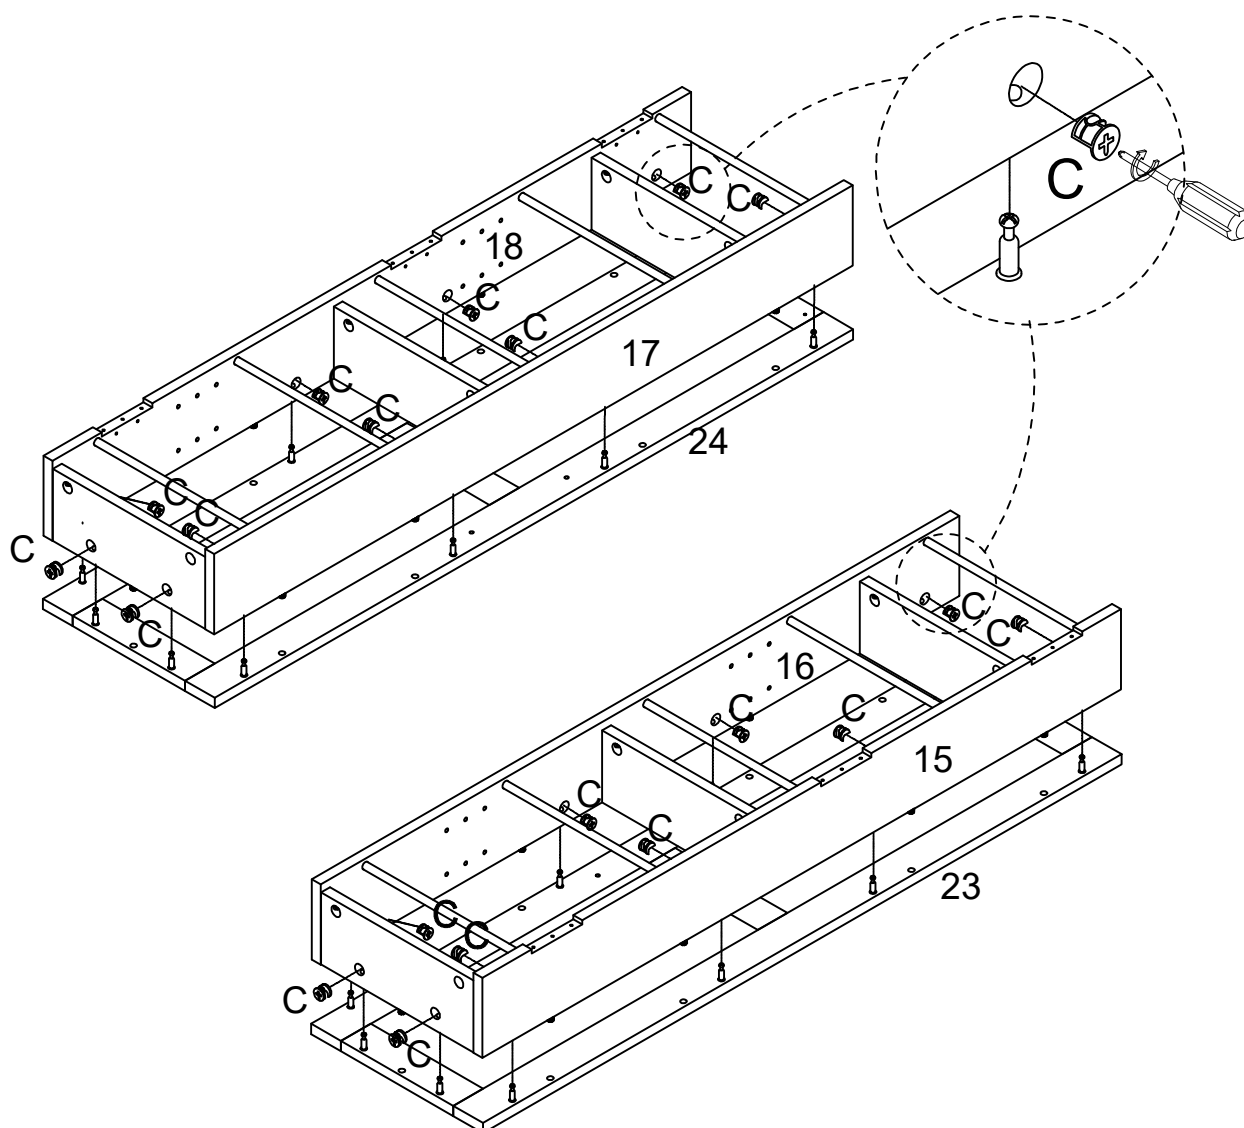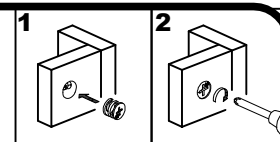X6



Step 20

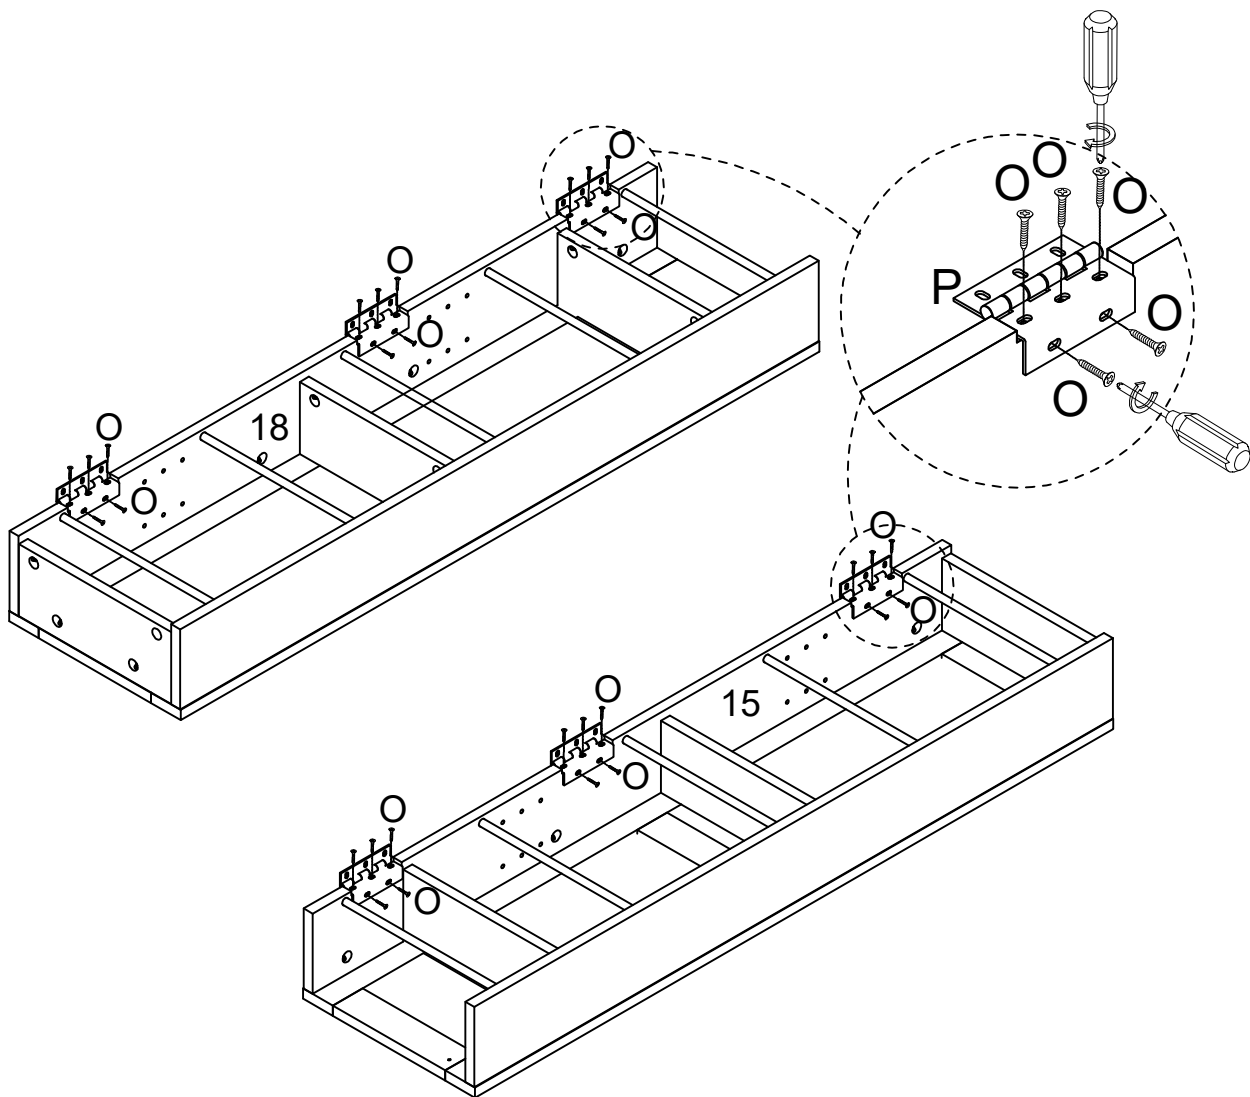


C

X20





Step 21

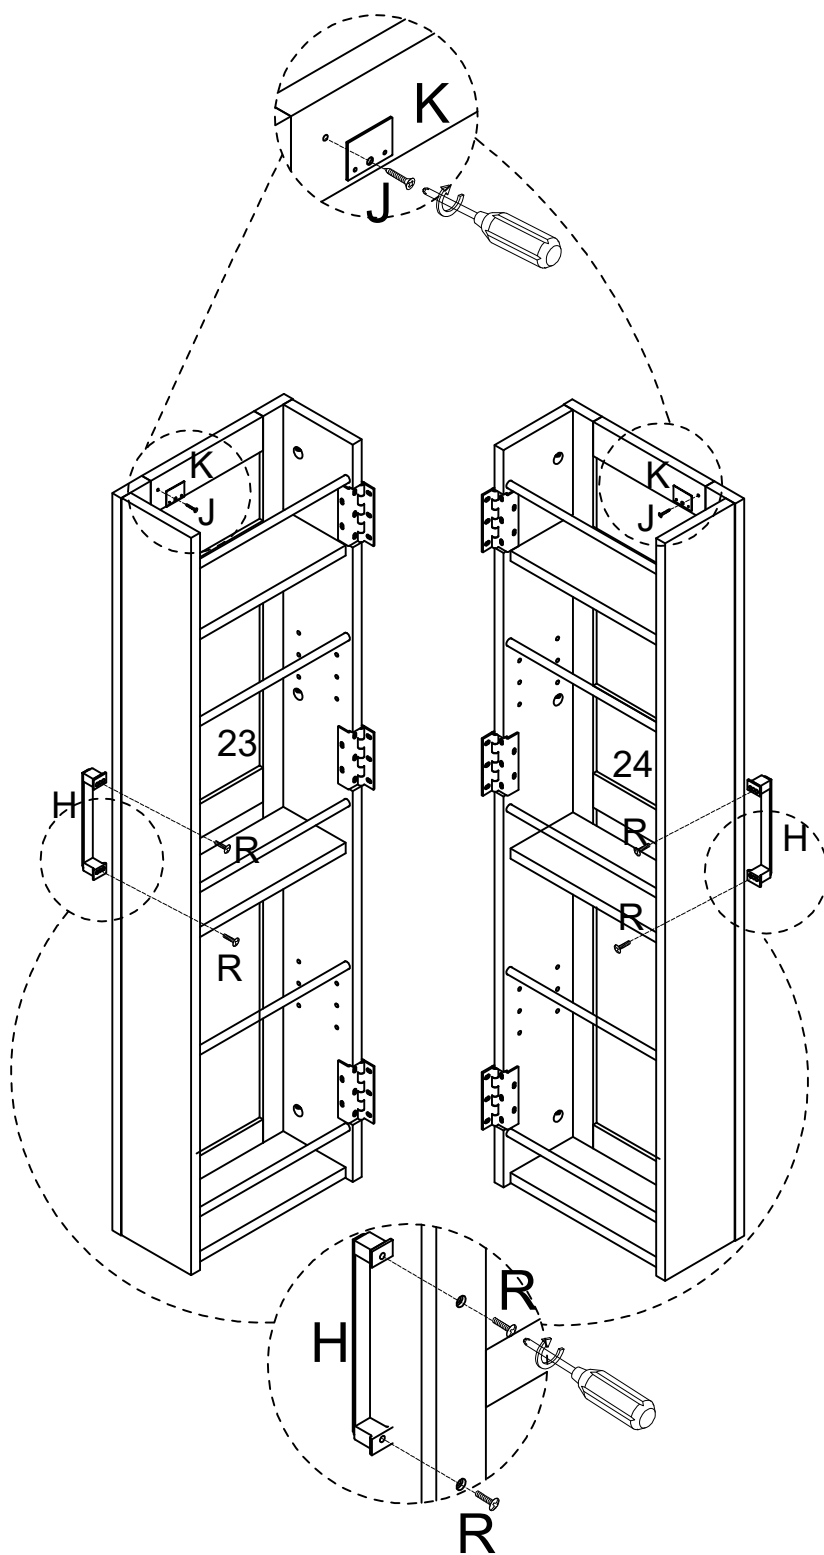


O	P
	
X30	X6


Step 22




K	J	H	R
			
X2	X2	X2	X4


Step 23

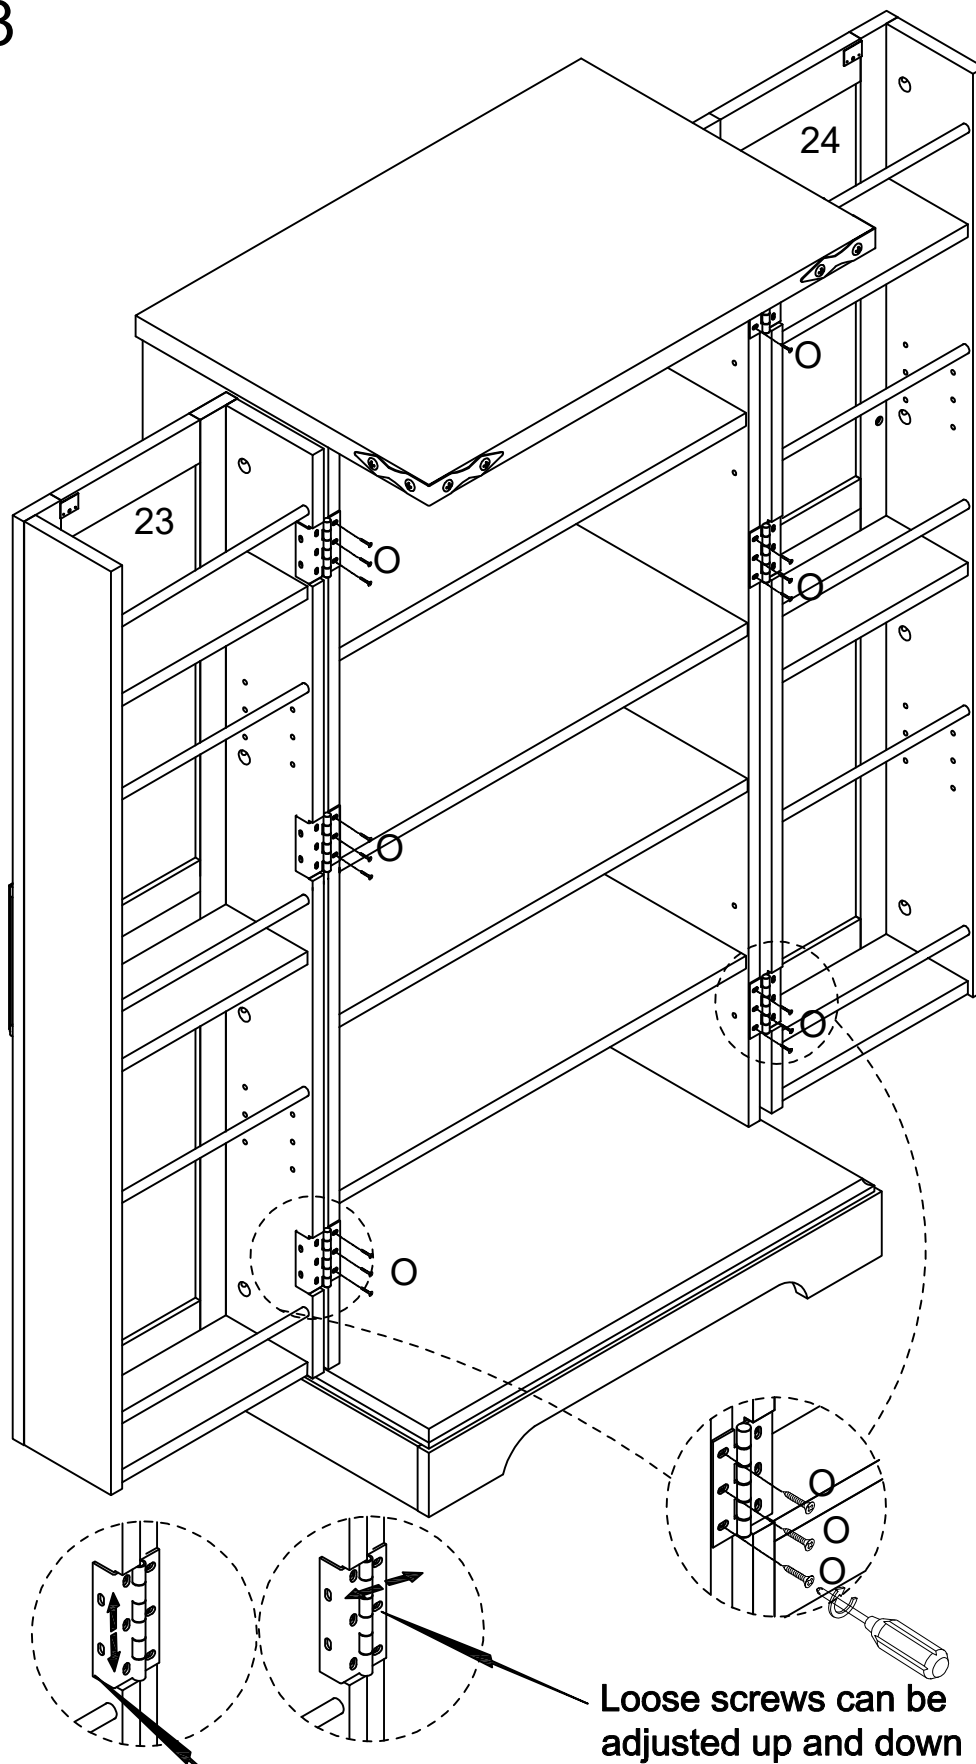


O

X18

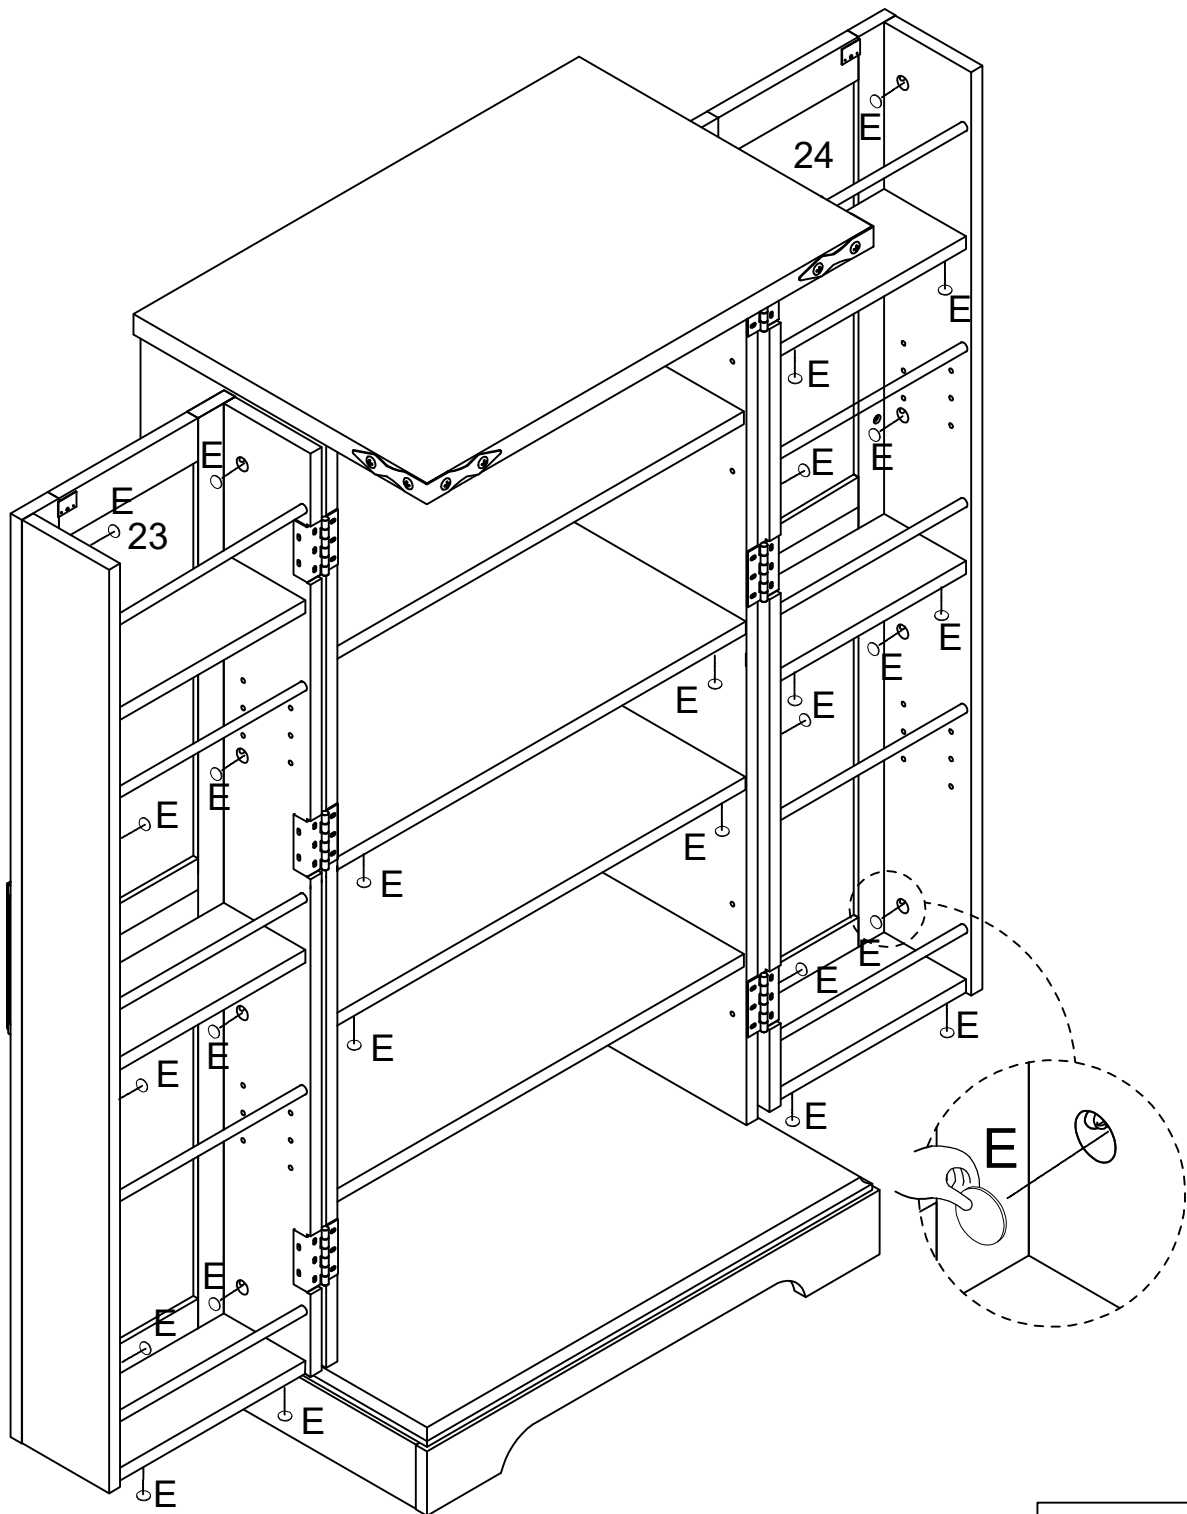
Step 24




E

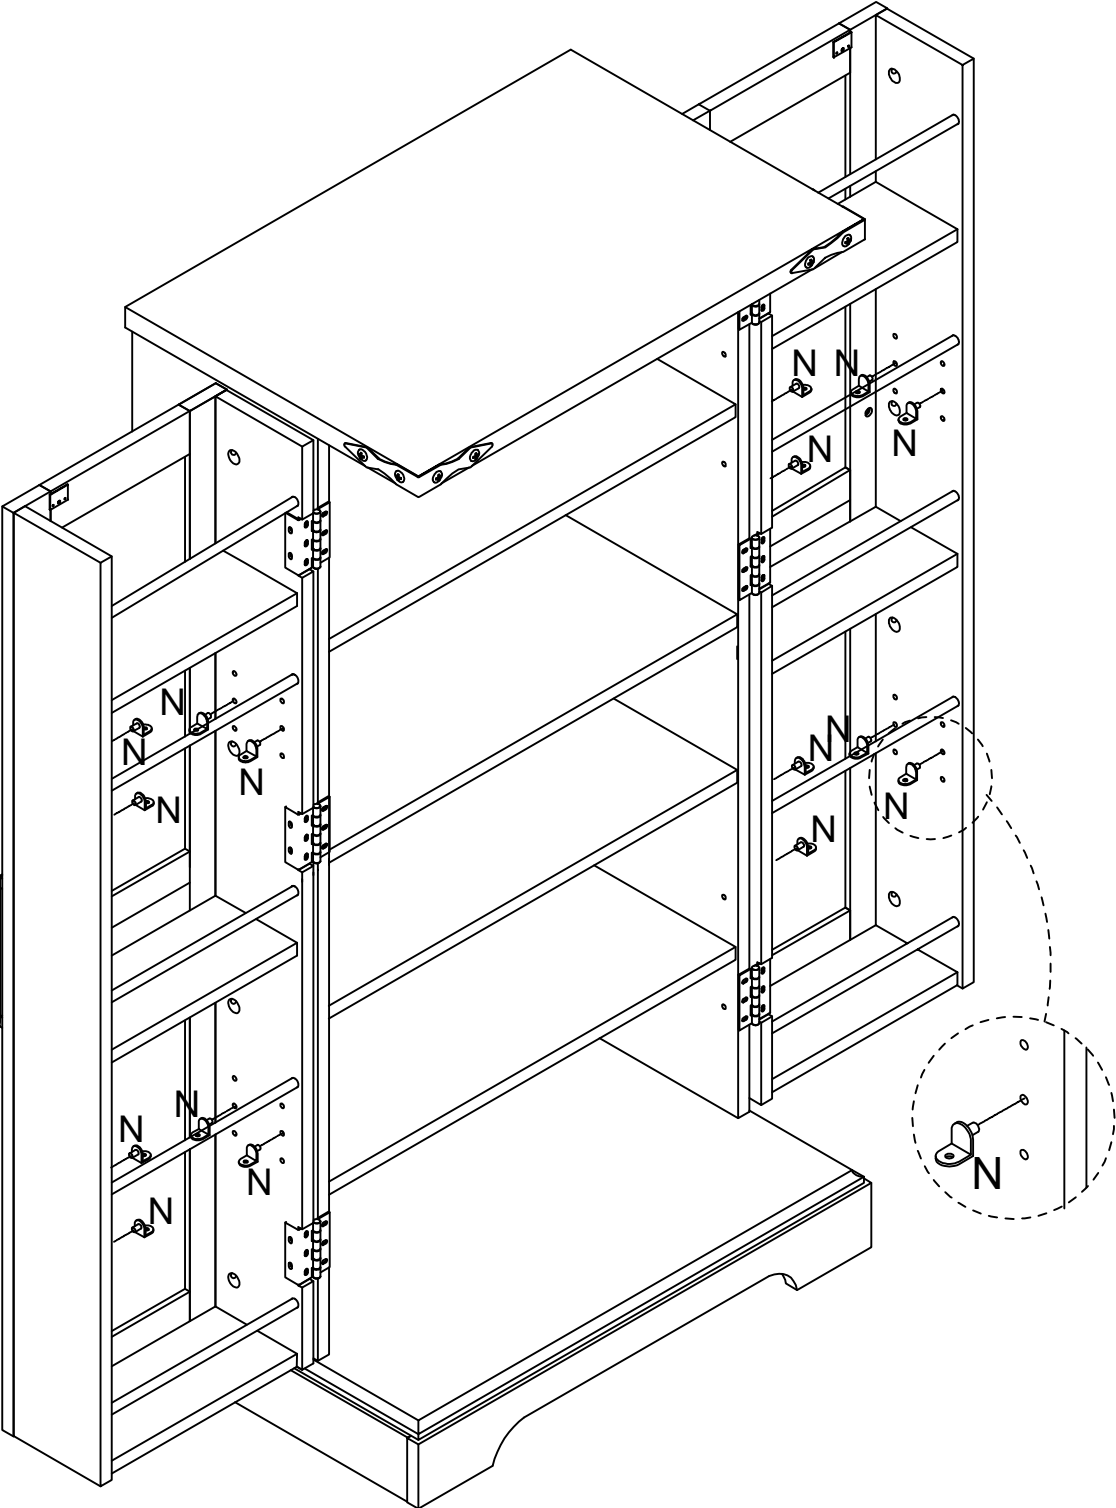X44

Step 25





N

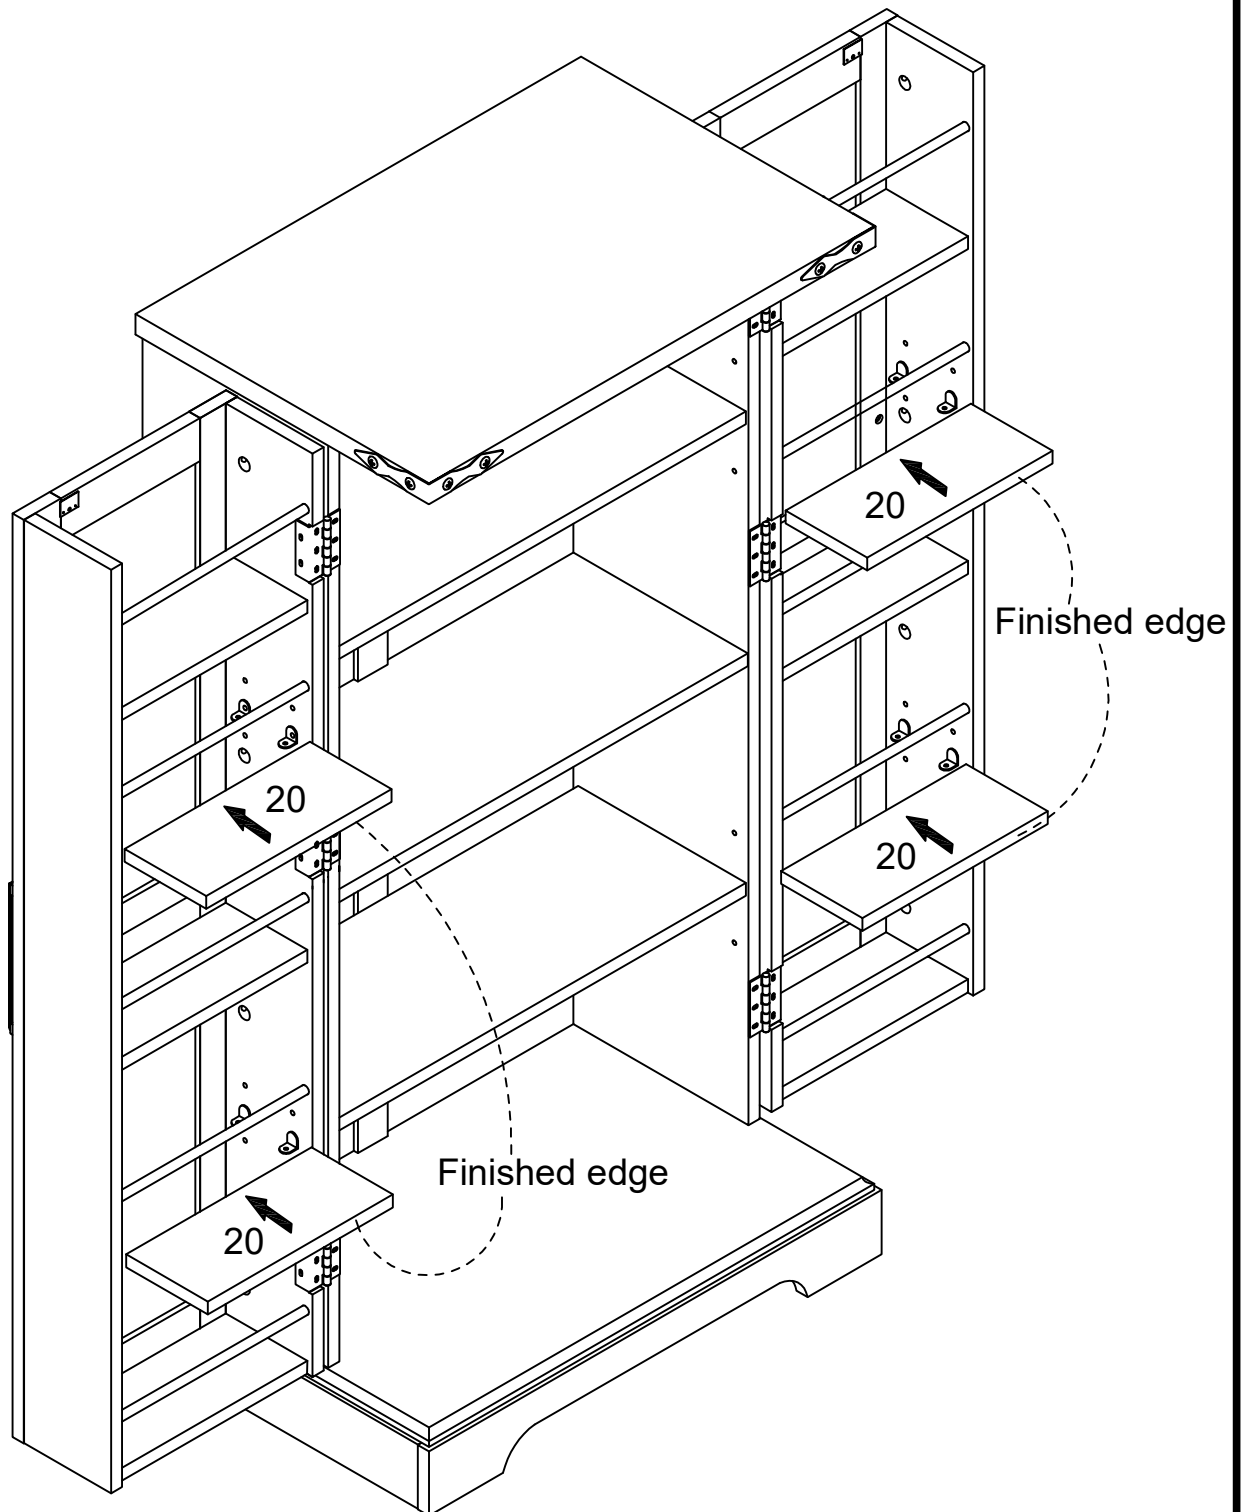X16

Step 26




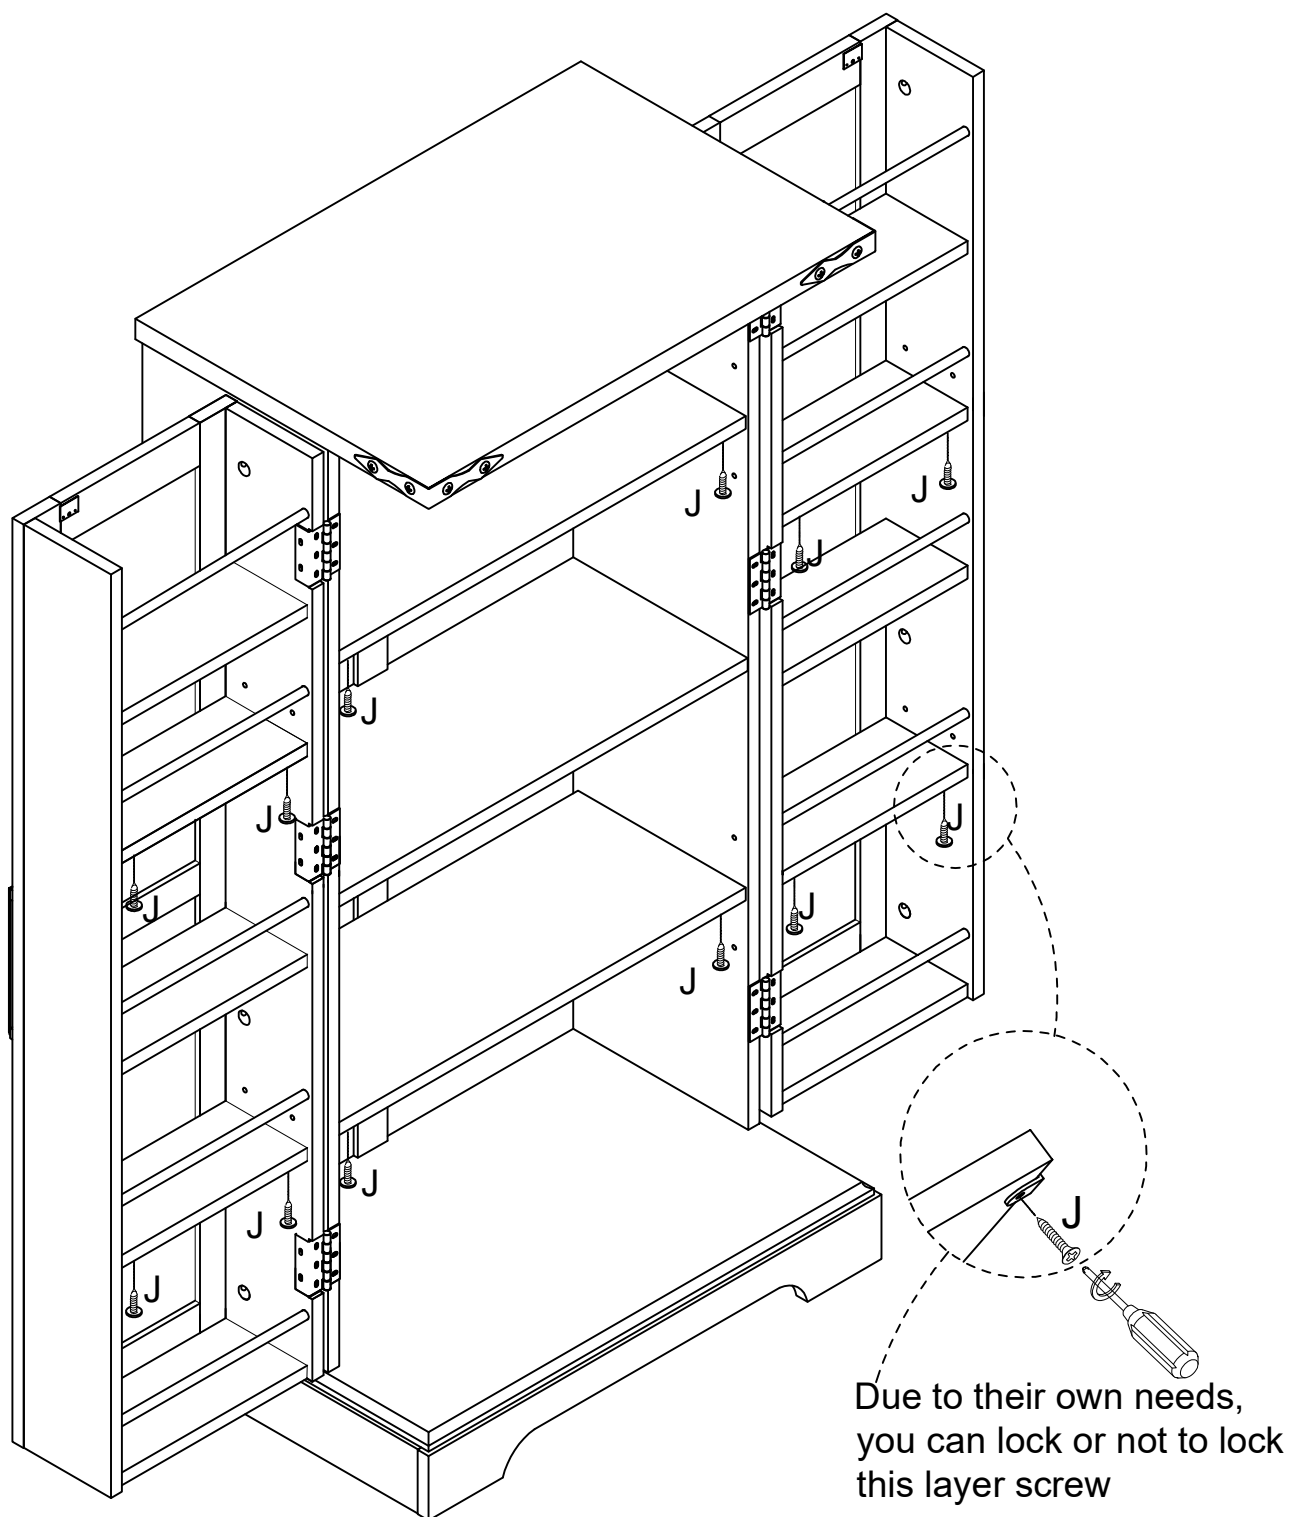

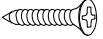Step 27




J

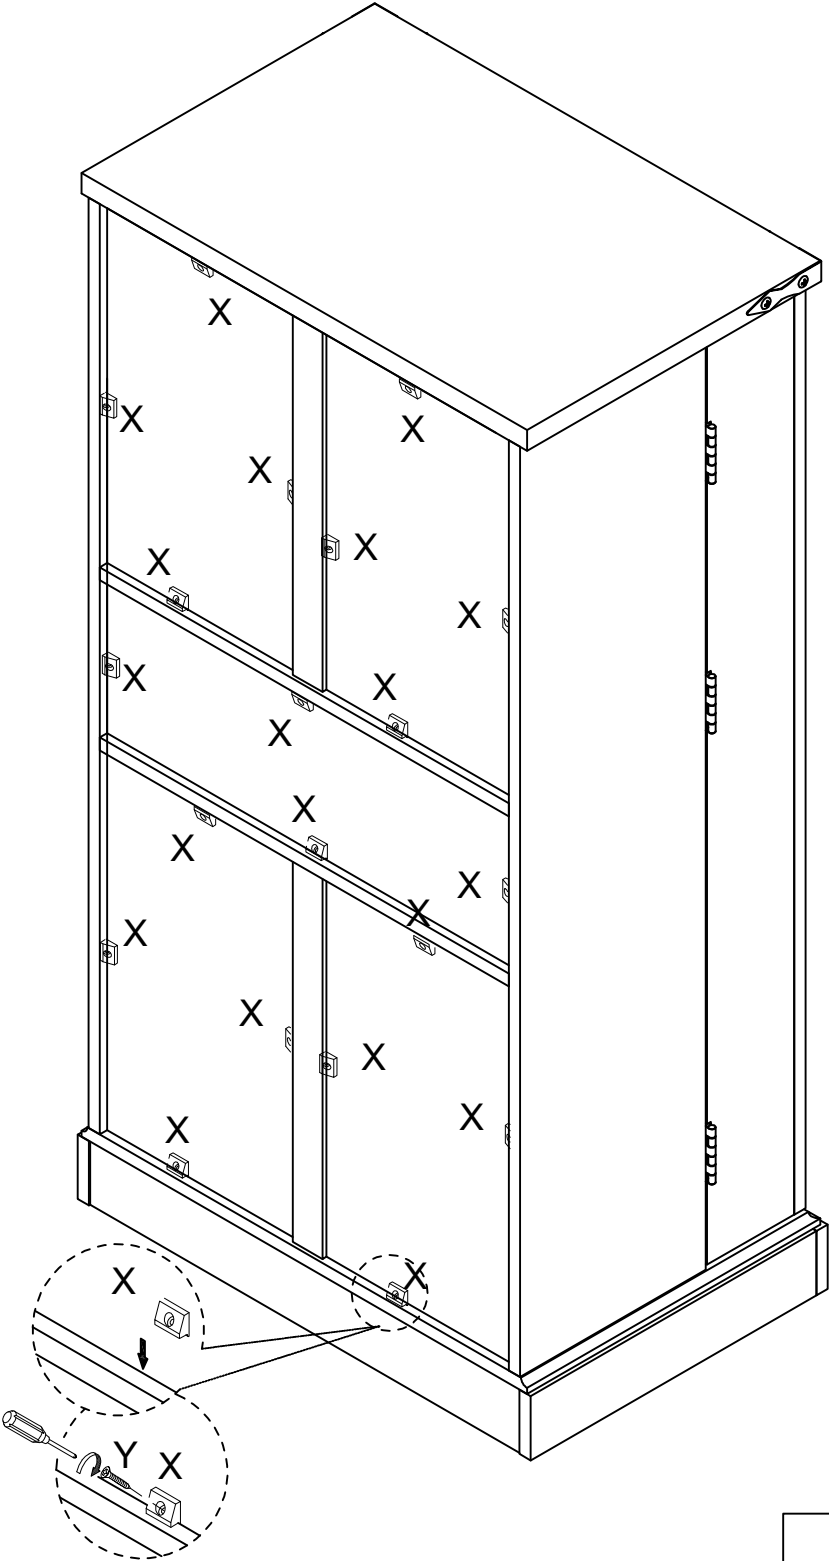X12



Step 28



Y	X
	
X20	X20

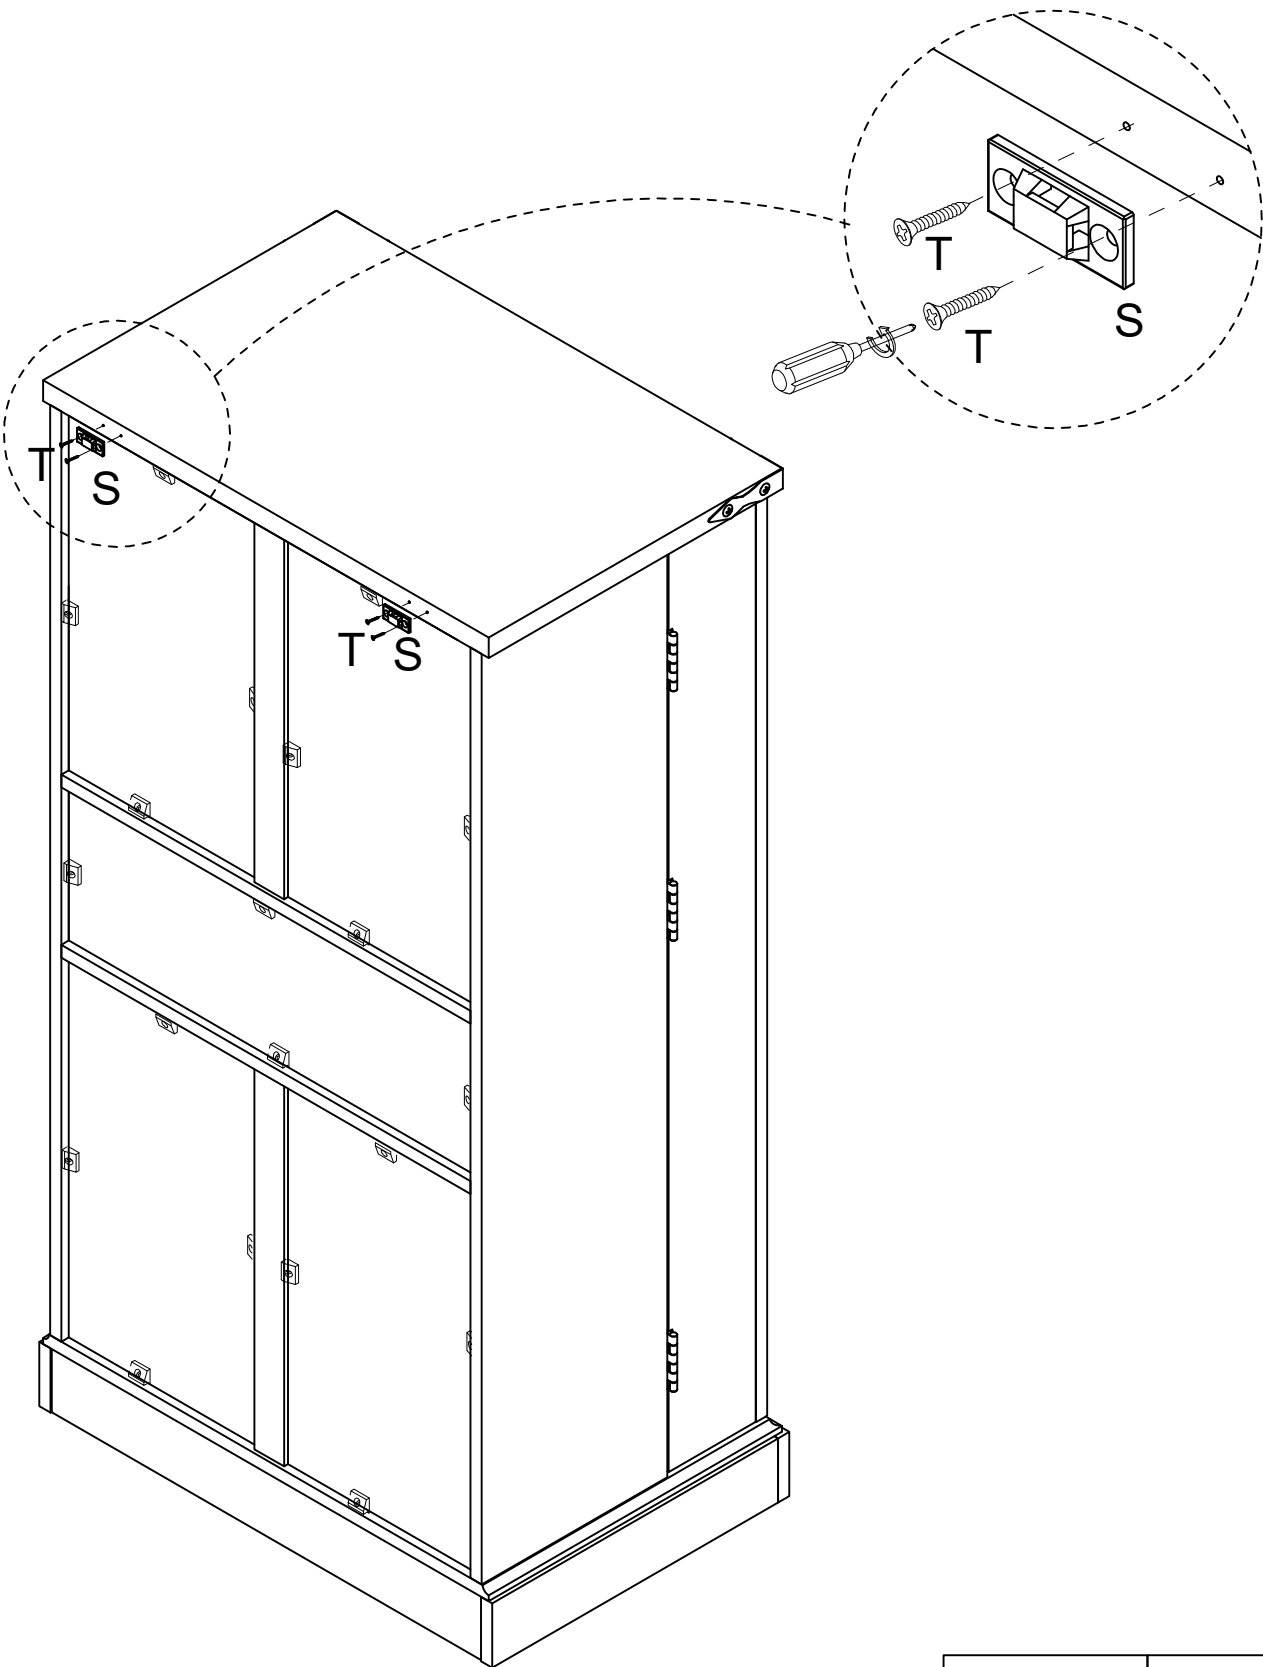
Step 29

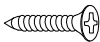

T	S
	
X4	X2


Step 30


Make Four holes 45MM deep

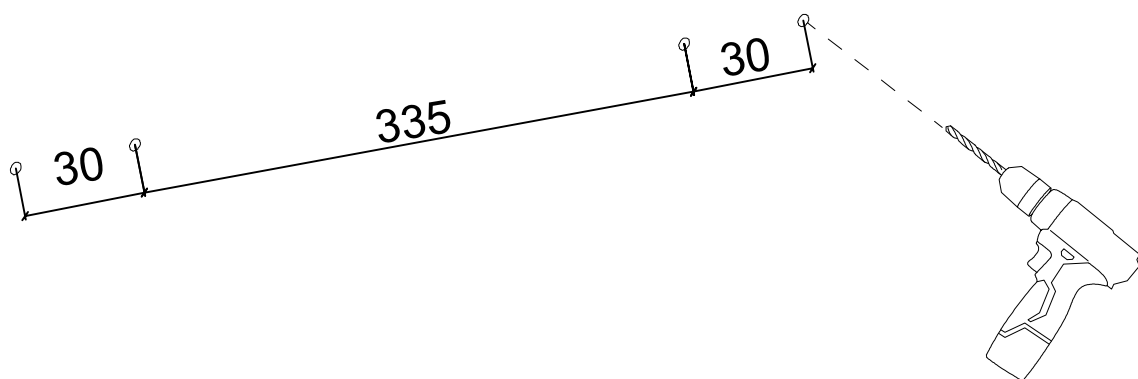


Wall

Step 31

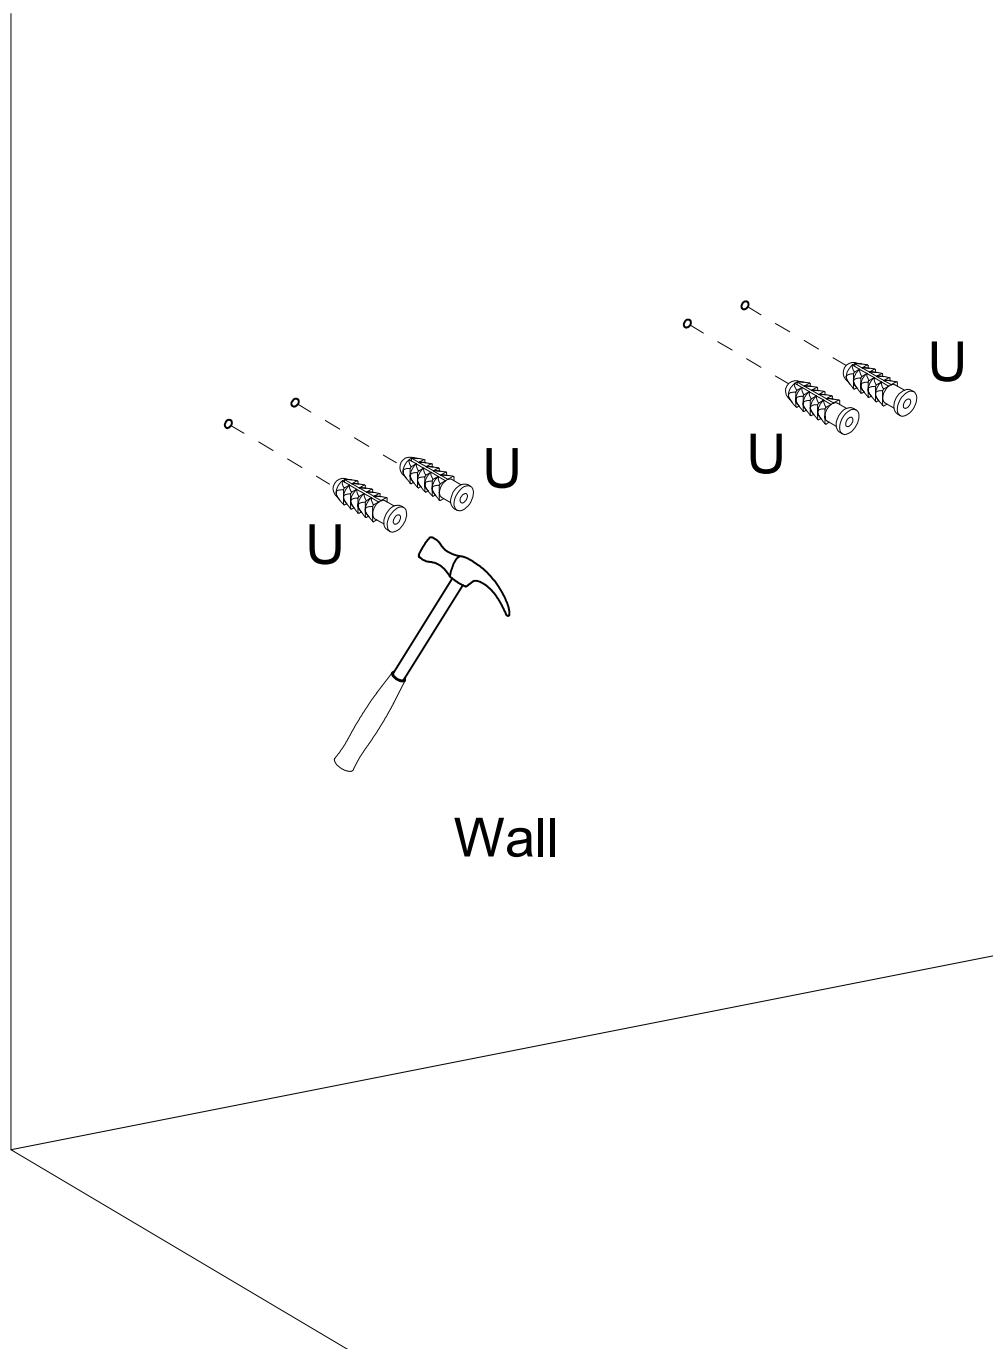

U

X4

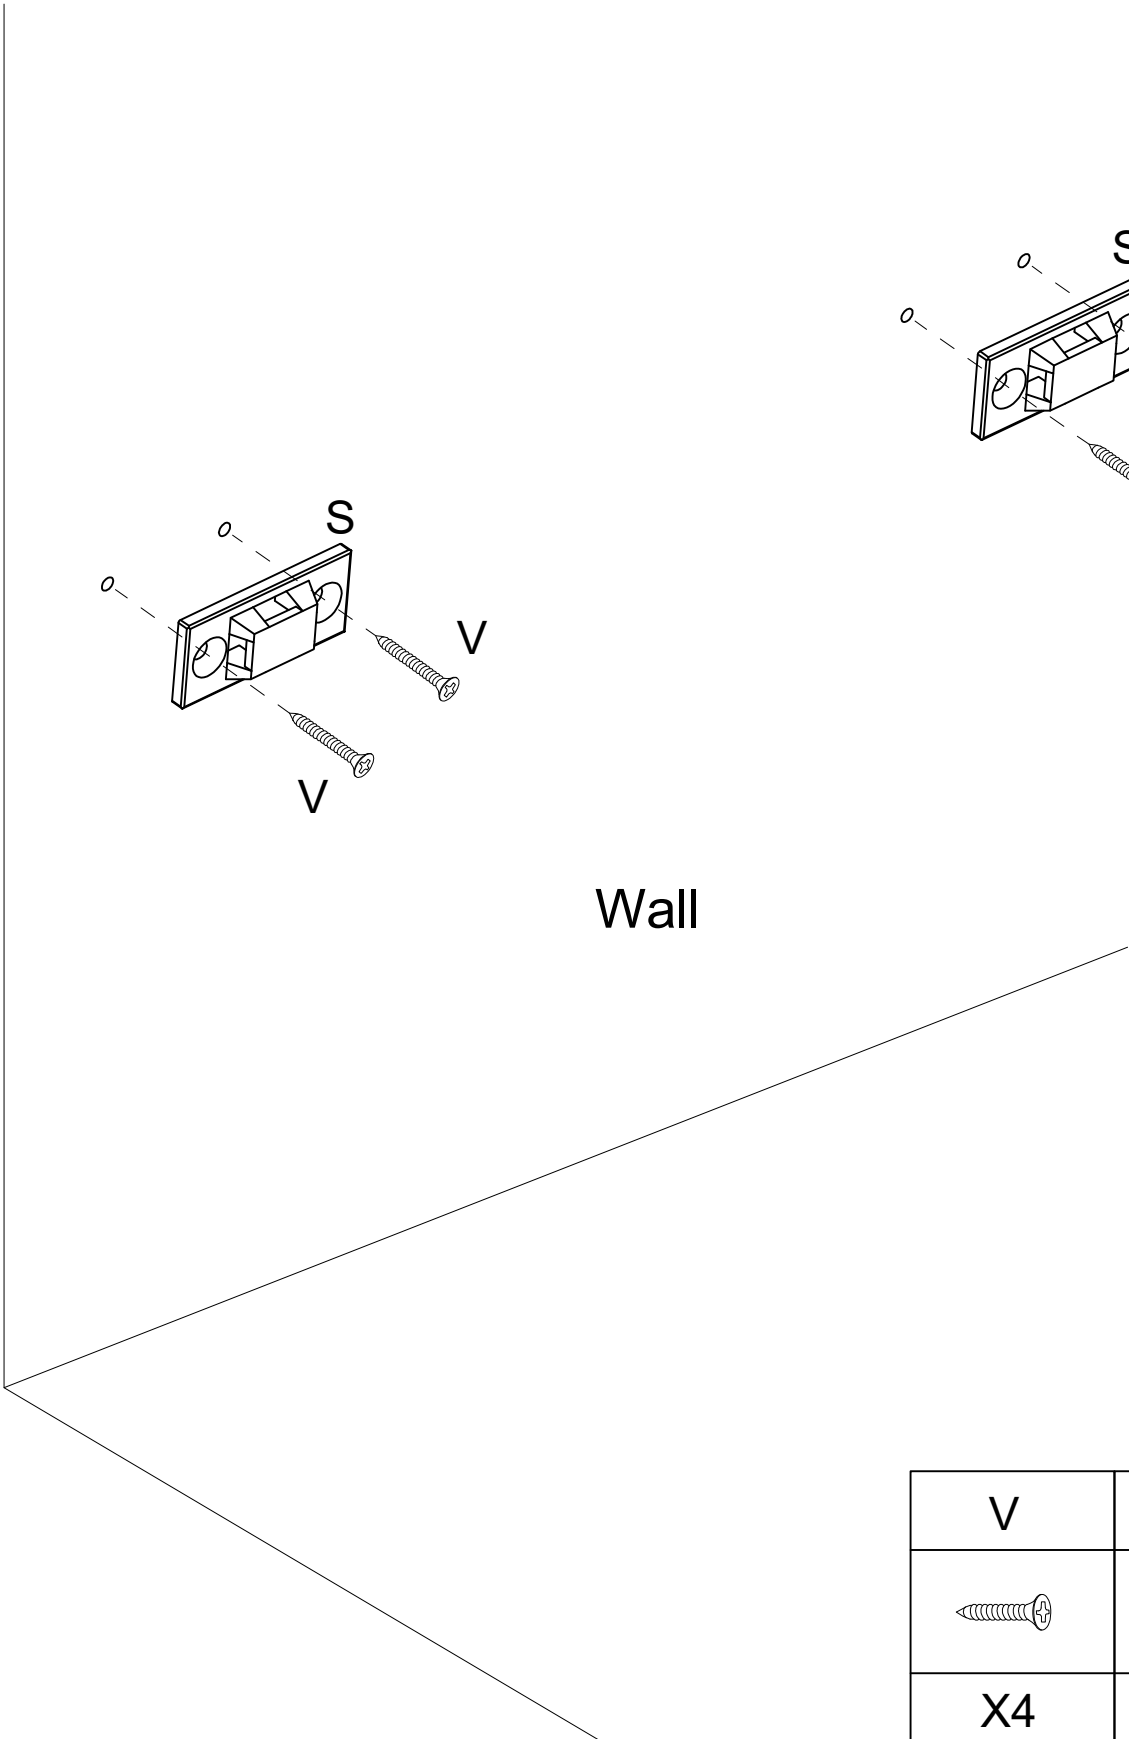
Step 32




Wall

V	S
X4	X2

Step 33

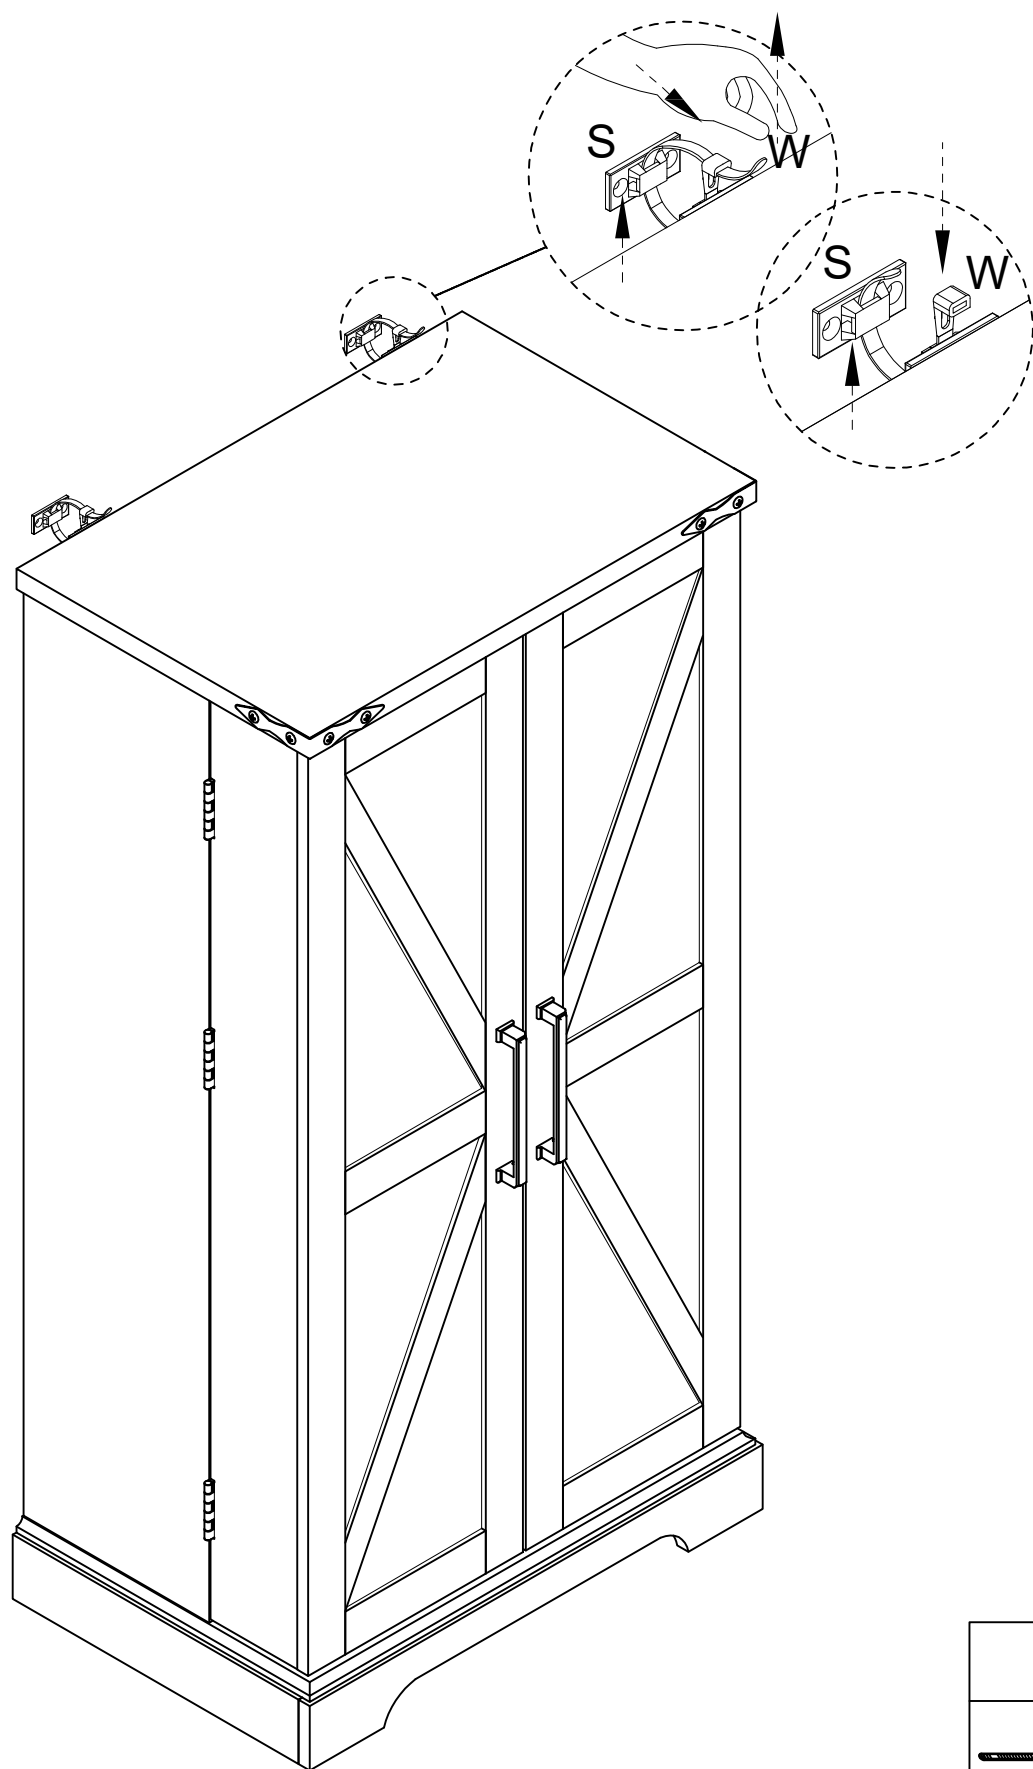

W

X2

Step 34

