


Item # : LM056-72

Assembly Instructions

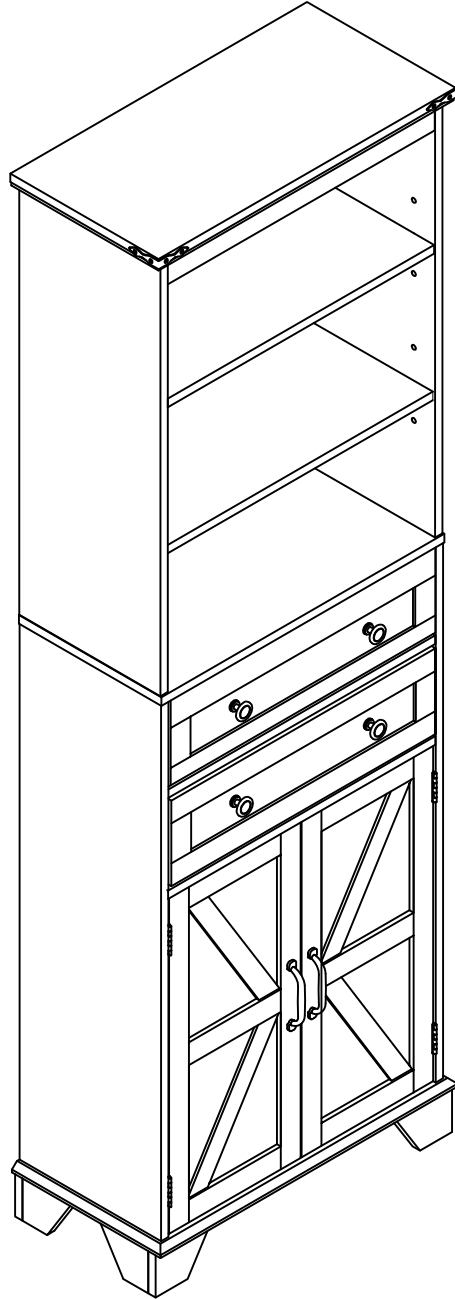


If you have any questions, please follow these steps(“Find Your Orders” – “Problem with the Order” – “Contact Seller”) to contact our customer service. Thanks!


Revsied 18/04/2024

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

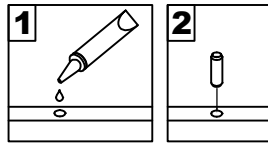


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

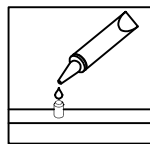


- VI. A Phillips head screwdriver is required for the assembly of this product .

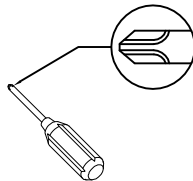


- VII. Power tools should not be used to assemble this product .

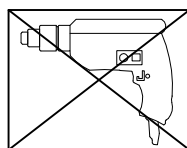

Parts List

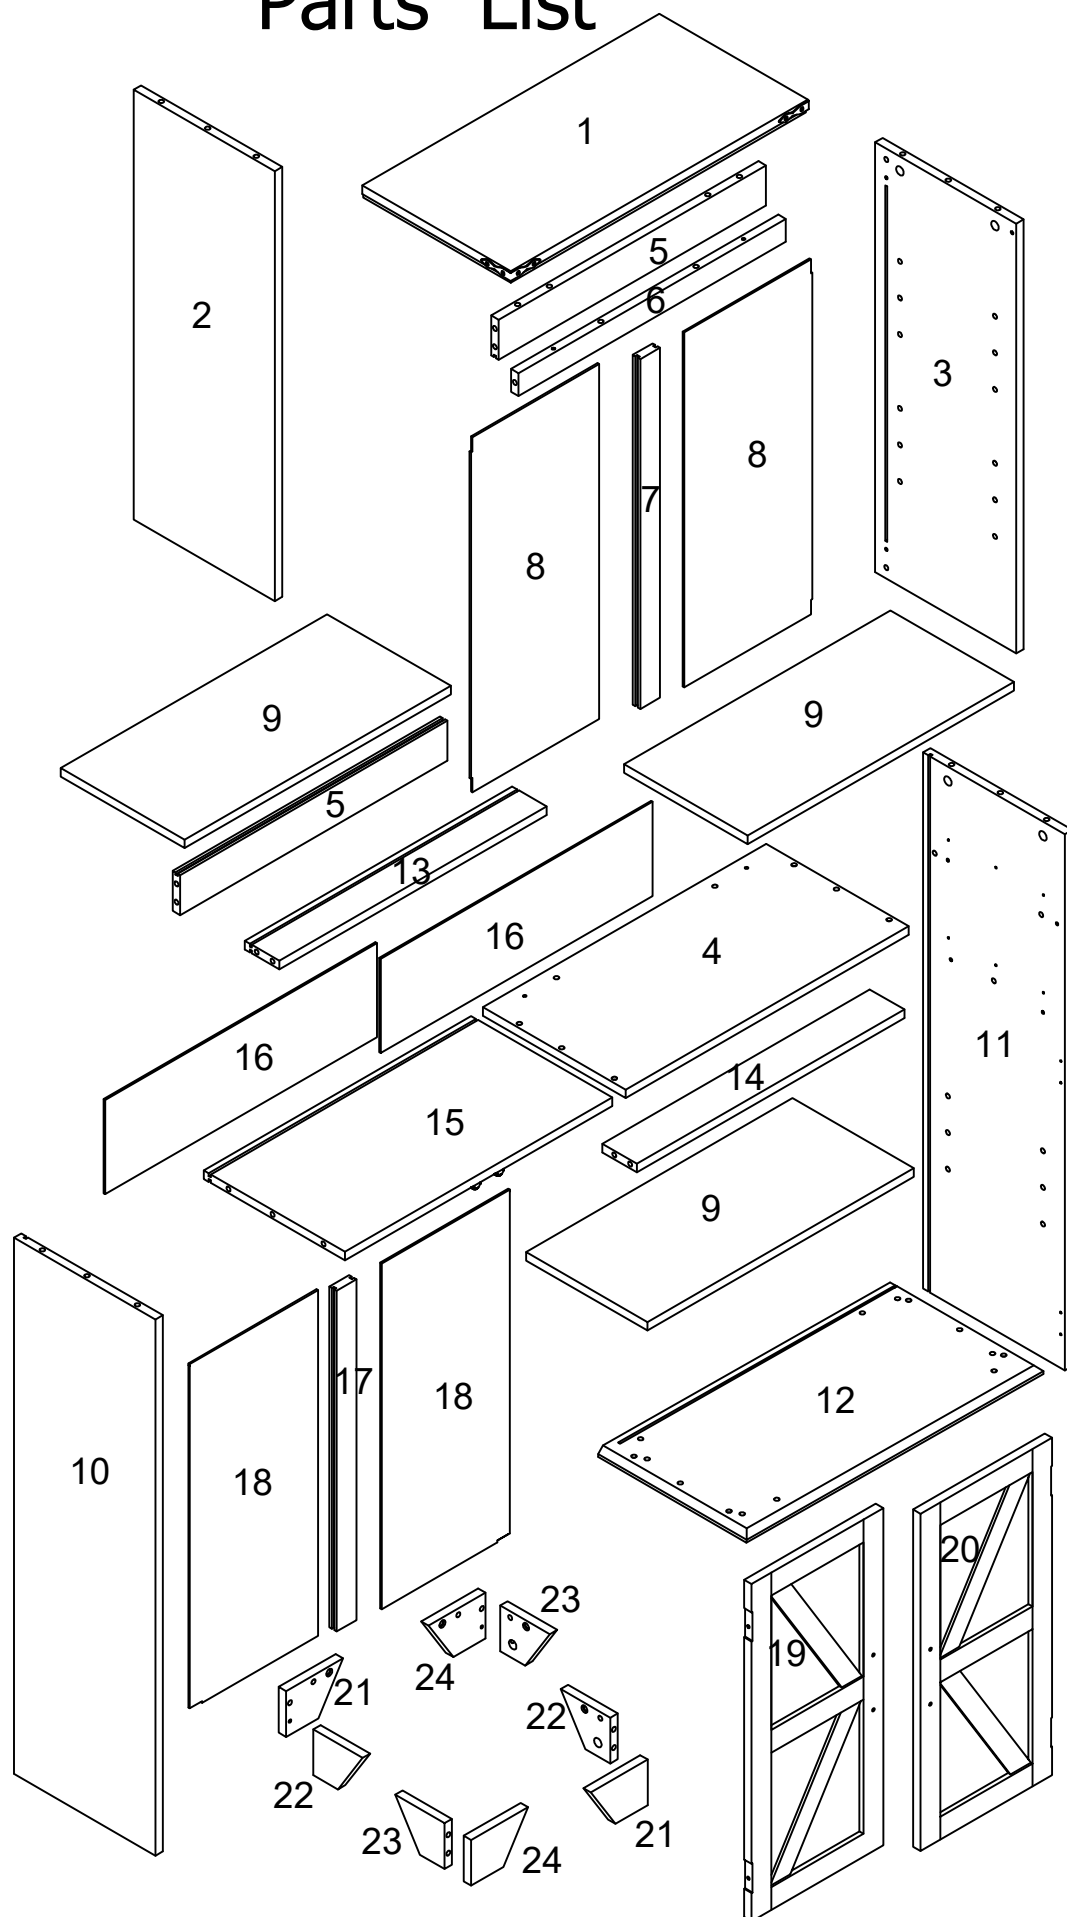








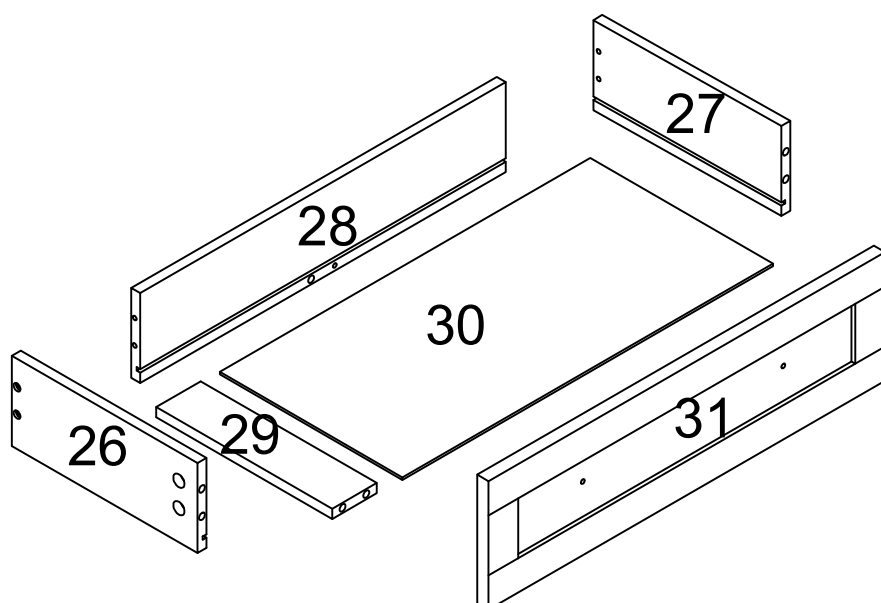







Parts List



x2

Hardware List




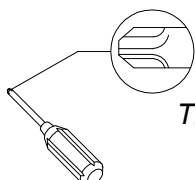












A		Ø8x30mm	Wooden dowel	32 pcs
B		Ø6x35mm	Cam bolt	40 pcs
C		Ø15x11mm	Cam lock	30 pcs
D		Ø15x9mm	Cam lock	10 pcs
E		Ø6x50mm	Bolt	8 pcs
F		M 4	Hex Key	1 pc
G			Shelf holder	12 pcs
H		Ø4x32mm	Screw	10 pcs
I			Door stopper	1 pc
J		Ø3x15mm	Screw	2 pcs
K			Screw	2 pcs
L			Three fold hinge	4 Set
M		Ø3x12mm	Screw	44 pcs
N		Ø4x45mm	Screw	2 pcs

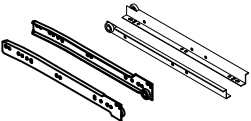


Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Hardware List


O		96mm	Handle	2 pcs
P			Knob	4 pcs
Q		Ø4x9mm	Bolt	4 pcs
R		Ø4x19mm	Bolt	4 pcs
S		Ø30mm	Sticker	40 pcs
T		Individually packed	Drawer slides	2 pcs
U		M6*12mm	Bolt	16 pcs
V			Plastic wedge	8 pcs
W			Anti-inversion hardware	4 pcs
X		Ø4*15mm	Screw	4 pcs
Y			House lizard	4 pcs
Z		Ø4x35mm	Screw	4 pcs
AA			Strip	2 pcs
BB			Plastic wedge	22 pcs
CC		Ø3x17mm	Screw	22 pcs
DD			Glue tube	1 pc

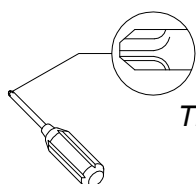


Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*


Step 1

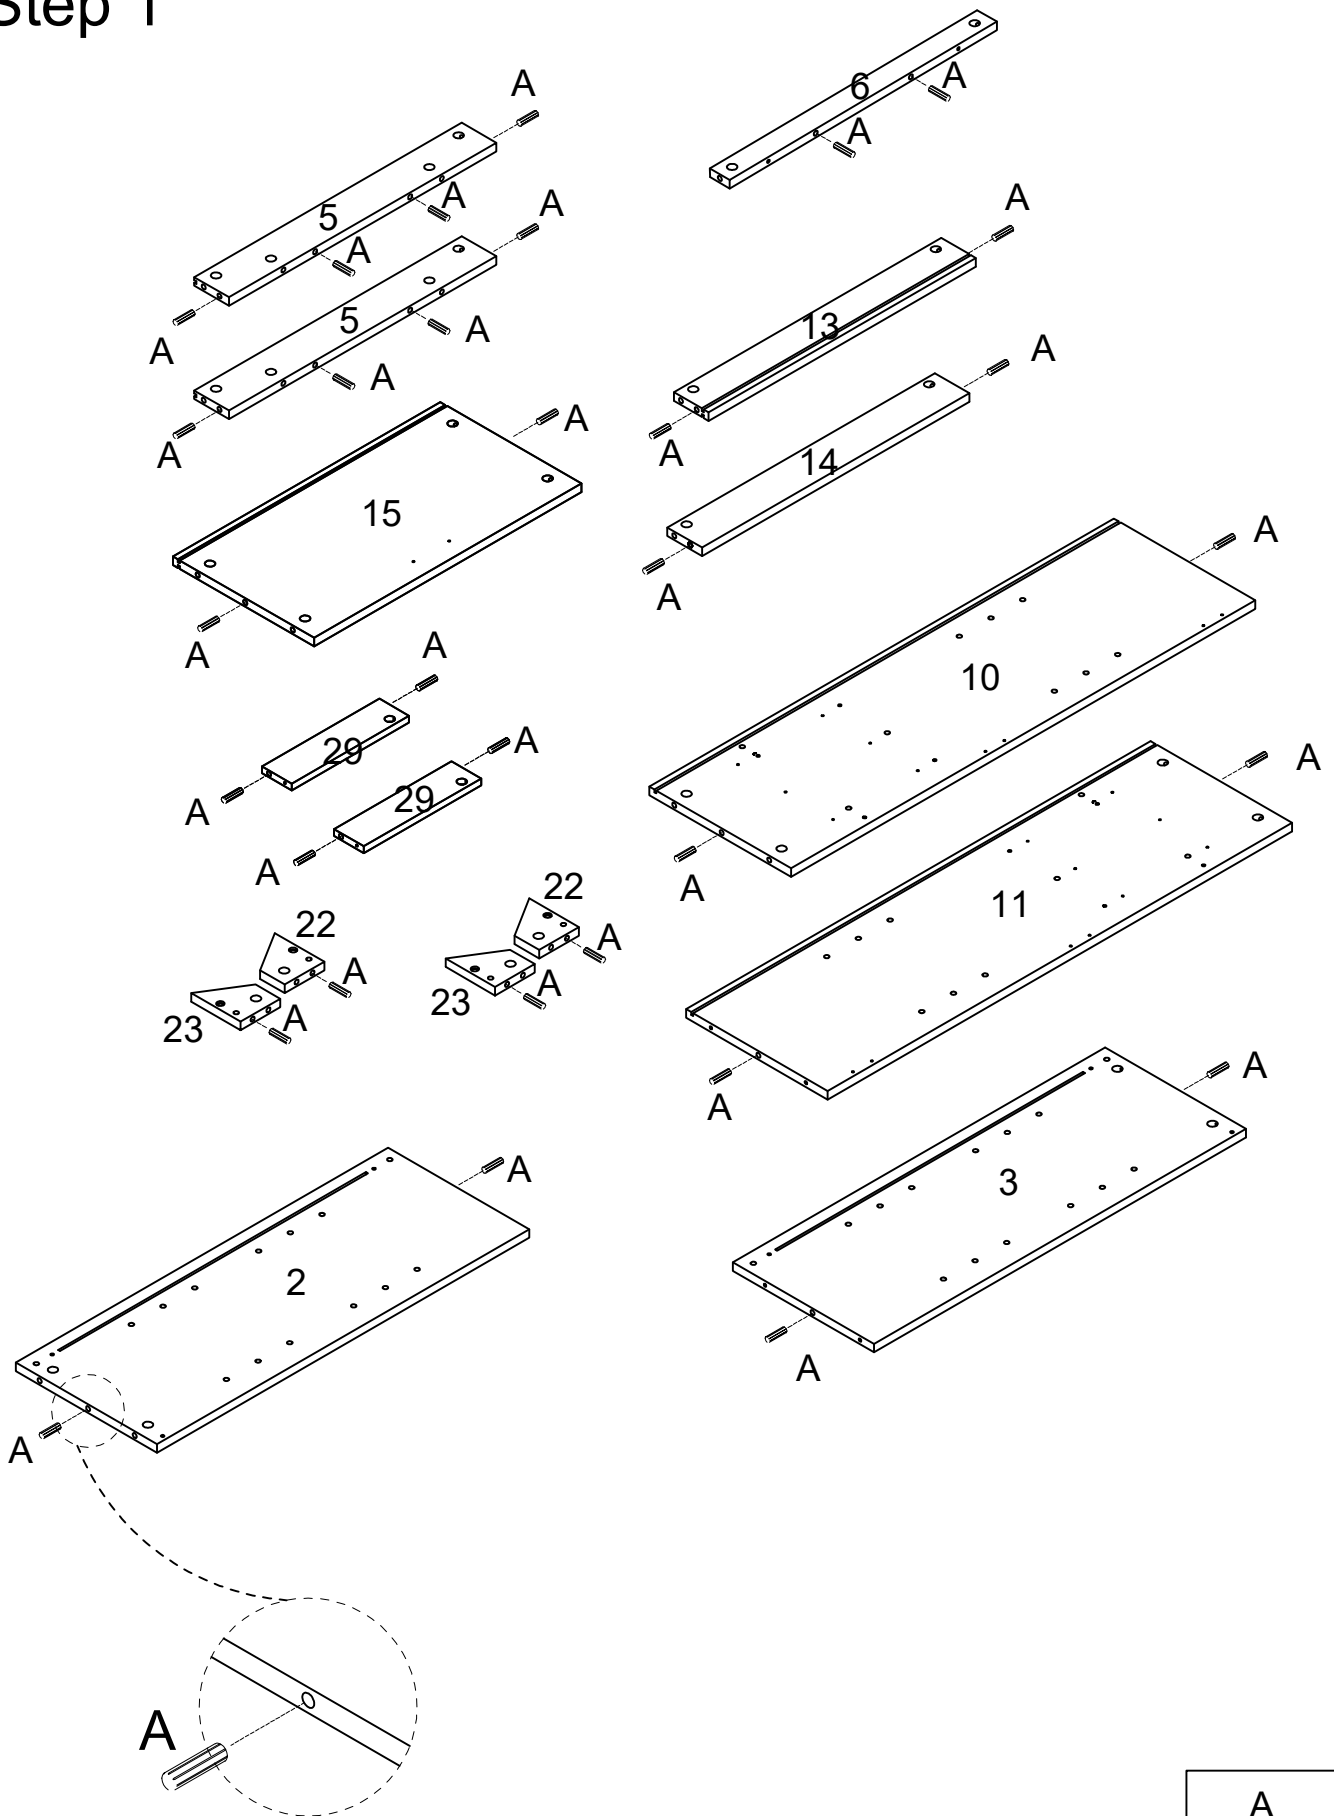



A

X32

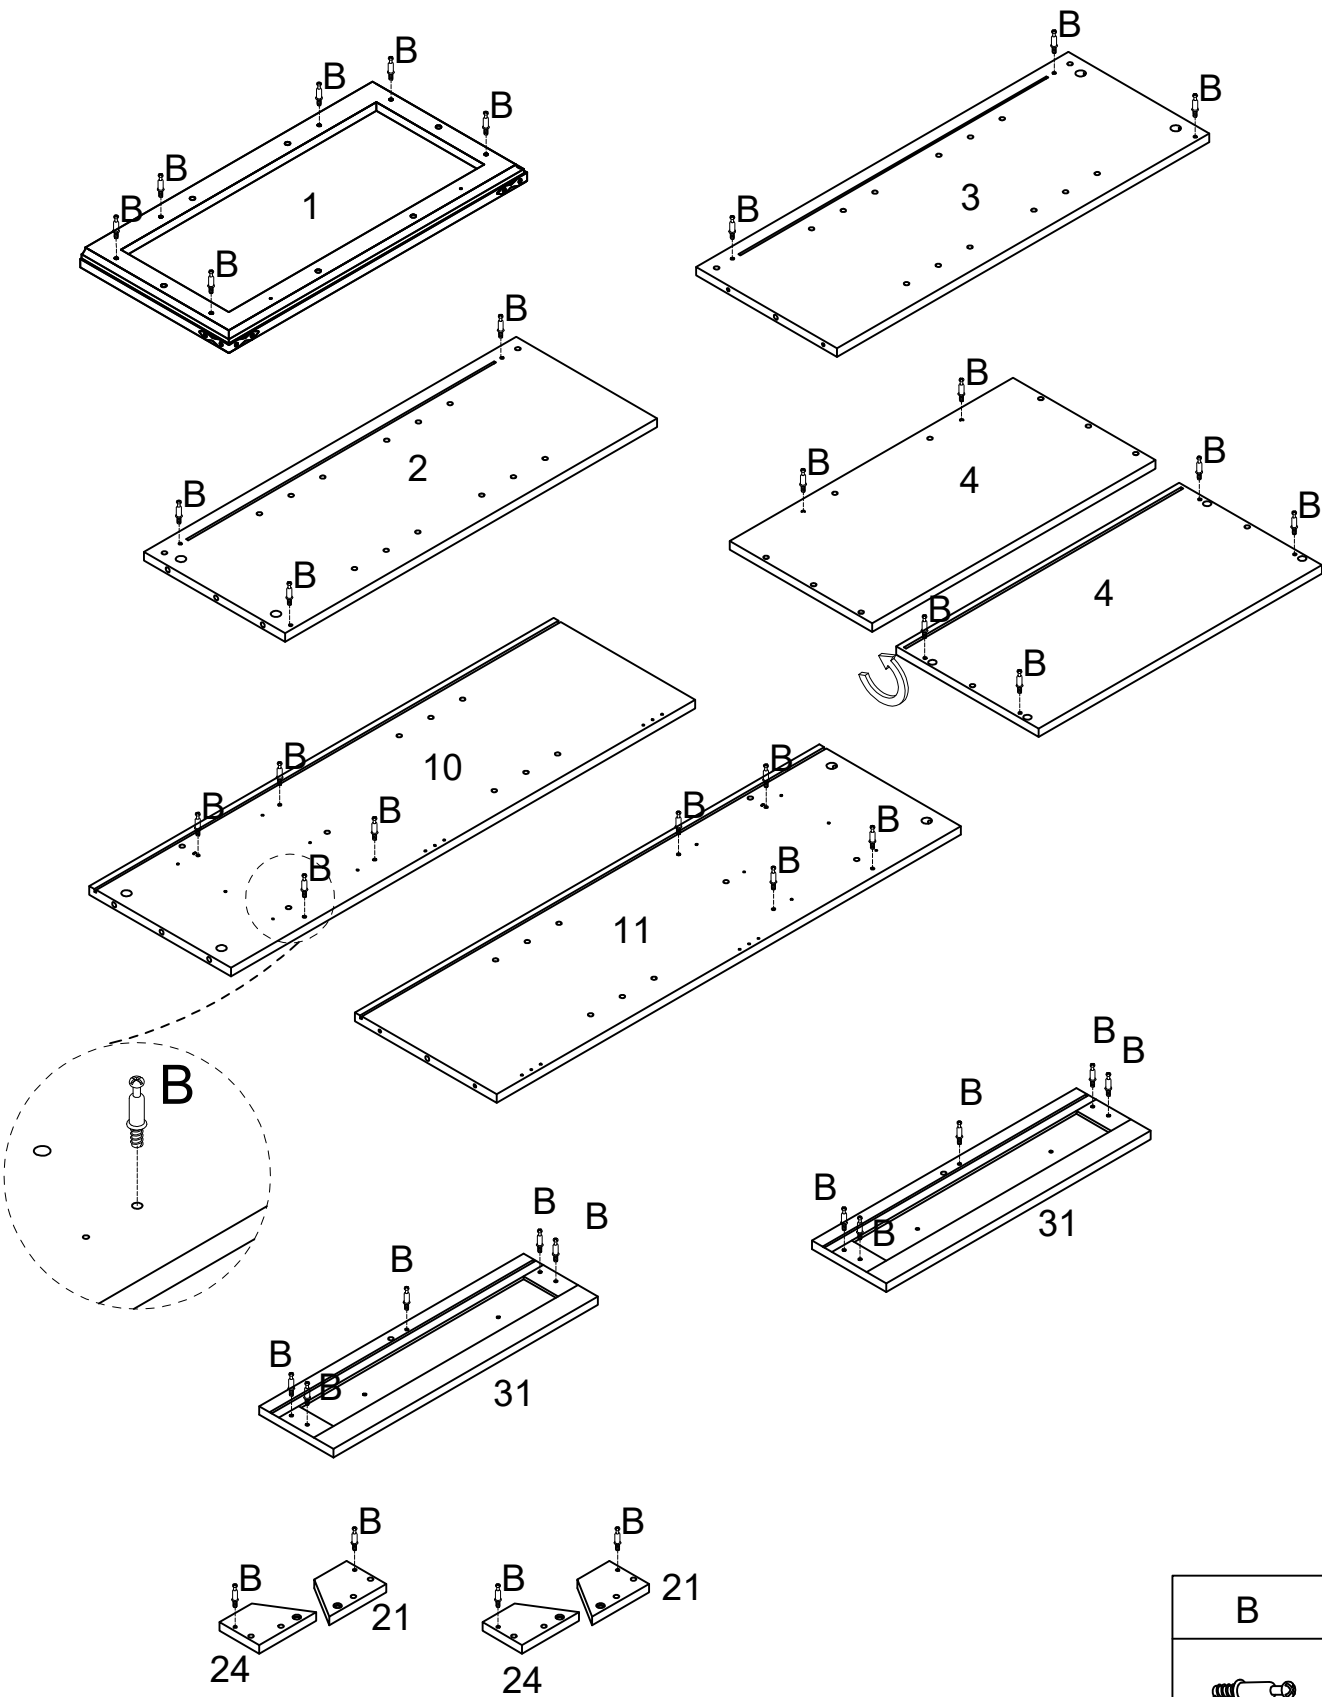
Step 2




B

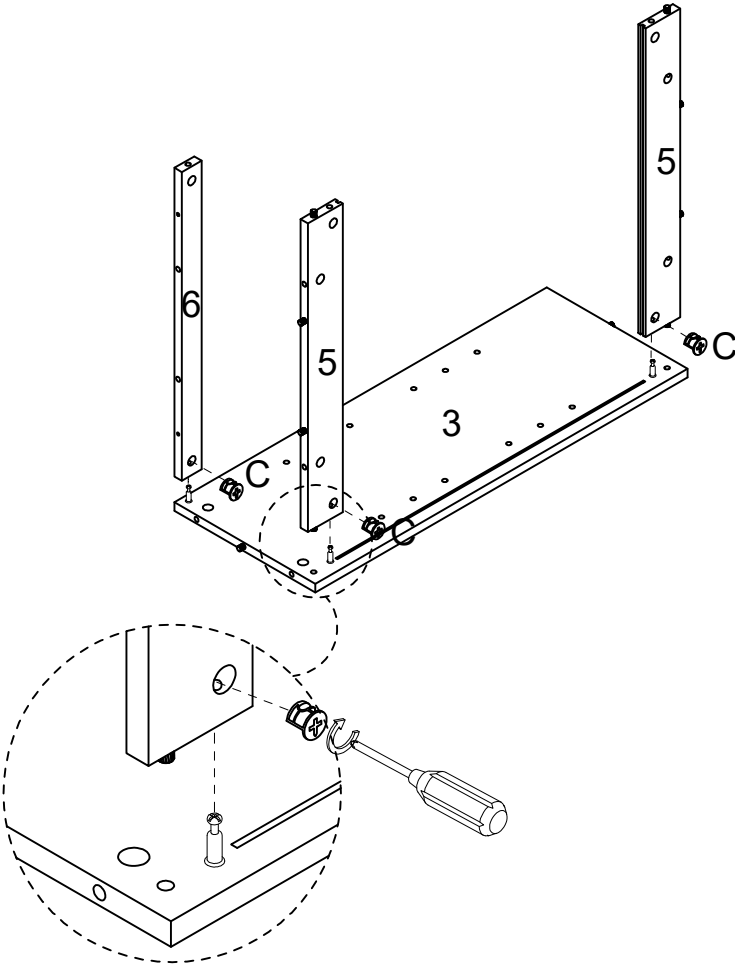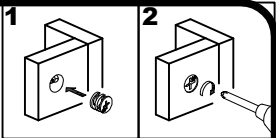X40

Step 3




C

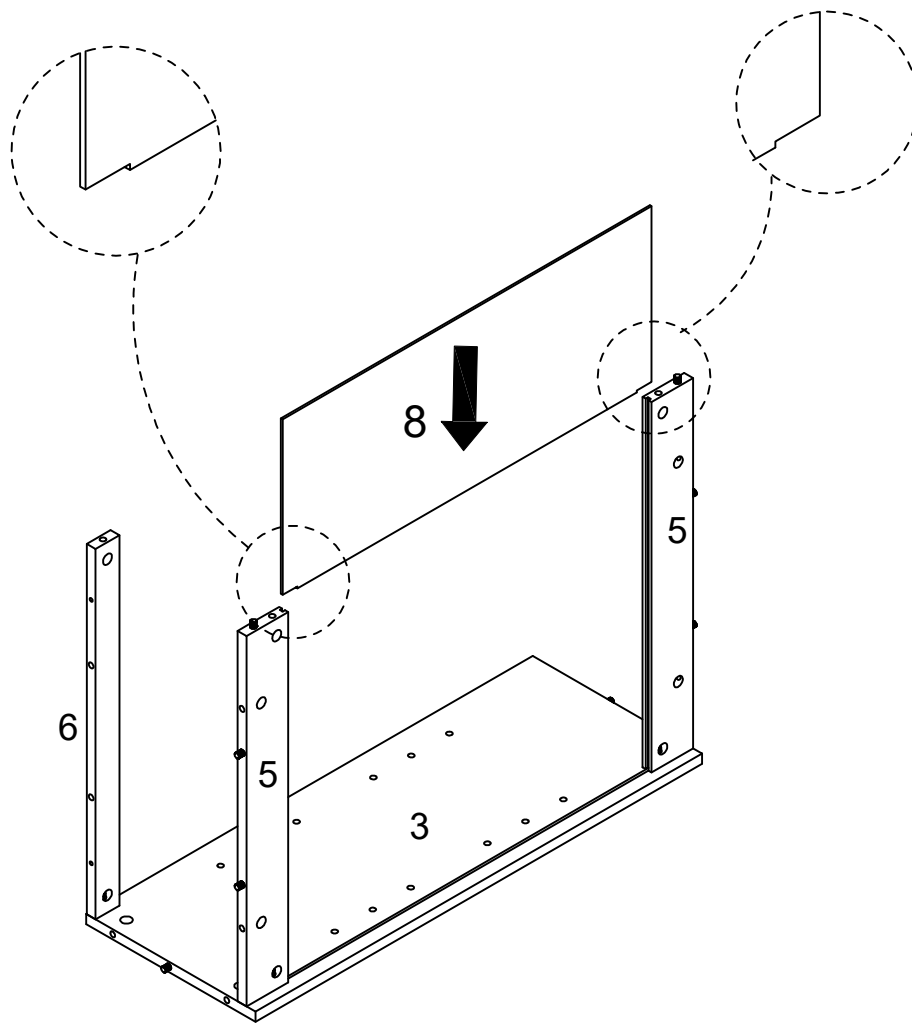X3


Step 4

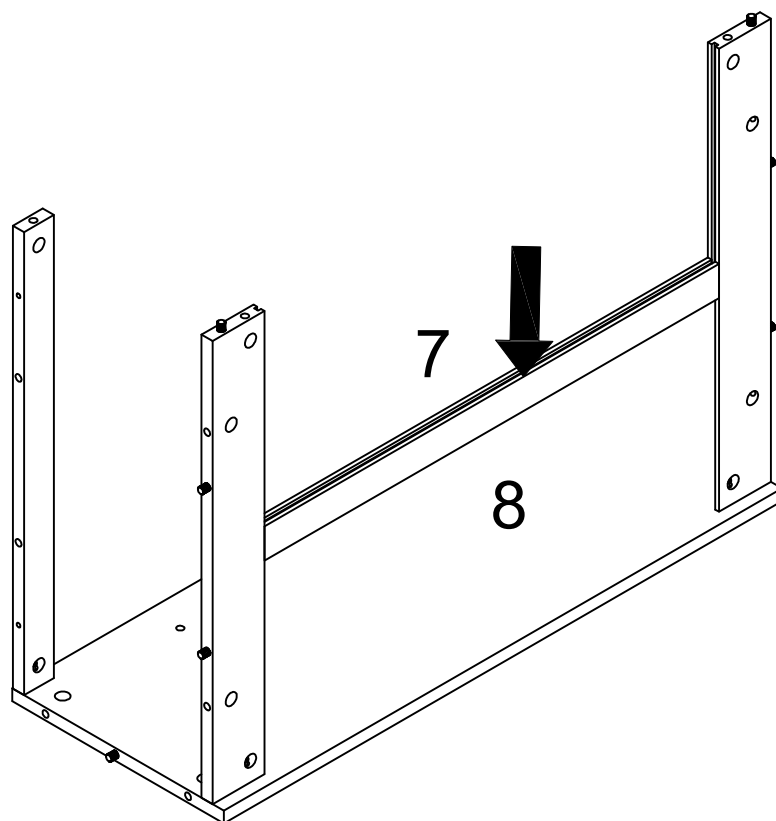



Step 5




Step 6


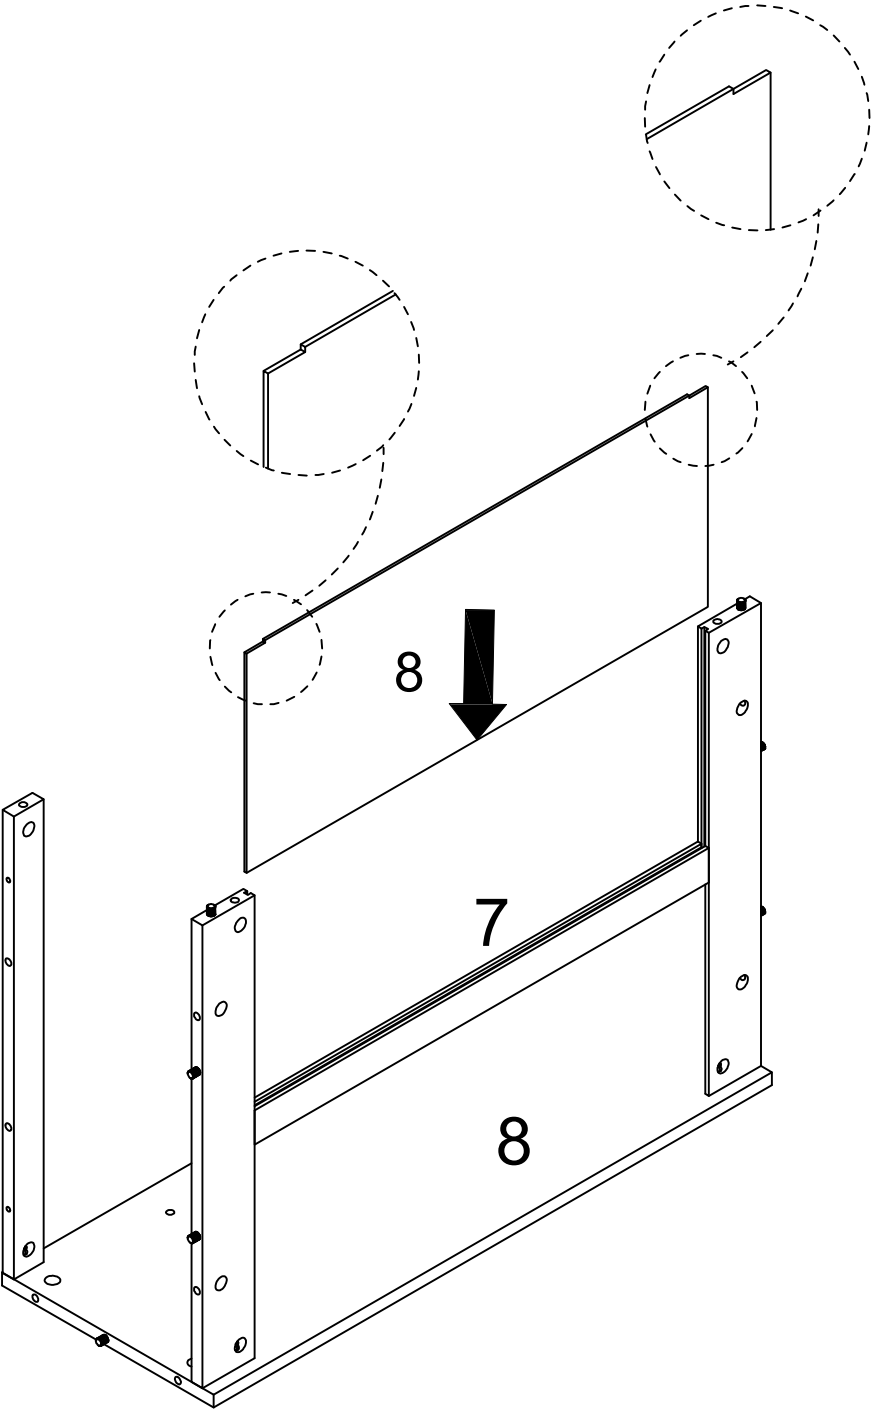



Step 7

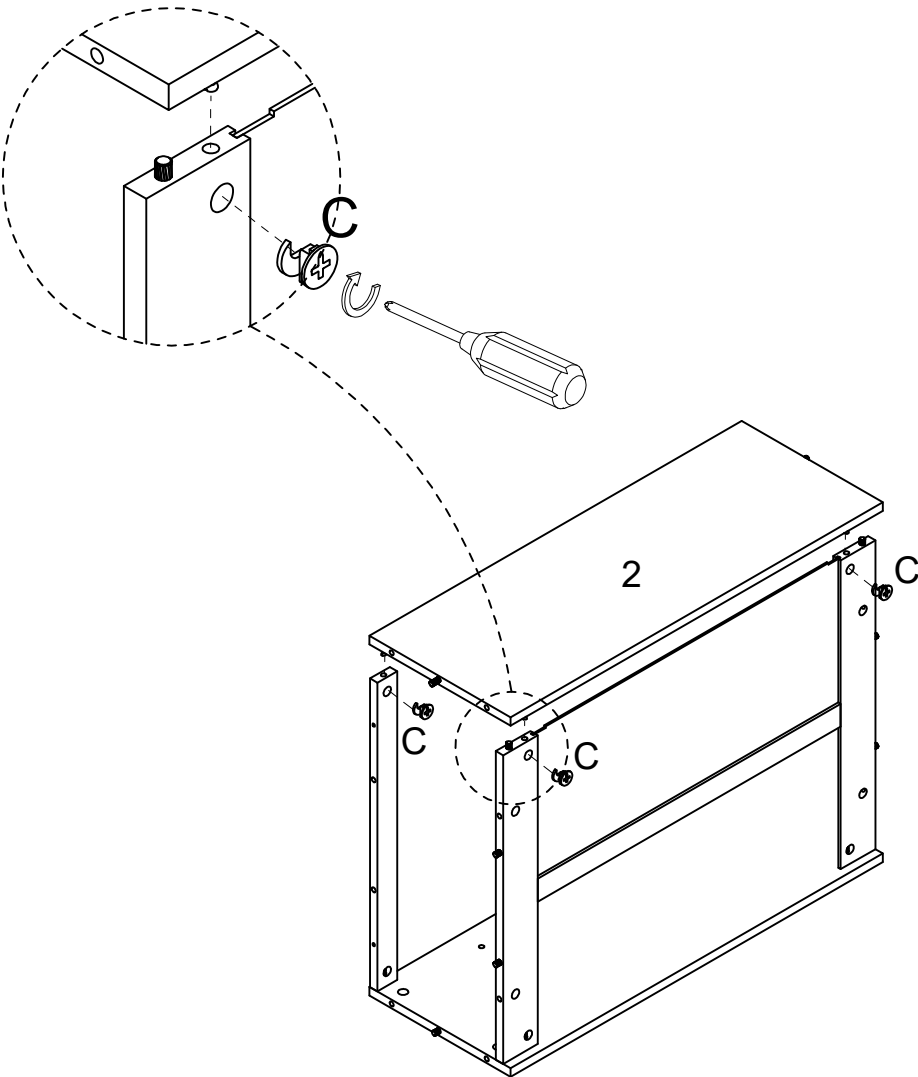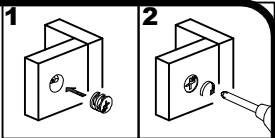


C

X3

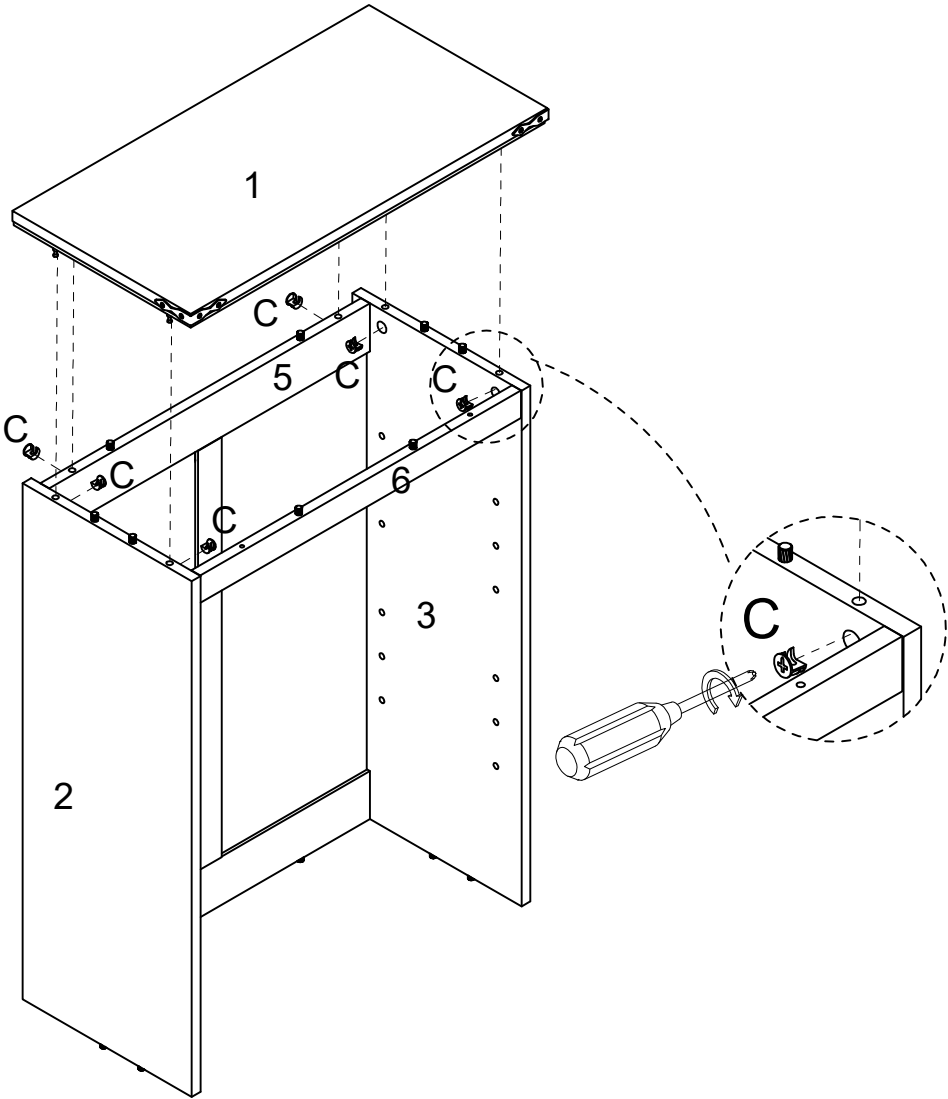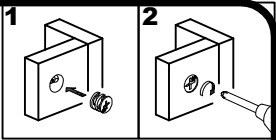


Step 8





C

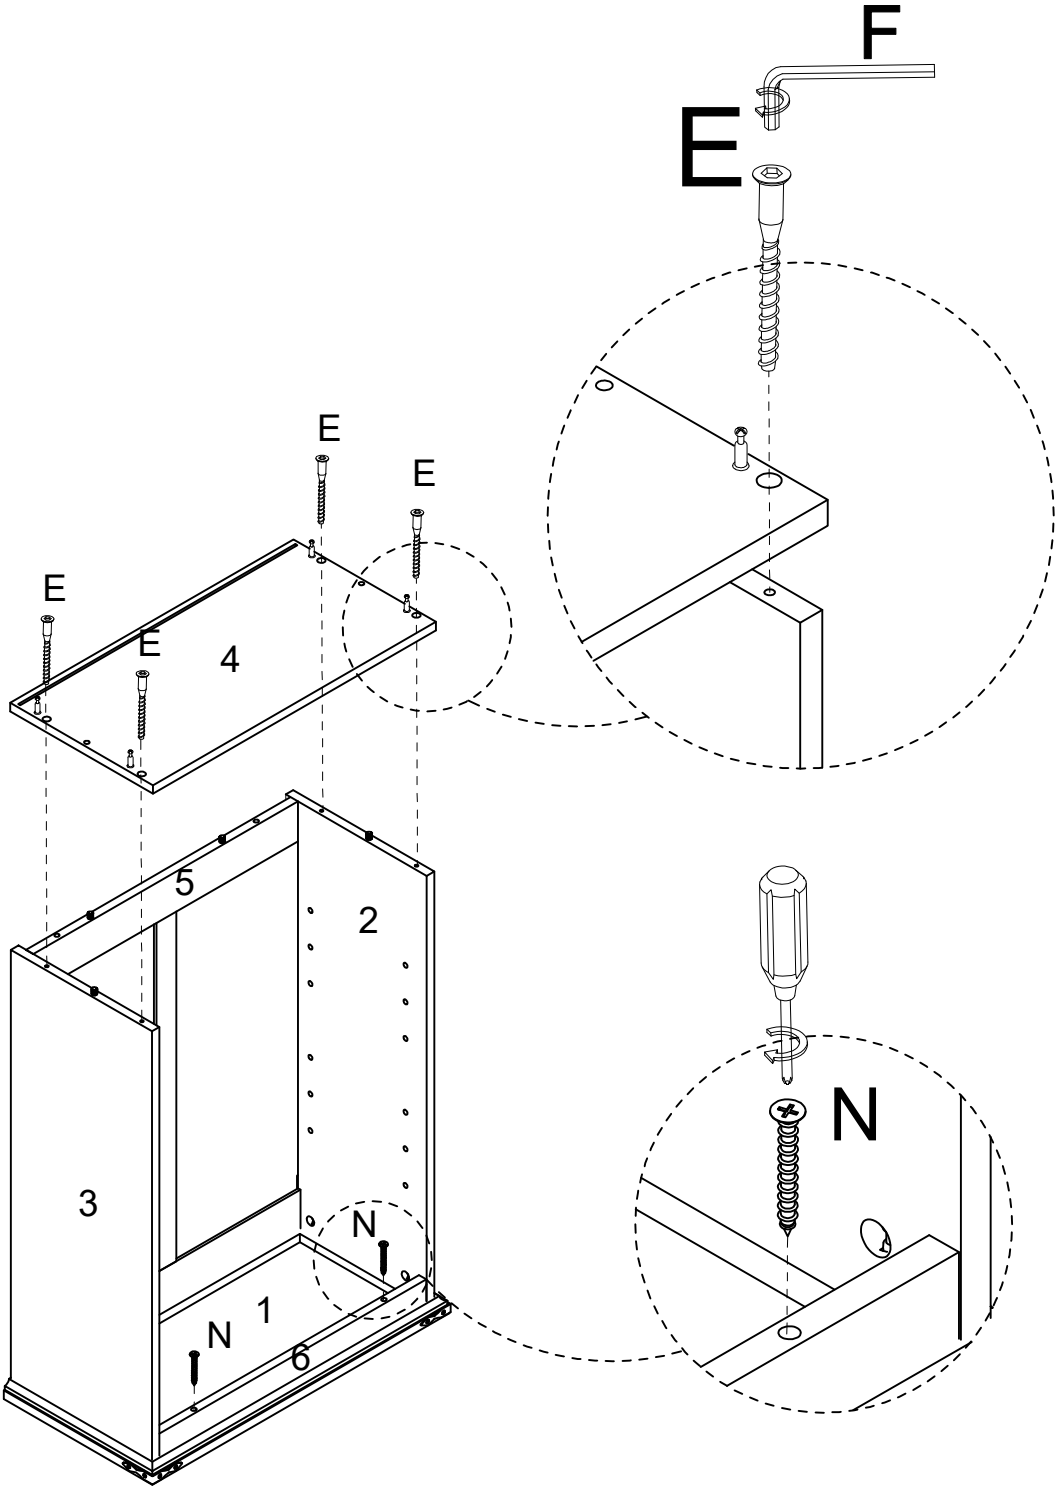X6


Step 9




F	E	N
		
X1	X4	X2

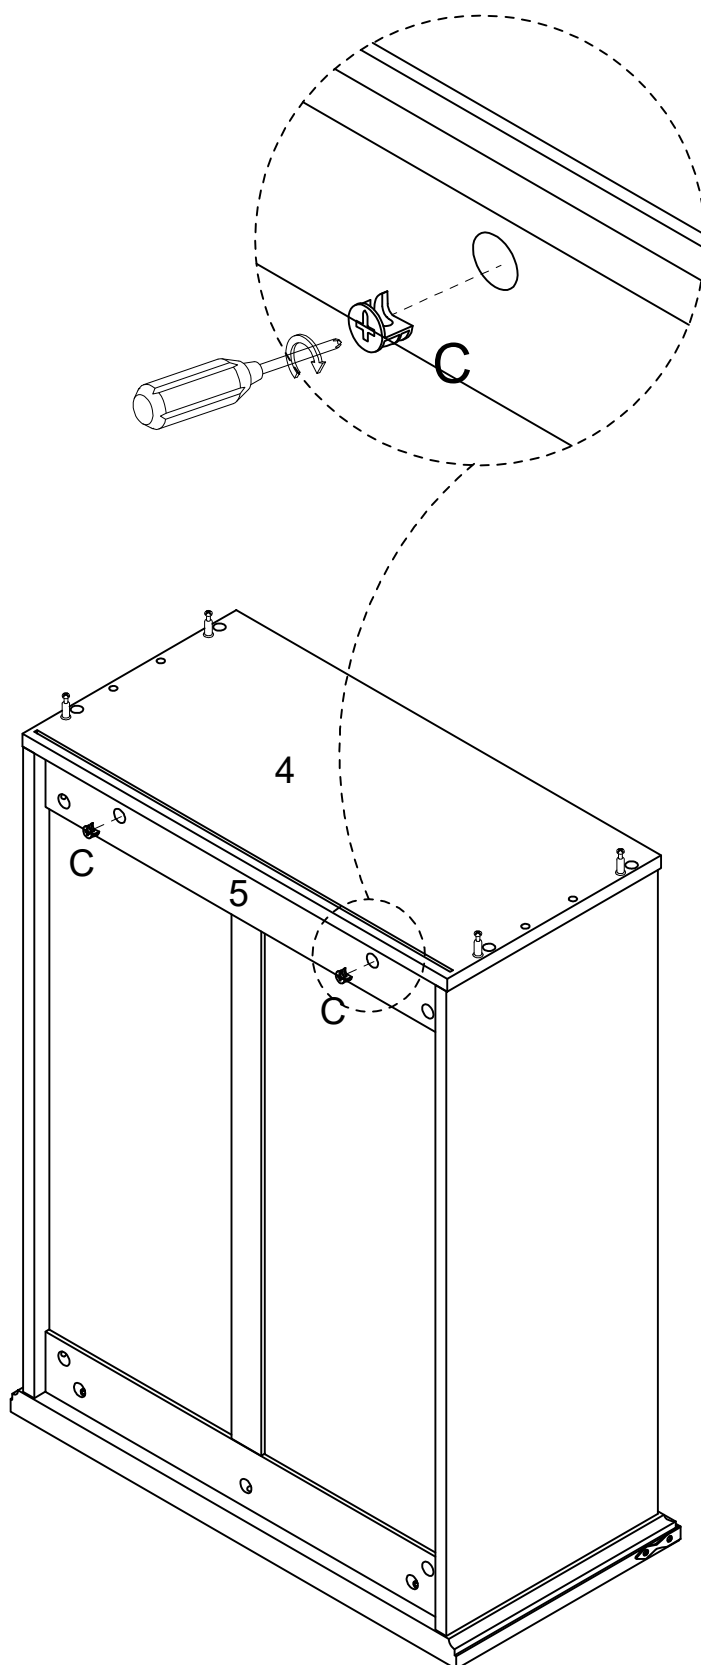
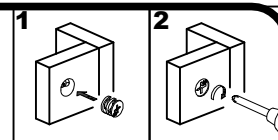
Step 10



C

X2

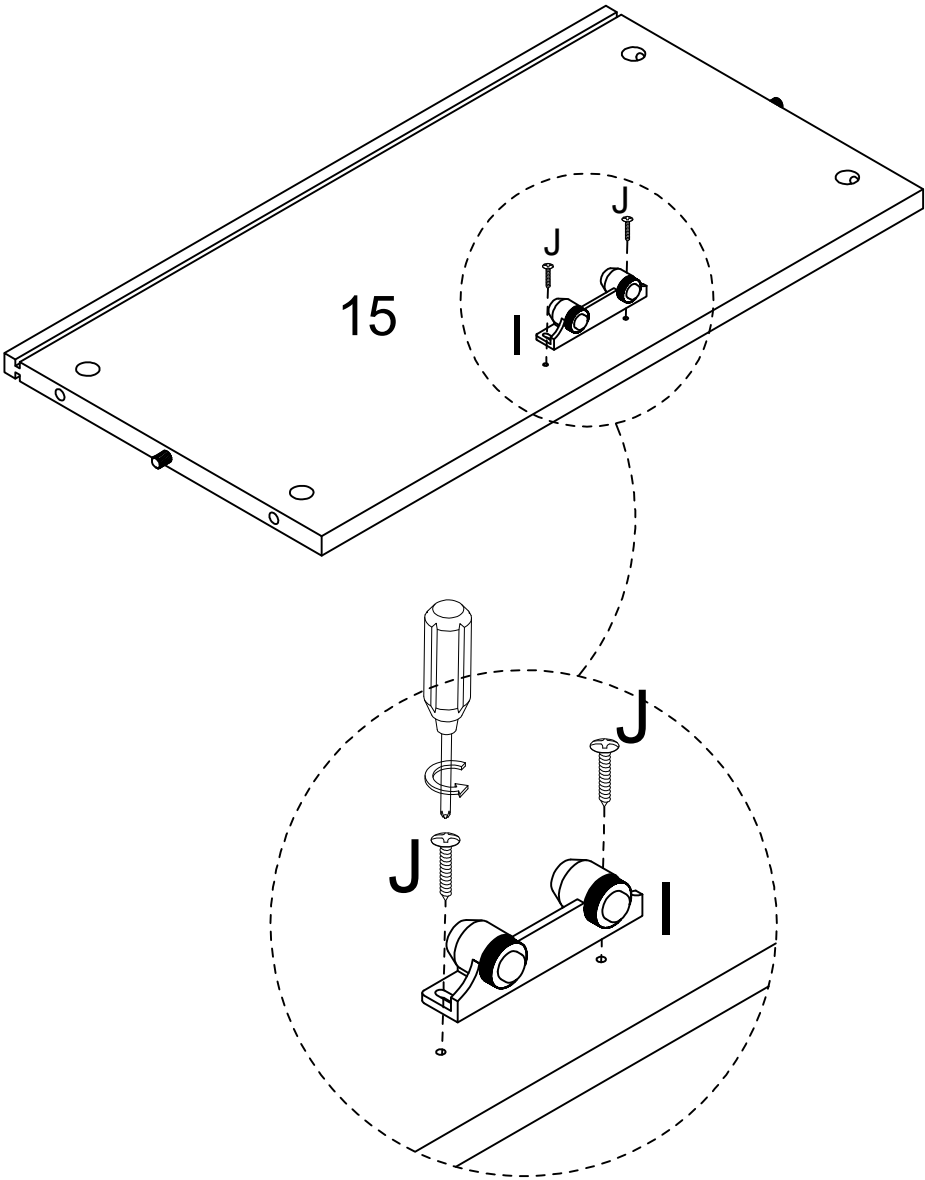
Step 11




J	I
	
X2	X1

Step 12


T-CL₈




T-CR₈



T-DL₈

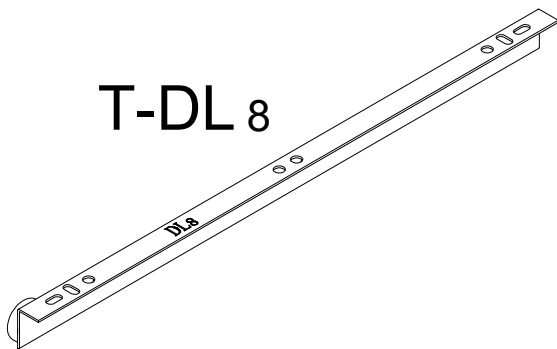

T-DR₈



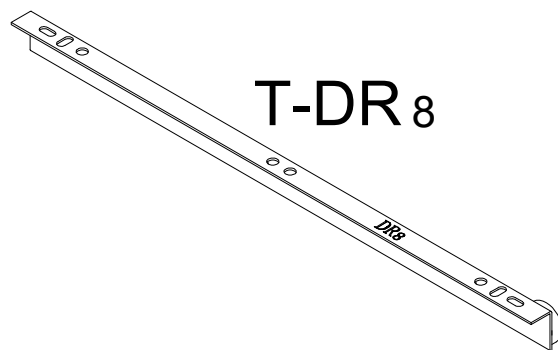


Step 13

NOTE:






Refer to the images to identify T-CL8 (left) and T-CR8 (right). Attach T-CL8 to #10 panel and T-CR8 to #11 panel. [M] screws must go in the exact spots shown.

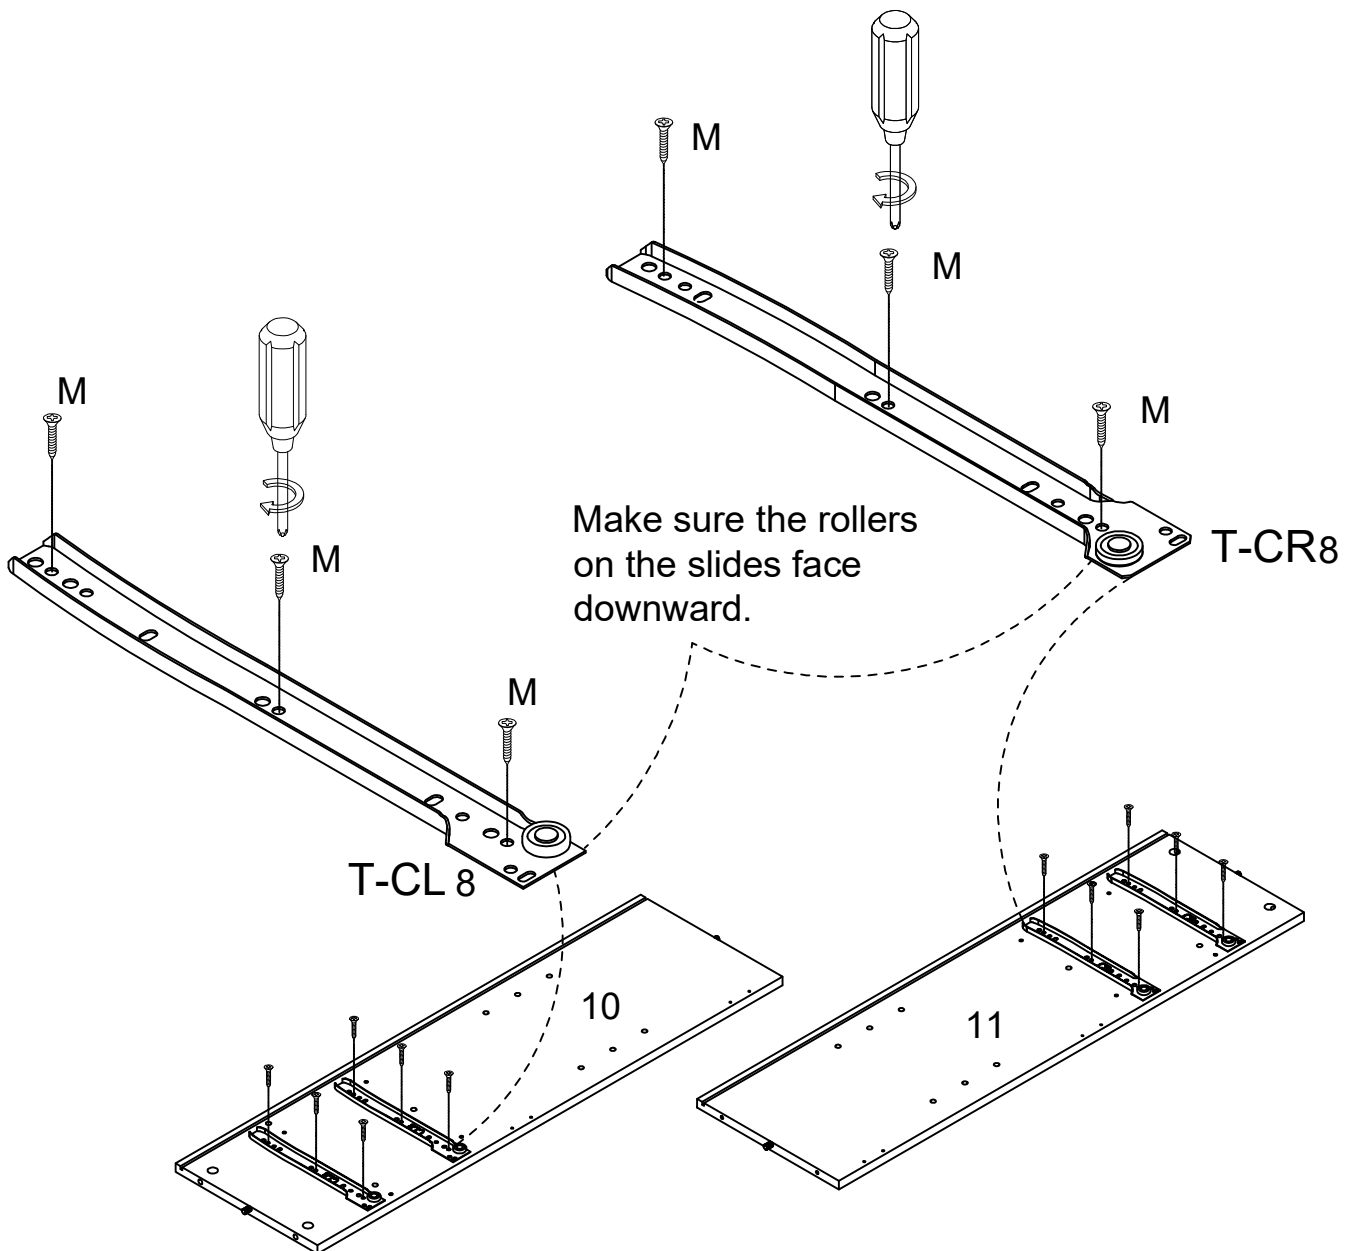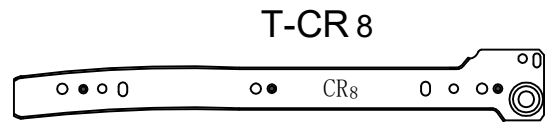



T	M
X1	X12


Step 14

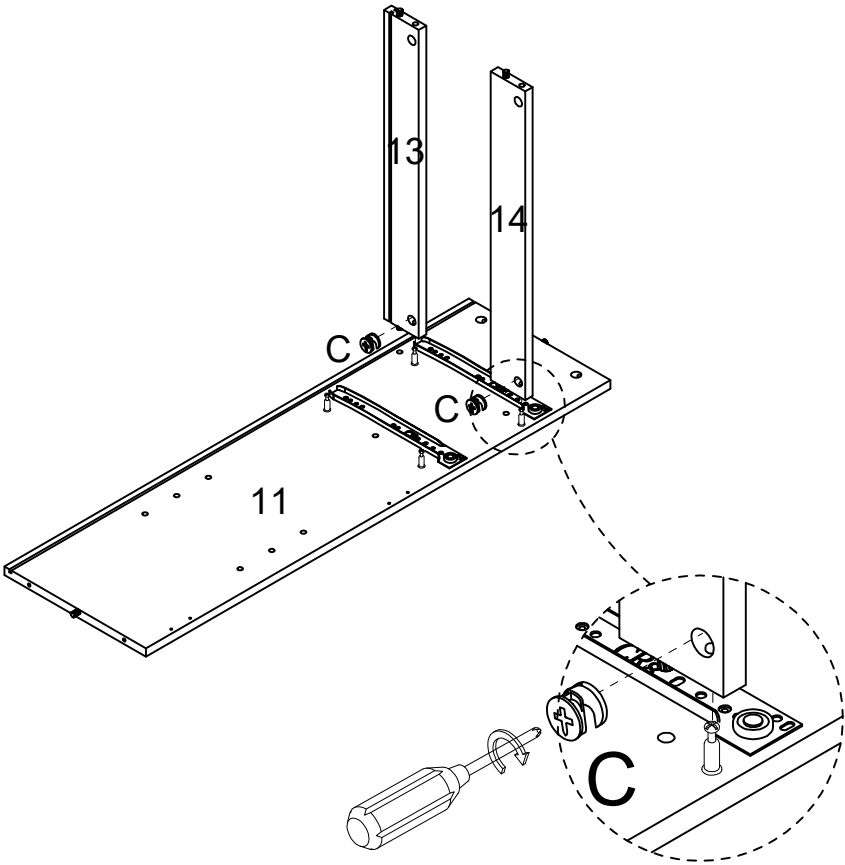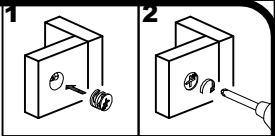


C

X2

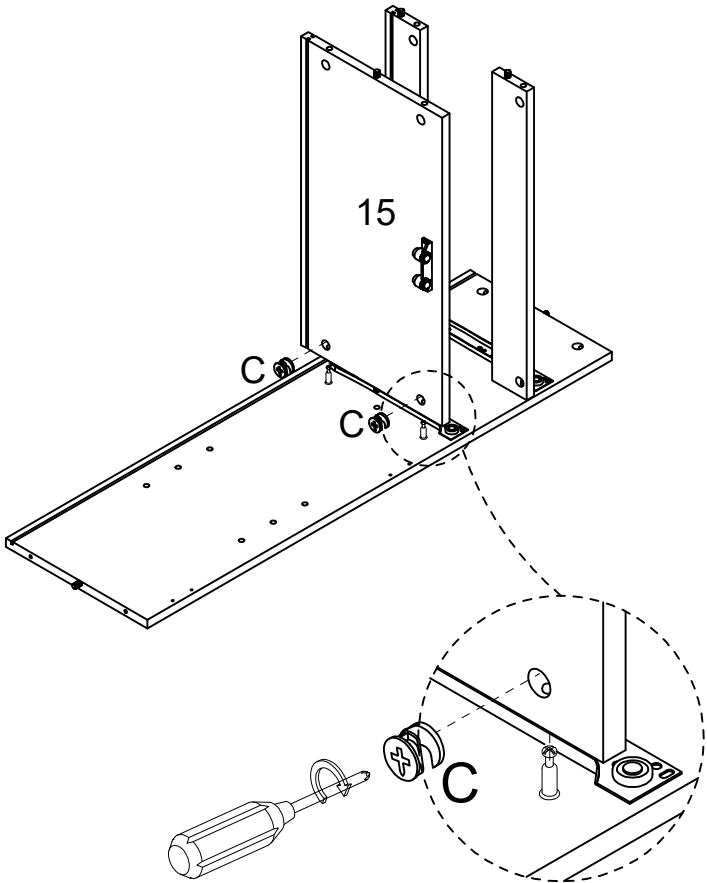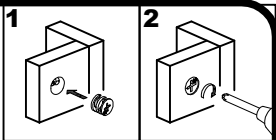Step 15






C

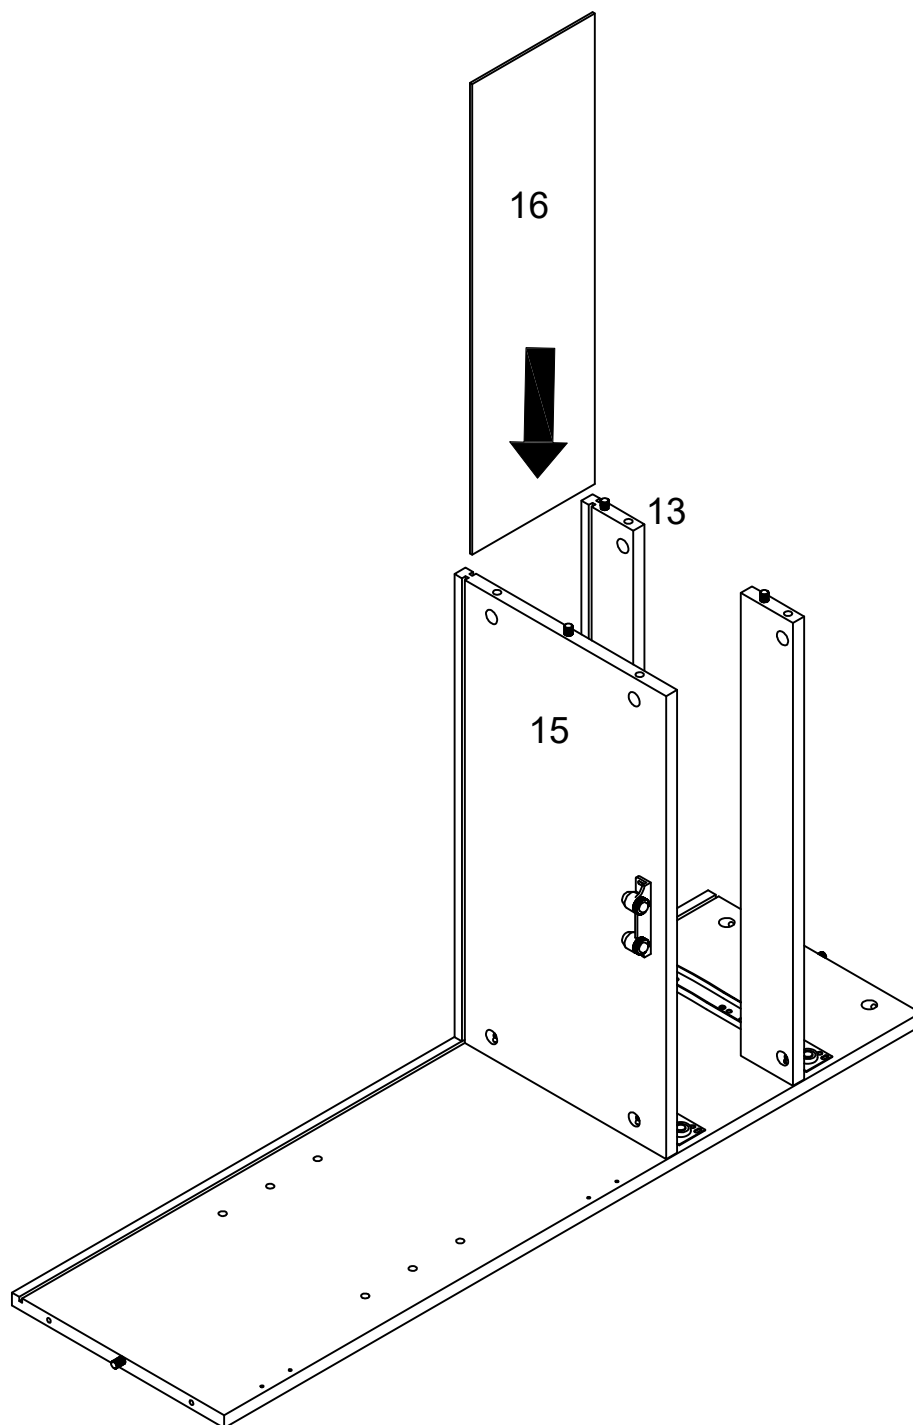X2

Step 16

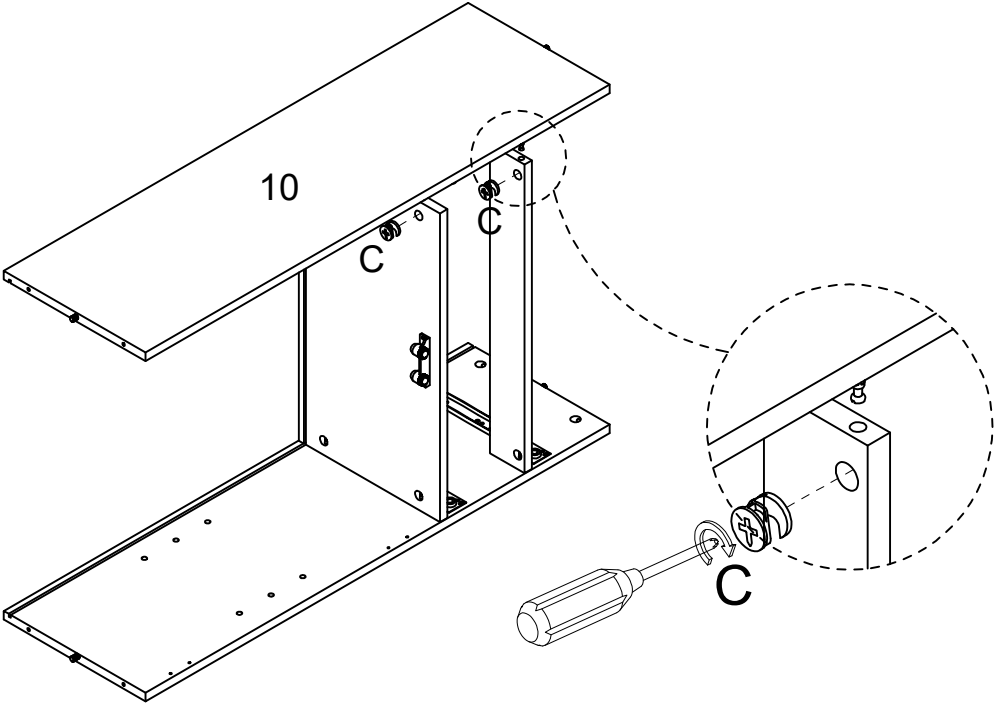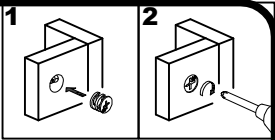


Step 17






C

X4

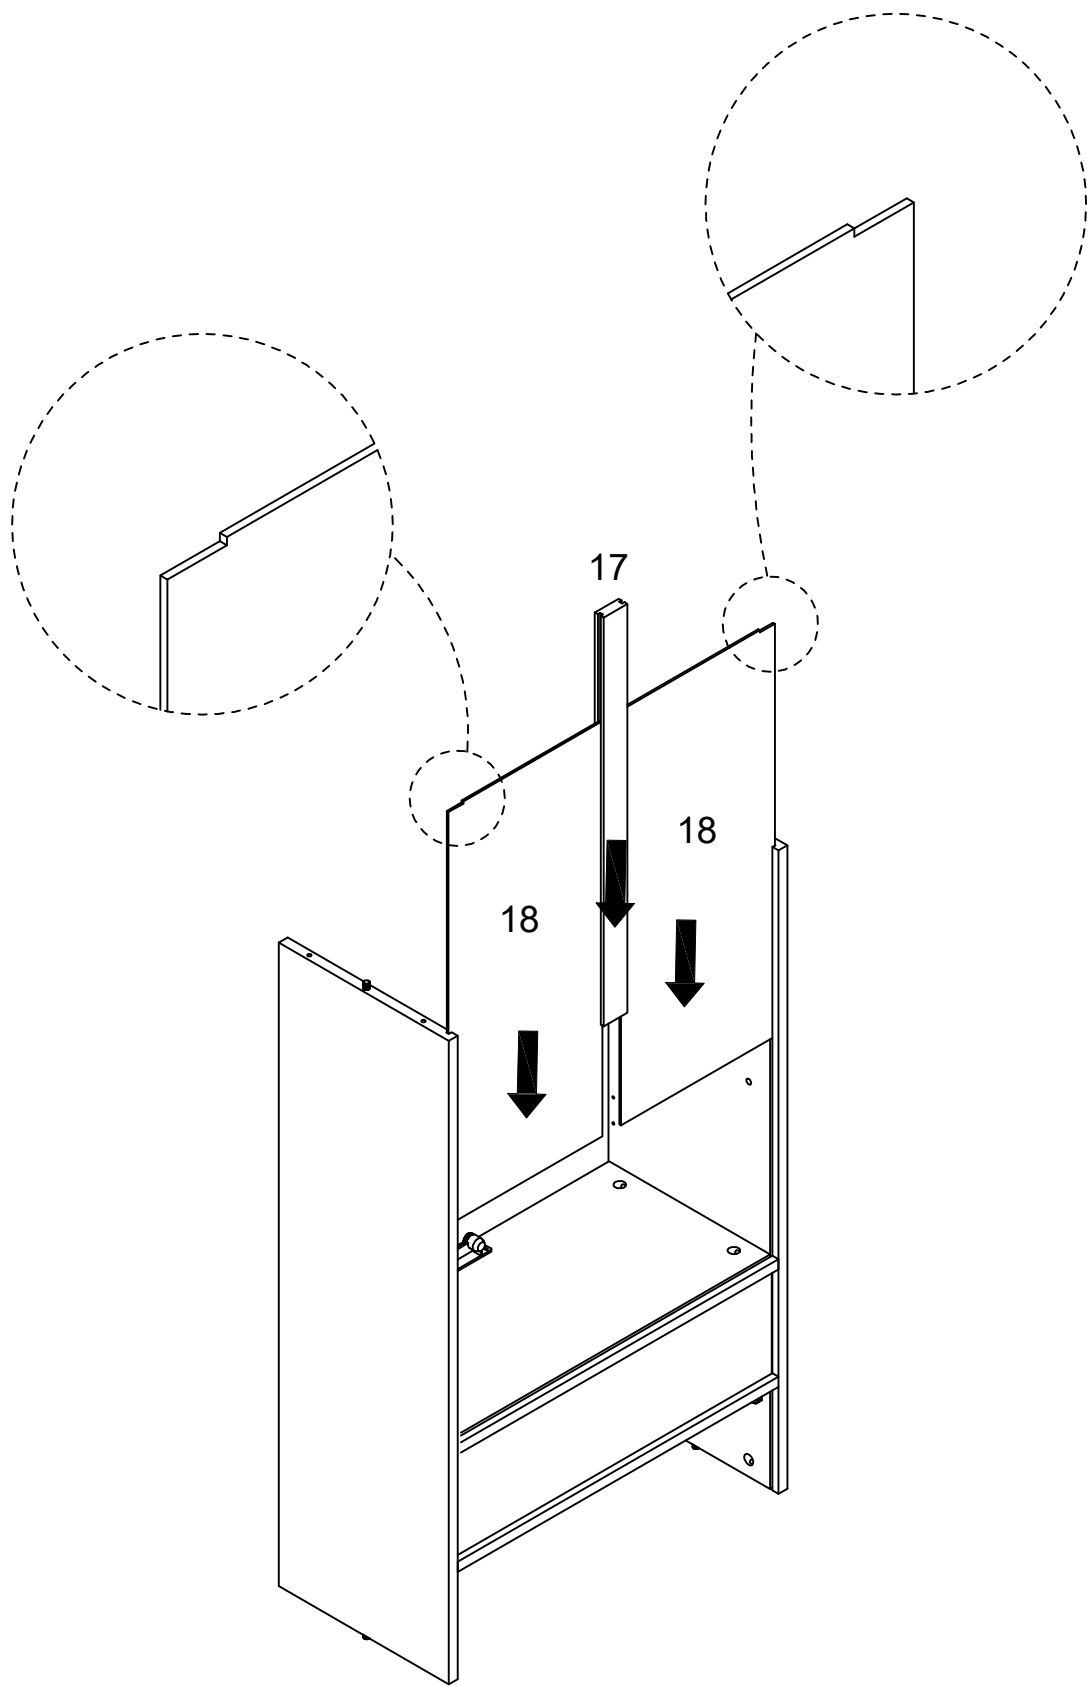Step 18




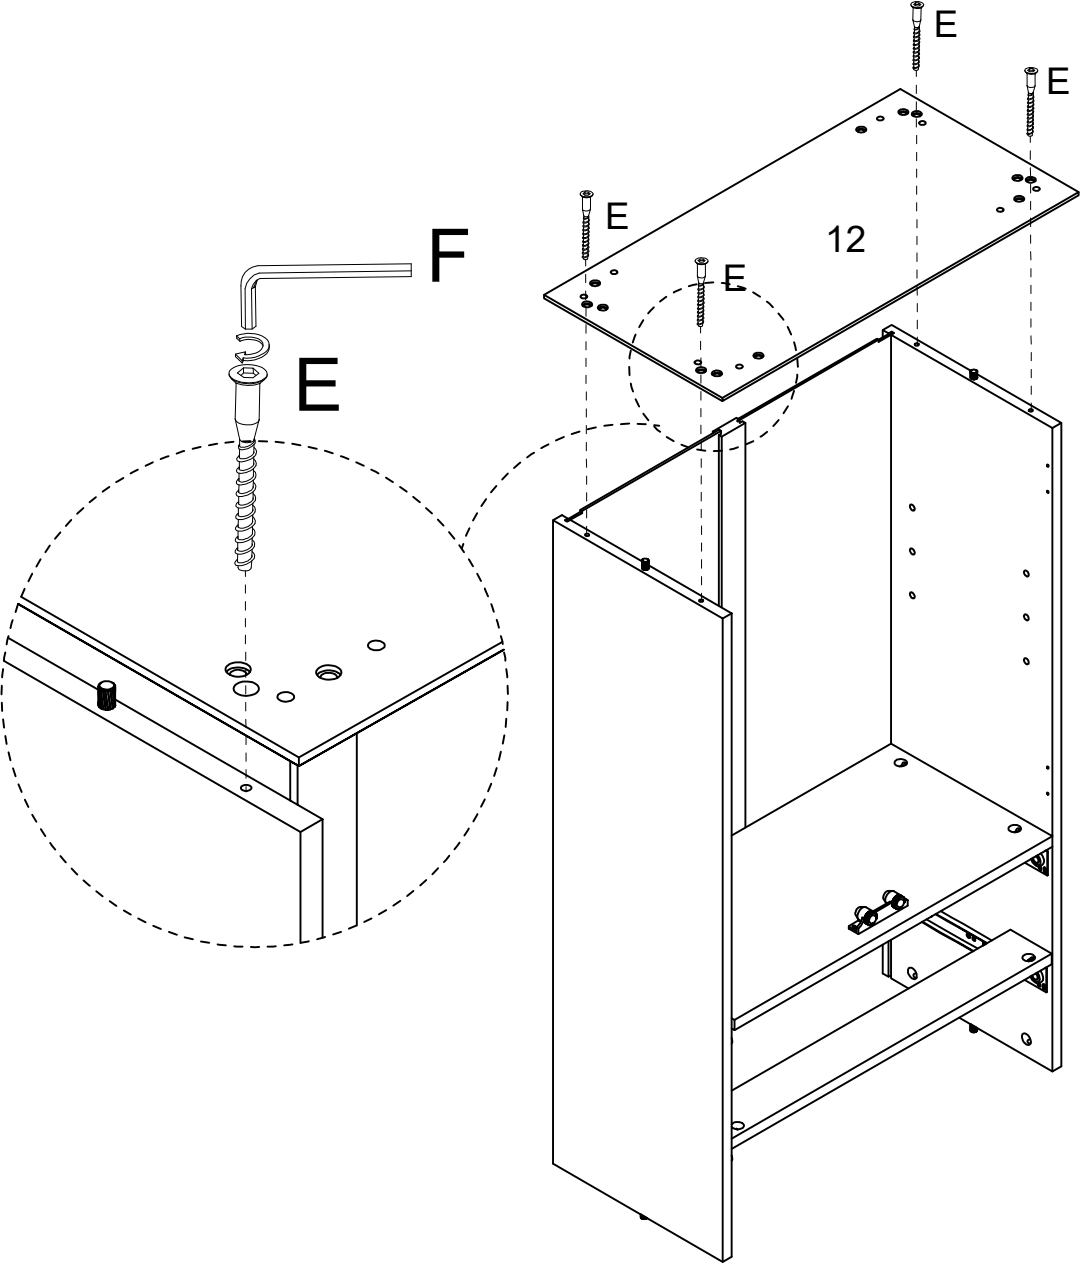


Step 19





F	E
	
X1	X4

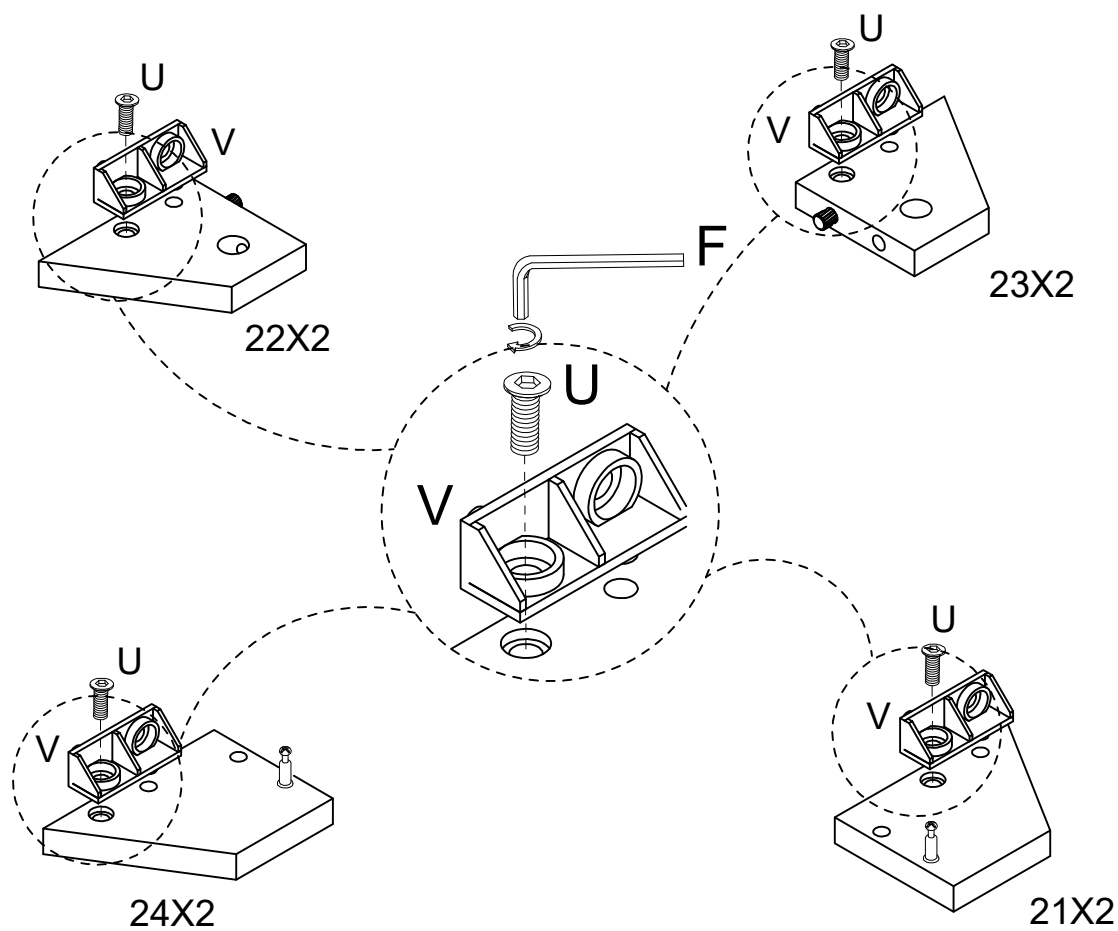
Step 20




F	V	U
		
X1	X8	X8

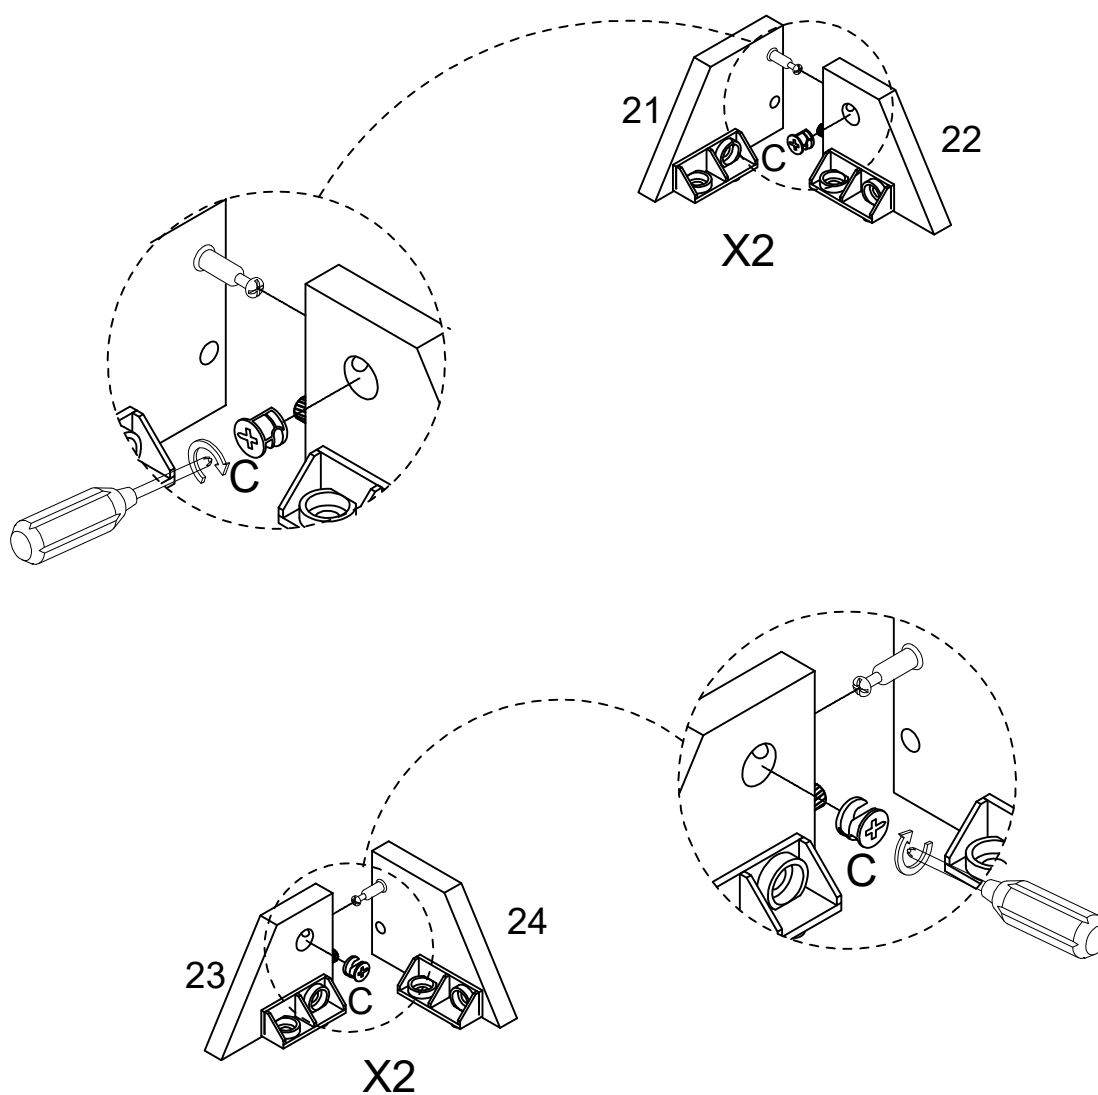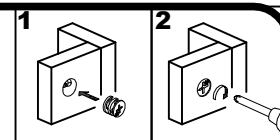

Step 21




C

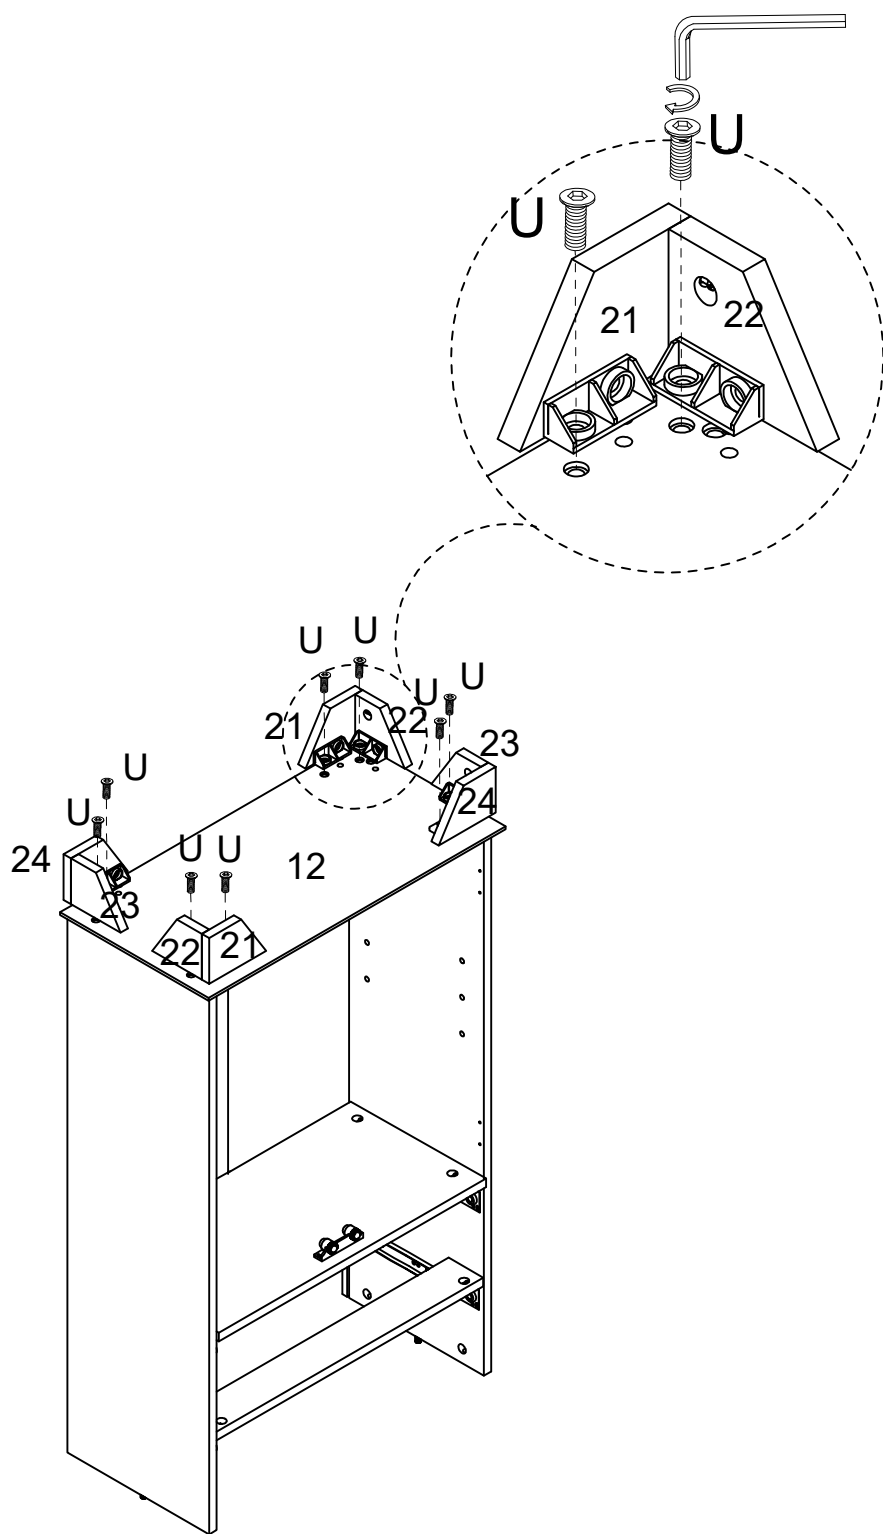X4

Step 22




F	U
	
X1	X8

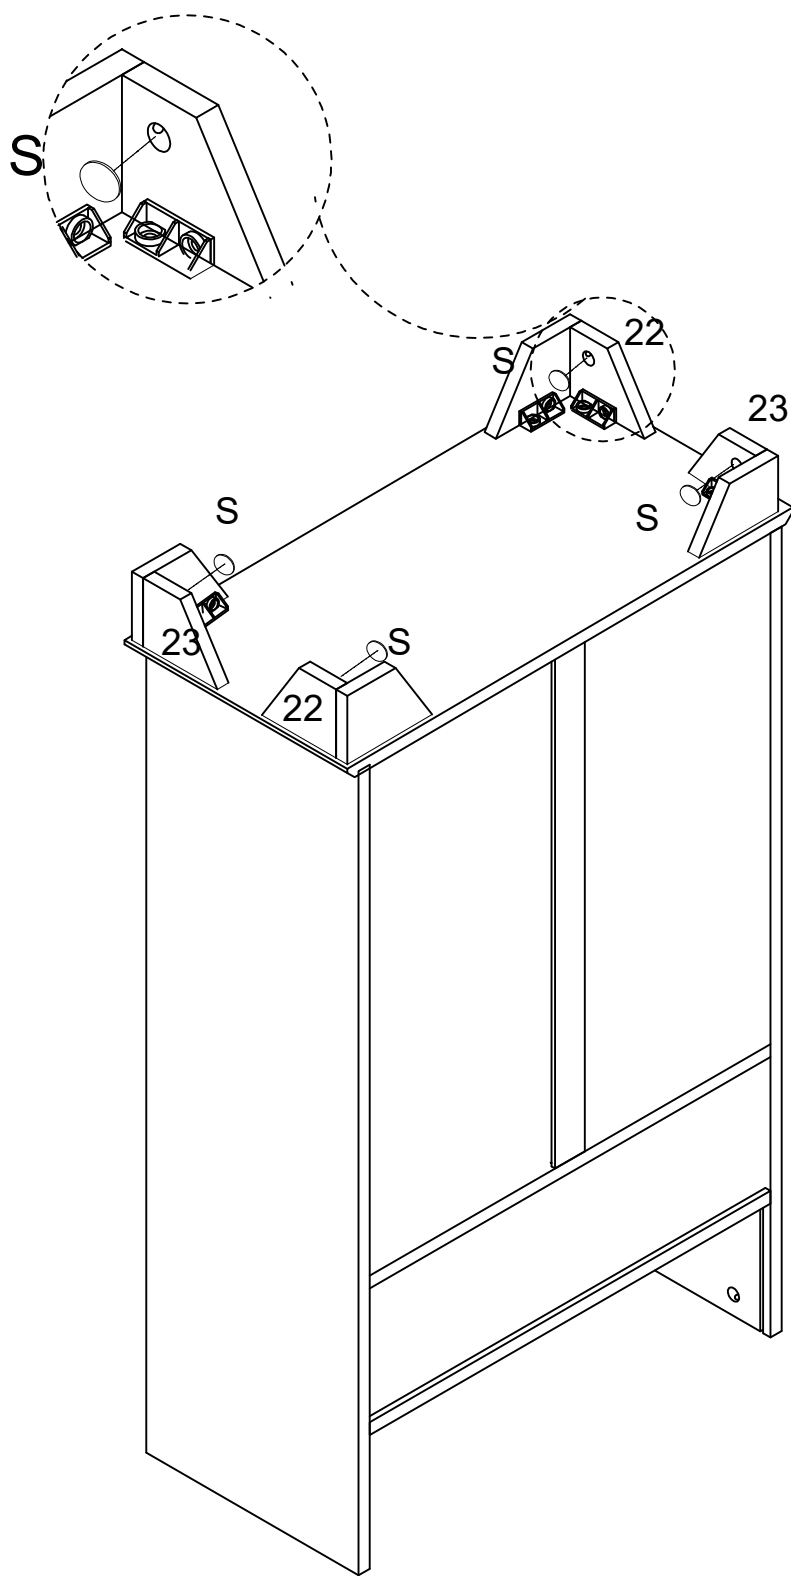Step 23






S
O
X4

Step 24

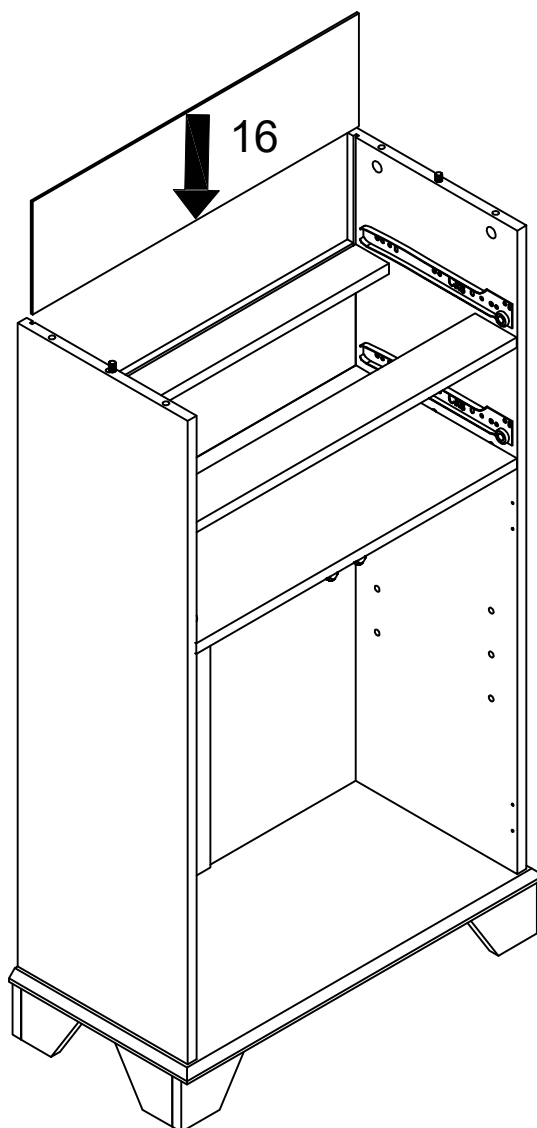


Step 25

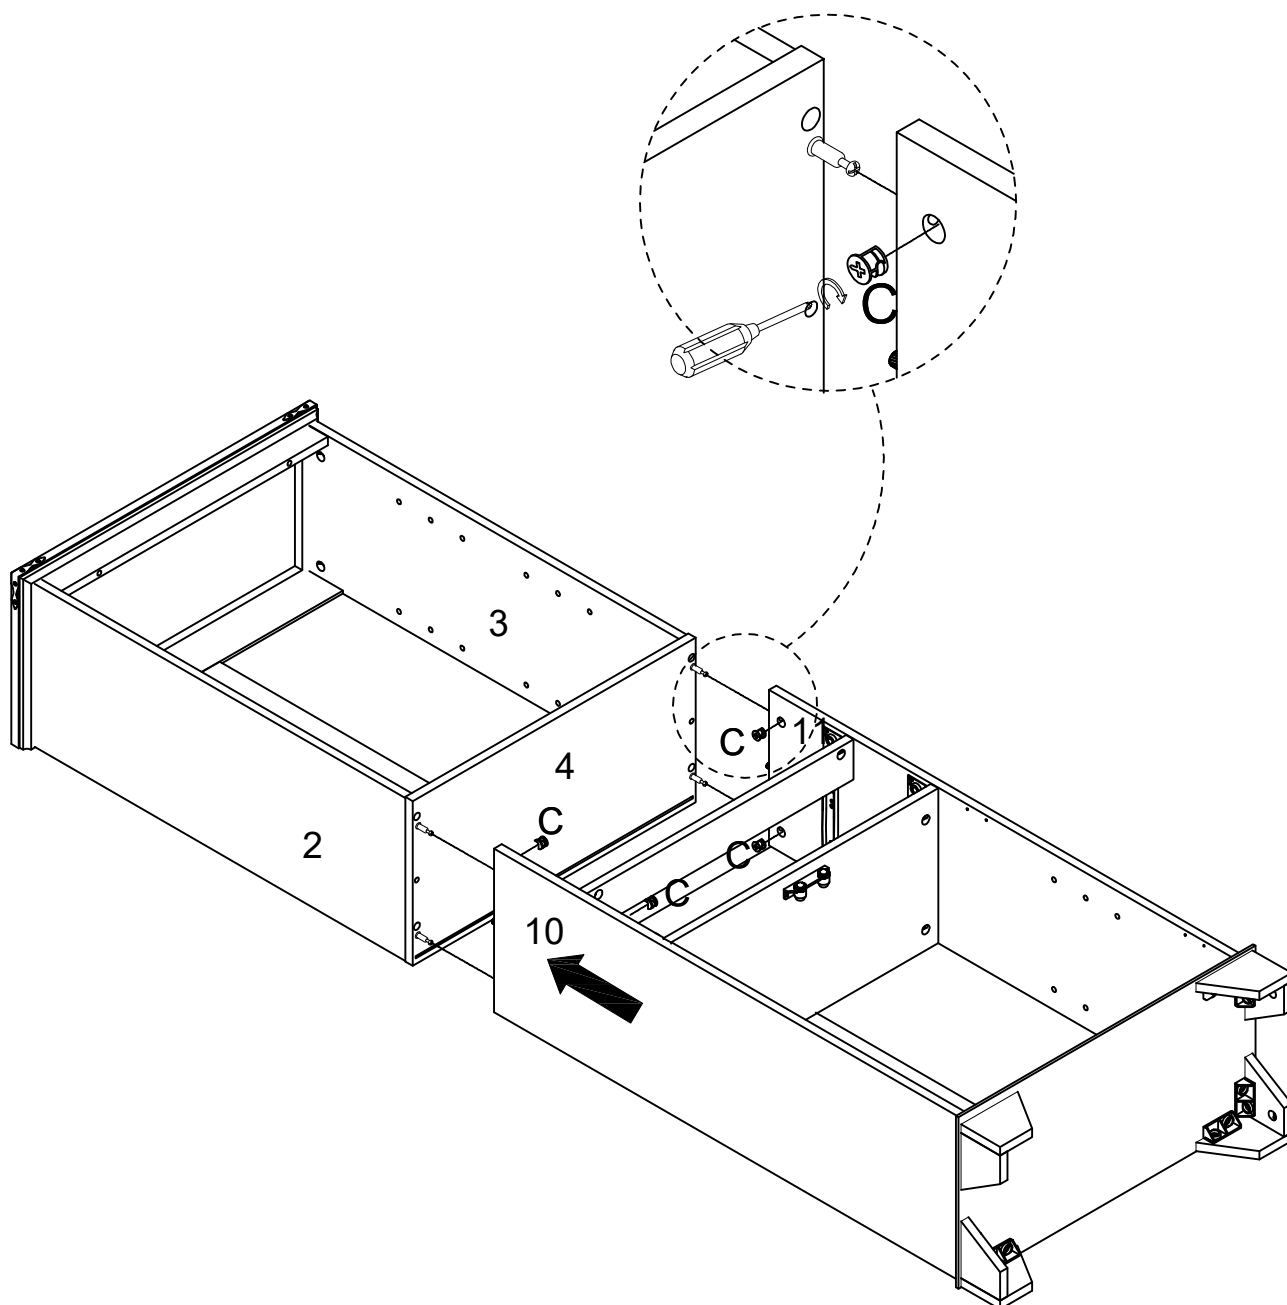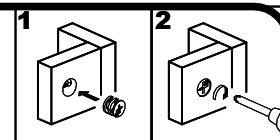


C

X4

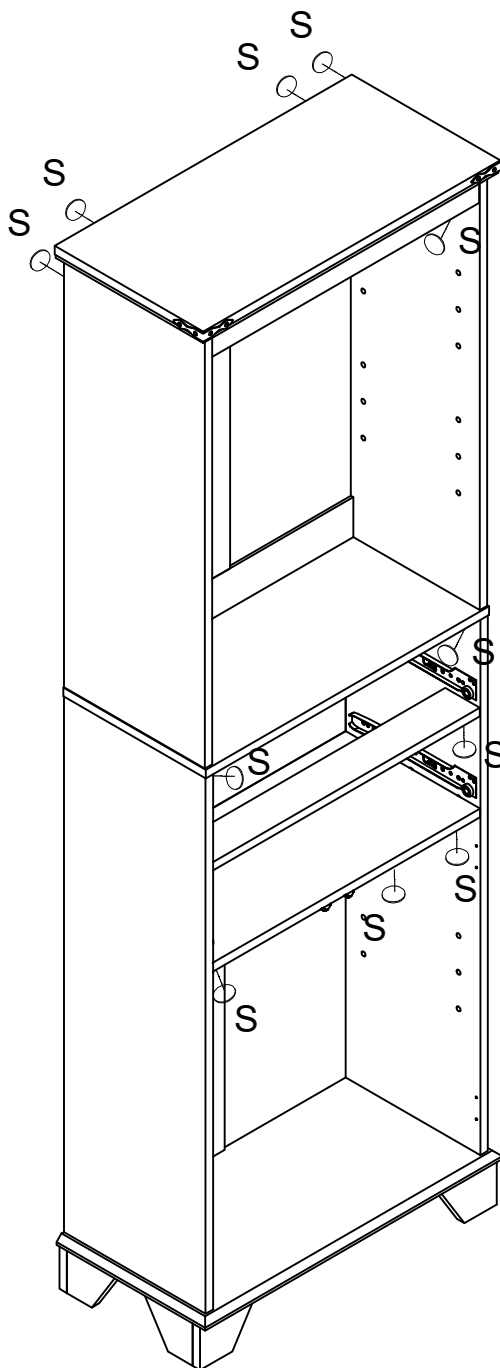
Step 26




S
O
X24

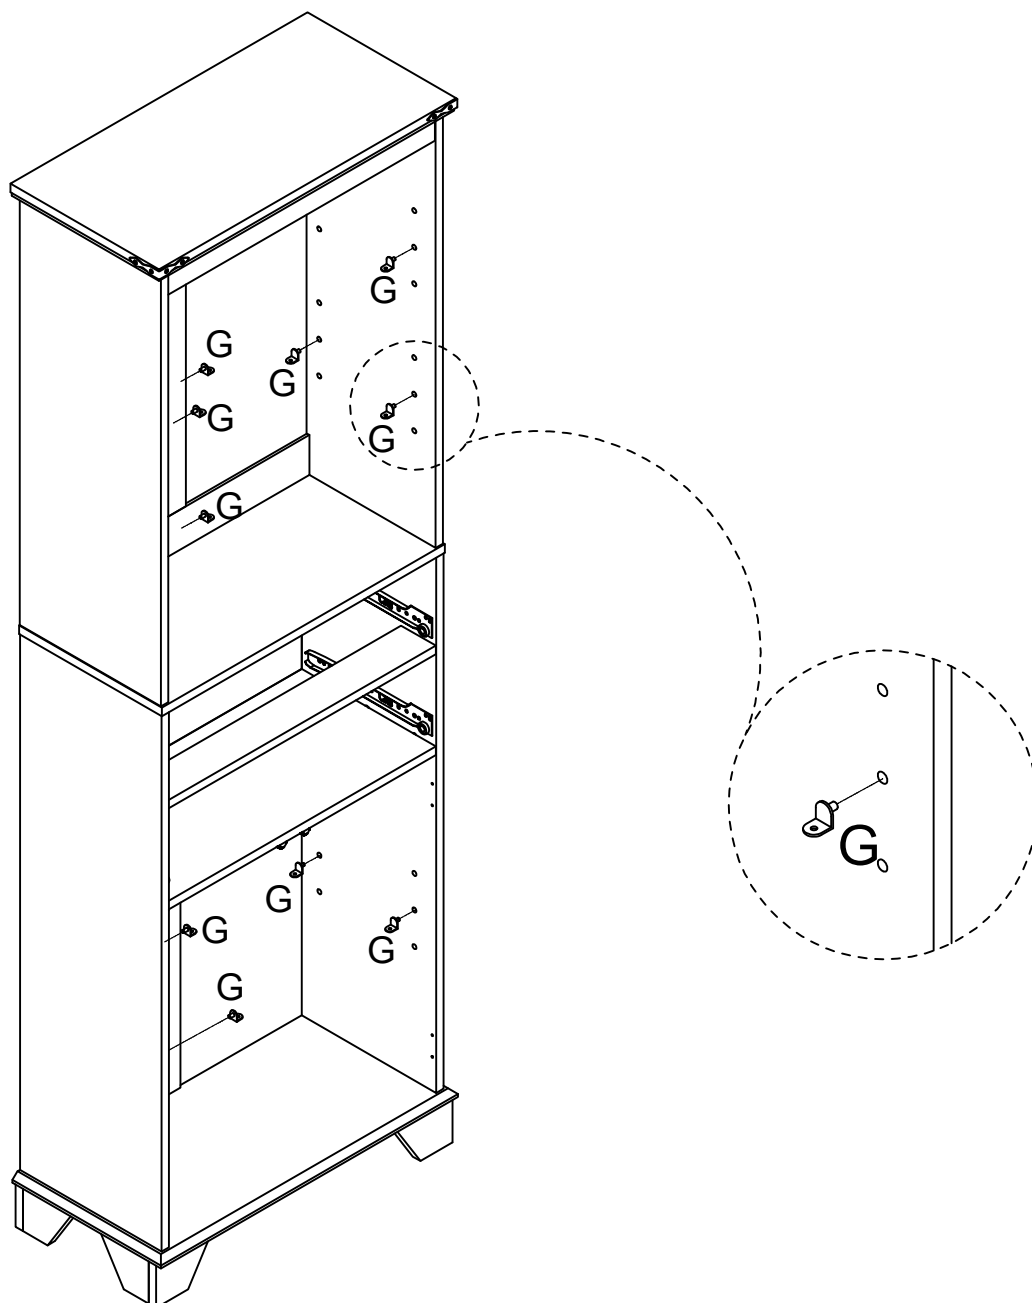Step 27




G

X12

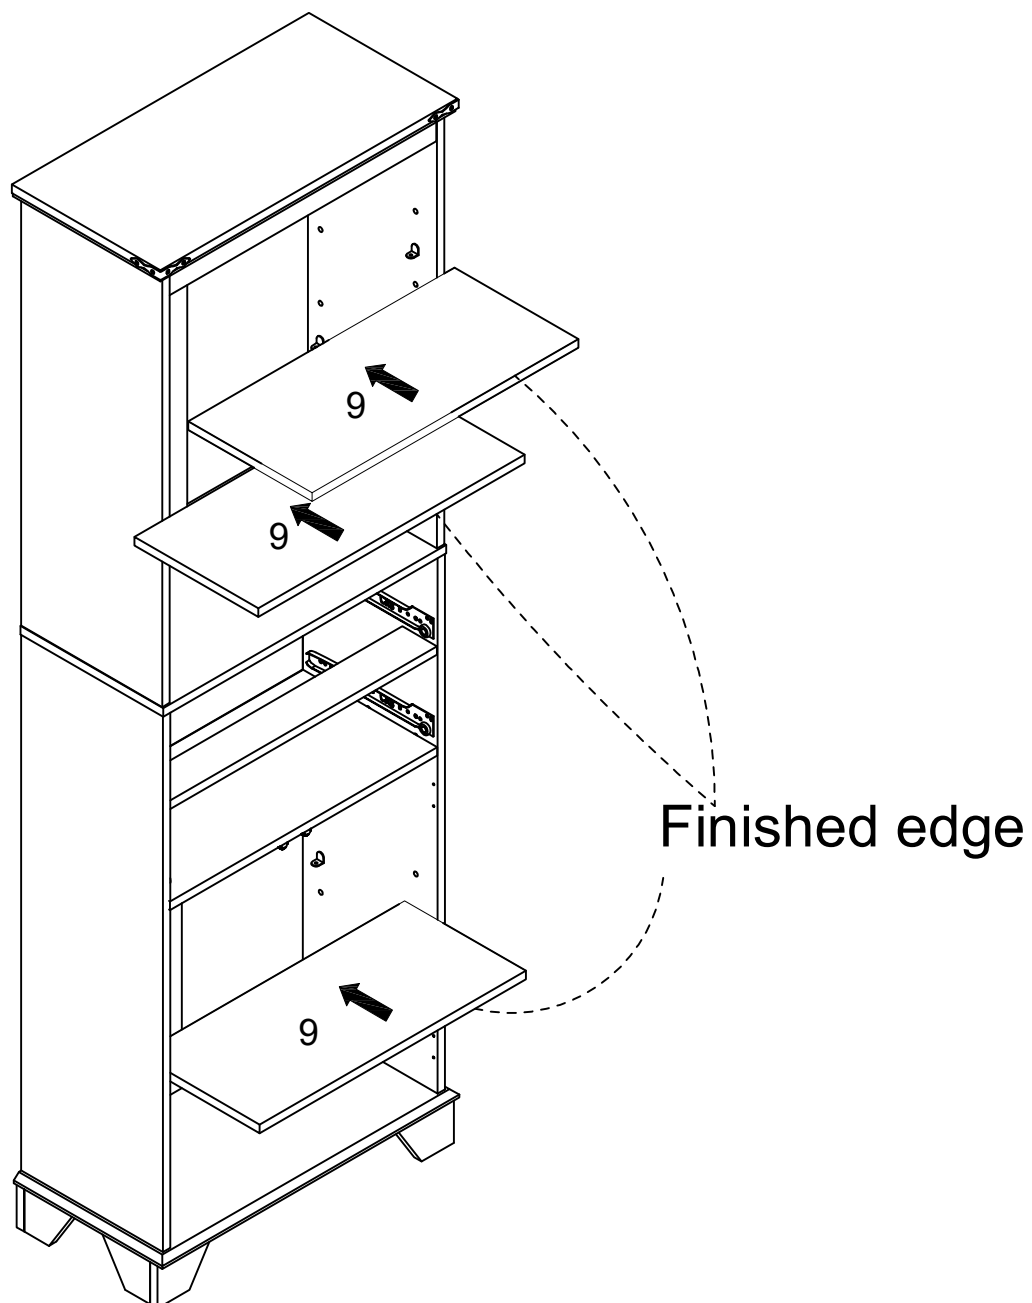
Step 28

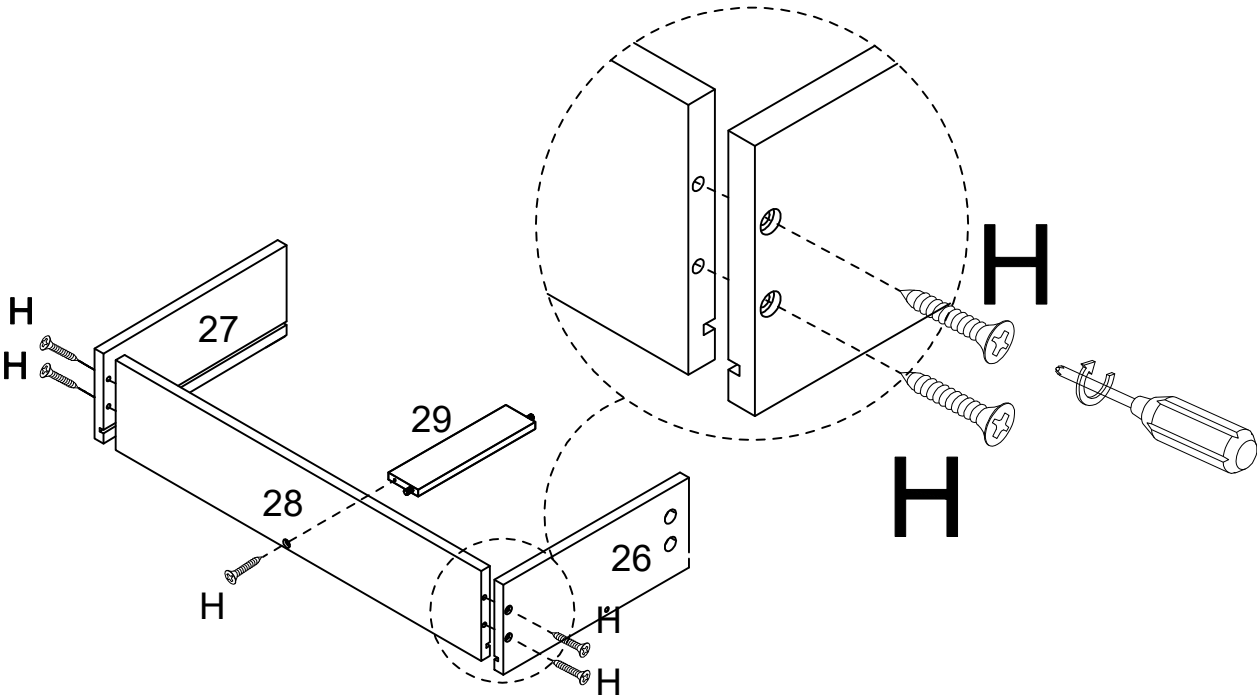


Step 29



x2



H

X10

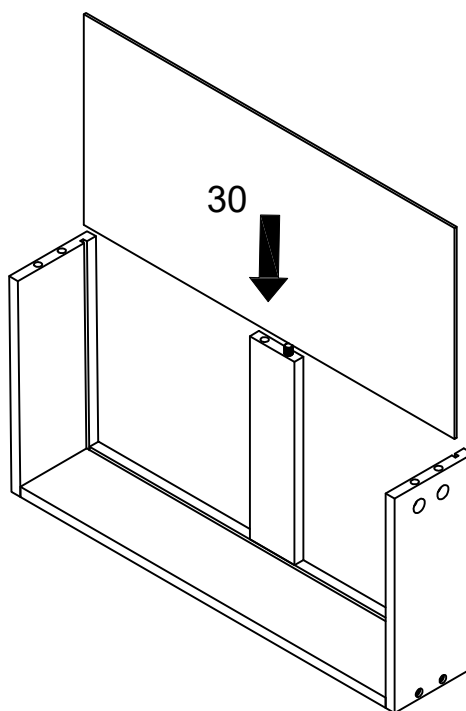
Step 30



x2

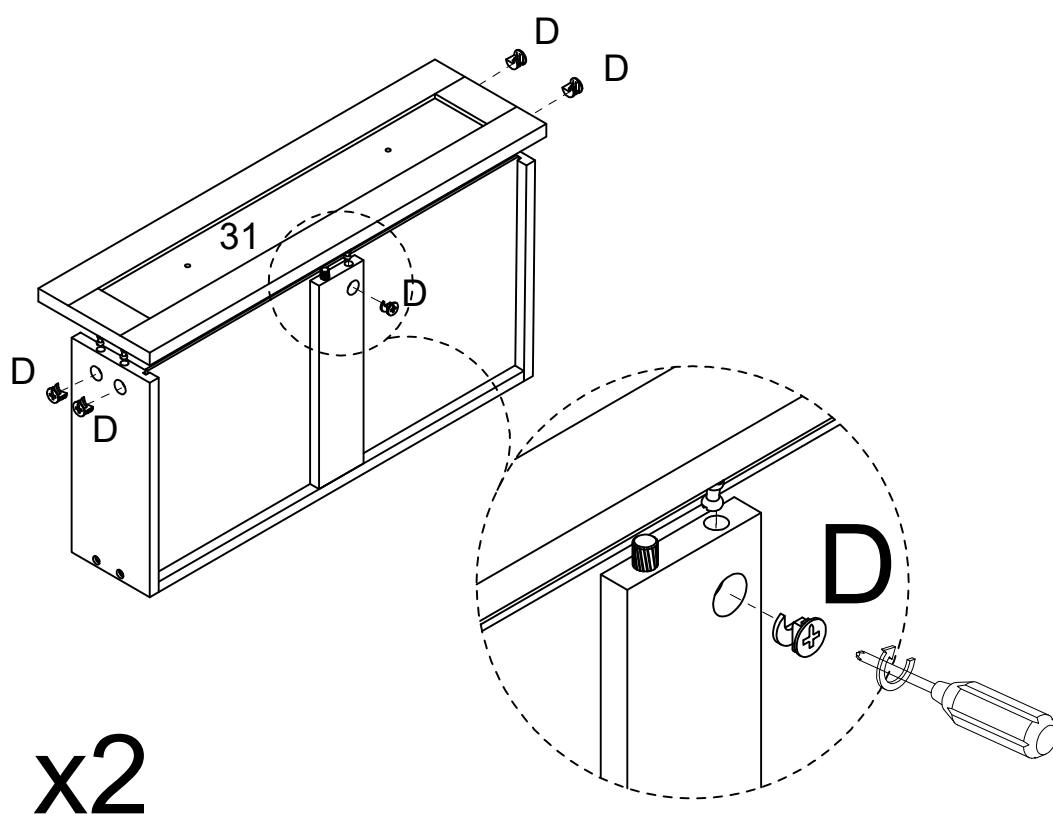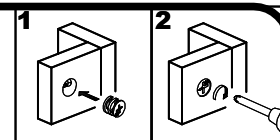Step 31




D

X10

Step 32

NOTE:

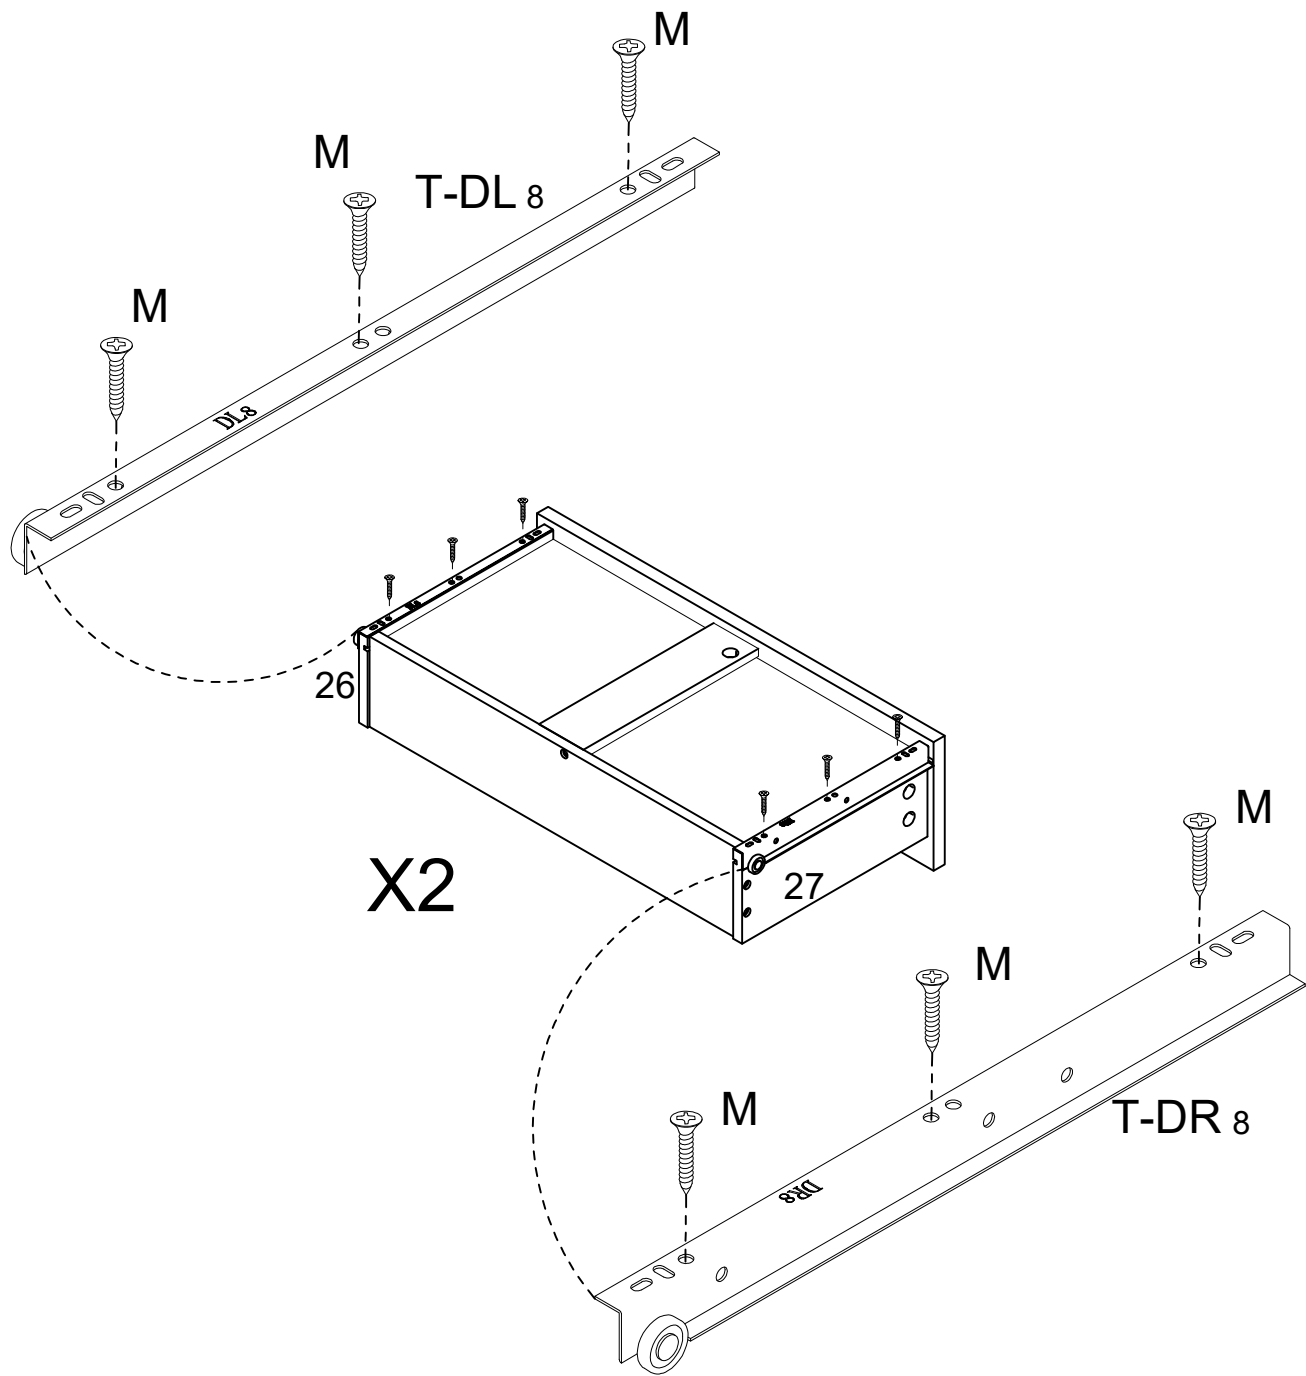


Refer to the images to identify T-DL8 (left) and T-DR8 (right). Attach T-DL8 to #26 panel and T-DR8 to #27 panel. [M] screws must go in the exact spots shown.




M	T
X12	X2

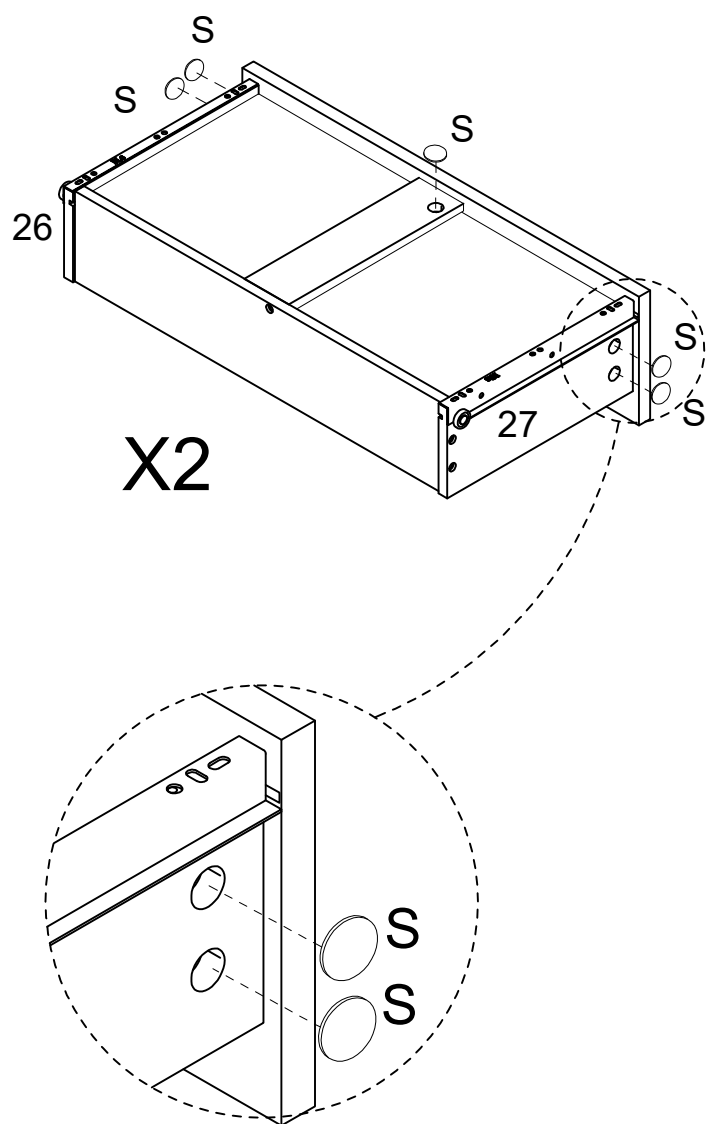

Step 33




S
O
X10

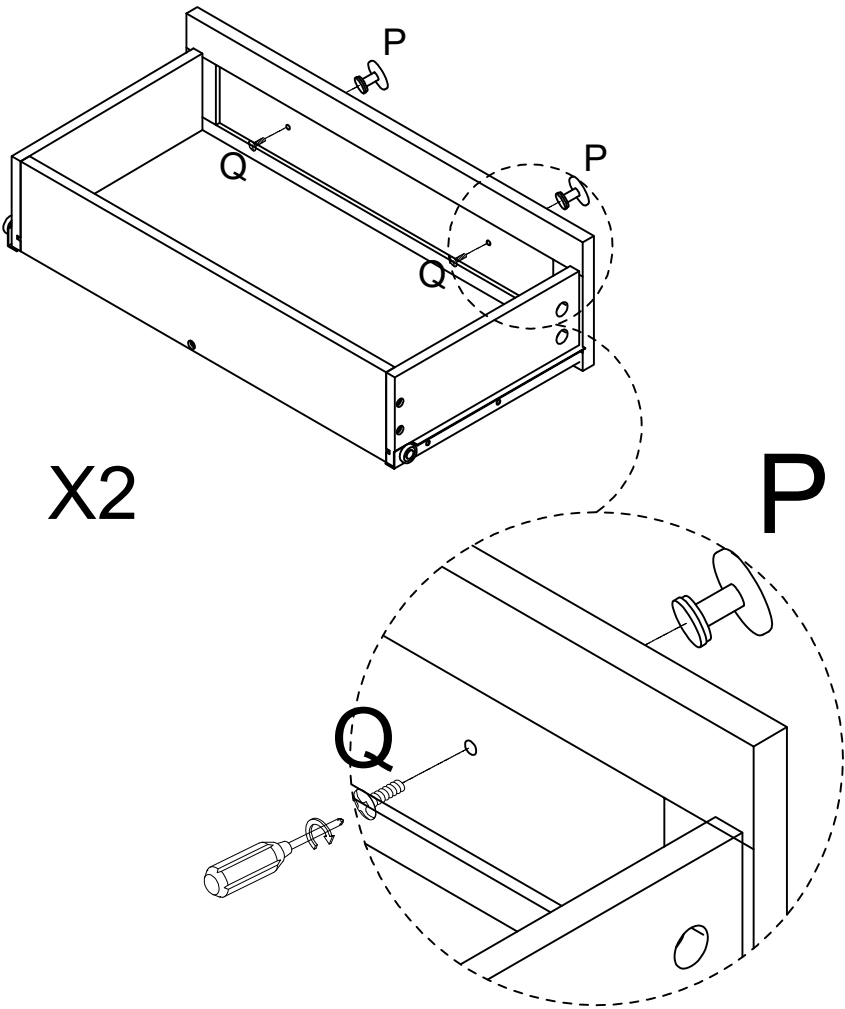Step 34






Q	P
	
X4	X4

Step 35

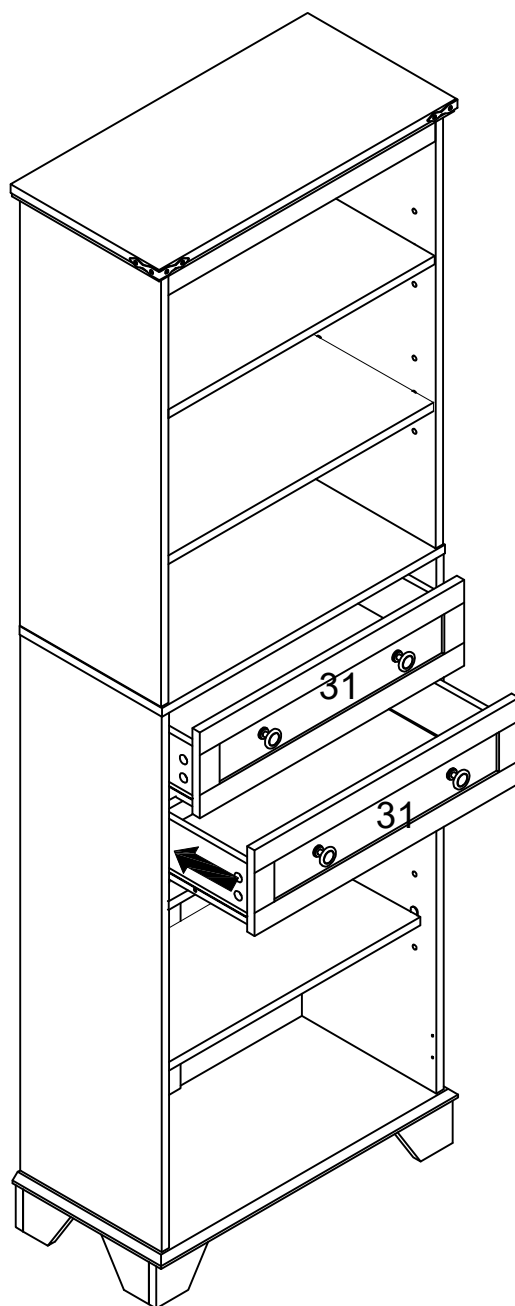



Step 36

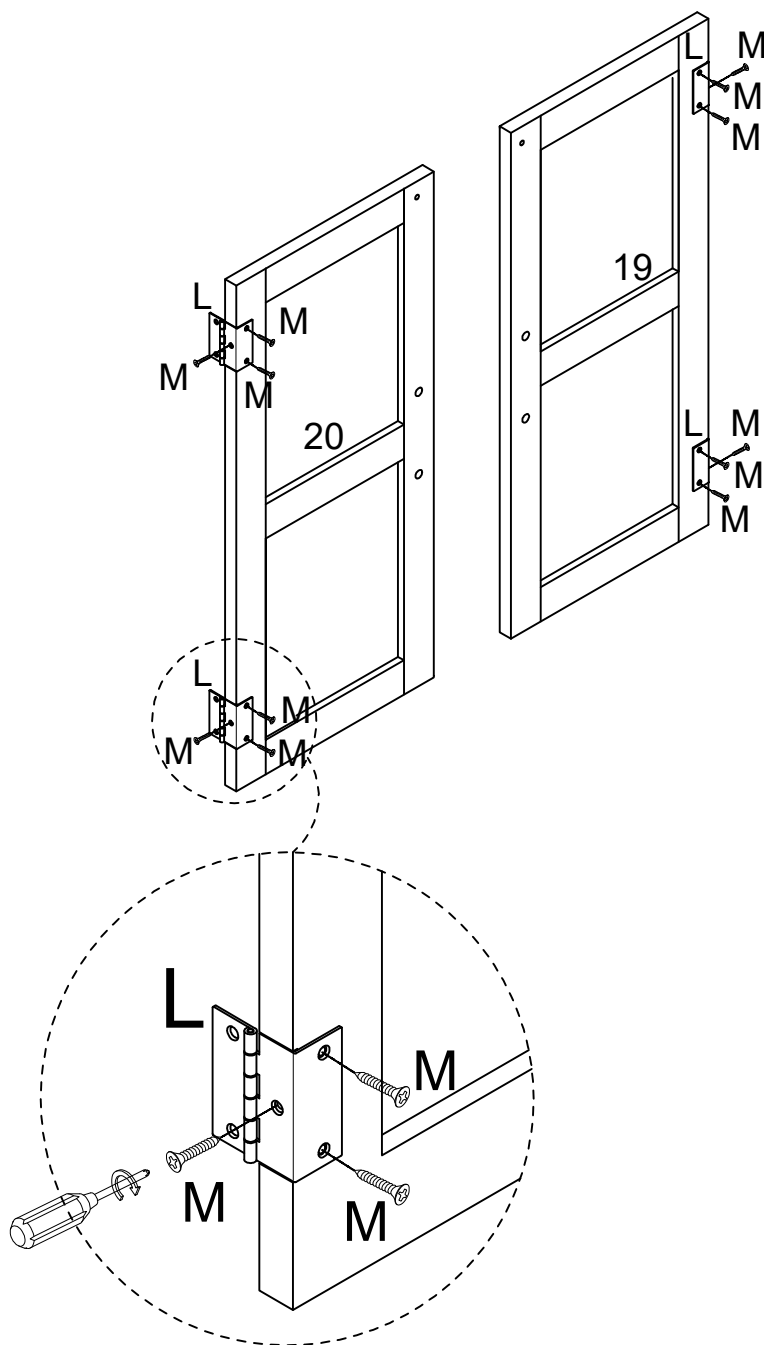


M	L
	
X12	X4

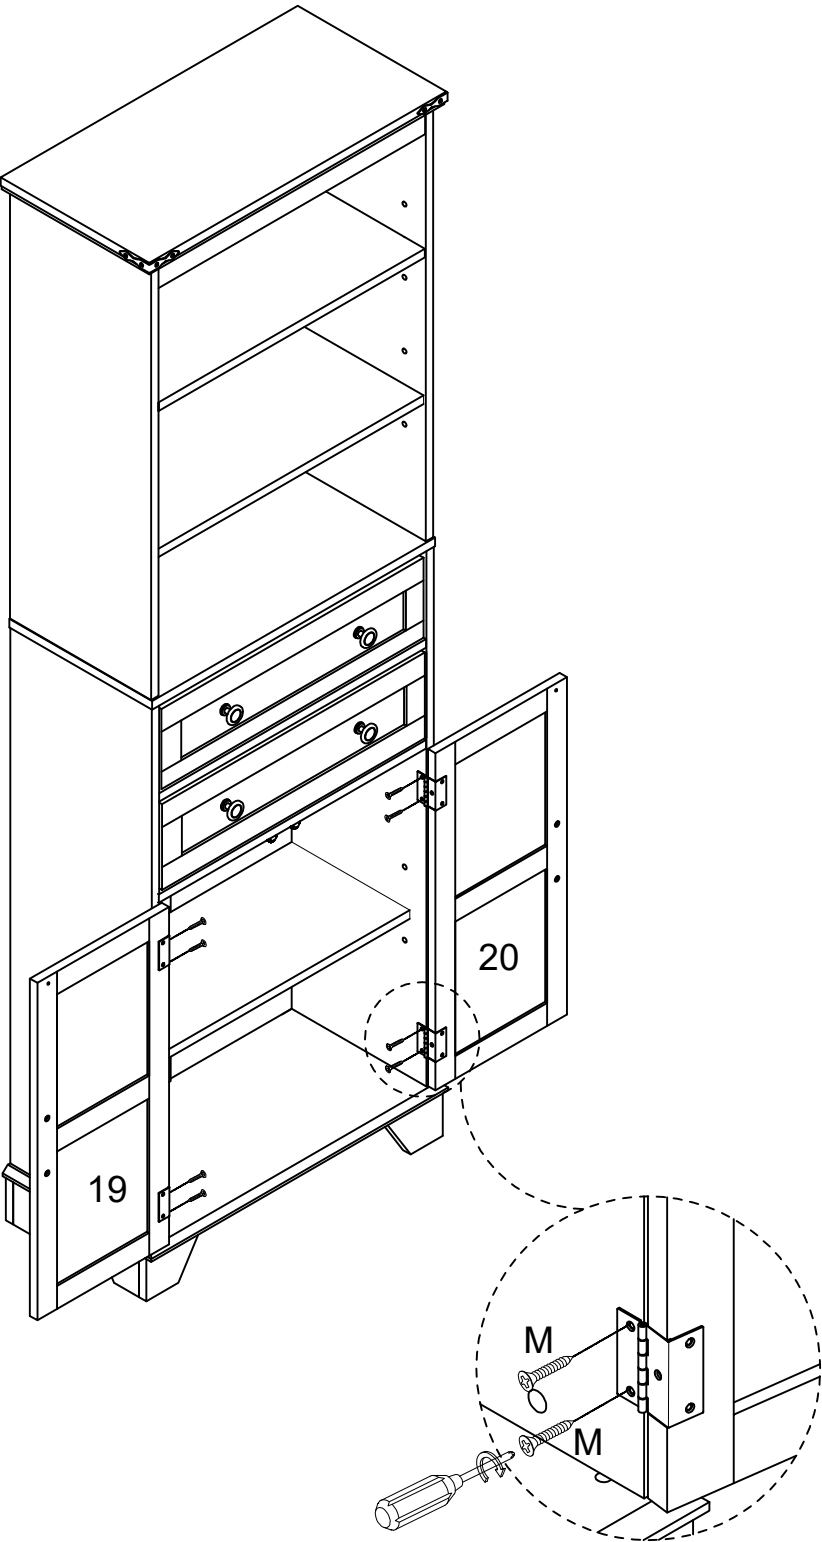


Step 37





M

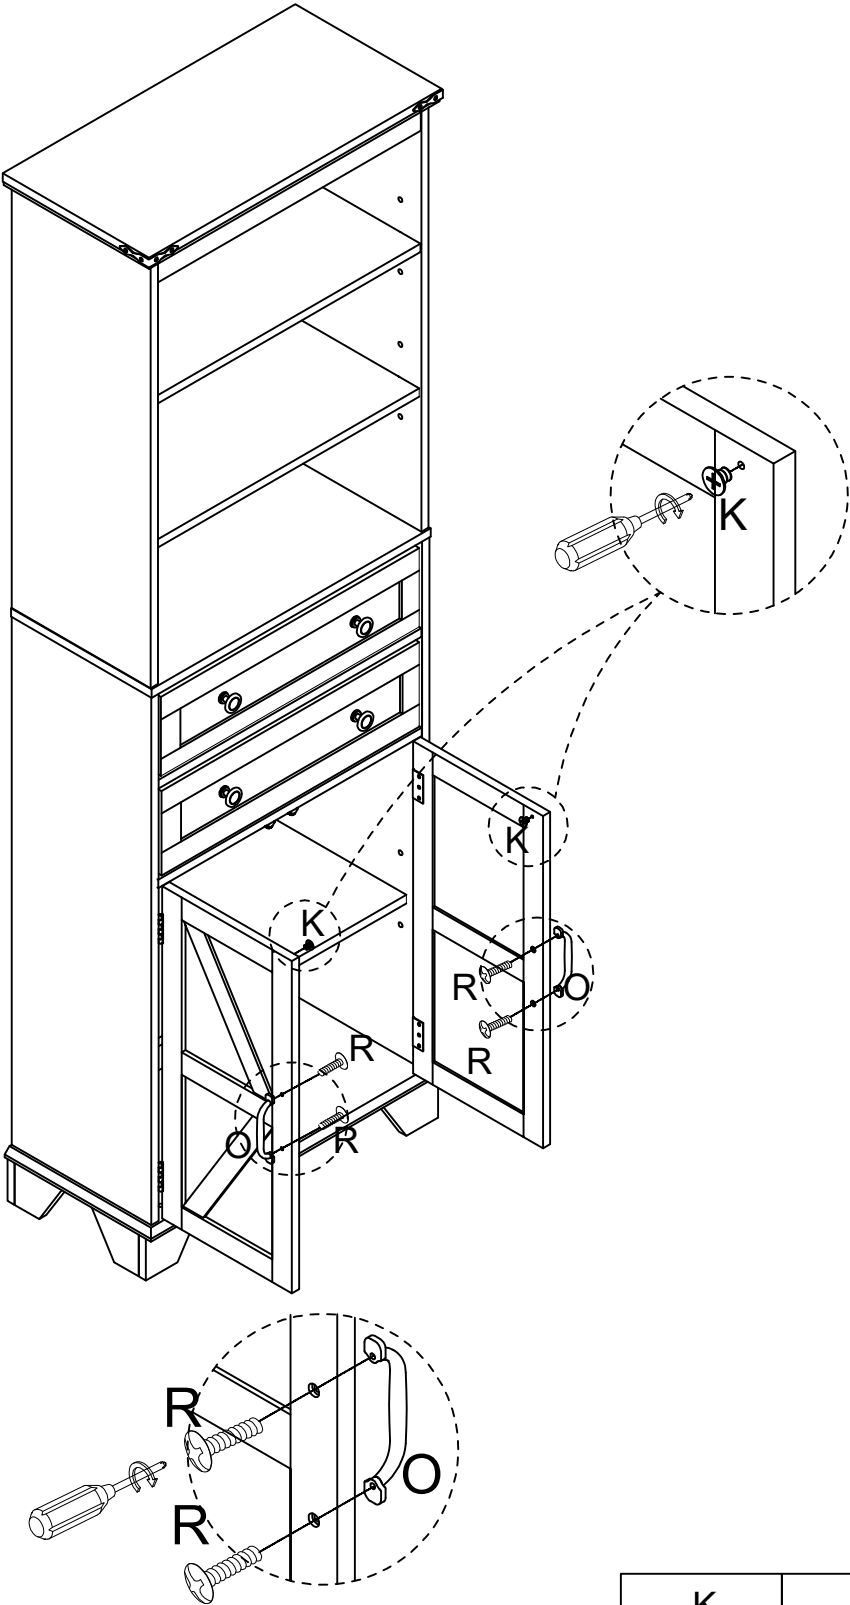X8



Step 38

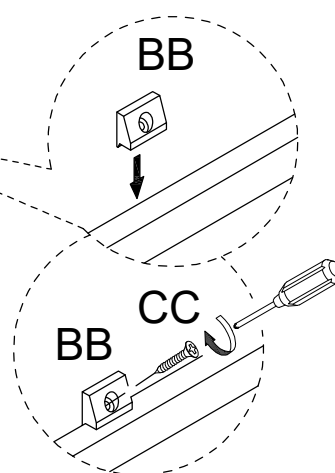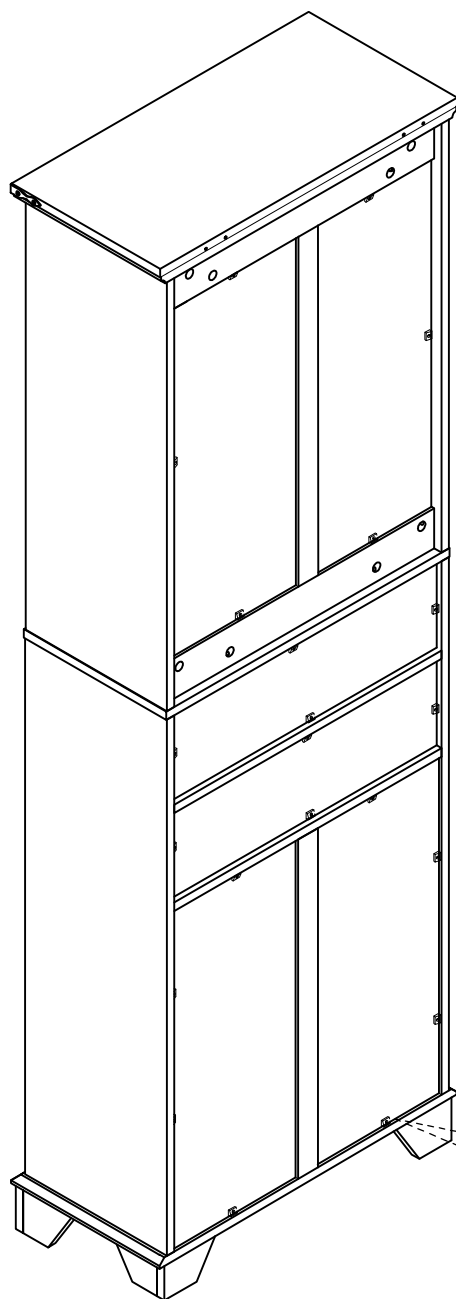


K	R	O
		
X2	X4	X2



Step 39



CC	BB
	
X22	X22


Step 40

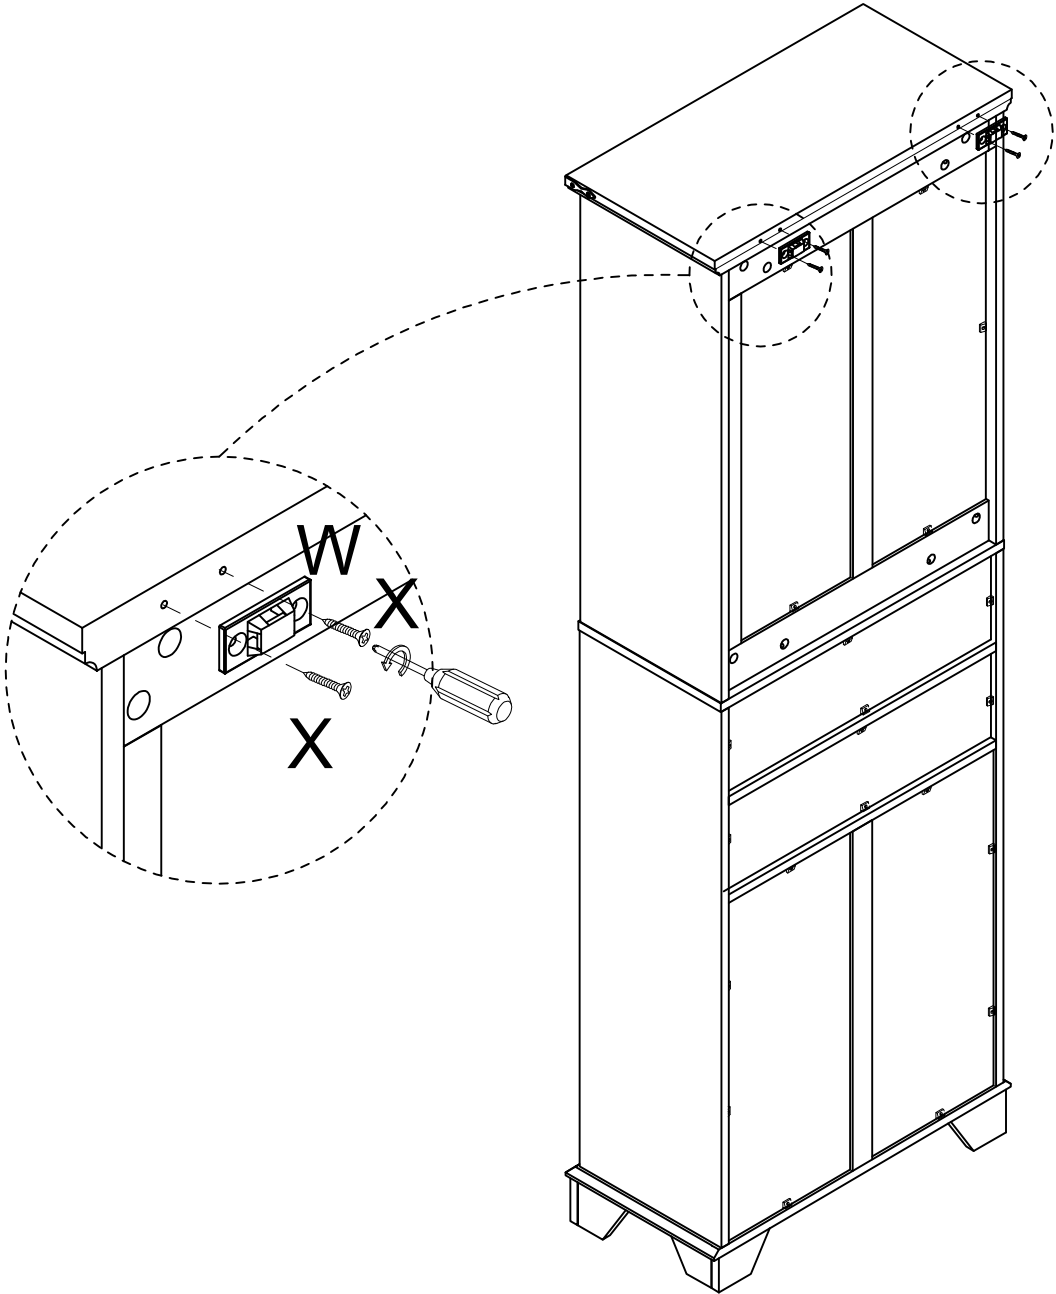


W	X
	
X2	X4


Step 41

Make Four holes 45MM deep


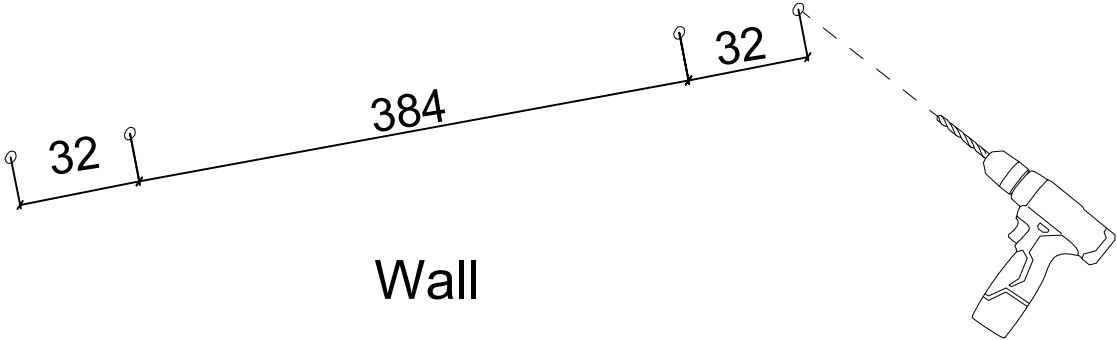


Step 42

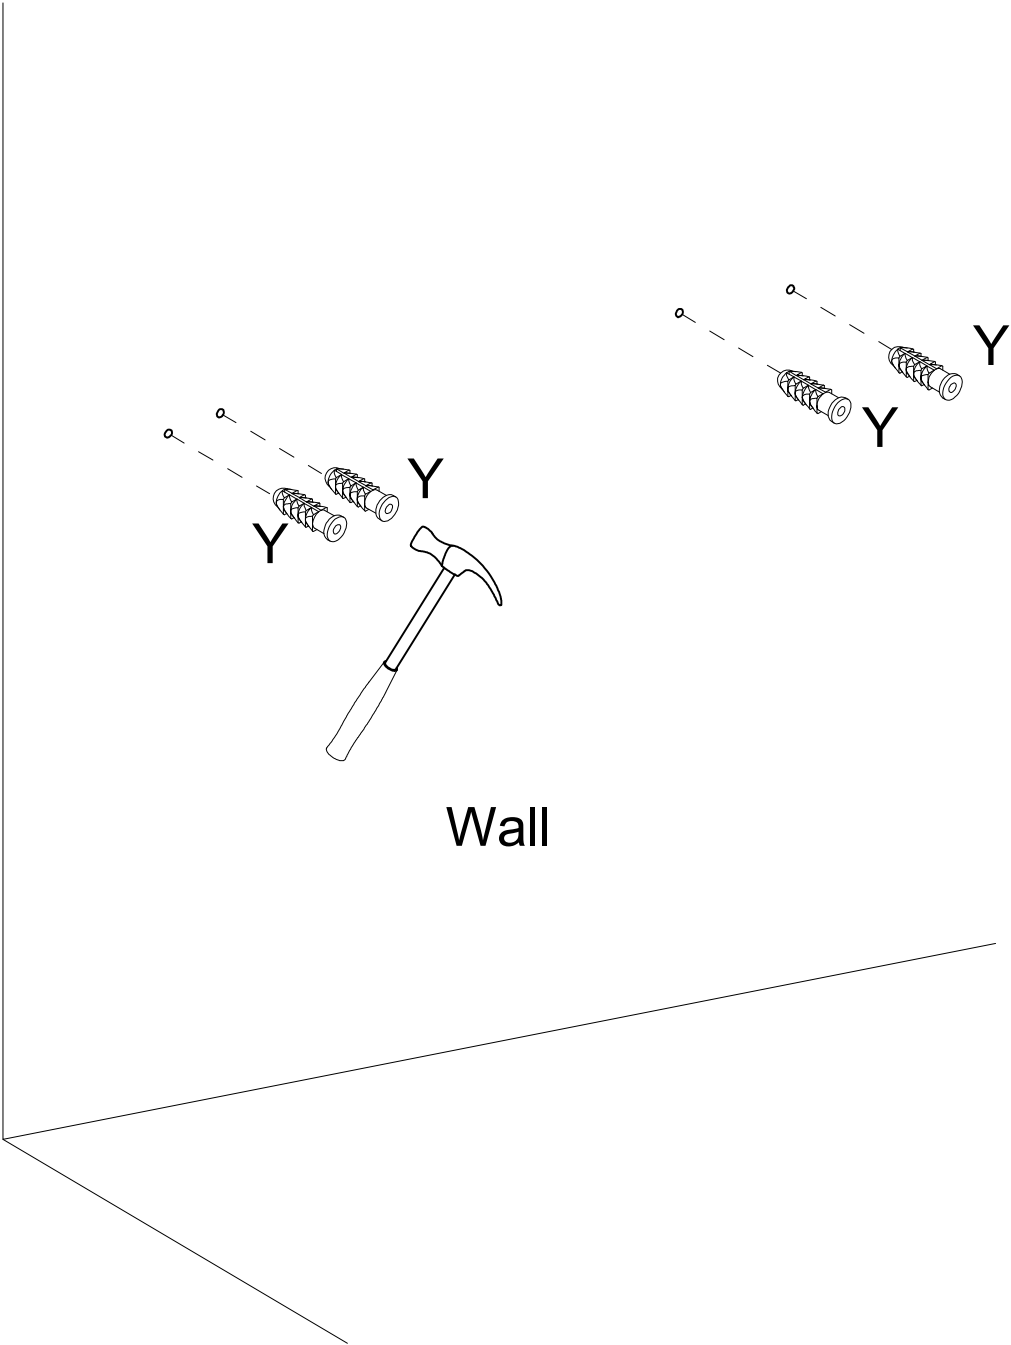



Y

X4

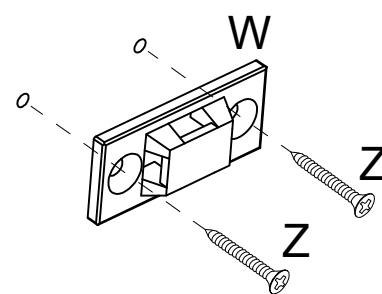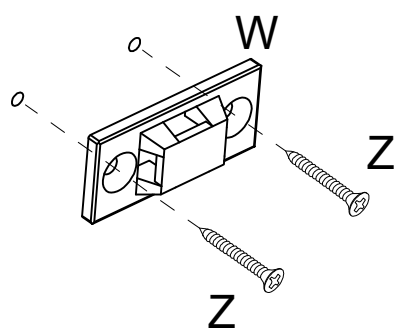
Step 43



Wall

W	Z
	
X2	X4

Step 44

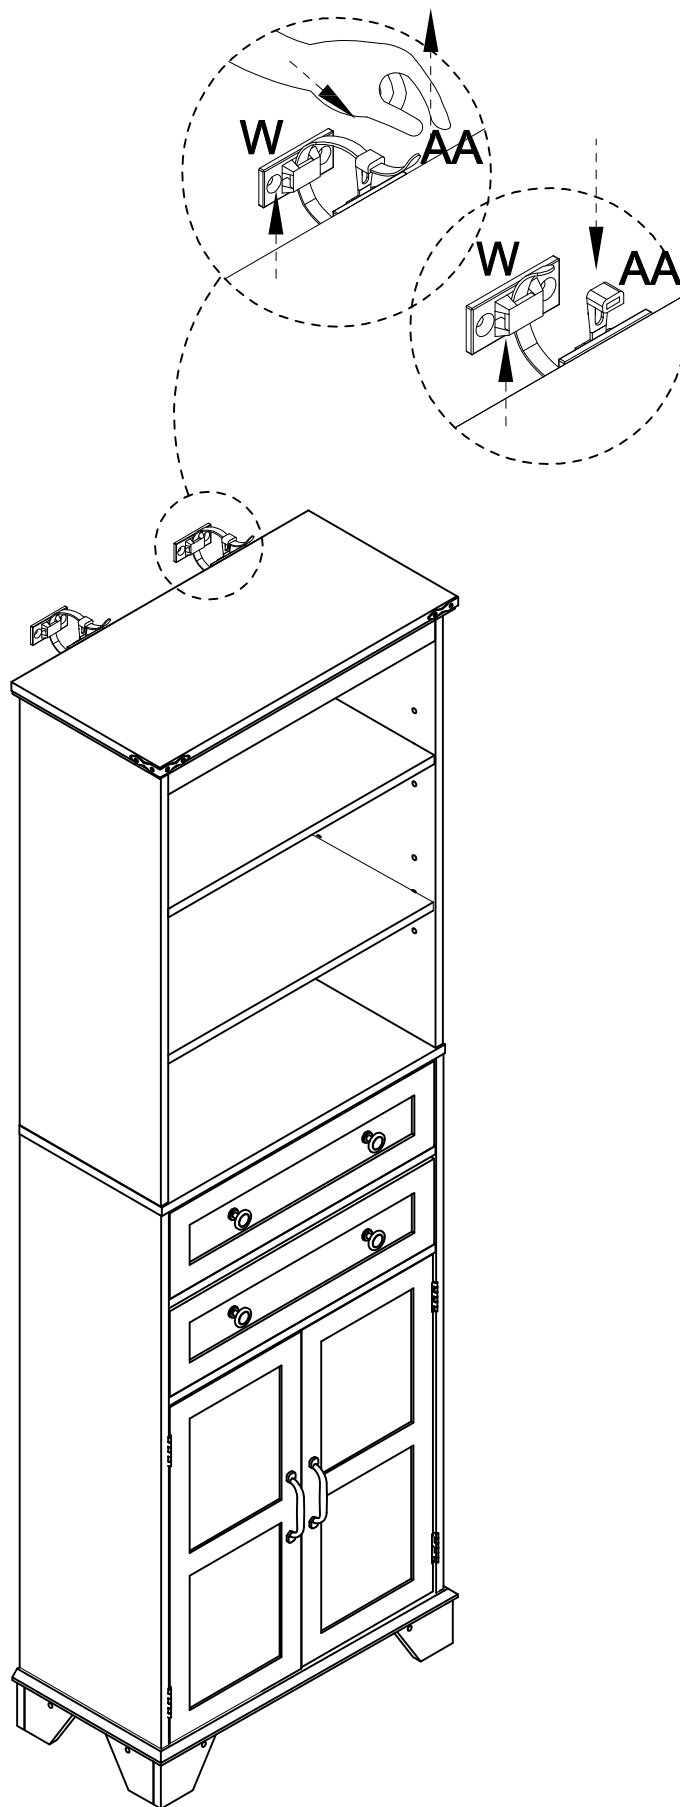

AA



X2

Step 45

