


Item # : LM057-67

Assembly Instructions

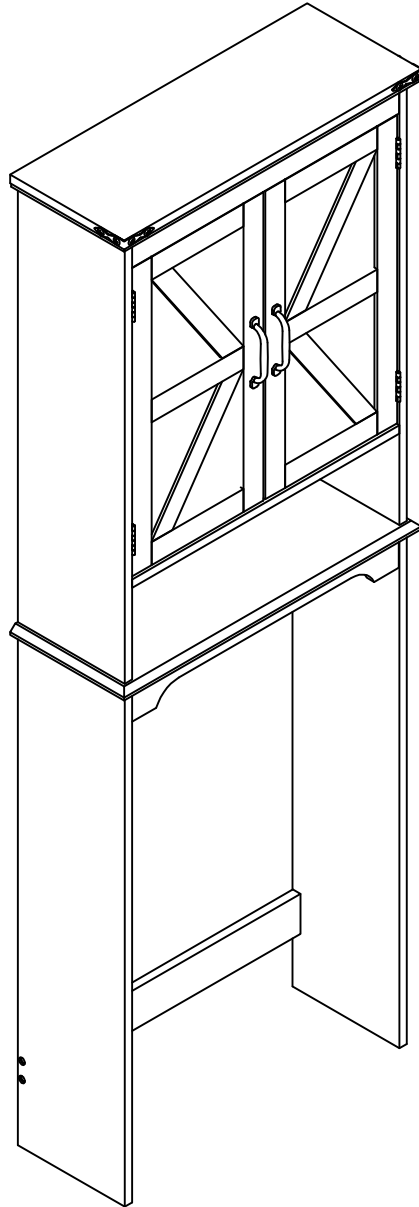


If you have any questions, please follow these steps(“Find Your Orders” – “Problem with the Order” – “Contact Seller”) to contact our customer service. Thanks!


Revsied 20/04/2024

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

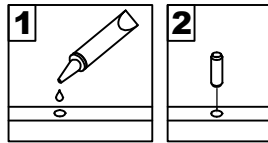


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

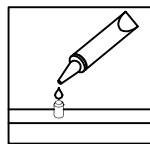


- VI. A Phillips head screwdriver is required for the assembly of this product .

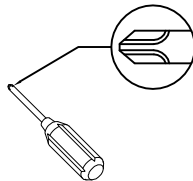





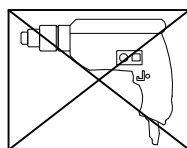





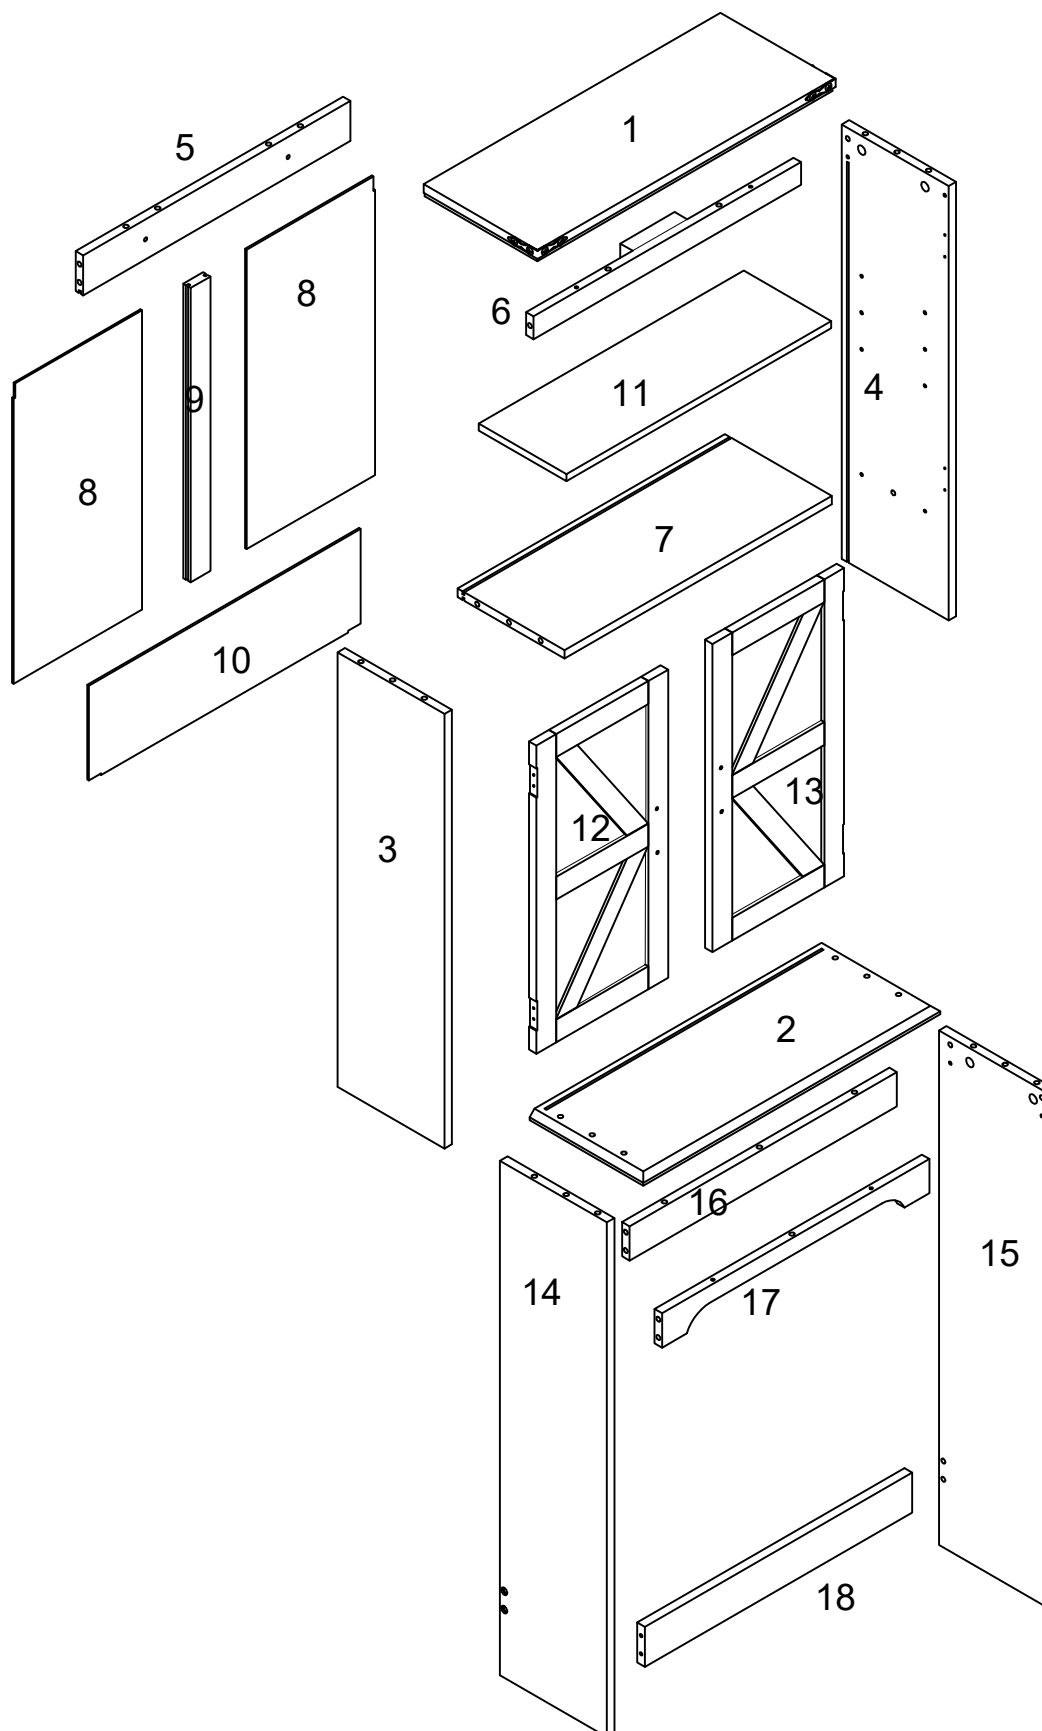










- VII. Power tools should not be used to assemble this product .




Parts List



Hardware List


A		Ø8x30mm	Wooden dowel	20 pcs
B		Ø6x35mm	Cam bolt	24 pcs
C		Ø15x11mm	Cam lock	24 pcs
D		Ø30mm	Sticker	24 pcs
E		Ø6x50mm	Screw	8 pcs
F		M 4	Hex Key	1 pc
G			Door stopper	1 pc
H		Ø3x15mm	Screw	2 pcs
I			Screw	2 pcs
J		Ø5x13x26mm	Shelf holder	4 pcs
K		Ø4x45mm	Screw	2 pcs
L		Ø4x32mm	Screw	2 pcs
M		Ø3x12mm	Screw	20 pcs
N			Three fold hinge	4 Set
O			Handle	2 pcs
Q		Ø4x19mm	Bolt	4 pcs
R			Plastic wedge	12 pcs
S		Ø3x17mm	Screw	12 pcs
T		Ø5x55mm	Screw	2 pcs
U		Ø7x40mm	House lizard	2 pcs
V			Glue tube	1 pc

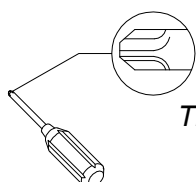


Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*


Step 1

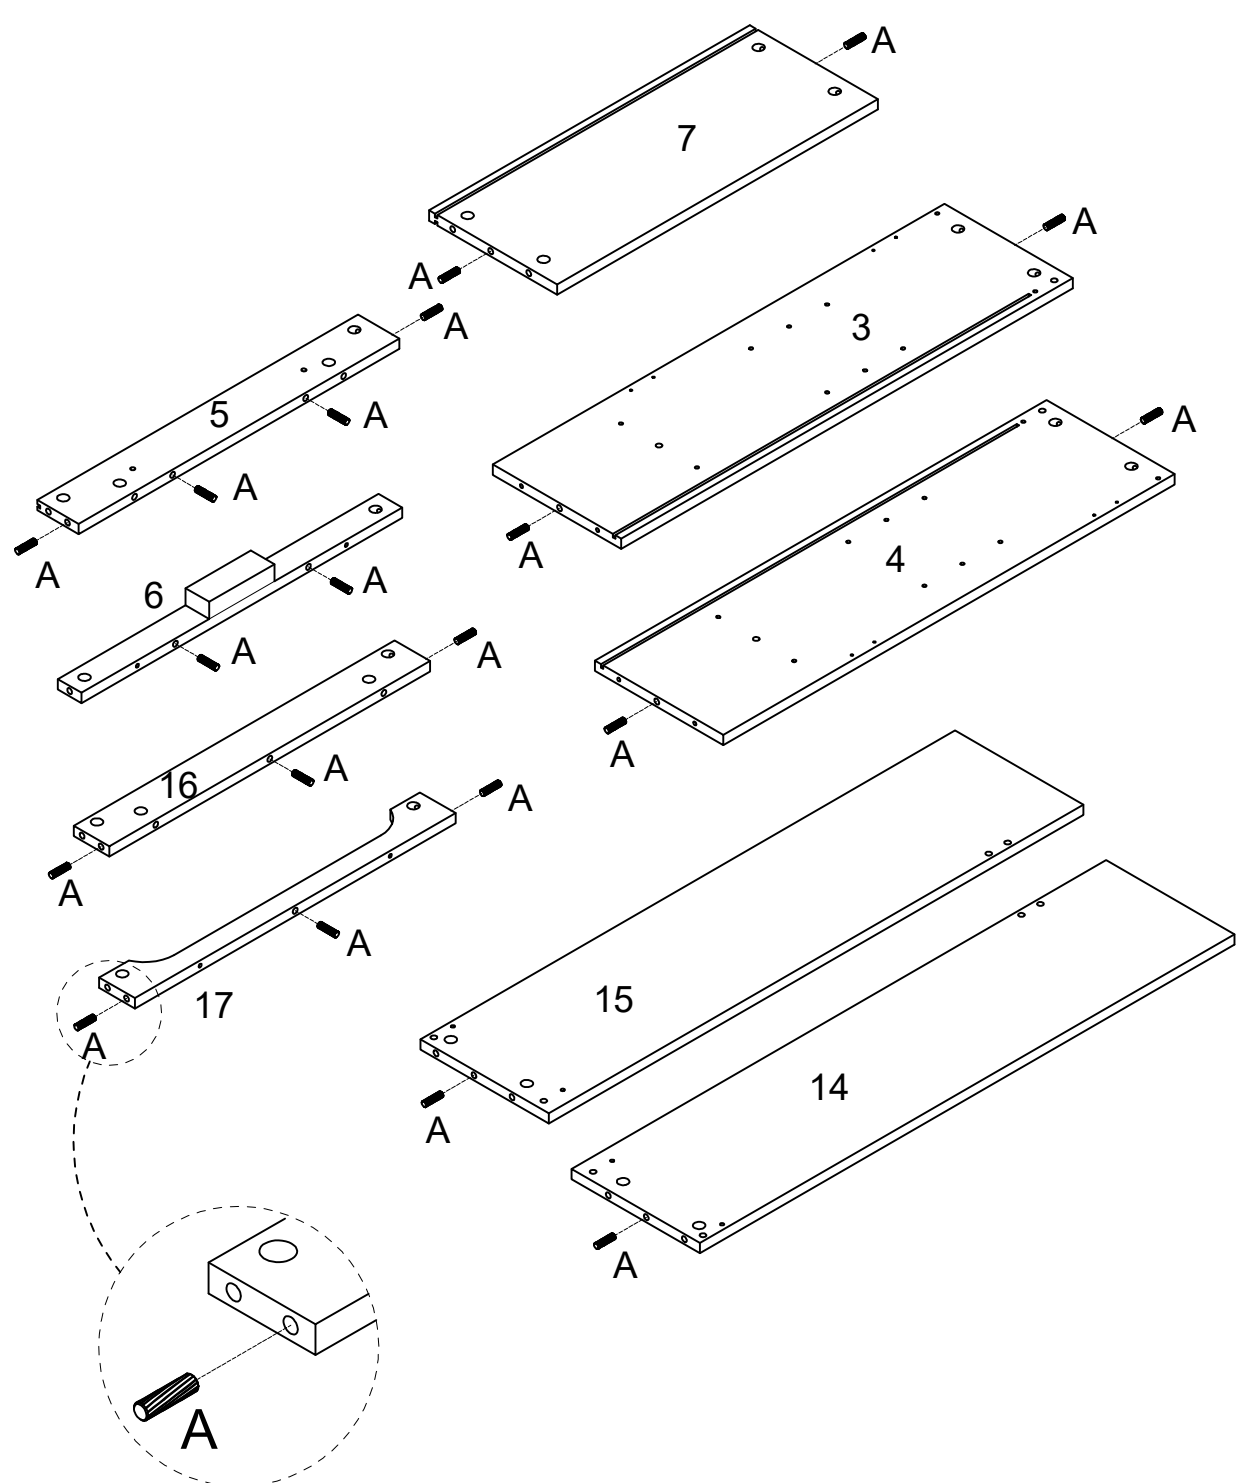


A

X20

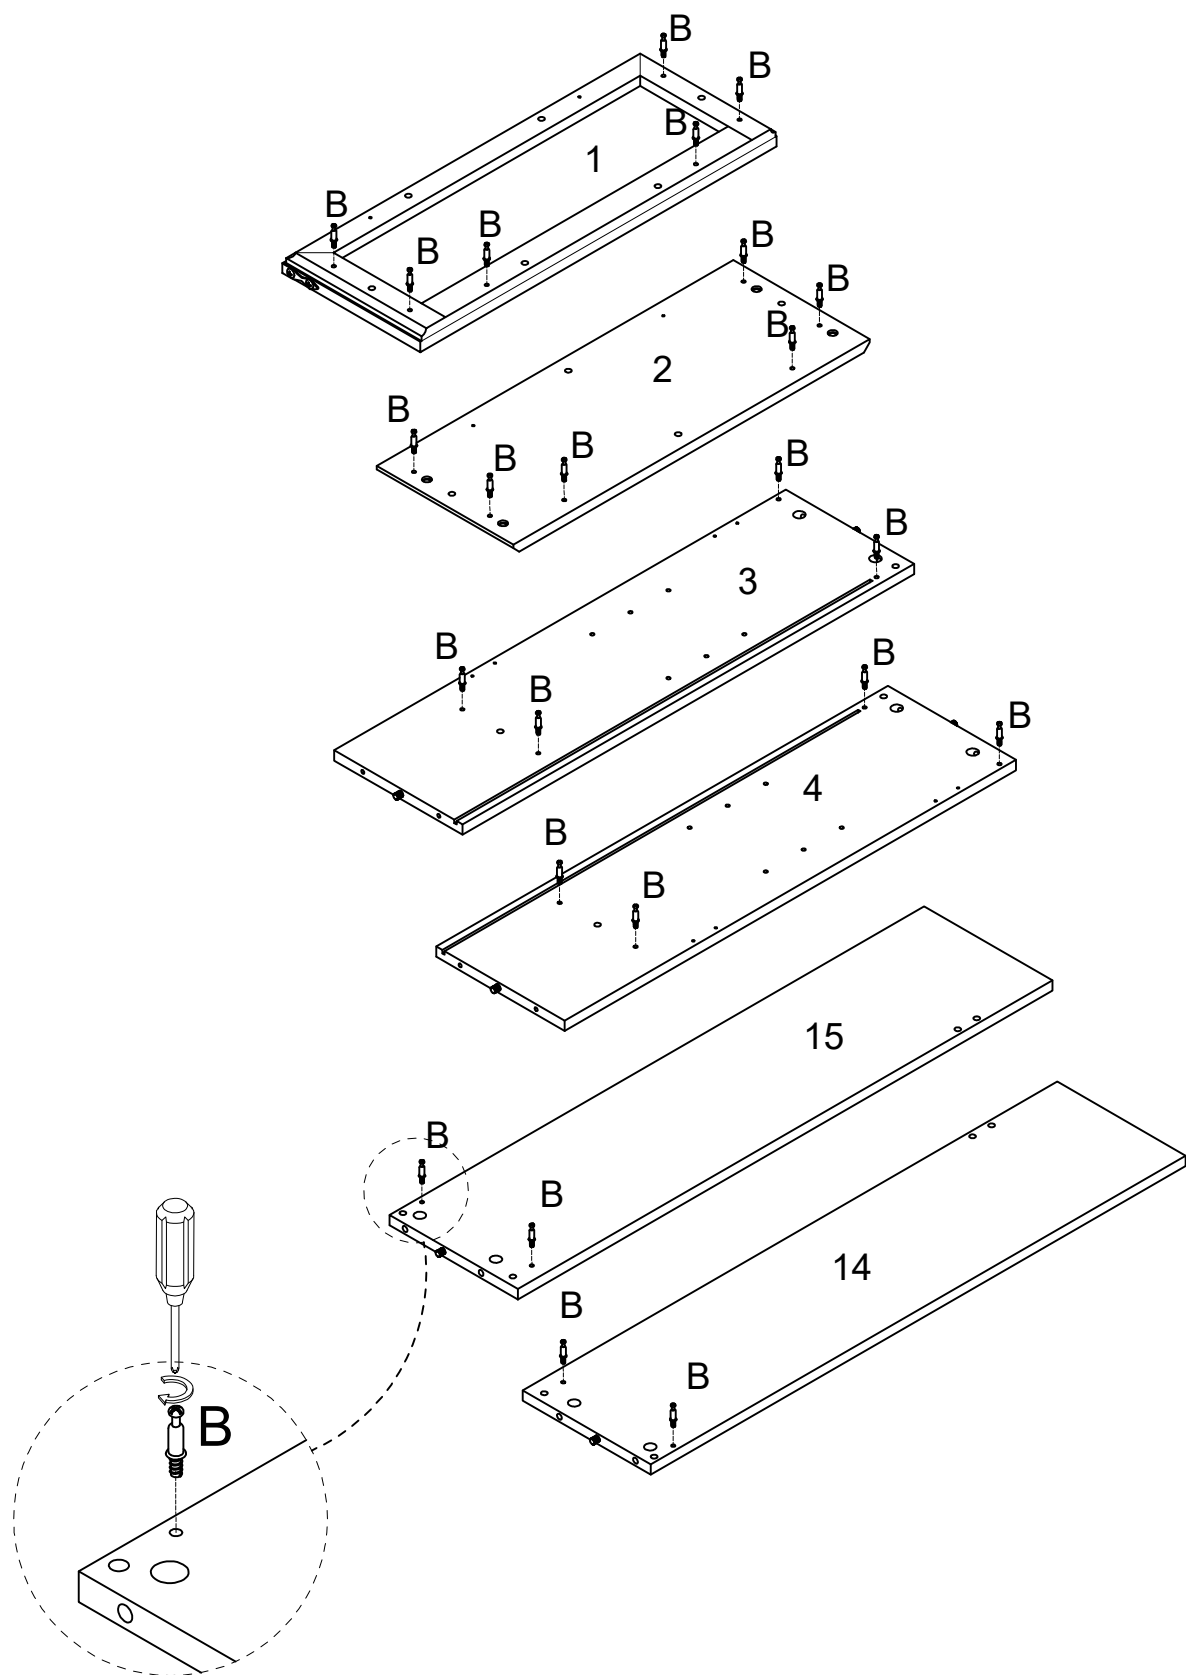

Step 2

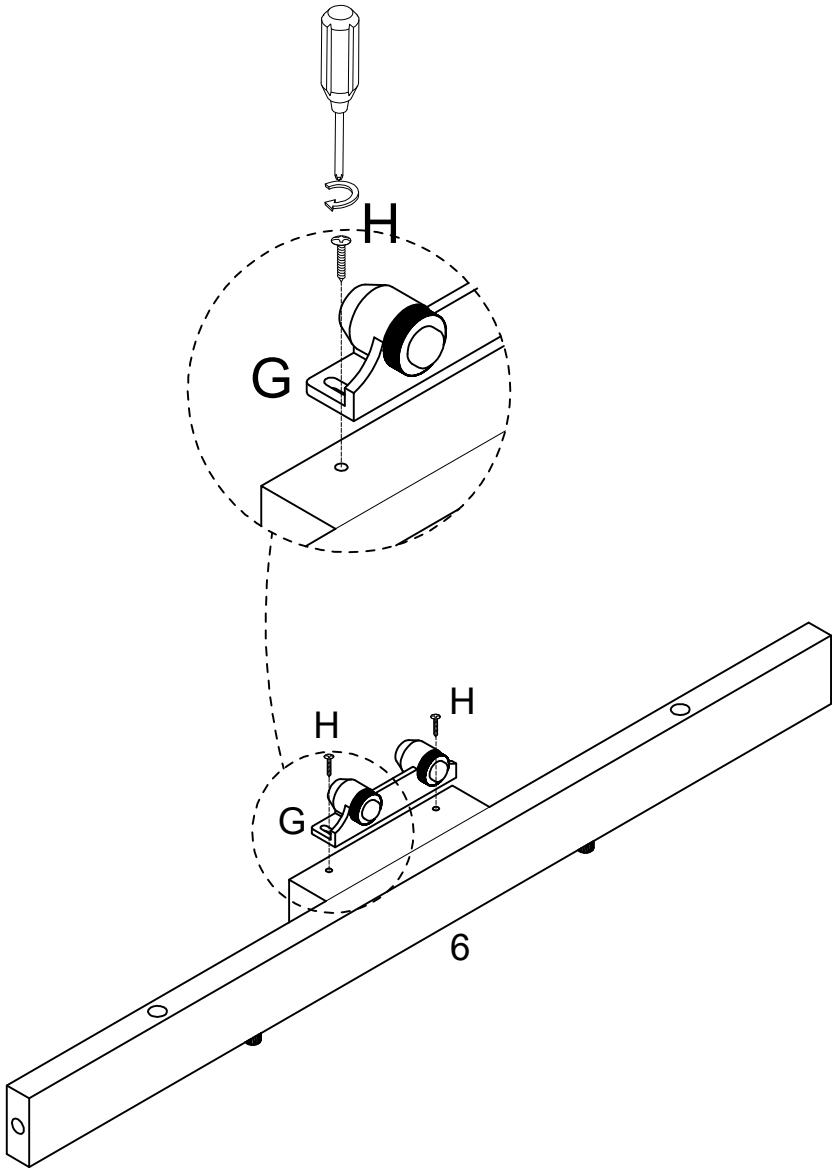



B

X24


Step 3




H	G
	
X2	X1

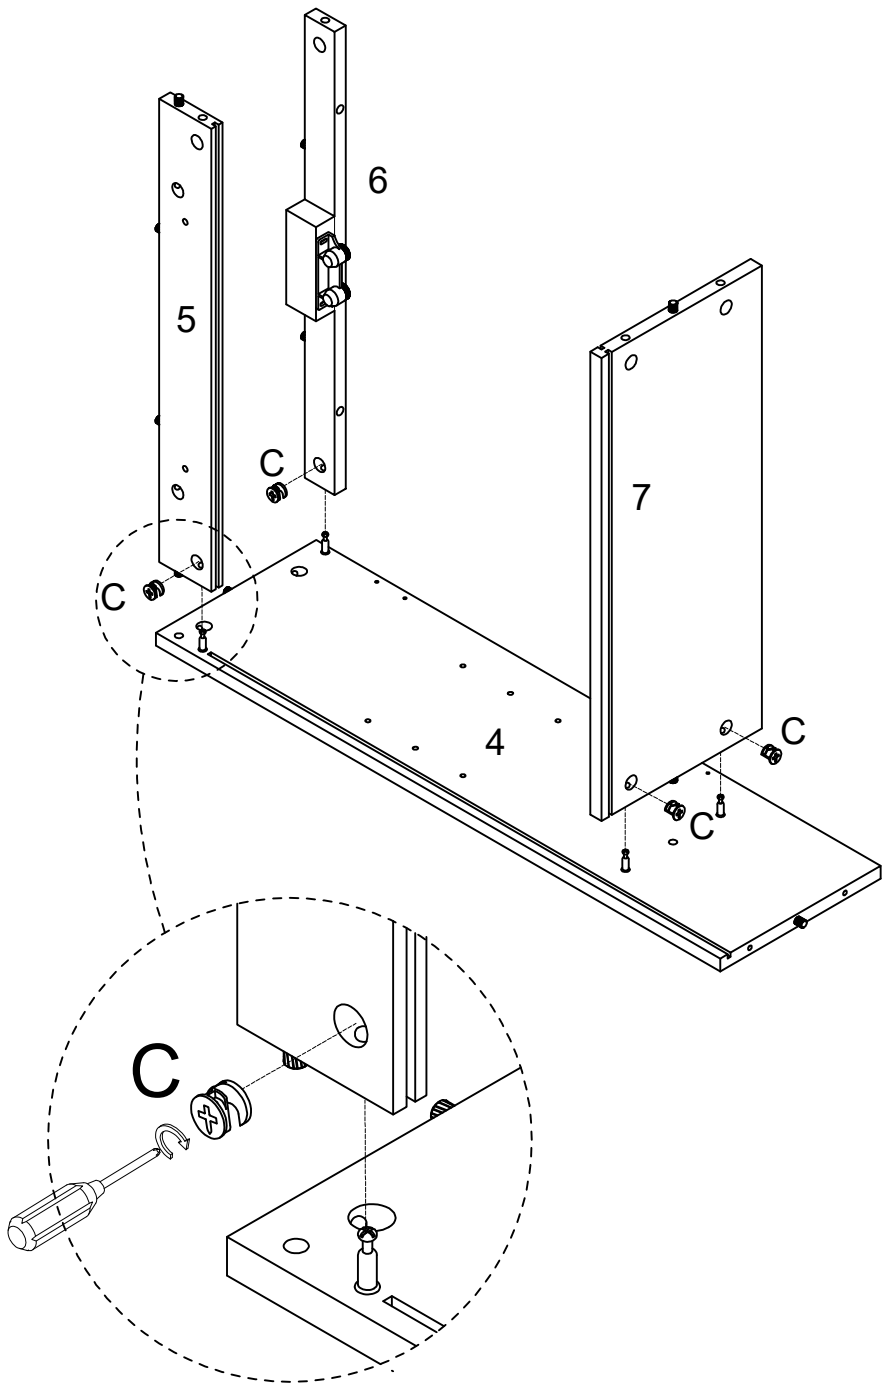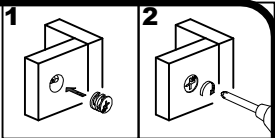Step 4






C

X4

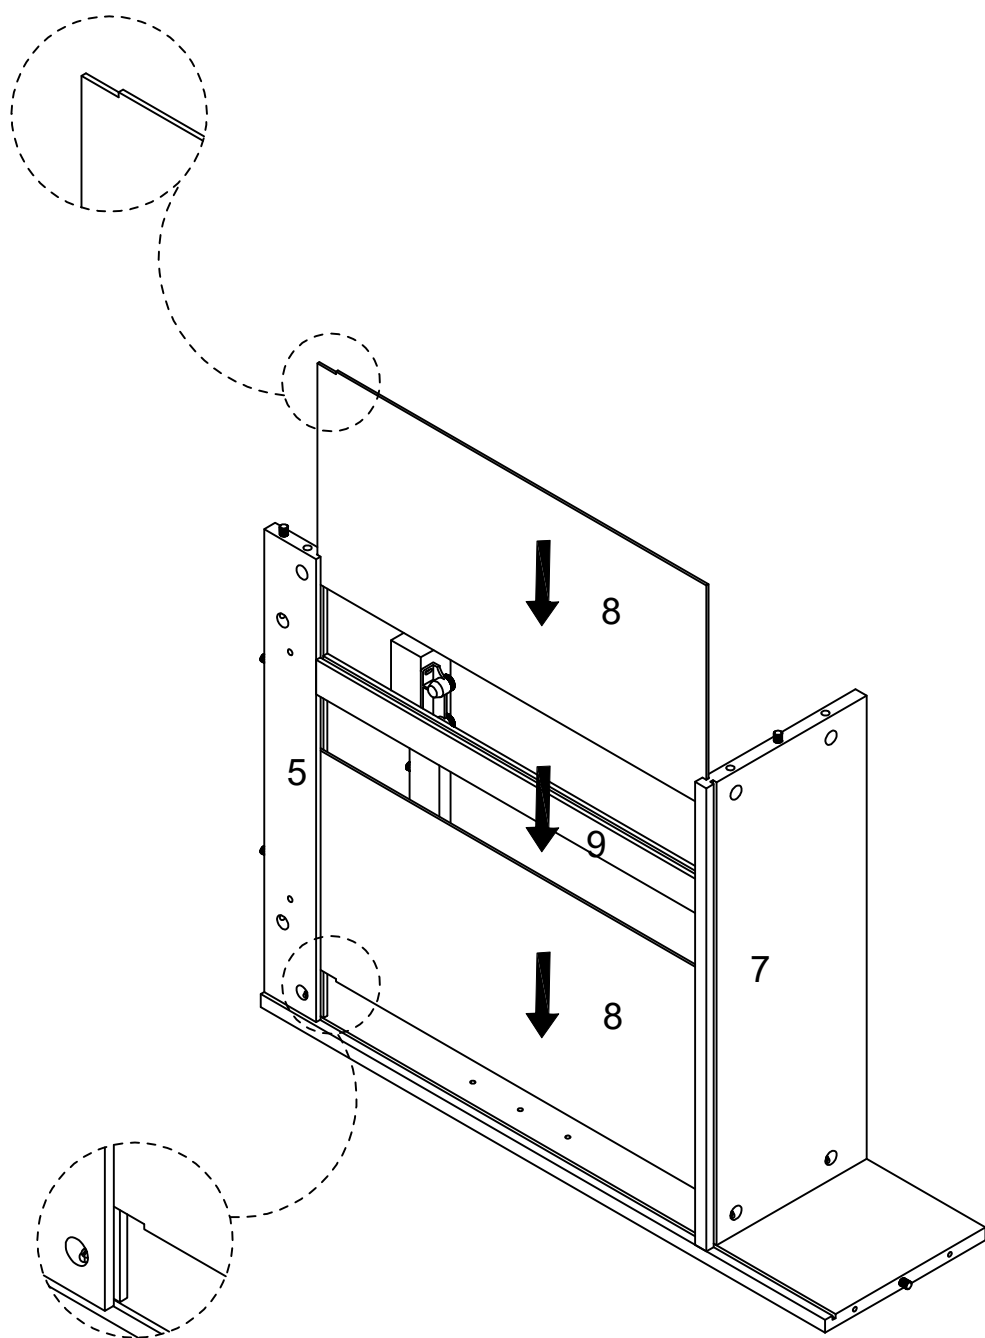Step 5

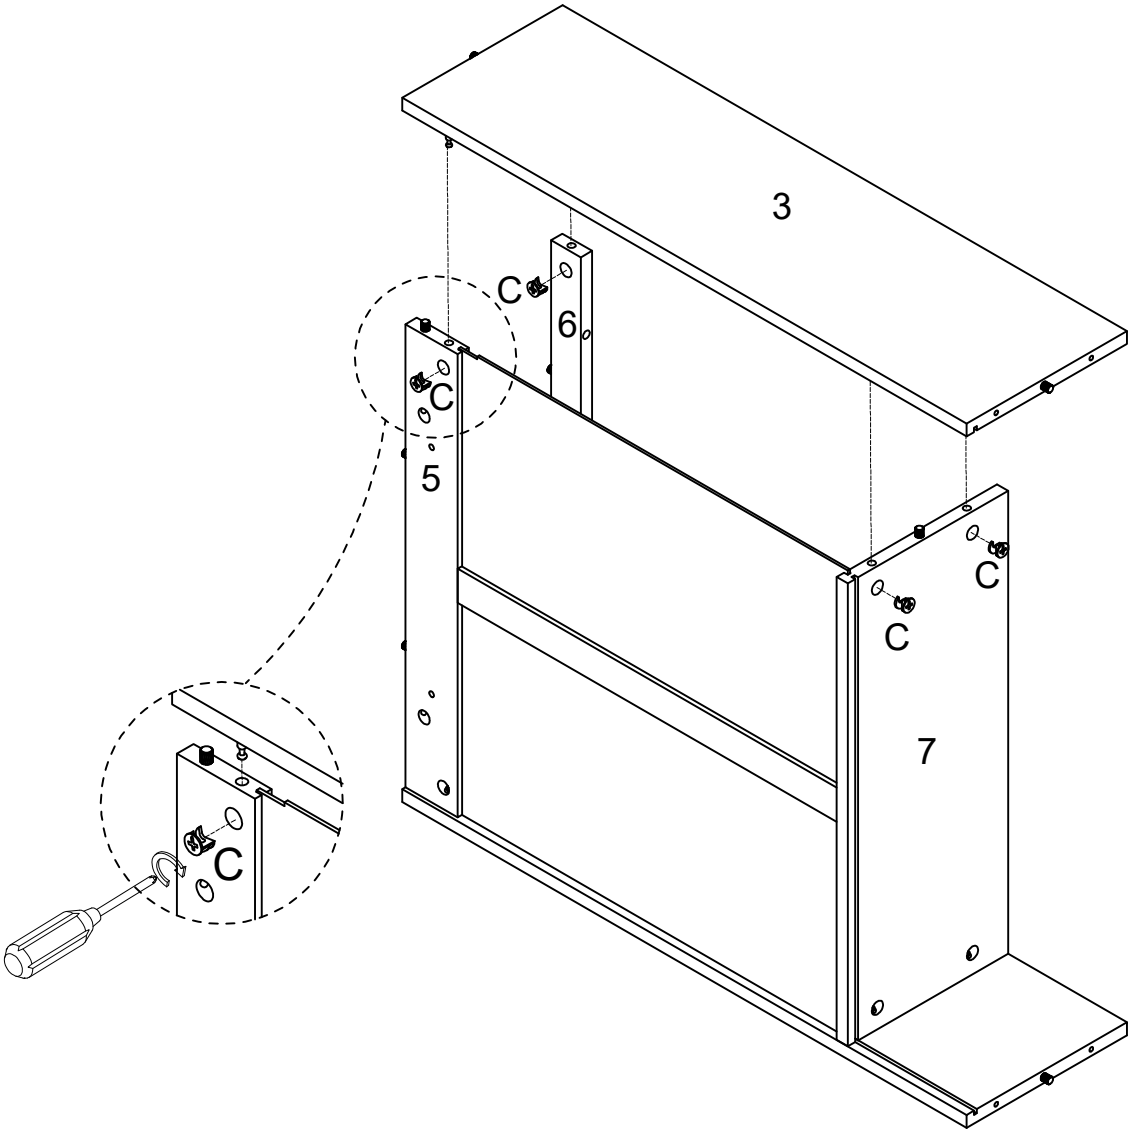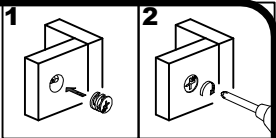


Step 6




C

X4

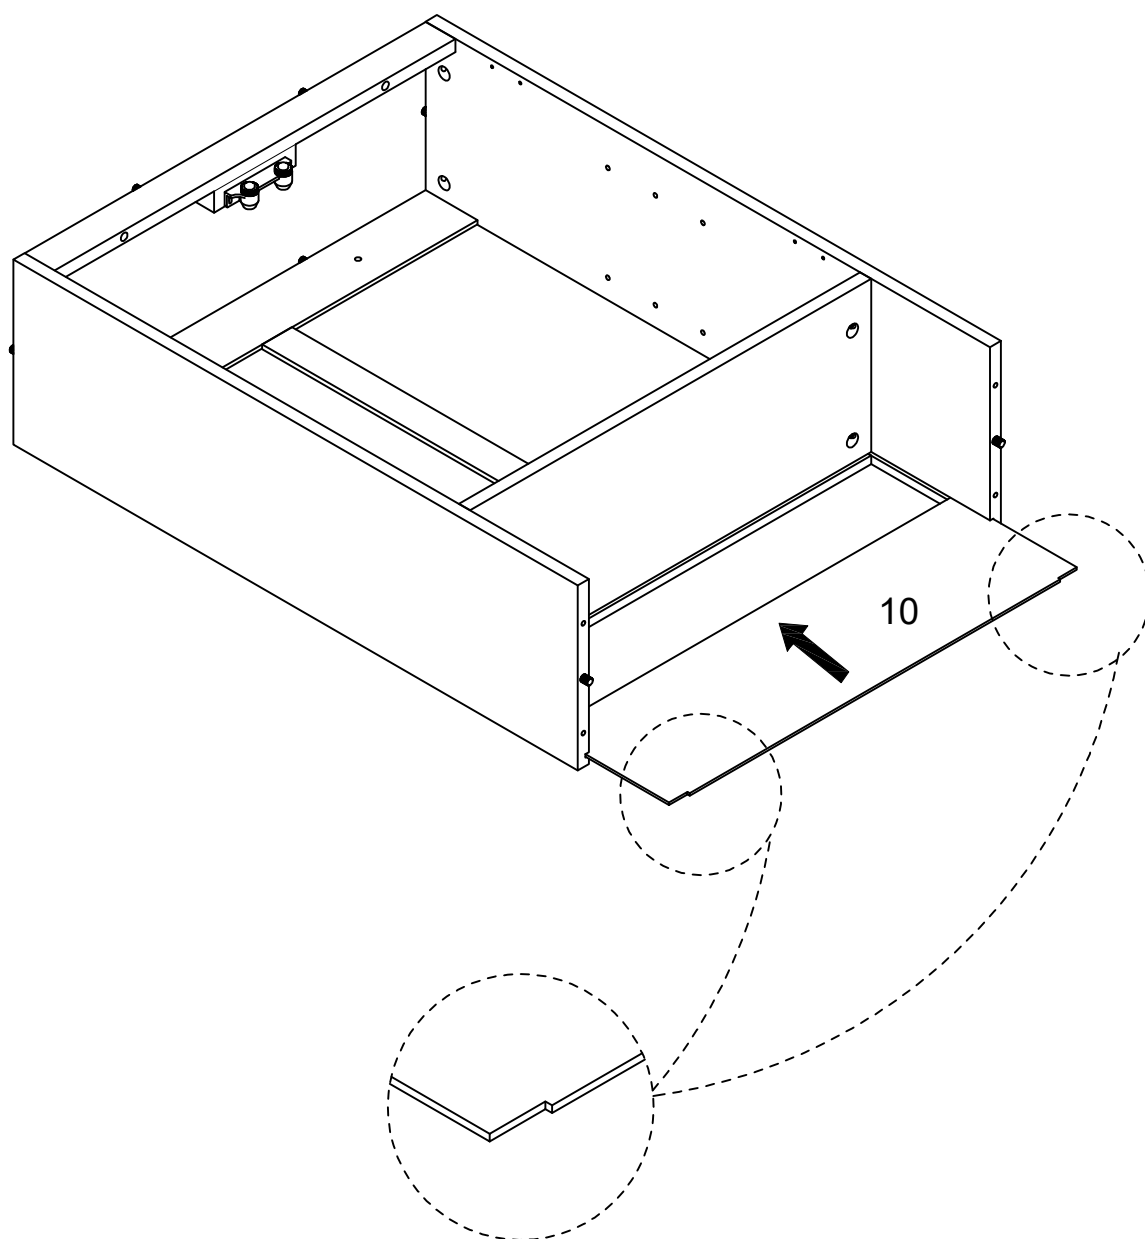

Step 7

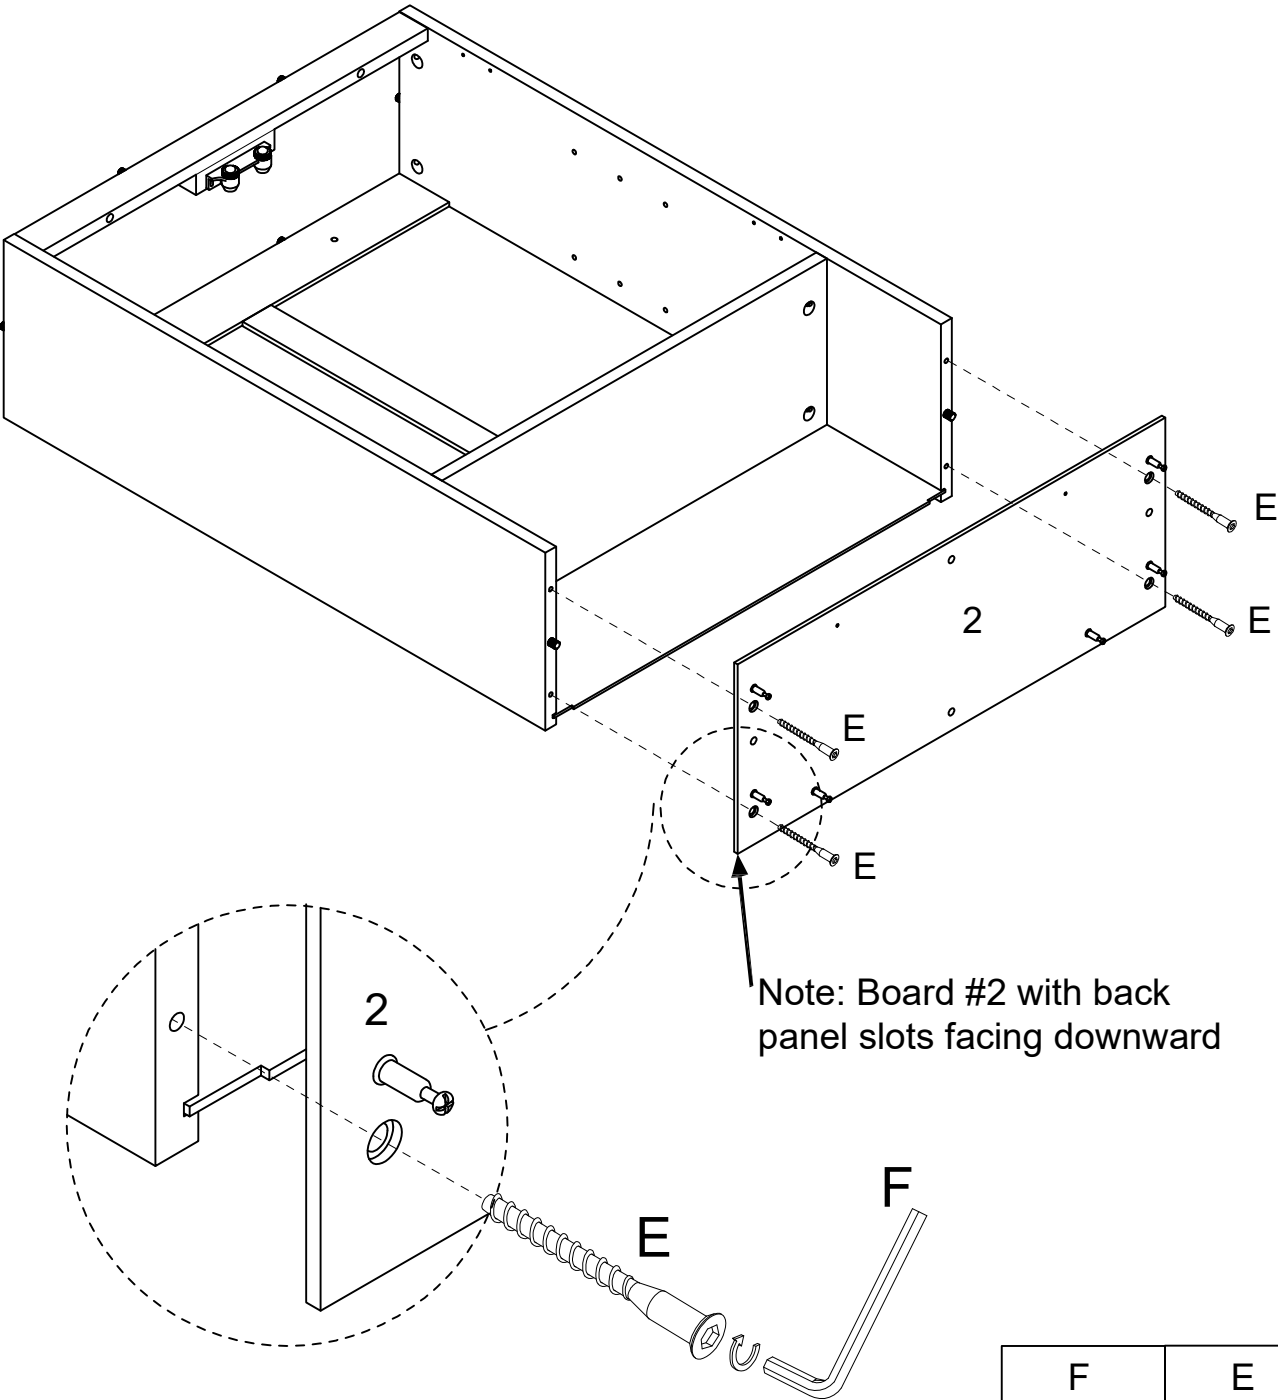



Step 8




Note: Board #2 with back panel slots facing downward


F	E
	
X1	X4

Step 9

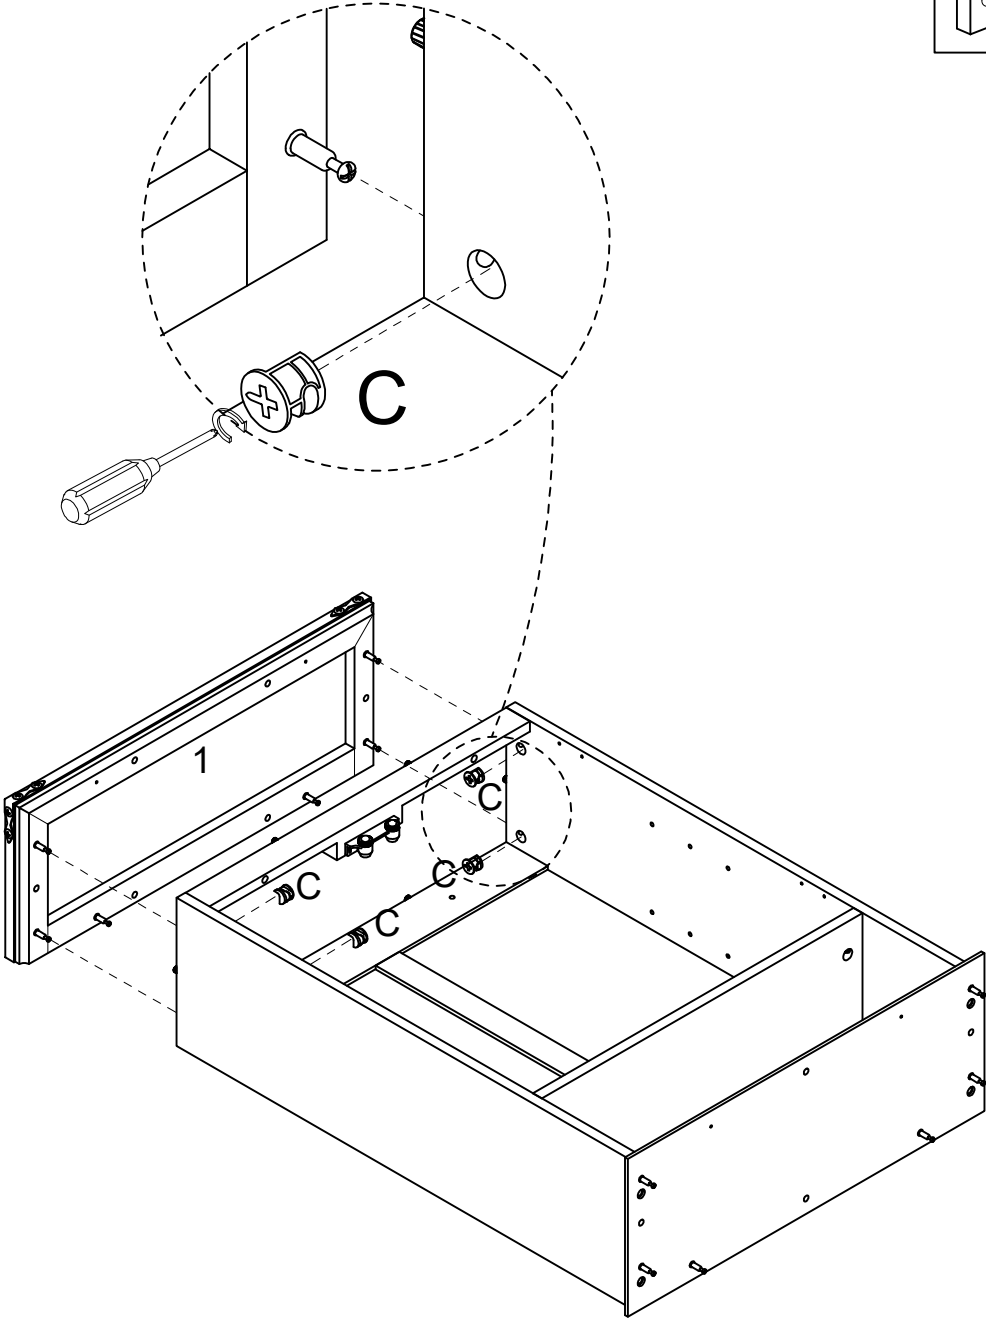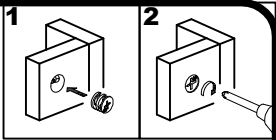

C

X4

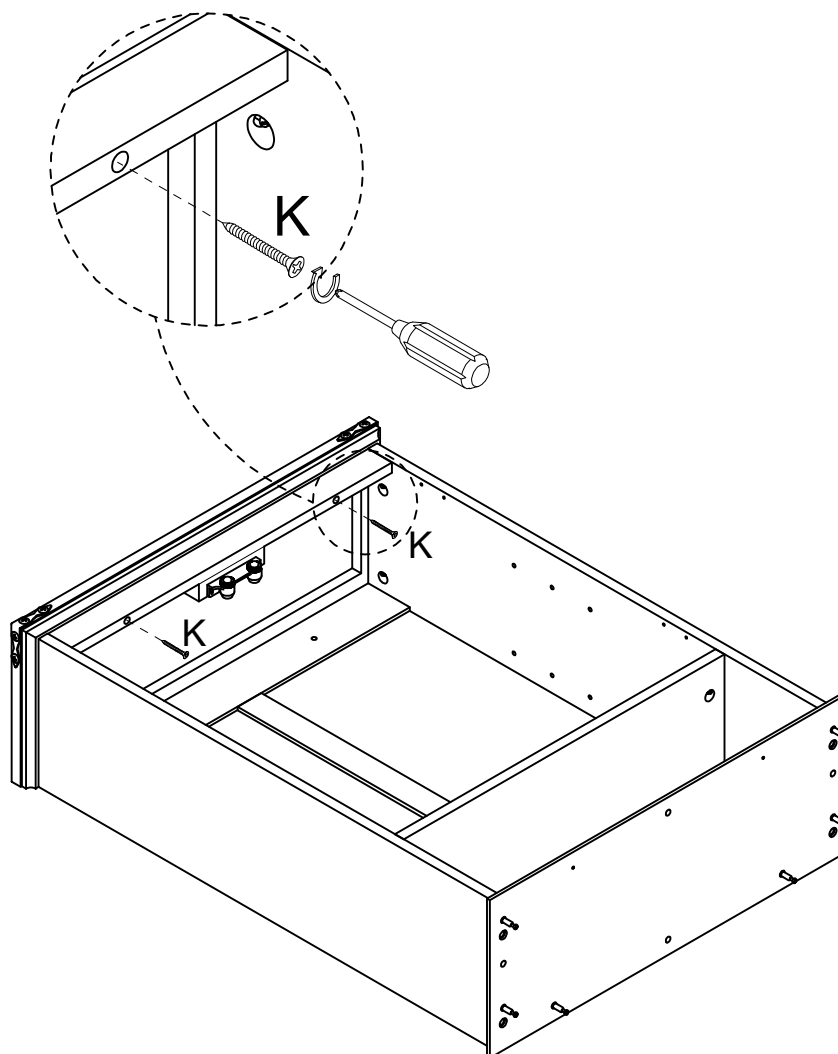Step 10








K





X2

Step 11

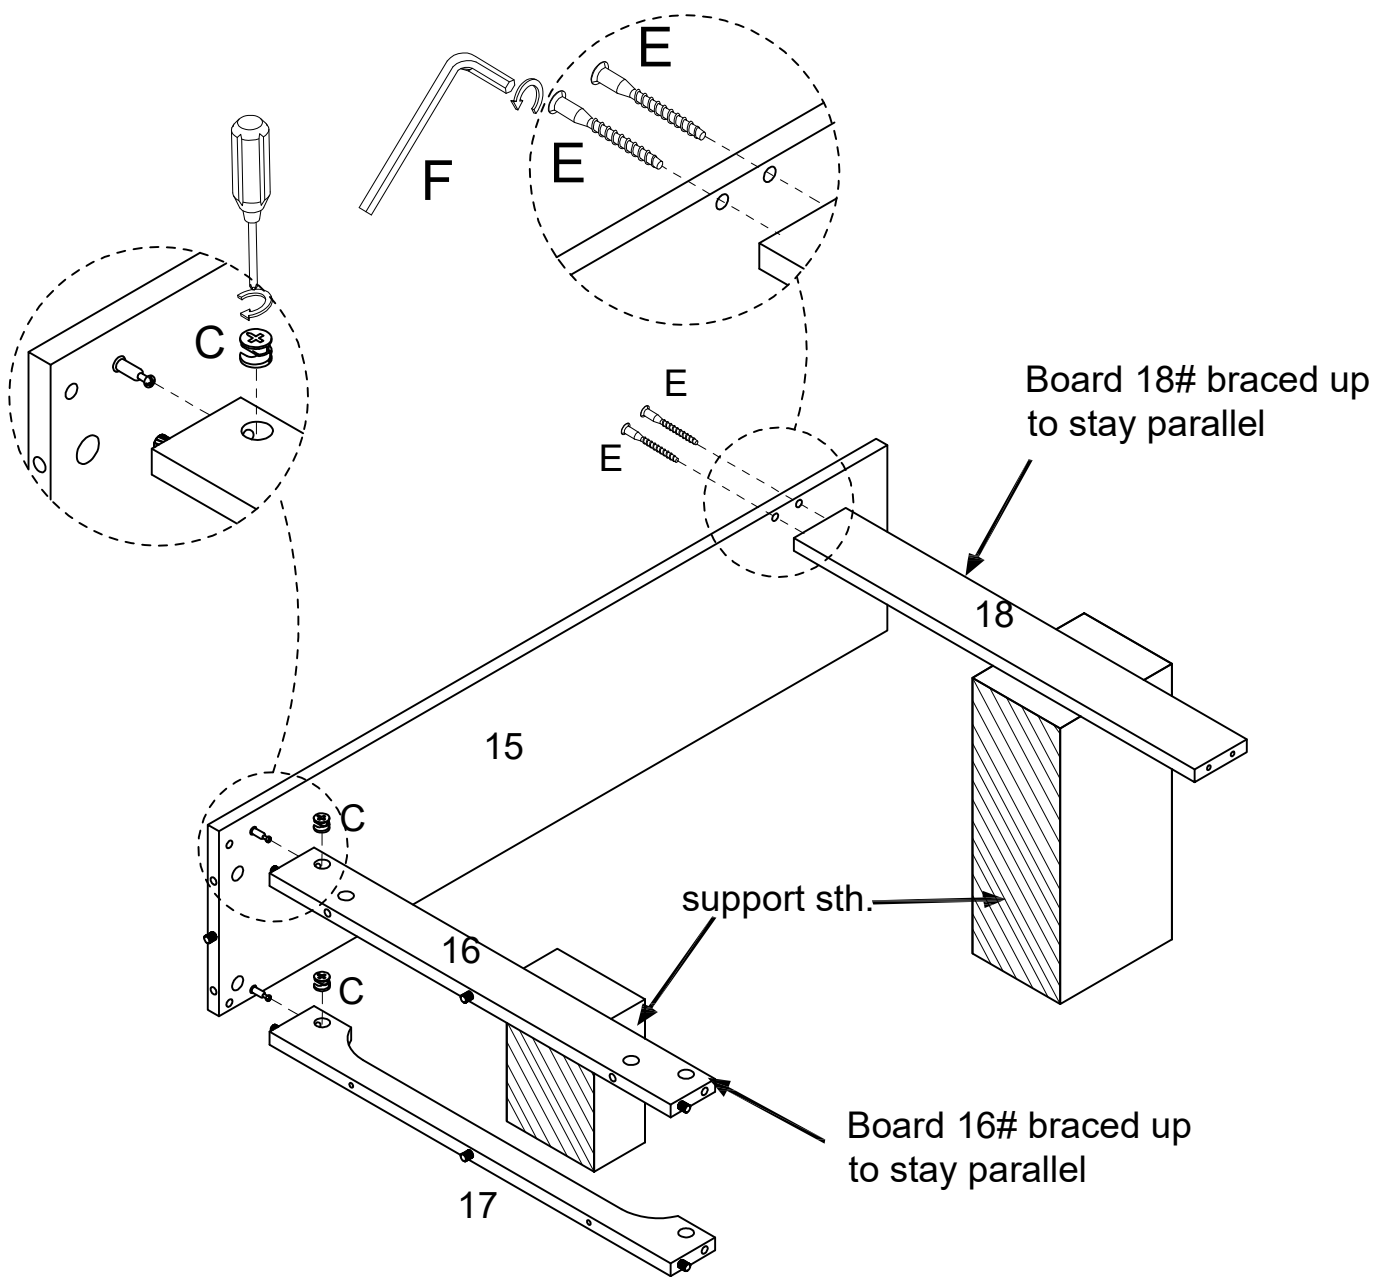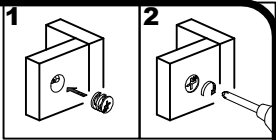



F	E	C
		
X1	X2	X2


Step 12

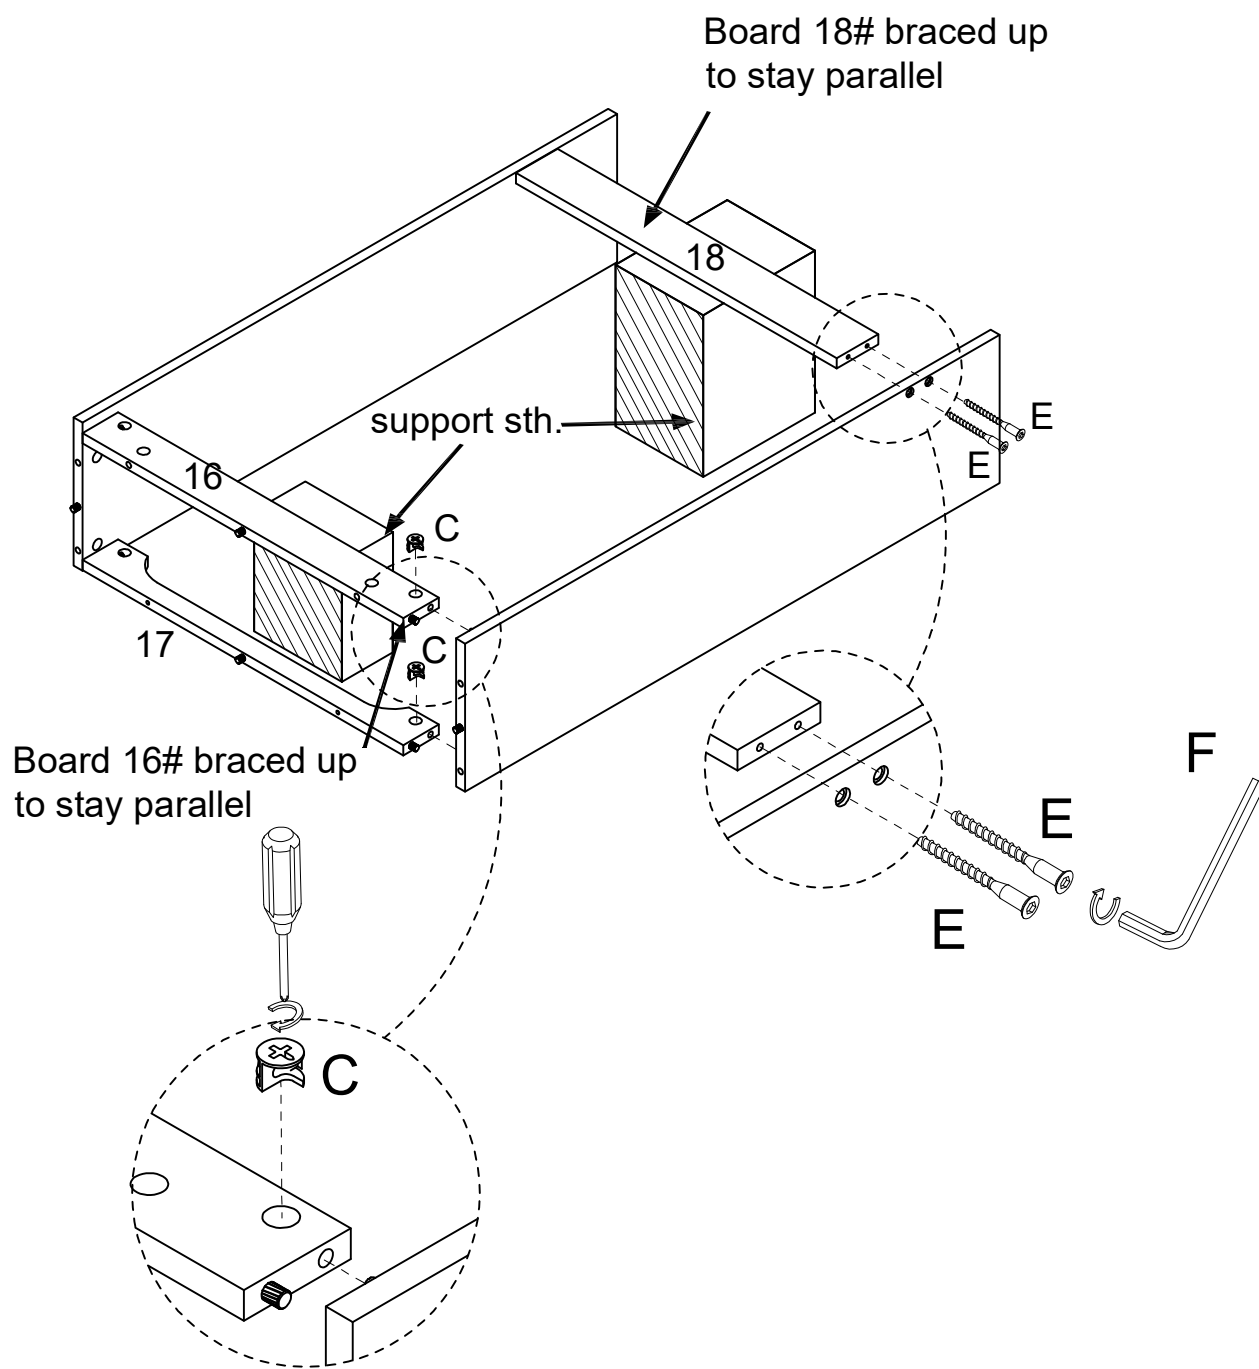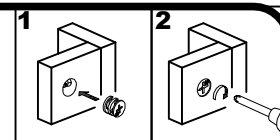


F	E	C
X1	X2	X2


Step 13

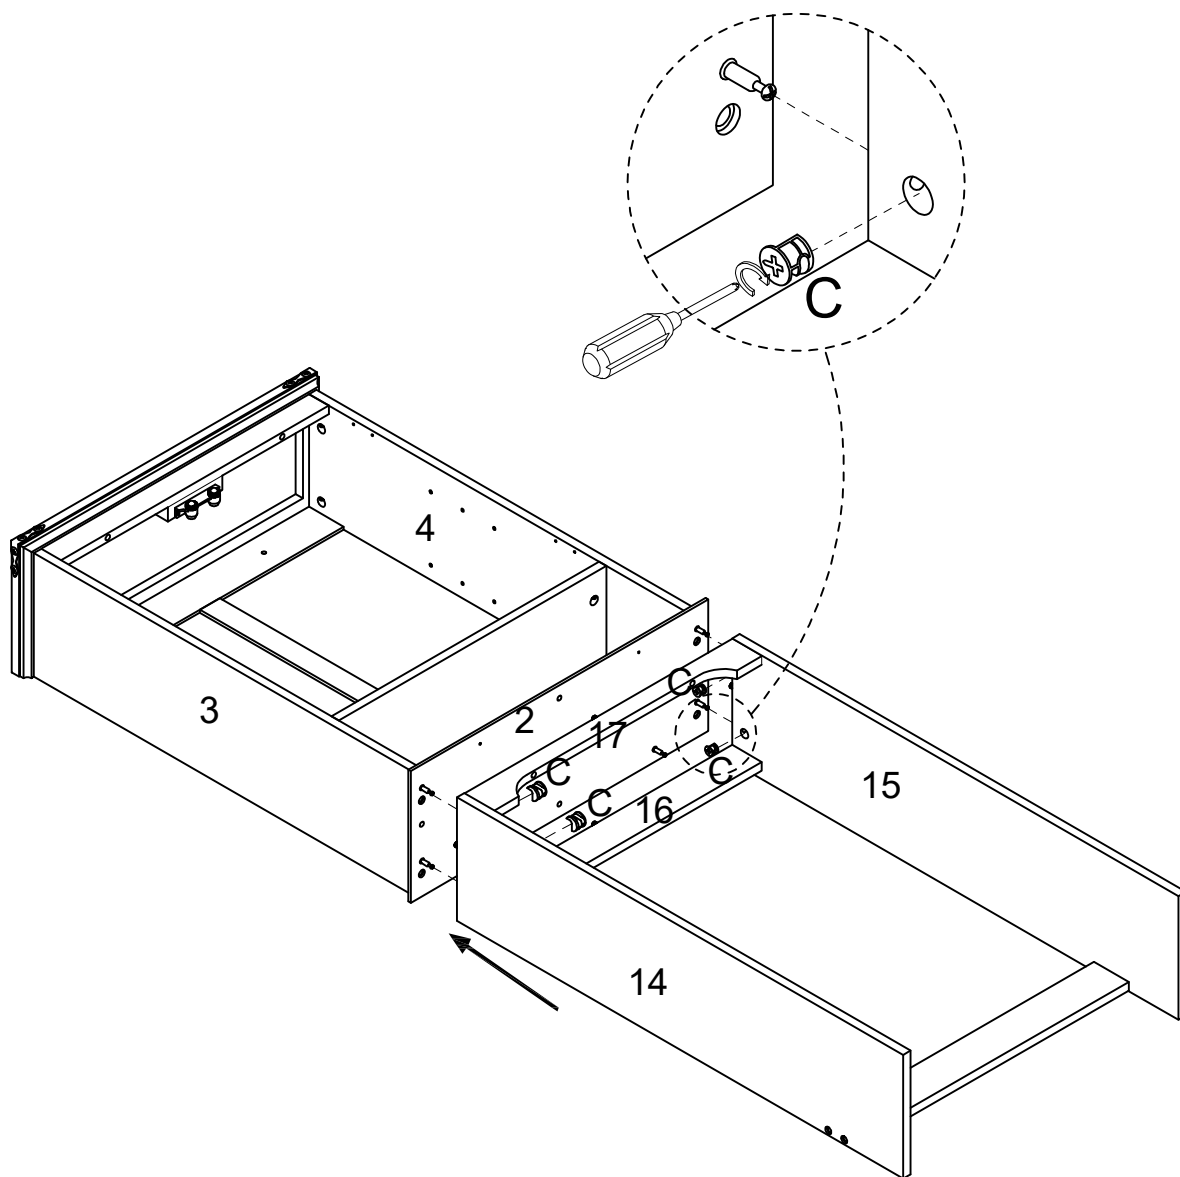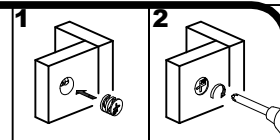



C

X4

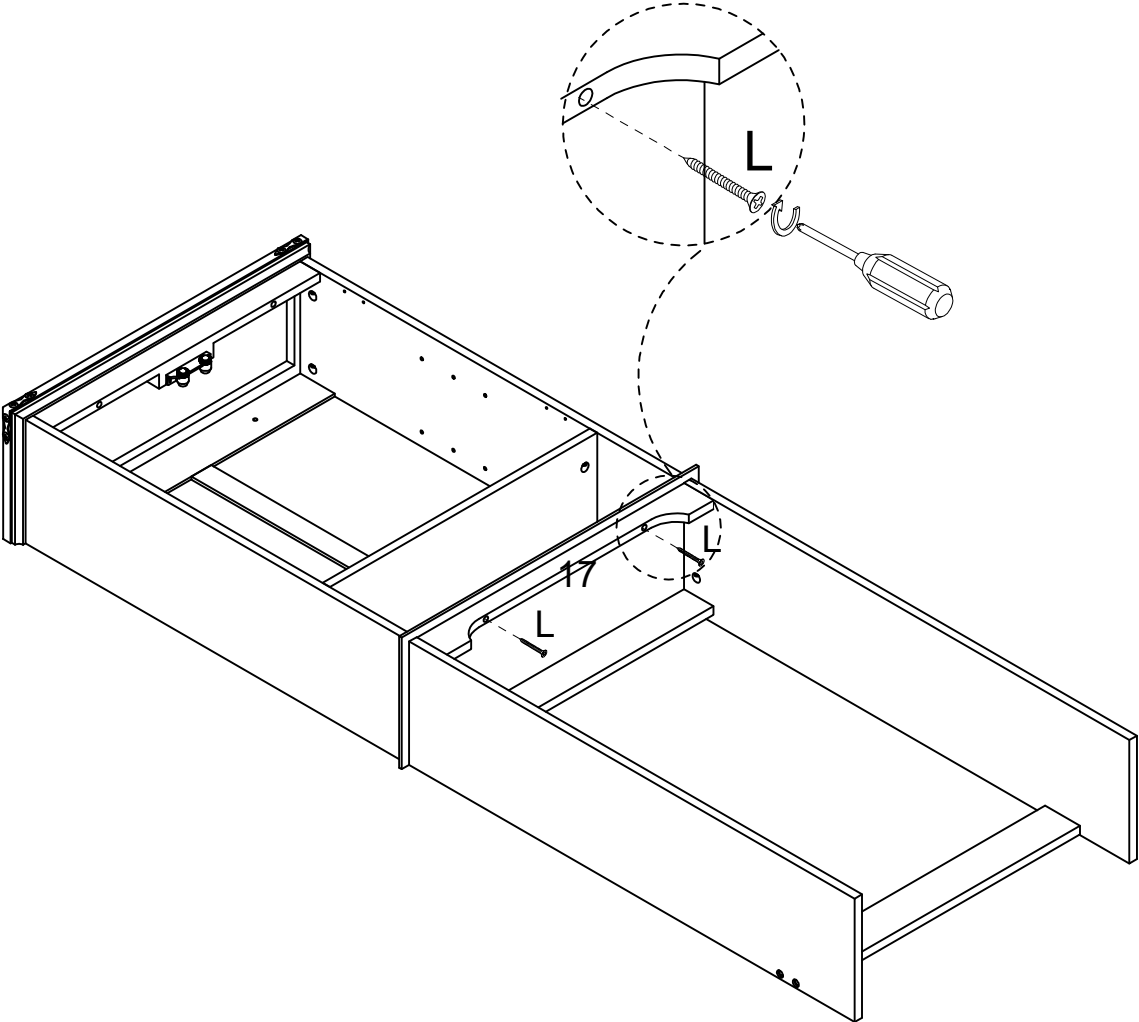
Step 14




L

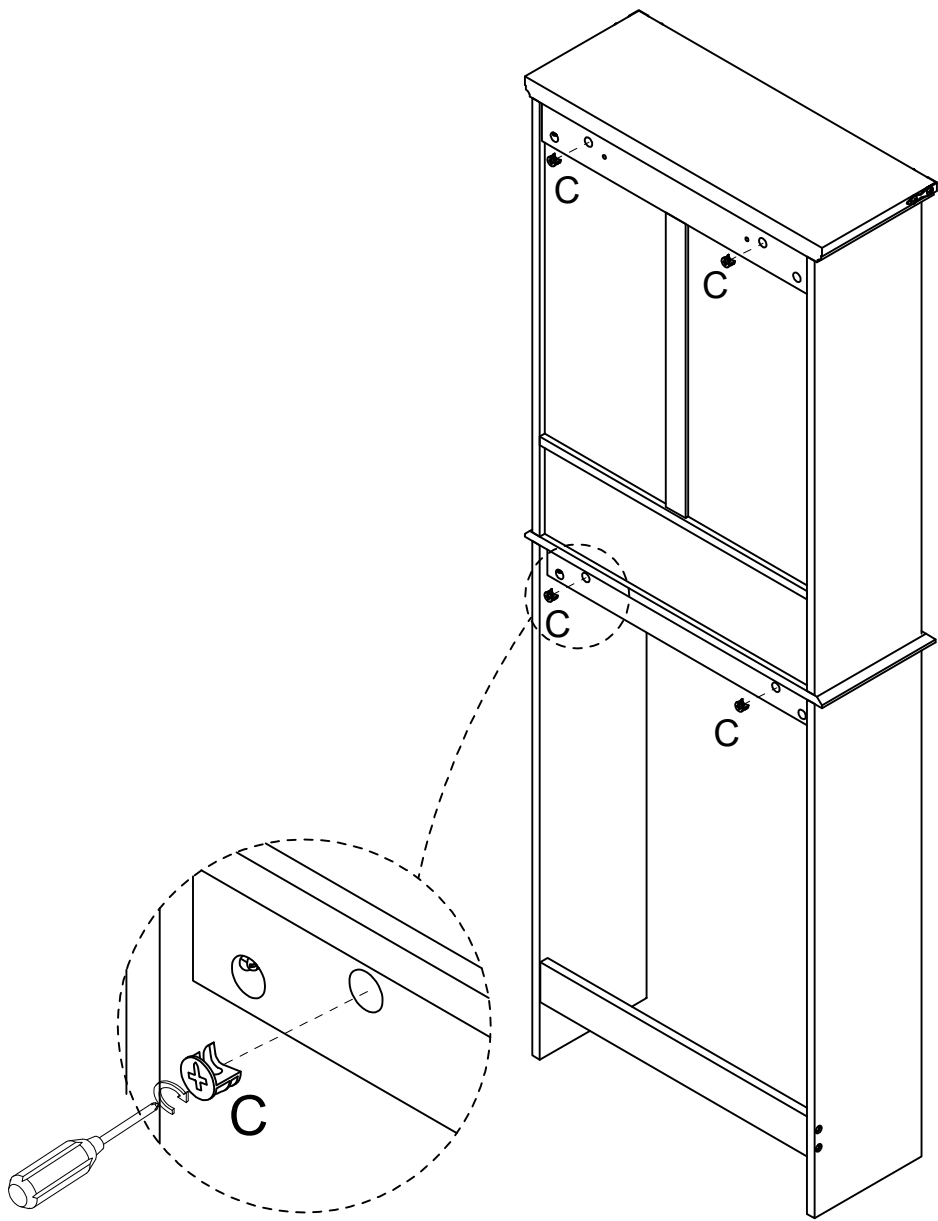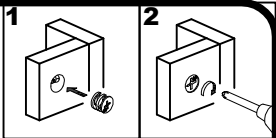X2

Step 15




C

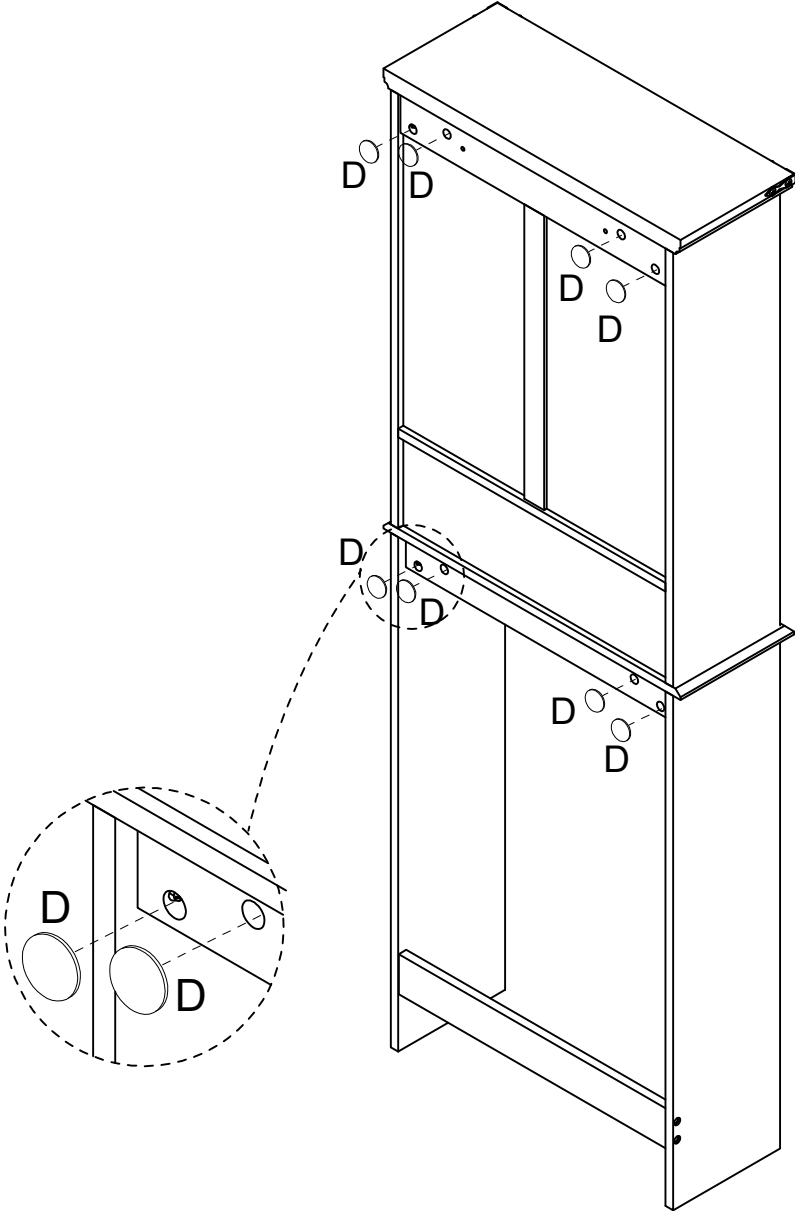X4


Step 16




D
O
X24

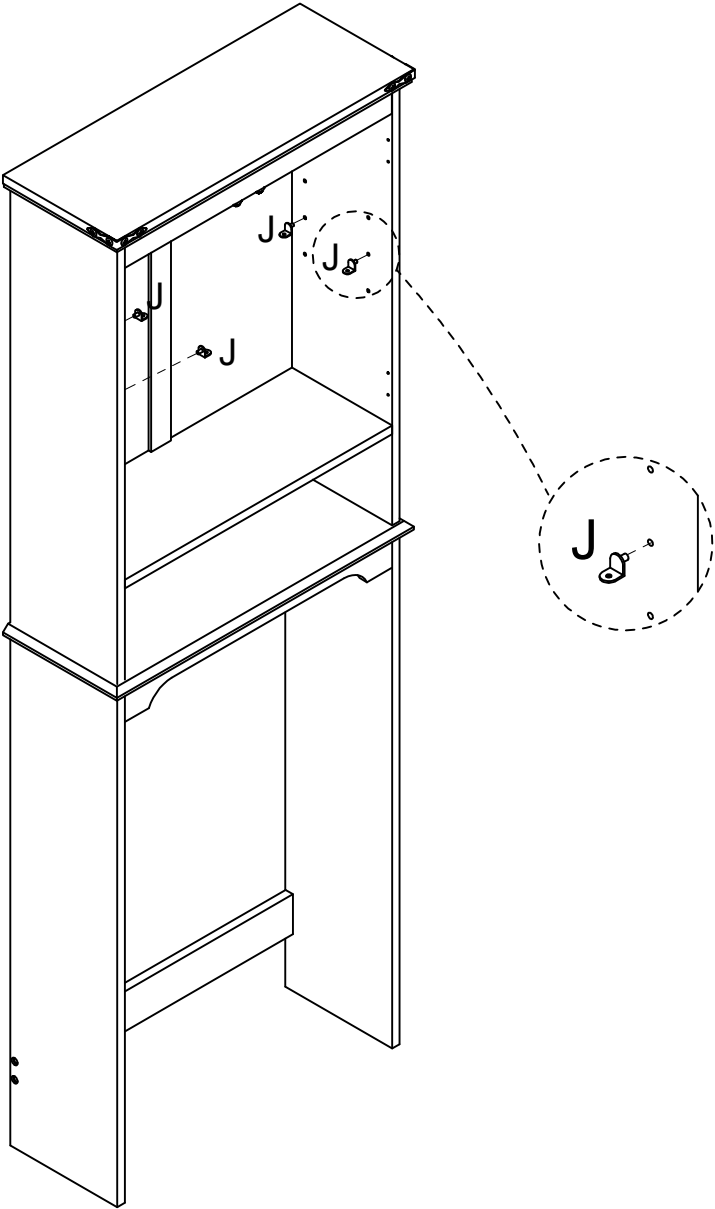Step 17







J

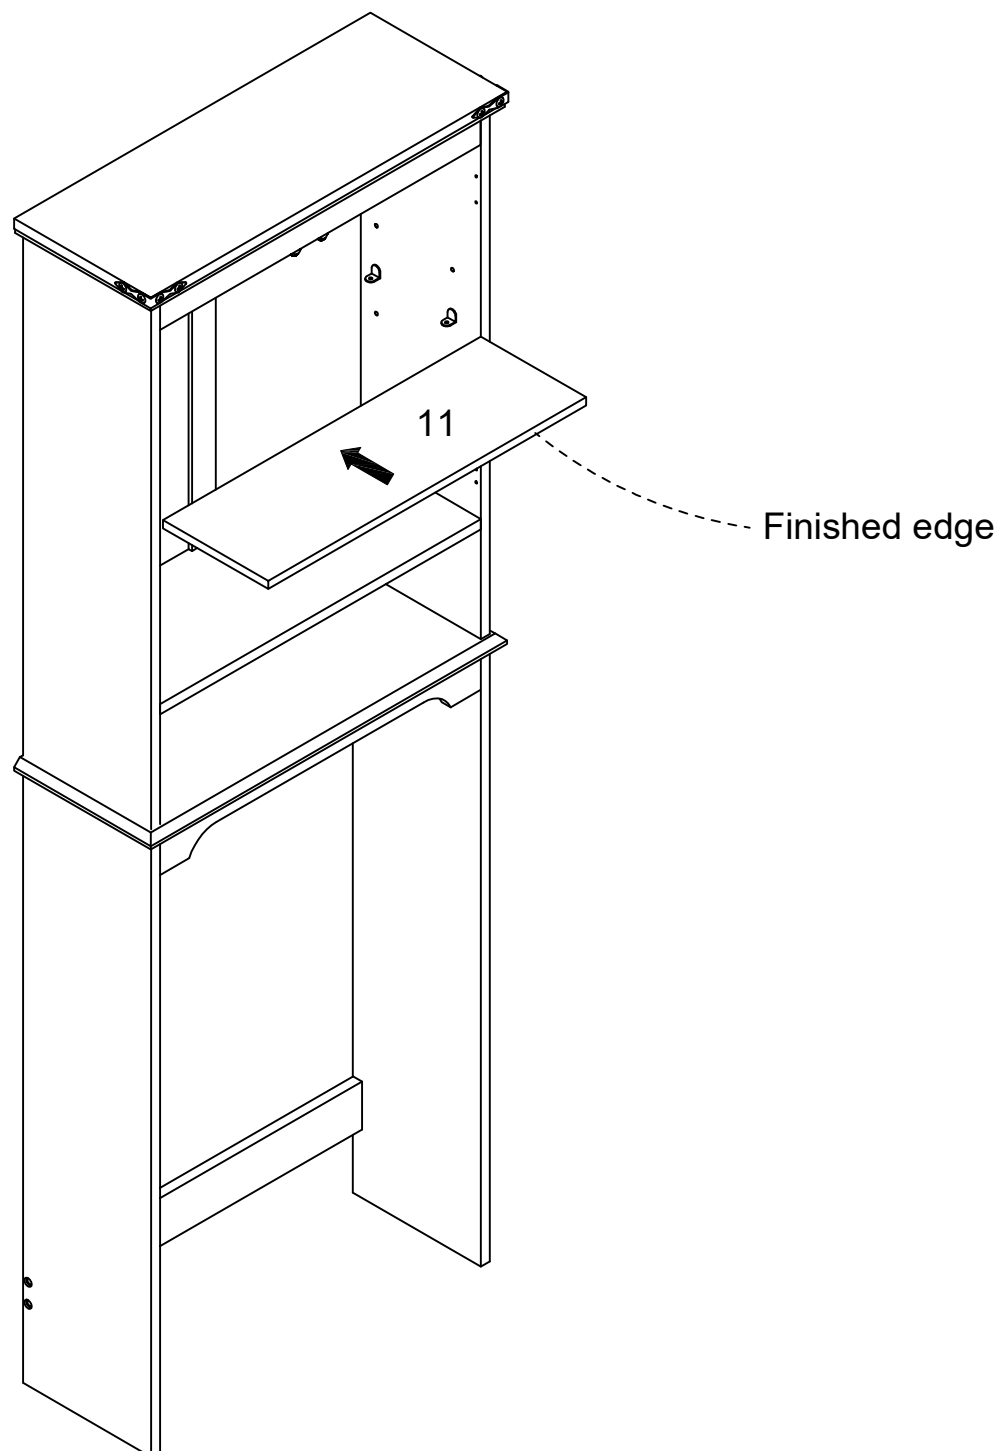X4

Step 18

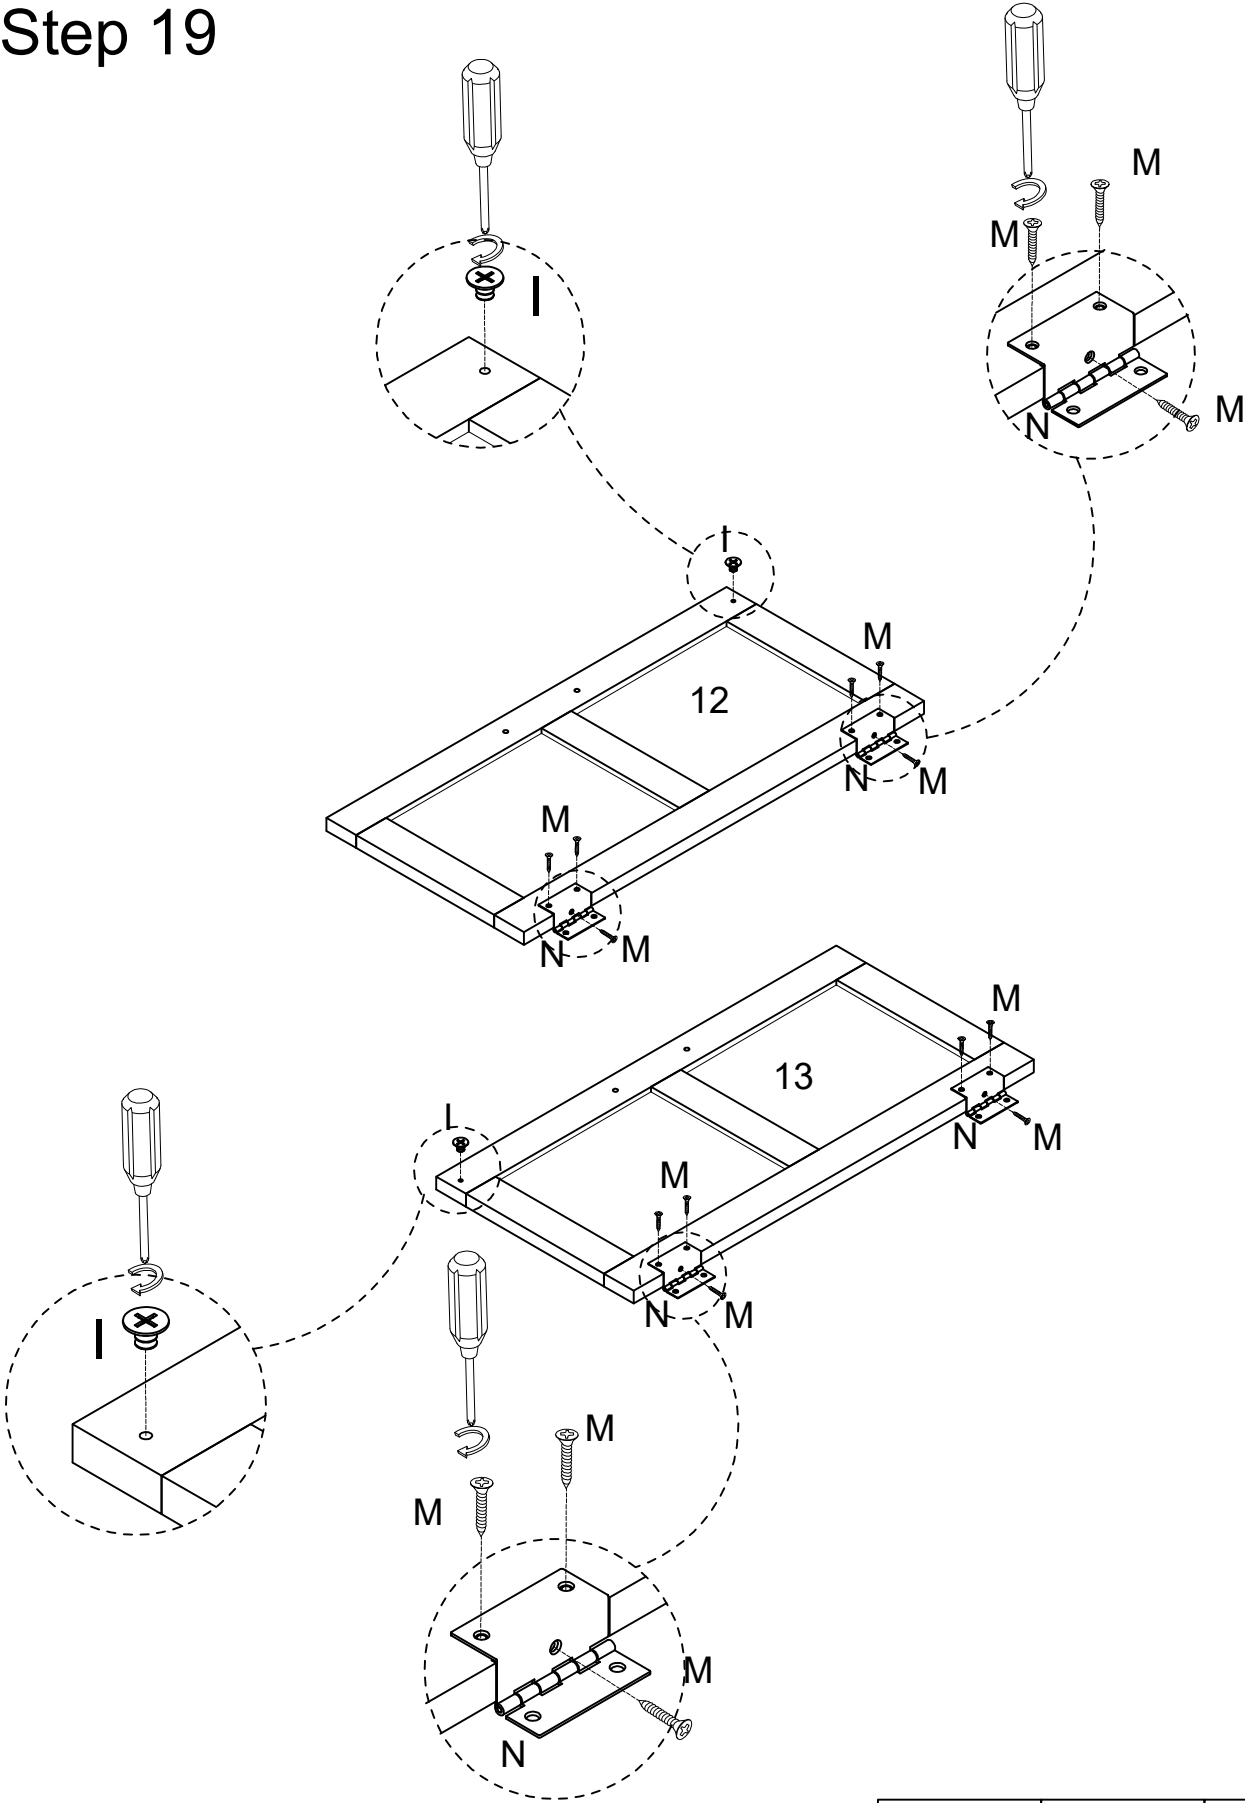



Step 19




I	M	N
		
X2	X12	X4



Step 20

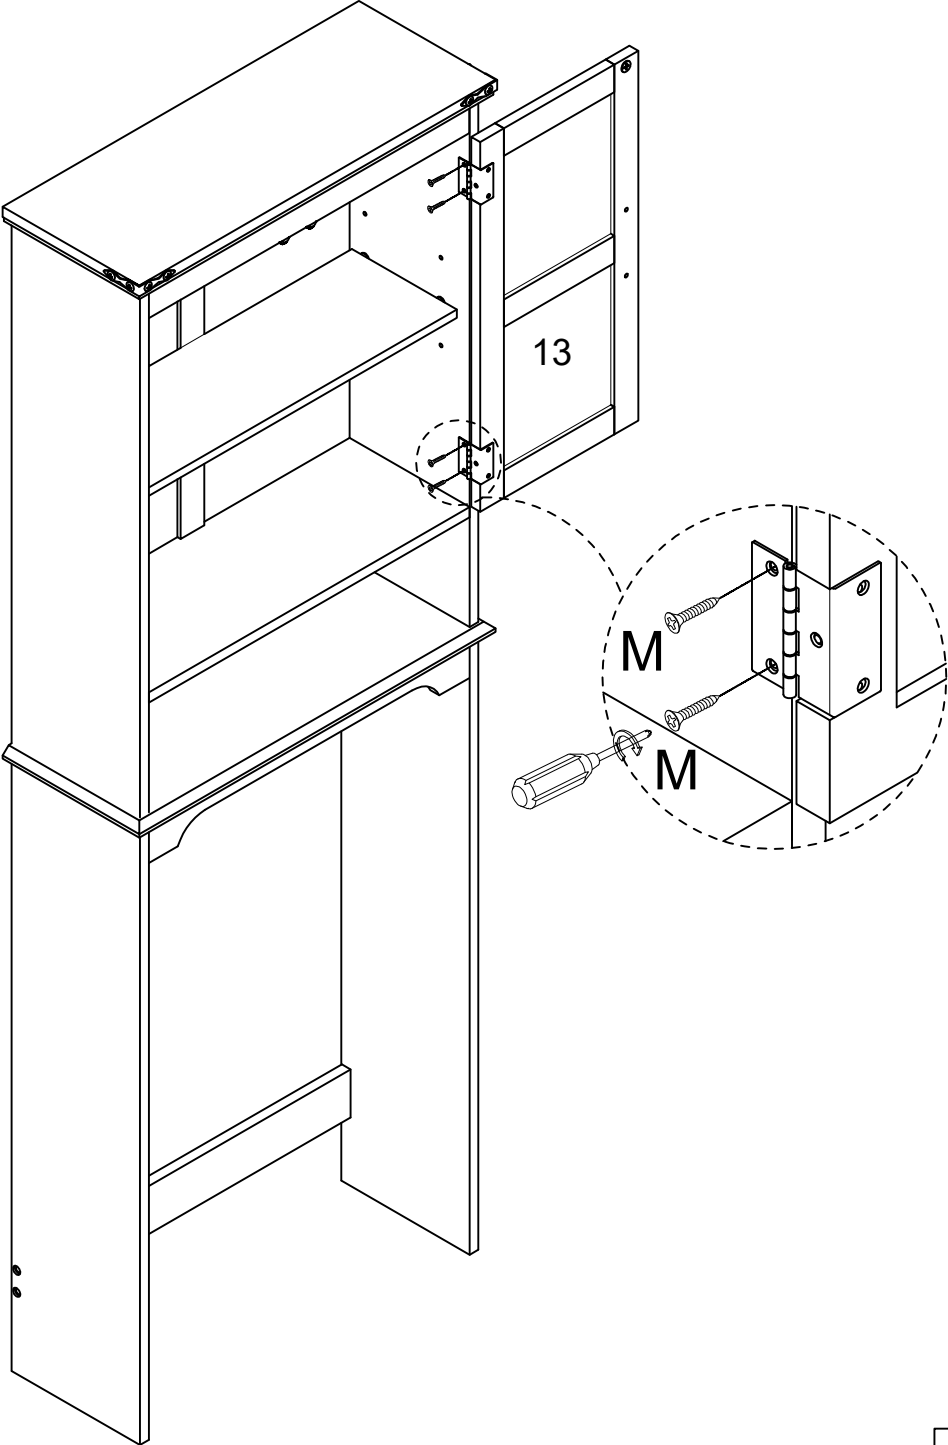


M

X4

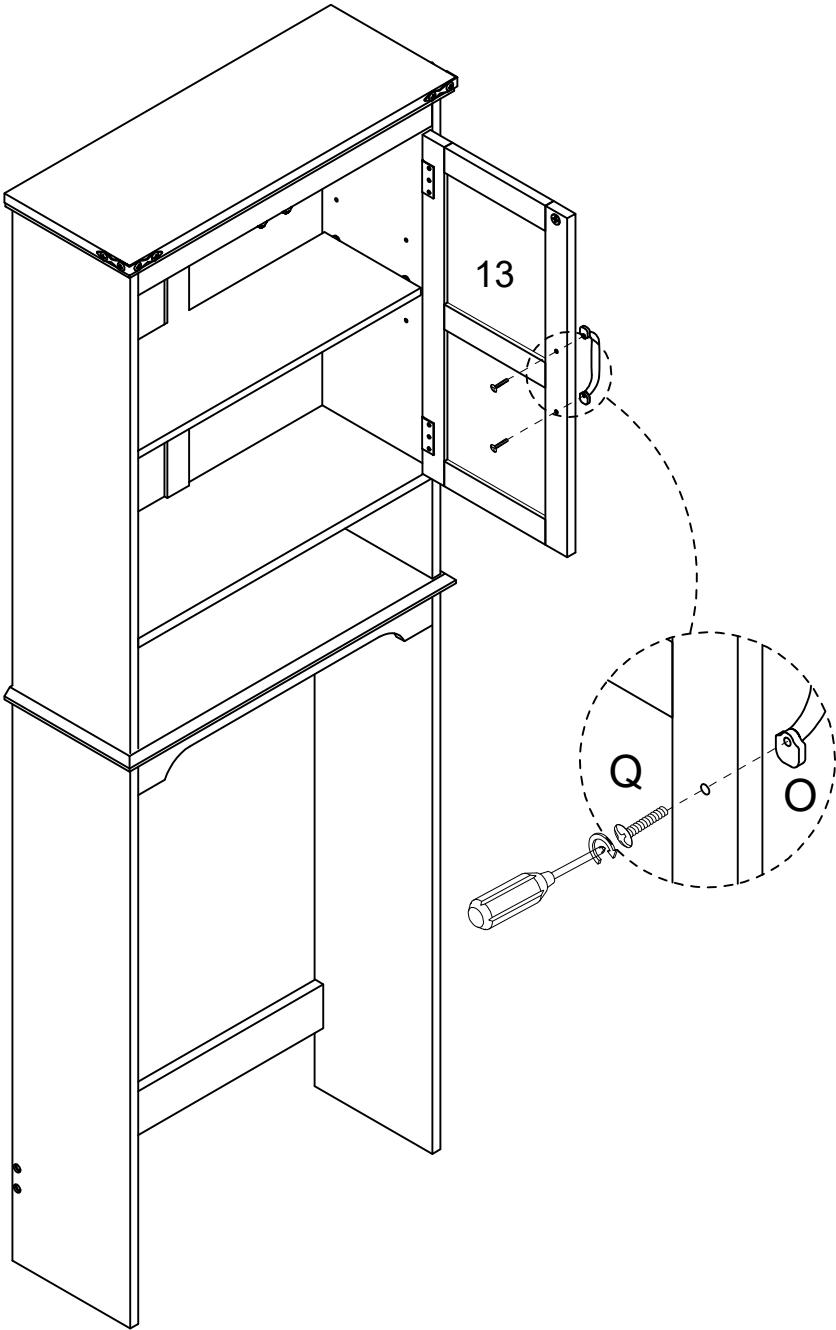
Step 21




Q	O
	
X2	X1

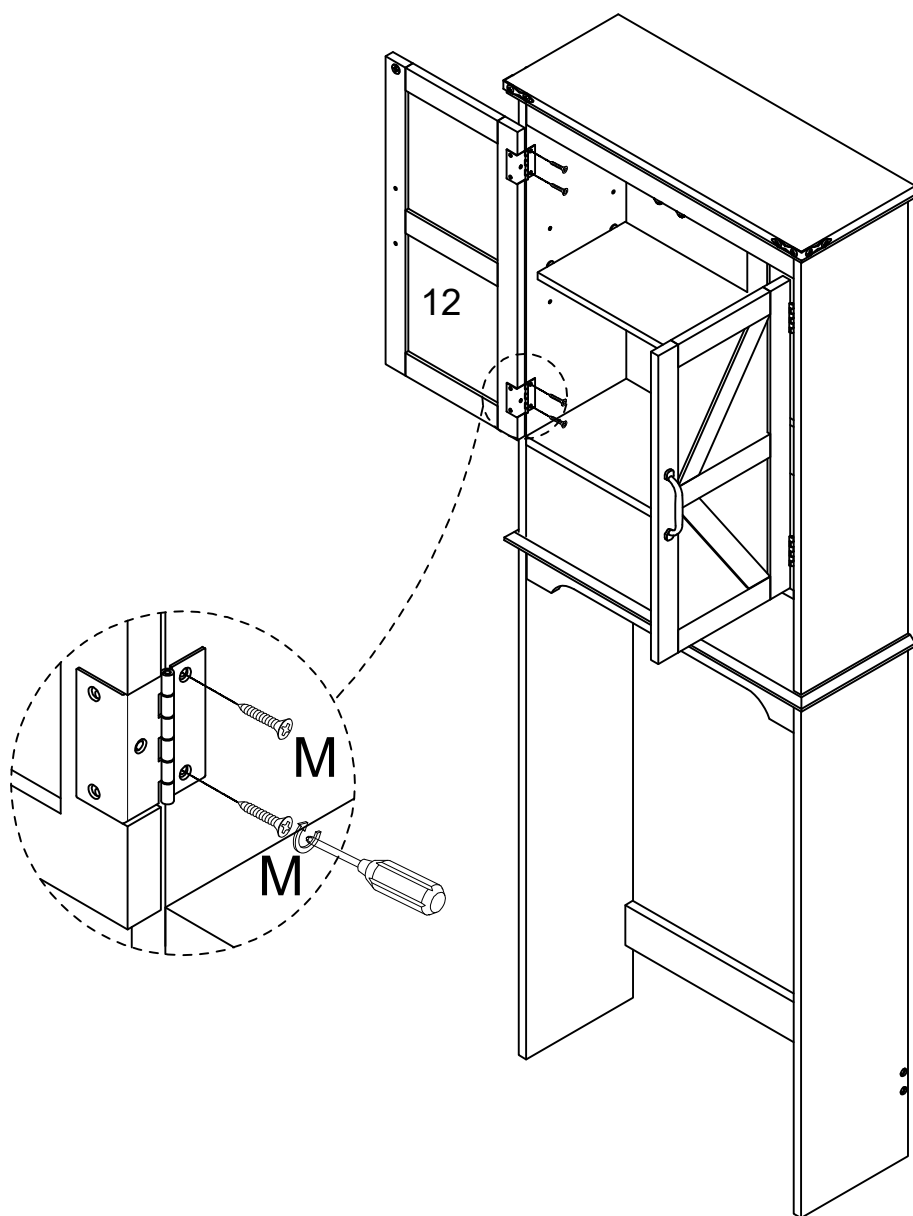

Step 22




M

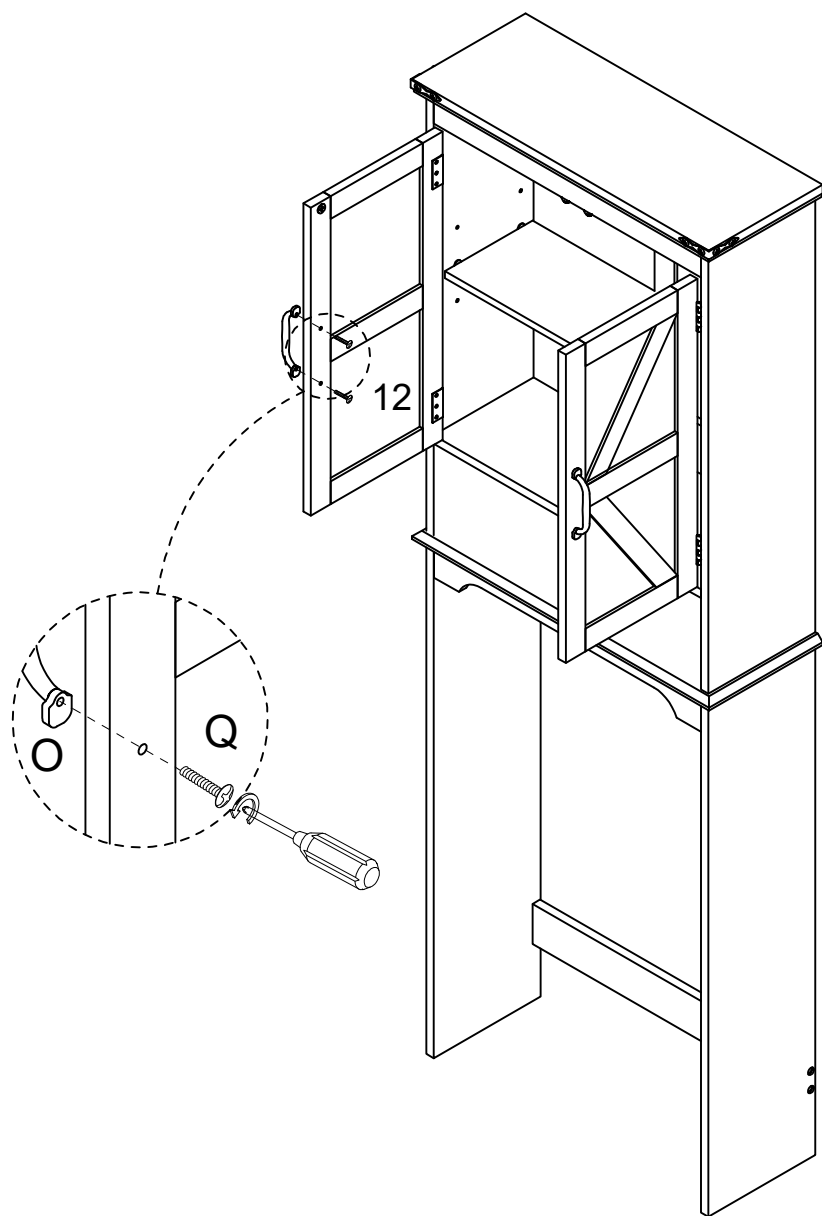X4



Step 23

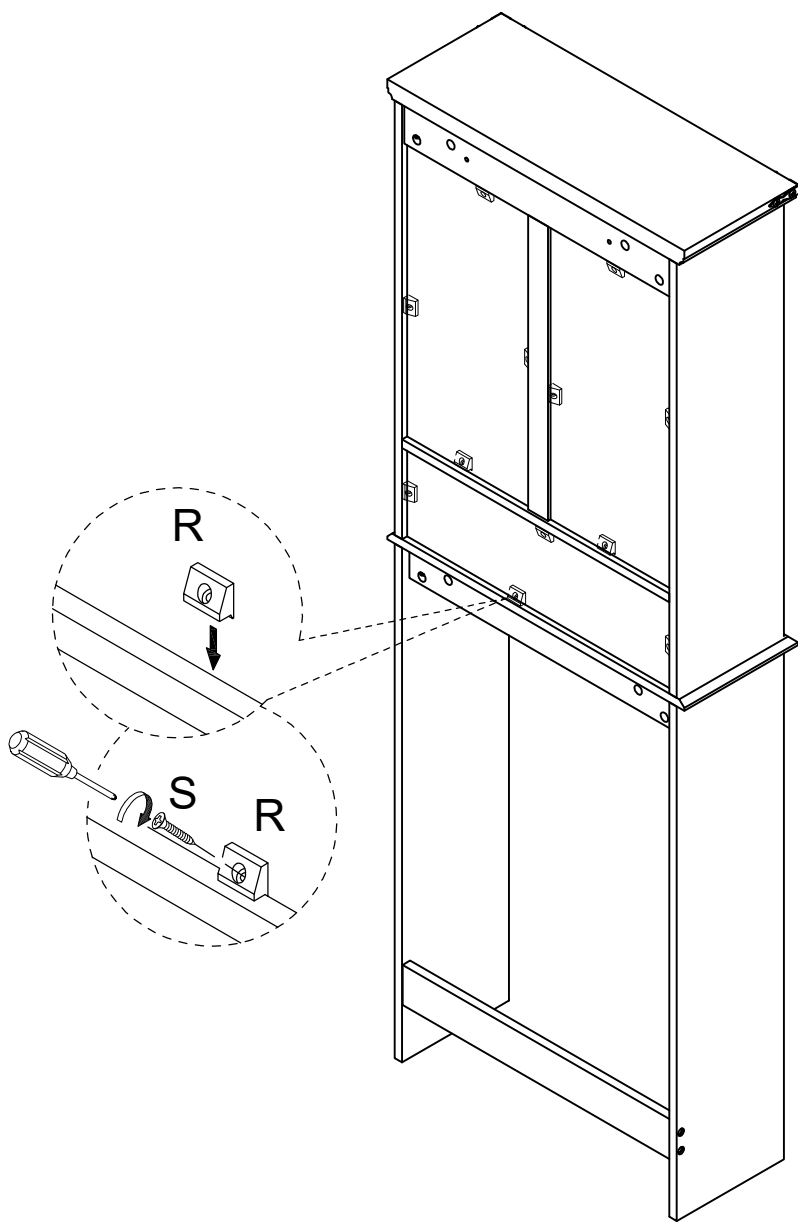

Q	O
	
X2	X1


Step 24




R	S
	
X12	X12


Step 25

Make Four holes 45MM deep

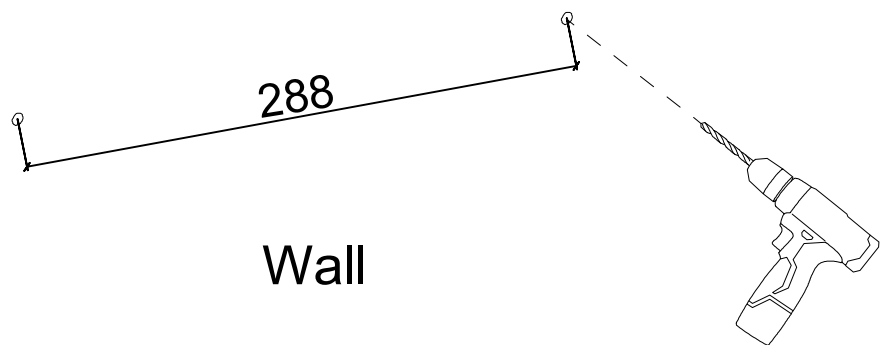



Step 26

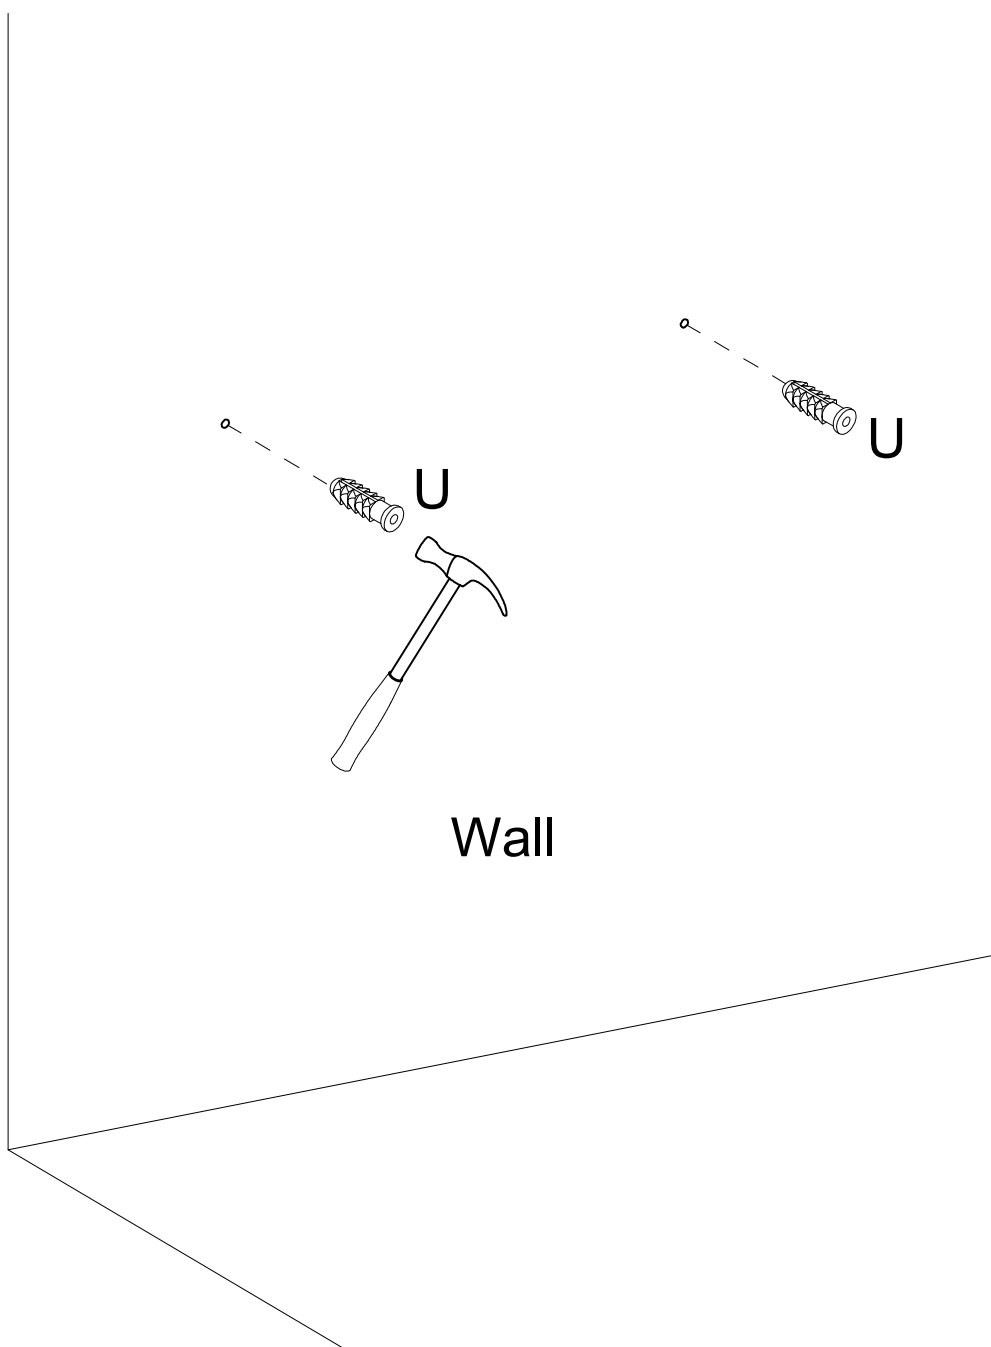

U

X2

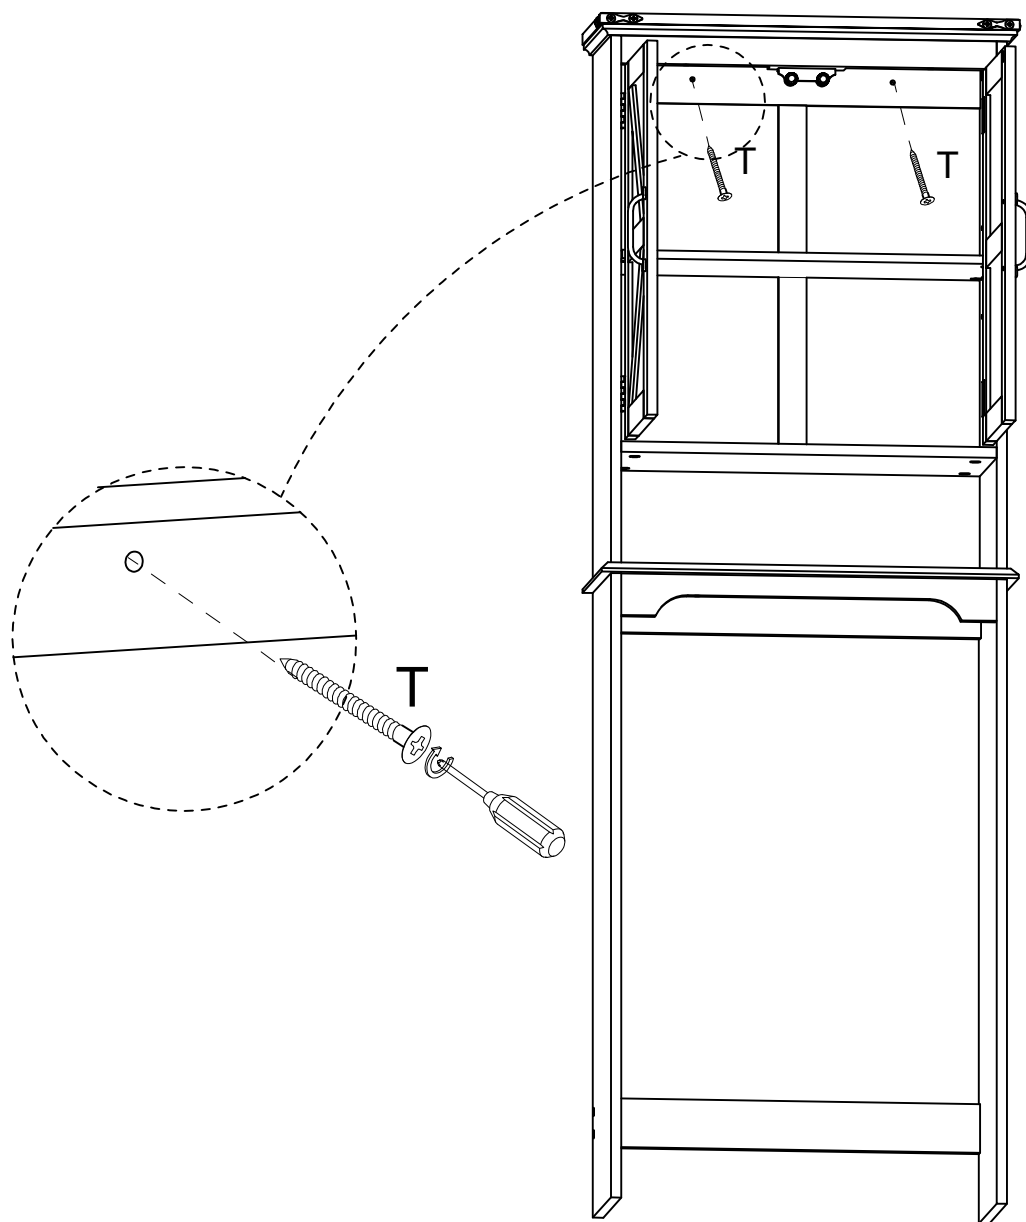Step 27



T

X2

Step 28

