
#### Item #: LM058-24 Assembly Instructions

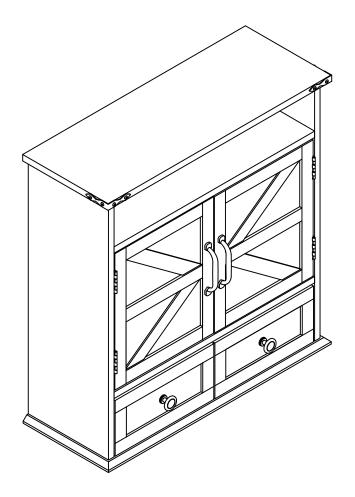


If you have any questions, please follow these steps ("Find Your Orders" - "Problem with the Order" - "Contact Seller") to contact our customer service. Thanks!

Revsied 18/05/2024

#### **General Assembly Guidelines**

- I. Ensure that all parts and hardware are available before beginning assembly.
- ||. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

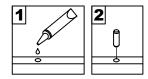


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.



M. A Phillips head screwdriver is required for the assembly of this product.



VII. Power tools should not be used to assemble this product.

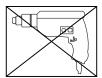

## Parts List


#### Hardware List

Α		Ø8x30mm	Wooden dowel	14	pcs
В		Ø6x35mm	Cam bolt	22	pcs
С		Ø15x11mm	Cam lock	17	pcs
D	AD)	Ø15x9mm	Cam lock	5	pcs
Е		Ø30mm	Sticker	22	pcs
F	ammm —@	Ø6x50mm	Screw	4	pcs
G		M 4	Hex Key	1	рс
Н			Screw	2	pcs
1		Ø5x13x26mm	Shelf holder	4	pcs
J	@mmmp>	Ø4x32mm	Screw	5	pcs
K		Ø3x12mm	Screw	22	pcs
L	So So		Door stopper	1	рс
M	٠٠٠		Three fold hinge	4	Set
N			Plastic stopper	2	pcs
0	<======(\$)	Ø3x15mm	Screw	2	pcs
Р			angle iron	2	pcs
Q			Handle	2	pcs
R	<b>©</b>		Knob	2	pcs
S		Ø4x9mm	Bolt	2	pcs
Т	(S)	Ø4x19mm	Bolt	4	pcs
U	< √	Ø5x55mm	Screw	2	pcs
V		Ø7x40mm	House lizard	4	pcs
W			Plastic wedge	4	pcs
X	(J)	Ø3x17mm	Screw	4	pcs
Υ	<======\(\frac{1}{2}\)	Ø5x40mm	Screw	2	pcs
Z			Glue tube	1	рс

Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly.

Some extra hardware may also have been included.

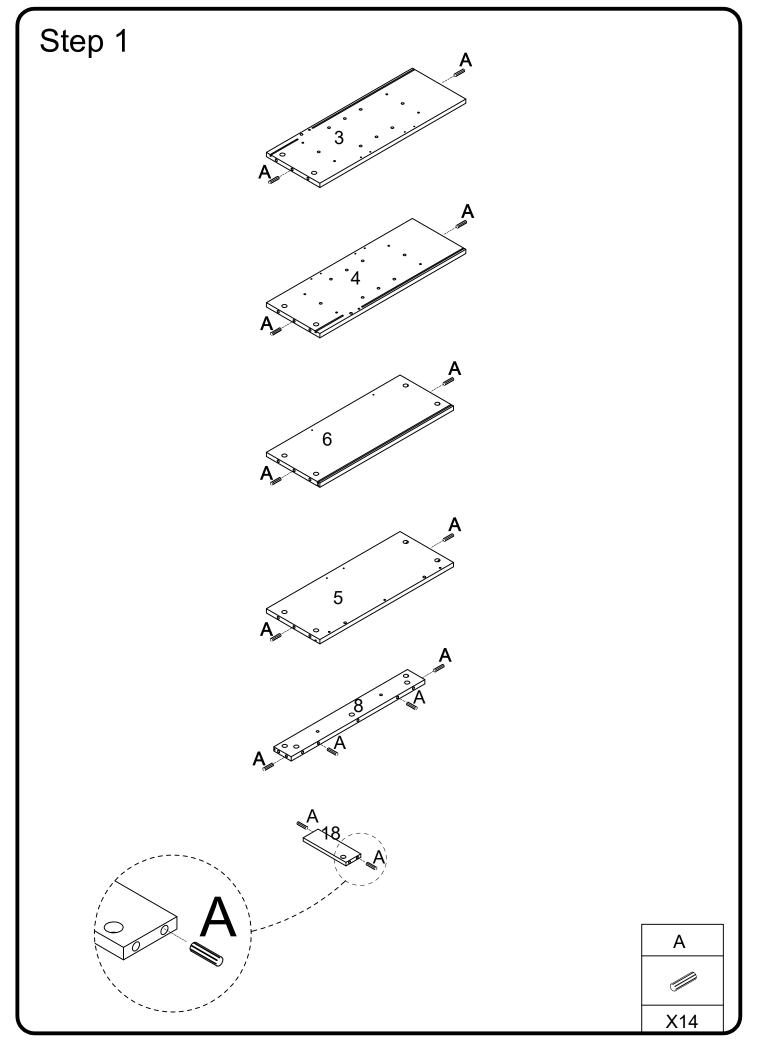


# Step 2 В

X22






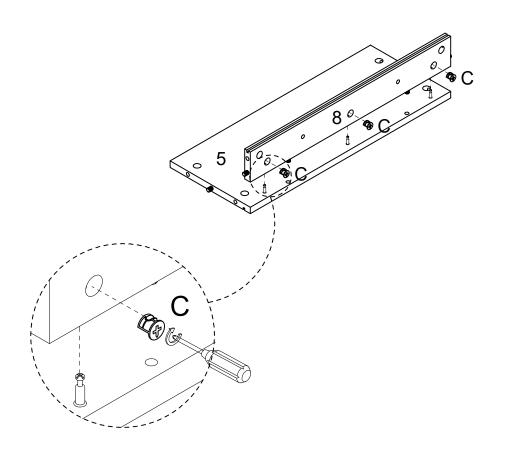


С





Х3

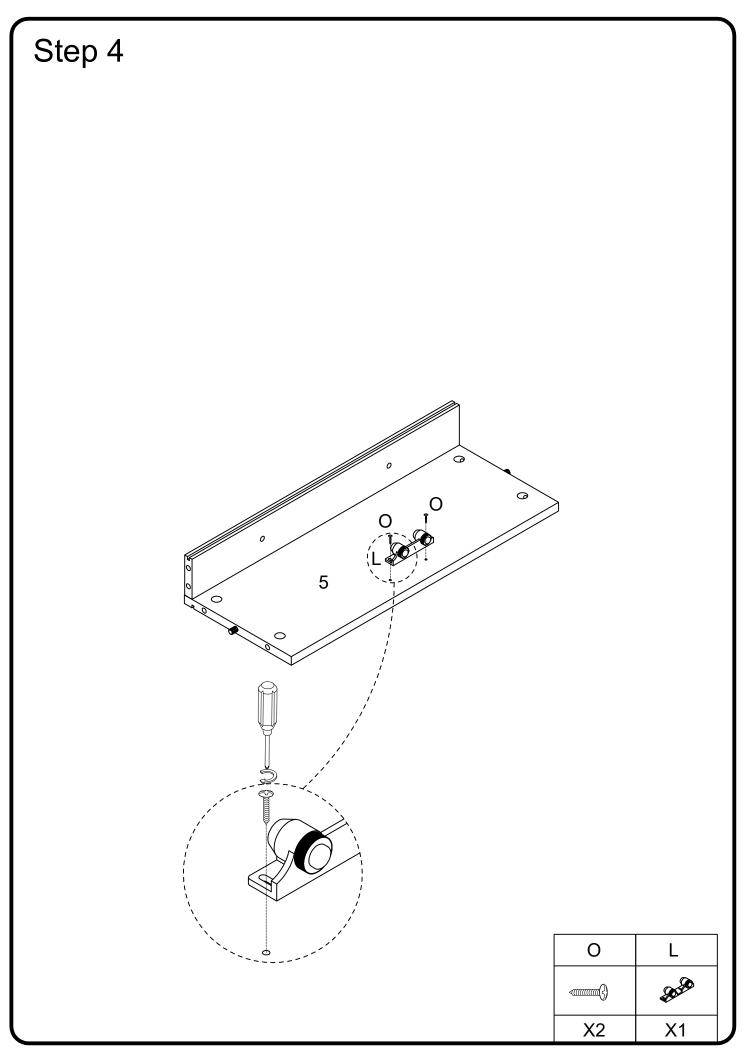



## Step 5 K Ν

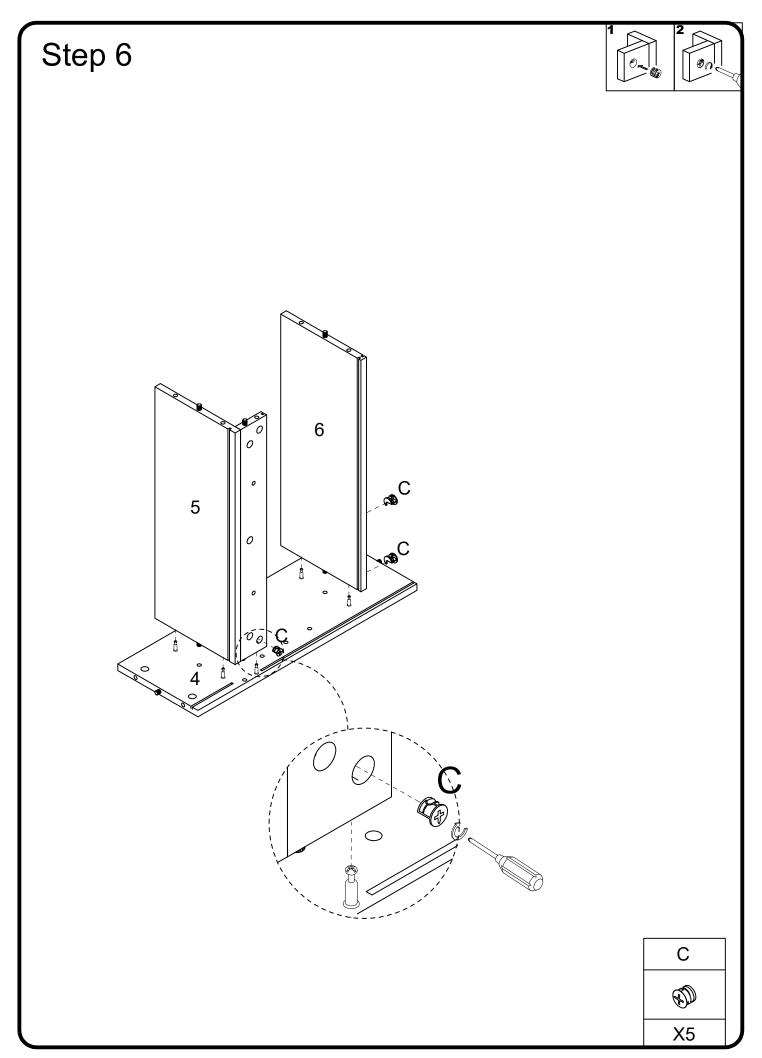


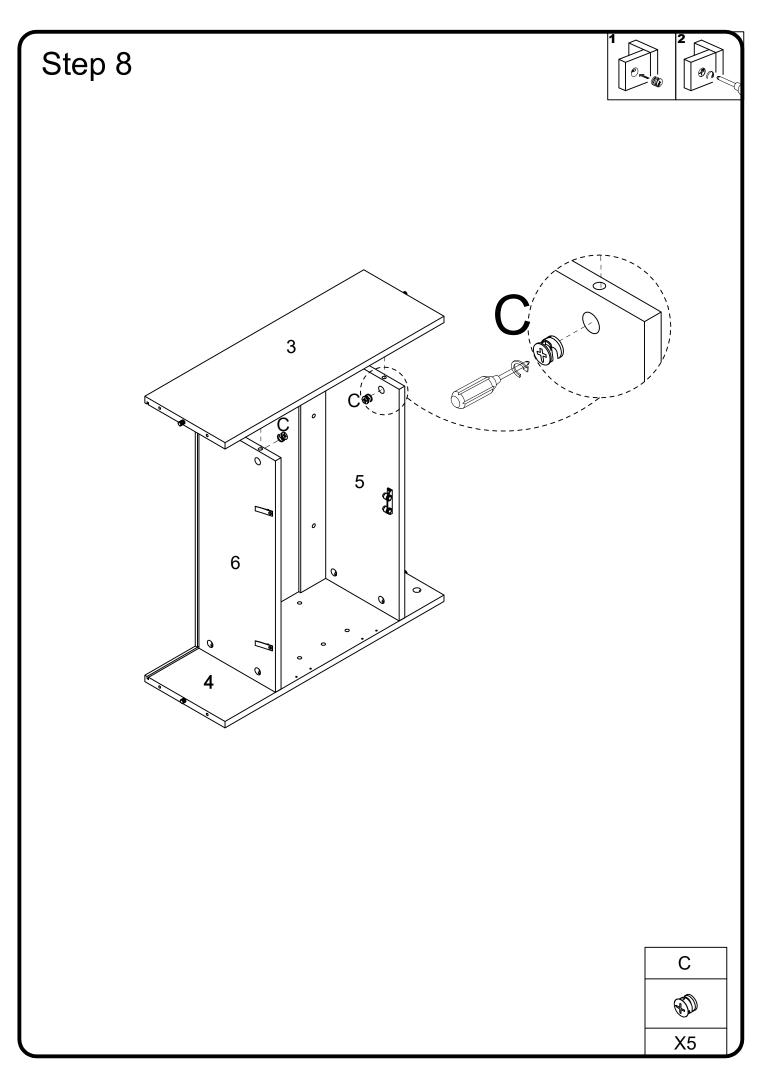


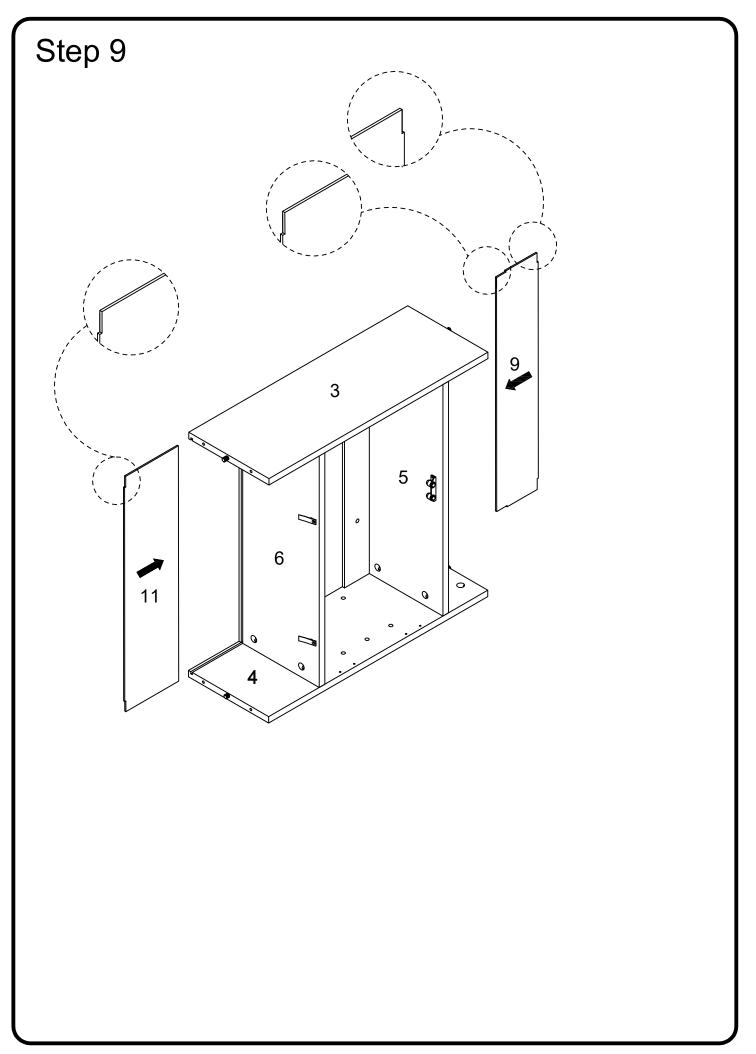

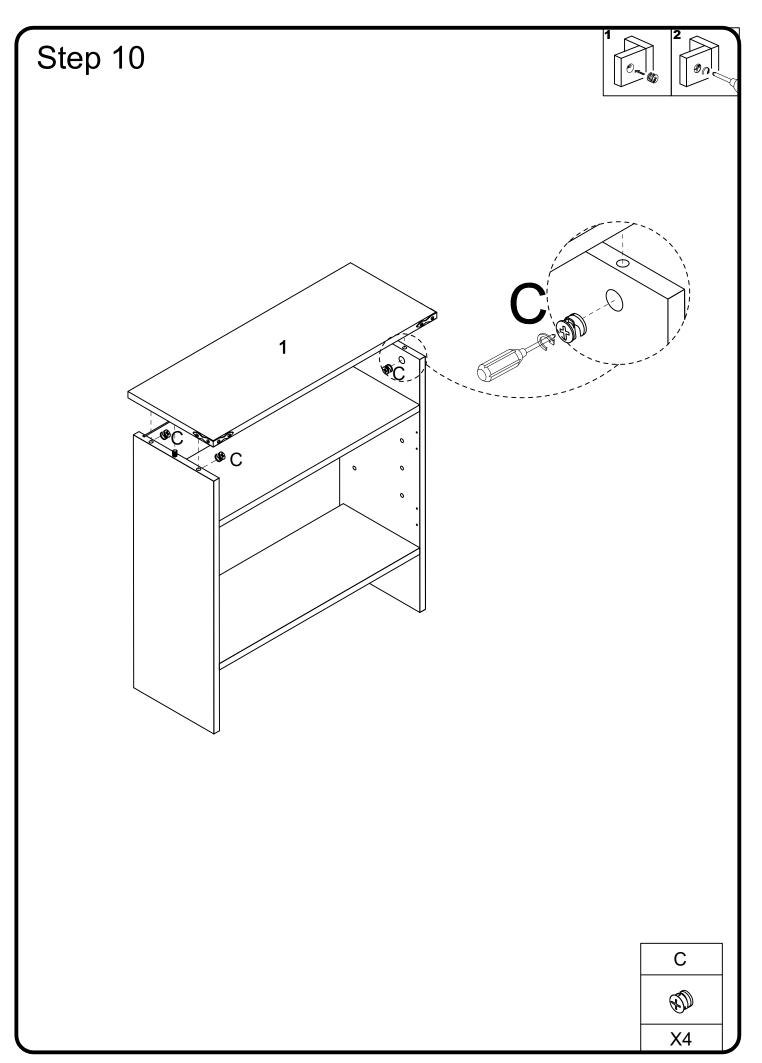


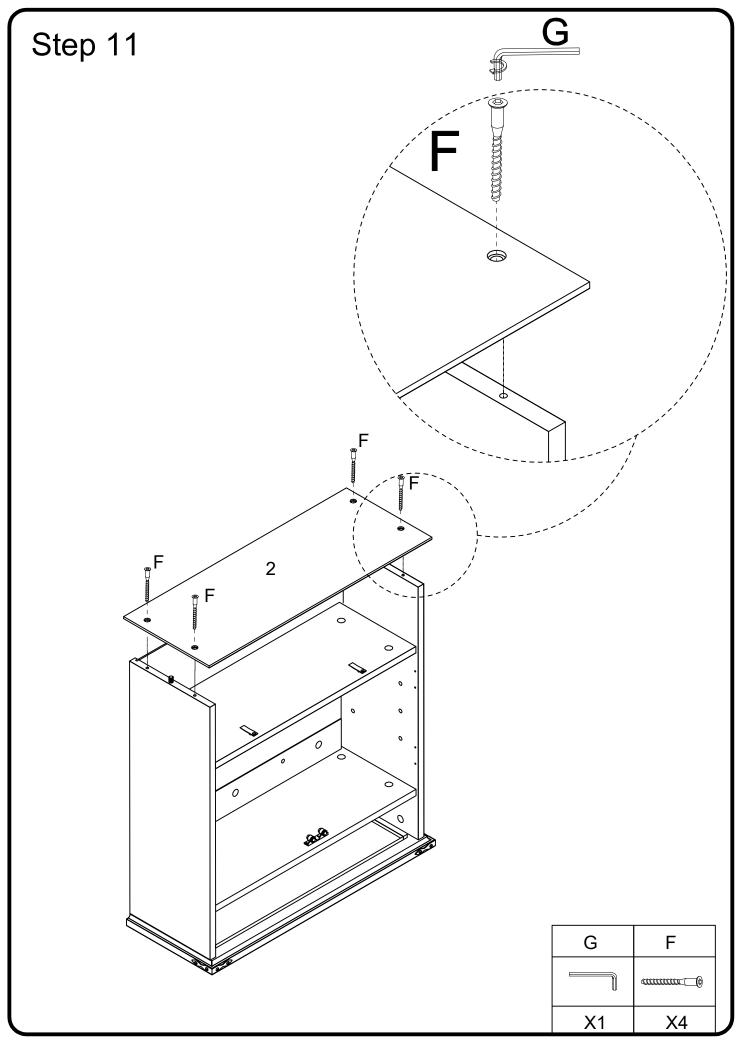


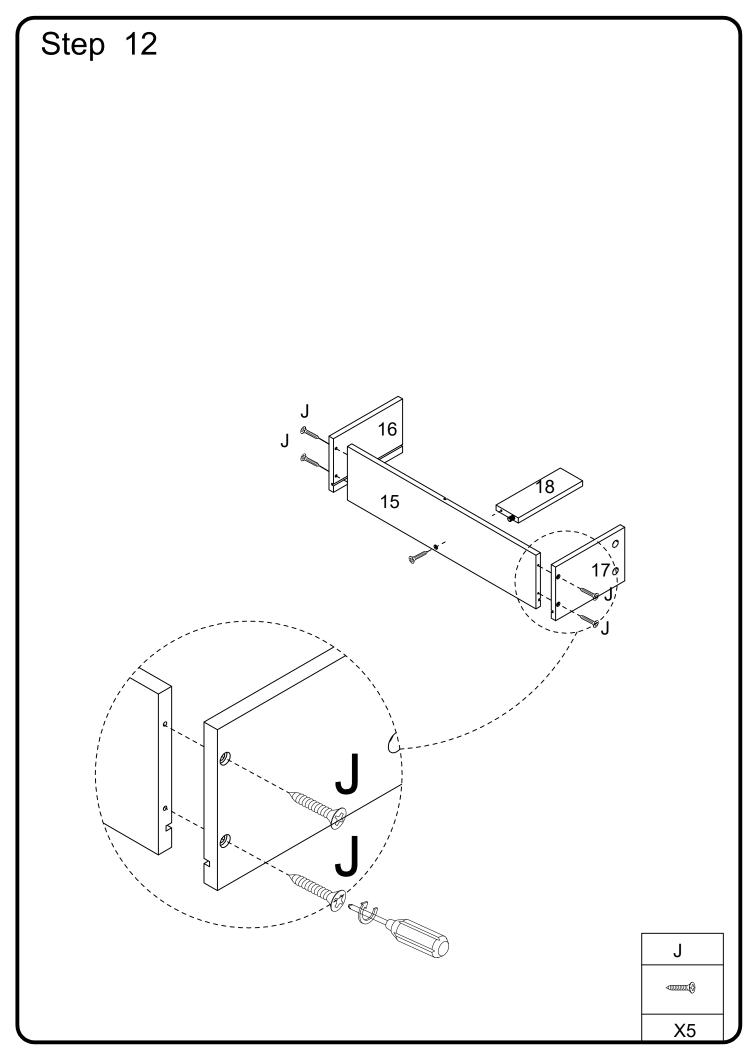


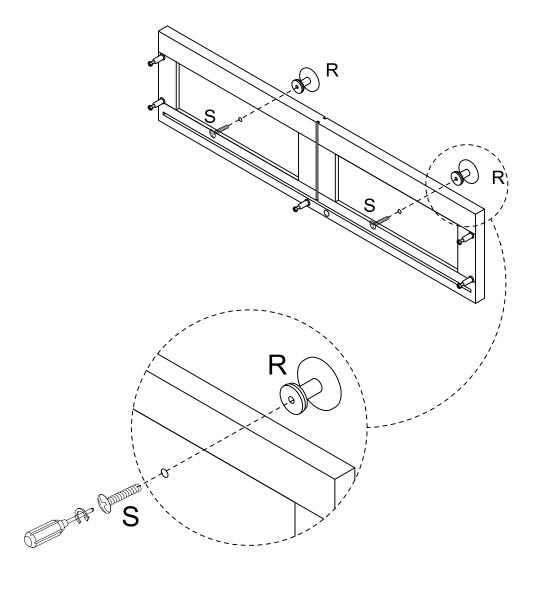



S	R		
(S)	<b>©</b>		
X2	X2		

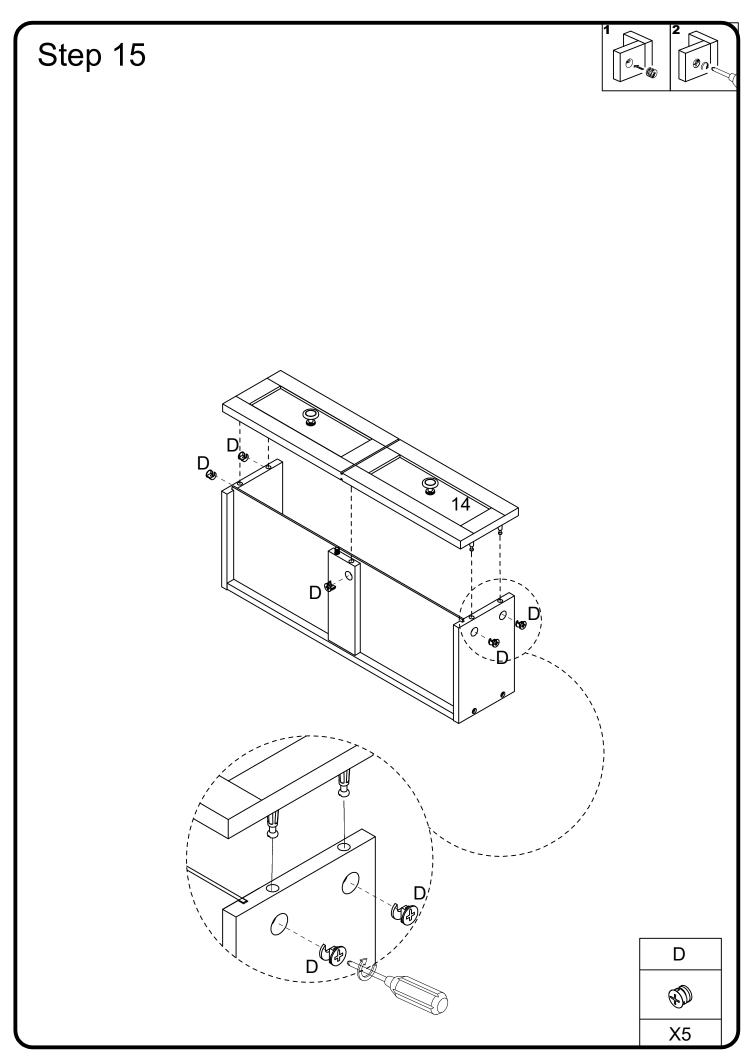

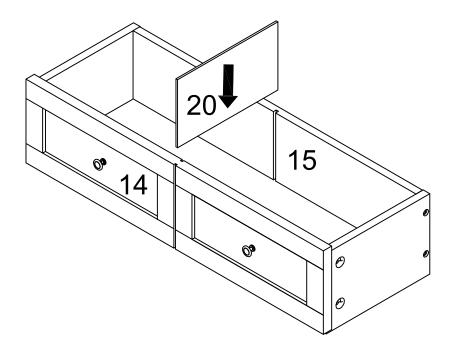

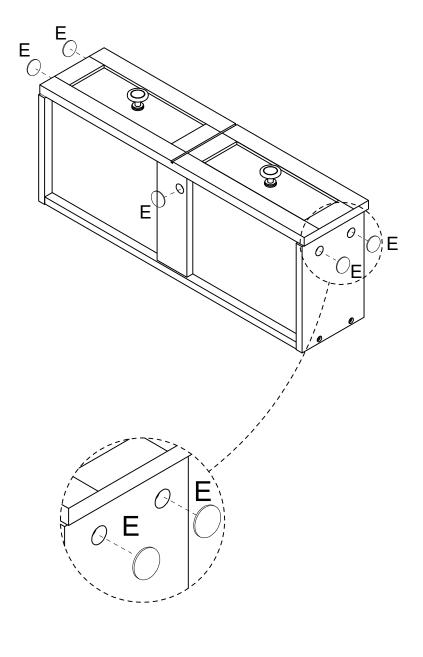


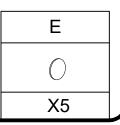

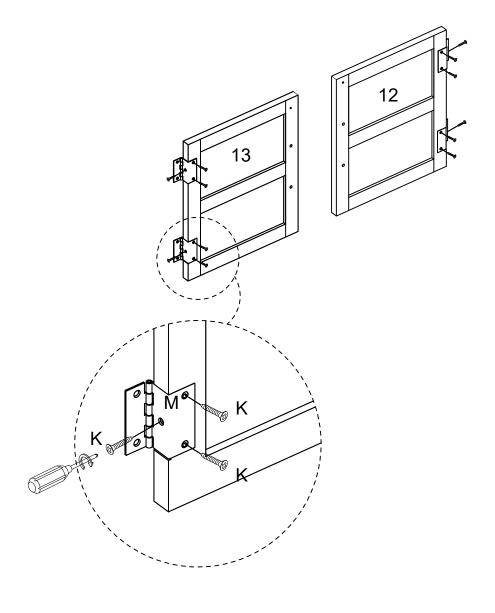

K	М
	<u>ب</u> رئين • • •
X12	X4

#### Step 19 Q Ĥ<sup>®</sup> 12 13 Н Т Q **W** X2 X2 X4

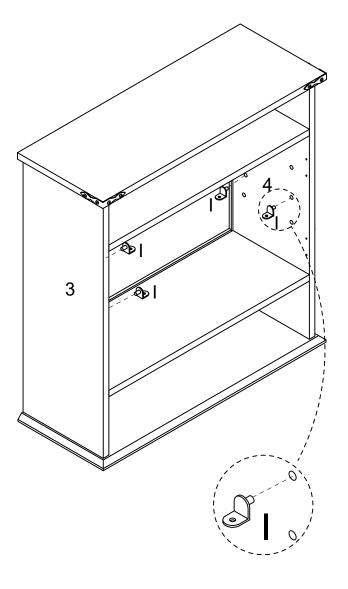



# Step 21 Finished edge

### Step 22 É E 0 E $\mathbf{H}^{\theta^{--}}$ E E

### Step 23 13 3 12 K X8

