# **Assembly Instructions**


#### Care & Maintenance

0	Not for commercial use. For residential use only.
✓ <b>fi</b>	Furniture may scratch floors. We recommend using furniture pads to protect yourd floors.
Ø <u></u>	Do not put hot items directly on furniture surface.
clean	Do not clean furniture with harsh cleansers or polish.
0 0	Do not place furniture under direct sunlight.
0	Do not place furniture near heating or cooling vents.
0 1	Do not write on furniture without a padded barrier to protect the surface.
Ø 🔾	Do not place furniture outsideFor indoor use only.
Ø 1	Stains may be removed with mild soap solution and damp cloth.
Ø 🔻	Children should not climb or jump on the furniture.
<b>✓ ©</b>	Dust and pick-upspills using a clean, non-colored, lint-free cloth.

Please look in the box for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.

## Bed N757P228844B / N757P228845B

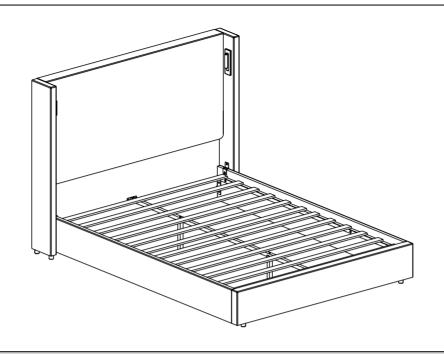


Part List	N757P228845B		
Label	Picture	Description	QTY
3		Foot board	1
6		Side rail(L)	1
7		Side rail(R)	1
8		Side rails support bar	2
9		Center support bar	1

10)		Slats	2
(11)		Middle support leg	2
12)		Center support bar fitting	2
13)		Hinge(L)	1
(14)		Hinge(R)	1
(15)		Bedhead connection iron sheet(L)	1
16)		Bedhead connection iron sheet(R)	1
17)		Bed side reinforced iron sheet	2
18)	0	Connecting iron sheet	1
19		Bed leg	6

<u>ParList</u> N757P228844B				
Label	Picture	Description	QTY	
1)		Headboard(1)	1	
2		Headboard(2)	1	
4		Side flank(L)	1	
5		Side flank(R)	1	
20		Power plug	1	
21)		Connecting line	1	

<u>Hardware</u>	_ N757P228844B			
Label	Picture	Description	QTY	
А		Bolts (M8x25mm)	12	
В		Bolts (M8x20mm)	14	
С		Bolts (M8x40mm)	12	
D	9	Bolts (M6x35mm)	10	
E		Allen Wrench(M5)	1	
F		Allen Wrench(M4)	1	

### **Assembly Preparation**

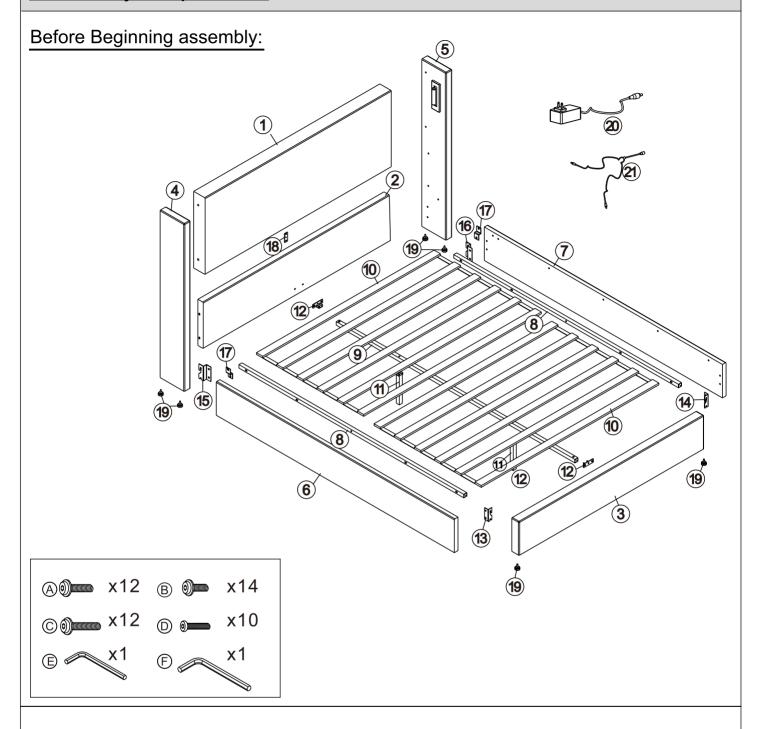



• Read instructions, cover to cover



Have 2 adults on hand for assembly



Do not assemble on flooring or carpet




Assemble on a clean non-marring surface (packing foam)




• Save all packaging until finished

### **Assembly Steps**


#### **OVERVIEW**

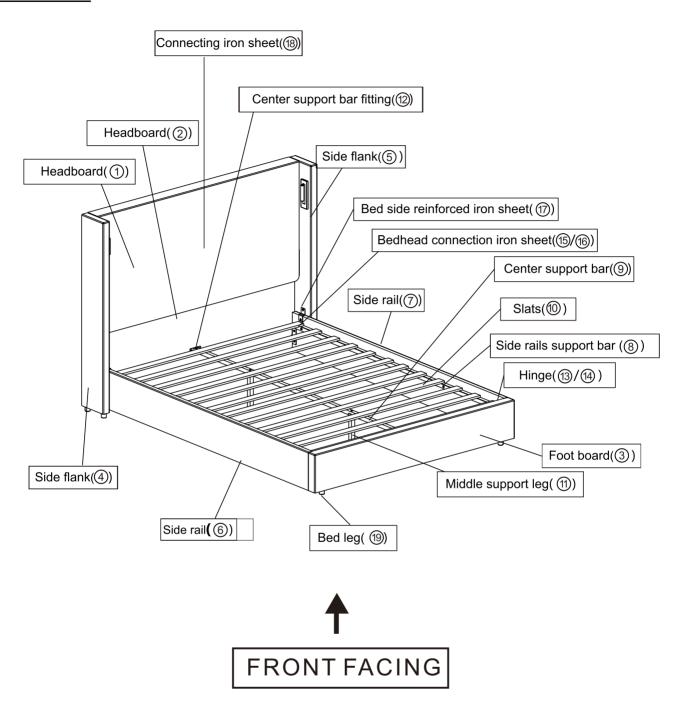


This Bed have multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly. Note: It is recommended that you have an adult partner to assist during the entire assembly process.

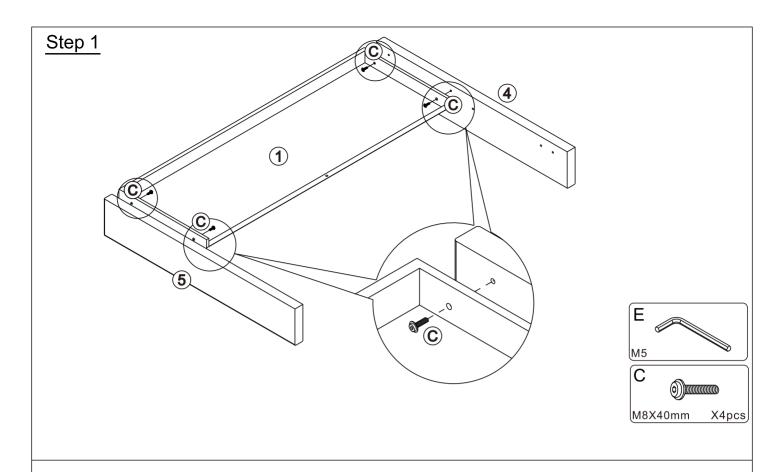


Attach the Side flank (4) to Headboard (1) with Bolts (2) by using Allen Wrench (2).

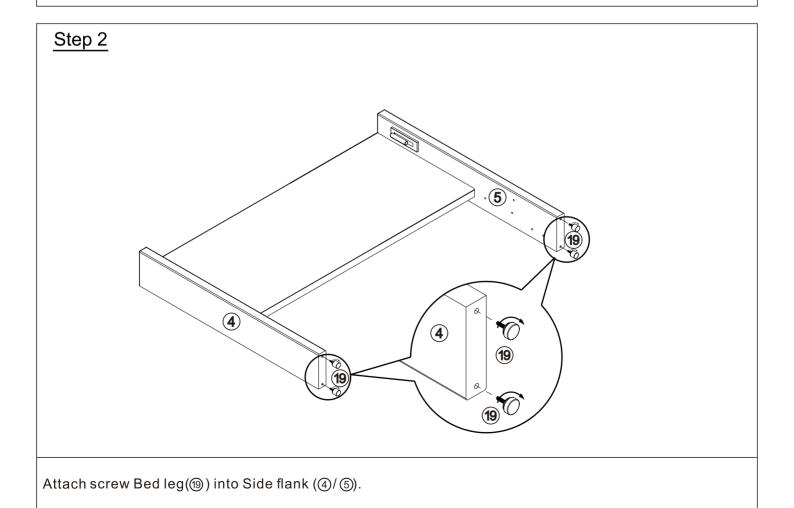


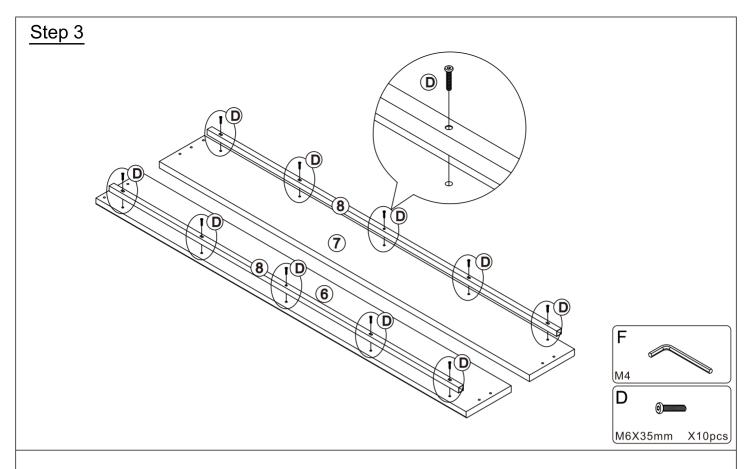


 $Attach \ the \ Side \ rails \ support \ bar \ (\ \textcircled{\$}\ ) \ to \ Side \ rail \ (\ \textcircled{\$}\ ) \ with \ Bolts \ (\ \textcircled{\texttt{D}}\ ) \ by \ using \ Allen \ Wrench \ (\ \textcircled{\texttt{F}}\ ).$ 

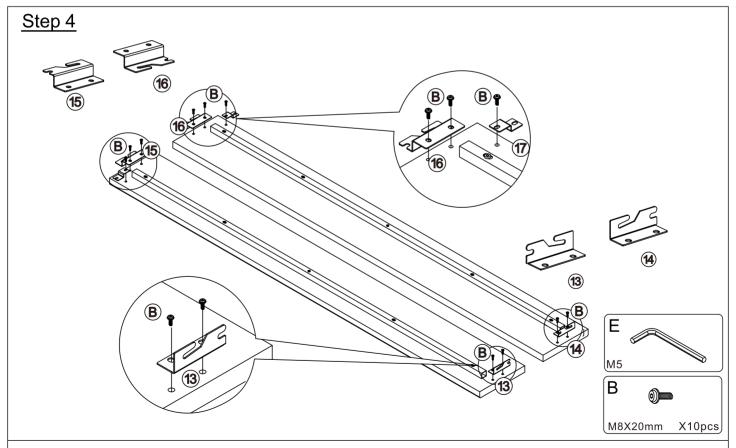


Attach the Bedhead connection iron sheet ((5)) and Hinge ((3)) to Side rail ((6)) with Bolts((3)) by using Allen Wrench ((5)).

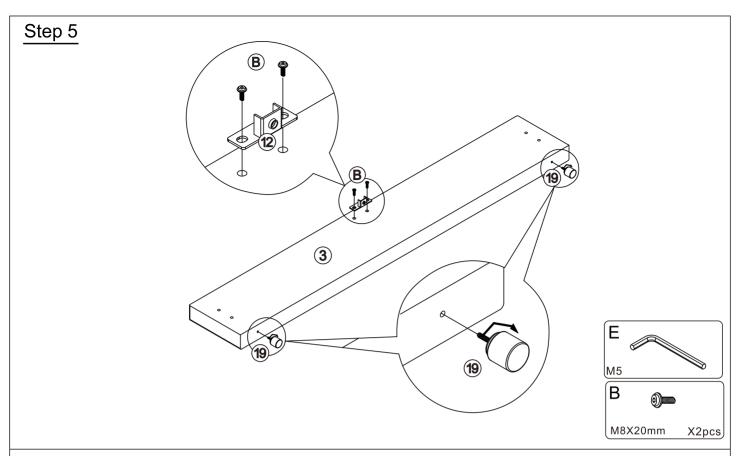


Attach the Center support bar fittings (12) to Footboard (33) with Bolts (136) by using Allen Wrench (126) and screw Bed  $\log(9)$  into Footboard (33).

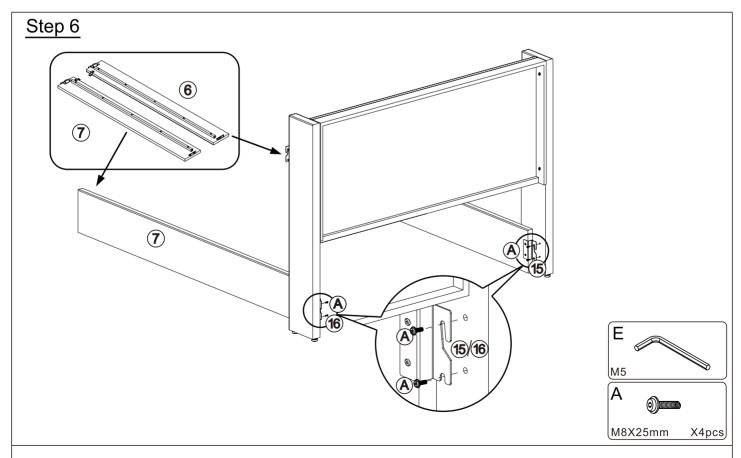


Attach the Side rail ((6/7)) to Side flank ((4/5)) with Bedhead connection iron sheet ((6/6)) and Bolts((4)) by using Allen Wrench ((5)).

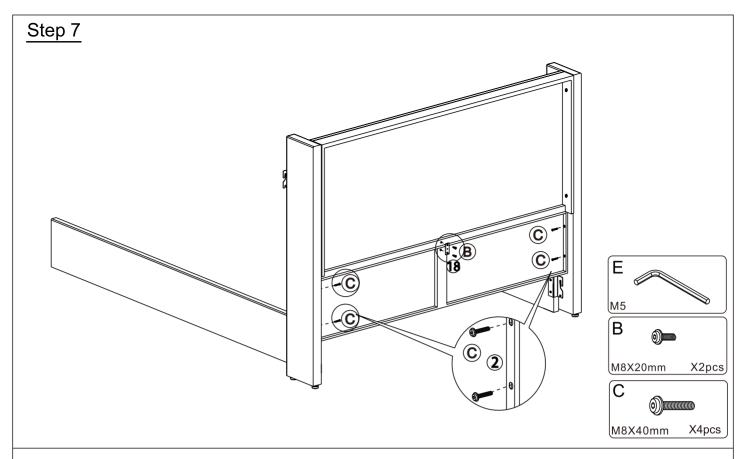


Attach Headboard (②) to Side flank (④/⑤) and the Connecting iron sheet (®) to Headboard (②) with Bolts( $\mathbb{B}/\mathbb{C}$ ) by using Allen Wrench ( $\mathbb{E}$ ).

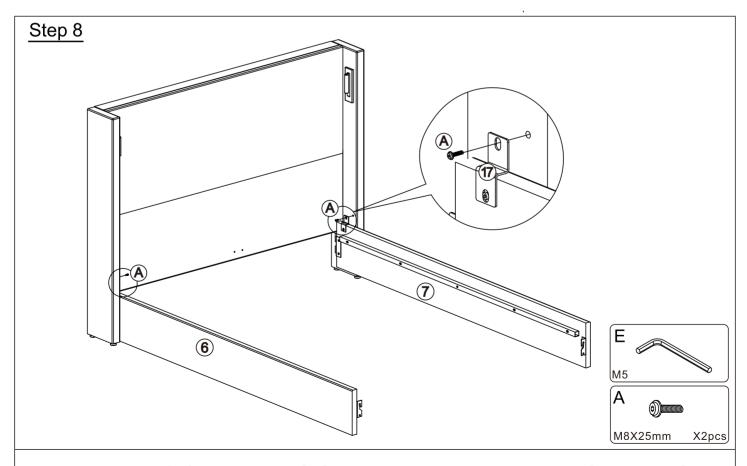


Attach the Side rail (6/7) to Side flank (4/5) with Bedside reinforced iron sheet (7) and Bolts (8) by using Allen Wrench (8).

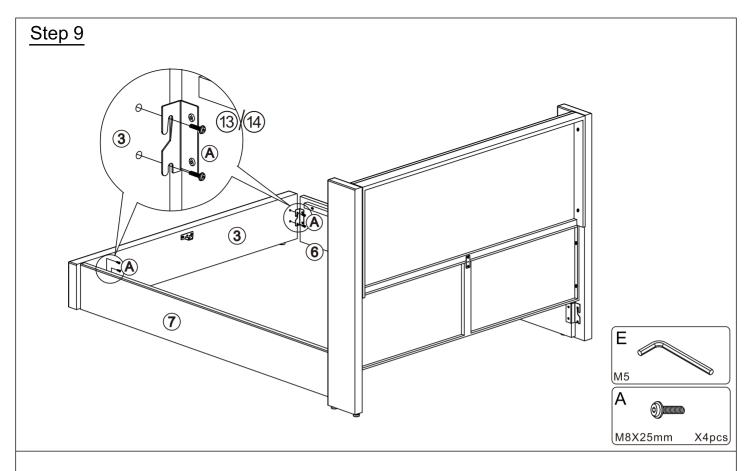


Attach the Side rail (6/7) to Footboard (3) with Hinge (3/4) and Bolts(A) by using Allen Wrench (C).

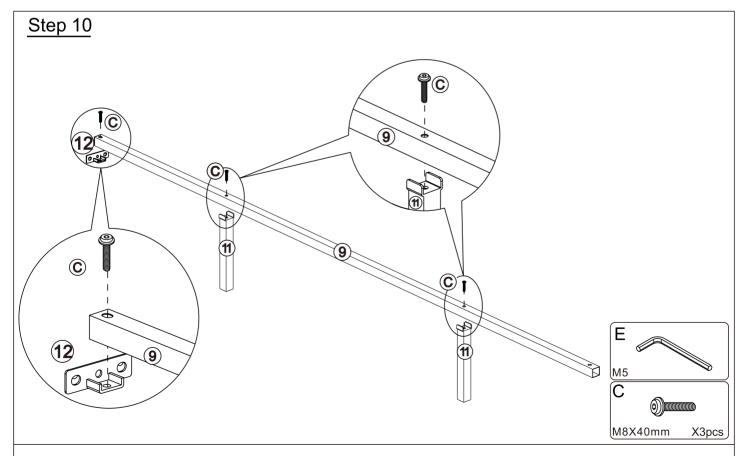

Attach the Center support bar ( 9 ) to Middle support leg ( 1 ) and Center support bar fitting ( 2 ) with Bots( 0 ) by using Allen Wrench ( E ).

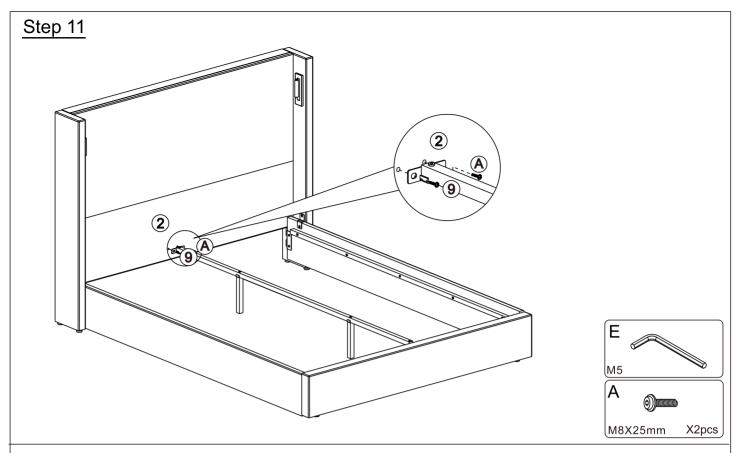

Attach the Center support bar (9) to Headboard(2) with Center support bar fitting (2) and Bolts(A) by using Allen Wrench (E).

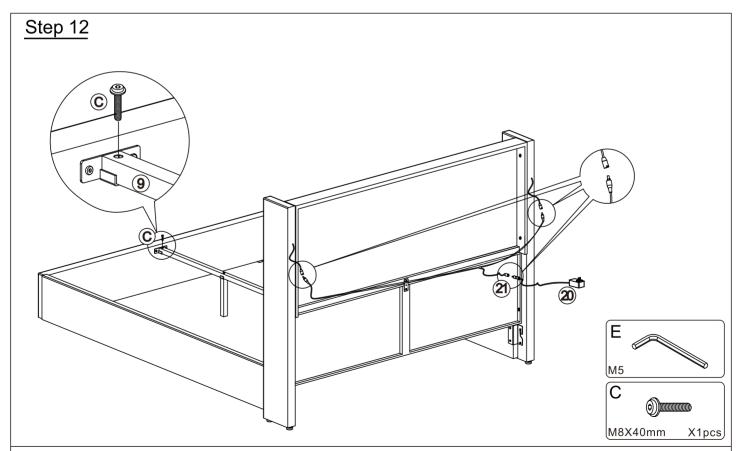

Attach the Center support bar ( 9) to Footboard( 3) with Center support bar fitting ( 2) and Bolts( C) by using Allen Wrench ( E). And Connect the two wires of Connecting line ( 2) with the line of Side flank ( 4/5). Then connect Connecting line ( 2) and The power plug ( 2).

