


ASSEMBLY INSTRUCTION


ITEM NO.:N719P246553

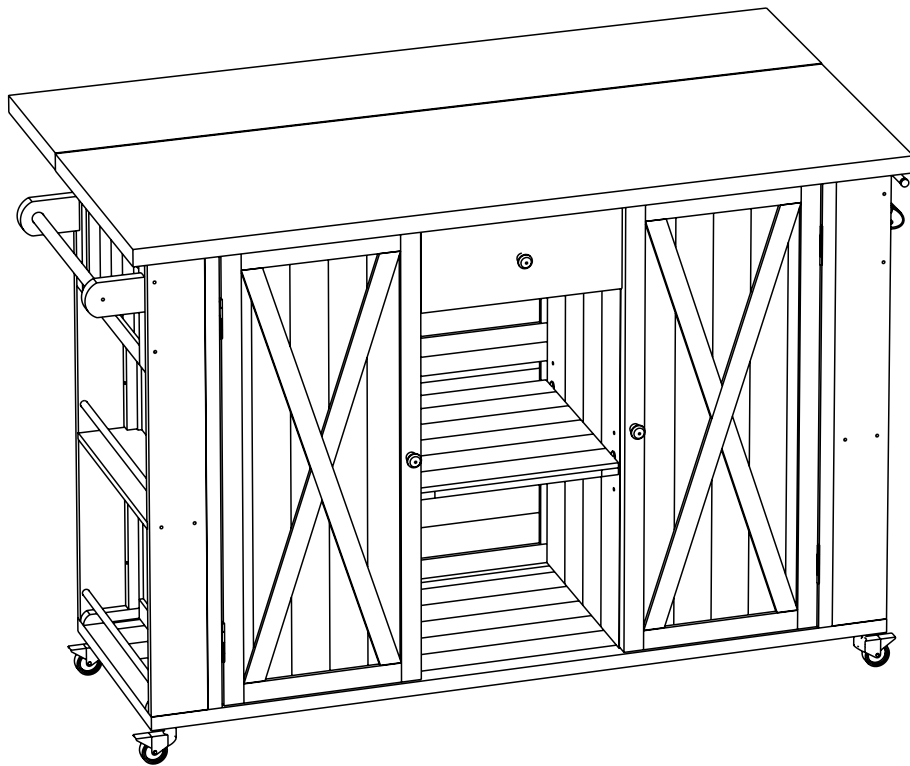

















IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THIS ITEM IS FULLY SET-UP.


Detail View

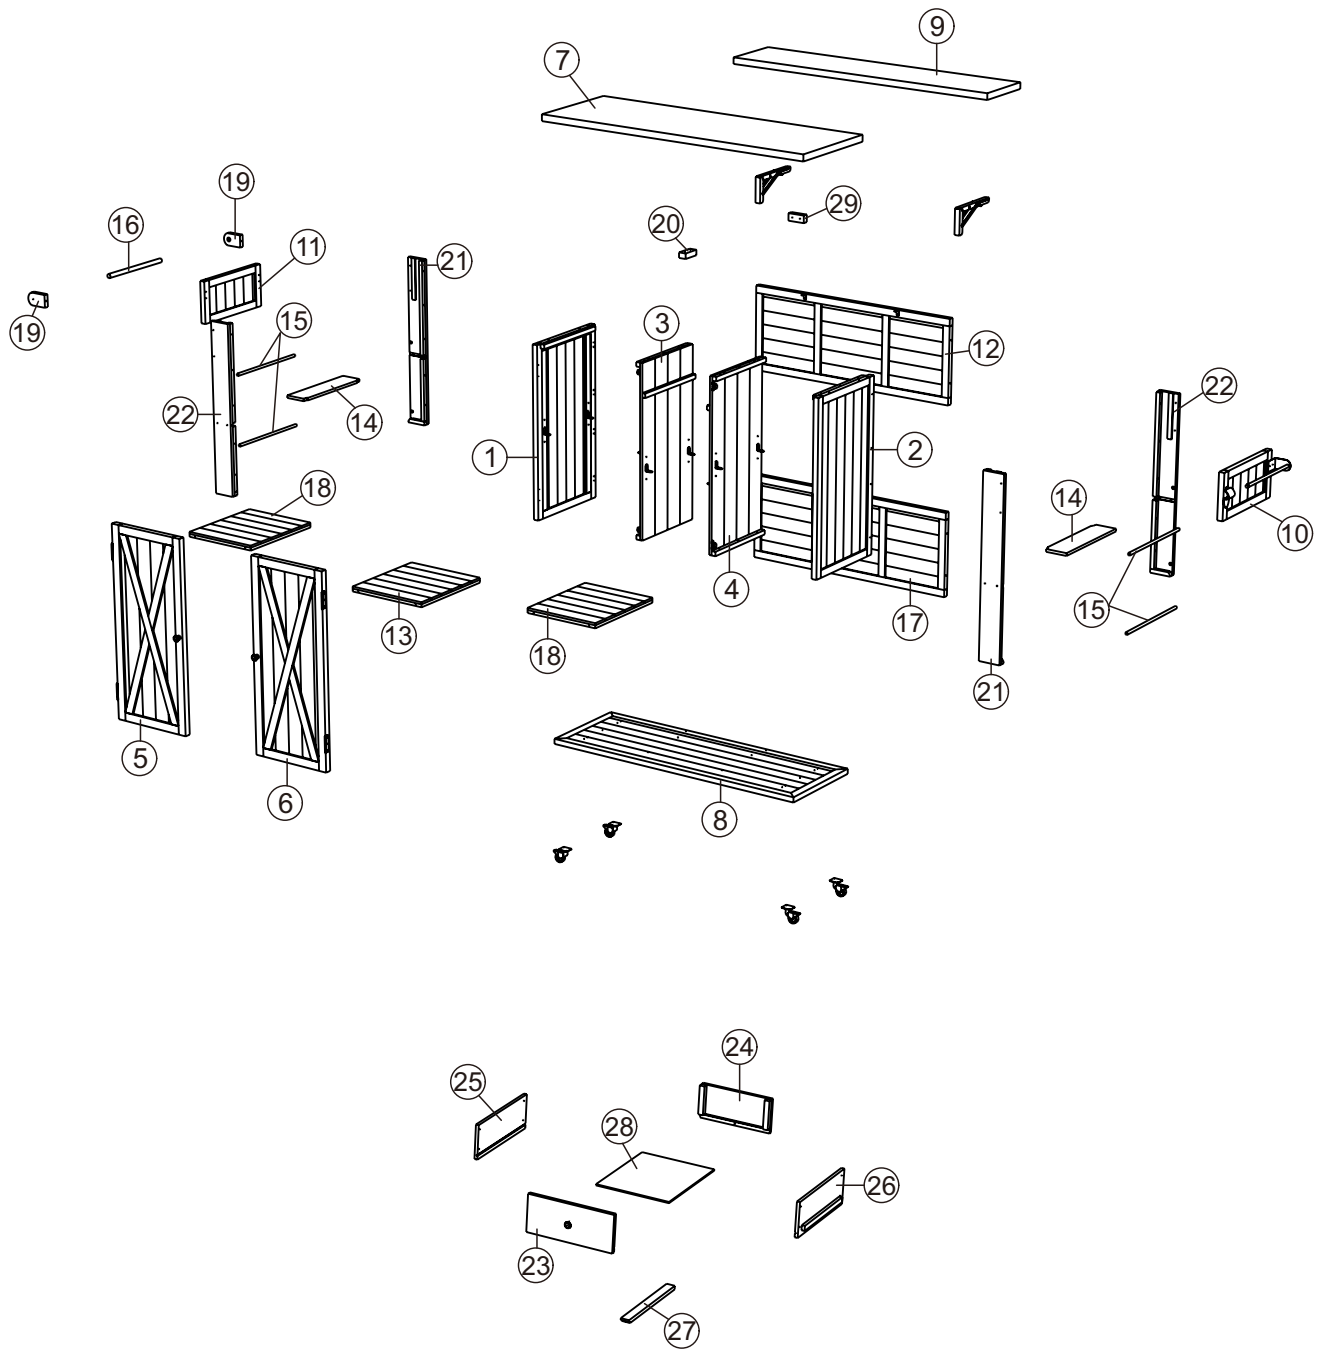


N719P246553

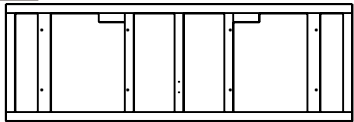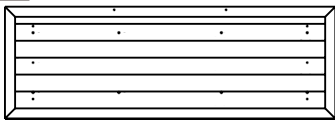1		2		3		4	
1pc		1pc		1pc		1pc	
5		6		7		8	
1pc		1pc		1pc		1pc	
9		10		11		12	
1pc		1pc		1pc		1pc	
13		14		15		16	
1pc		2pcs		4pcs		1pc	
17		18		19		20	
1pc		2pcs		2pcs		1pc	
21		22		23		24	
2pcs		2pcs		1pc		1pc	
25		26		27		28	
1pc		1pc		1pc		1pc	
29							
1pc							


Hardware List

A		B		C		D	
Ø 3.5*45		Ø 3.5*40		Ø 3.0*30		Ø 3.5*25	
24pcs		52pcs		20pcs		16pcs	
E		F		G		H	
Ø 3.0*16		Ø 3.5*30		Ø 3.0*16			
16pcs		10pcs		2pcs		27pcs	
I		J		K		L	
2pcs		12pcs		1pc		4pcs	
M		N		O			
3pcs		2pcs		1pc			

ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS!

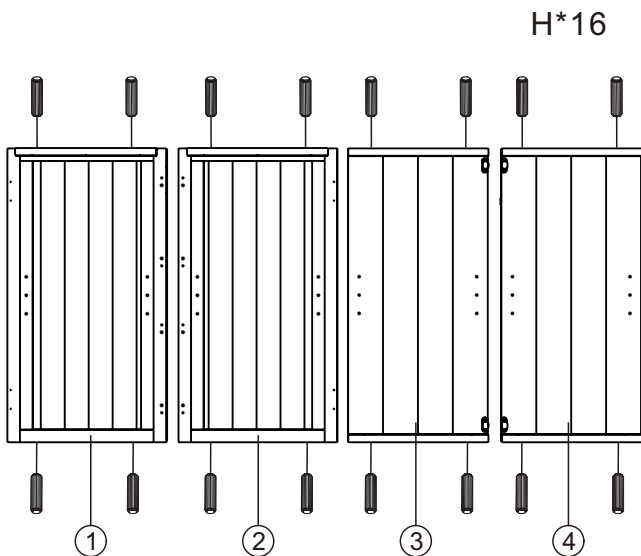

Step 1




H*16

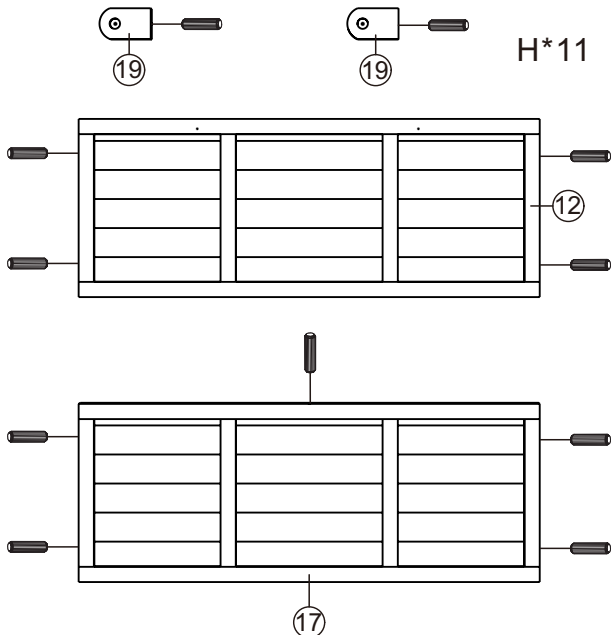

Step 2




H*11

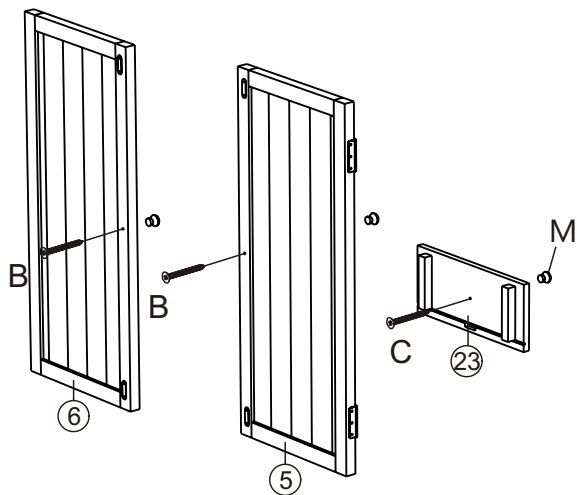


Step 3

B*2	C*1	M*3

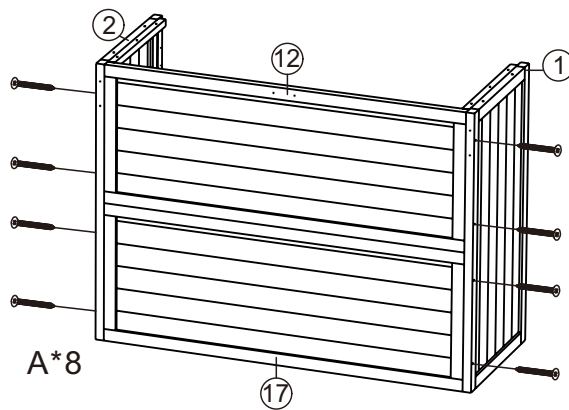


Step 4

A*8

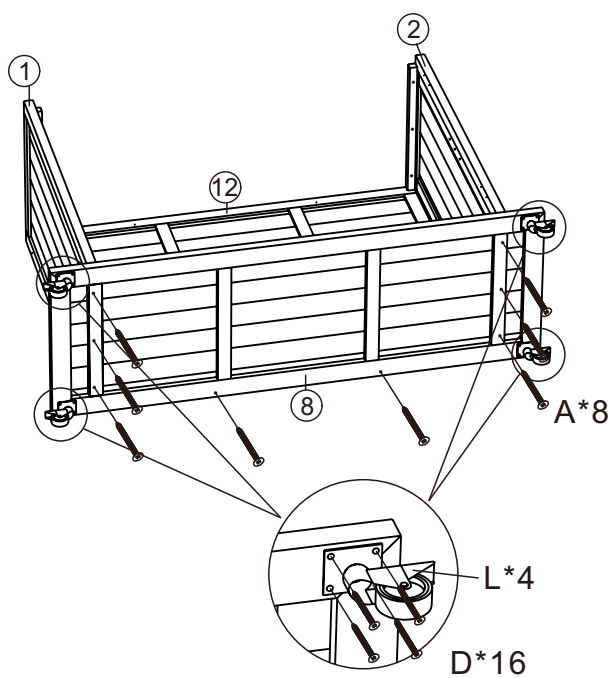


Step 5

A*8	D*16	L*4

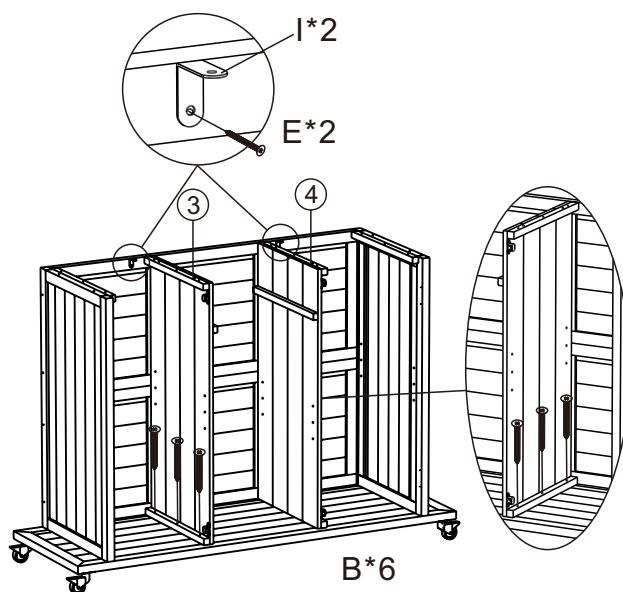

Step 6


B*6	E*2	I*2

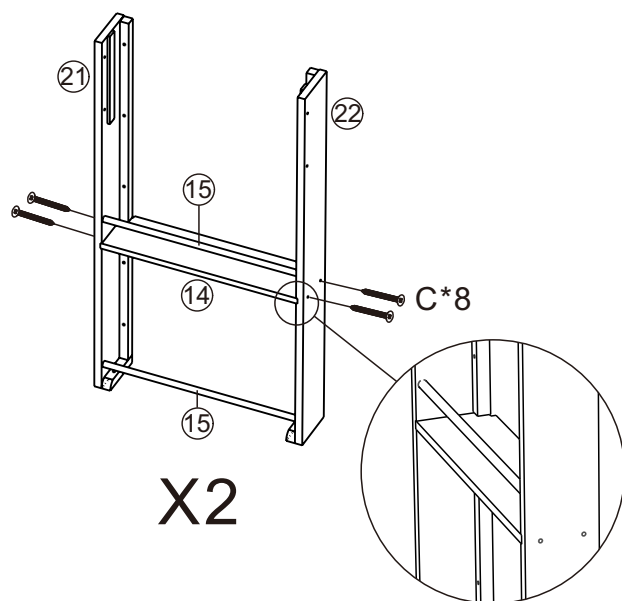

Step 7




C*8

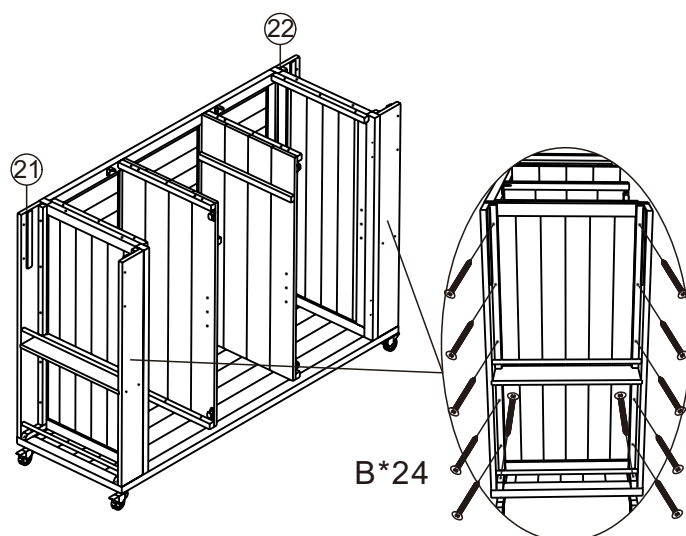

Step 8



B*24

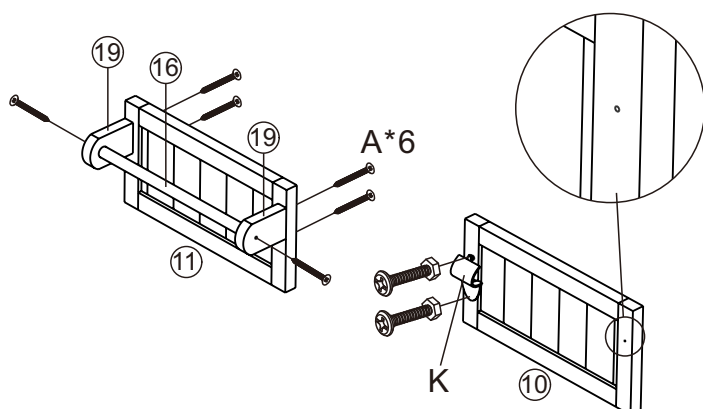


Step 9



A*6




K*1

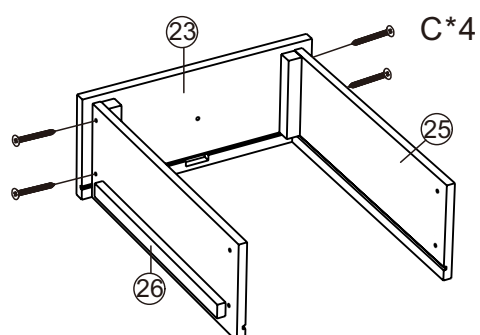

Step 10




C*4

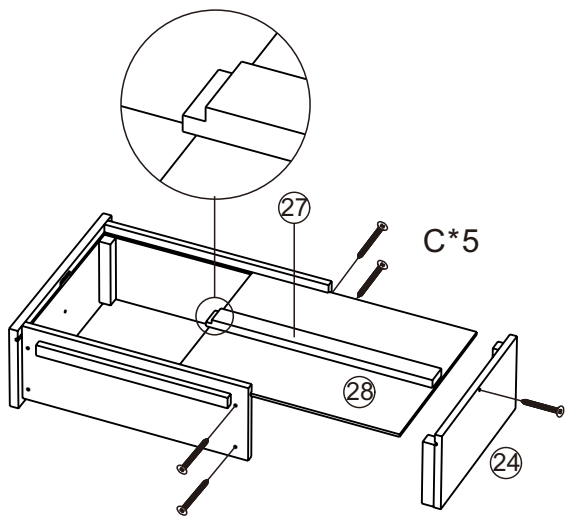

Step 11




C*5

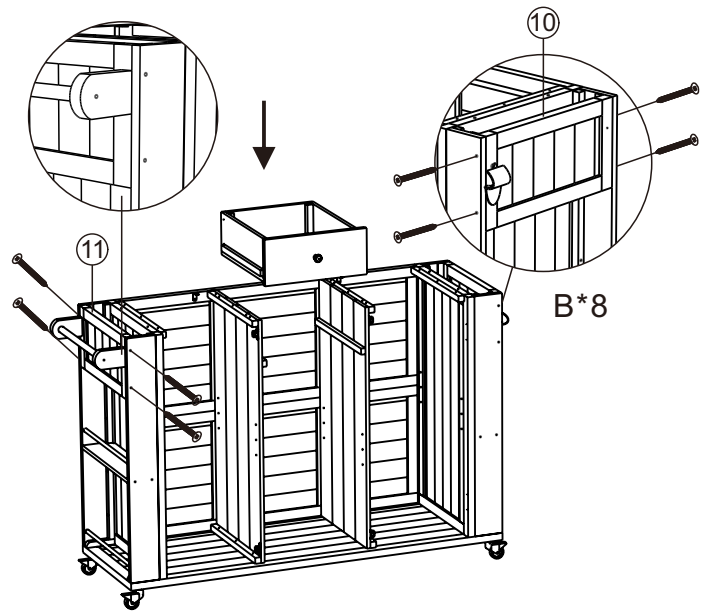

Step 12



B*8

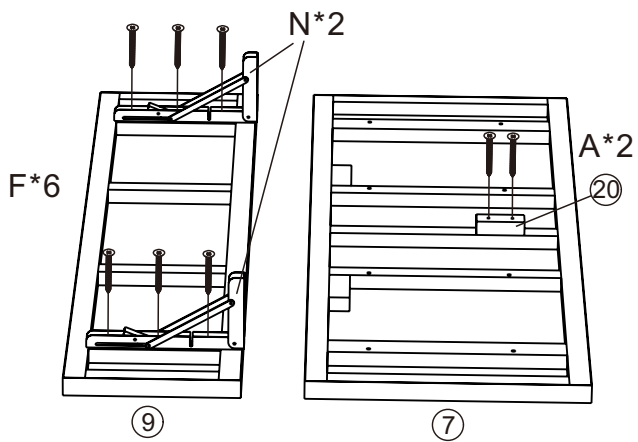


Step 13




A*2



F*6



N*2

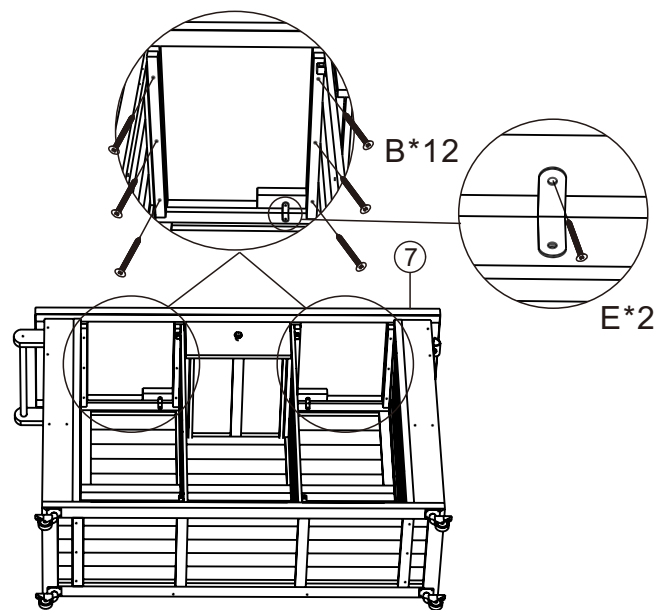


Step 14



B*12




E*2

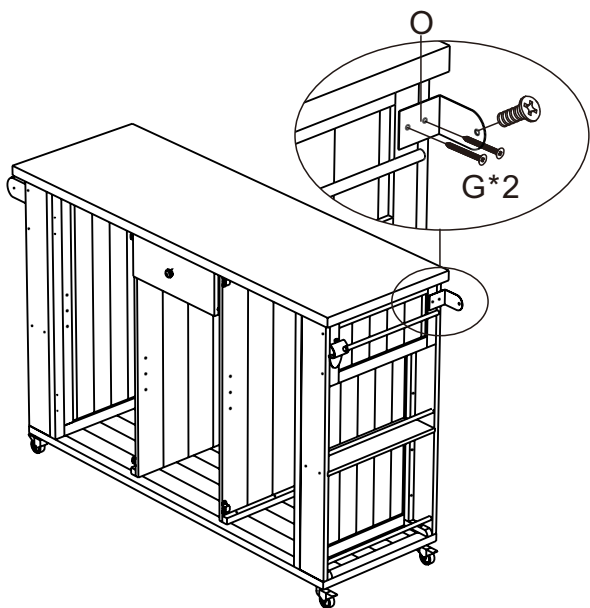


Step 15

	
G*2	O*1

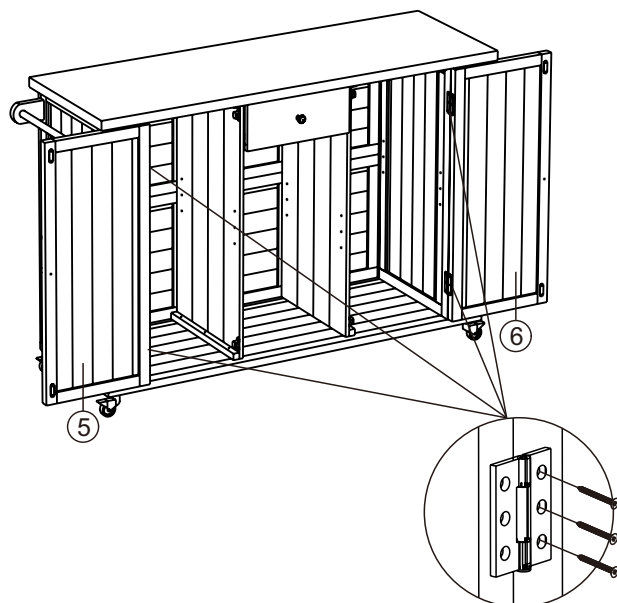


Step 16


E*12

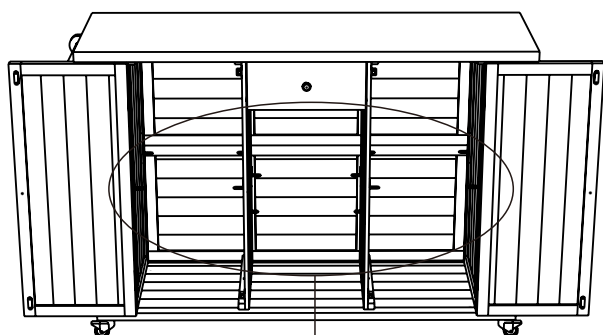


Step 17


J*12

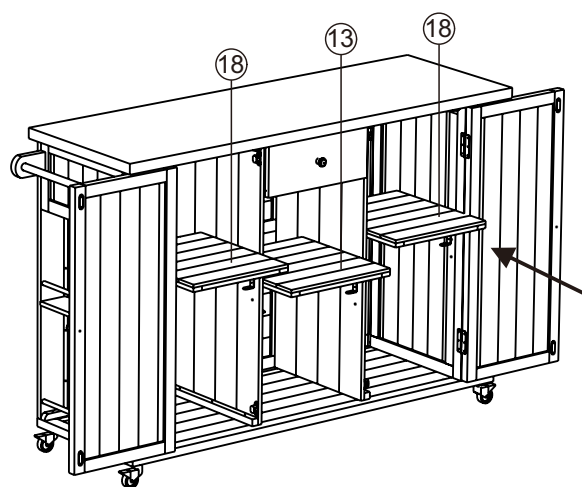


Step 18

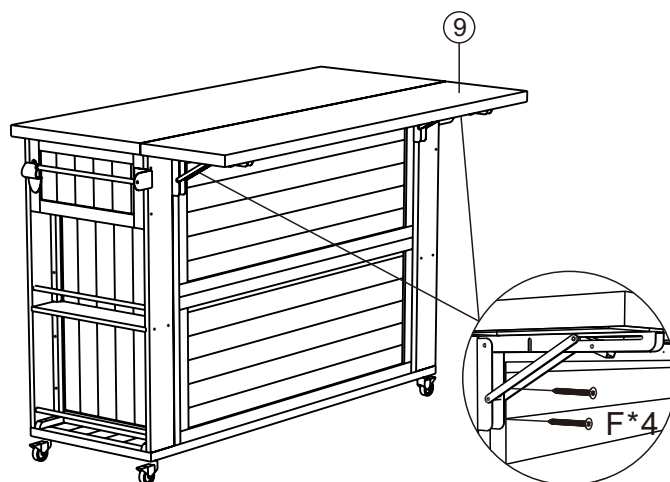

Step 19



F*4

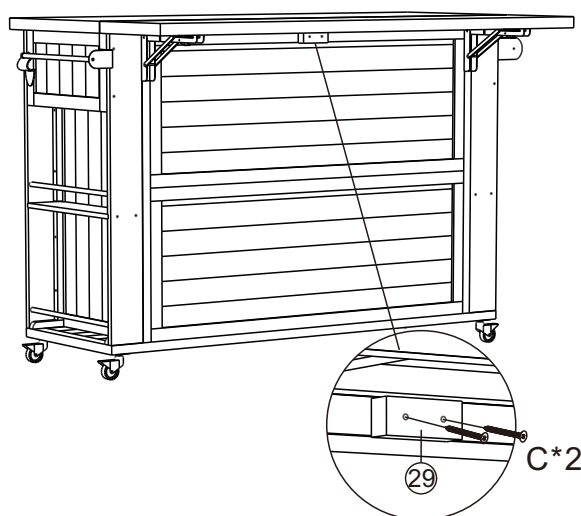

Step 20



C*2