


# Item # : LM080-70FP

## Assembly Instructions

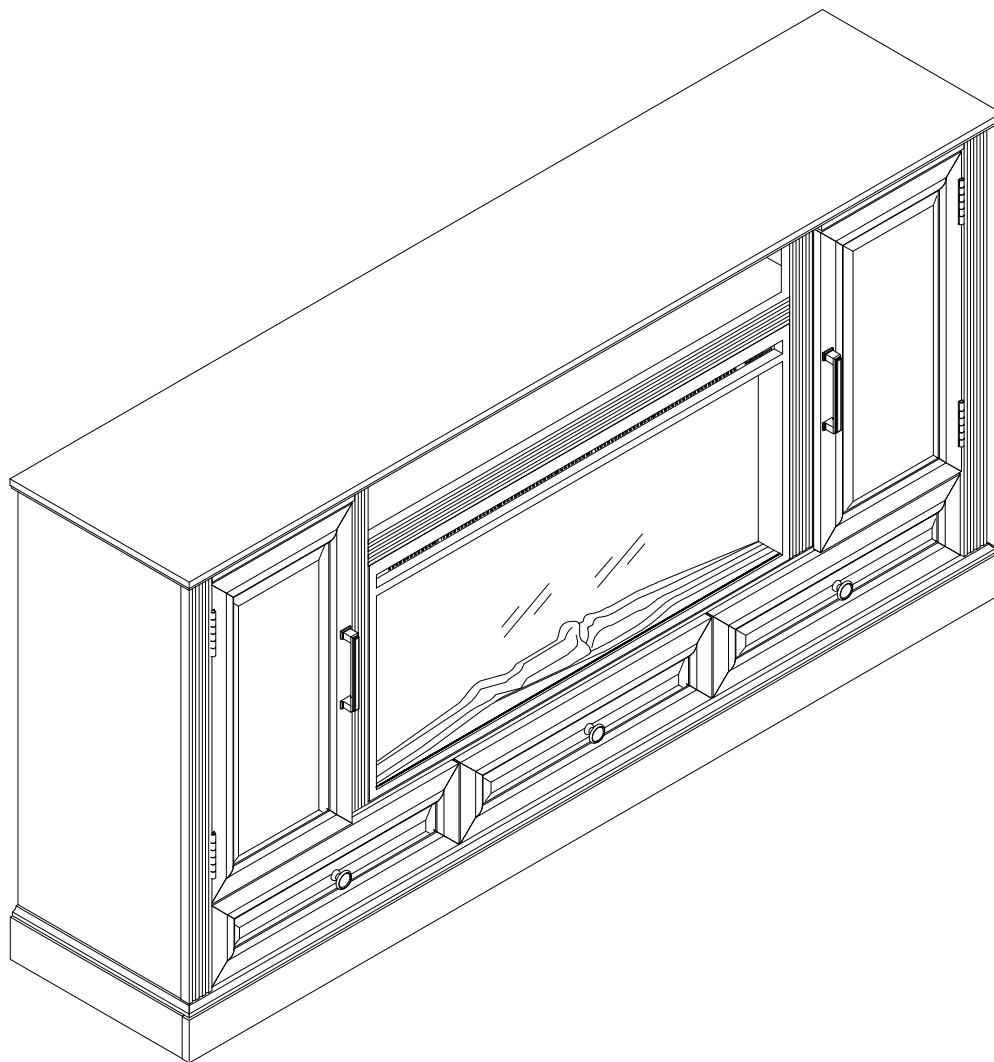


If you have any questions, please follow these steps ( “Find Your Orders” - “Problem with the Order” - “Contact Seller” ) to contact our customer service. Thanks !

NOTE: There are two packages A and B for this item. Please wait patiently if you only receive one for now


Revsied 23/10/2024

## General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

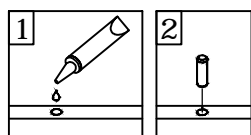


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

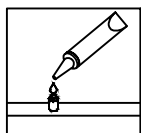


- VI. A Phillips head screwdriver is required for the assembly of this product .

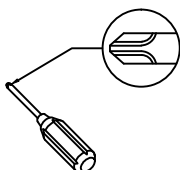

- VII. Power tools should not be used to assemble this product .

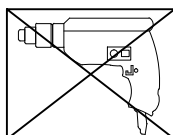







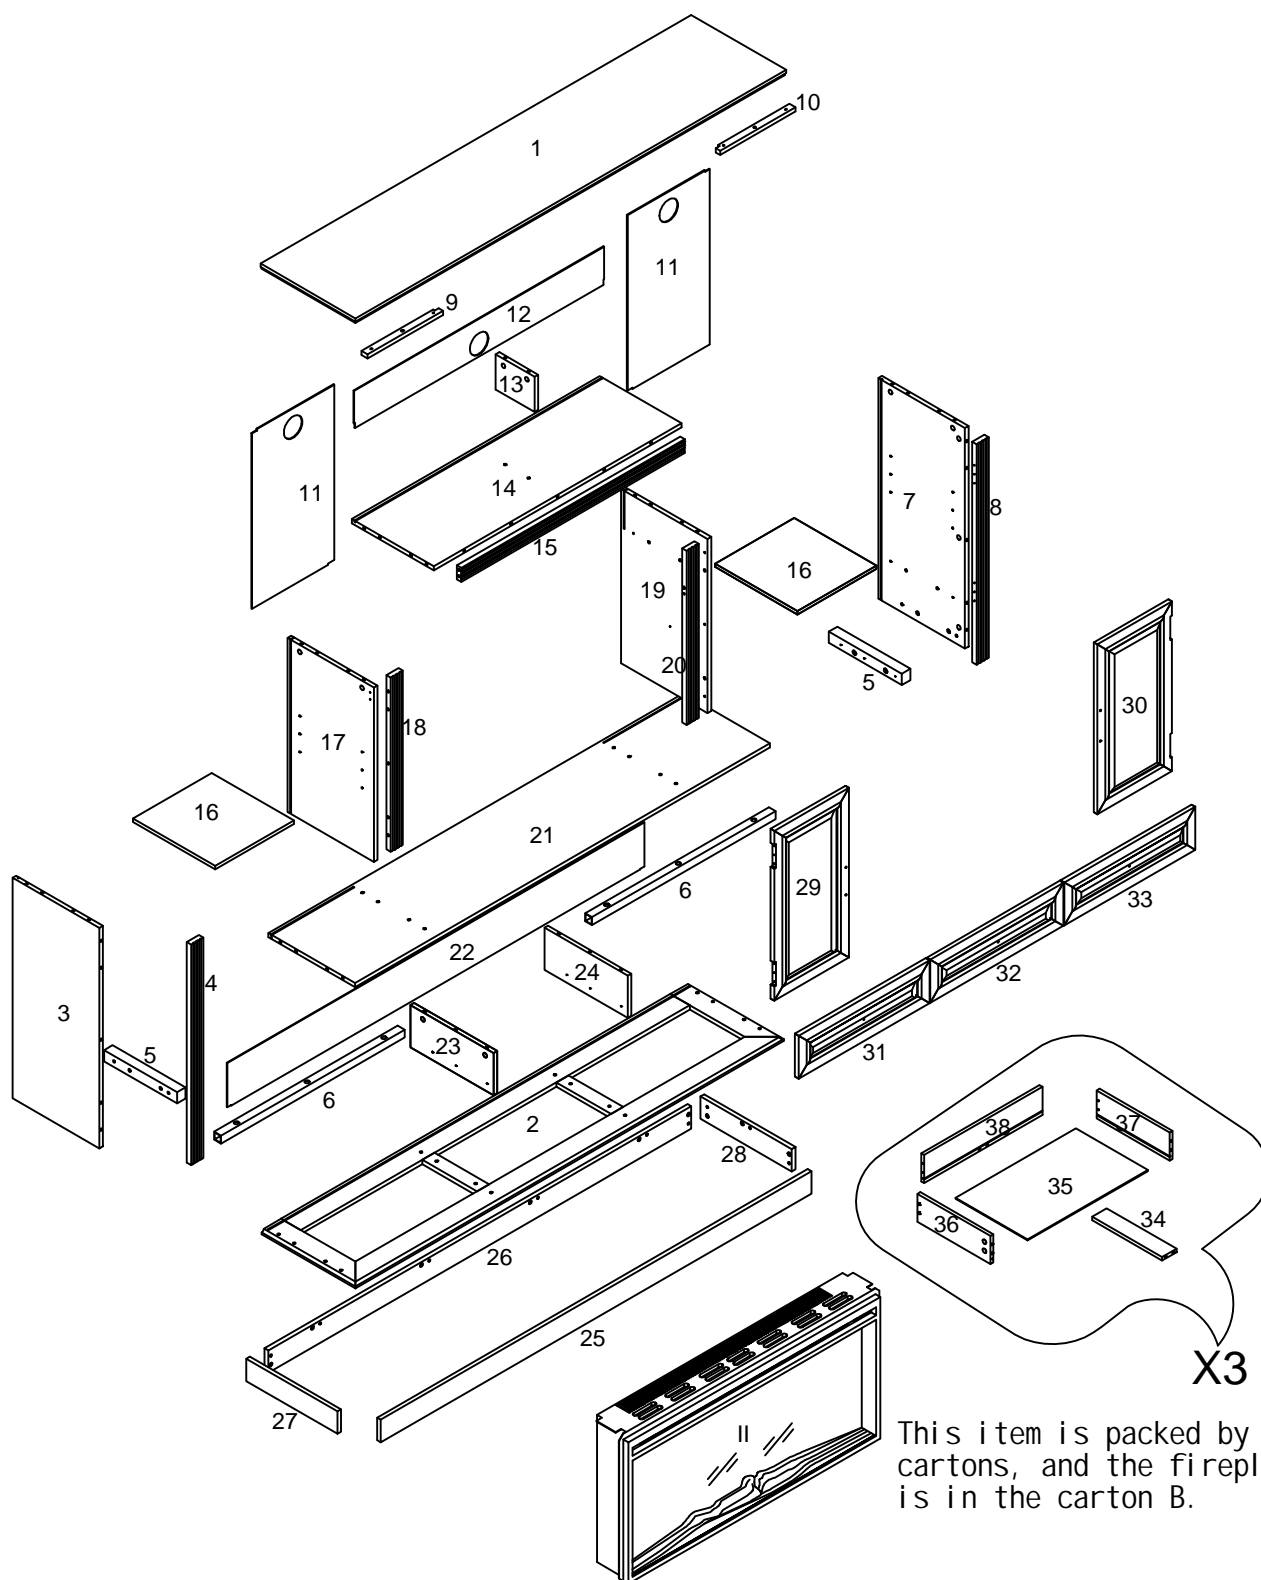













# Parts List



This item is packed by 2 cartons, and the fireplace is in the carton B.

# Hardware List



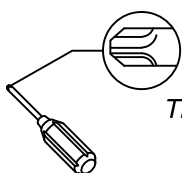





A		Ø8x30mm	Wooden dowel	52 pcs
B		Ø6x32mm	Cam bolt	54 pcs
C		Ø15x11mm	Cam lock	39 pcs
D		Ø15x9mm	Cam lock	15 pcs
E		Ø30mm	Sticker	54 pcs
F		Ø6x50mm	Screw	14 pcs
G		M 4	Hex Key	1 pc
H		M6*12mm	Bolt	28 pcs
I			Plastic wedge	14 pcs
J		Ø4x32mm	Screw	15 pcs
K		Ø4x25mm	Screw	4 pcs
L		Ø8x20mm	Wooden dowel	2 pcs
M		12"	Drawer slides	3 Sets
N		Ø3x12mm	Screw	36 pcs
O			Hinge	4 pcs
P		Ø3.5x15mm	Screw	8 pcs
Q		Ø3.5x19mm	Screw	24 pcs
R			Door stopper	2 pcs
S		Ø3x15mm	Screw	4 pcs




Philips head screwdriver required for assembly  
(not included)

*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

# Hardware List


T			Plastic wedge	22 pcs
U		Ø3x17mm	Screw	22 pcs
V		Ø6x35mm	Bolt	4 pcs
W			Screw	2 pcs
X		128mm	Handle	2 pcs
Y			Knob	3 pcs
Z		Ø4x16mm	Bolt	7 pcs
AA			Anti-inversion piece	4 pcs
BB		Ø4*15mm	Screw	4 pcs
CC			House lizard	4 pcs
DD		Ø4x35mm	Screw	4 pcs
EE			Strip	2 pcs
FF		Ø5x13x26mm	Shelf holder	8 pcs
GG		Ø6x22mm	Bolt	6 pcs
HH			Glue tube	2 pcs

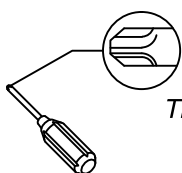


Philips head screwdriver required for assembly  
(not included)

*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*


# Step 1

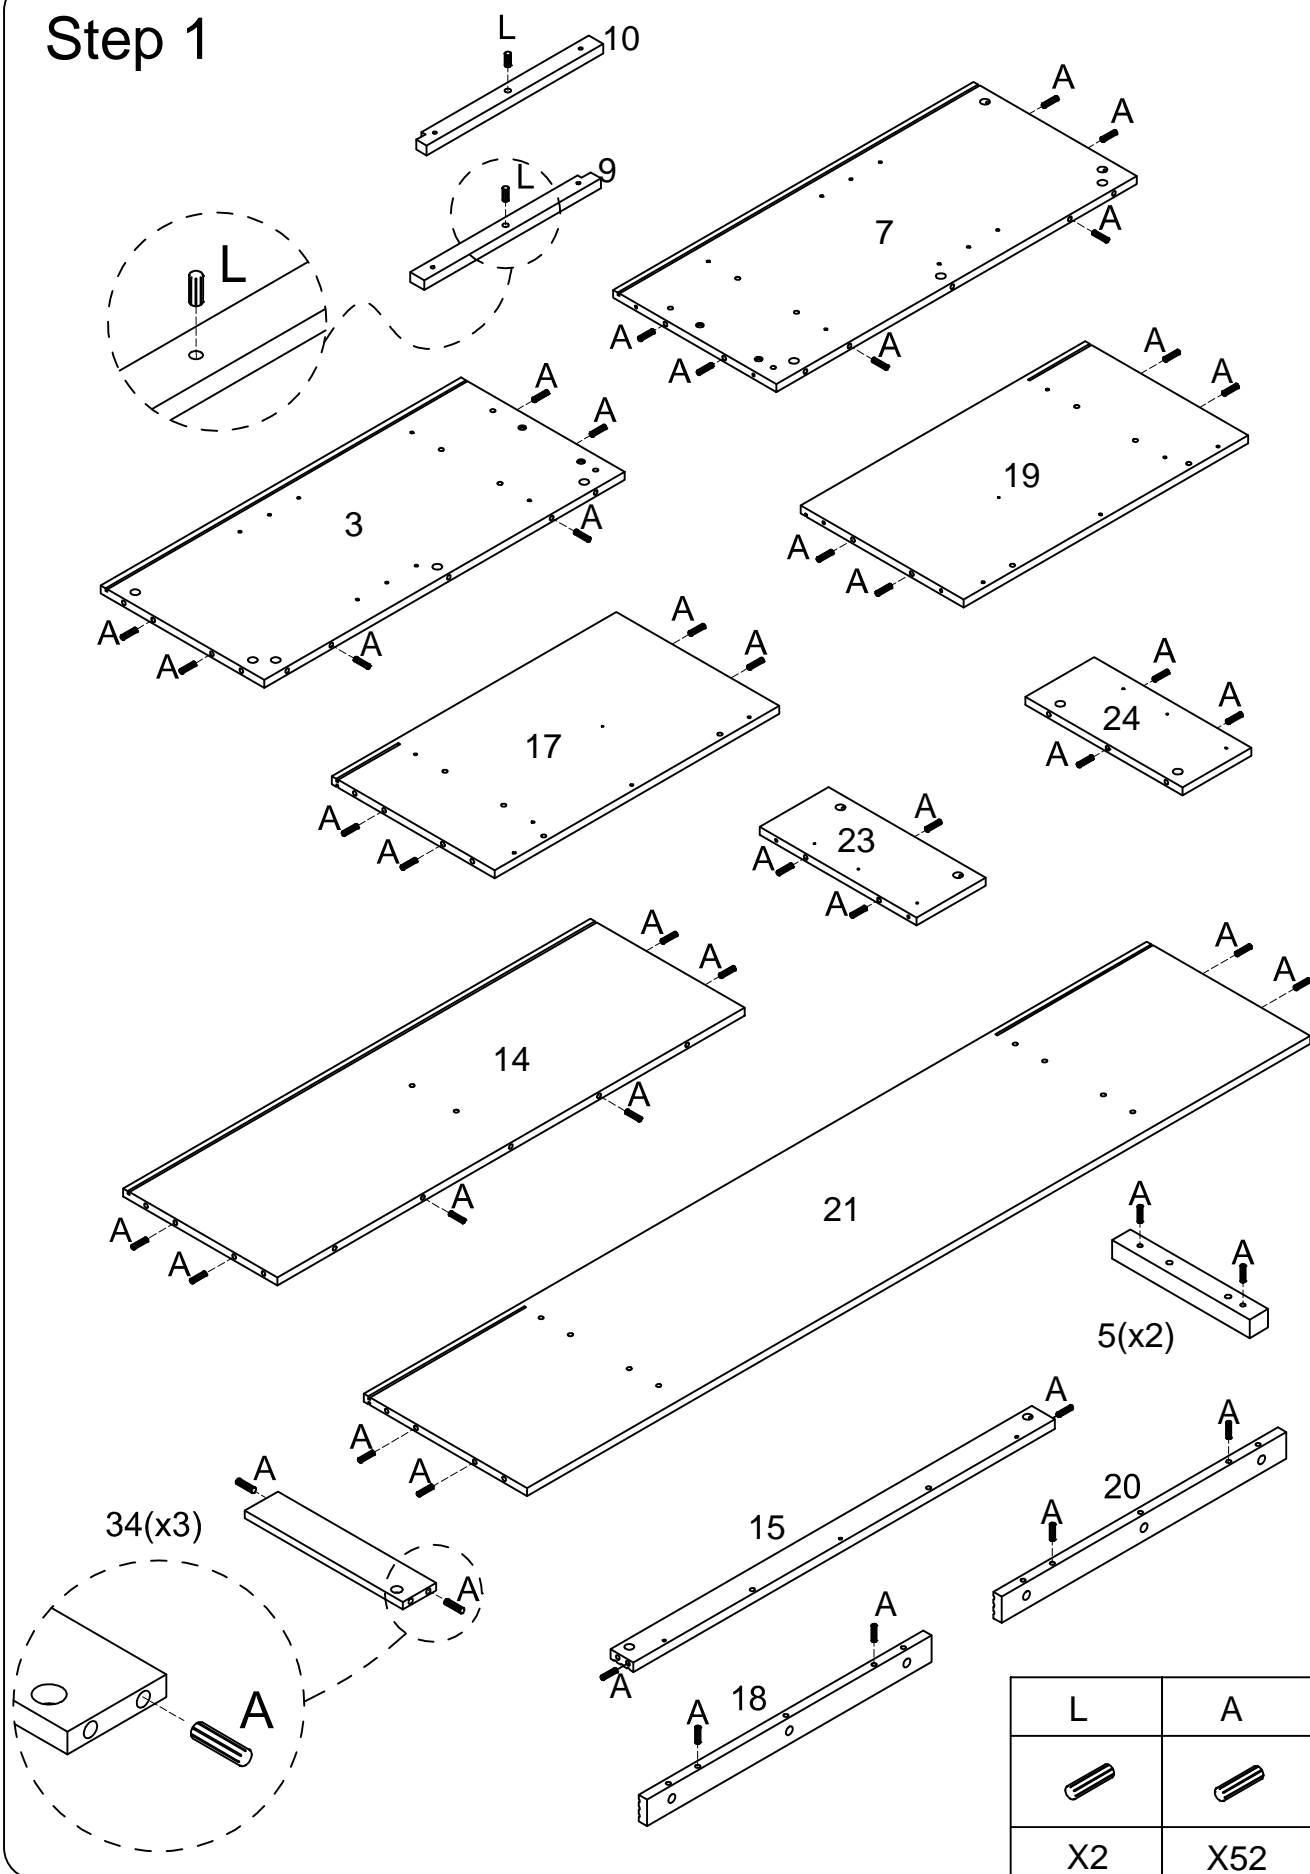

## Step 2

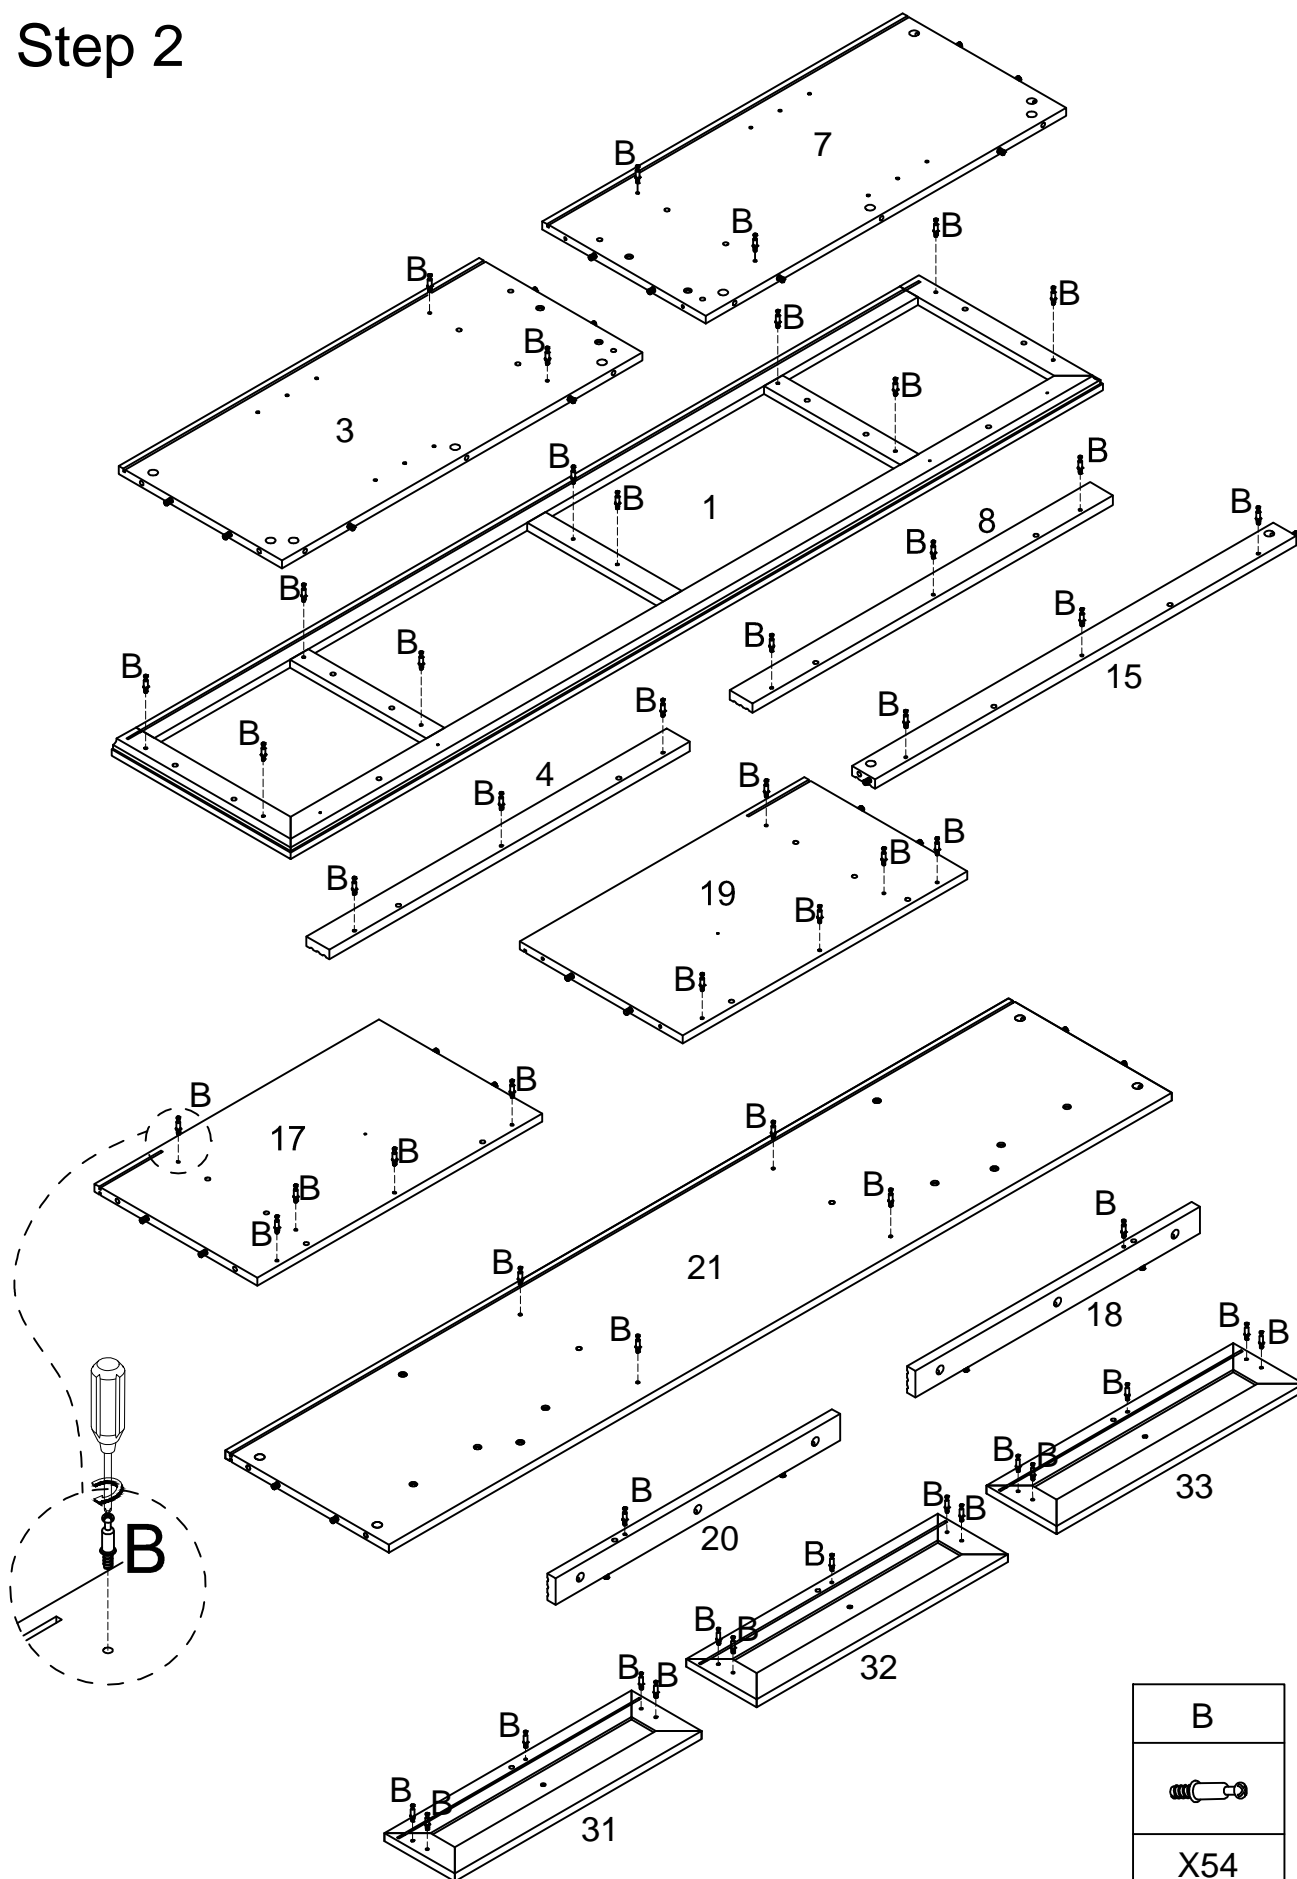

## Step 3

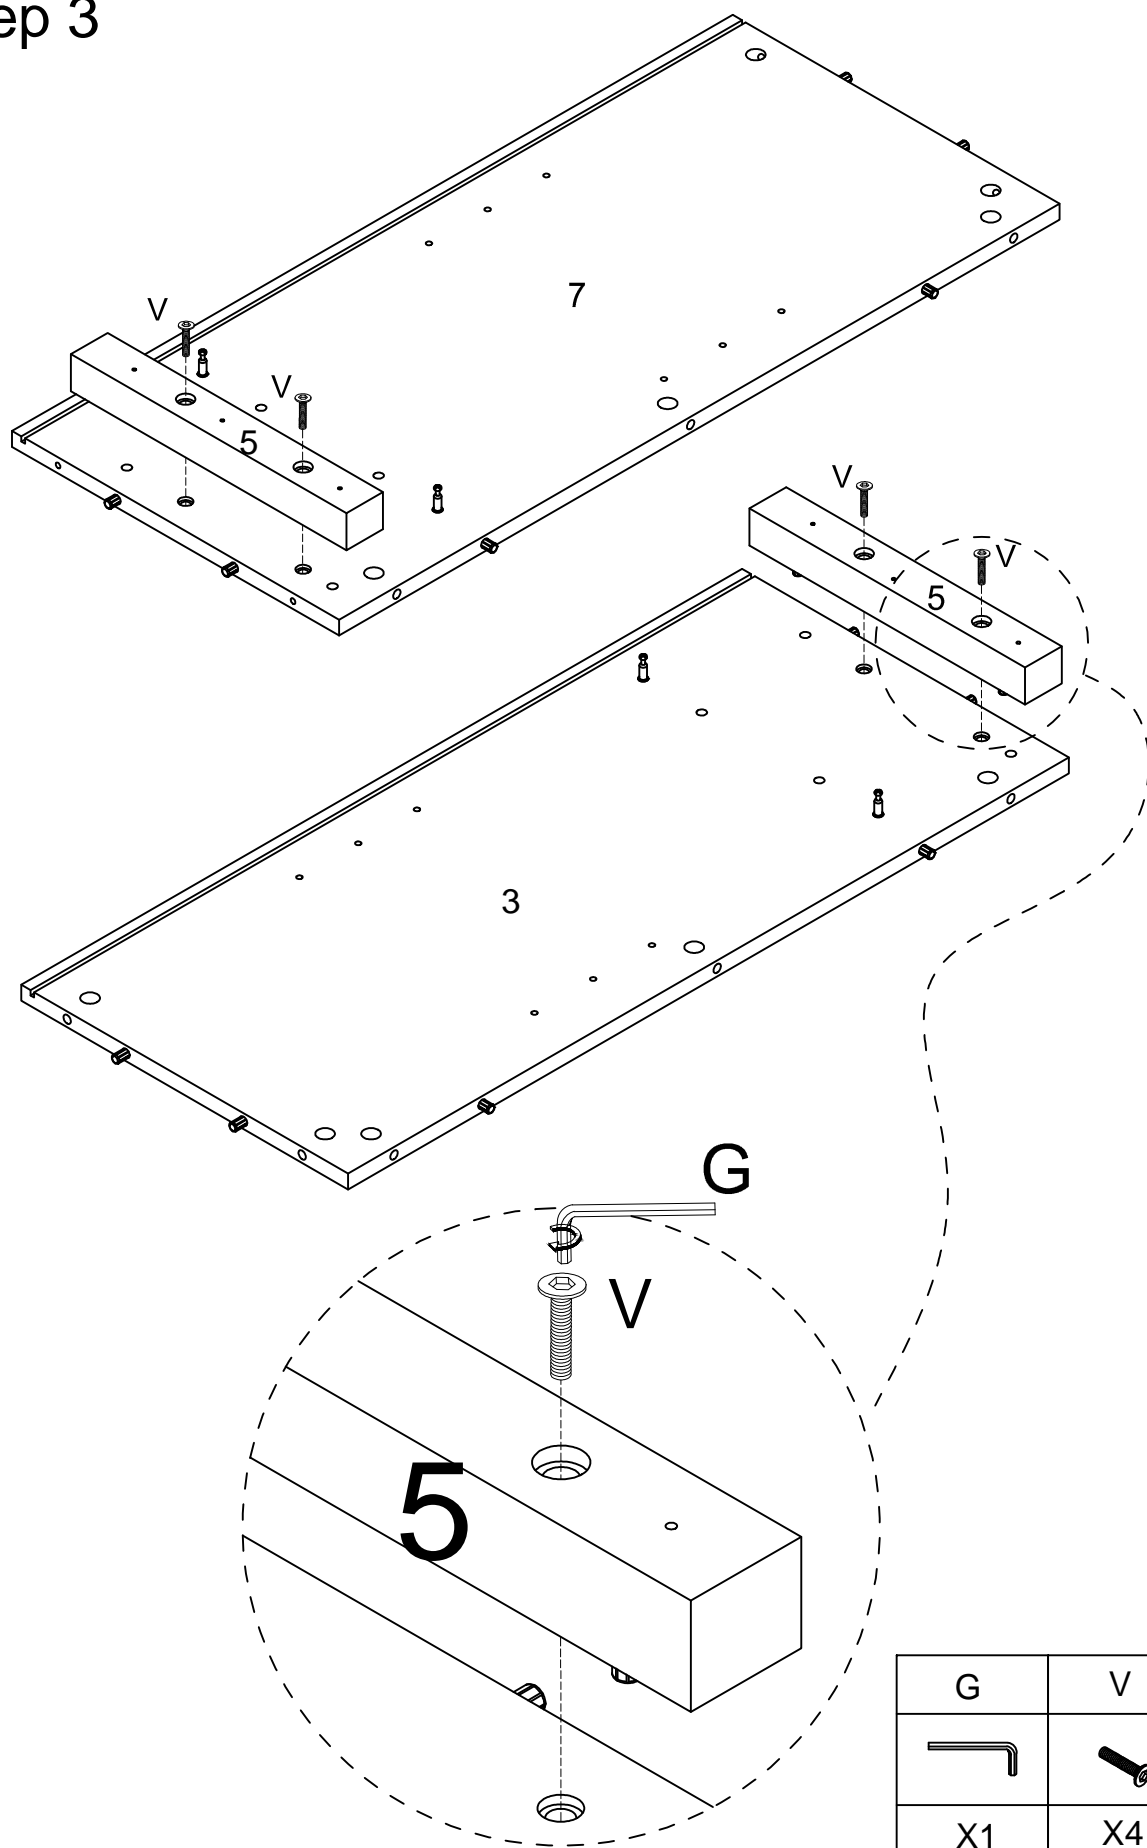





## Step 4


M-CL



M-CR

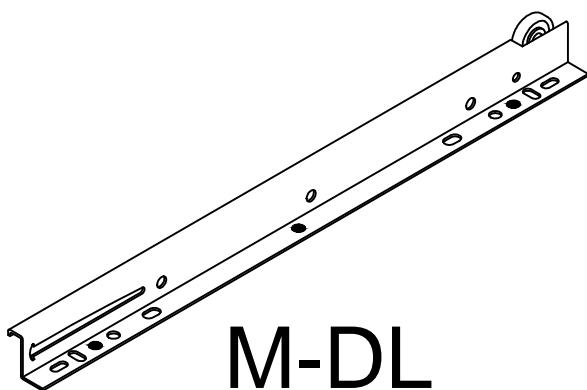

M-DL

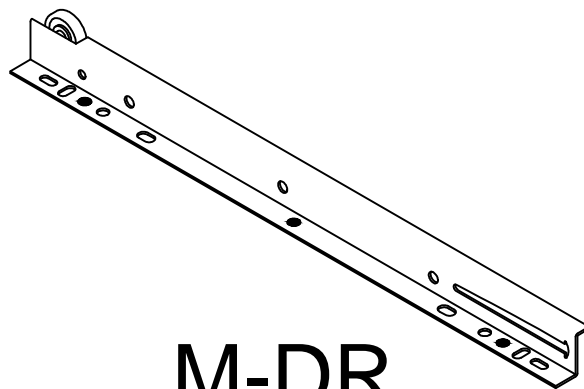




M-DR

# Step 5

NOTE:







Refer to the images to identify M-CL (left) and M-CR (right). Attach M-CL to #3 panel and M-CR to #7 panel. [N] screws must go in the exact spots shown.

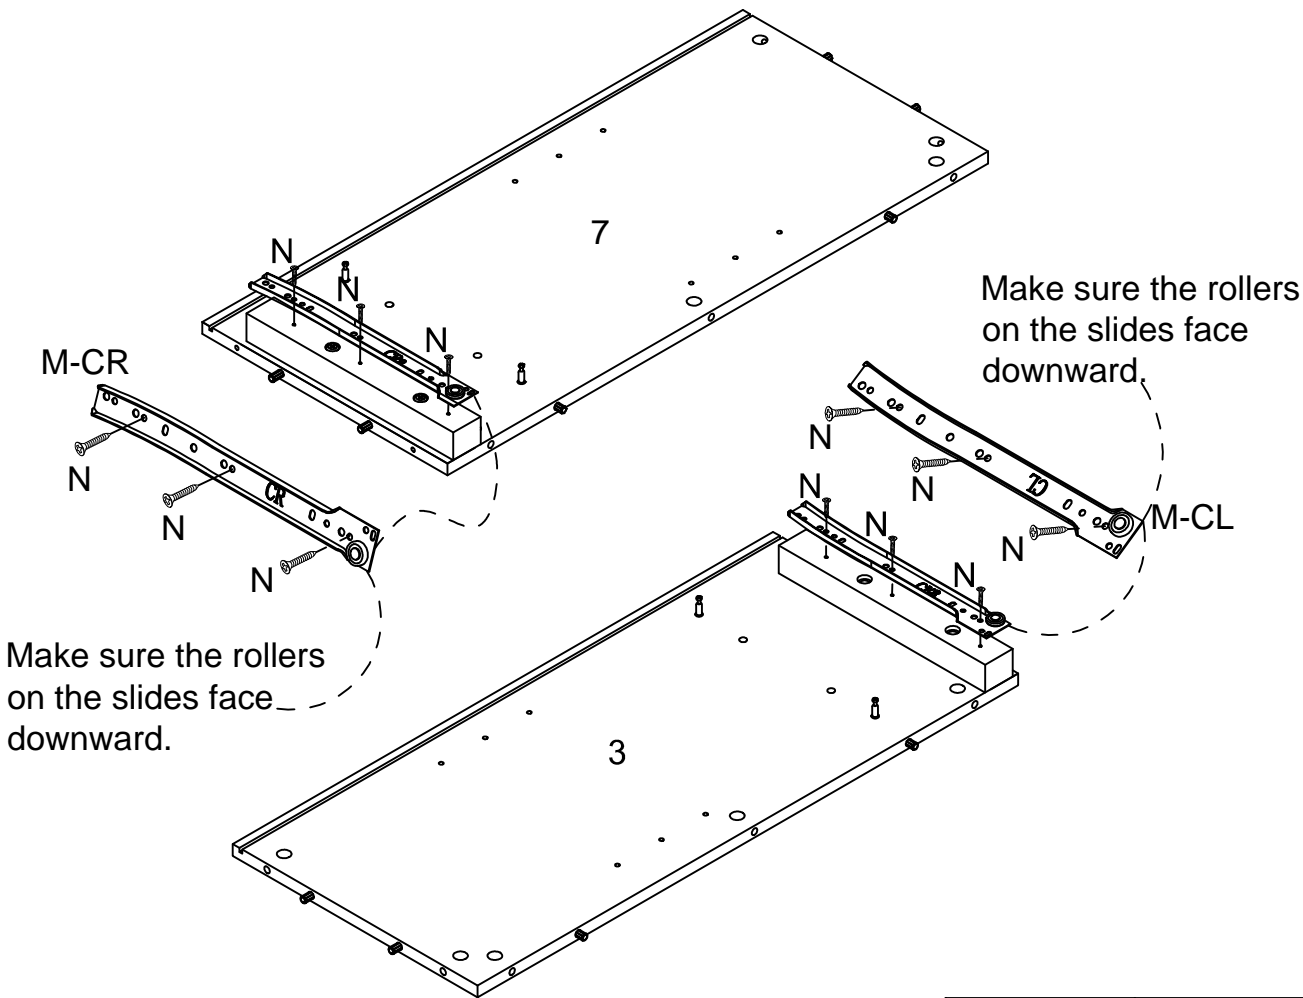


N	M
X6	X1



## Step 6

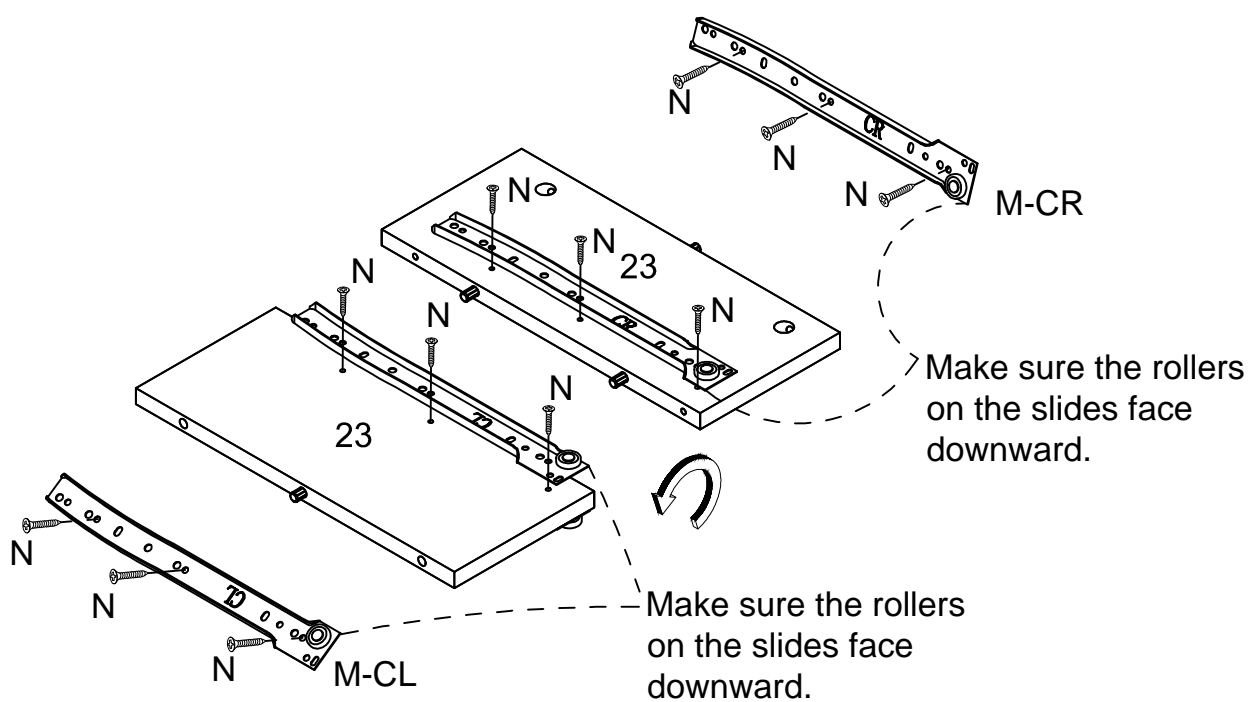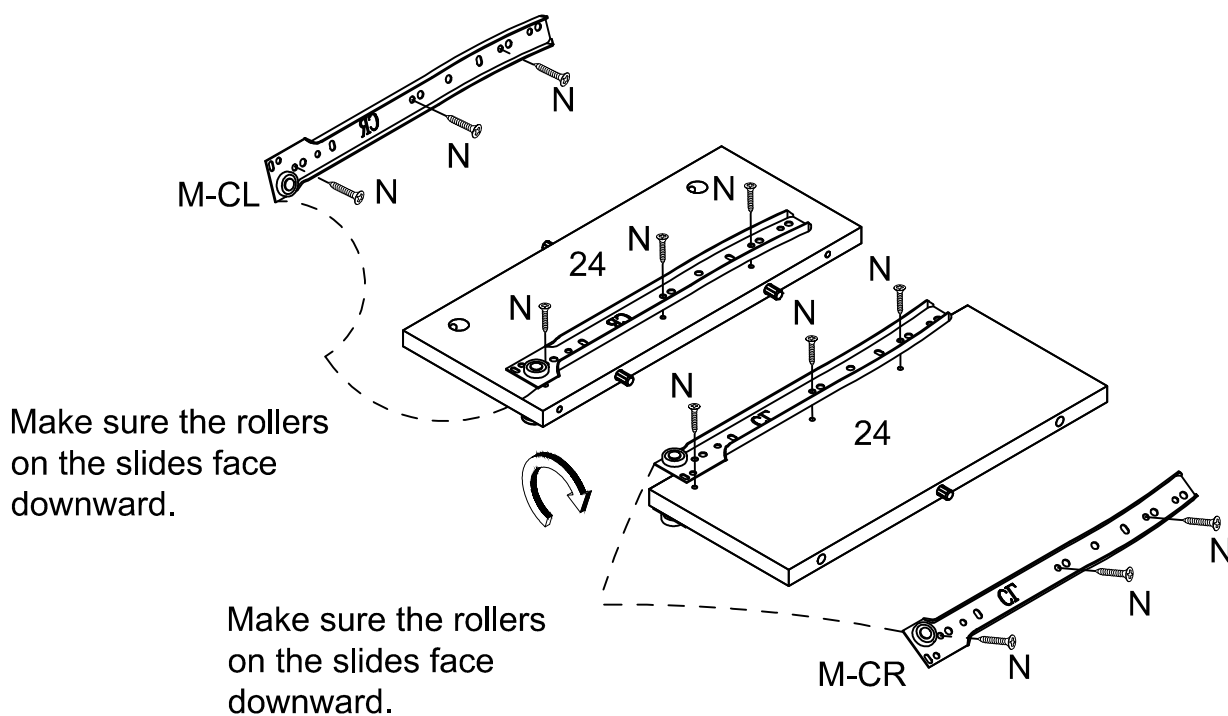




N	M
	
X12	X2


# Step 7

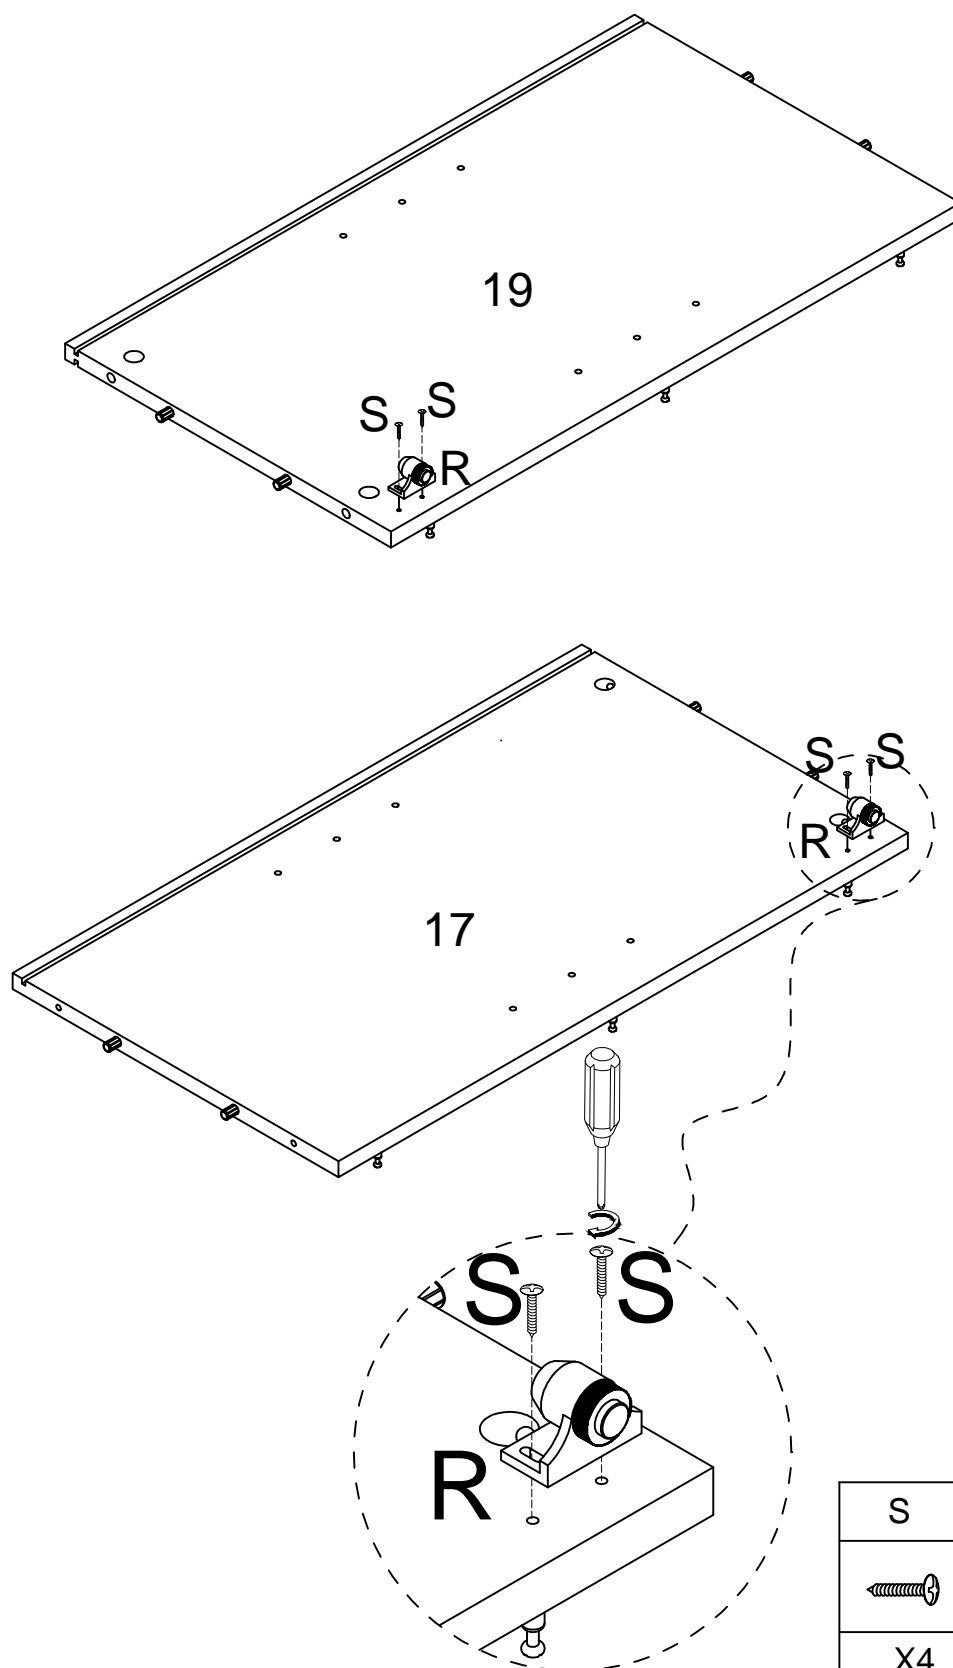



S	R
	
X4	X2


# Step8

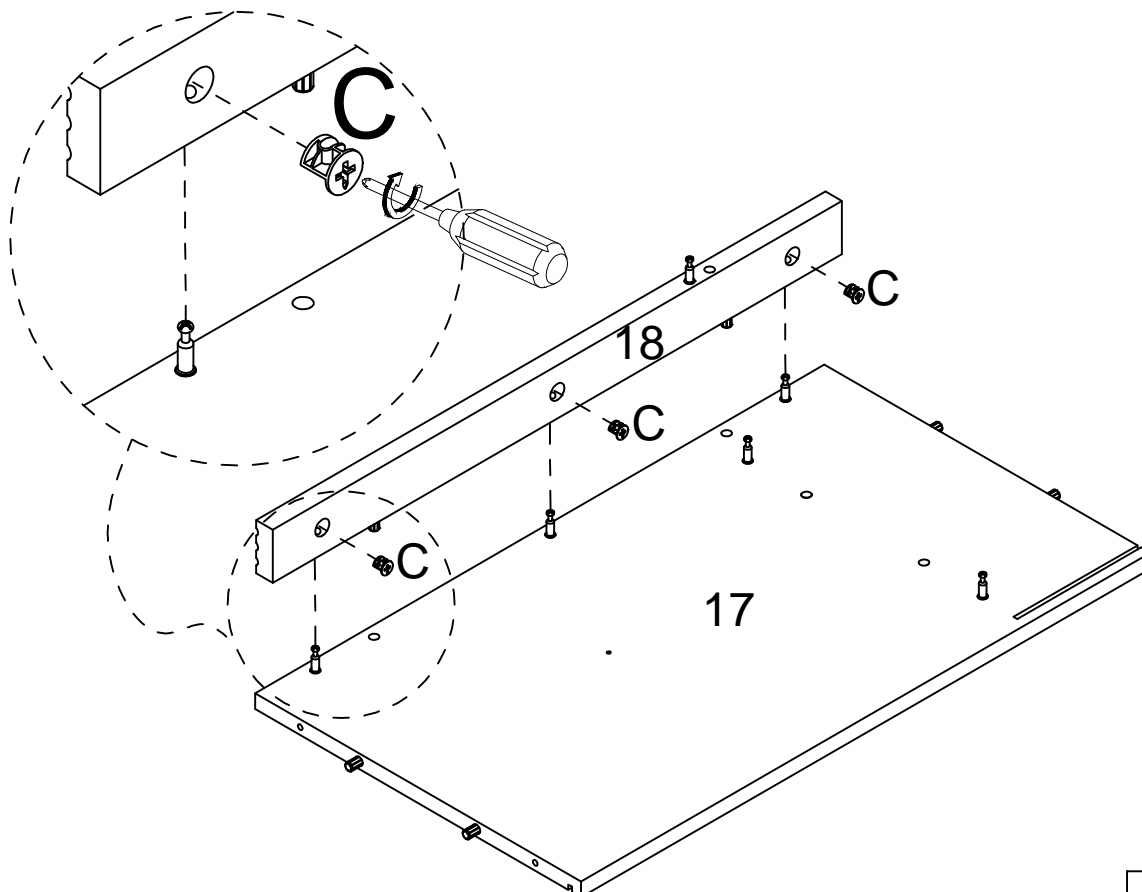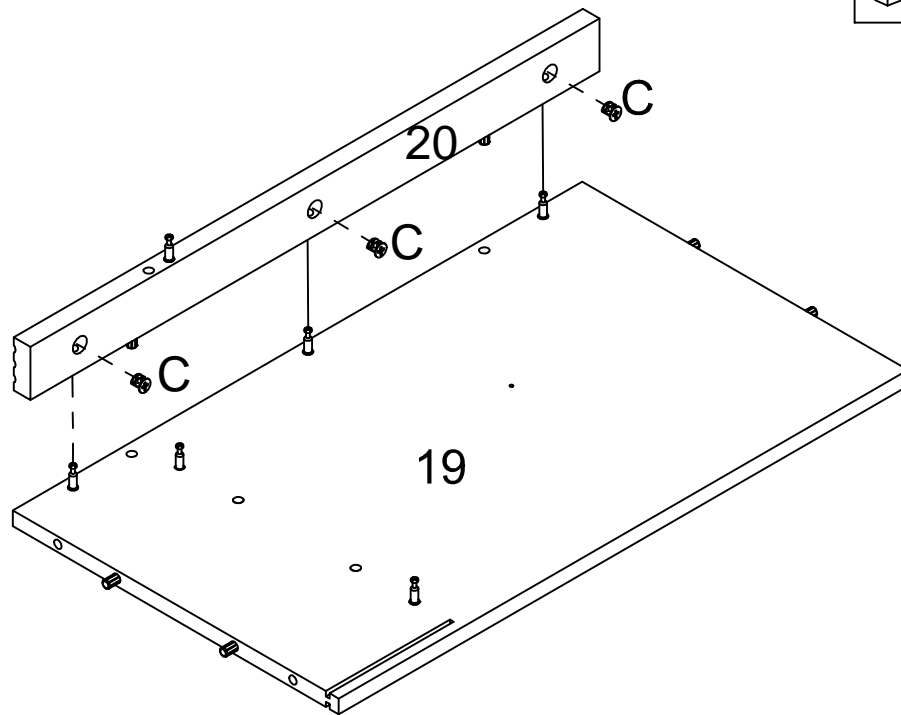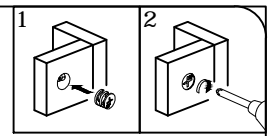



C

X6

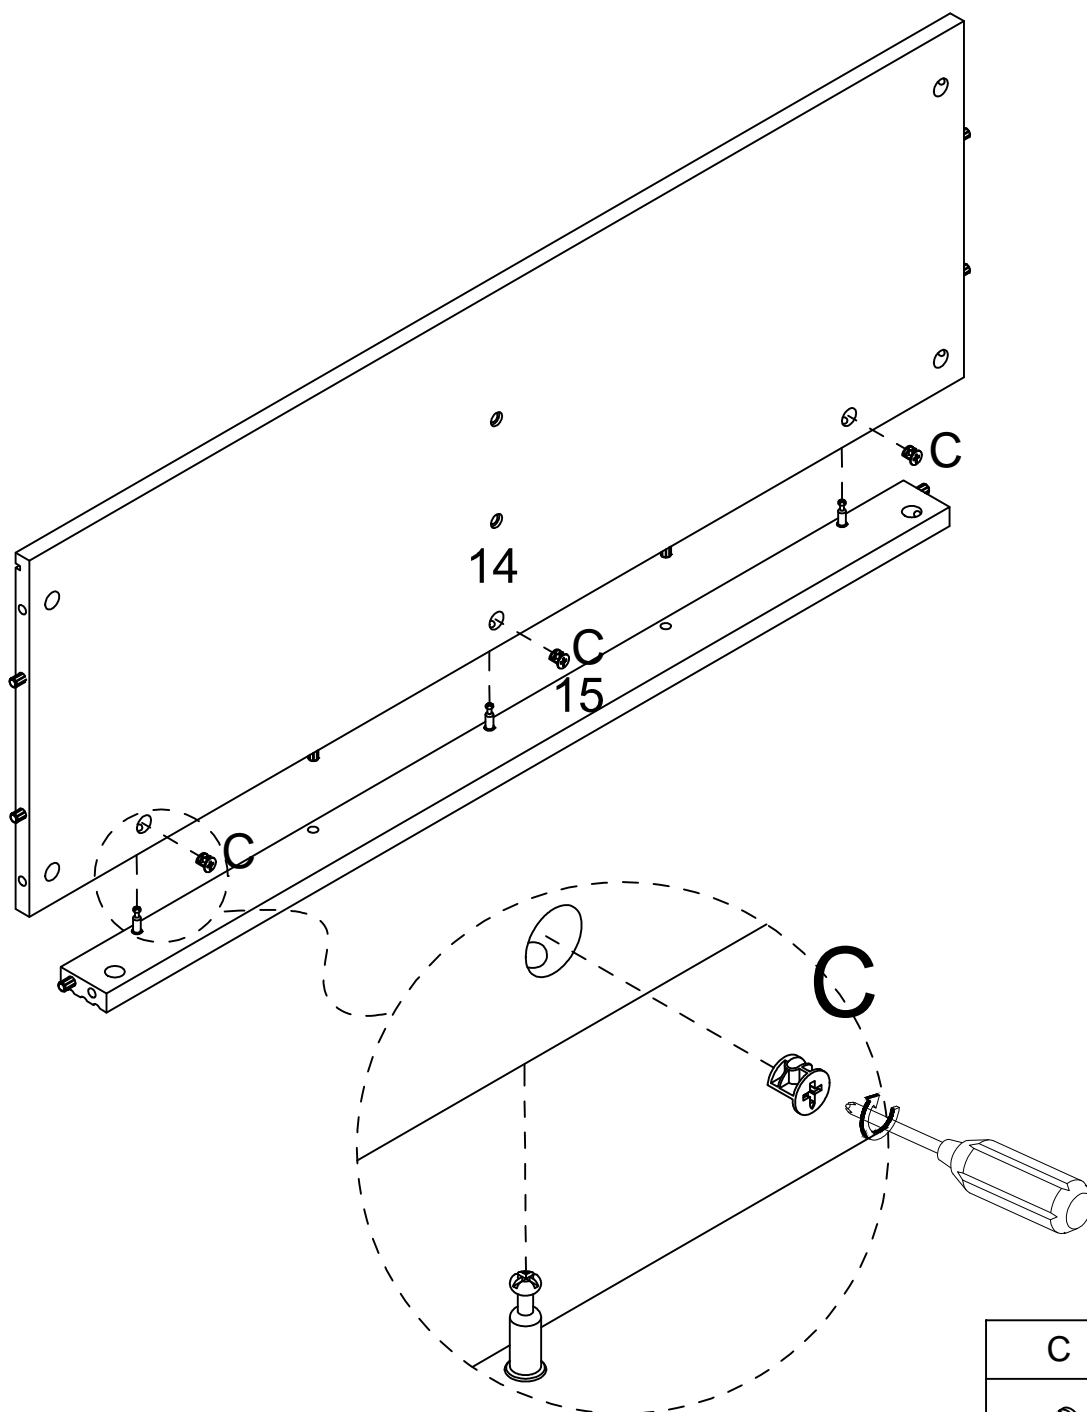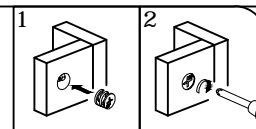
# Step 9





C

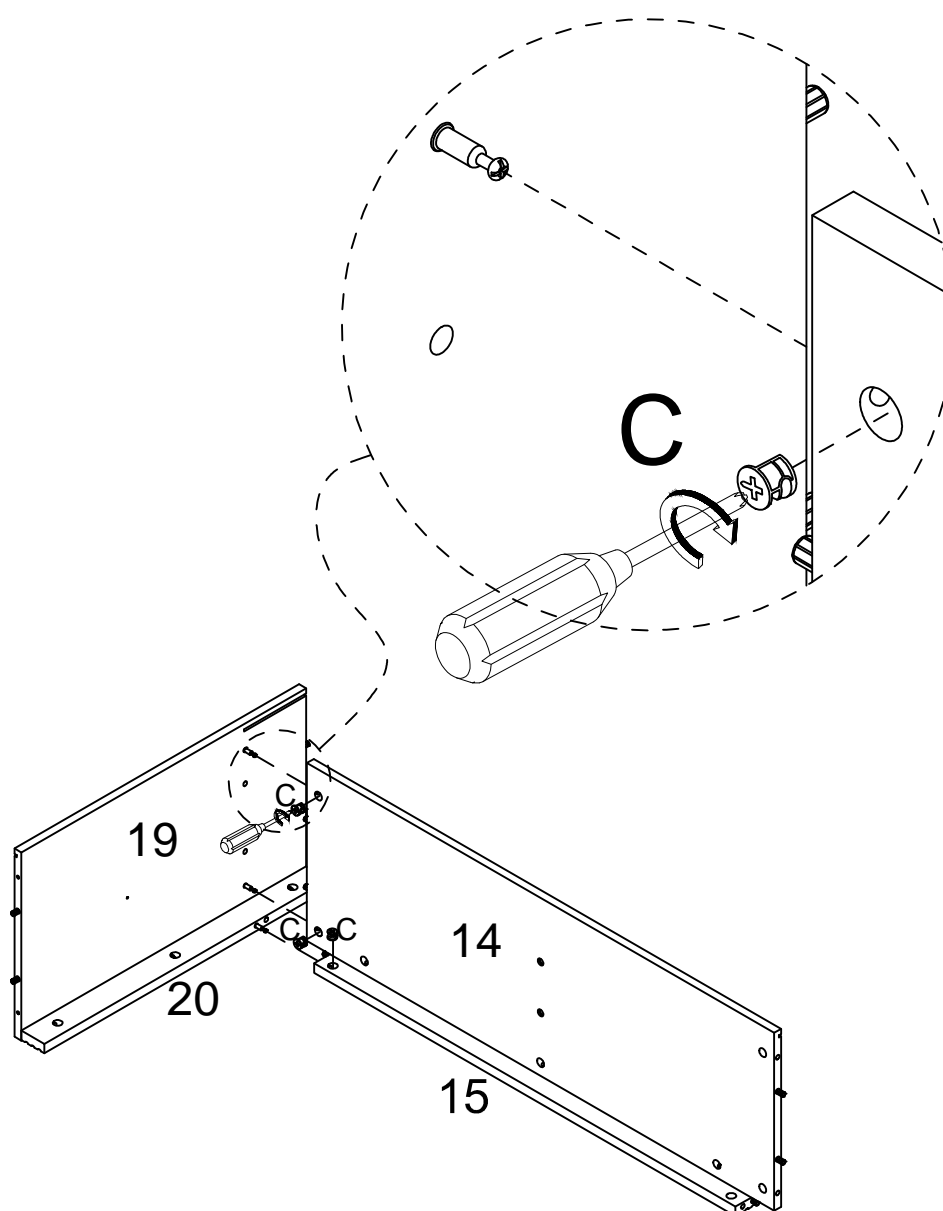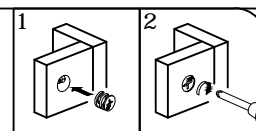X3

# Step 10



C

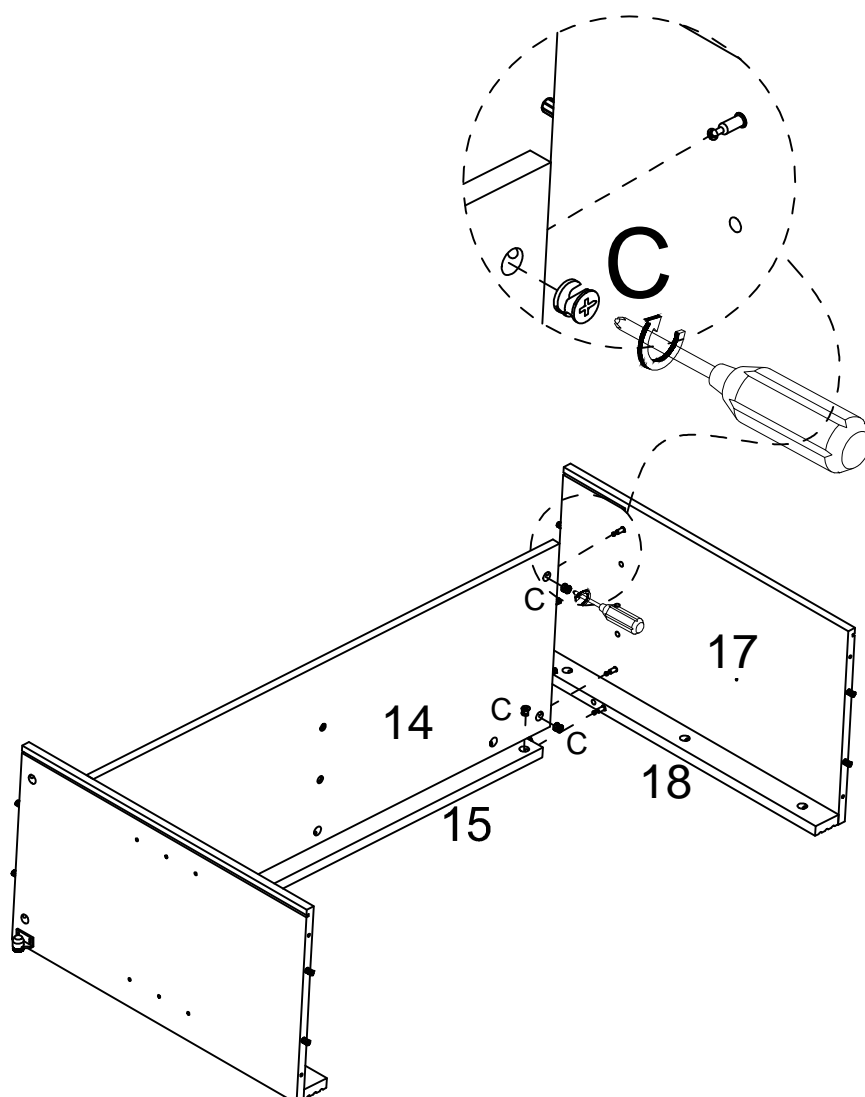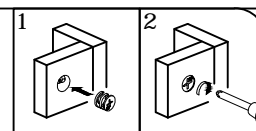X3


# Step 11





C
X3

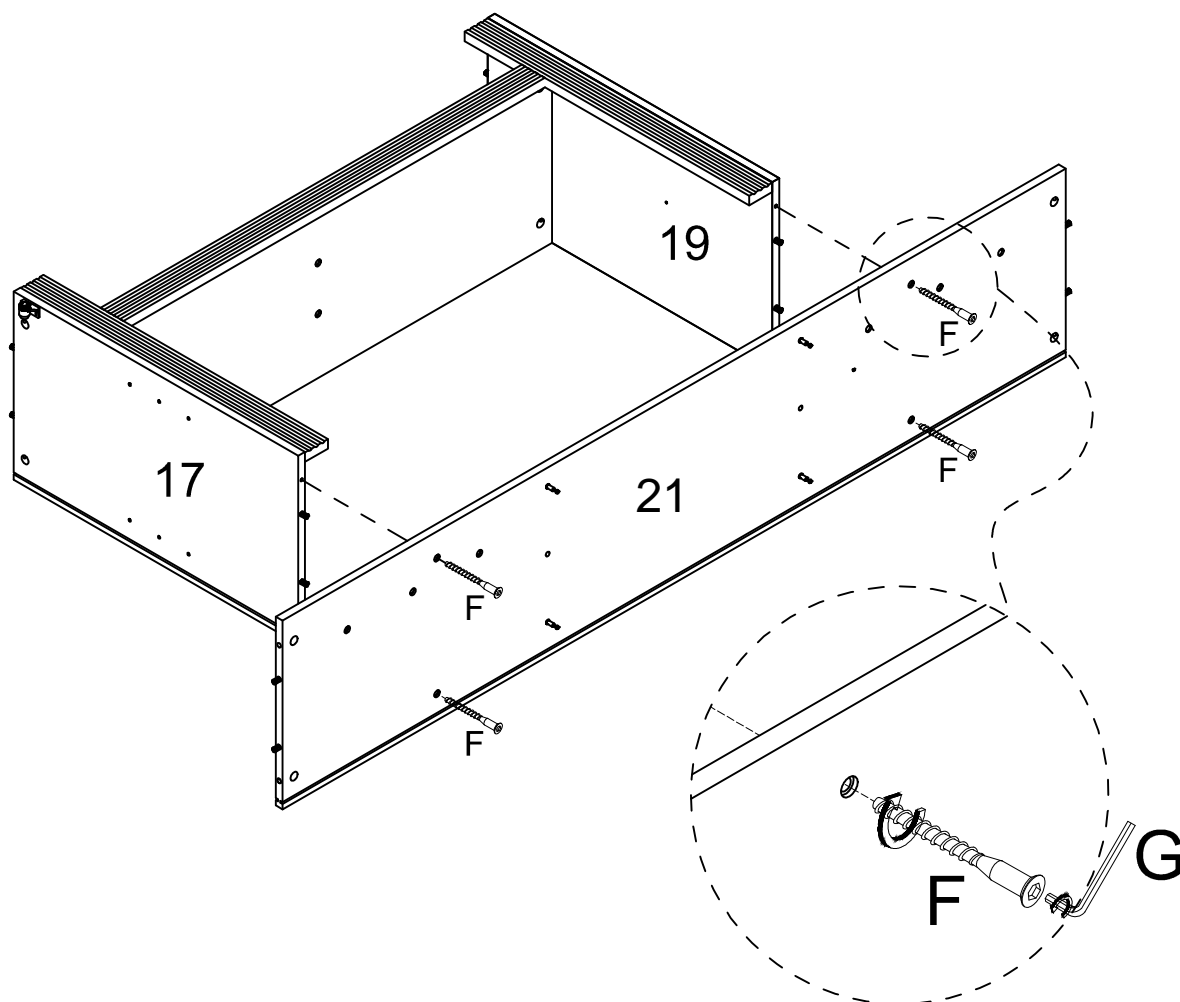


## Step 12





G	F
	
X1	X4


## Step 13

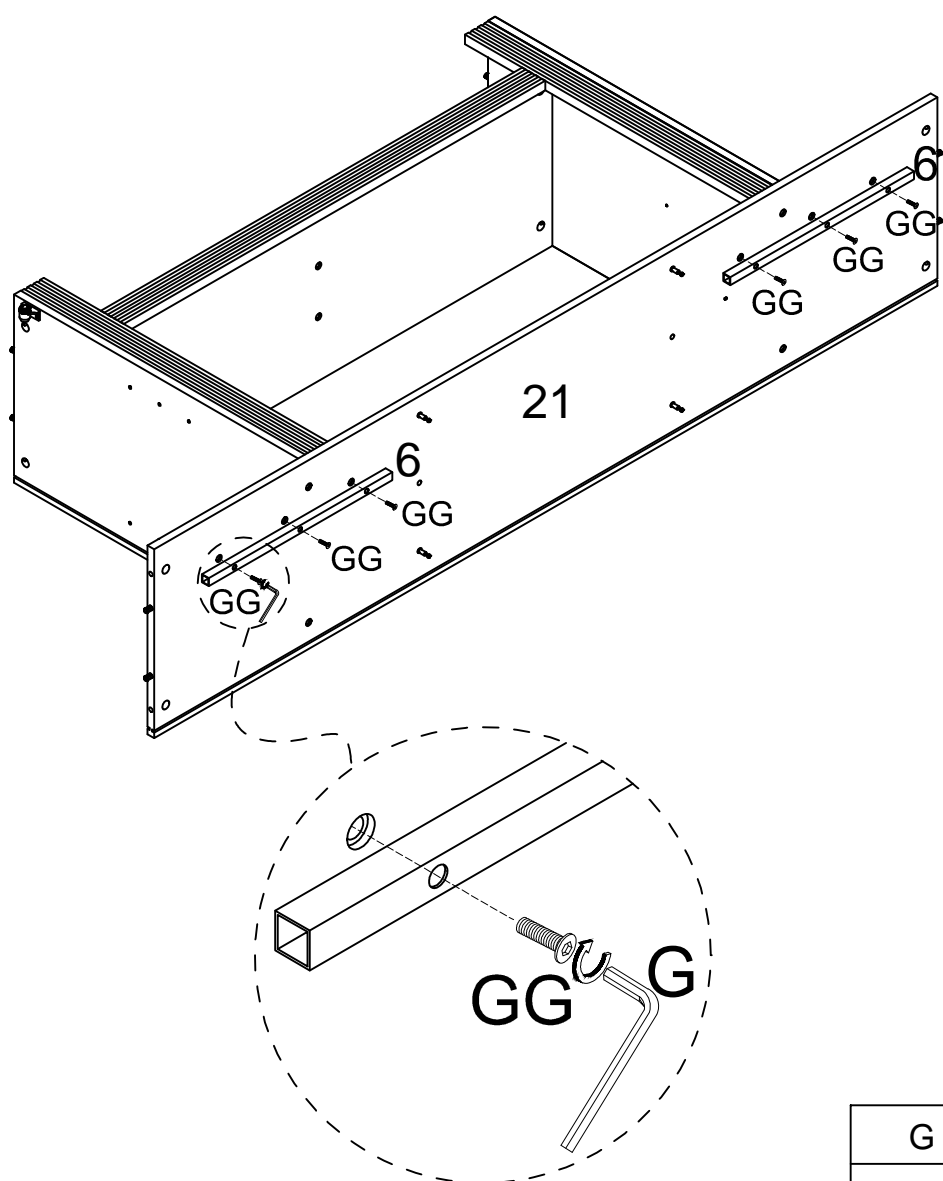



G	GG
X1	X6


# Step 14

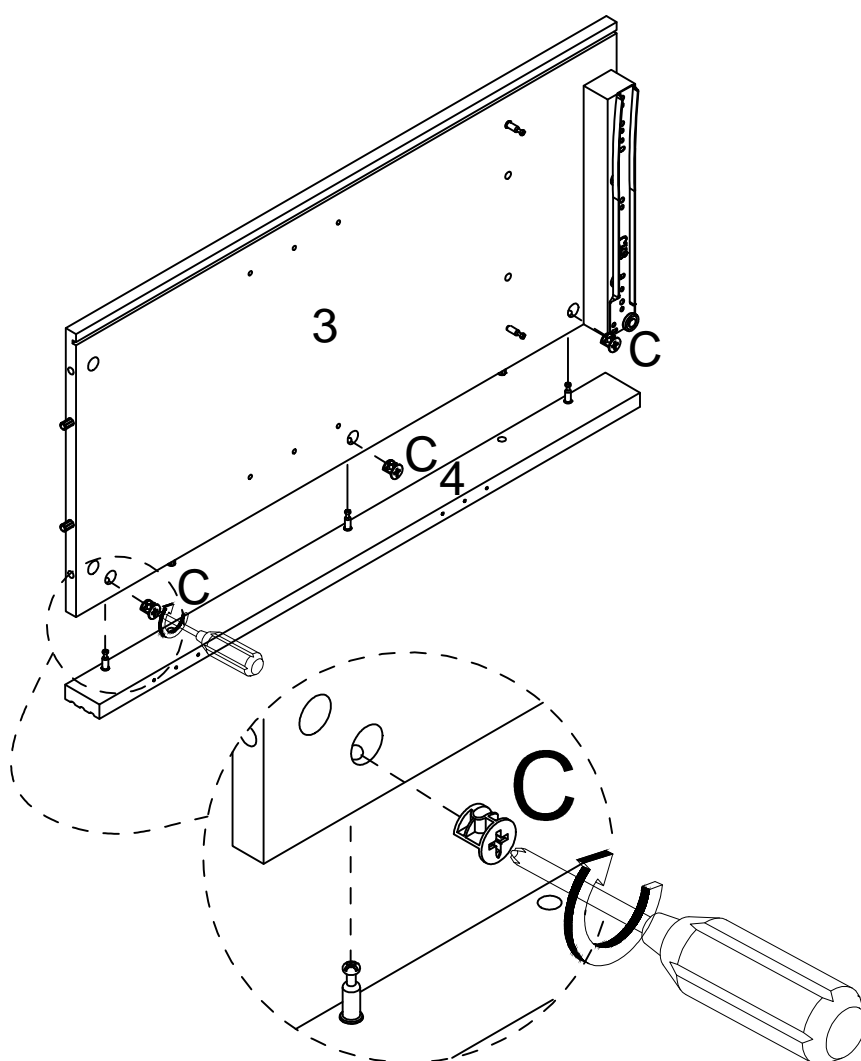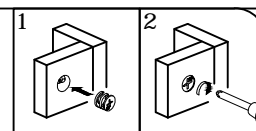



C

X3

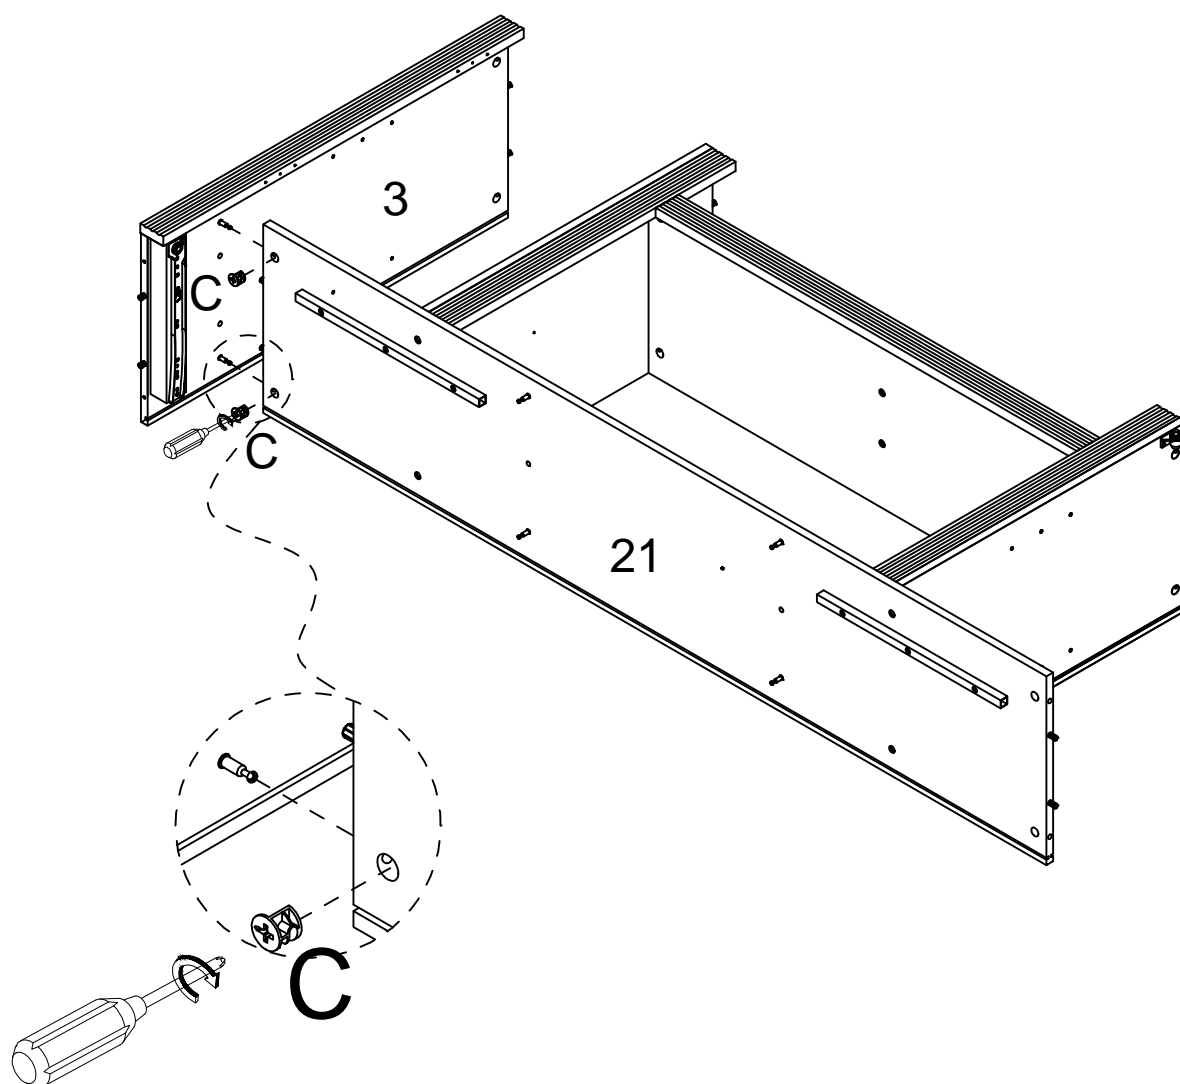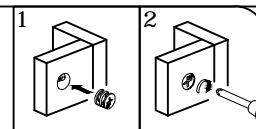
# Step 15





C

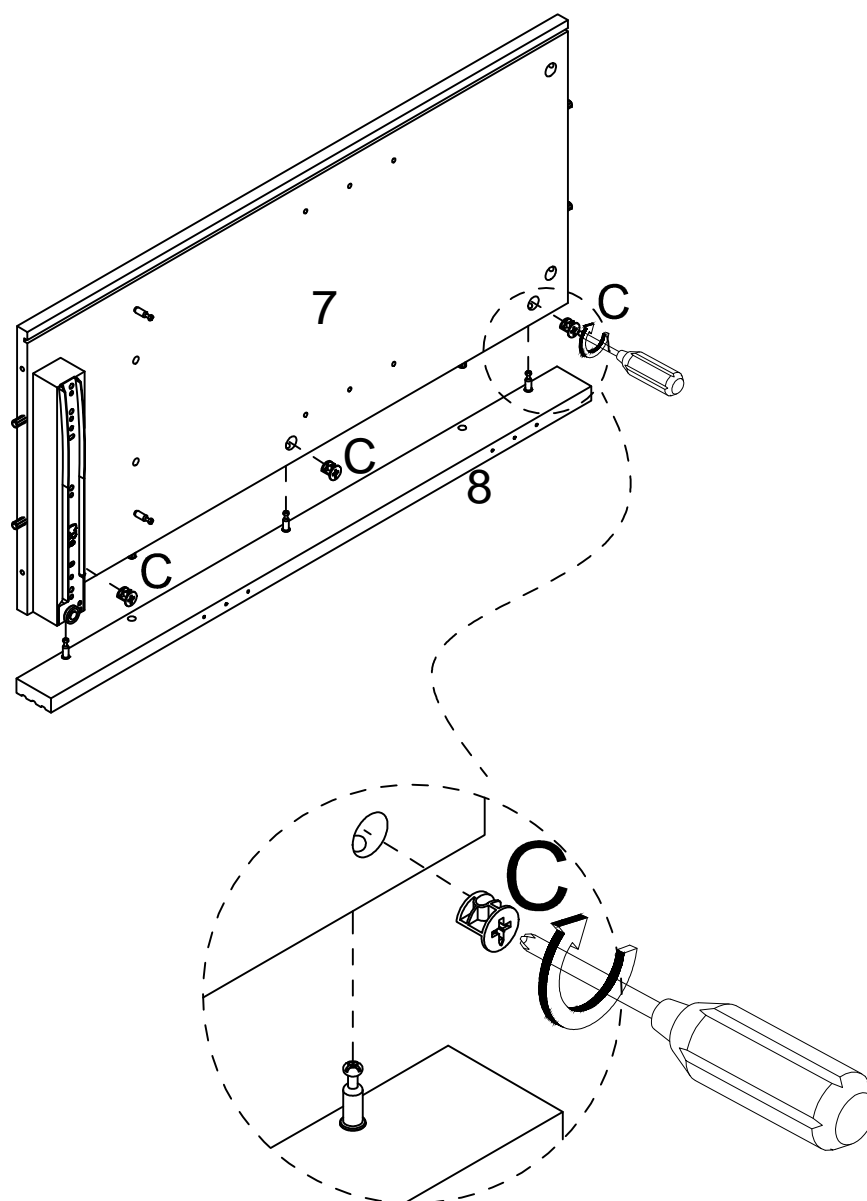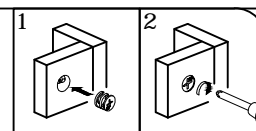X2


# Step 16






C

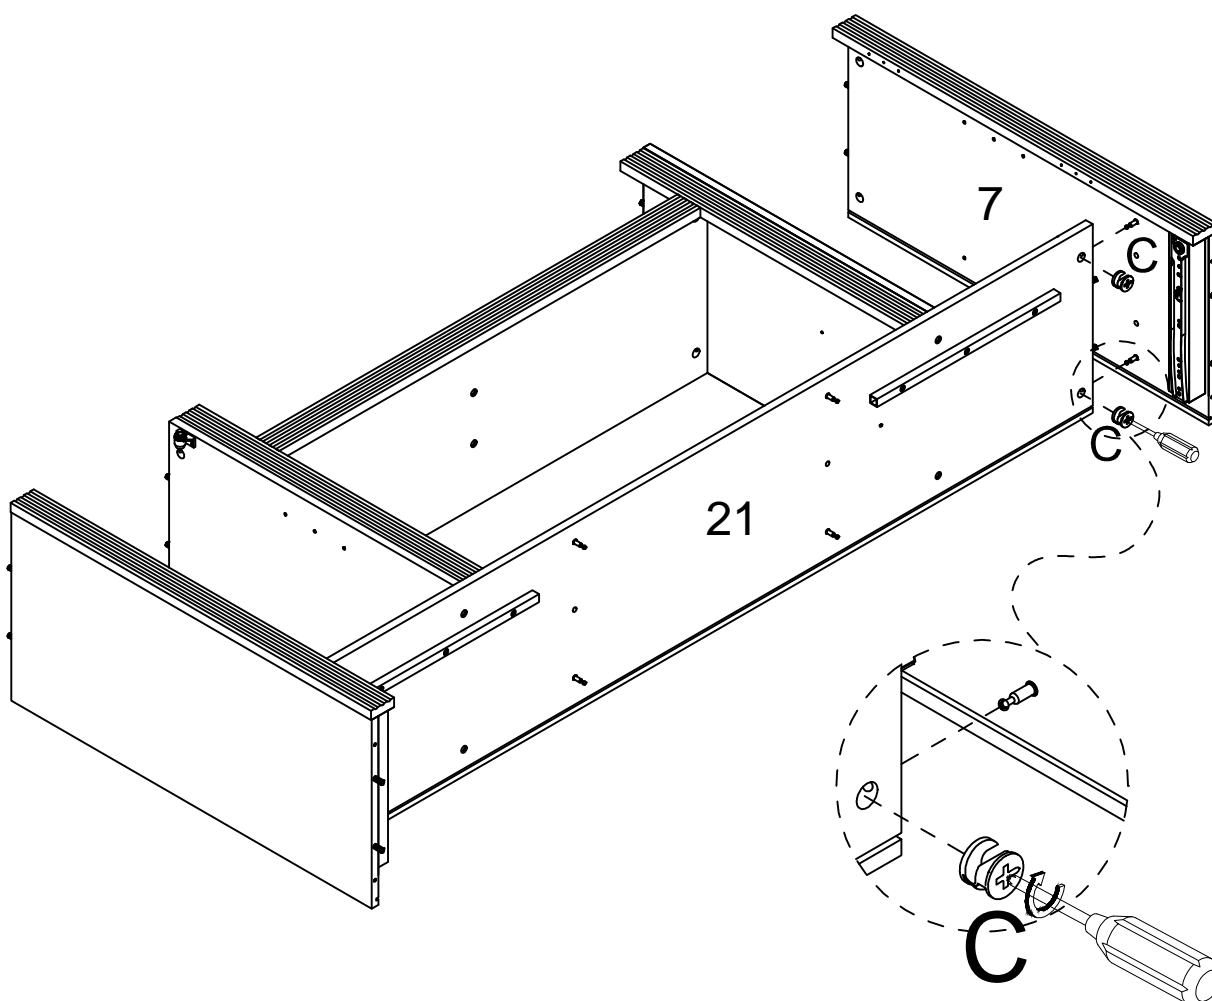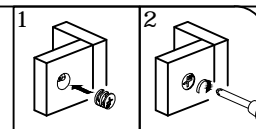X3


## Step 17




C

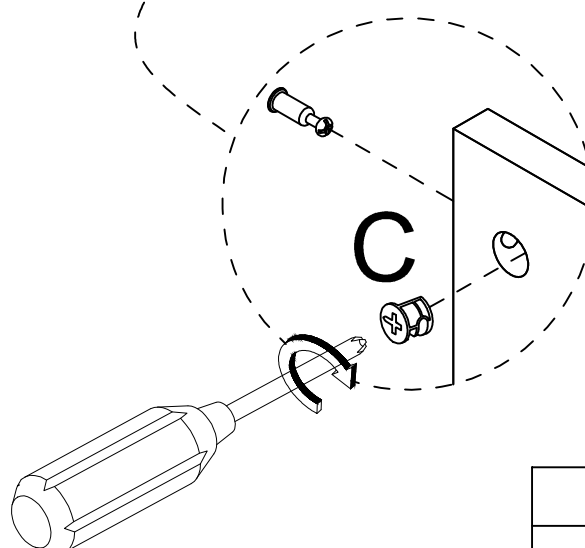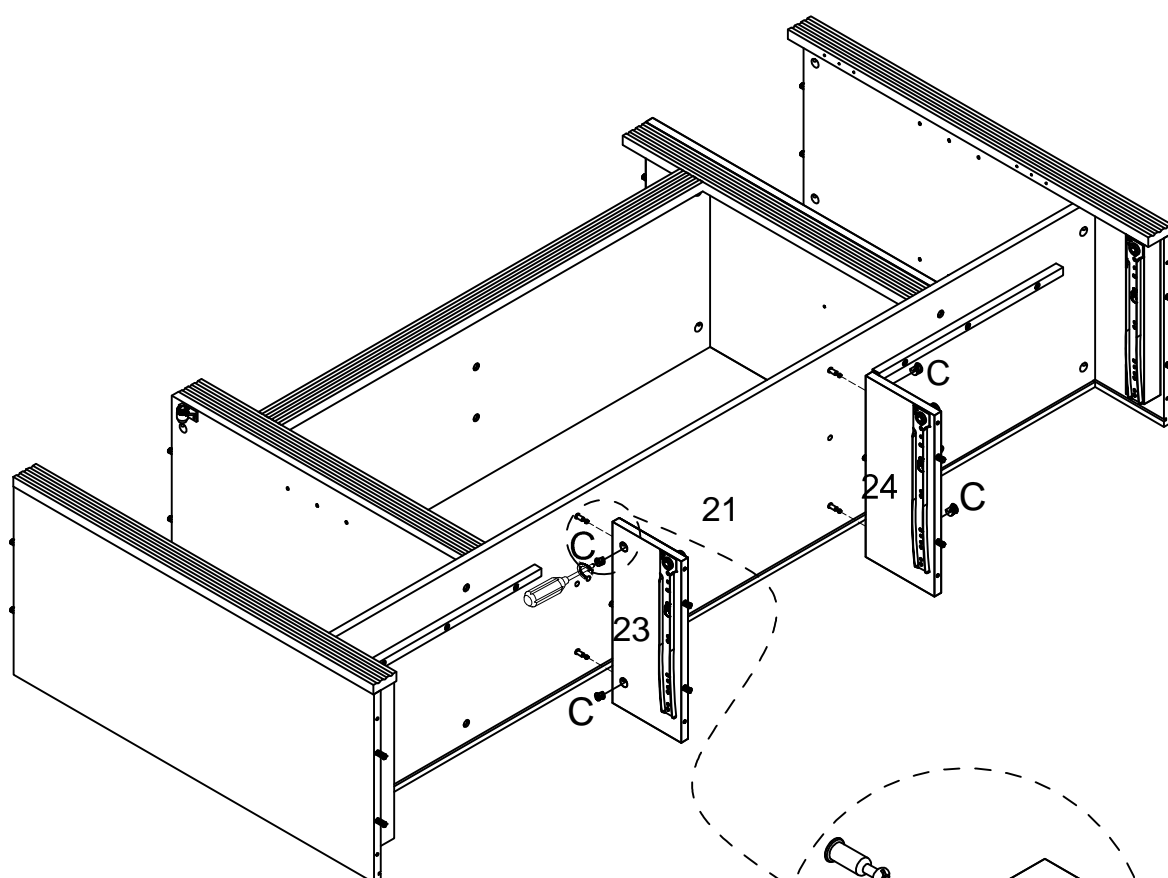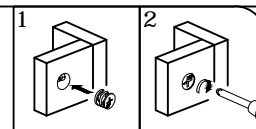X2

## Step 18




C

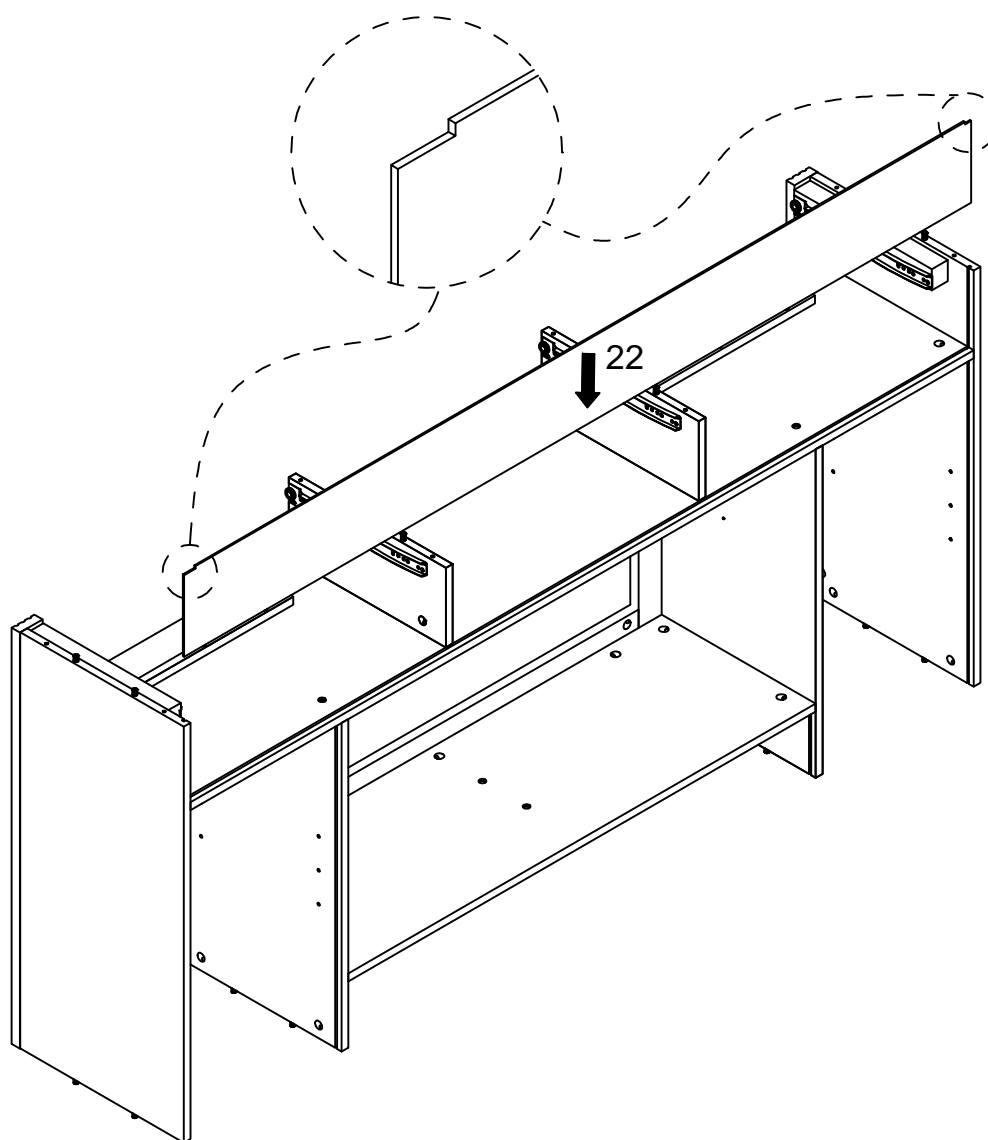X4




## Step 19



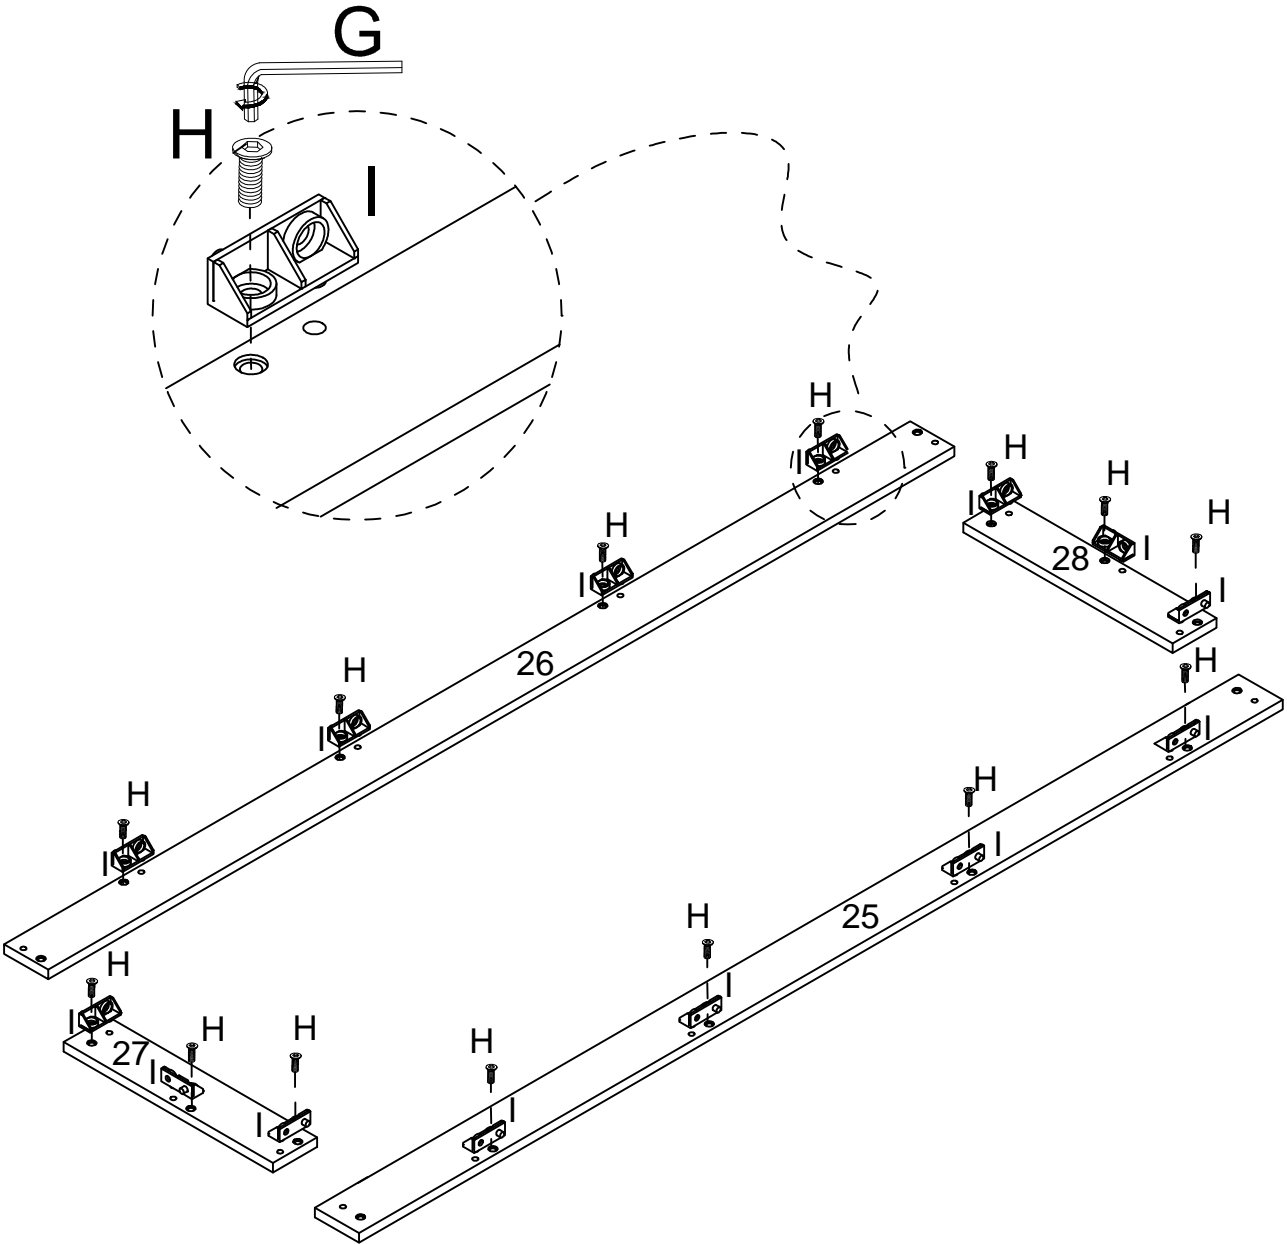


Step 20




G	I	H
		
X1	X14	X14

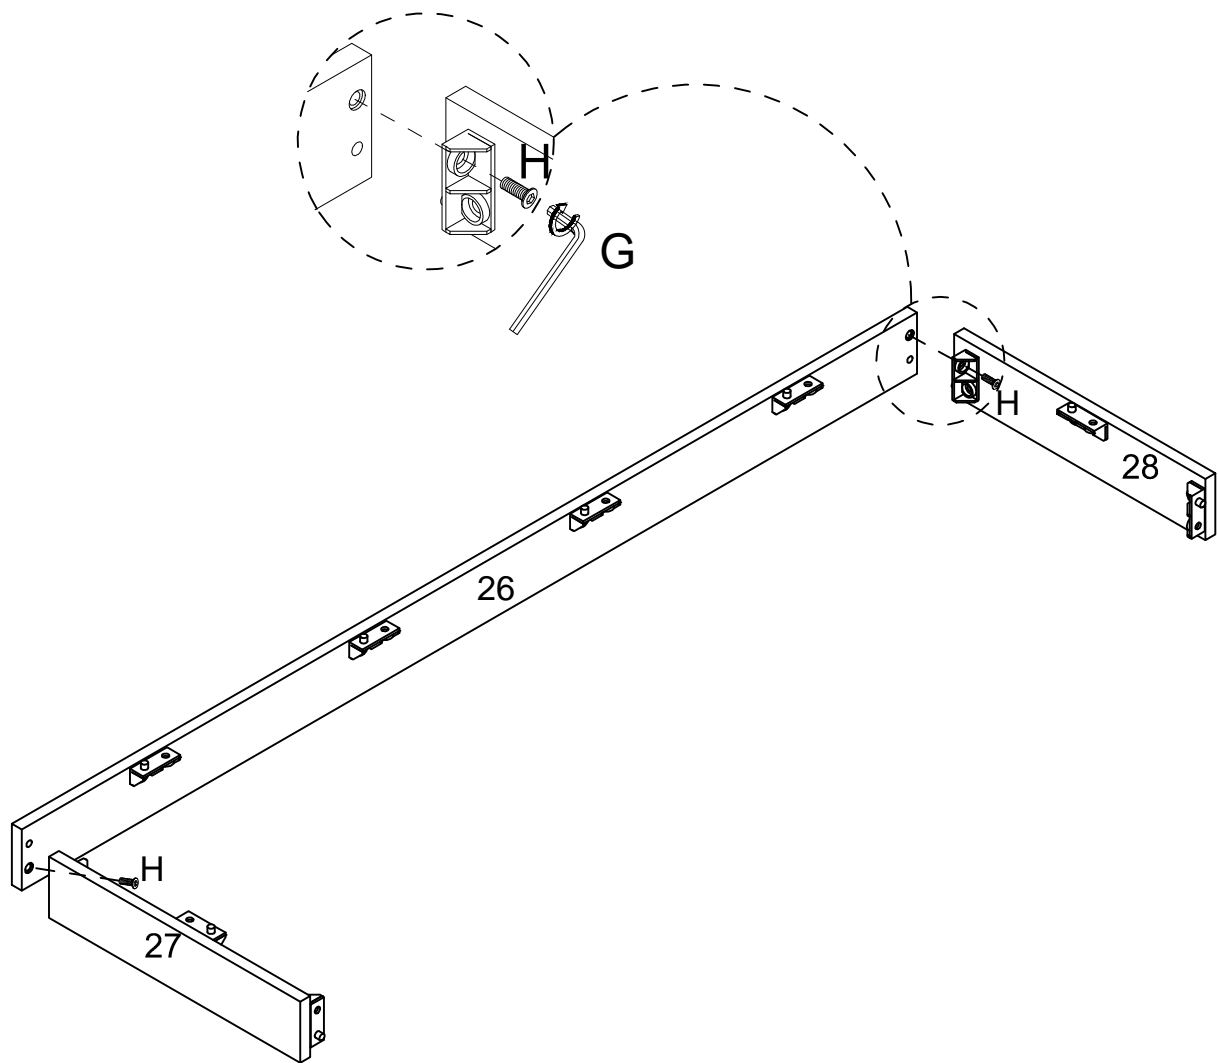

# Step 21




G	H
X1	X2

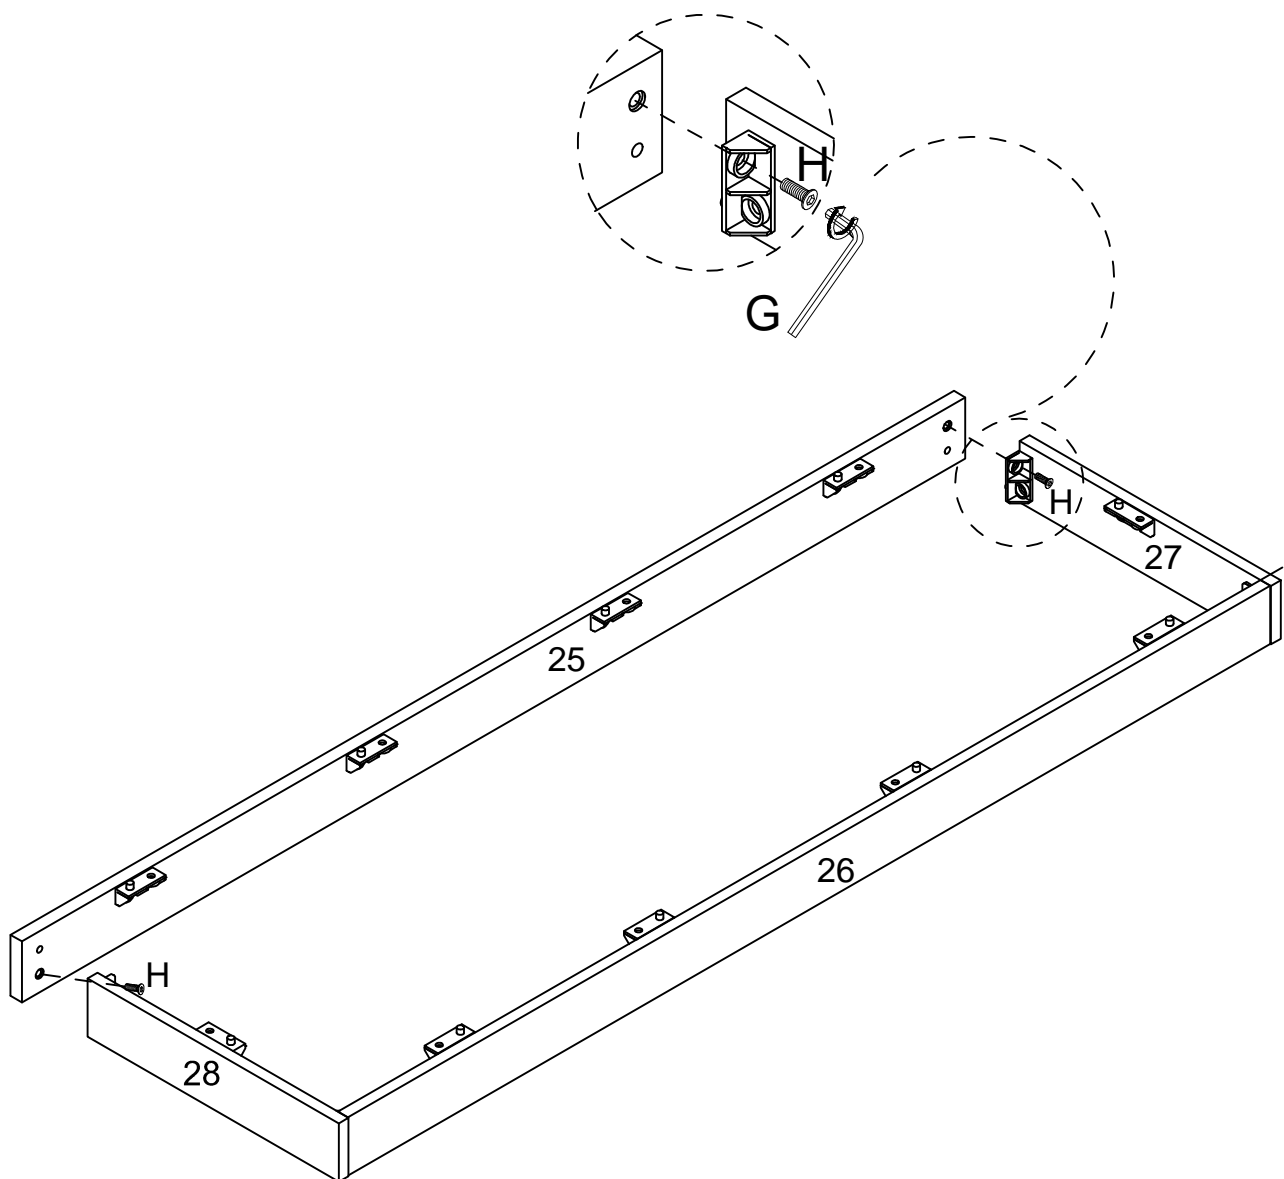

## Step 22





G	H
	
X1	X2

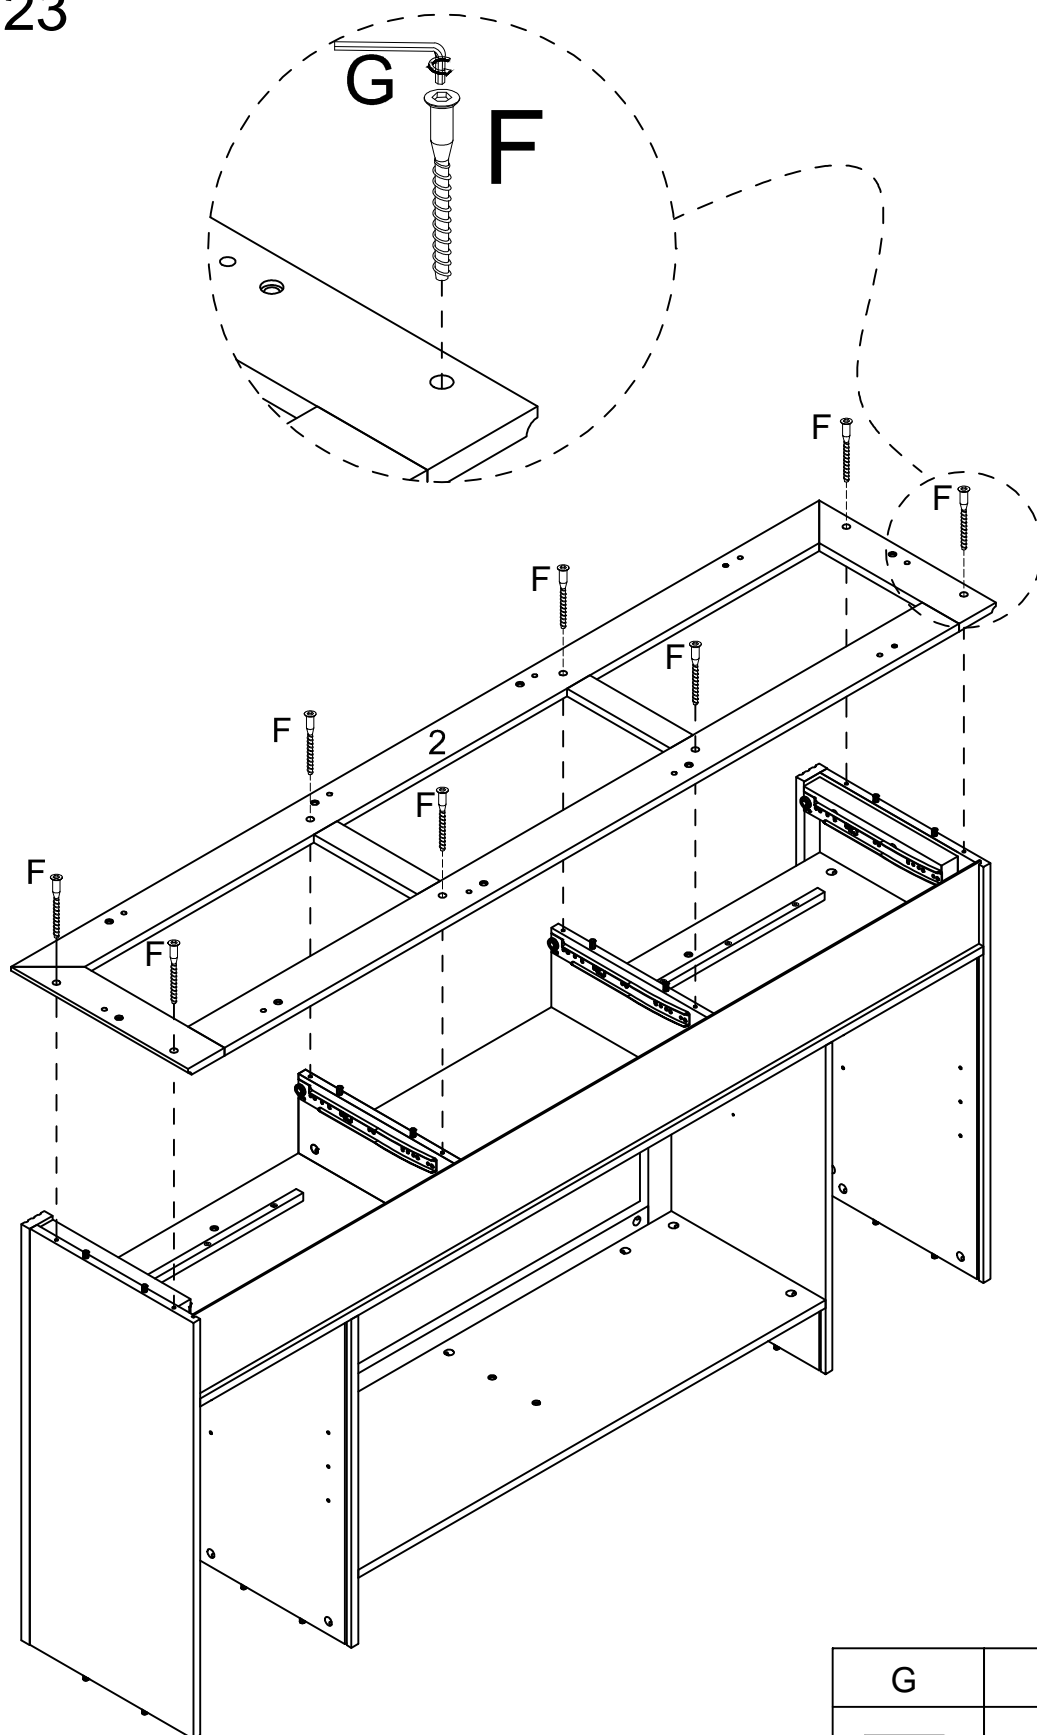

# Step 23




G	F
	
X1	X8

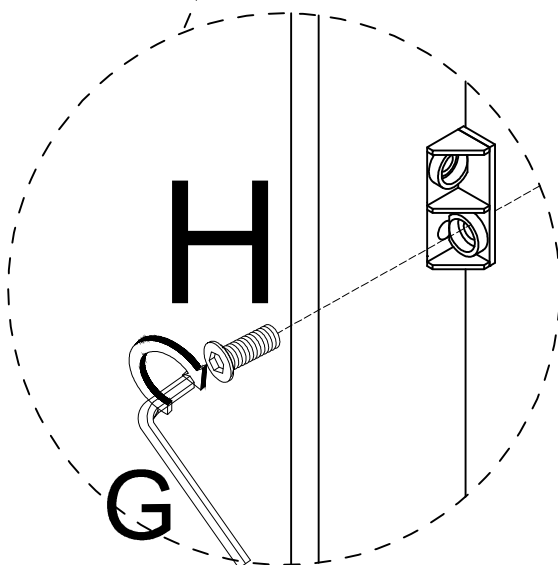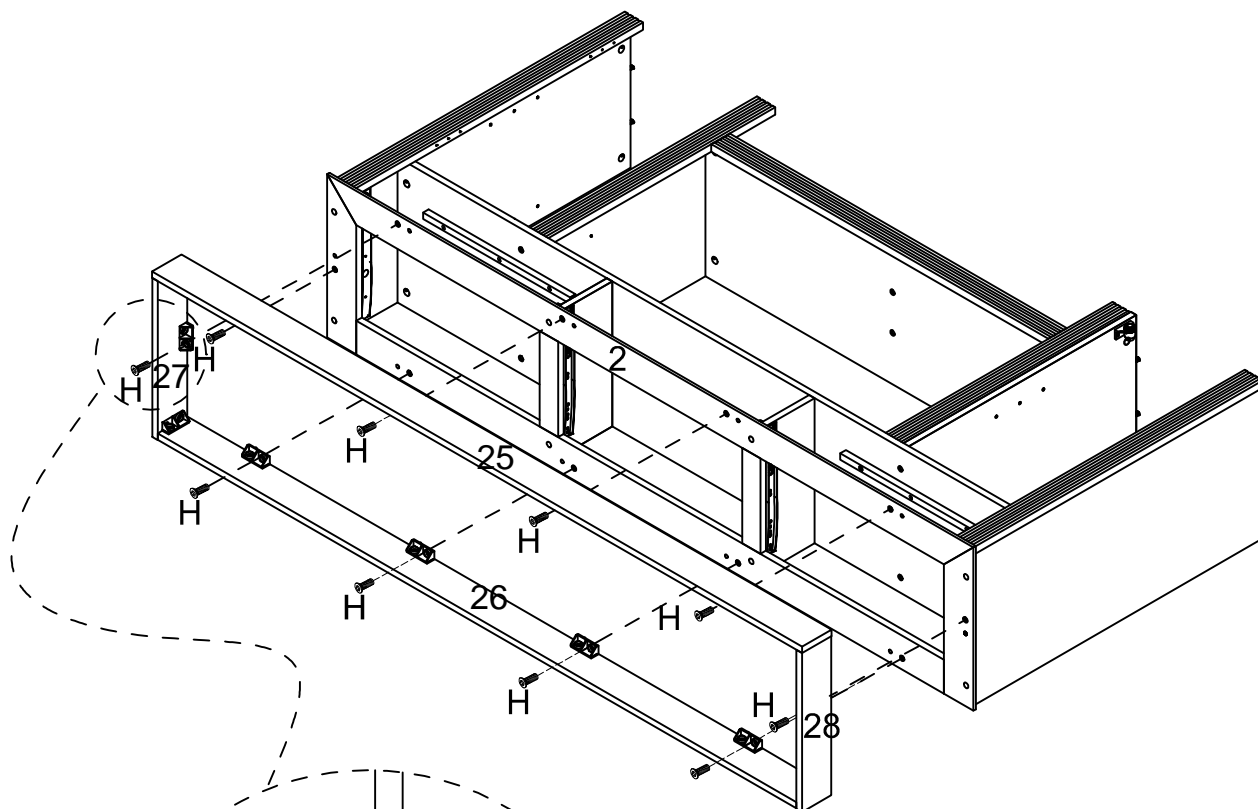

## Step 24




H	G
	
X10	X1

## Step 25


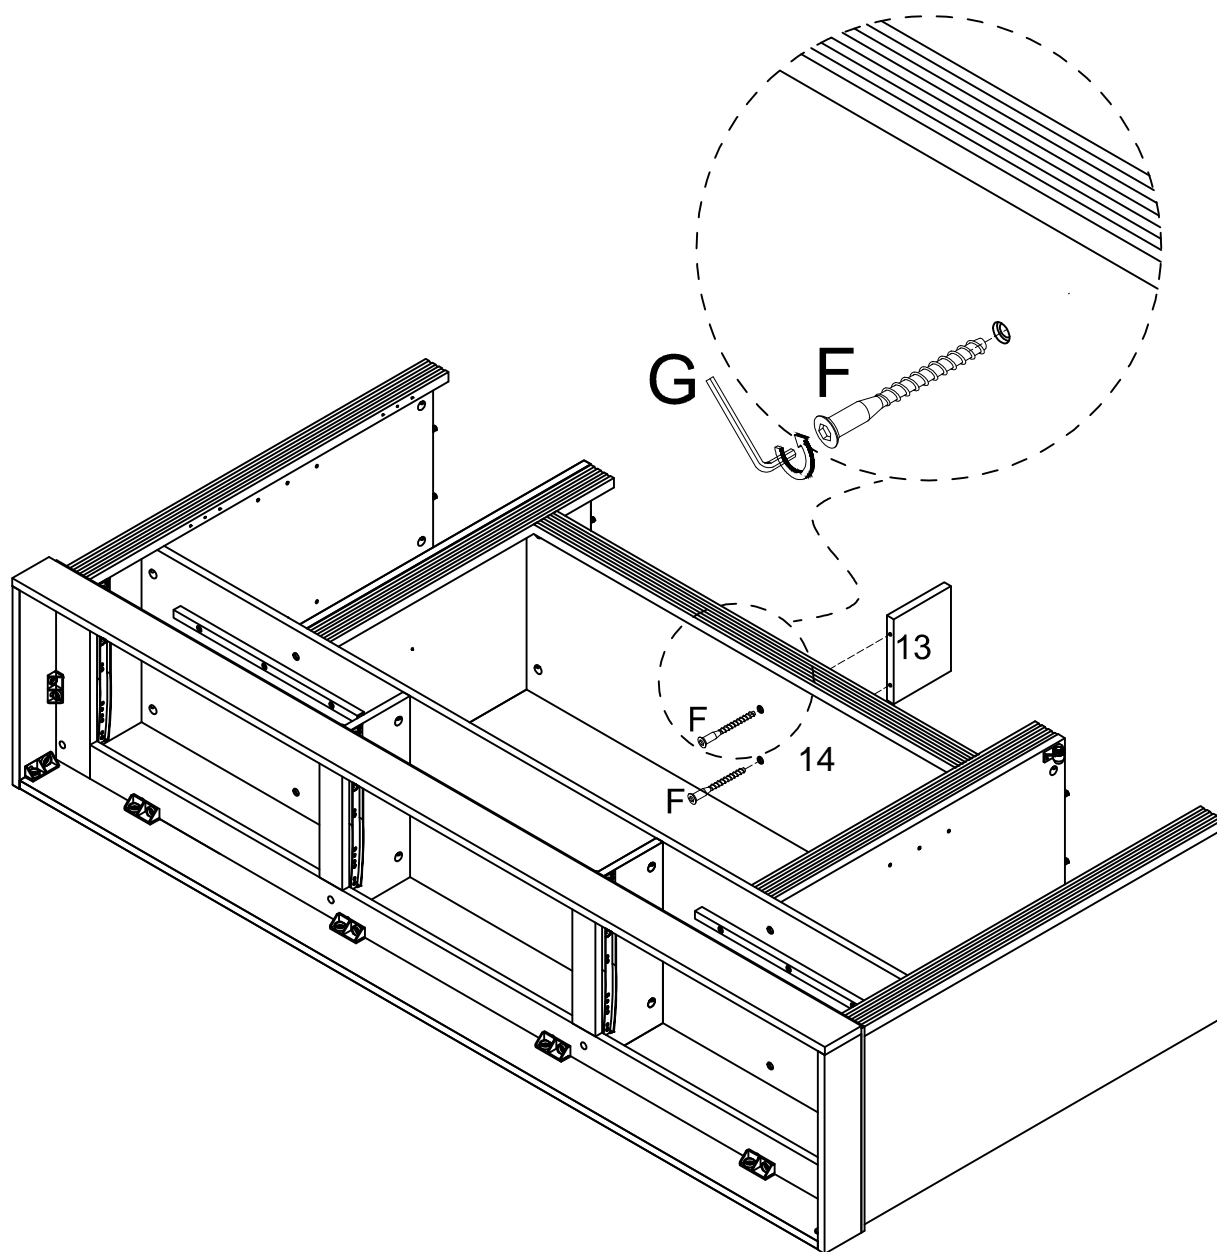



G	F
	
X1	X2

## Step 26

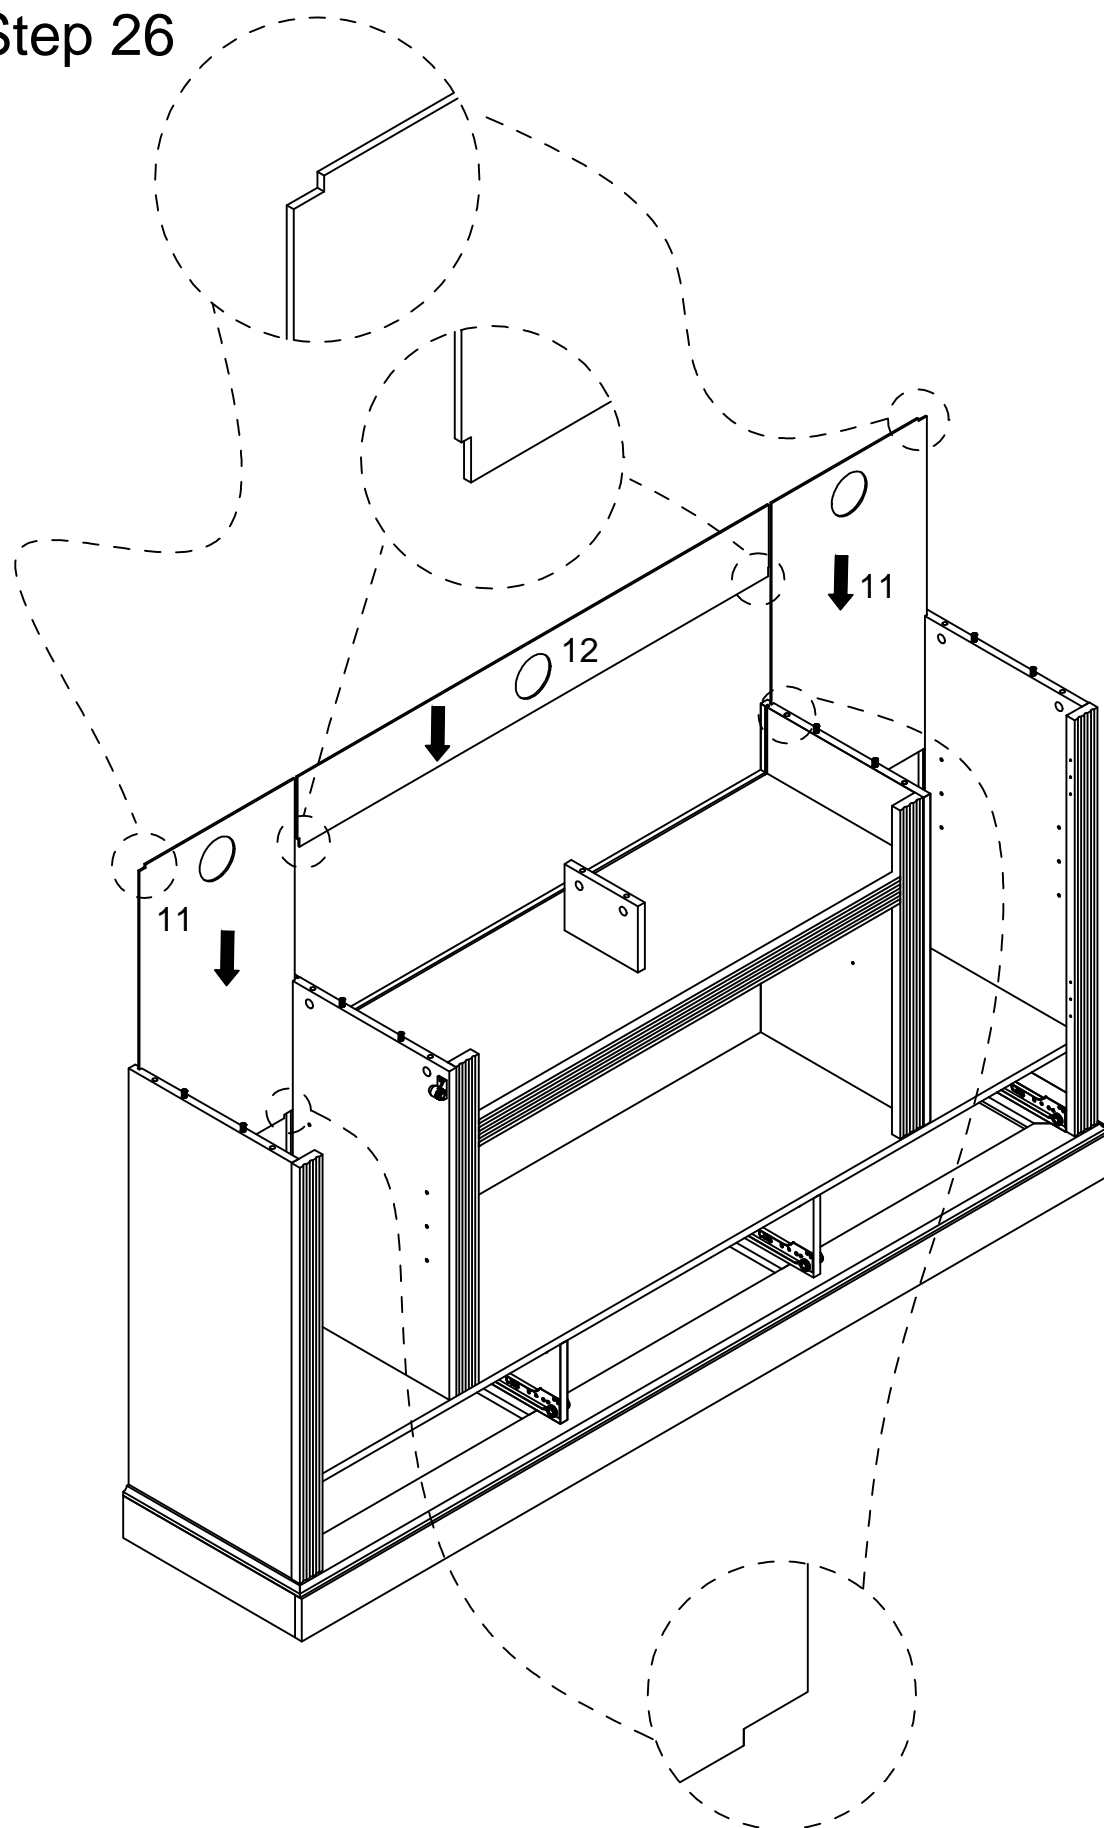


# Step 27

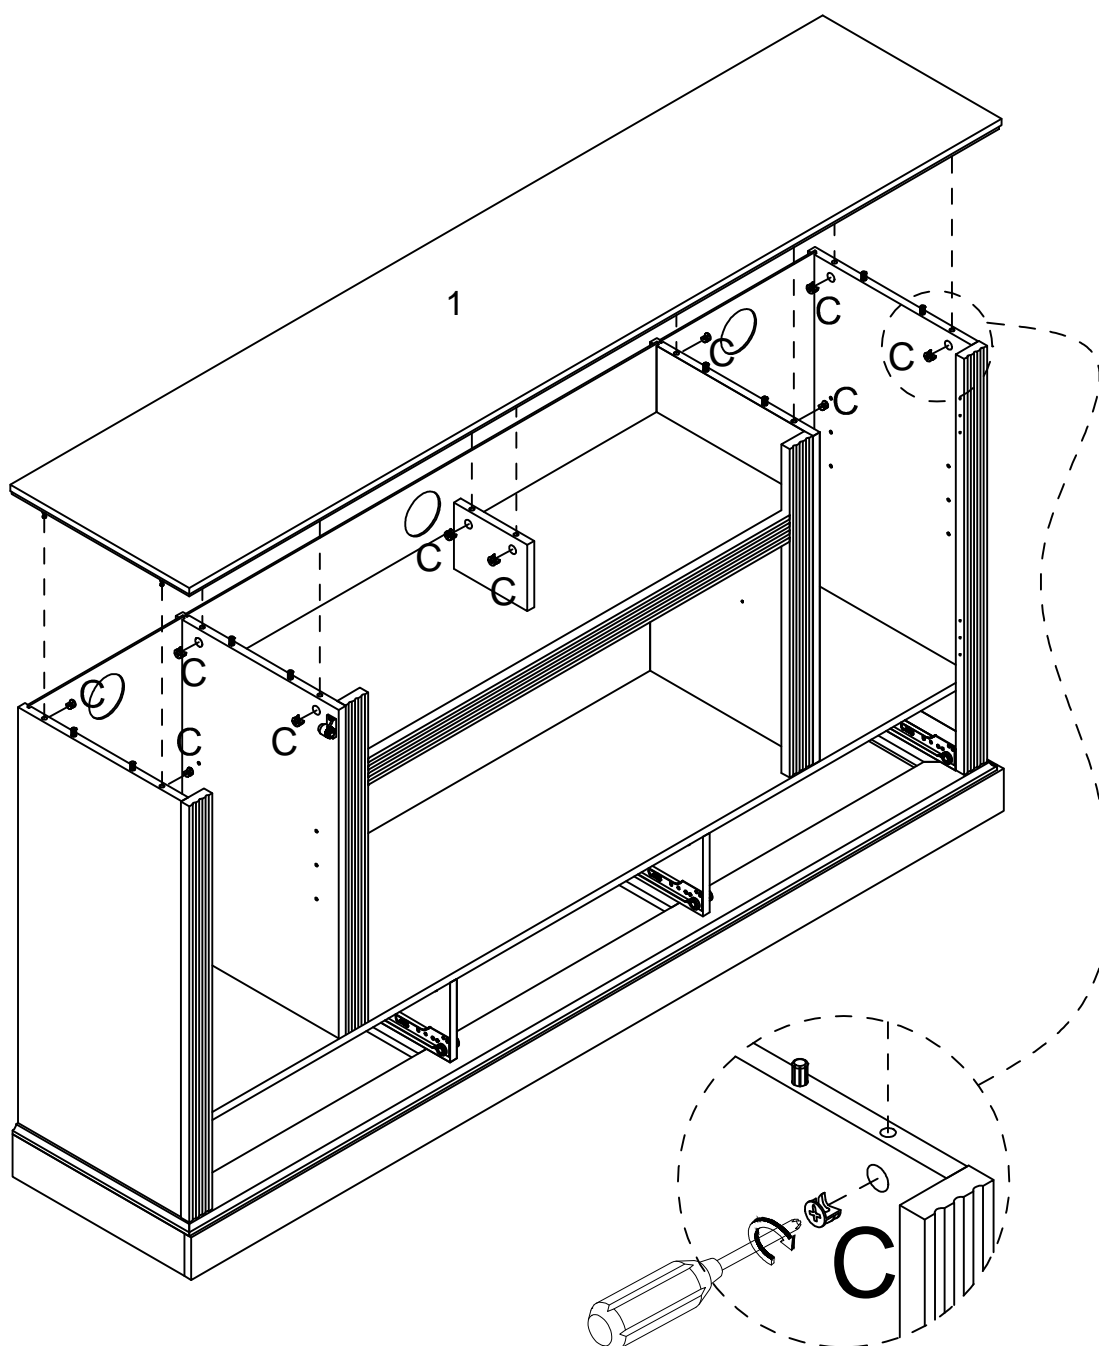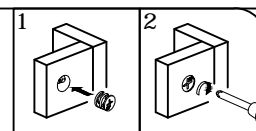


C

X10

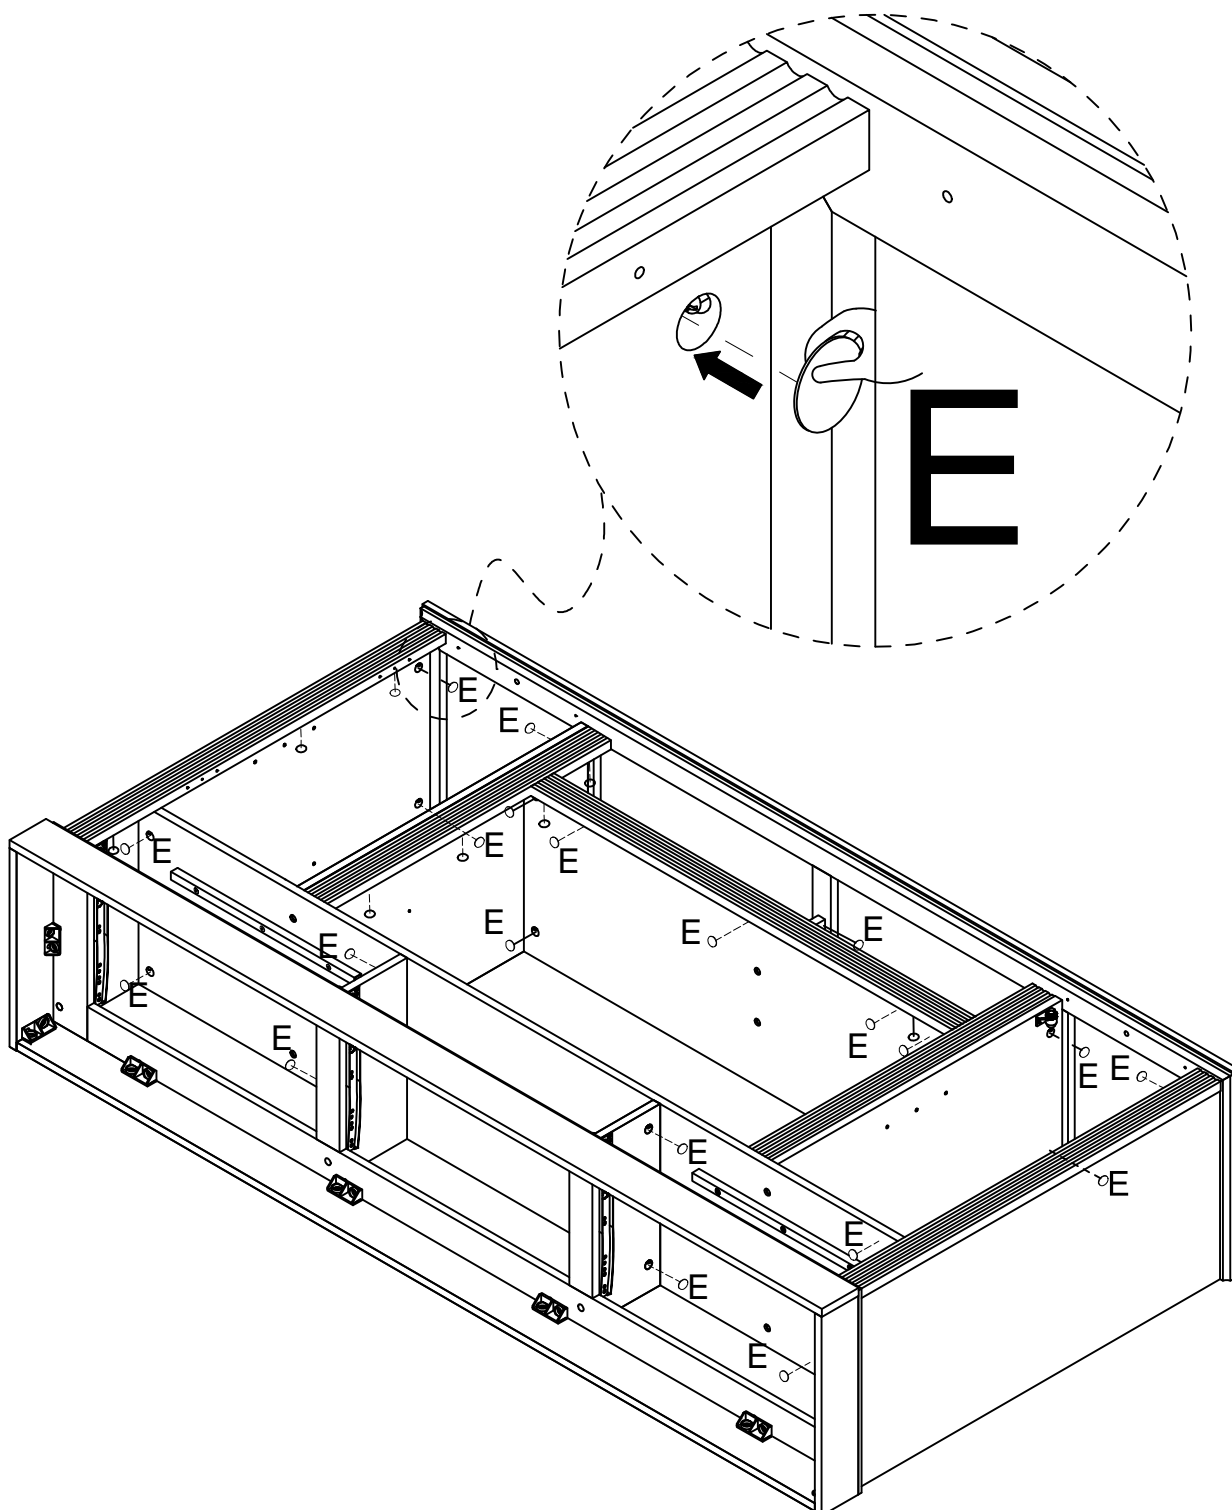


## Step 28



E

X39
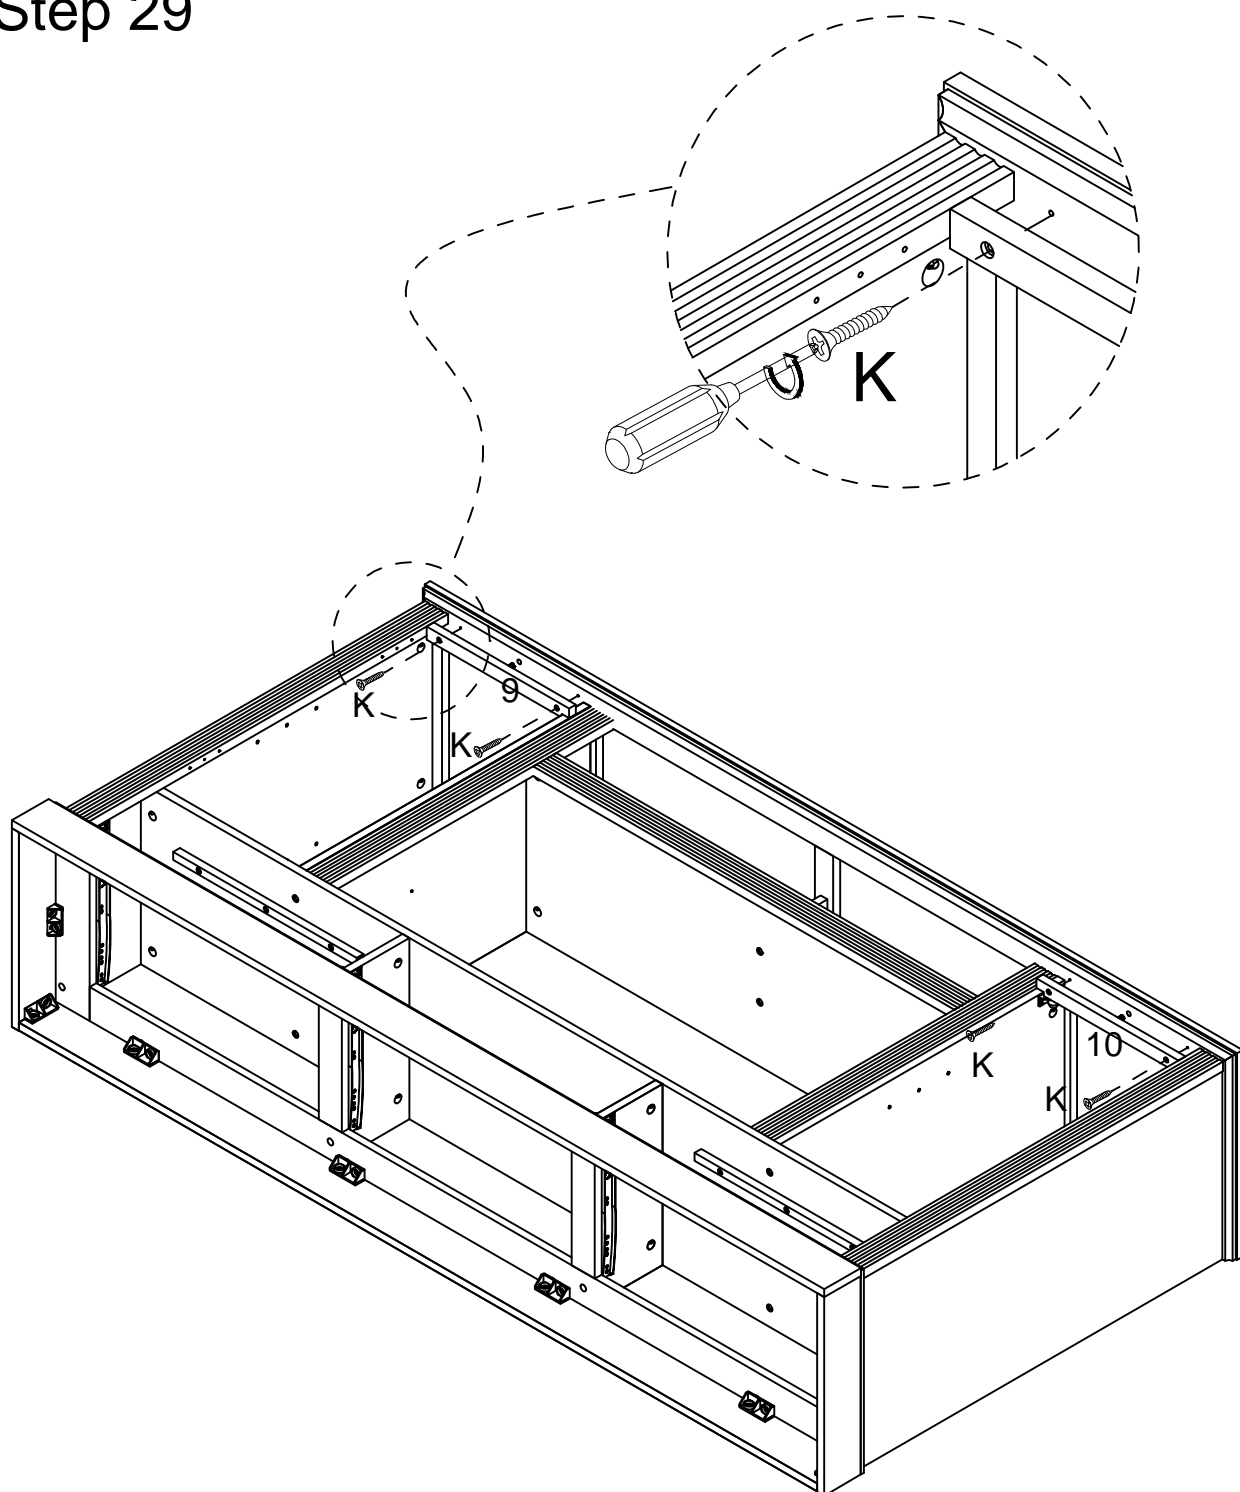
## Step 29




K




X4

## Step 30

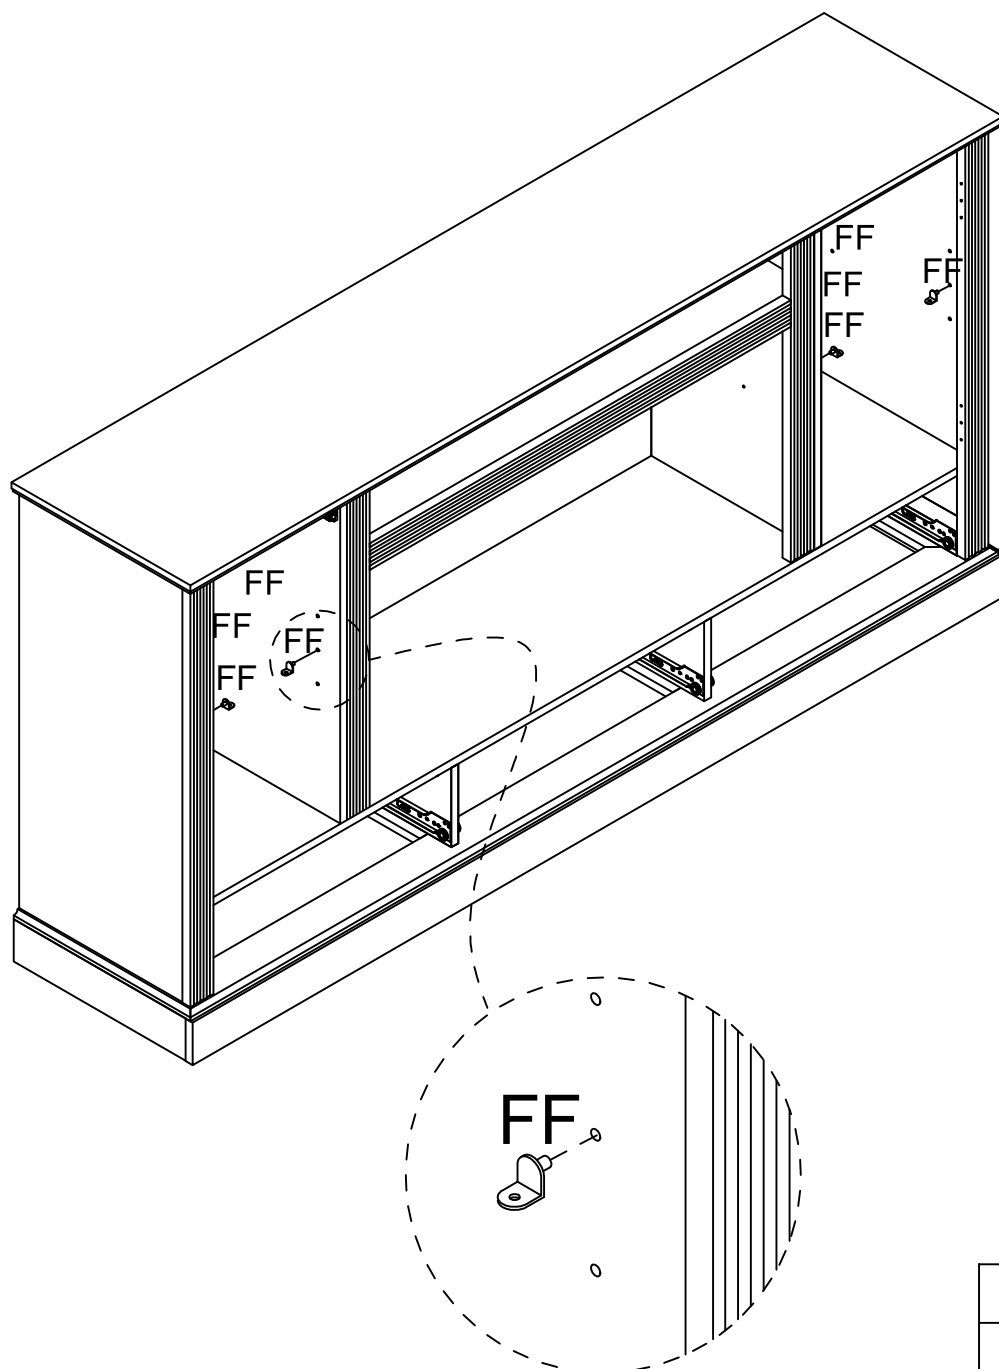



FF
X8

## Step 31

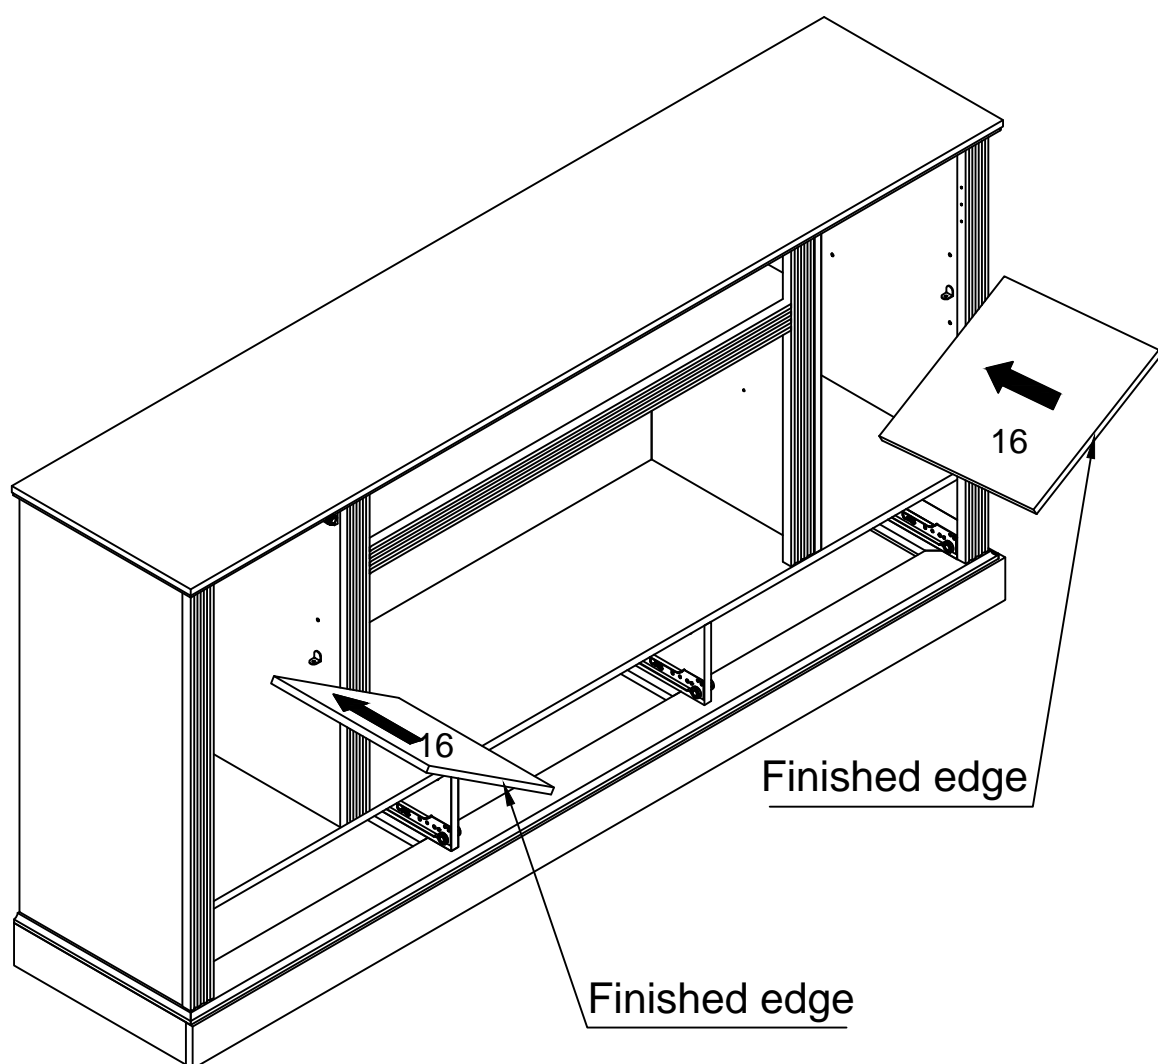


## Step 32


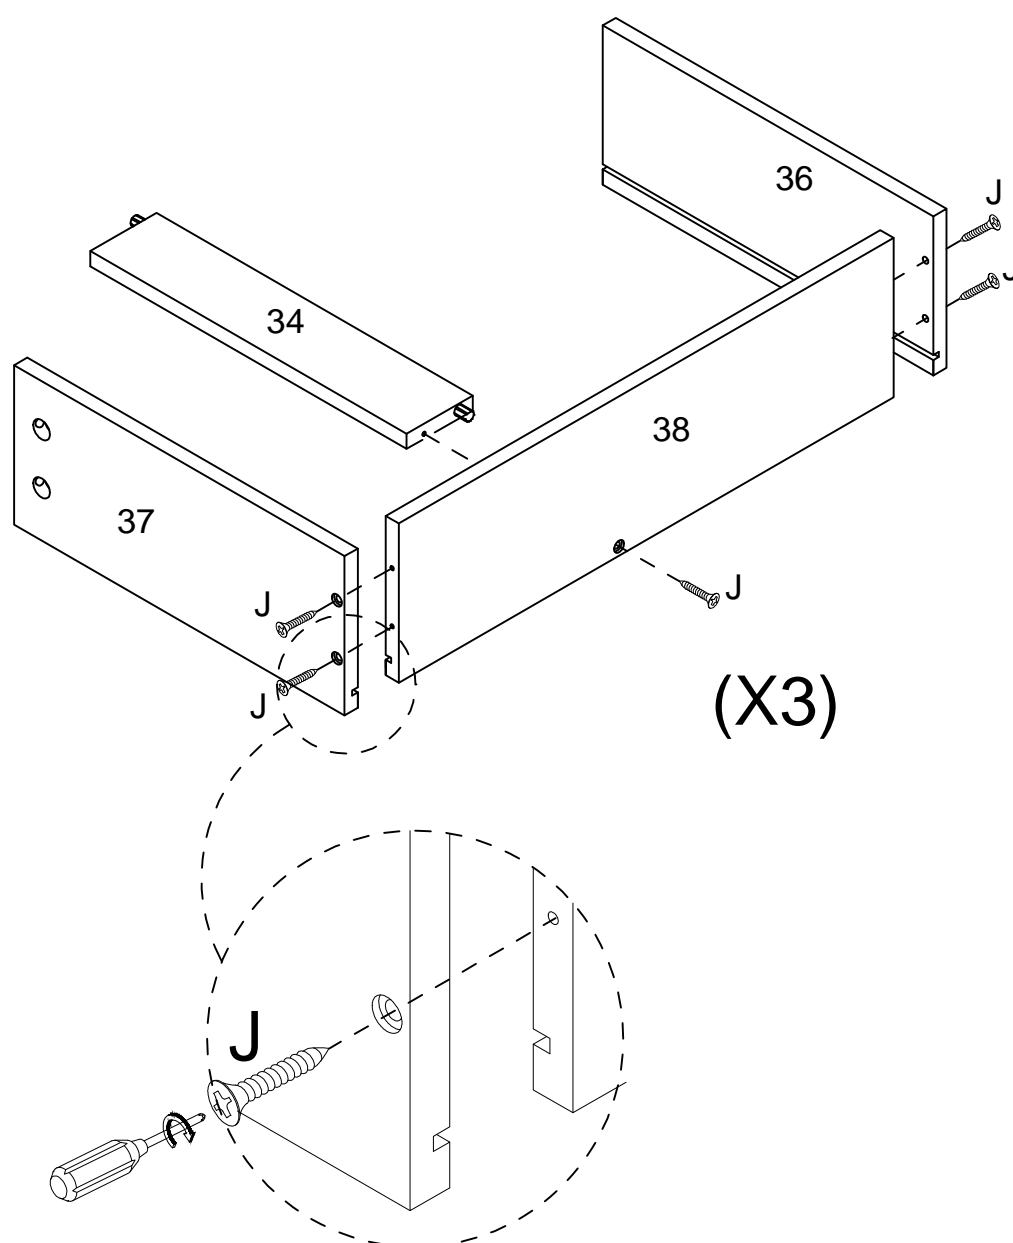



J

X15
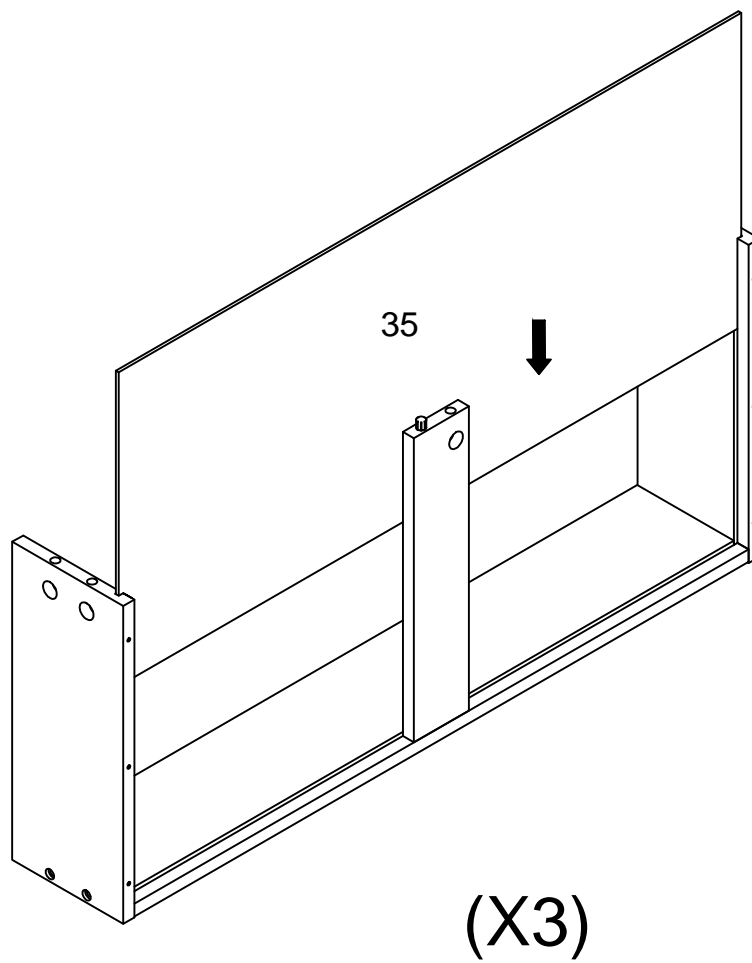
## Step 33

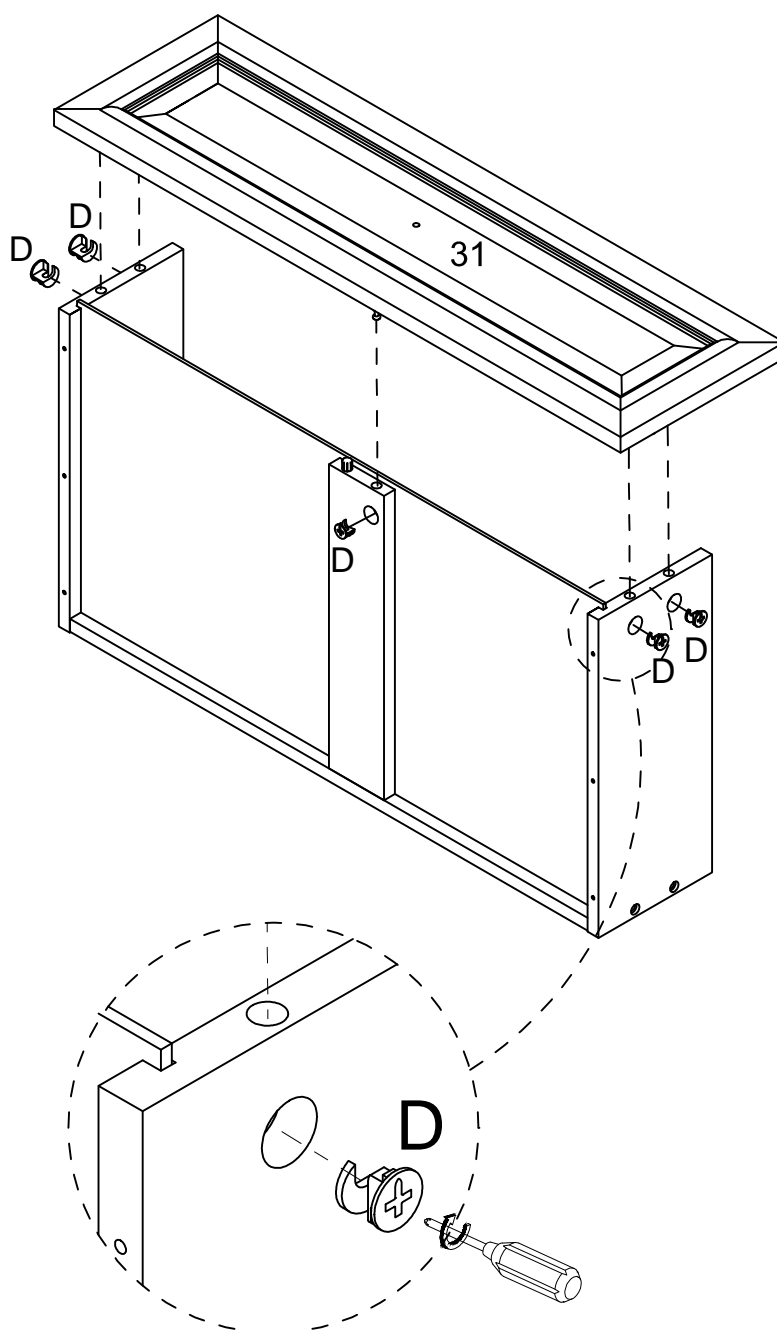
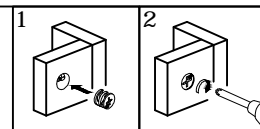



# Step 34



D

X5

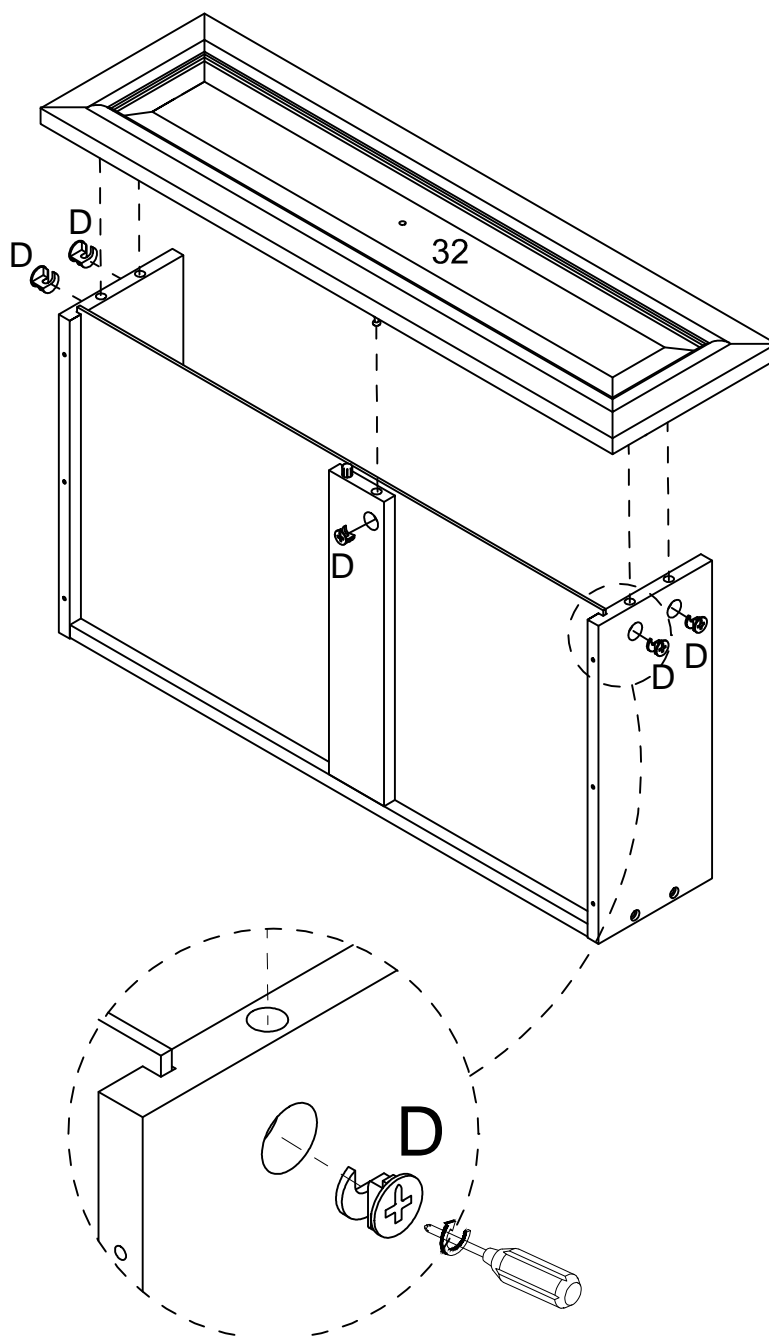
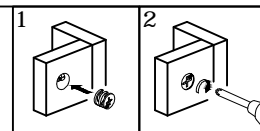
# Step 35




D

X5

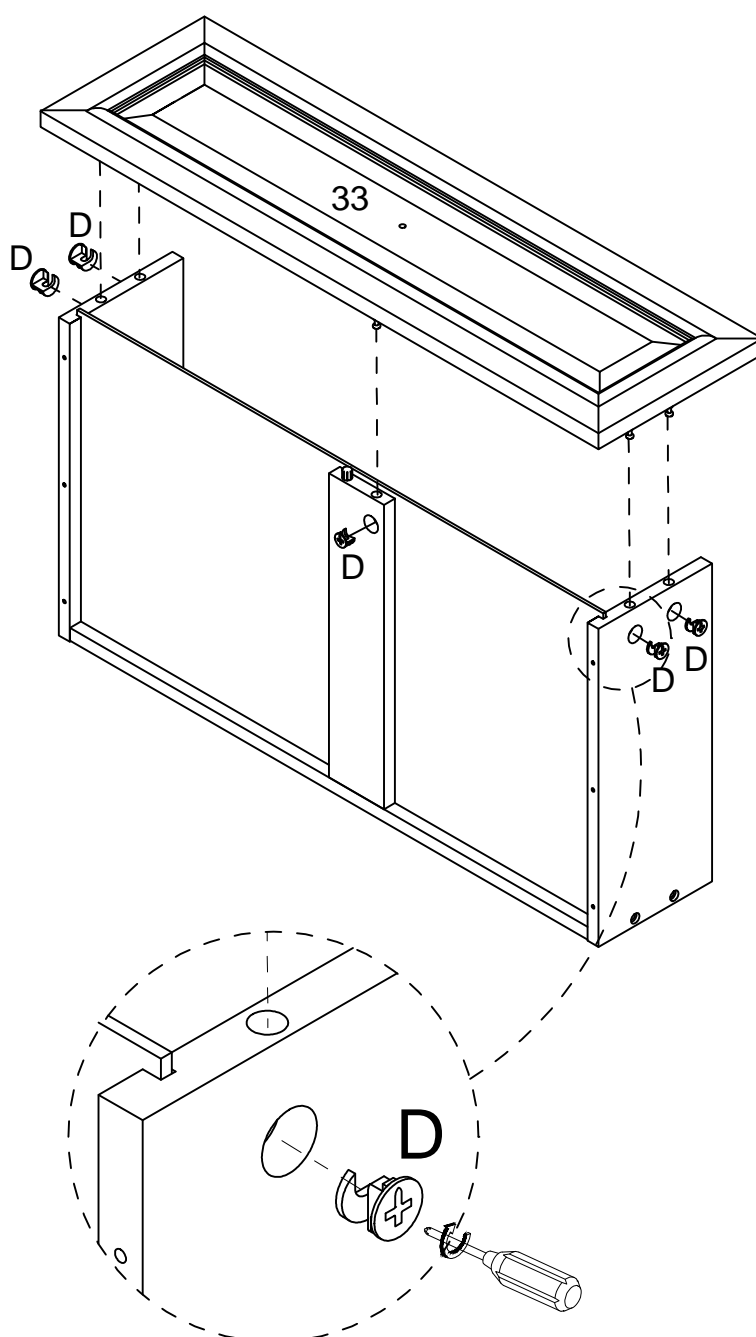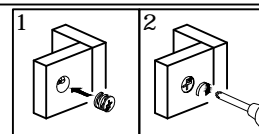




# Step 36




D

X5

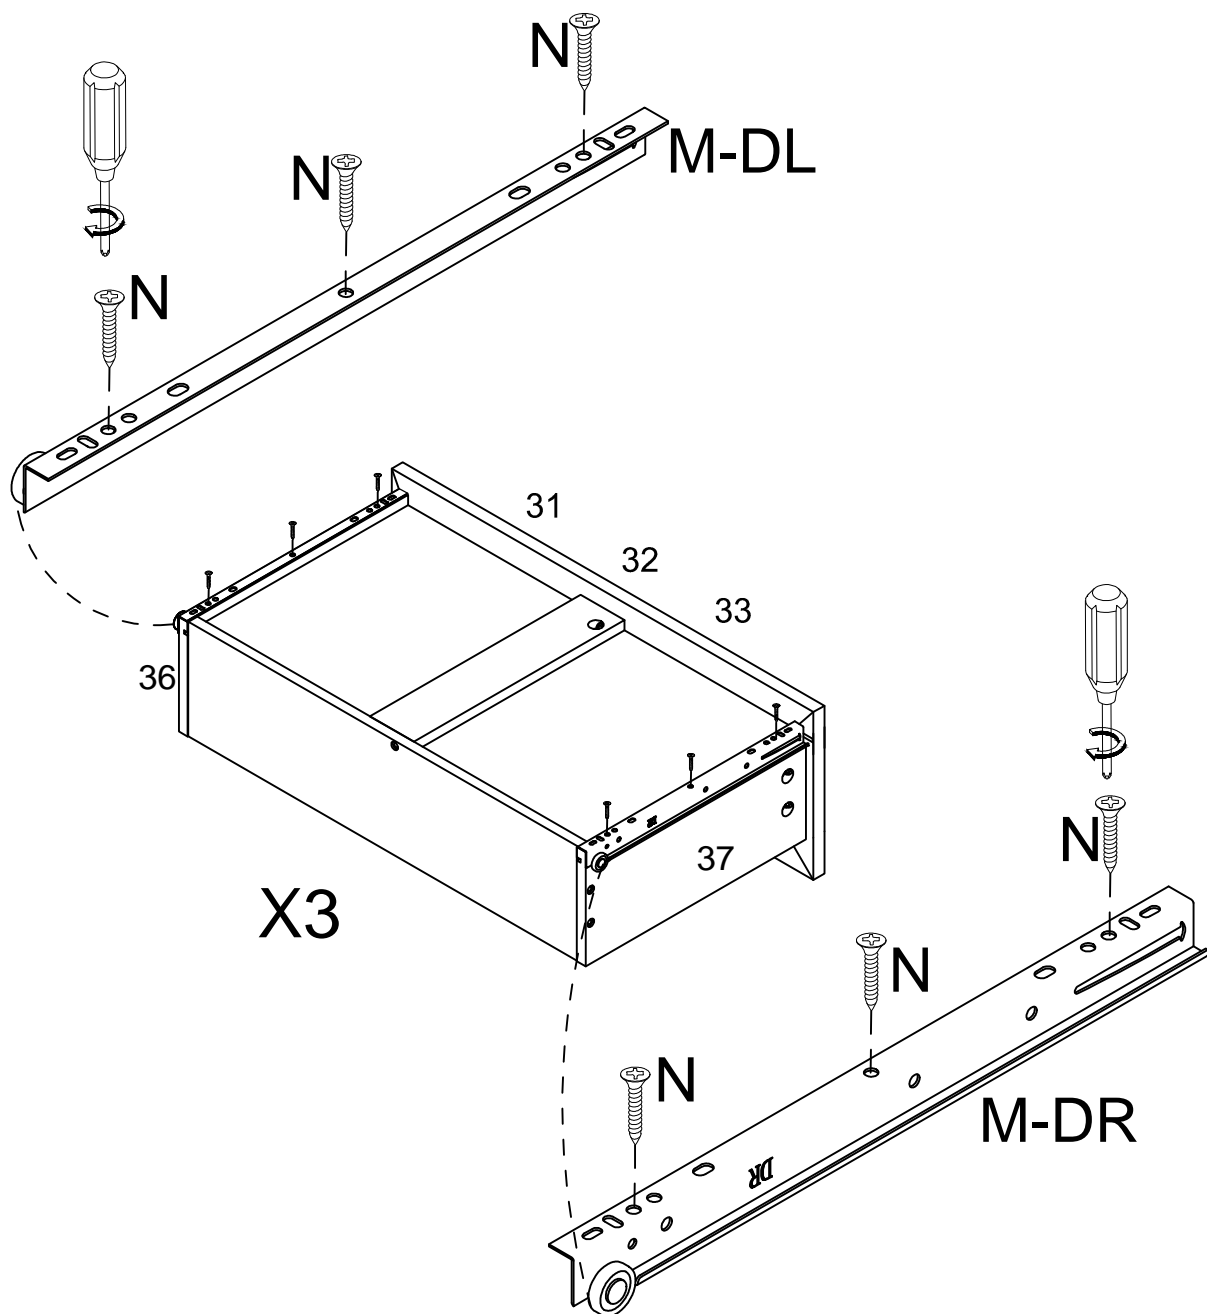

## Step 37

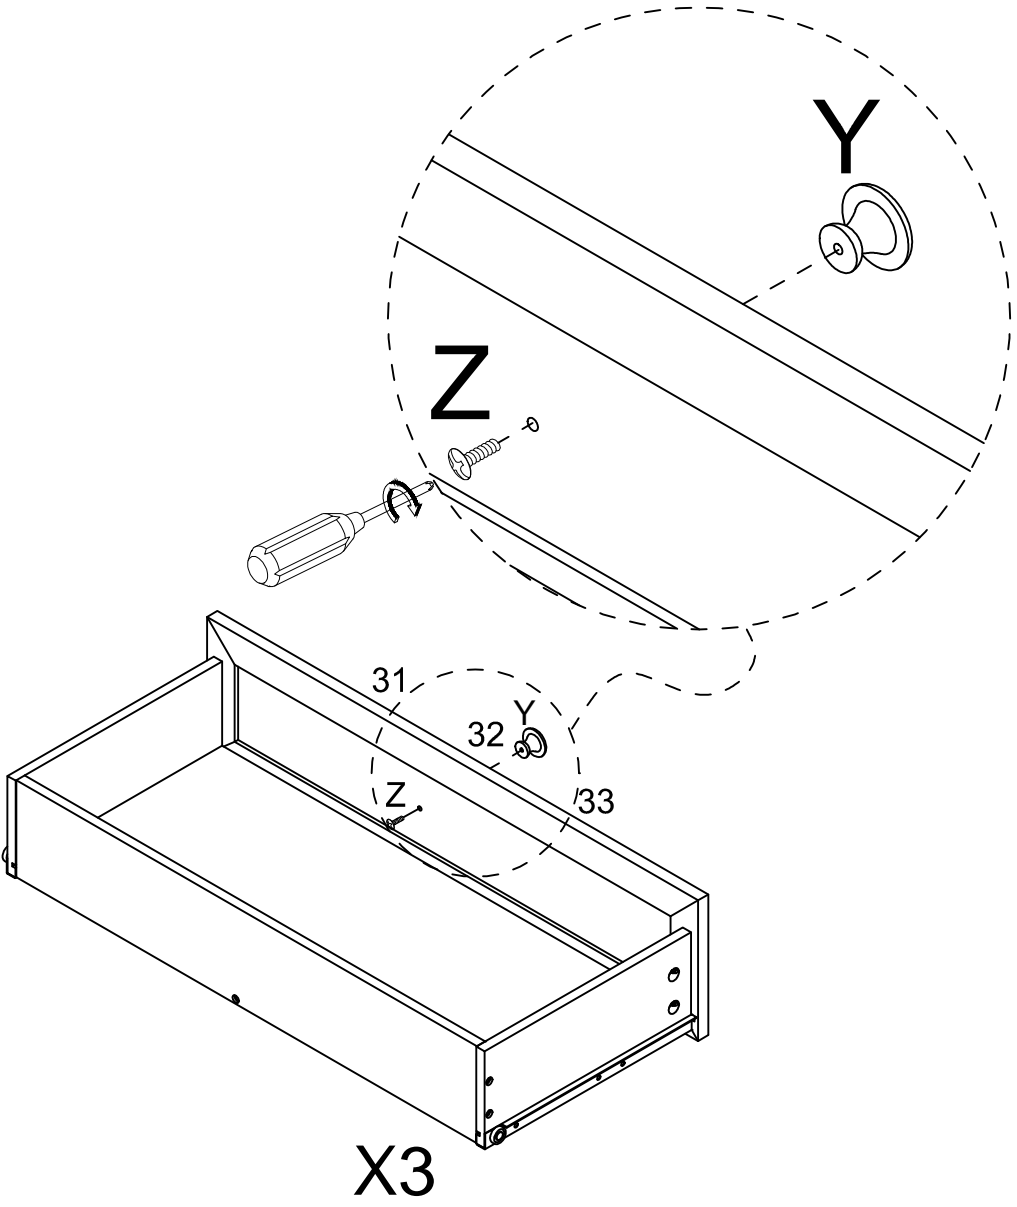


N	M
	
X18	X3

# Step 38




Z	Y
	
X3	X3

## Step 39

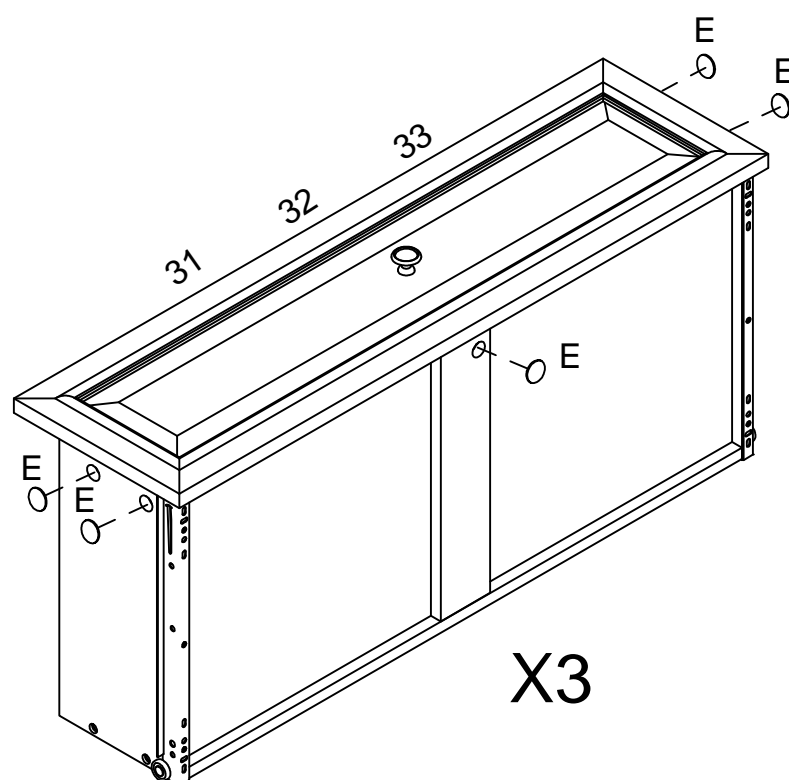




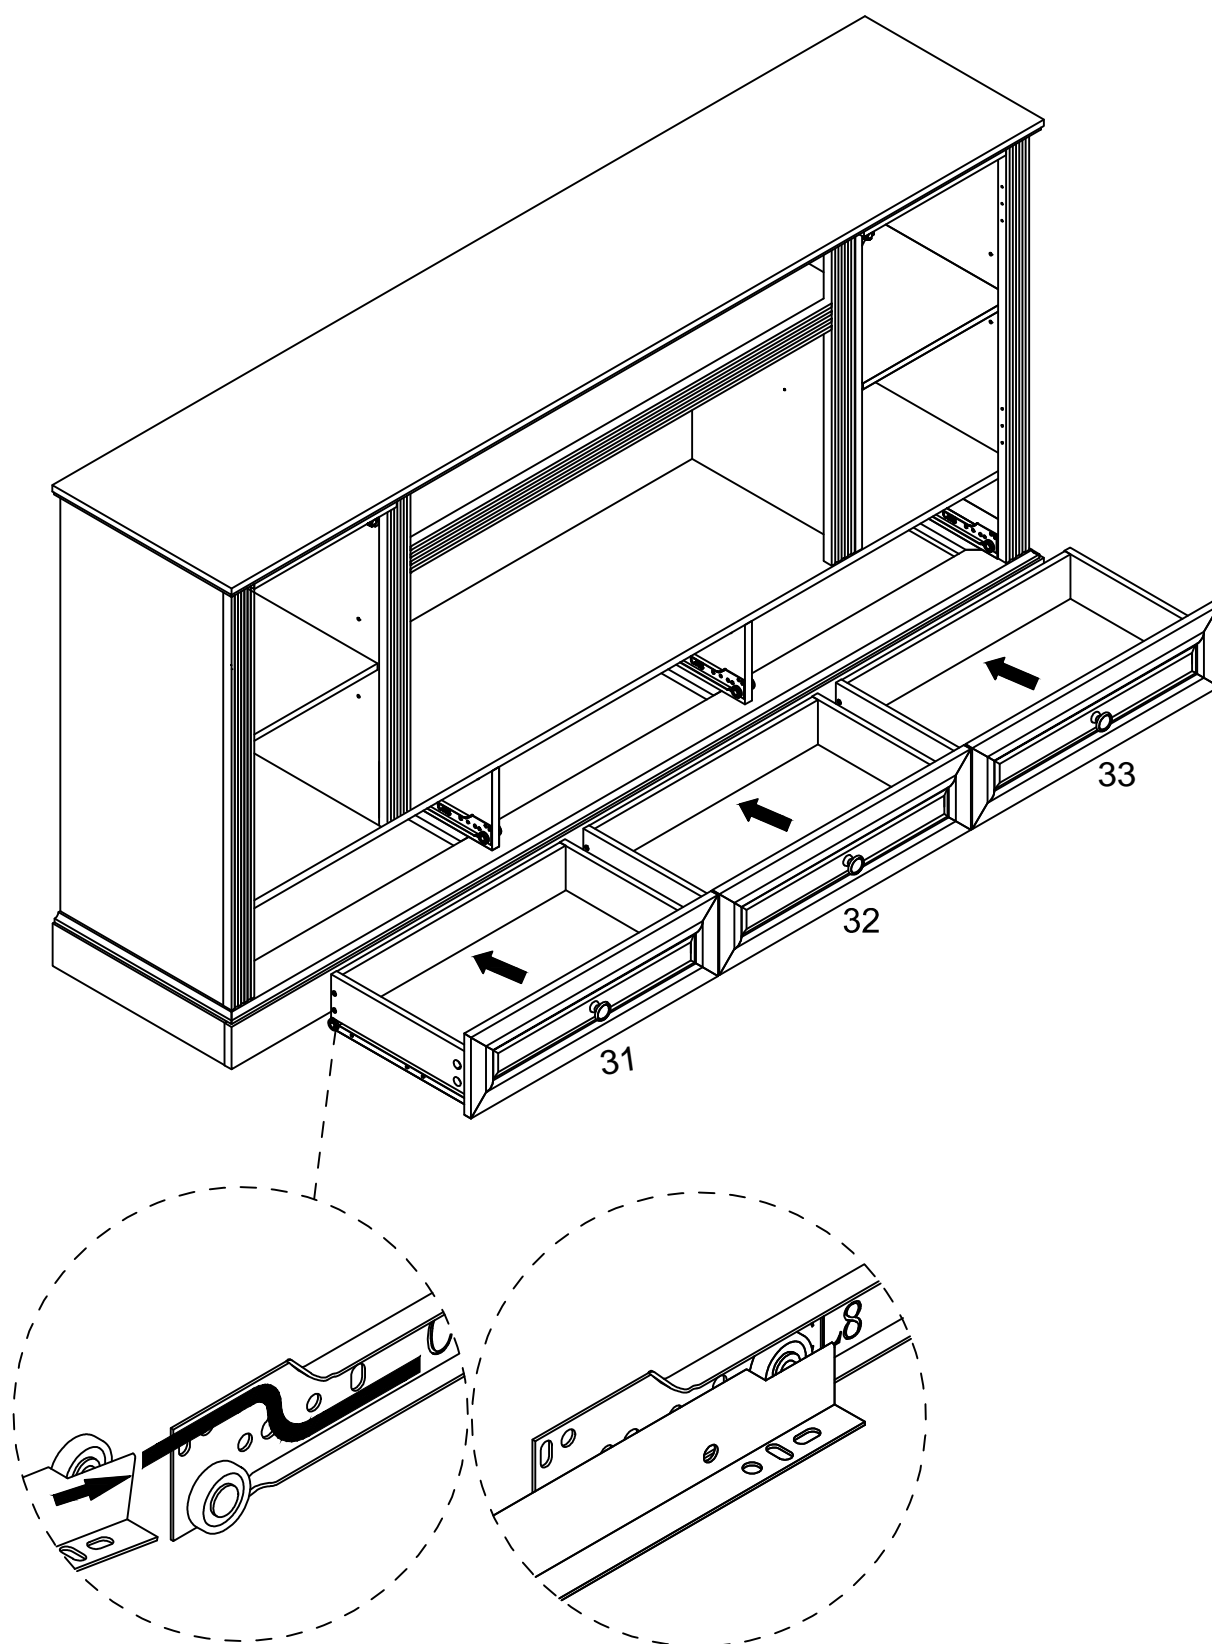

E
○
X15

## Step 40

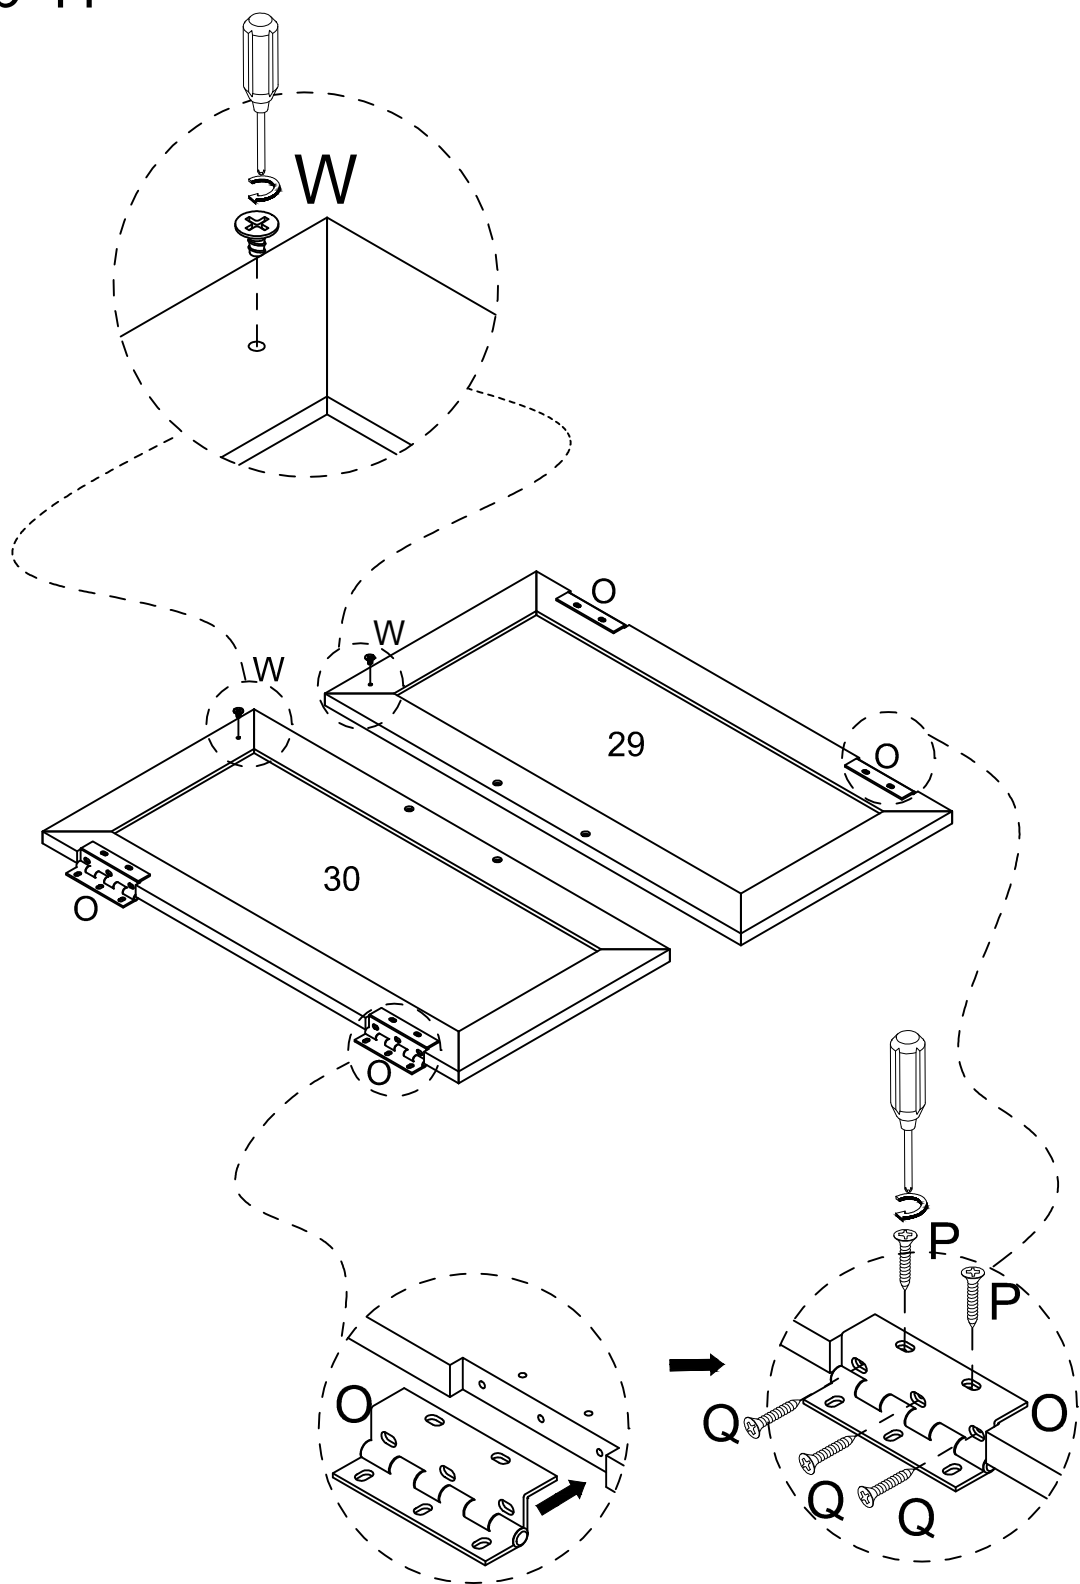




# Step 41




W	Q	P	O
			
X2	X12	X8	X4


## Step 42

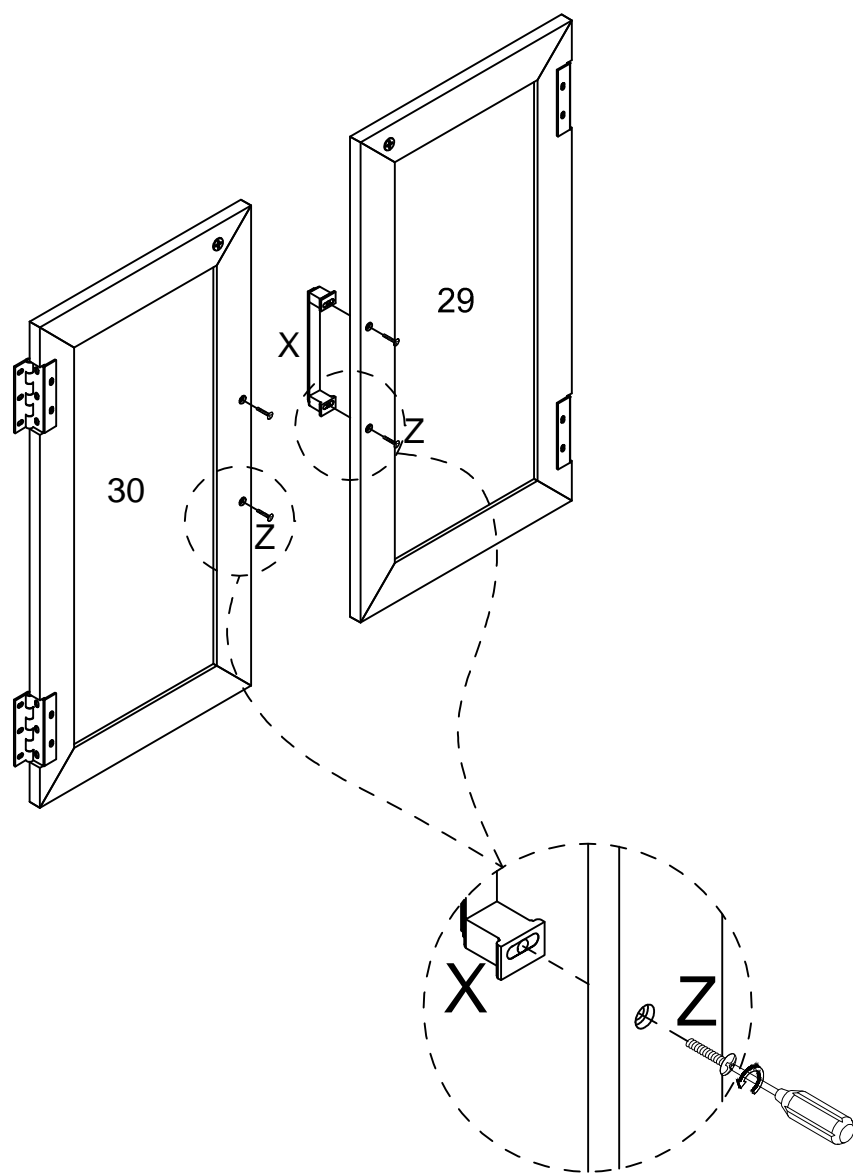

Z	X
	
X4	X2


## Step 43

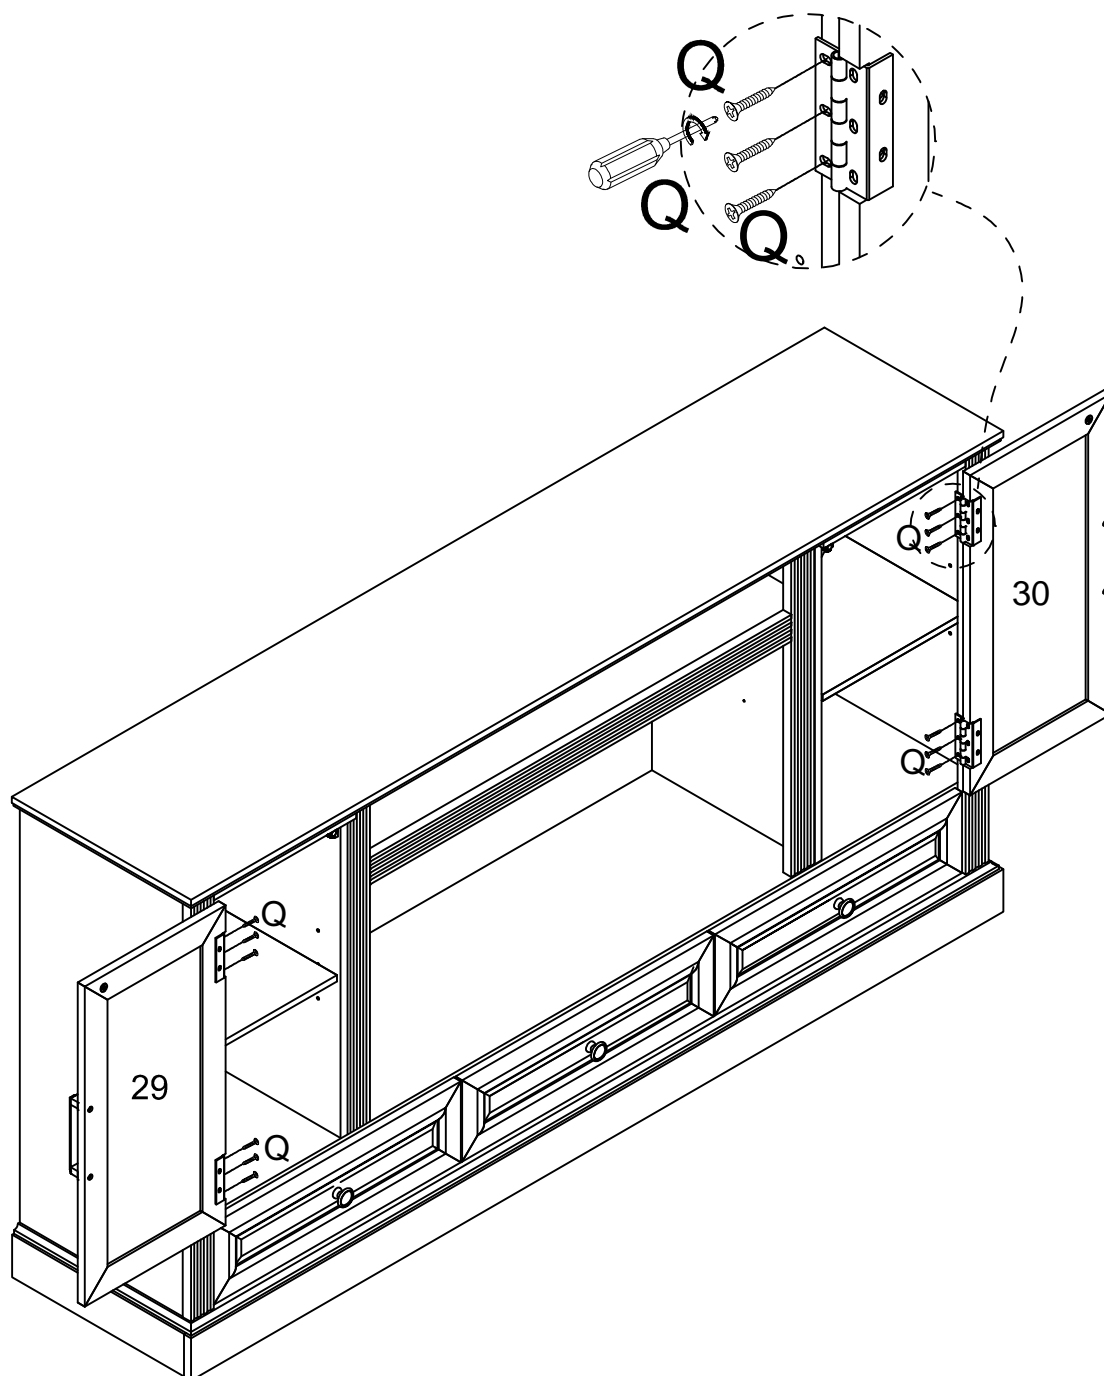



Q

X12

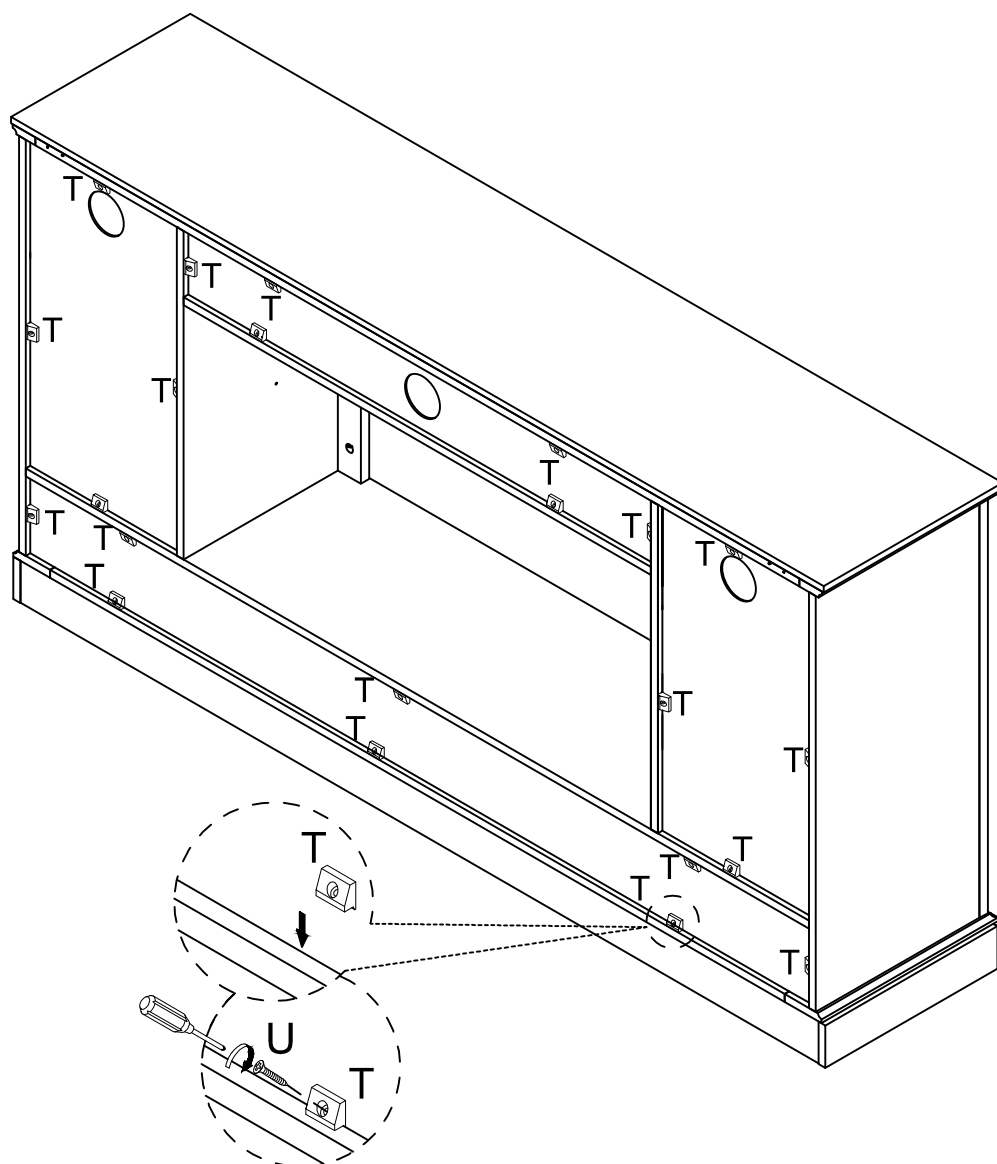


## Step 44




T	U
	
X22	X22

## Step 45

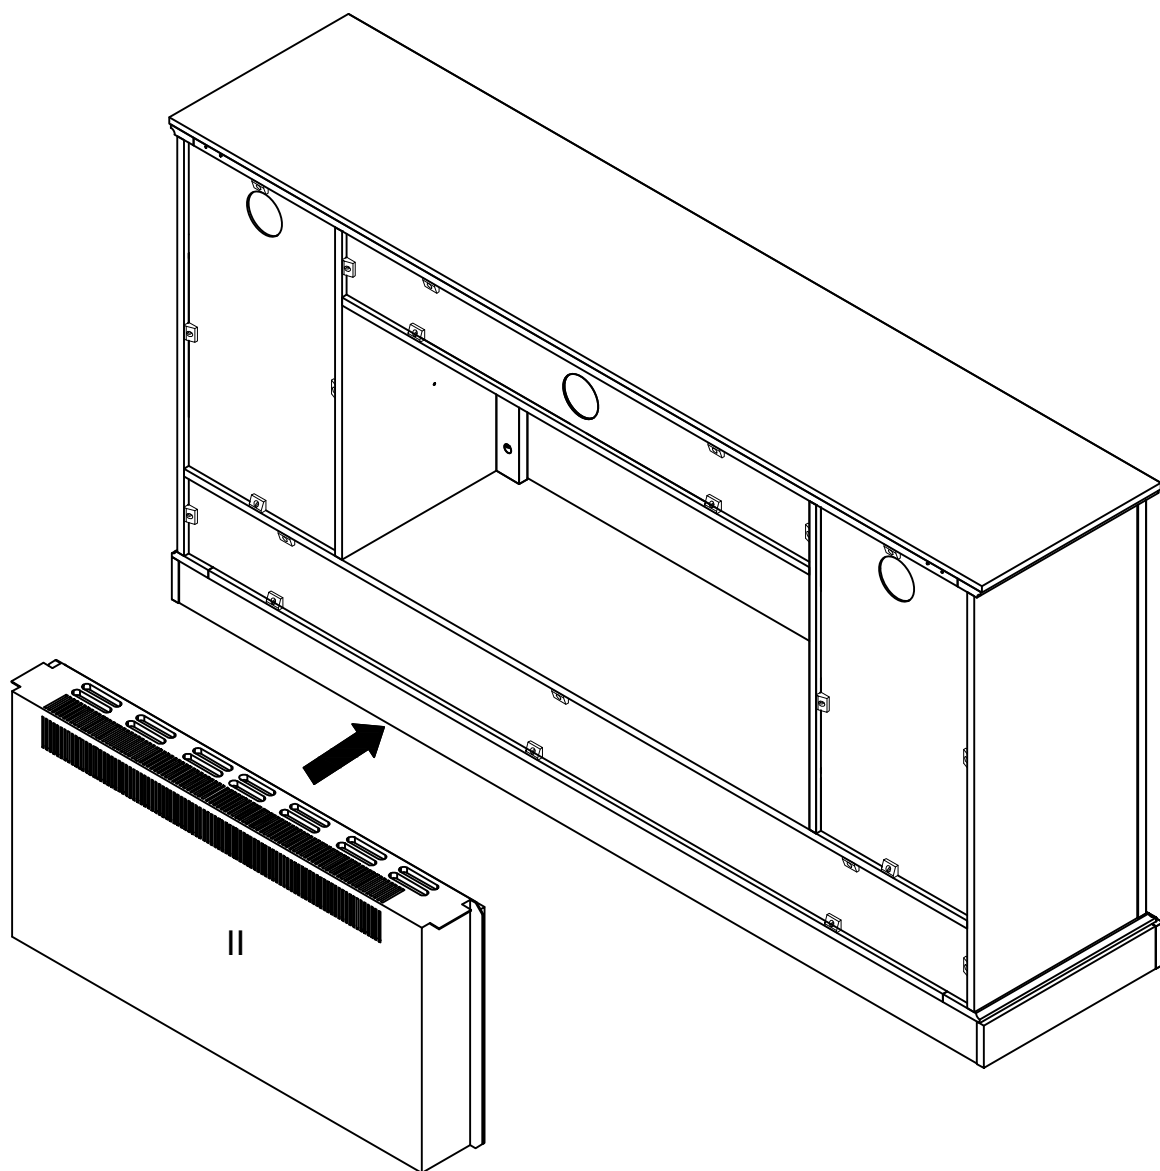




## Step 46

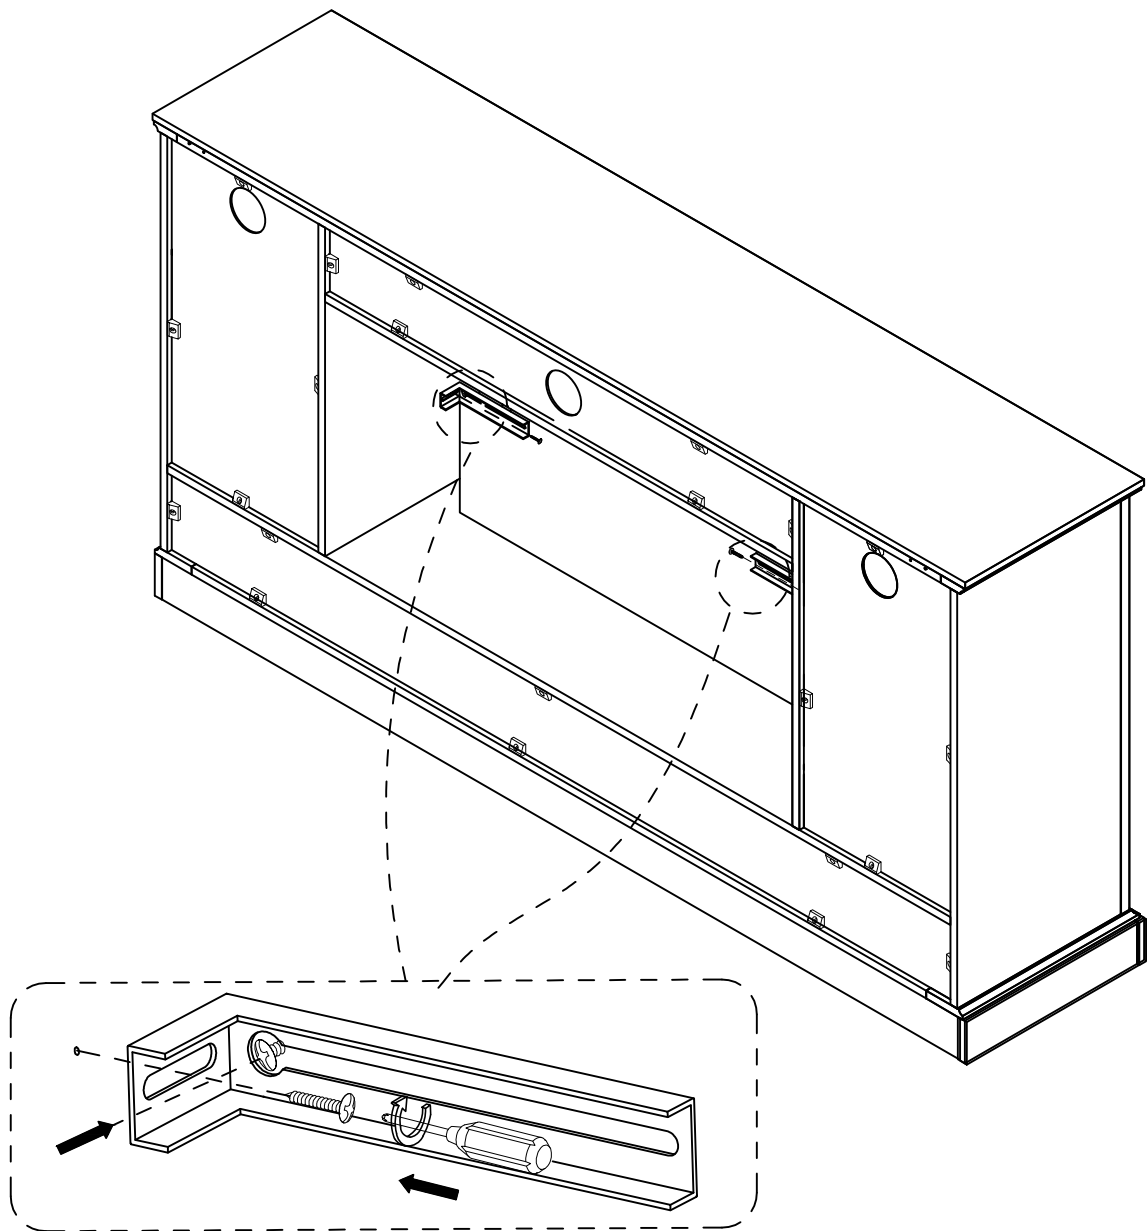






The fireplace blocking parts are in the B packing box, please refer to the fireplace installation instructions for installation steps

## Step 47

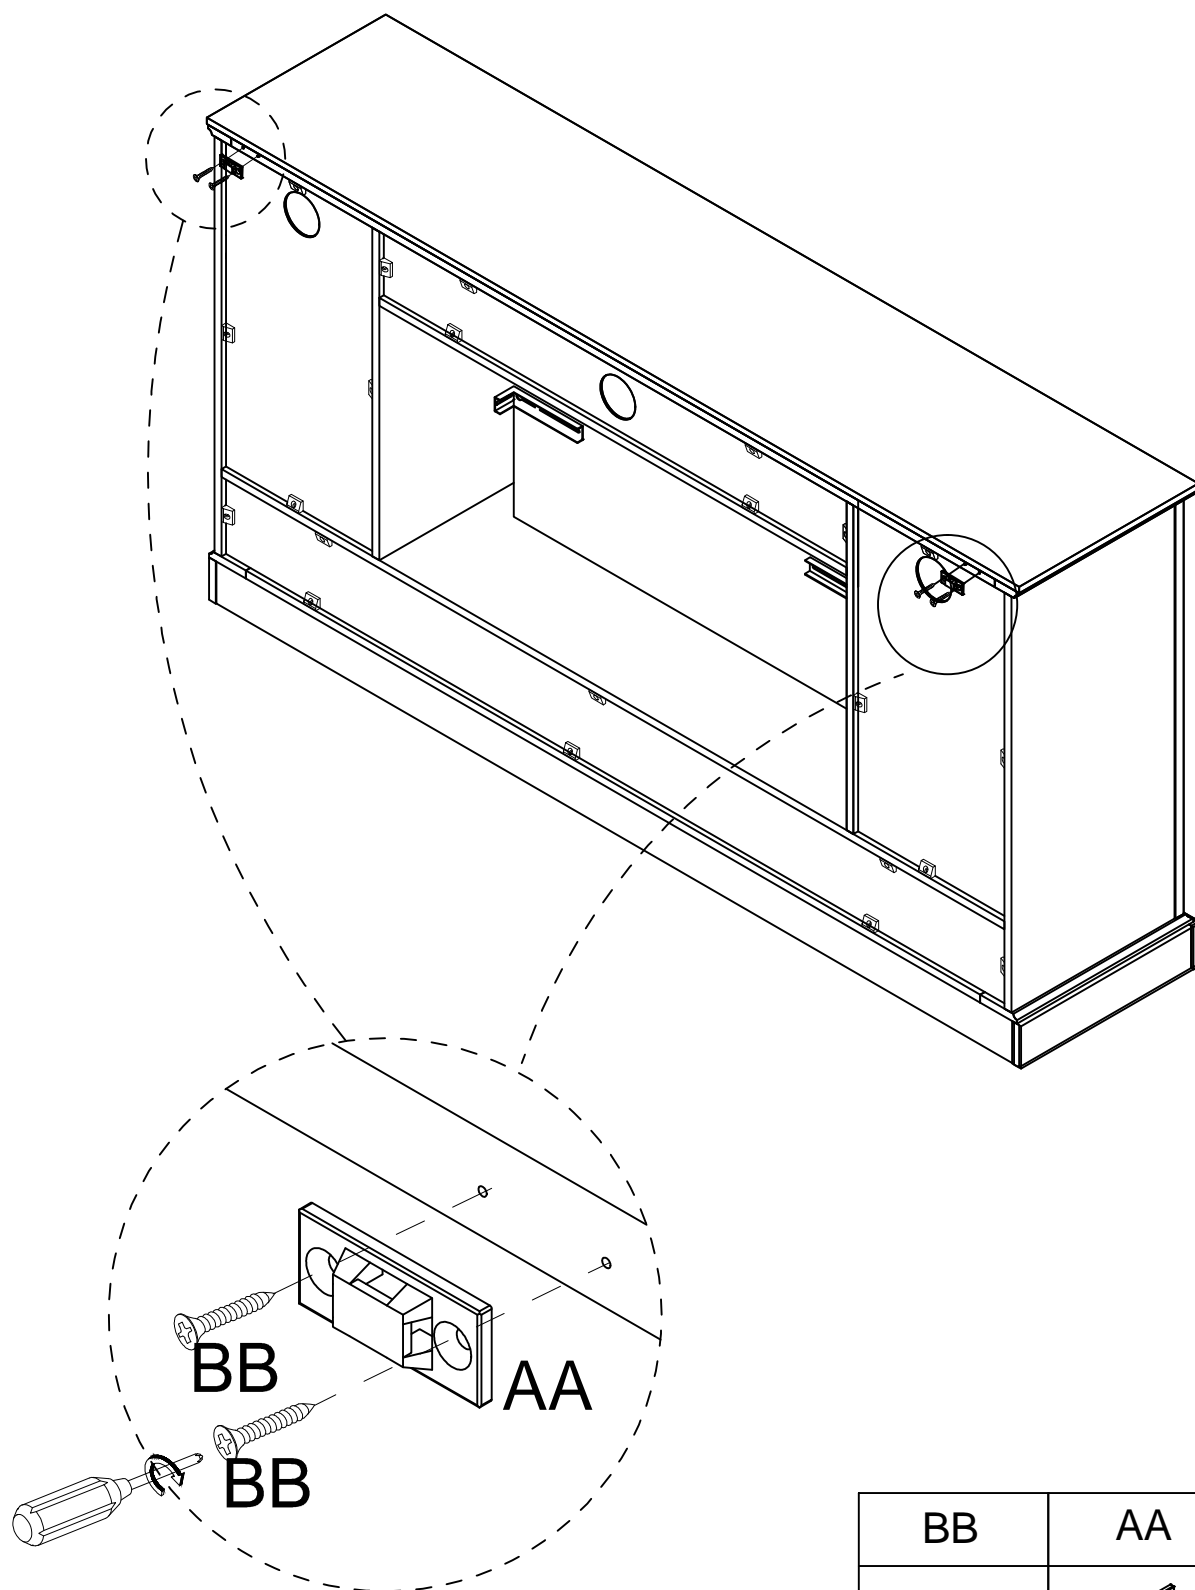

BB	AA
	
X4	X2


## Step 48

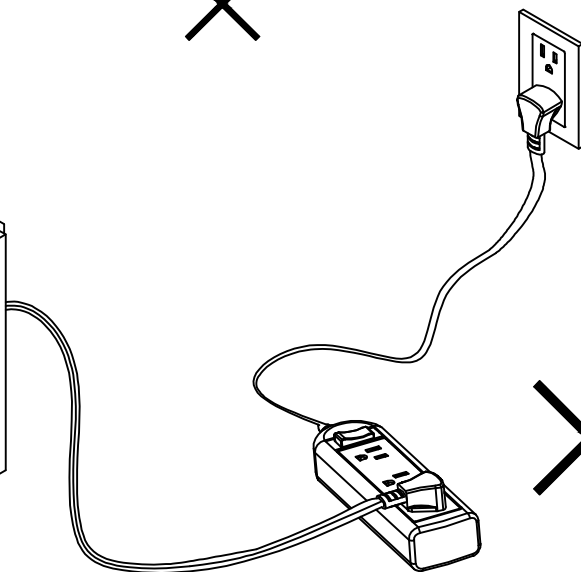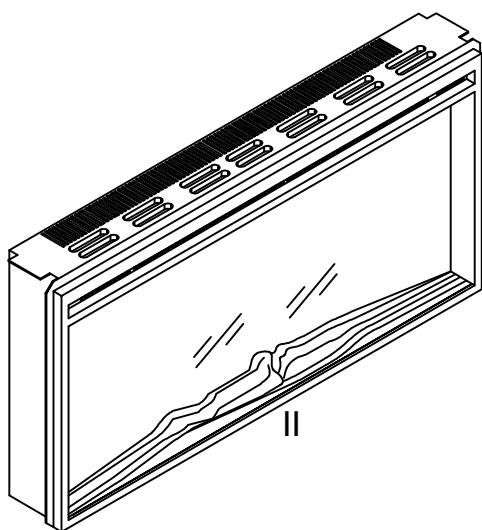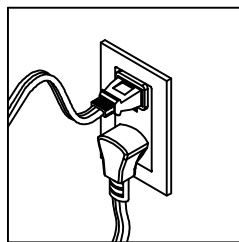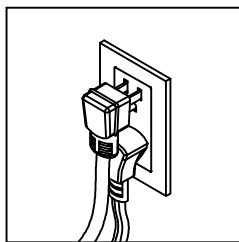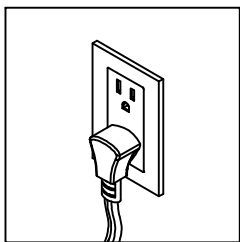

## Step 49


# Wall

Make four holes 45mm deep

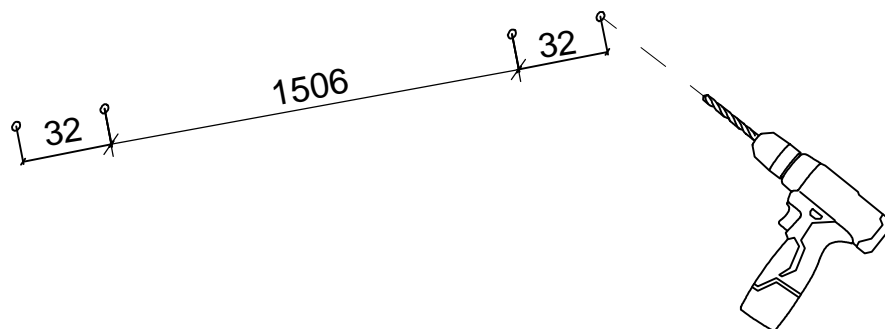

## Step 50

Wall

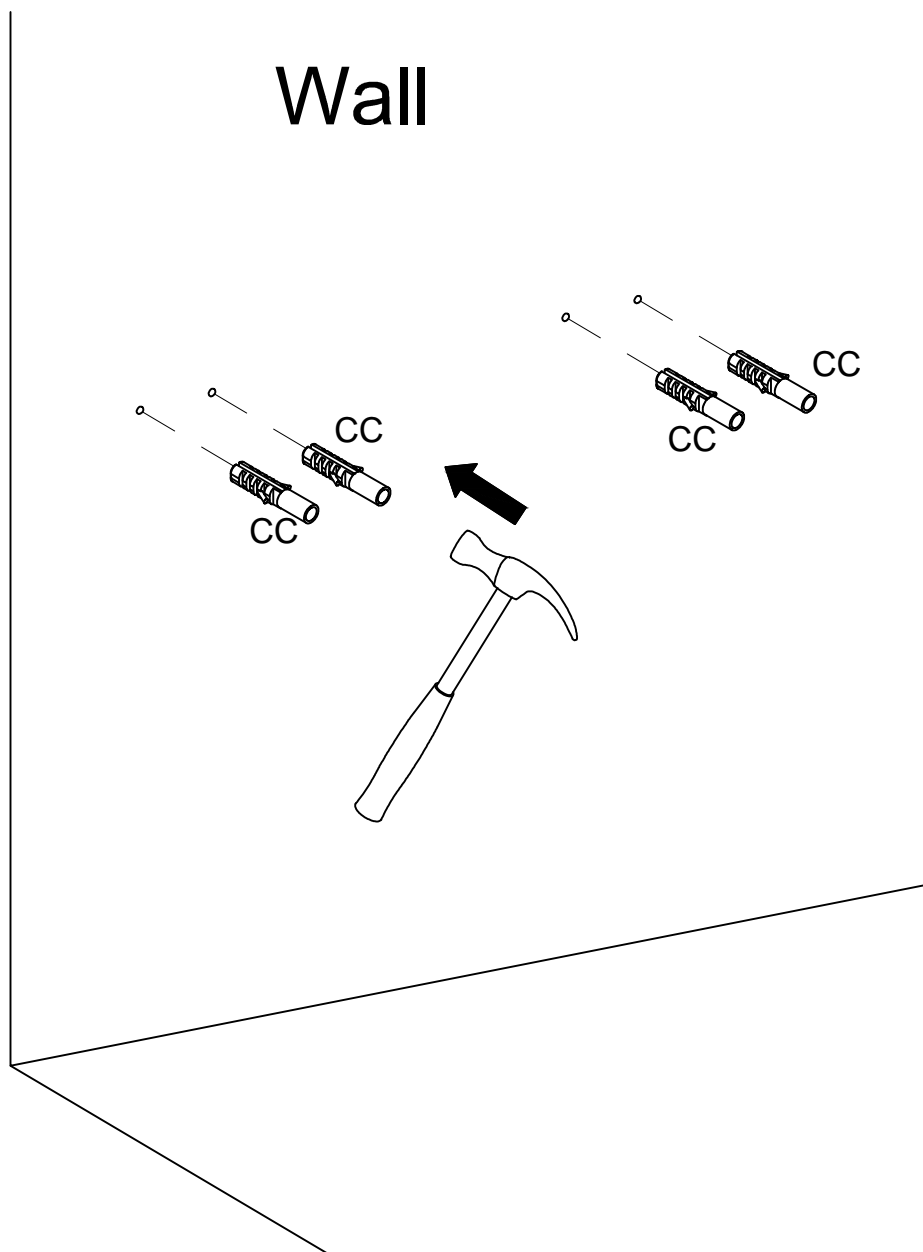


CC





X4

Step 51

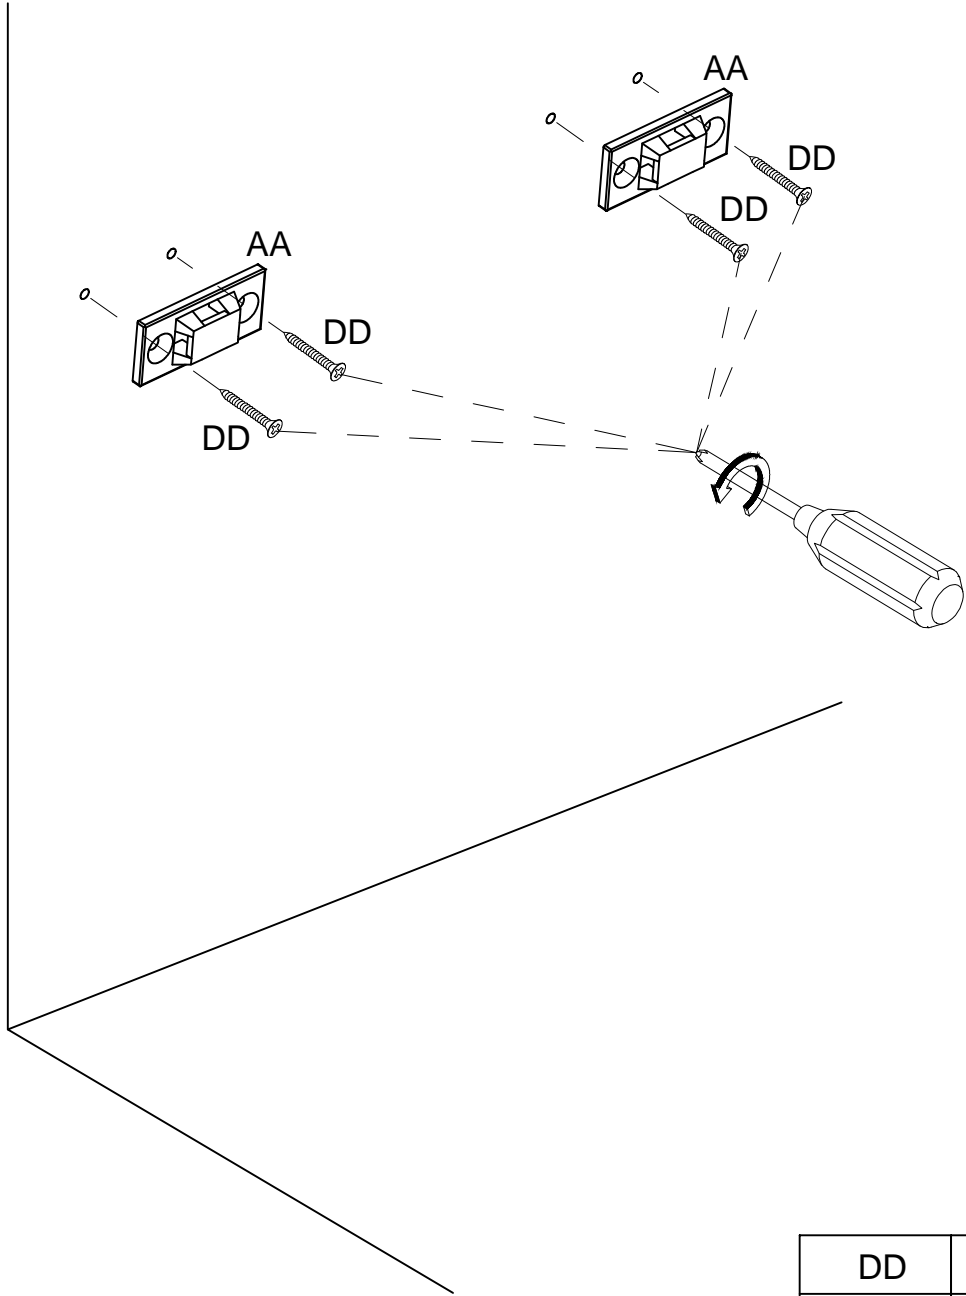
Wall




DD	AA
	
X4	X2



## Step 52

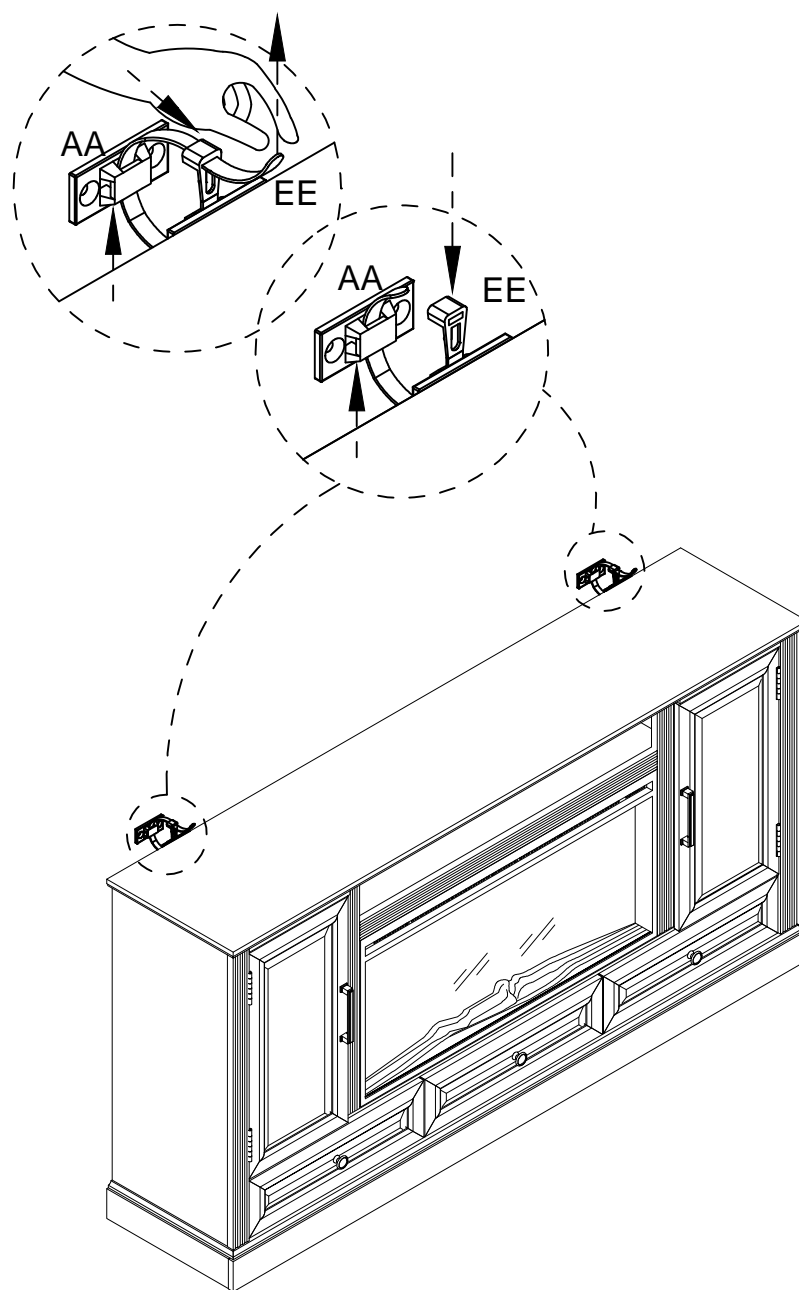

EE

X2

## Step 53

ASSEMBLY COMPLETED

