


Item # : LM081-70FP

Assembly Instructions

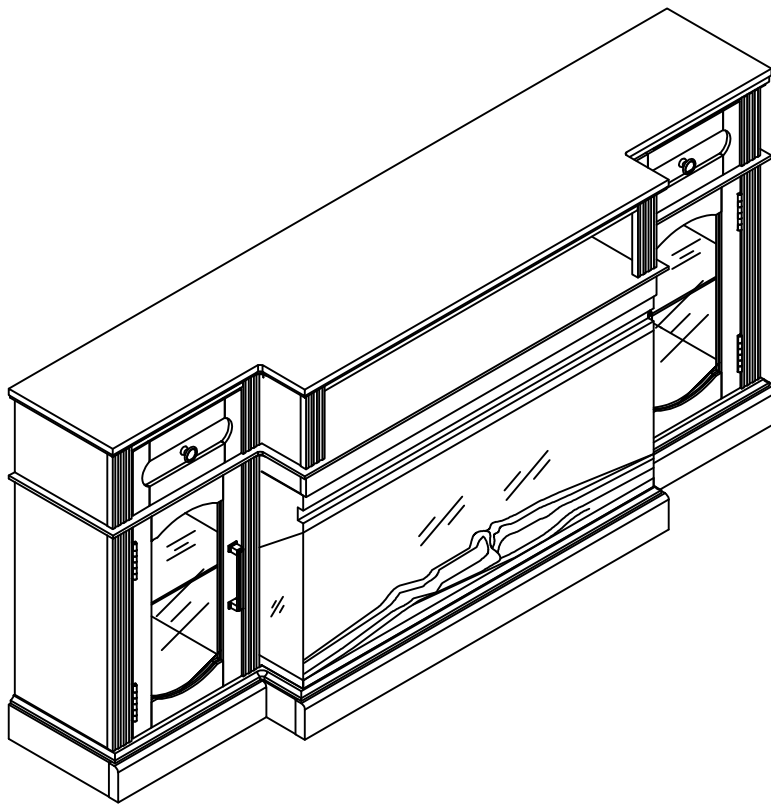


If you have any questions, please follow these steps
(“Find Your Orders” – “Problem with the Order” –
“Contact Seller”) to contact our customer service. Thanks!

NOTE: There are two packages A and B for this item. Please
wait patiently if you only receive one for now


Revised 26/07/2024

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

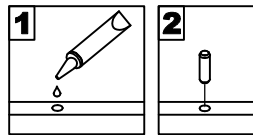


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

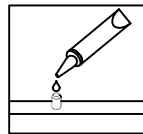


- VI. A Phillips head screwdriver is required for the assembly of this product .

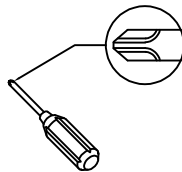



- VII. Power tools should not be used to assemble this product .

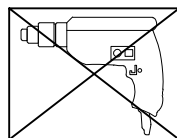


Parts List

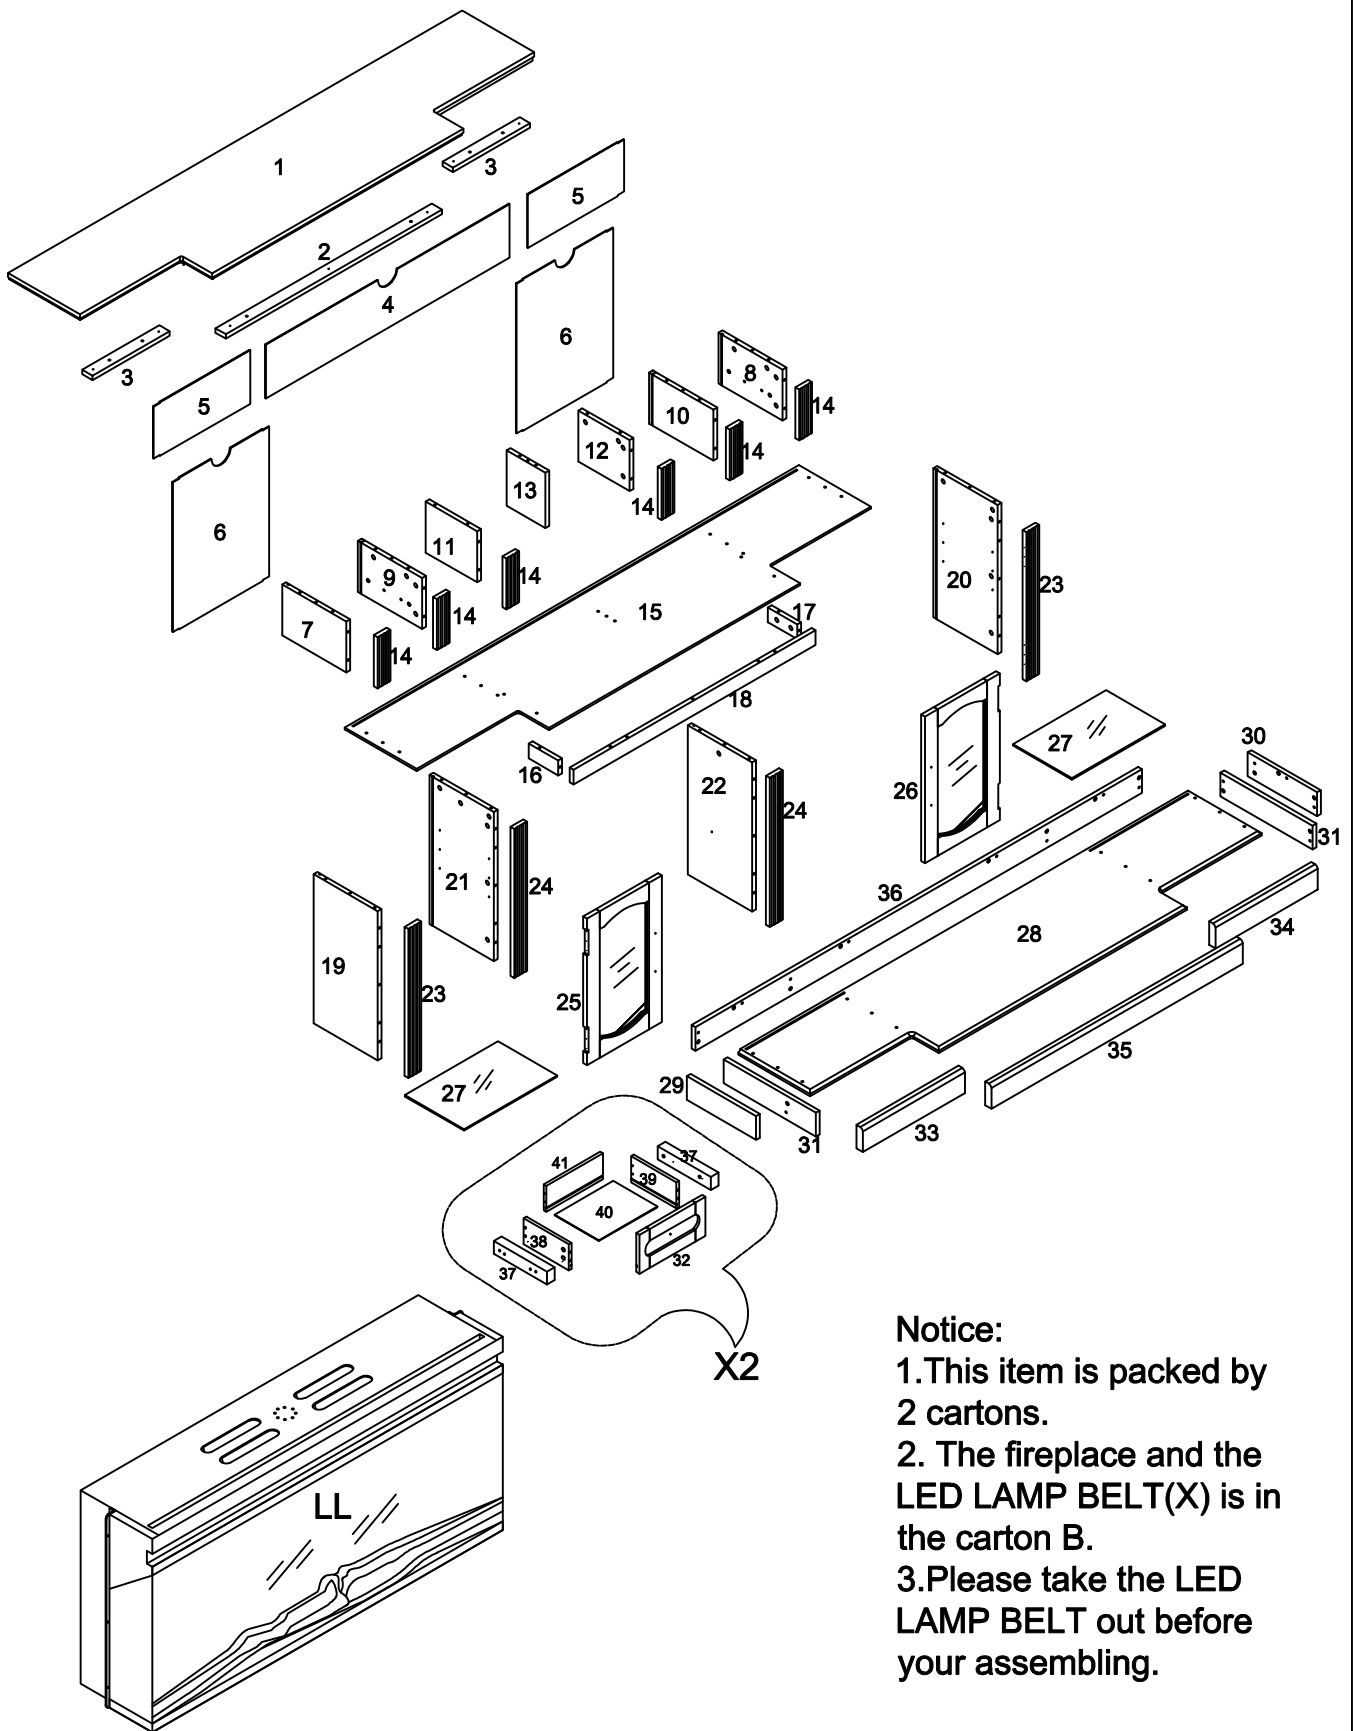

Hardware List


A		Ø8x30mm	Wooden dowel	36 pcs
AA		Ø8x20mm	Wooden dowel	6 pcs
B		Ø6x32mm	Cam bolt	61 pcs
C		Ø15x11mm	Cam lock	53 pcs
CC		Ø15x9mm	Cam lock	8 pcs
D		Ø30mm	Sticker	61 pcs
E		Ø6x50mm	Screw	22 pcs
F		M 4	Hex Key	1 pc
G		M6*12mm	Bolt	40 pcs
H			Plastic wedge	20 pcs
I			Handle	2 pcs
J		Ø4x19mm	Bolt	4 pcs
K		M6*35mm	Bolt	8 pcs
L		8"	Drawer slides	2 sets
M		Ø3x12mm	Screw	24 pcs
N		Ø4x32mm	Screw	8 pcs

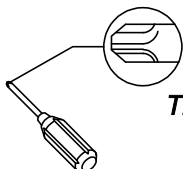


**Philips head screwdriver required for assembly
(not included)**

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Hardware List


O			Door stopper	2 pcs
P		Ø3x15mm	Screw	4 pcs
Q			Screw	2 pcs
R			Knob	2 pcs
S		Ø4x9mm	Bolt	2 pcs
T			Hinge	4 pcs
U		Ø3.5x15mm	Screw	8 pcs
V		Ø3.5x19mm	Screw	24 pcs
W		Ø6x13x26mm	Shelf holder	8 pcs
X		In carton B	LED lamp belt	2 pcs
Y			Plastic wedge	14 pcs
Z		Ø3x17mm	Screw	14 pcs
BB			Anti-inversion piece	4 pcs
DD		Ø4x15mm	Screw	4 pcs
EE		Ø4x35mm	Screw	4 pcs
FF			House lizard	4 pcs
GG			Strip	2 pcs
HH		Ø4x25mm	Screw	7 pcs
JJ			Metal snap joint	4 pcs
KK			Glue tube	2 pcs

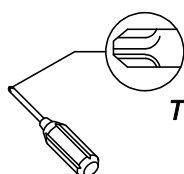

Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*


Step 1

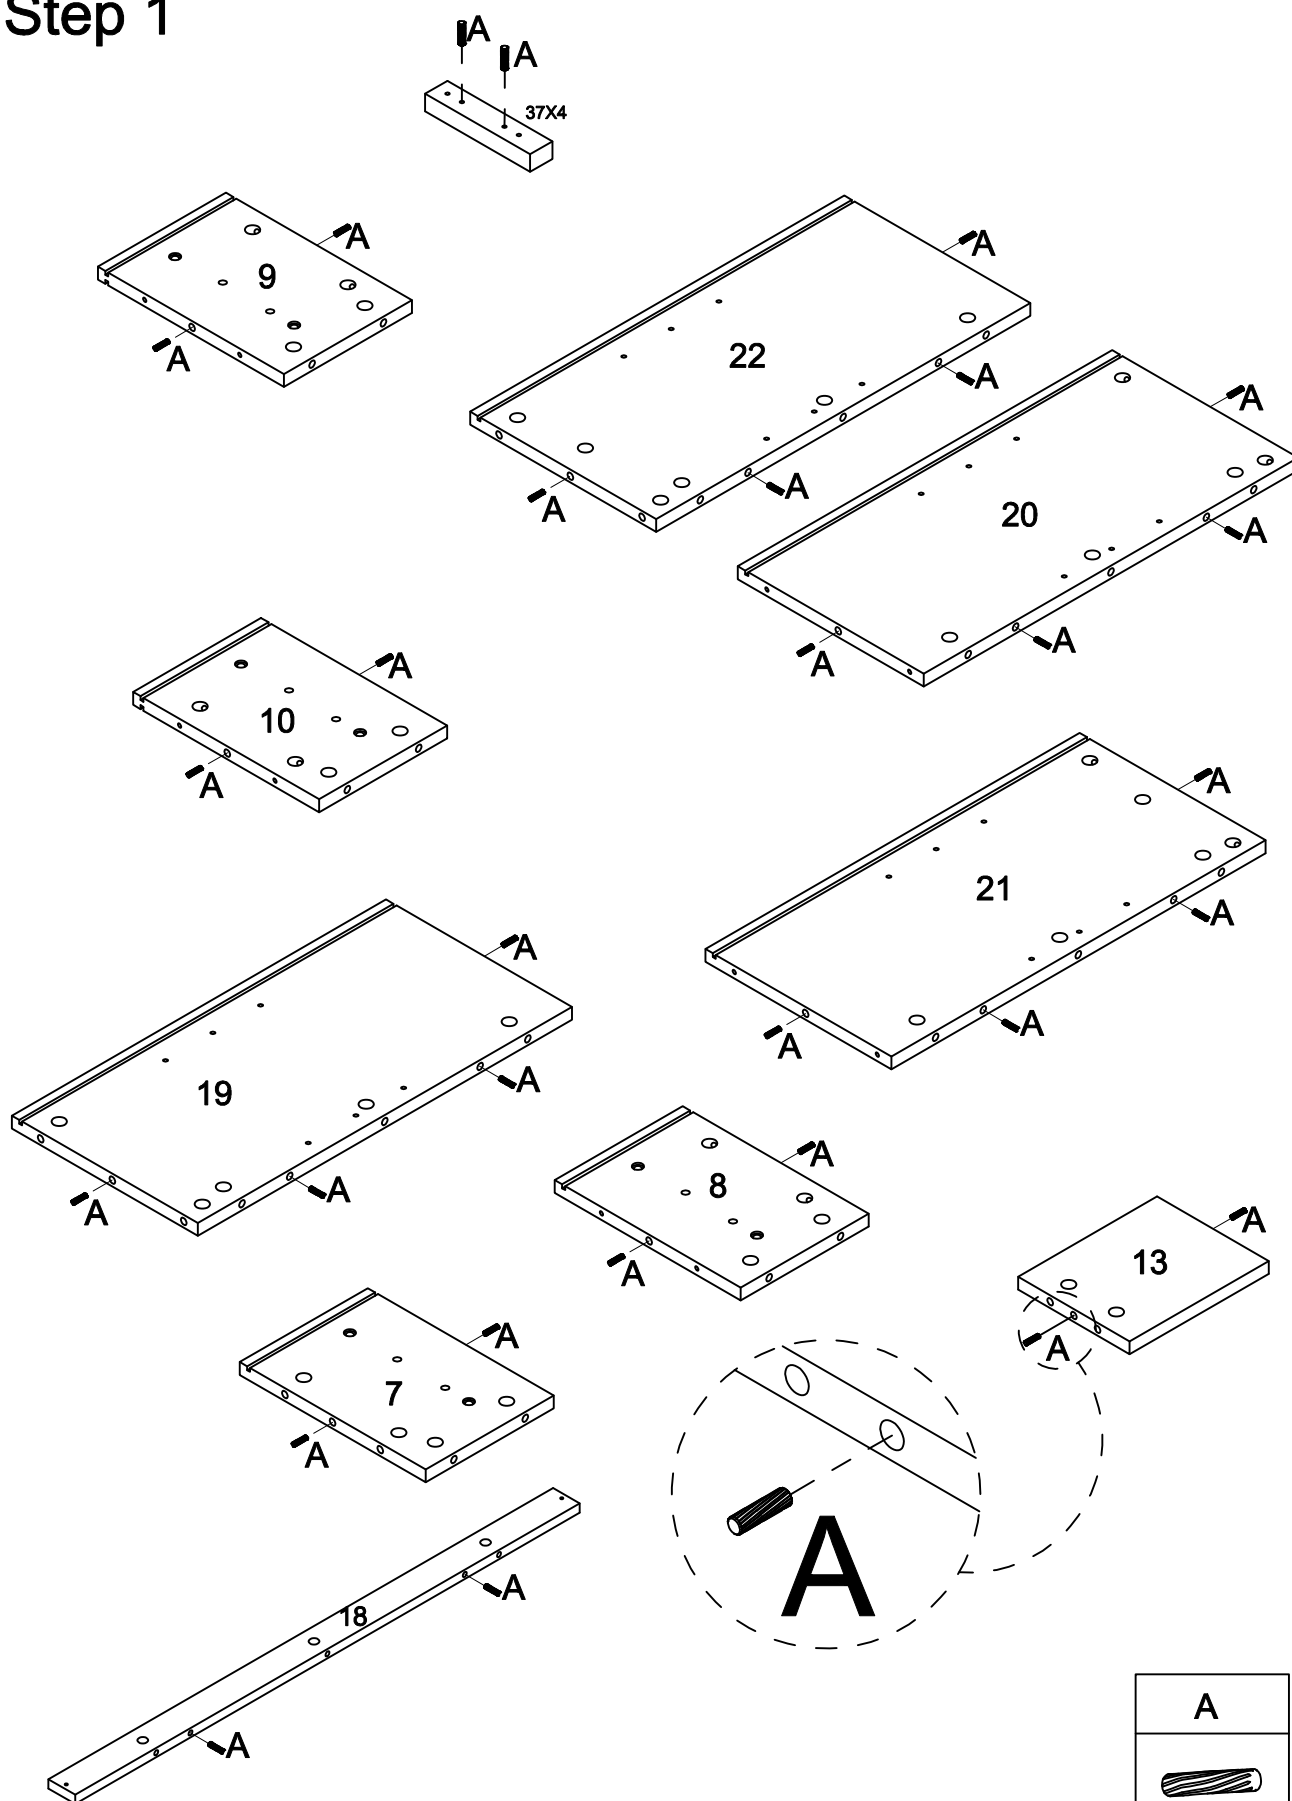

A

X36


Step 2

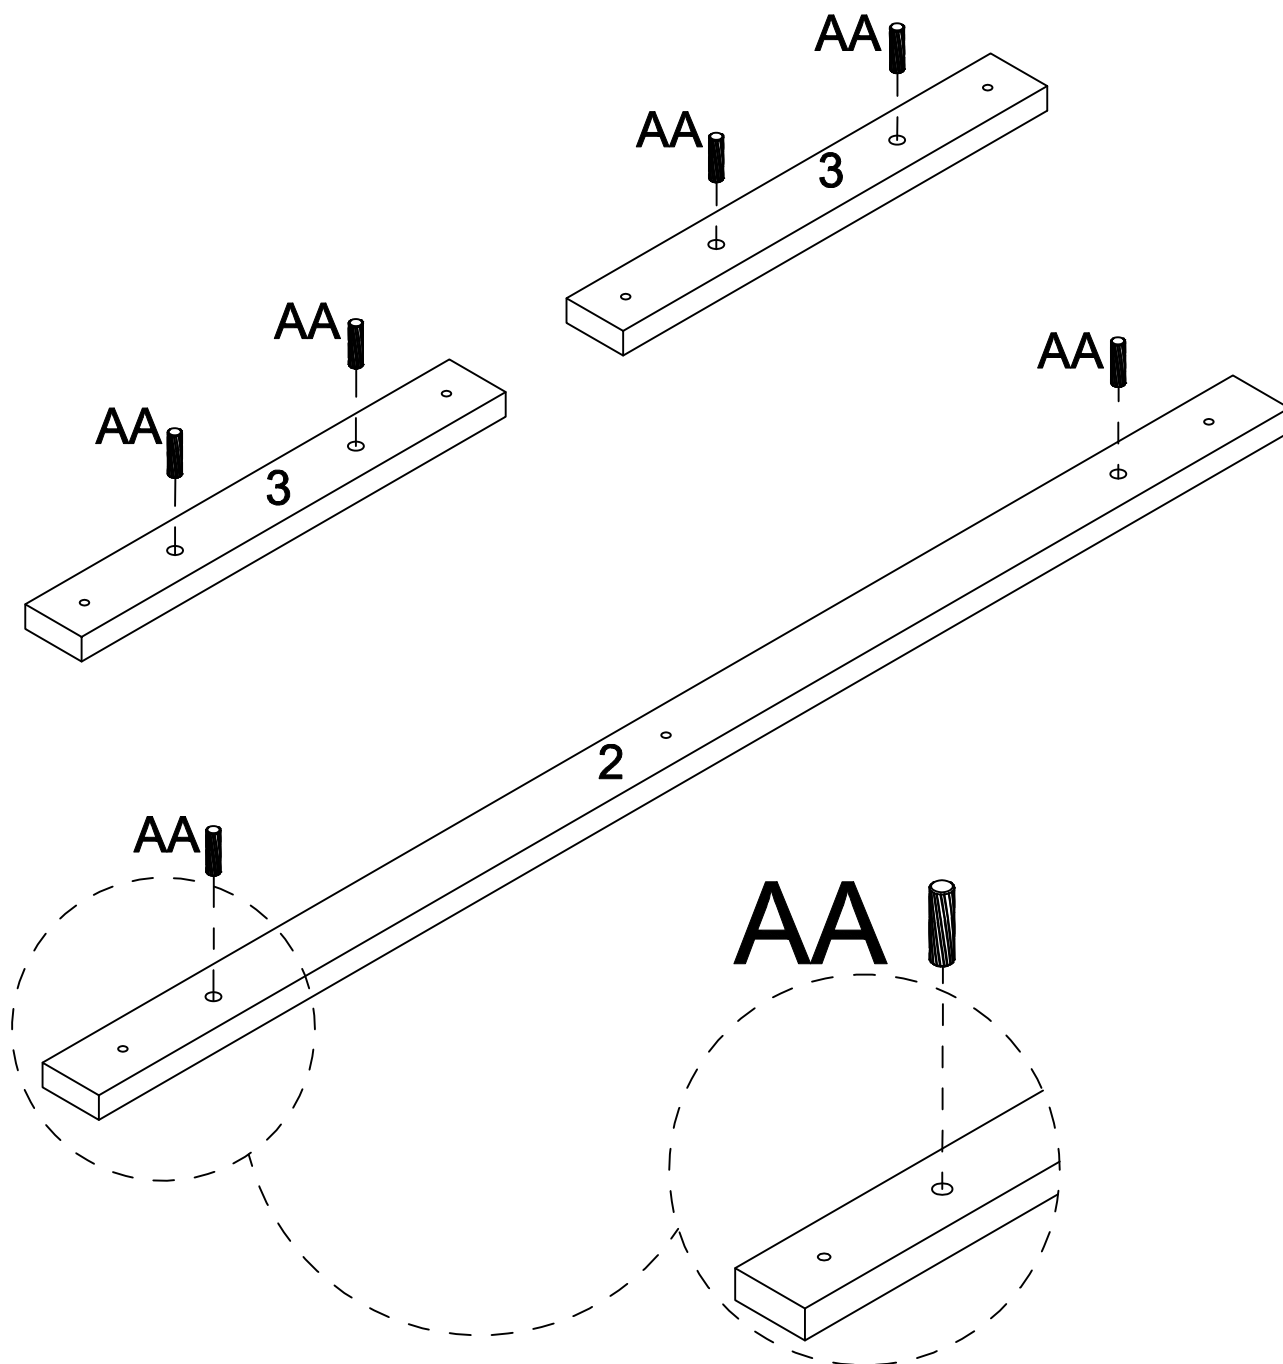

AA

X6


Step 3

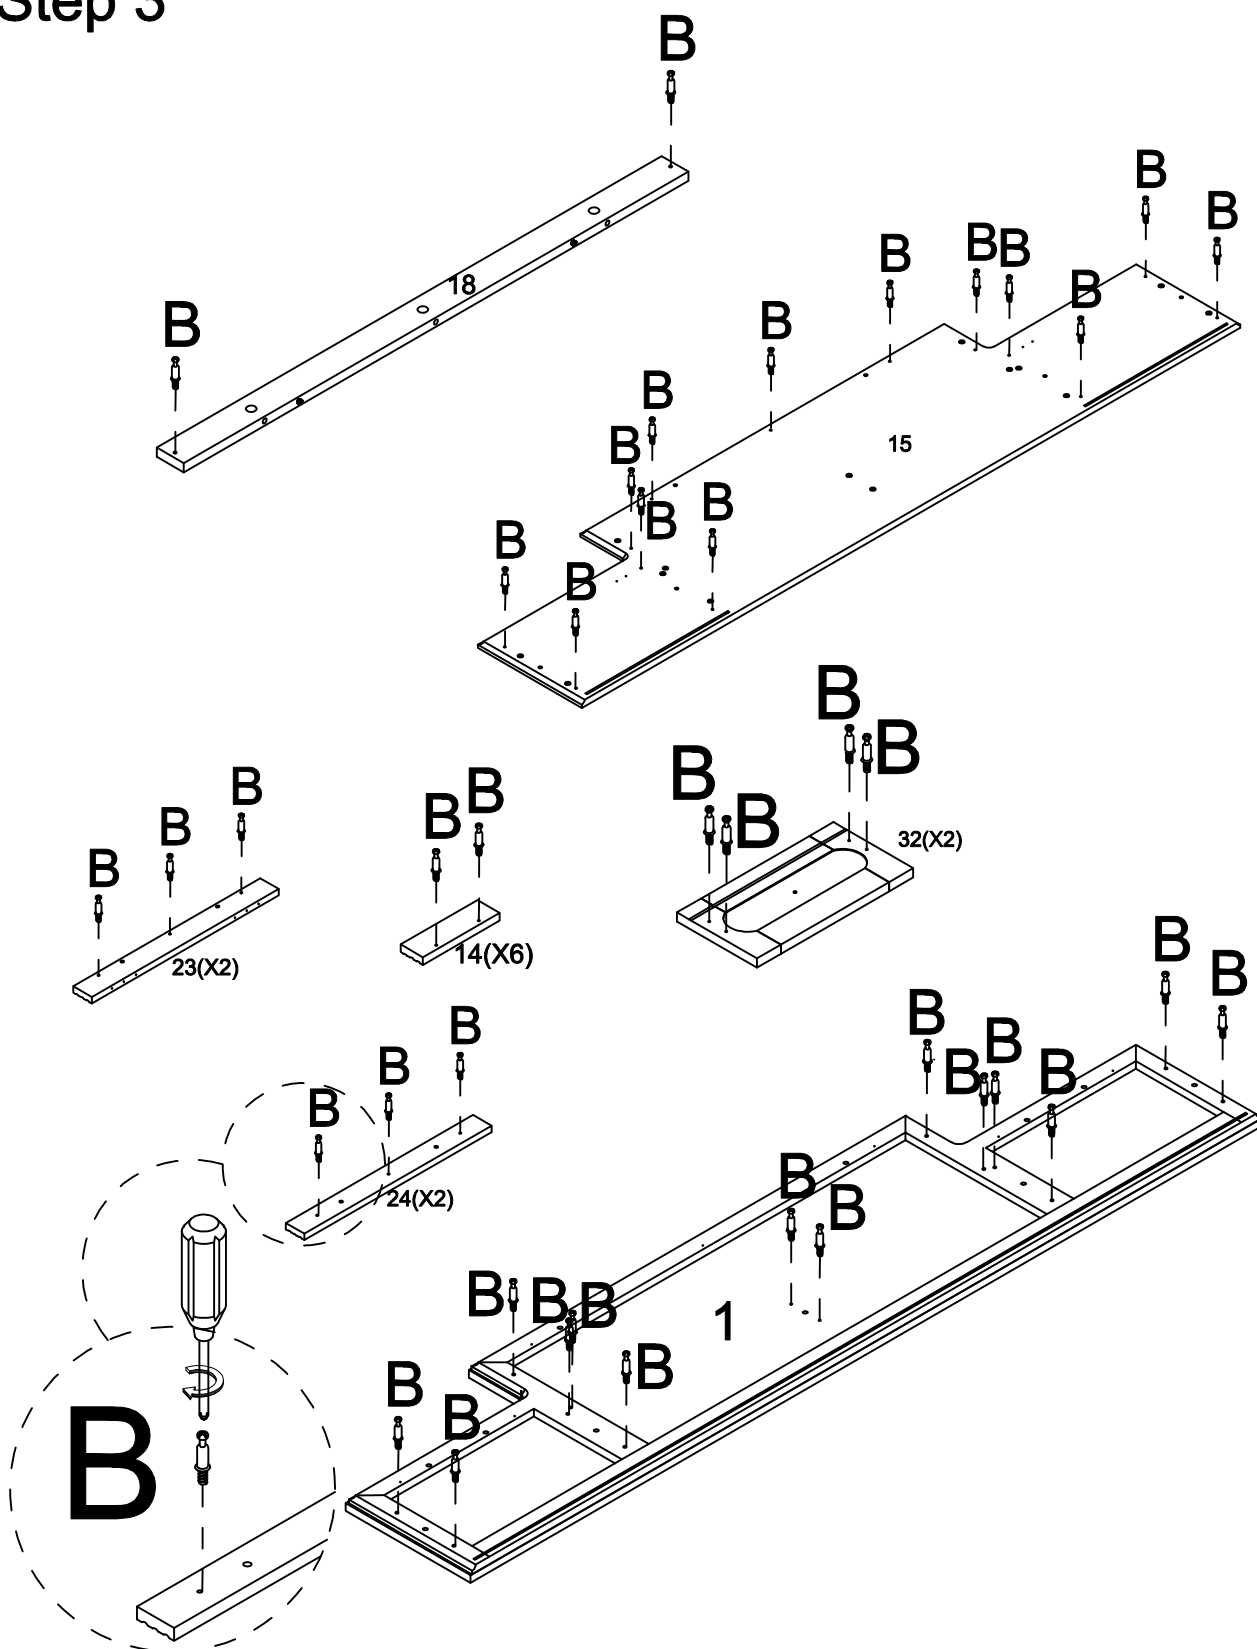

B

X61



Step 4

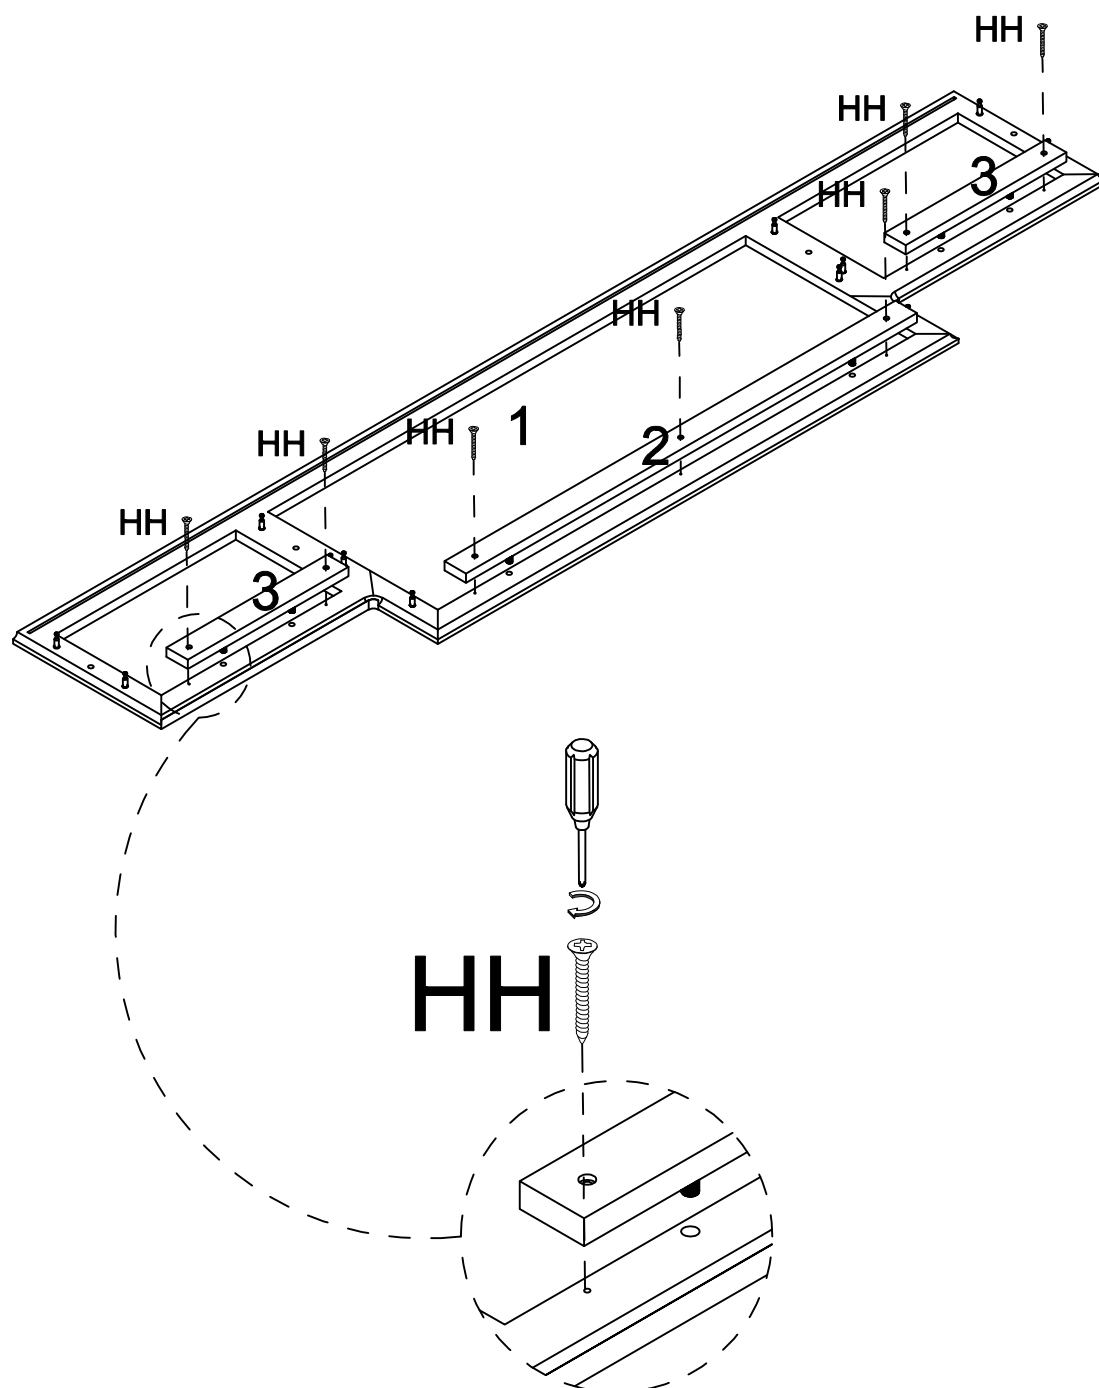

HH

X7


Step 5

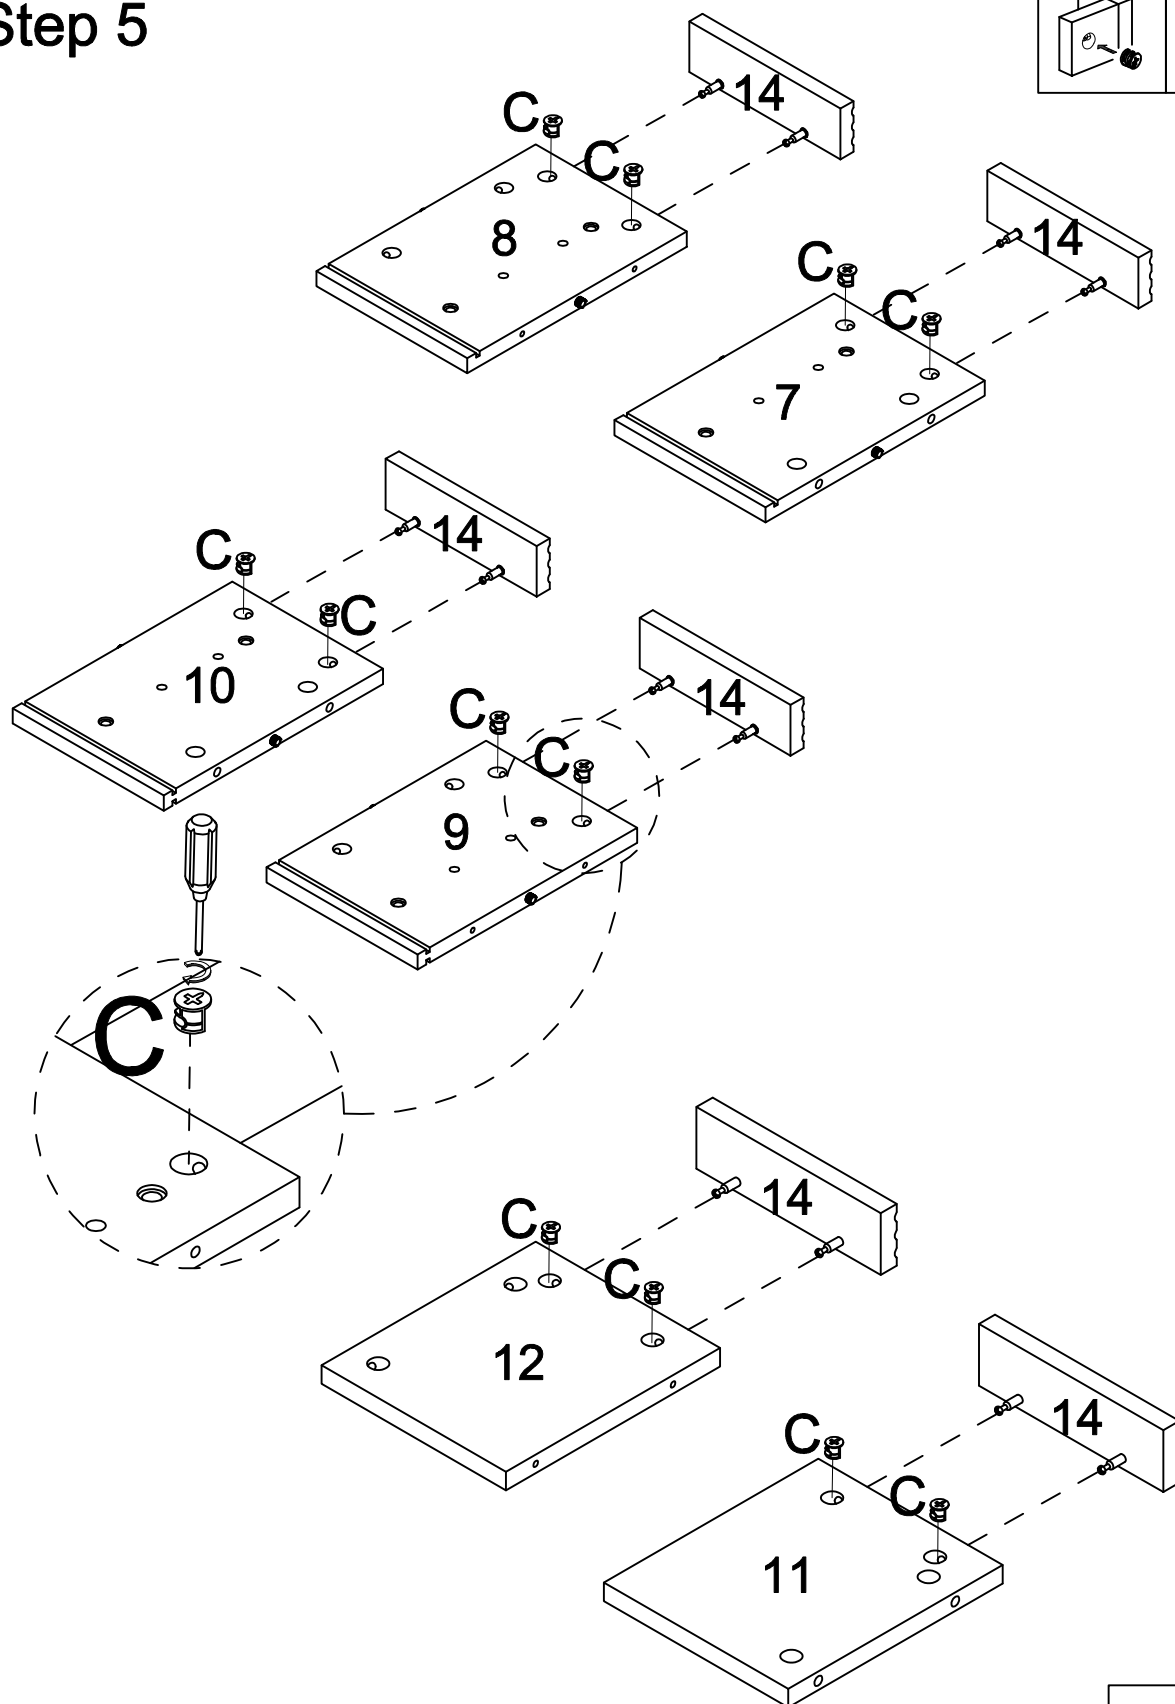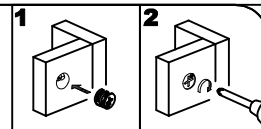


C


X12

Step 6

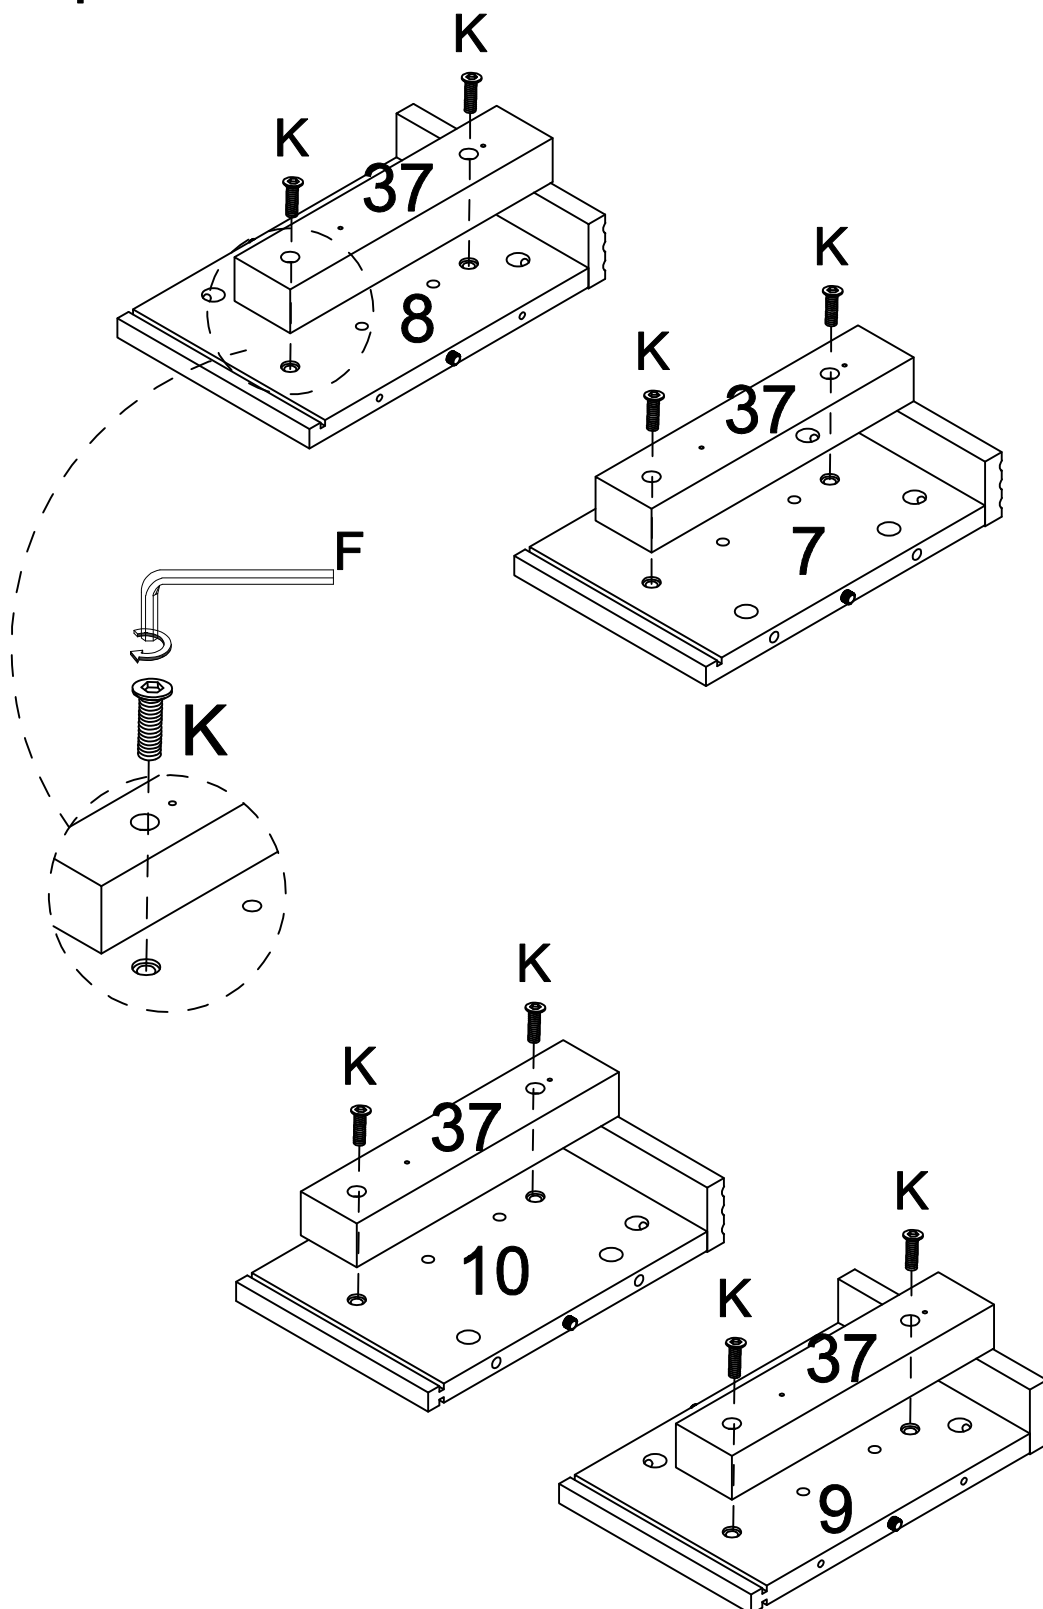

K	F
	
X8	X1


Step 7

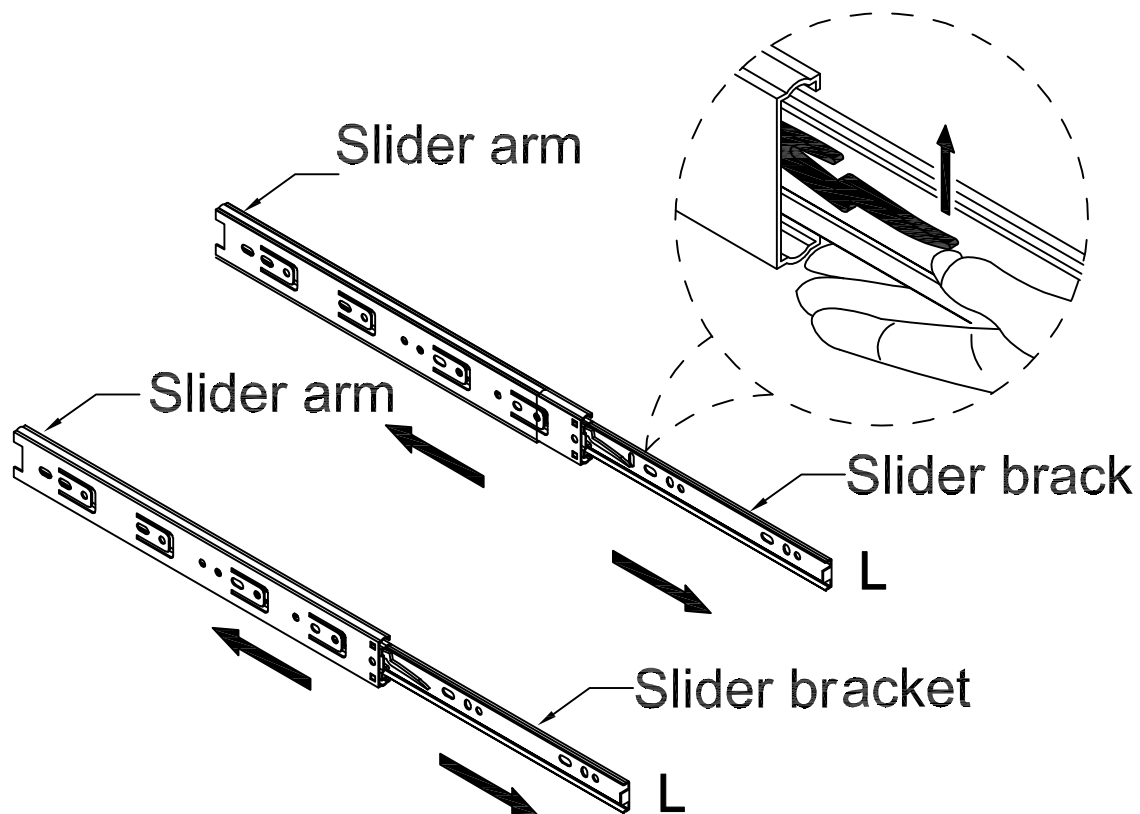

Notice:



1. The drawer slider consists of two parts. The slider arm and the slider bracket. They assembled together in the package.
2. Pull the bracket out until it stopped, then you can find a plastic stopper in the side of the bracket.
3. Lift up the plastic stopper as the picture show, you can pull the bracket all out.

Step 8

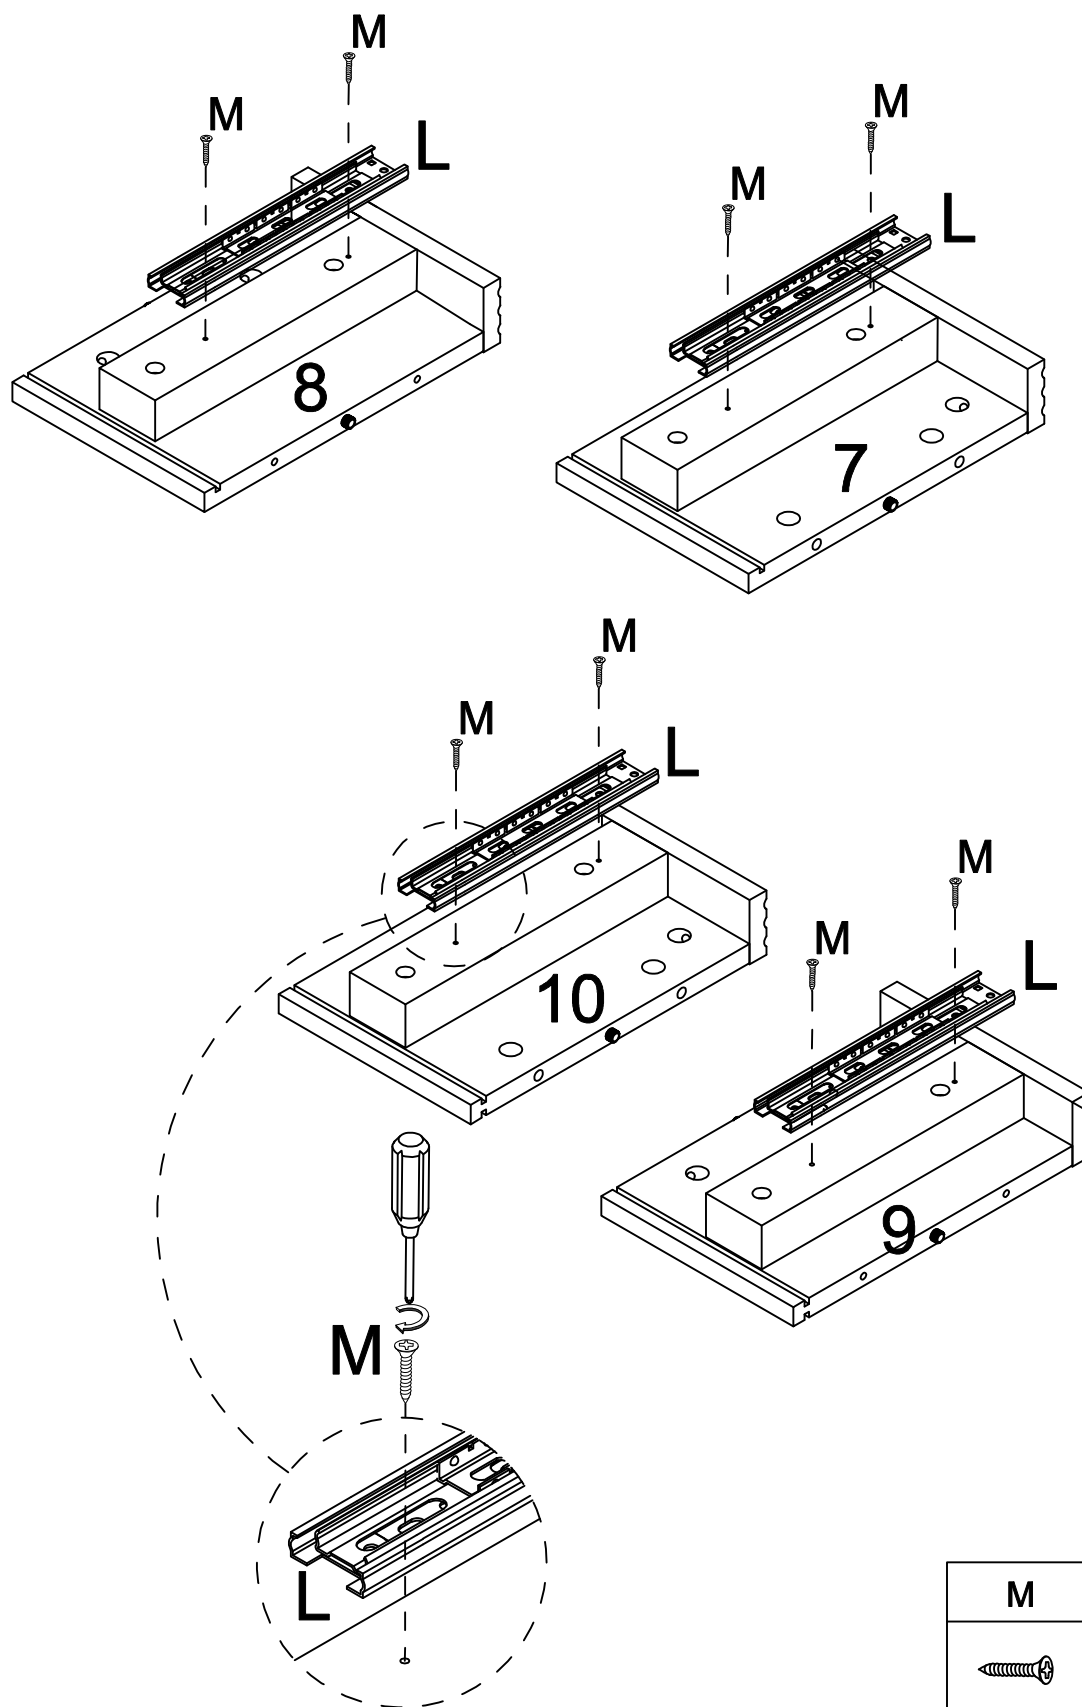

M	L
X8	X4


Step 9

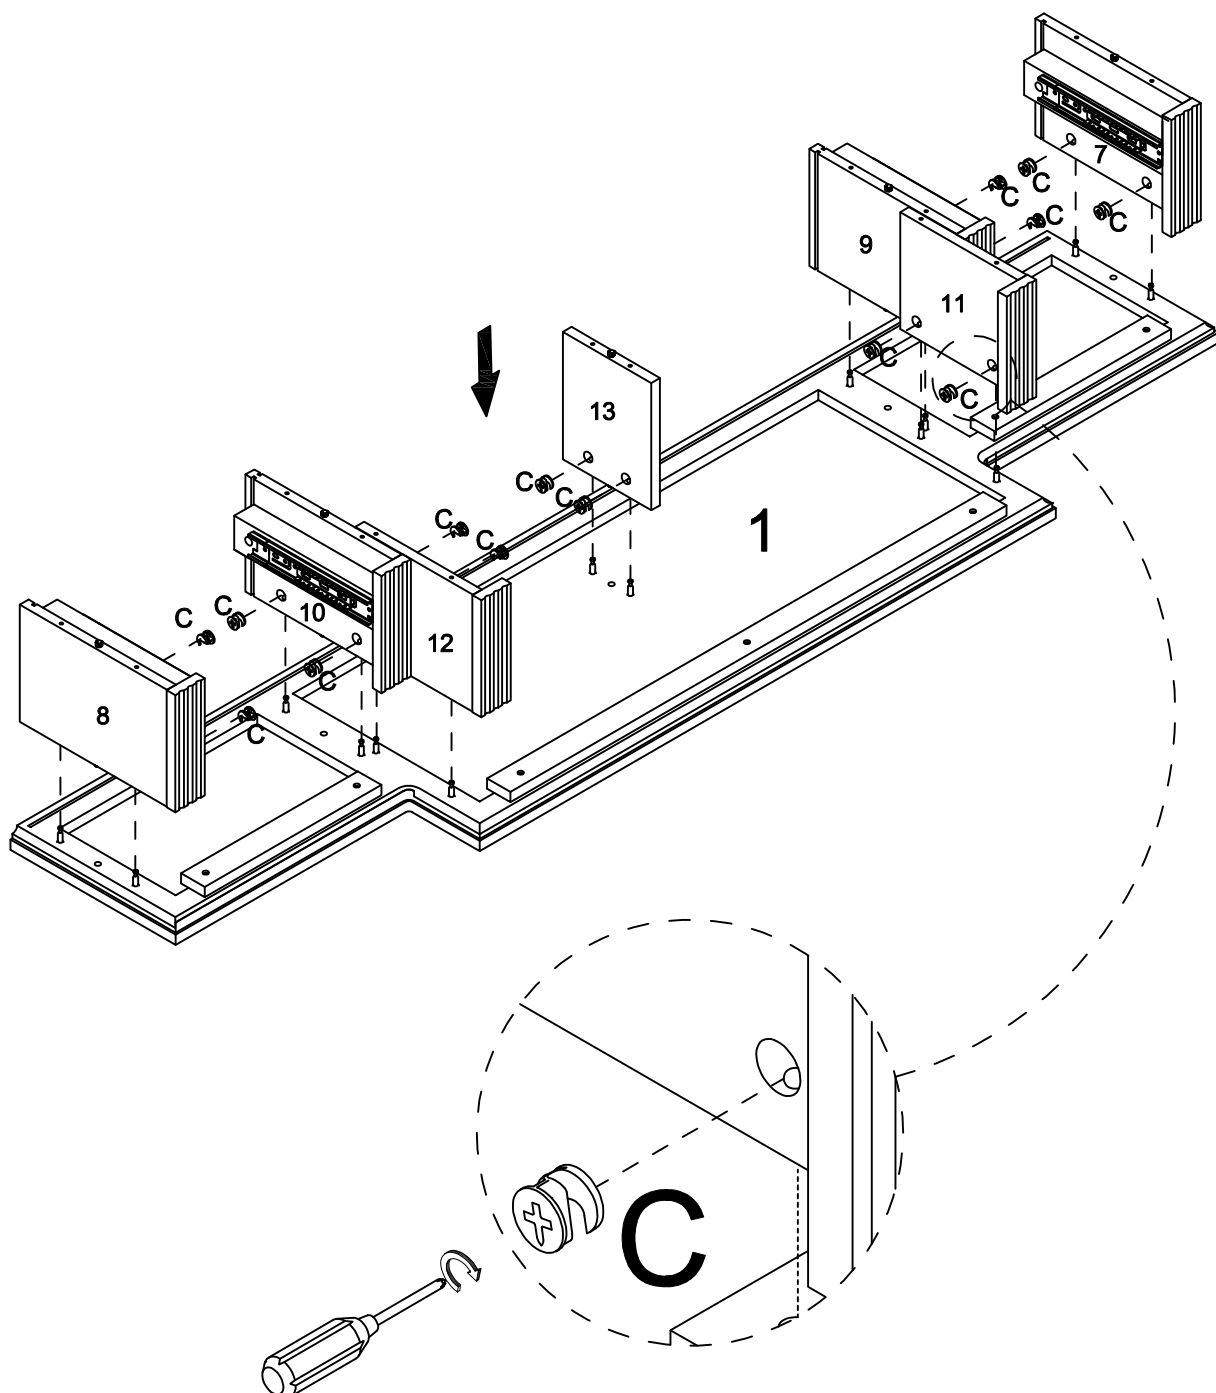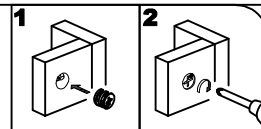


C

X14

Step 10


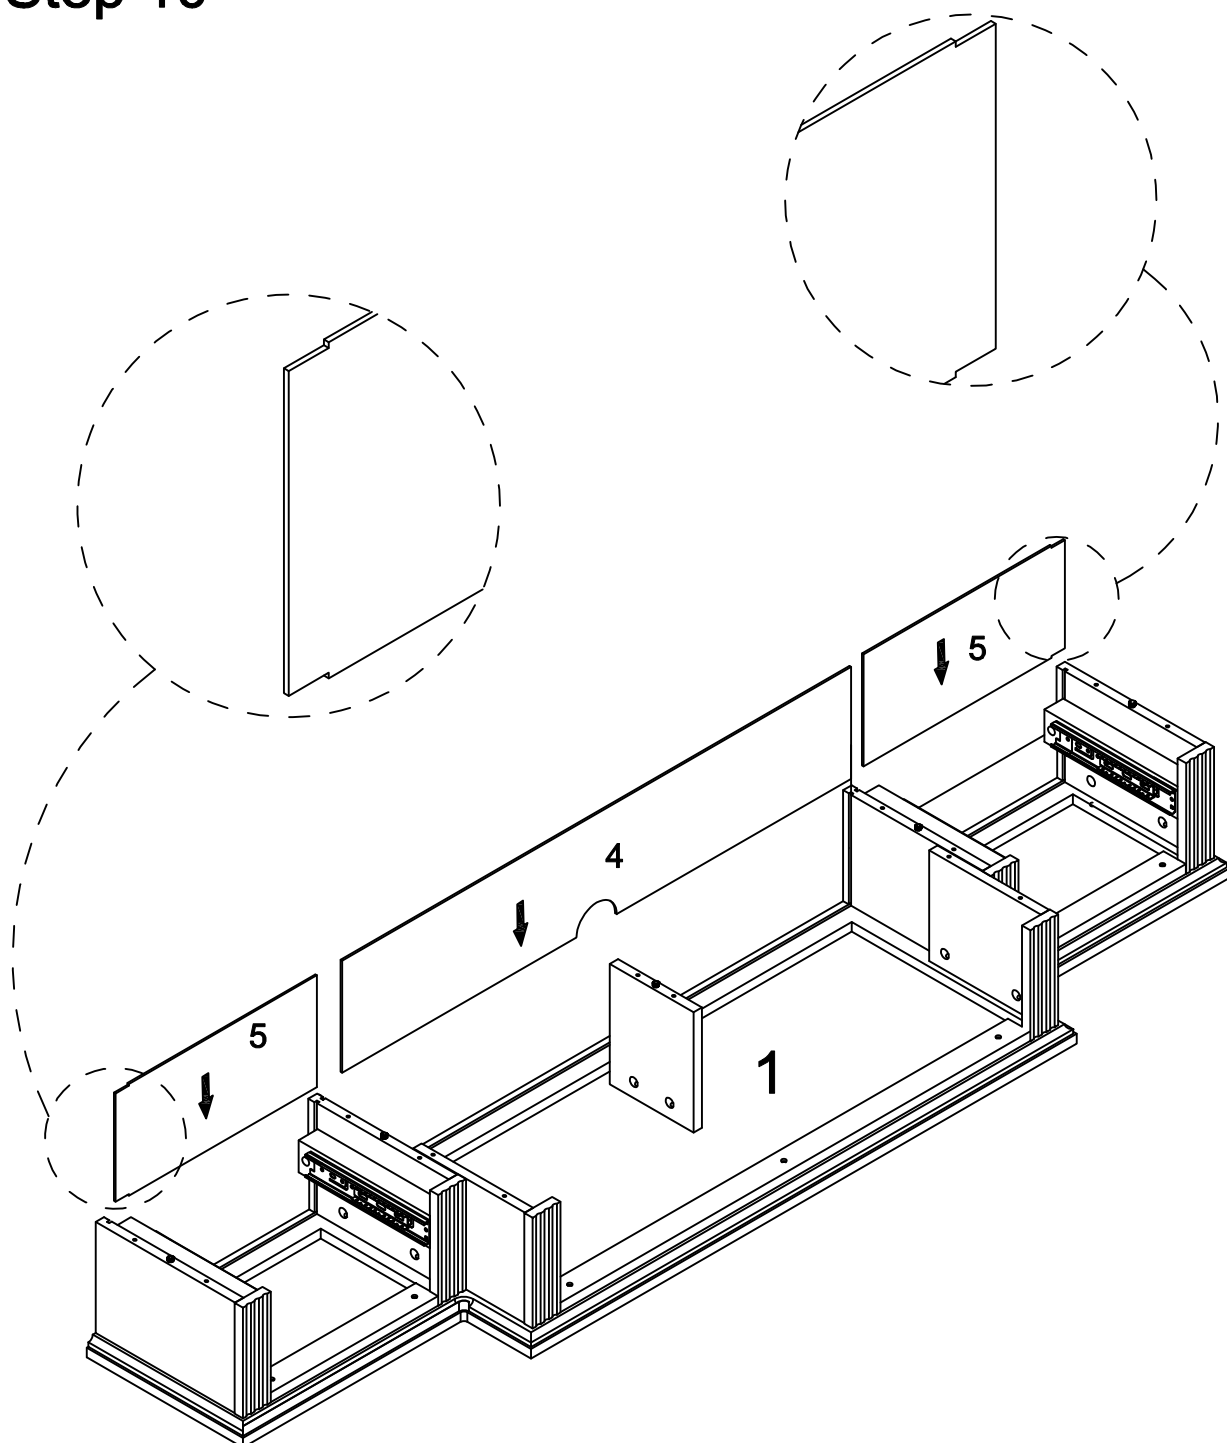


Step 11

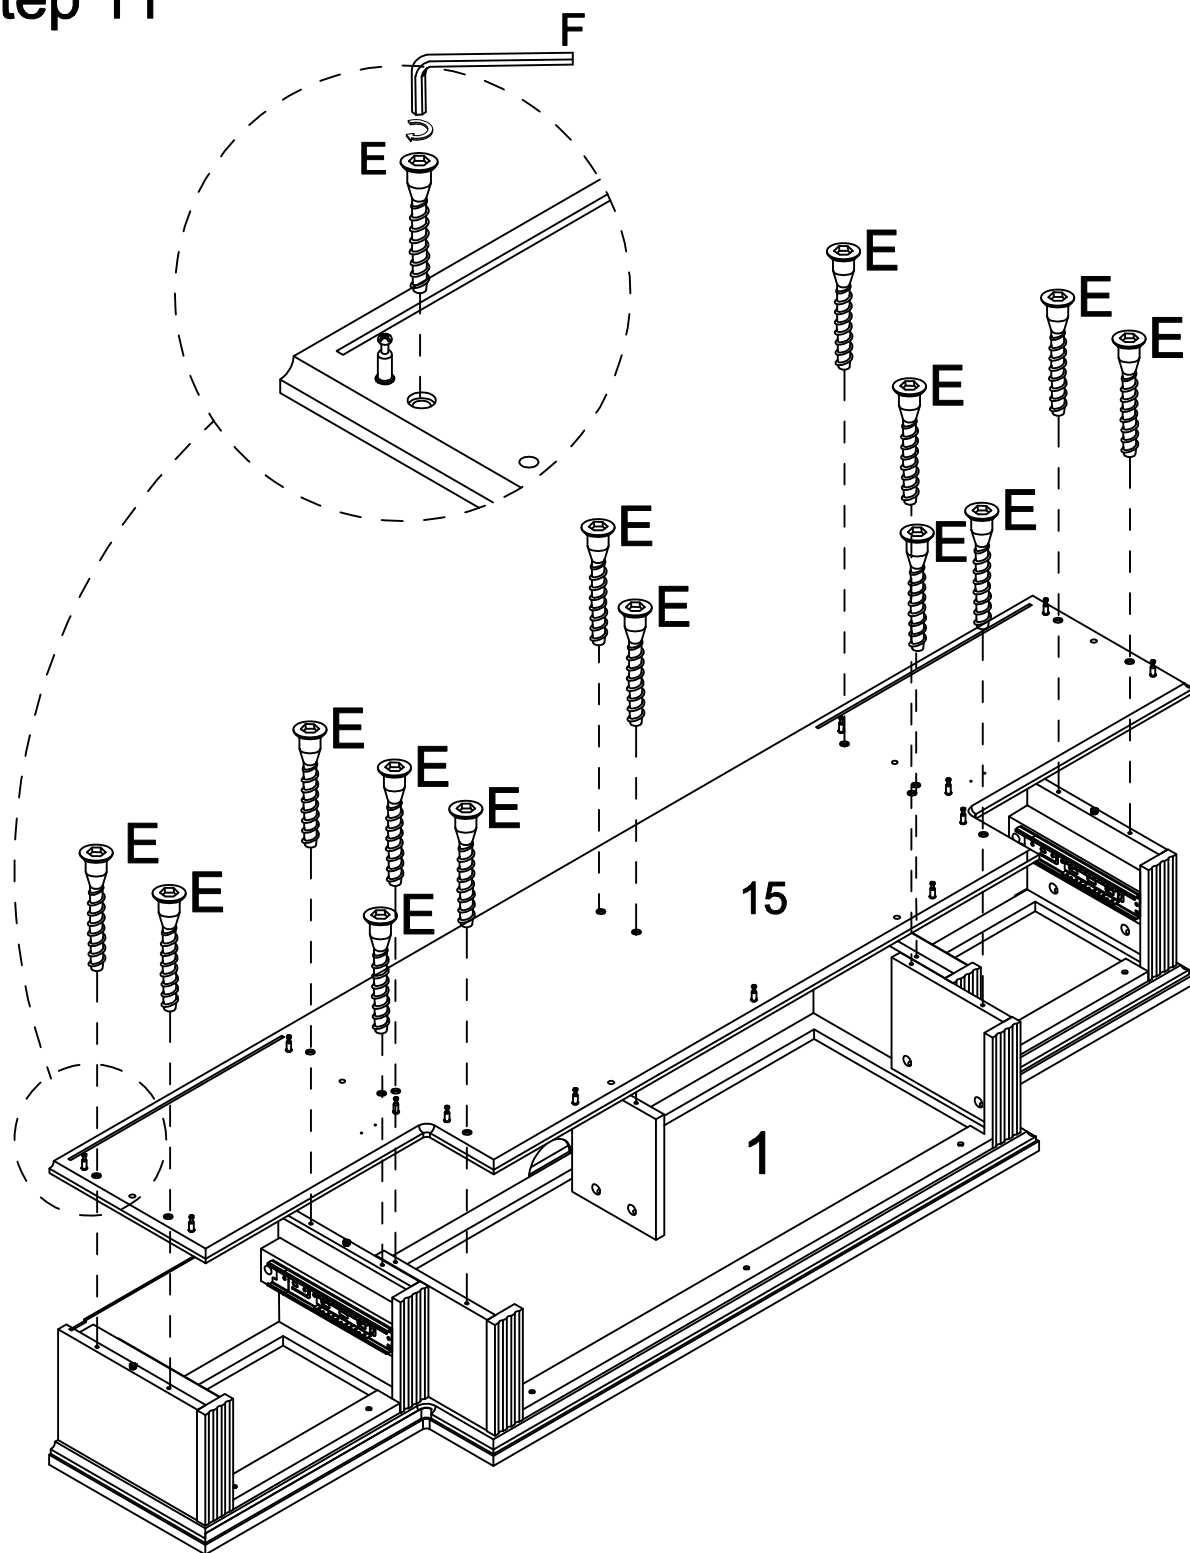

E	F
	
X14	X1



Step 12

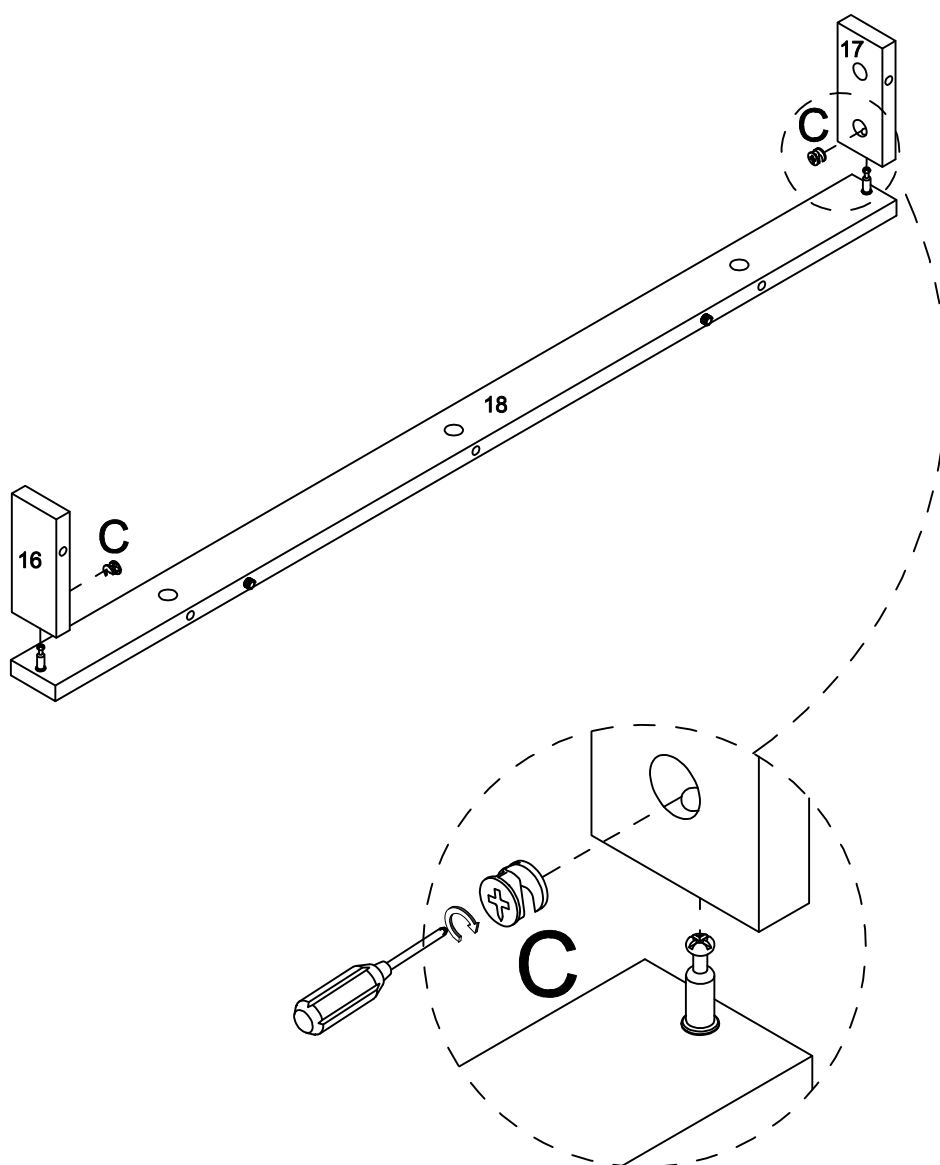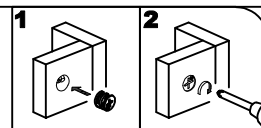

C

X2



Step 13

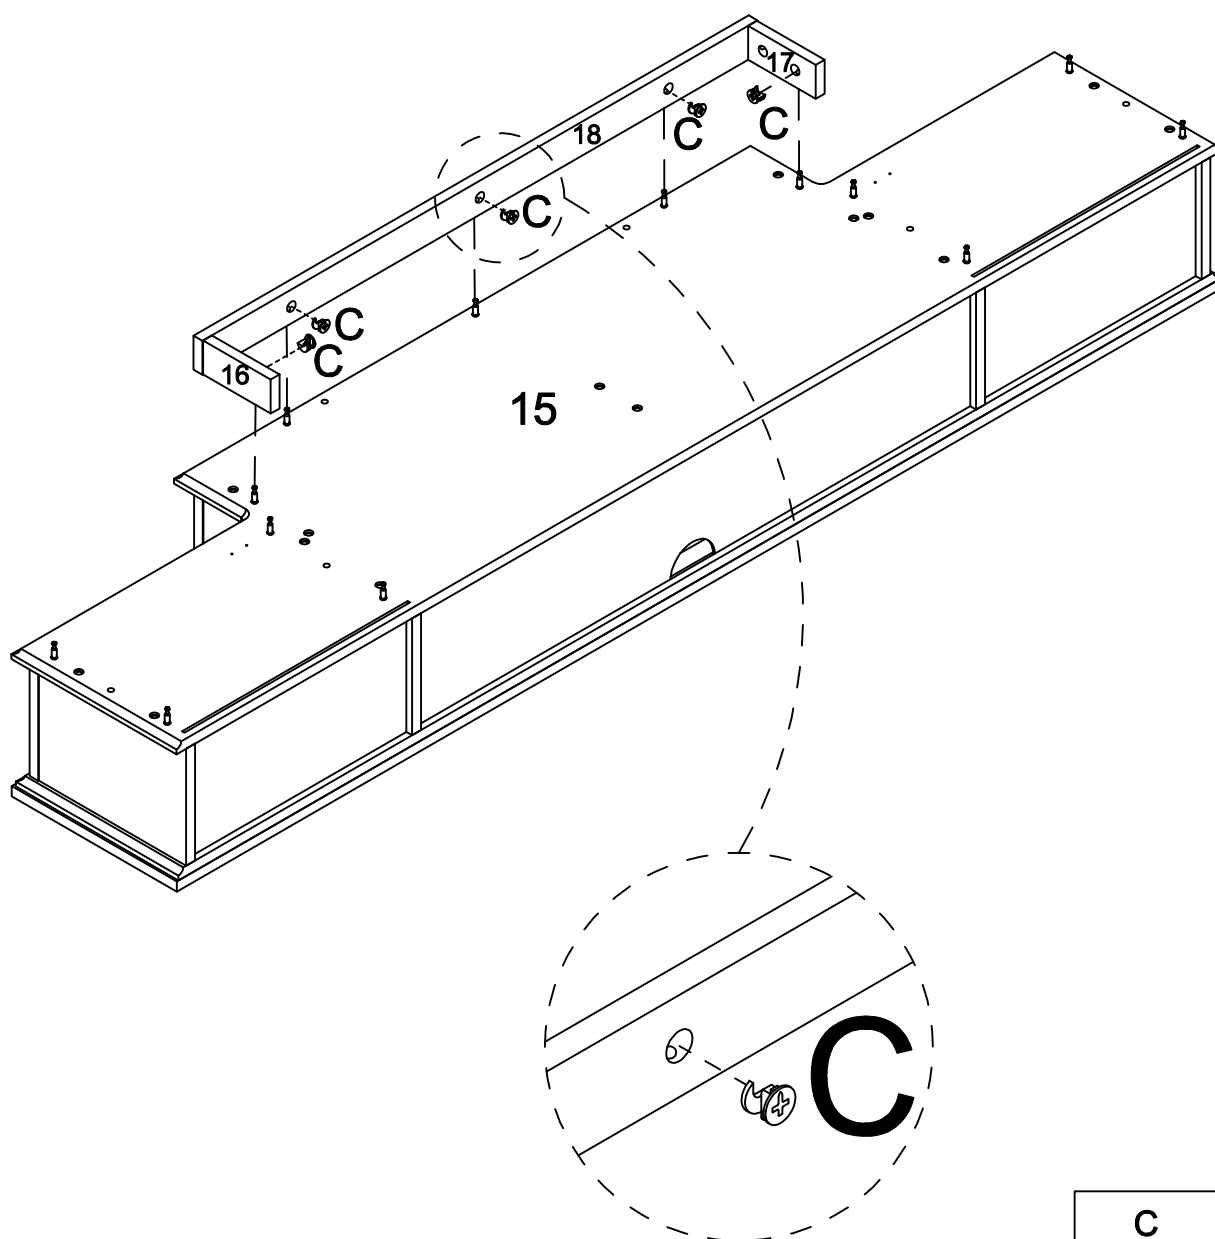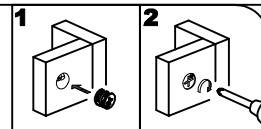

C



X5

Step 14

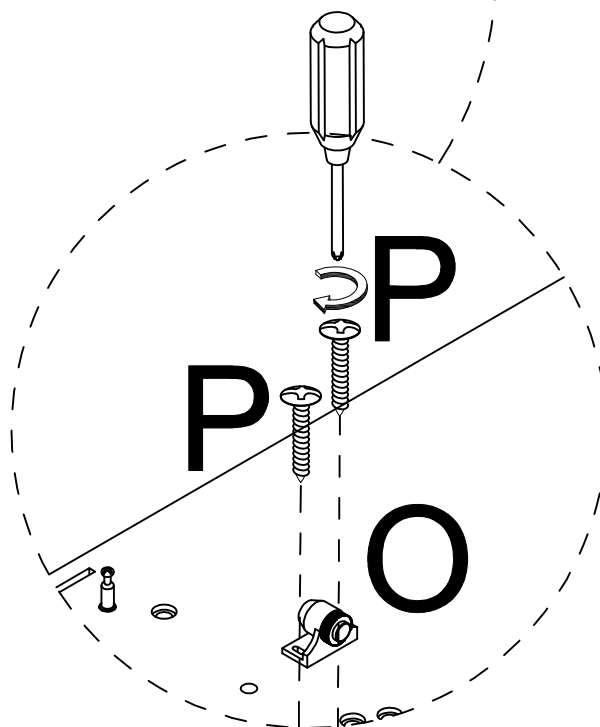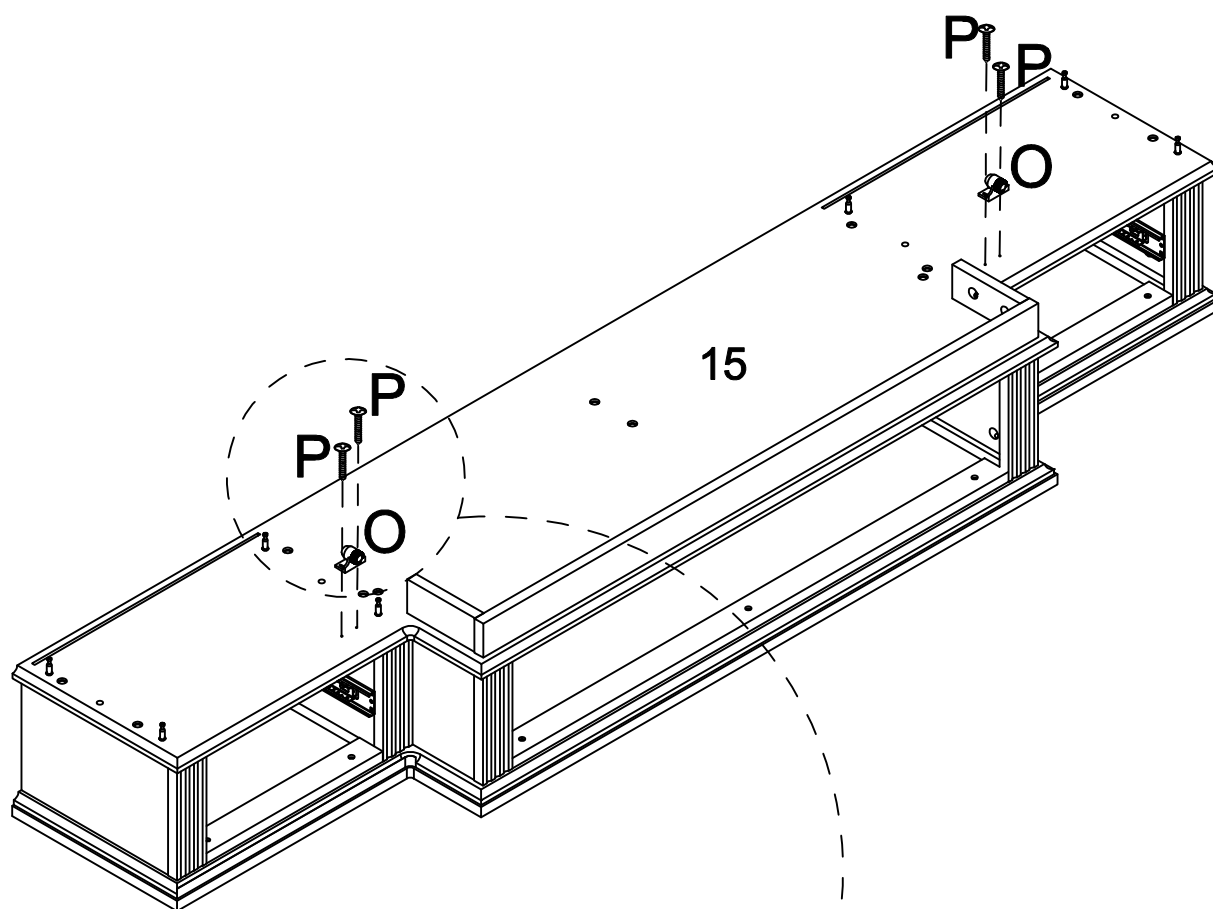



P	O
	
X4	X2

Step 15

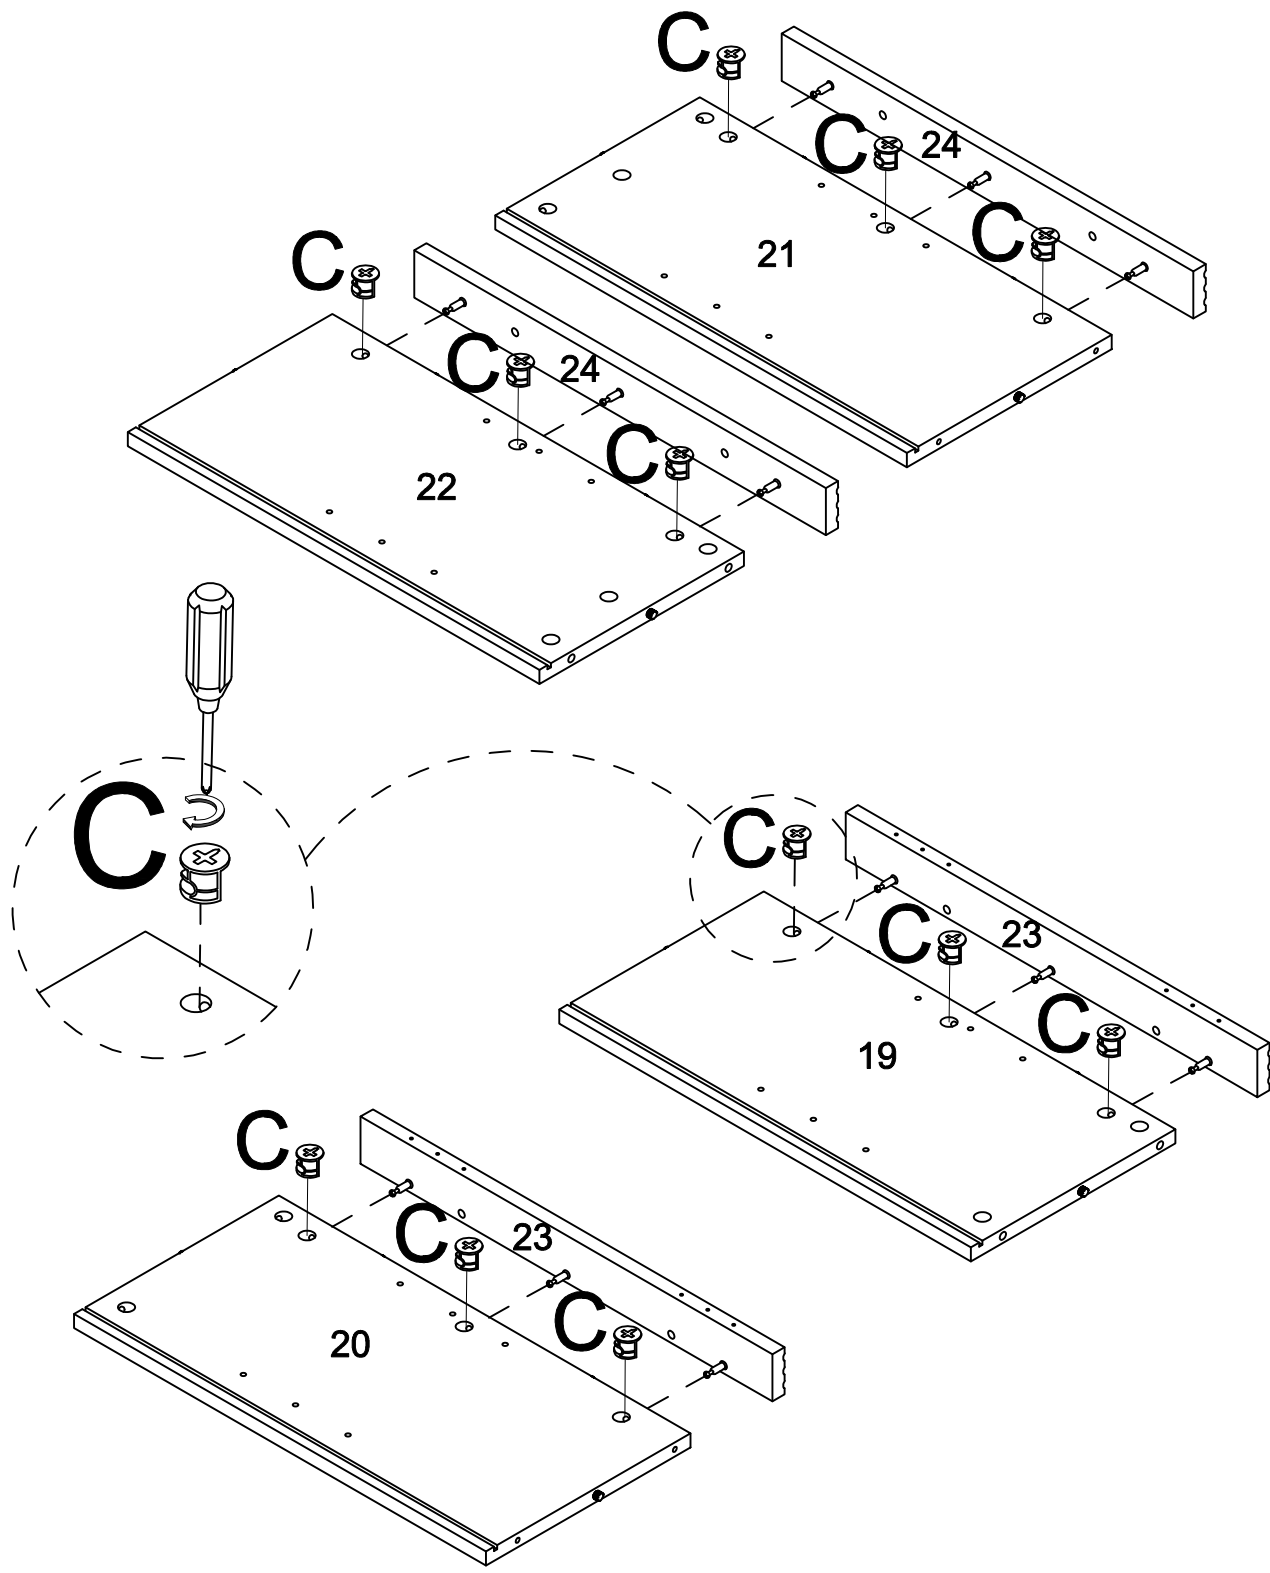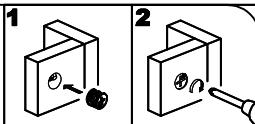

C
X12


Step 16

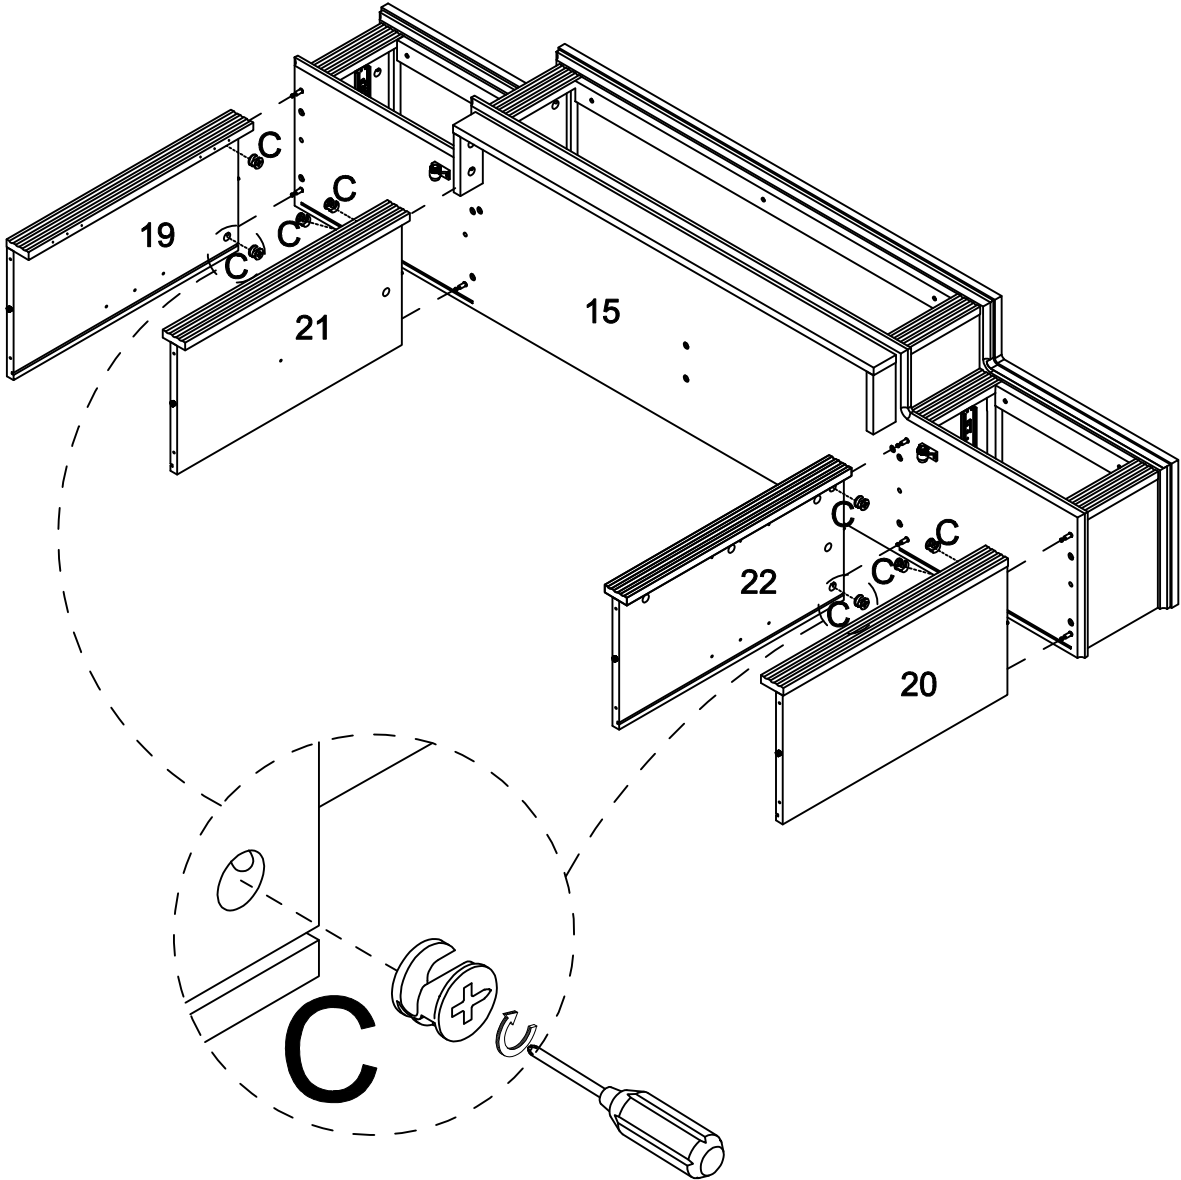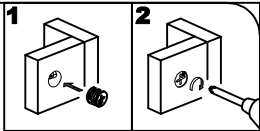


C


X8

Step 17

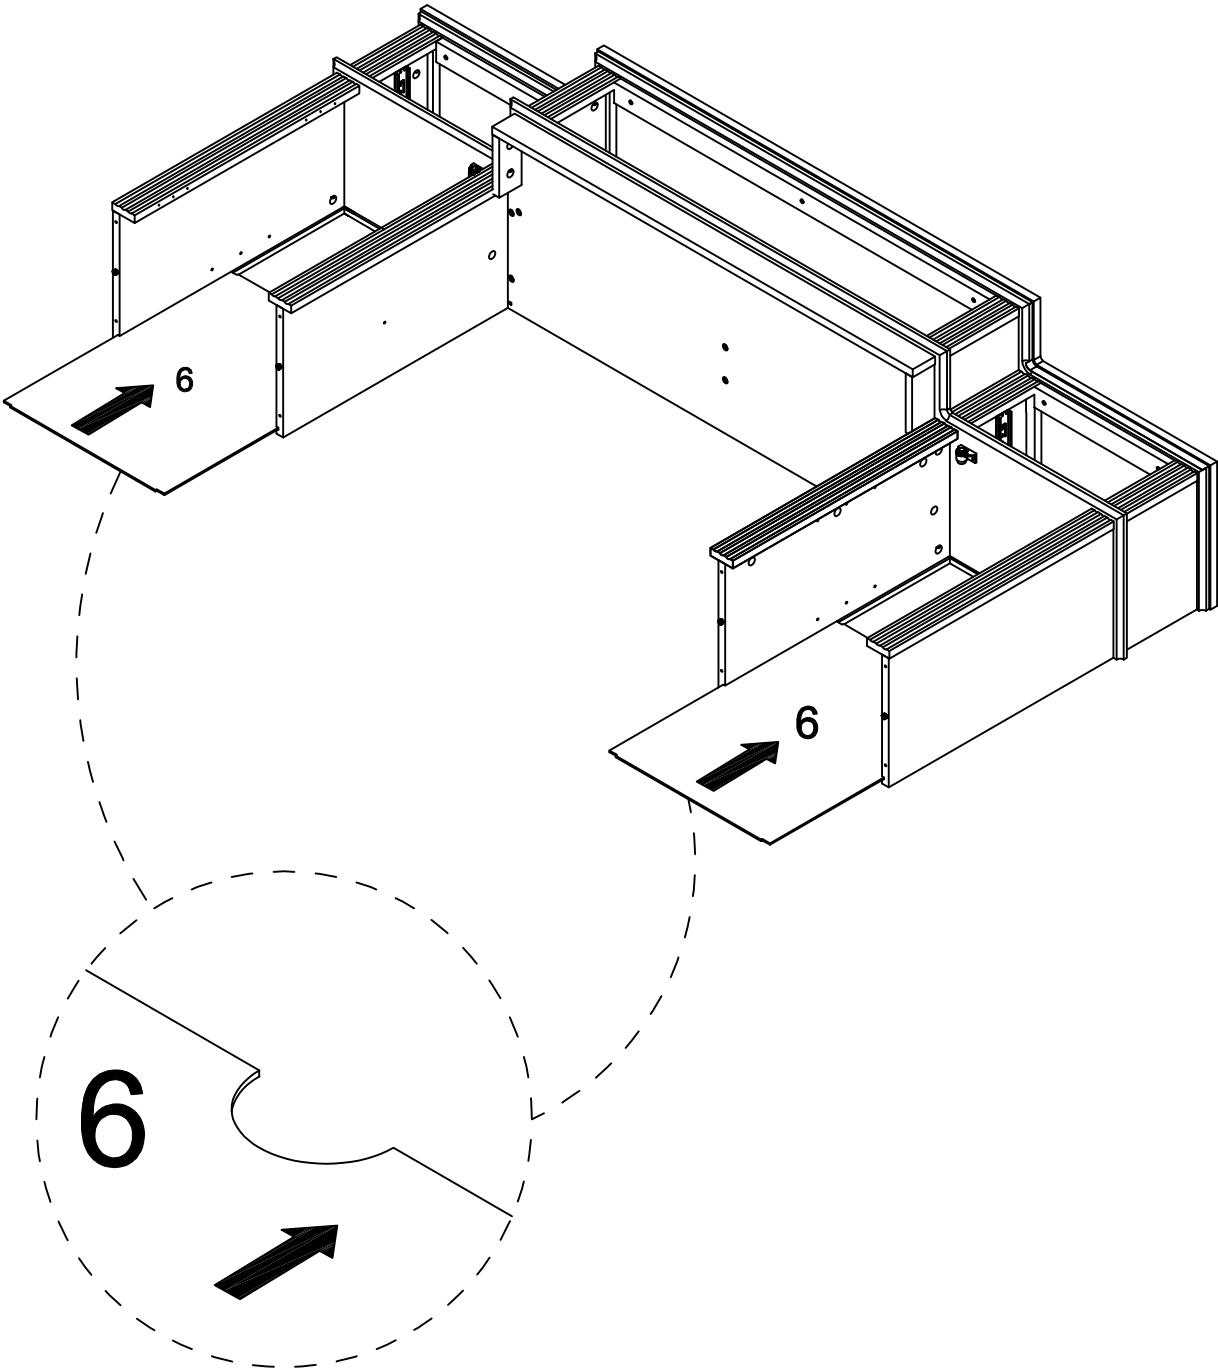



Step 18

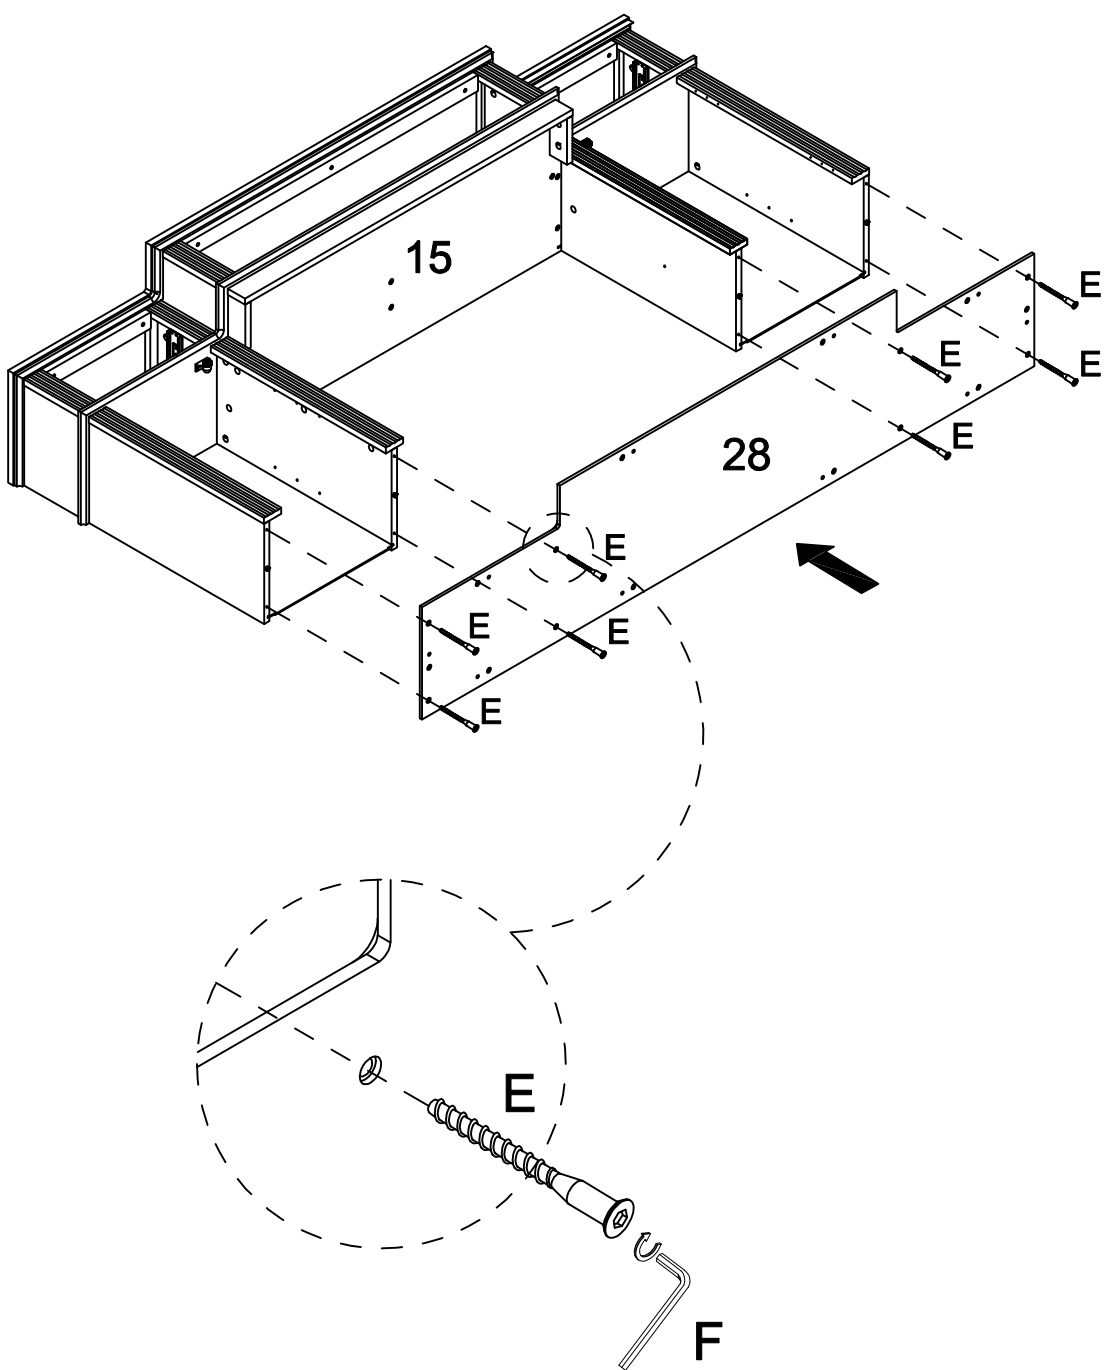


E	F
	
X8	X1

Step 19

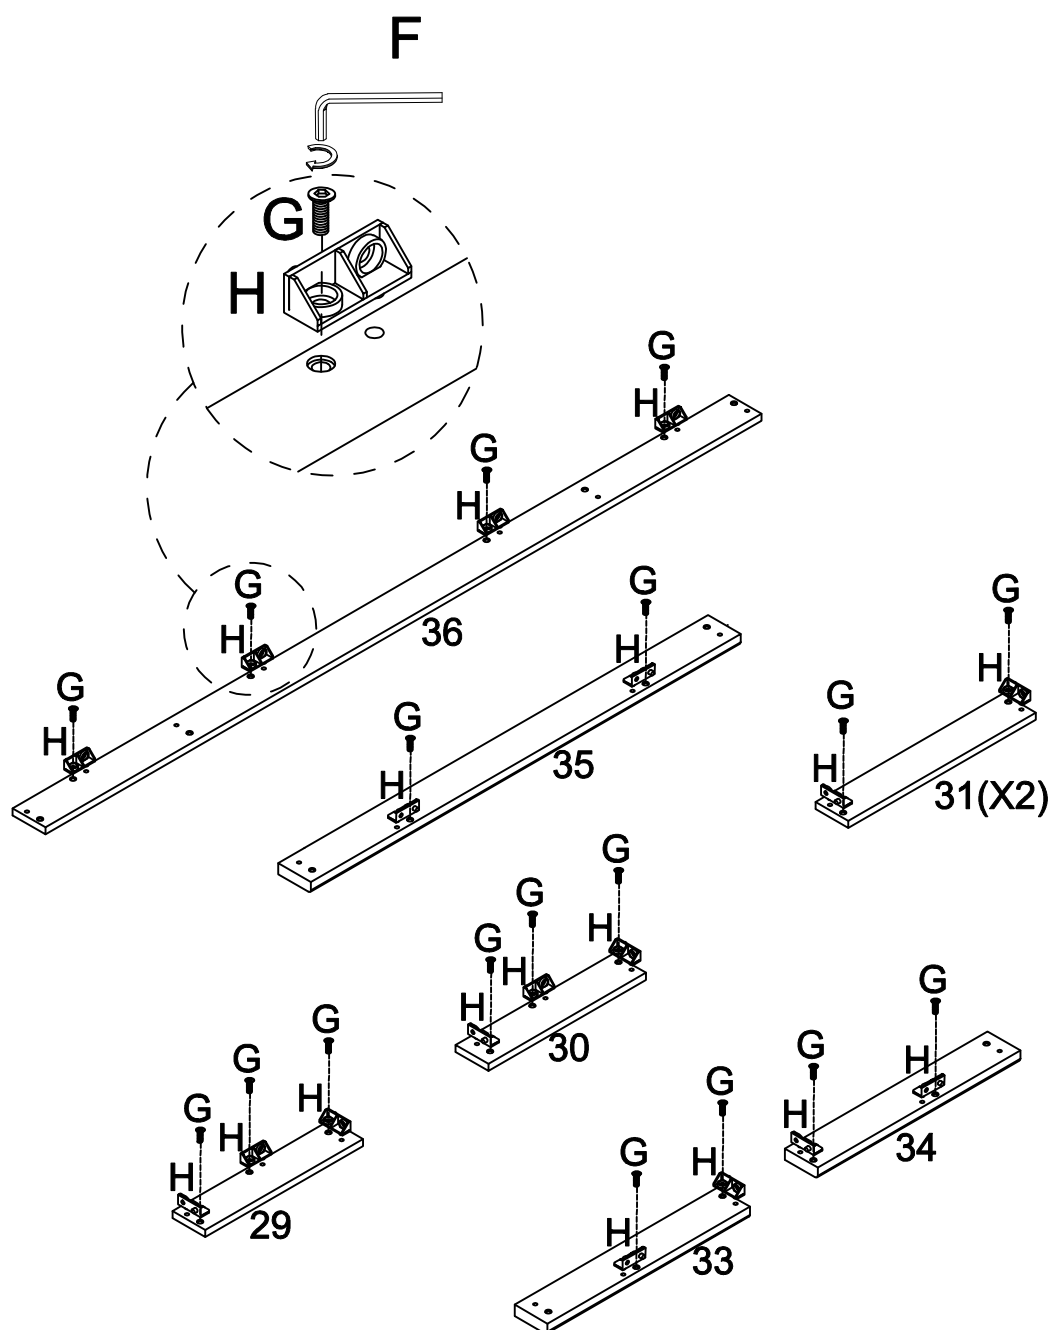


H	G	F
		
X20	X20	X1

Step 20

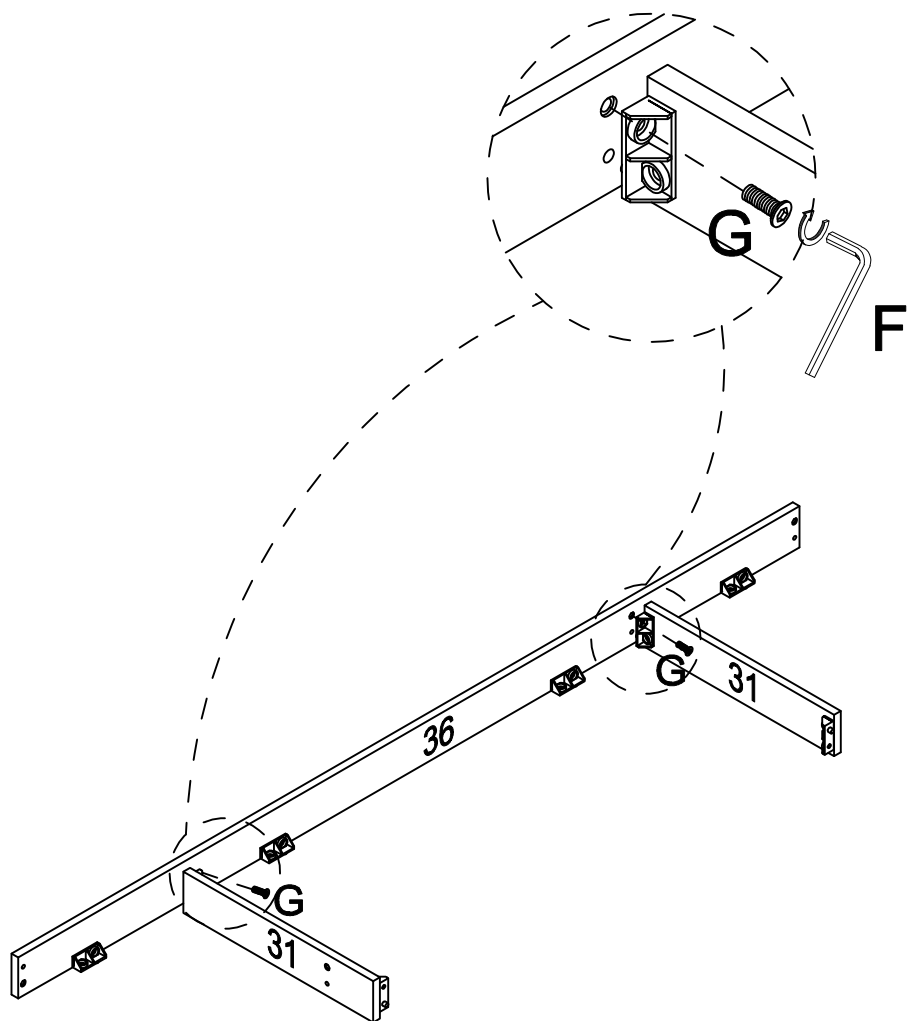


G	F
	
X2	X1

Step 21

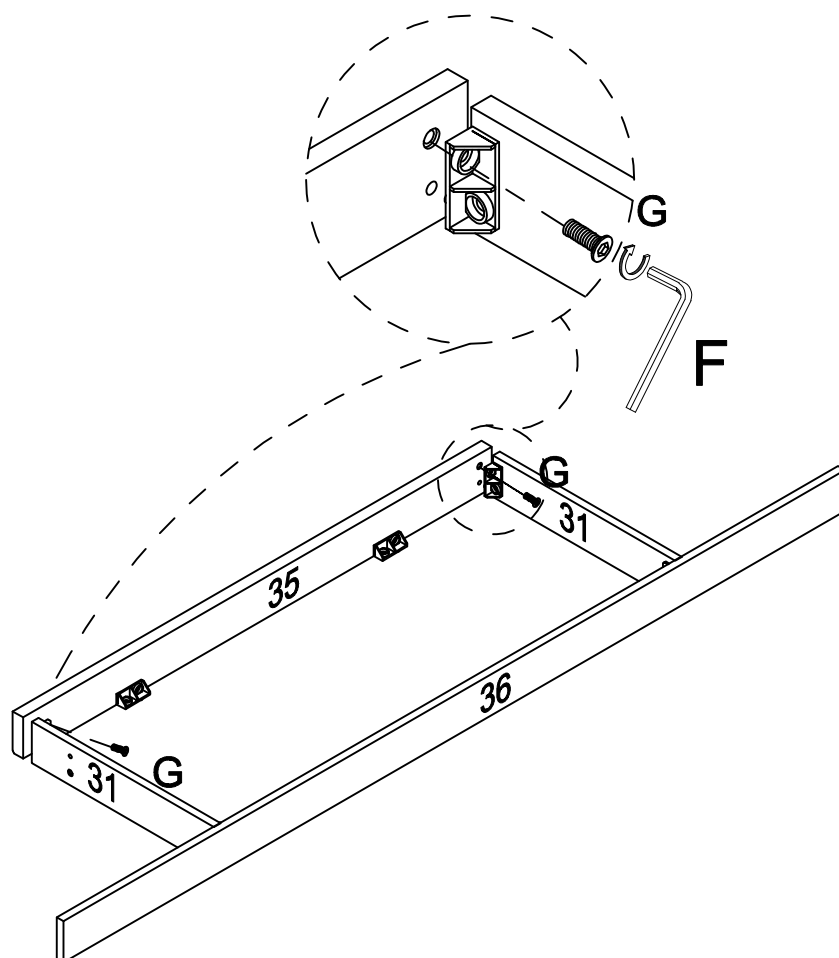


G	F
	
X2	X1

Step 22

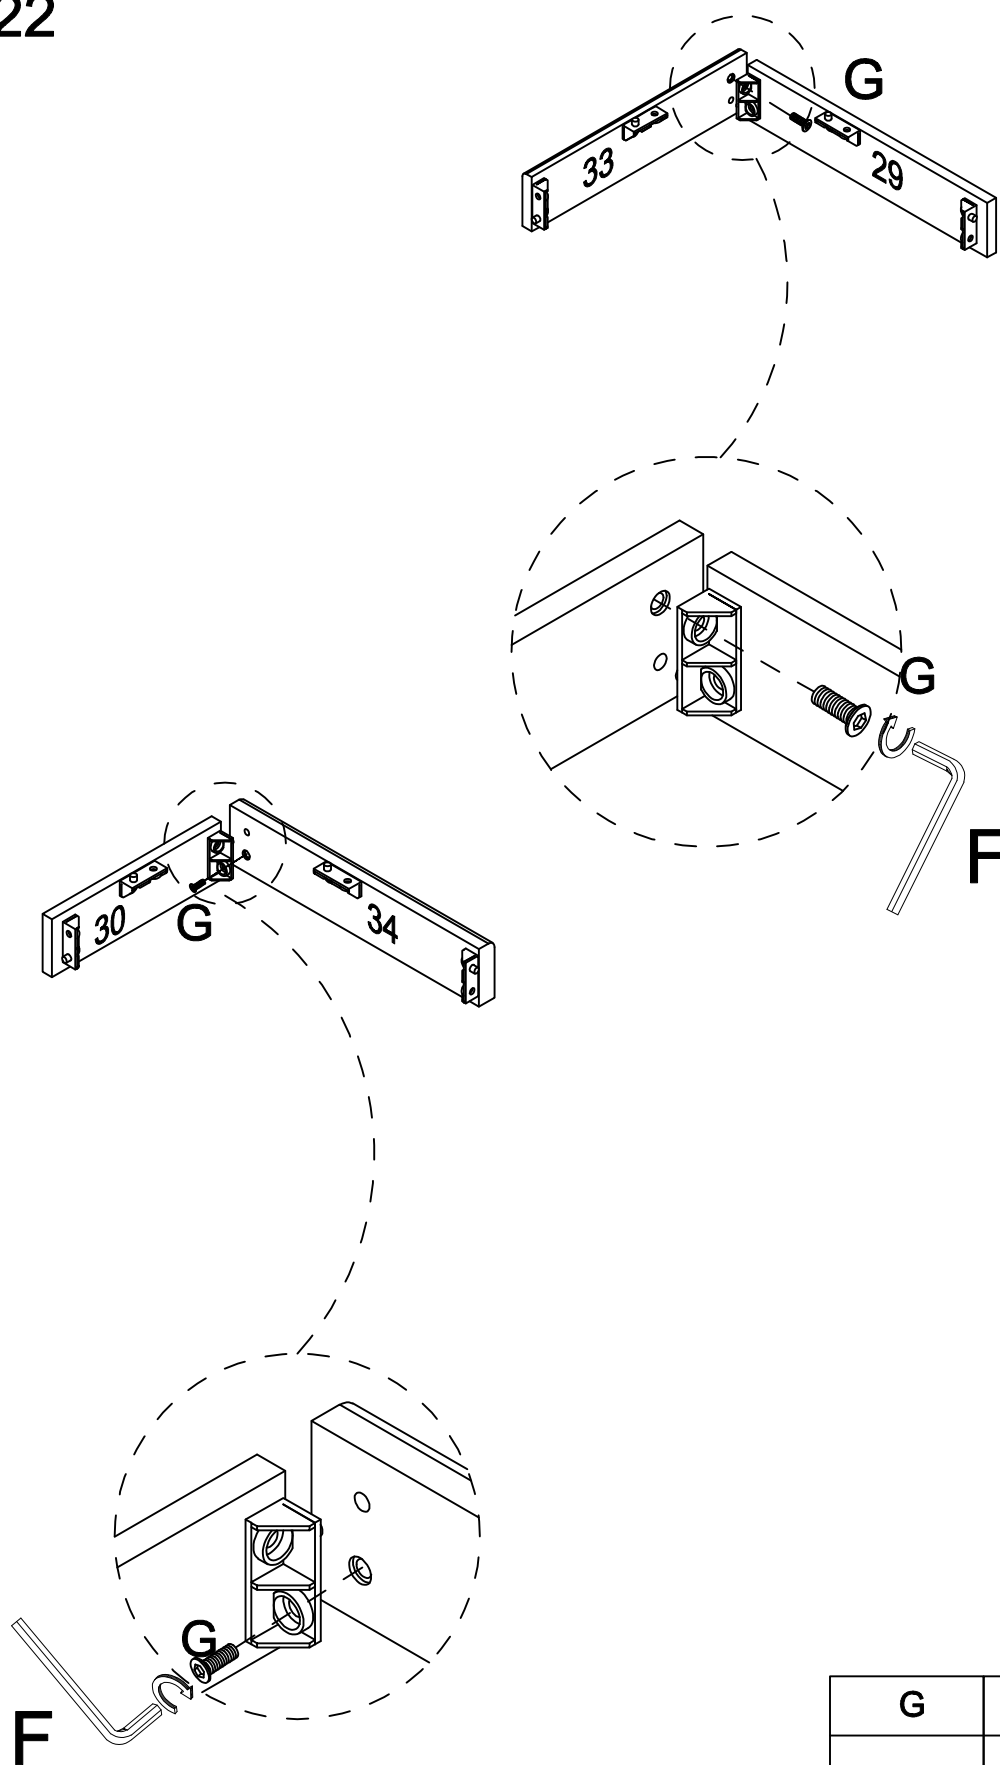


G	F
X2	X1

Step 23

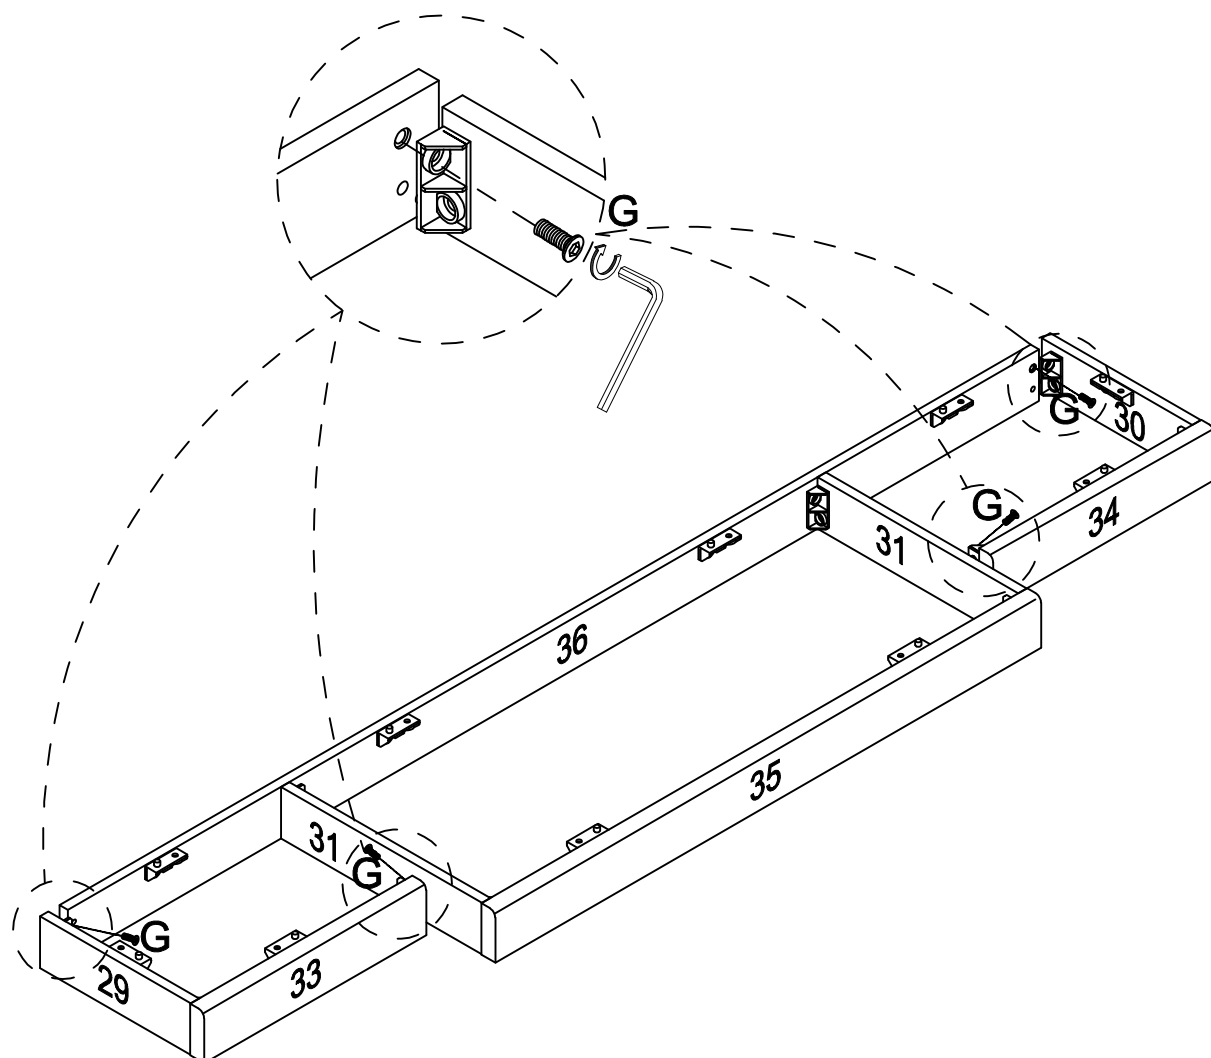

G	F
	
X4	X1

Step 24

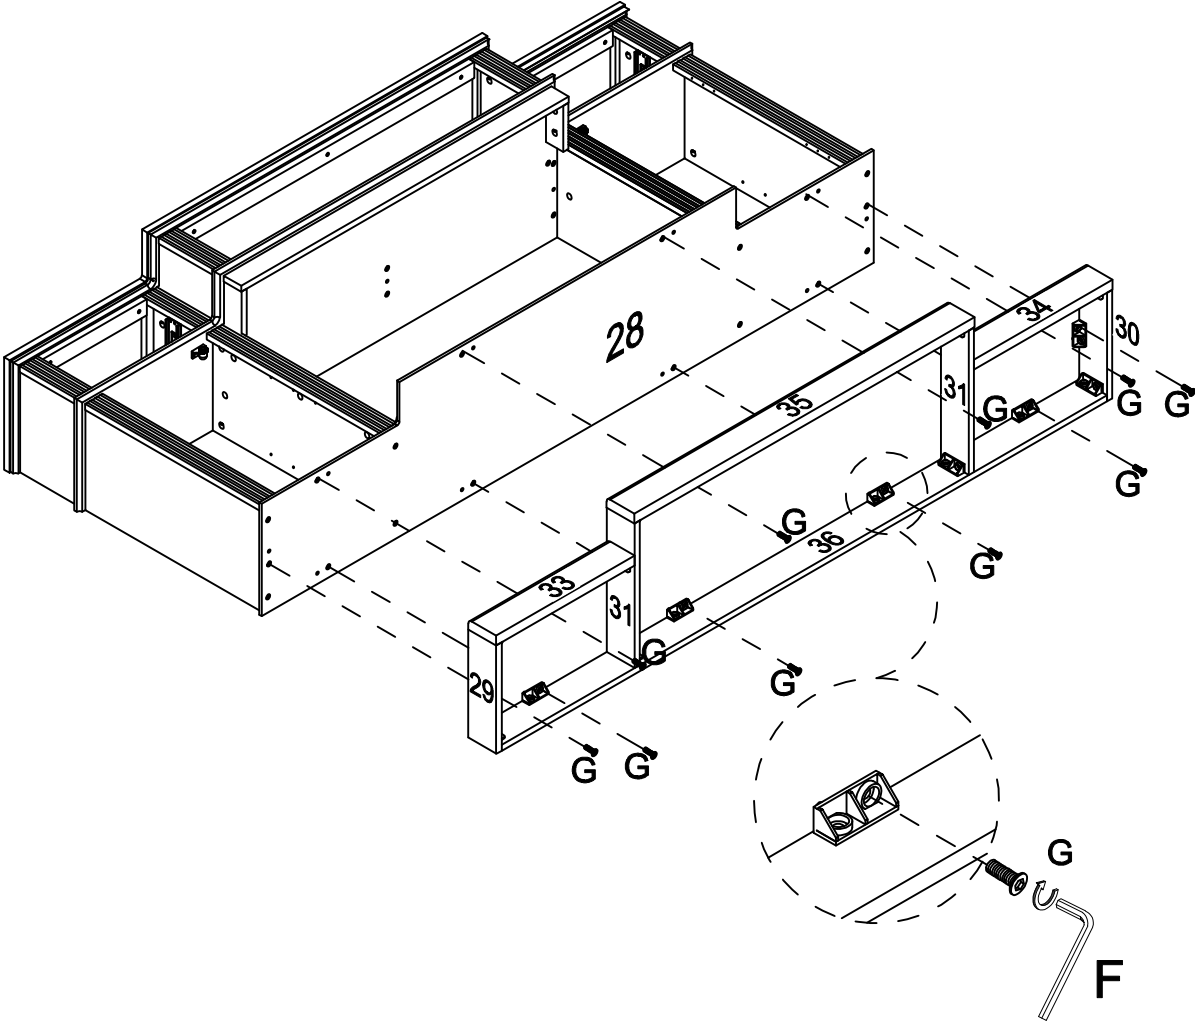


G	F
	
X10	X1

Step 25


Notice:

1. Please take the LED LAMP BELT(X) out from the carton B.
2. Remove the backing paper of the LED BELT(X). Stick it to the parts (15) on the same side of the door stopper. Then use the screw(M) & the metal snap joint (JJ) to tighten .

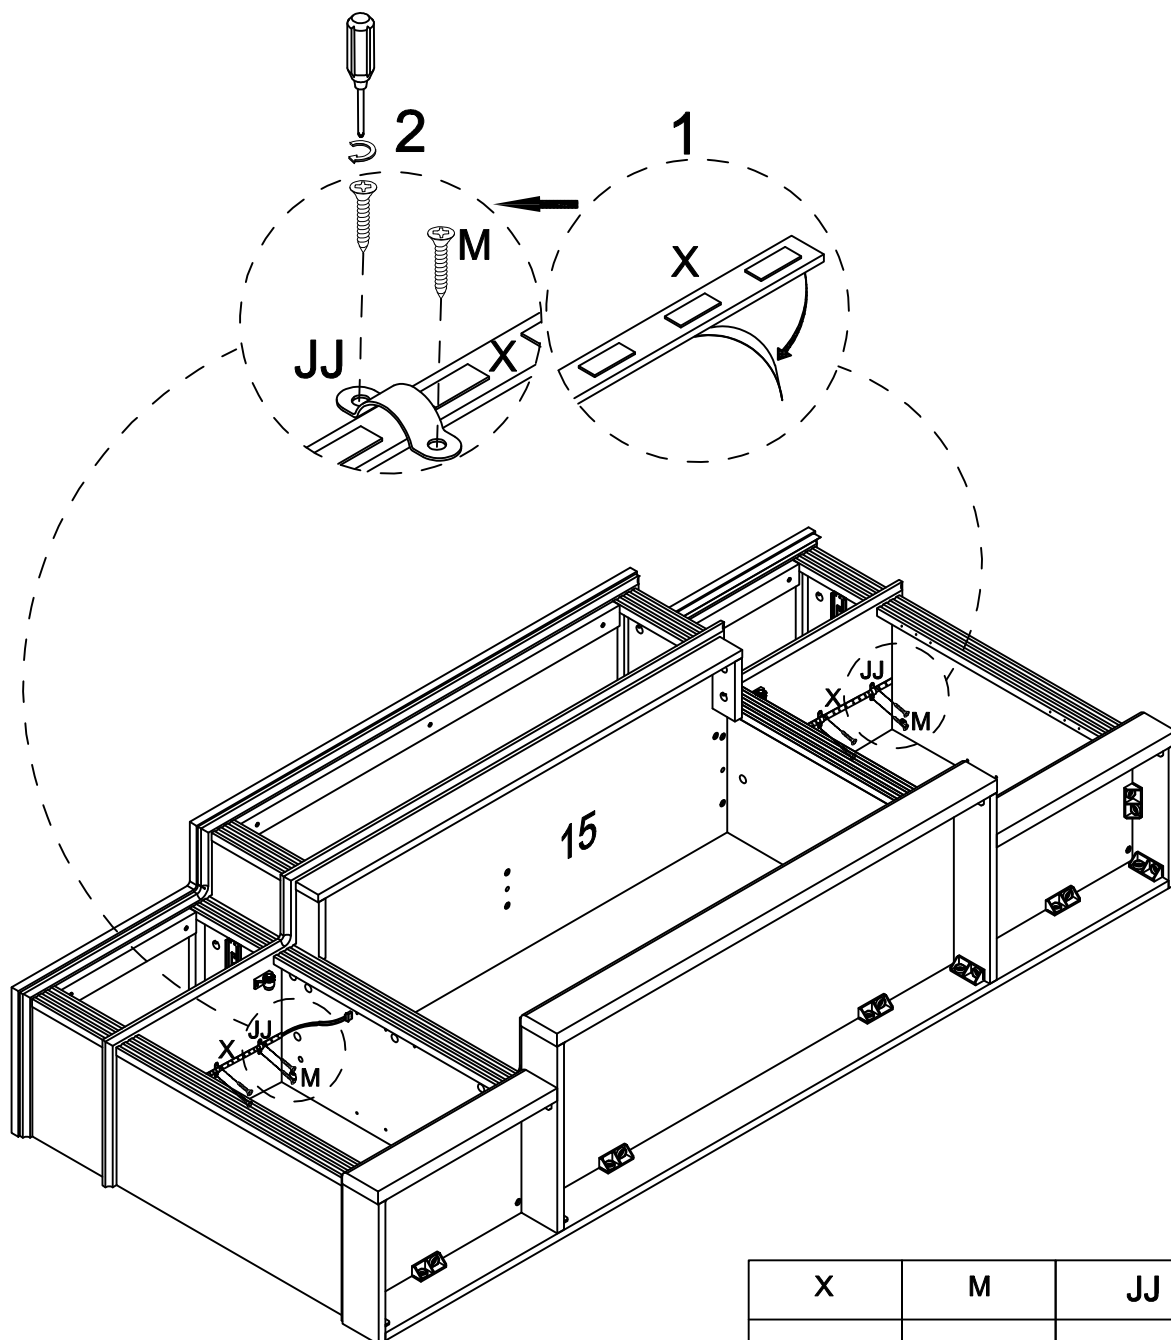


X	M	JJ
X2	X8	X4

Step 26

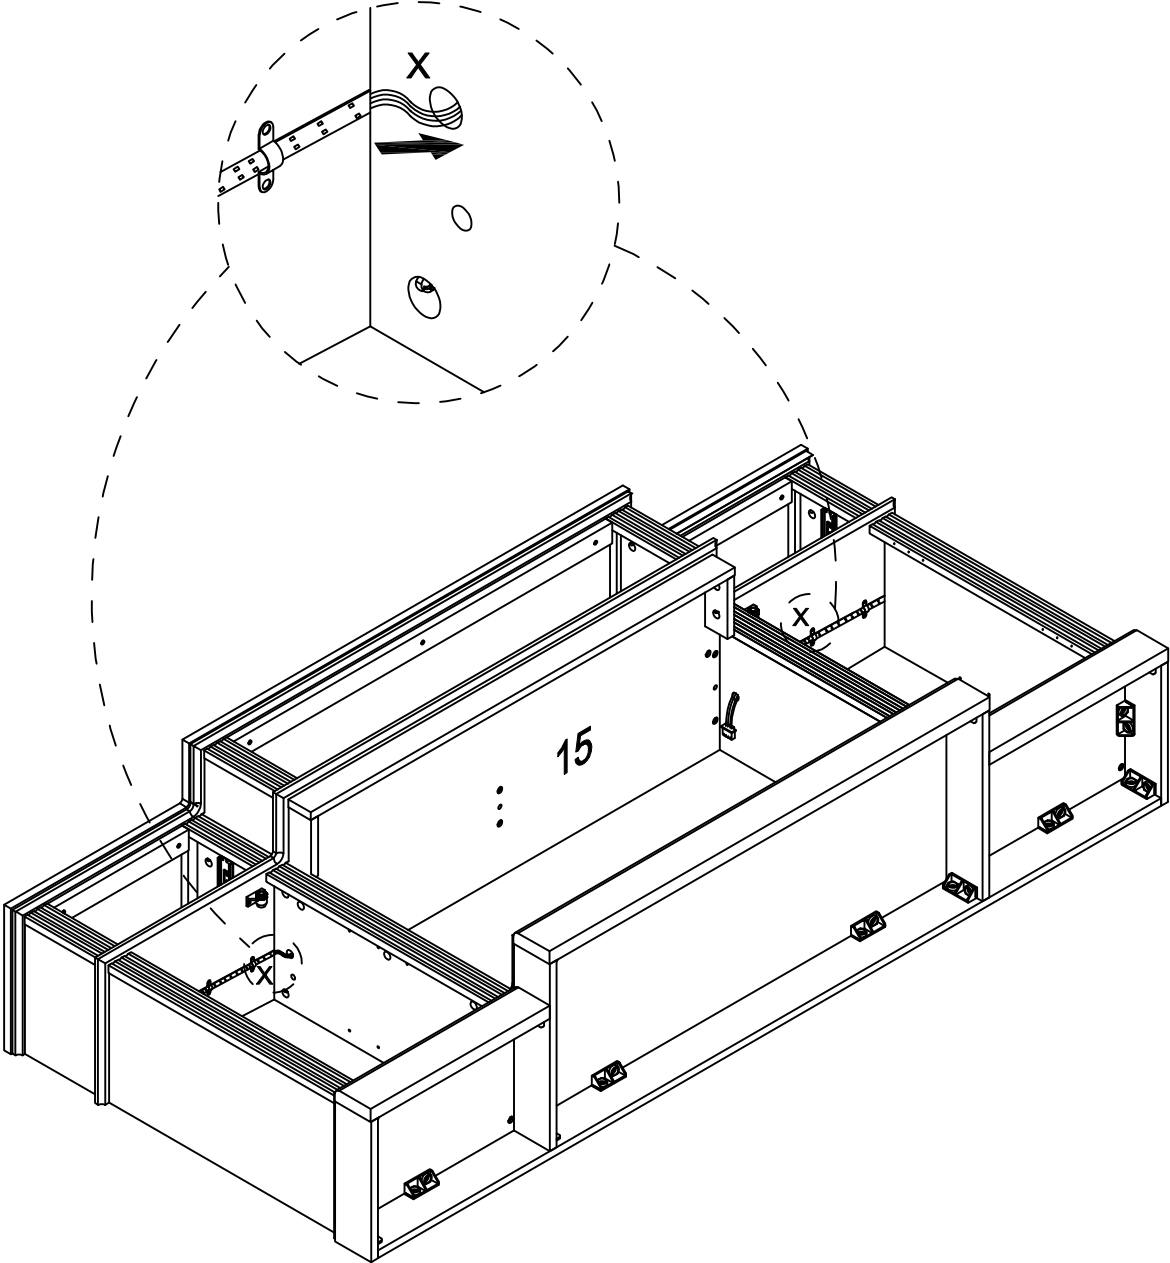


Step 27

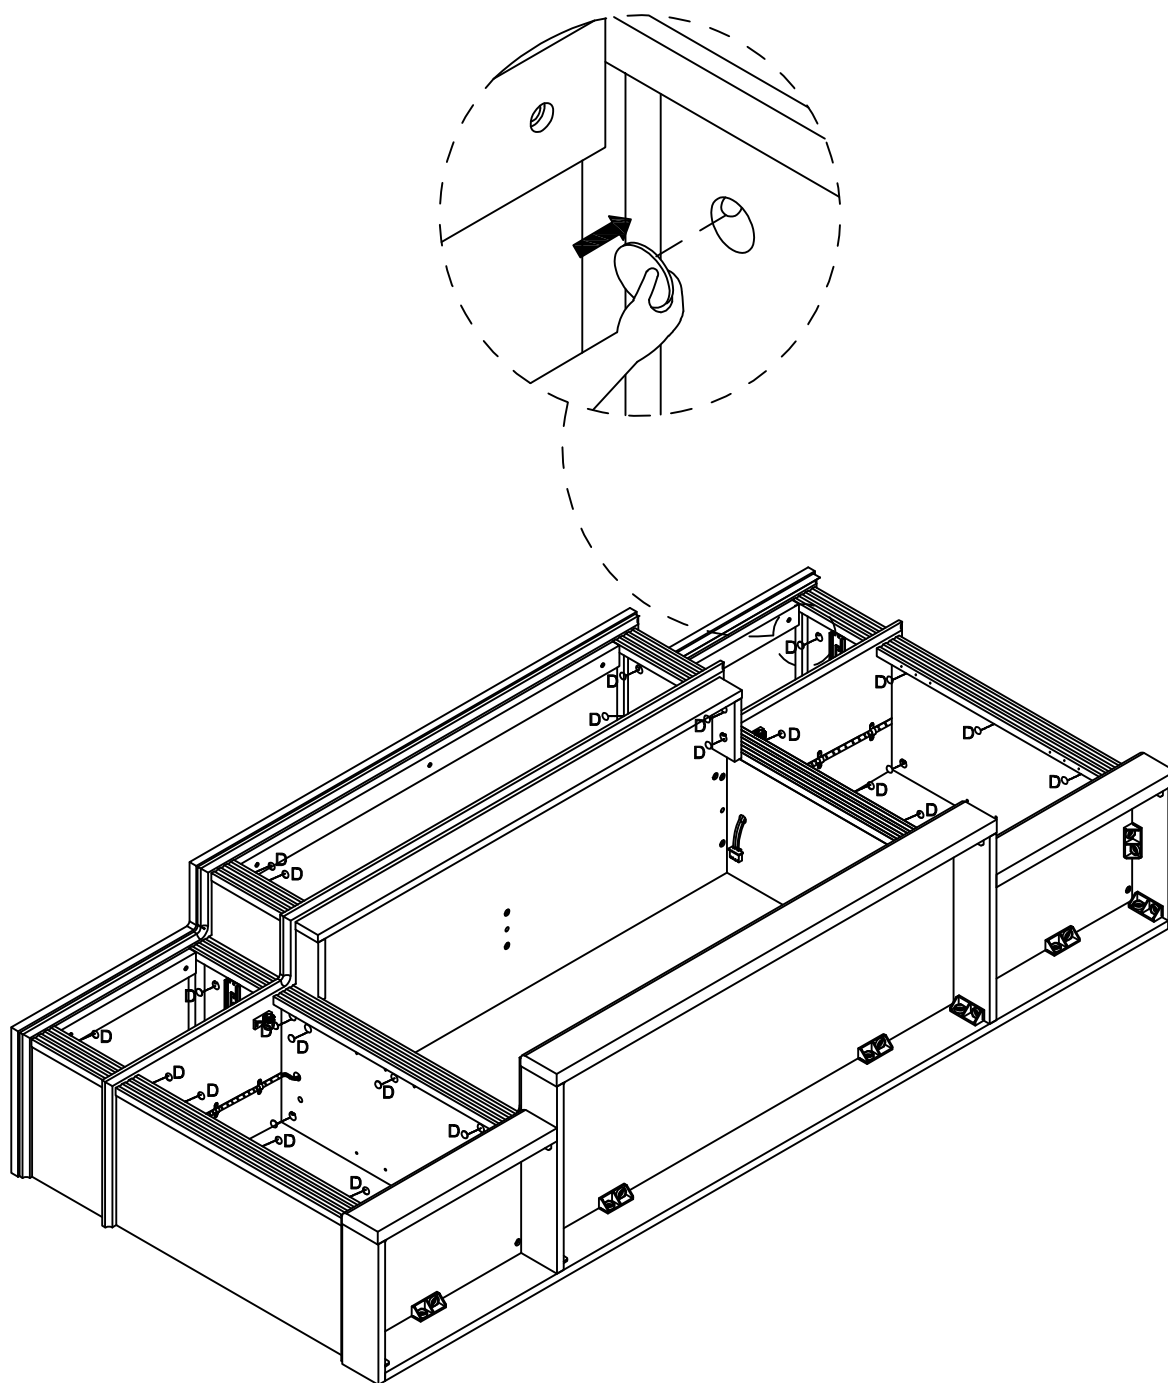

D
O
X53


Step 28

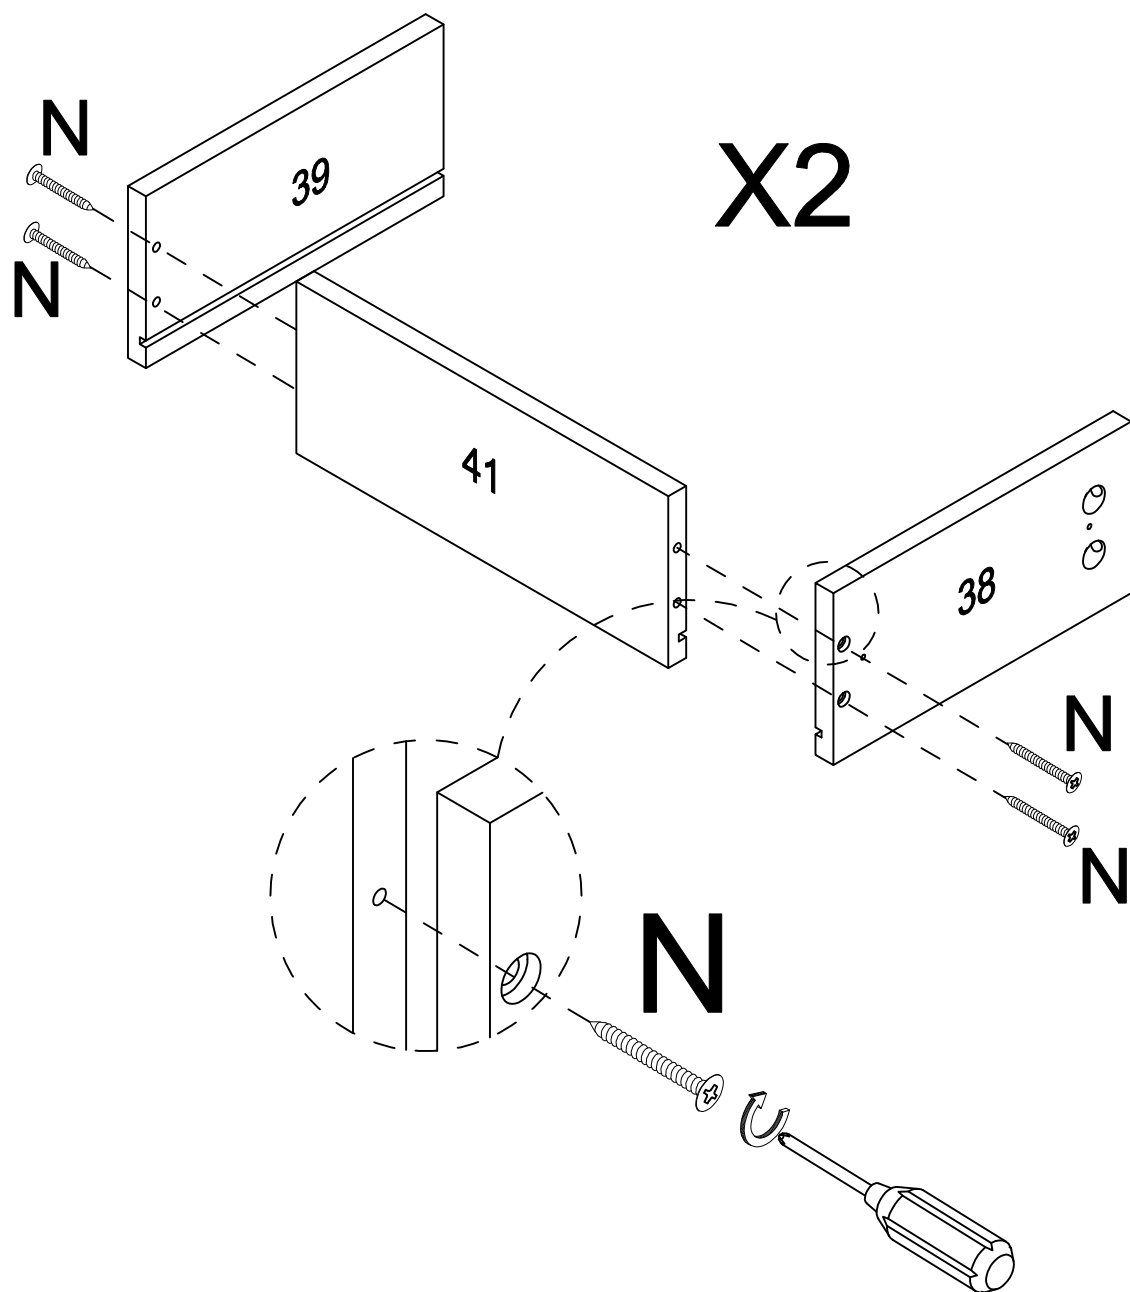

N


X8

Step 29

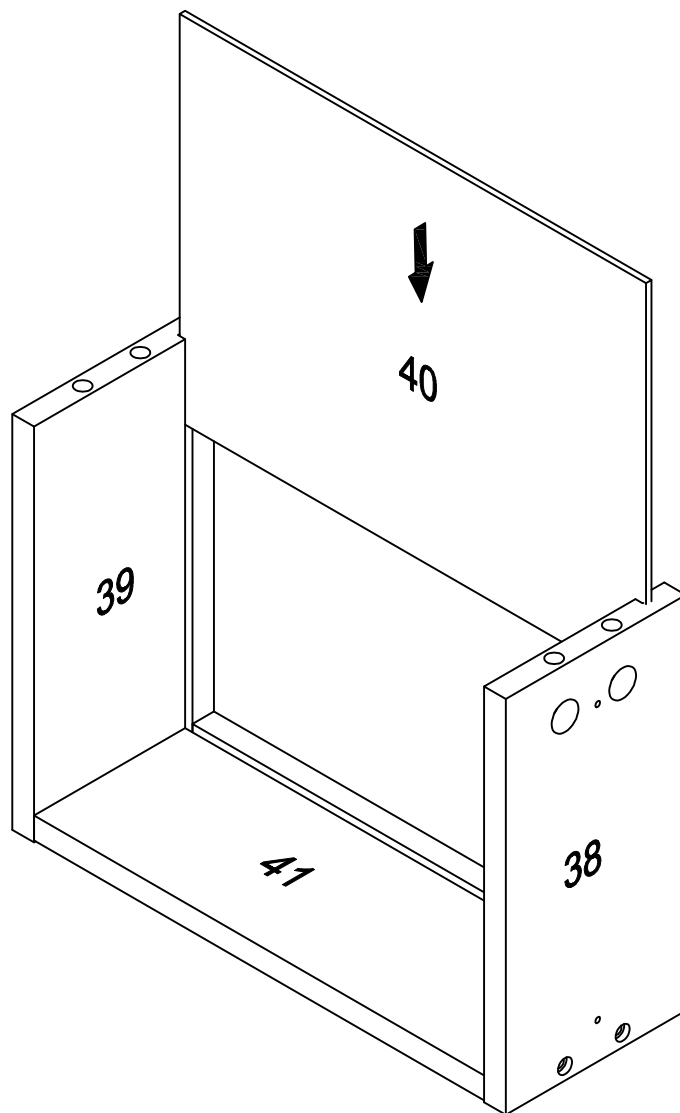


X2

Step 30

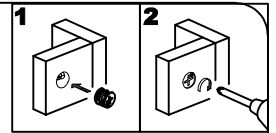


X2

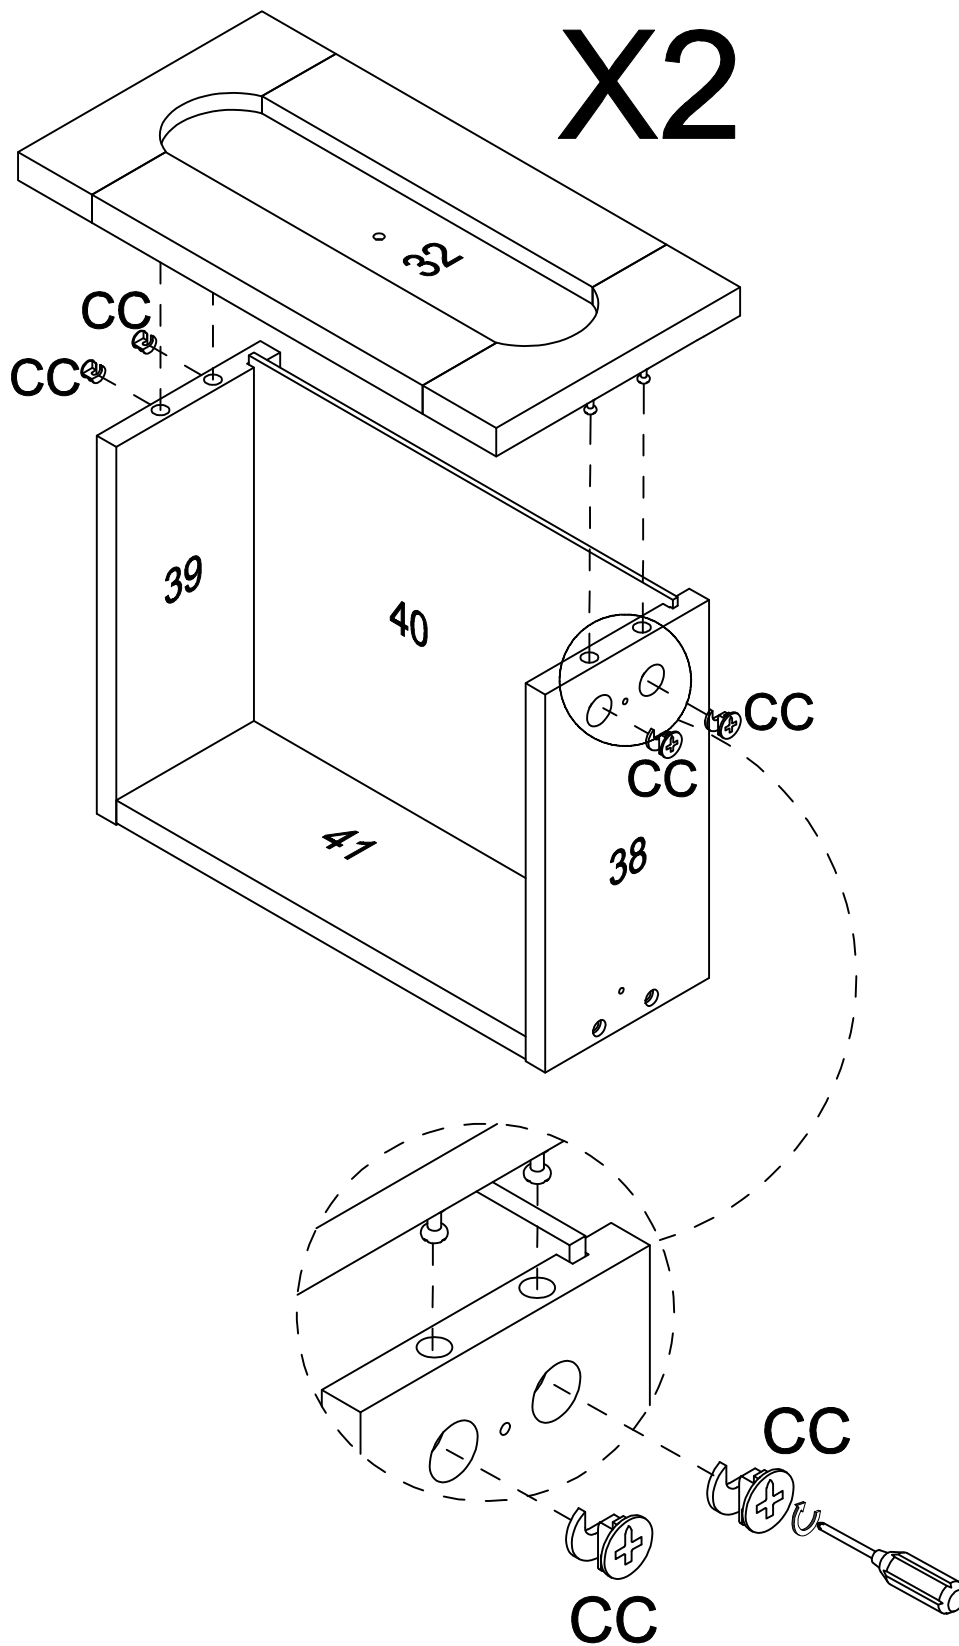

CC

X8


Step 31

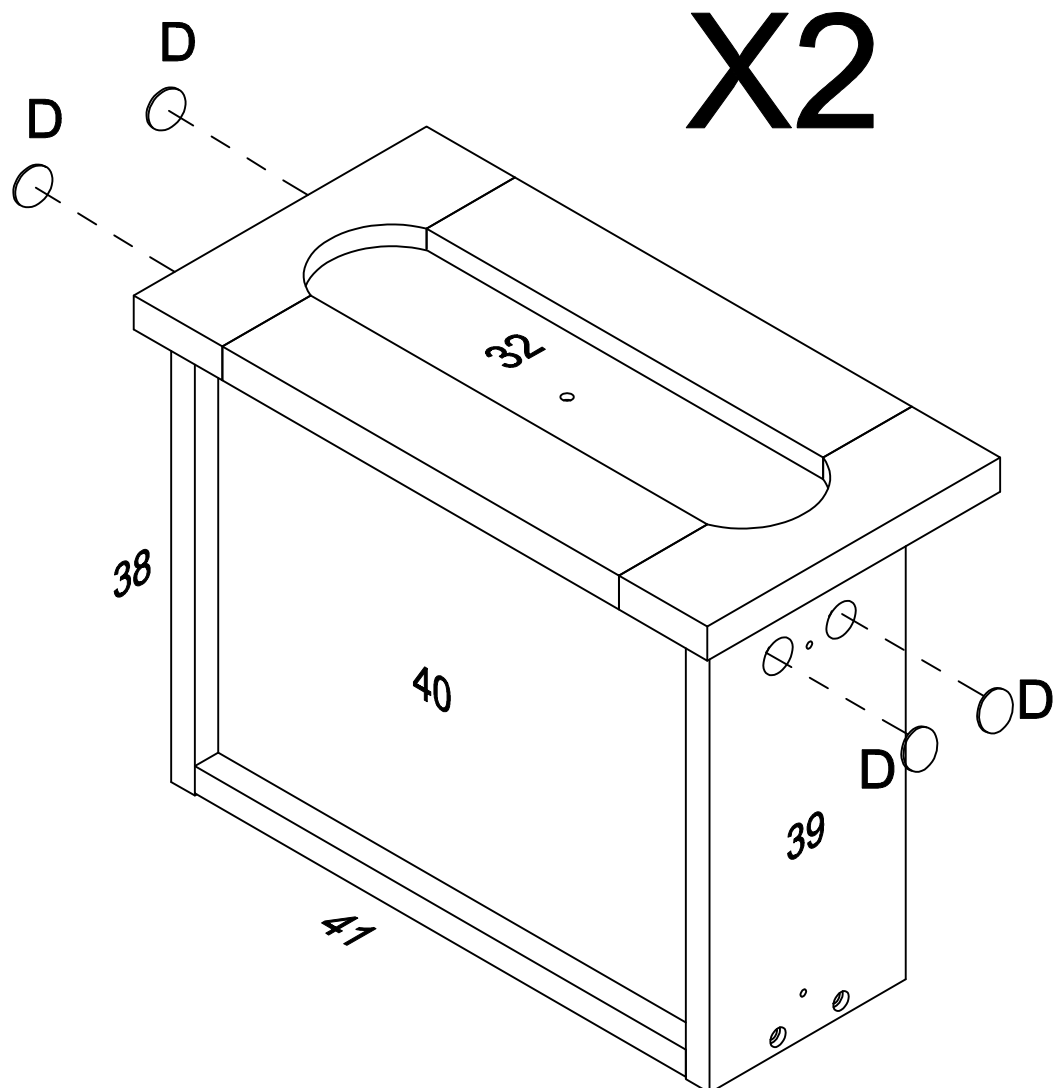

D
O
X8

Step 32


X2

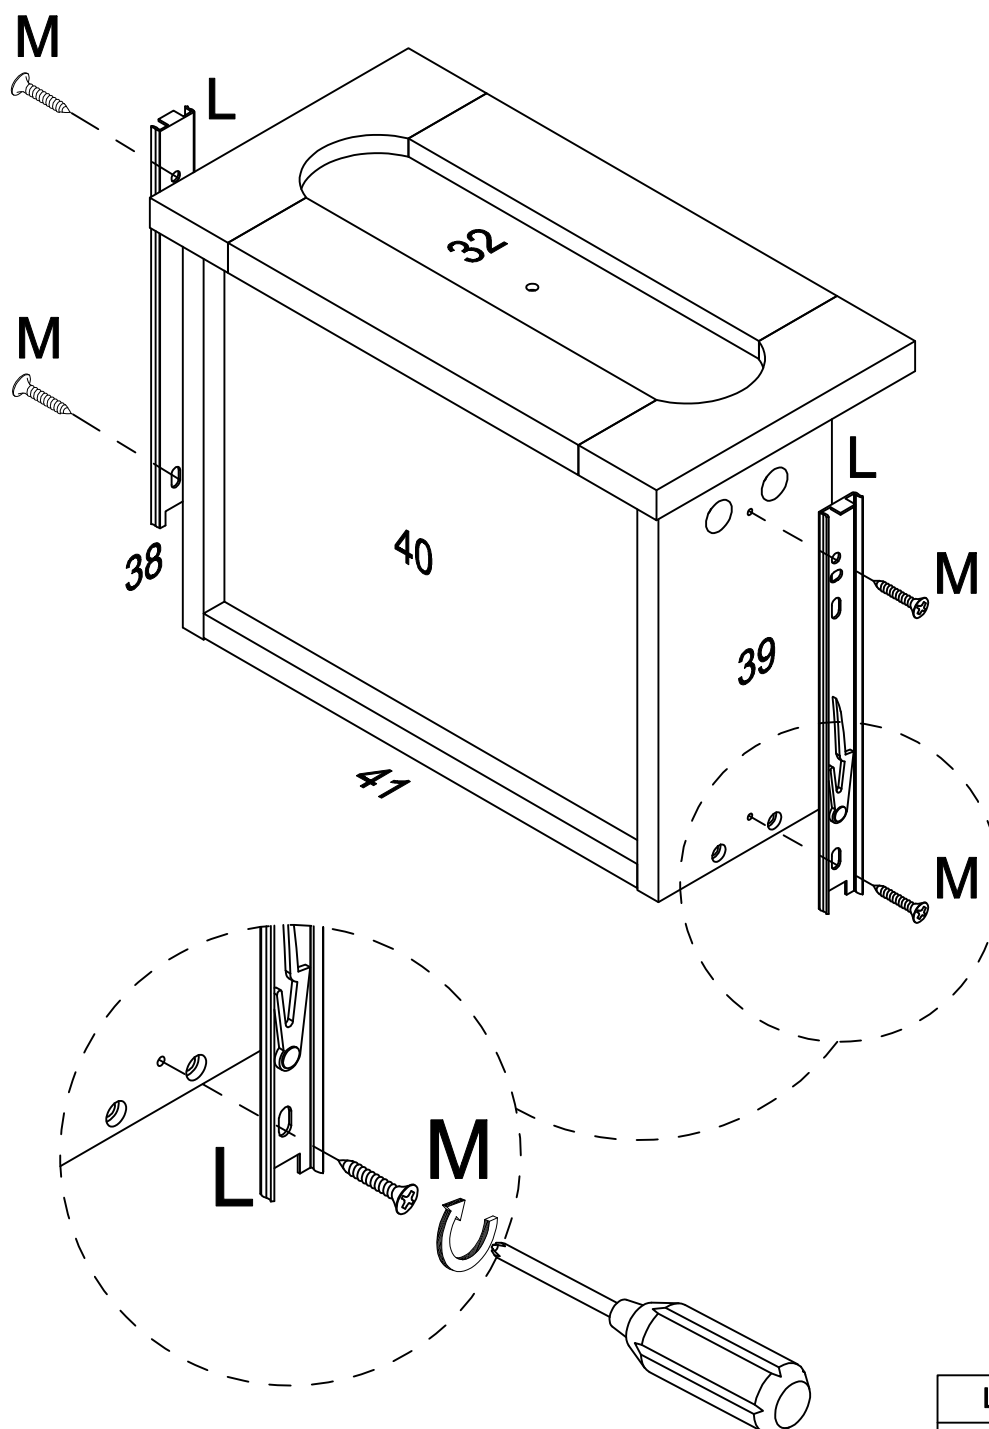

L	M
	
X4	X8



Step 33

X2

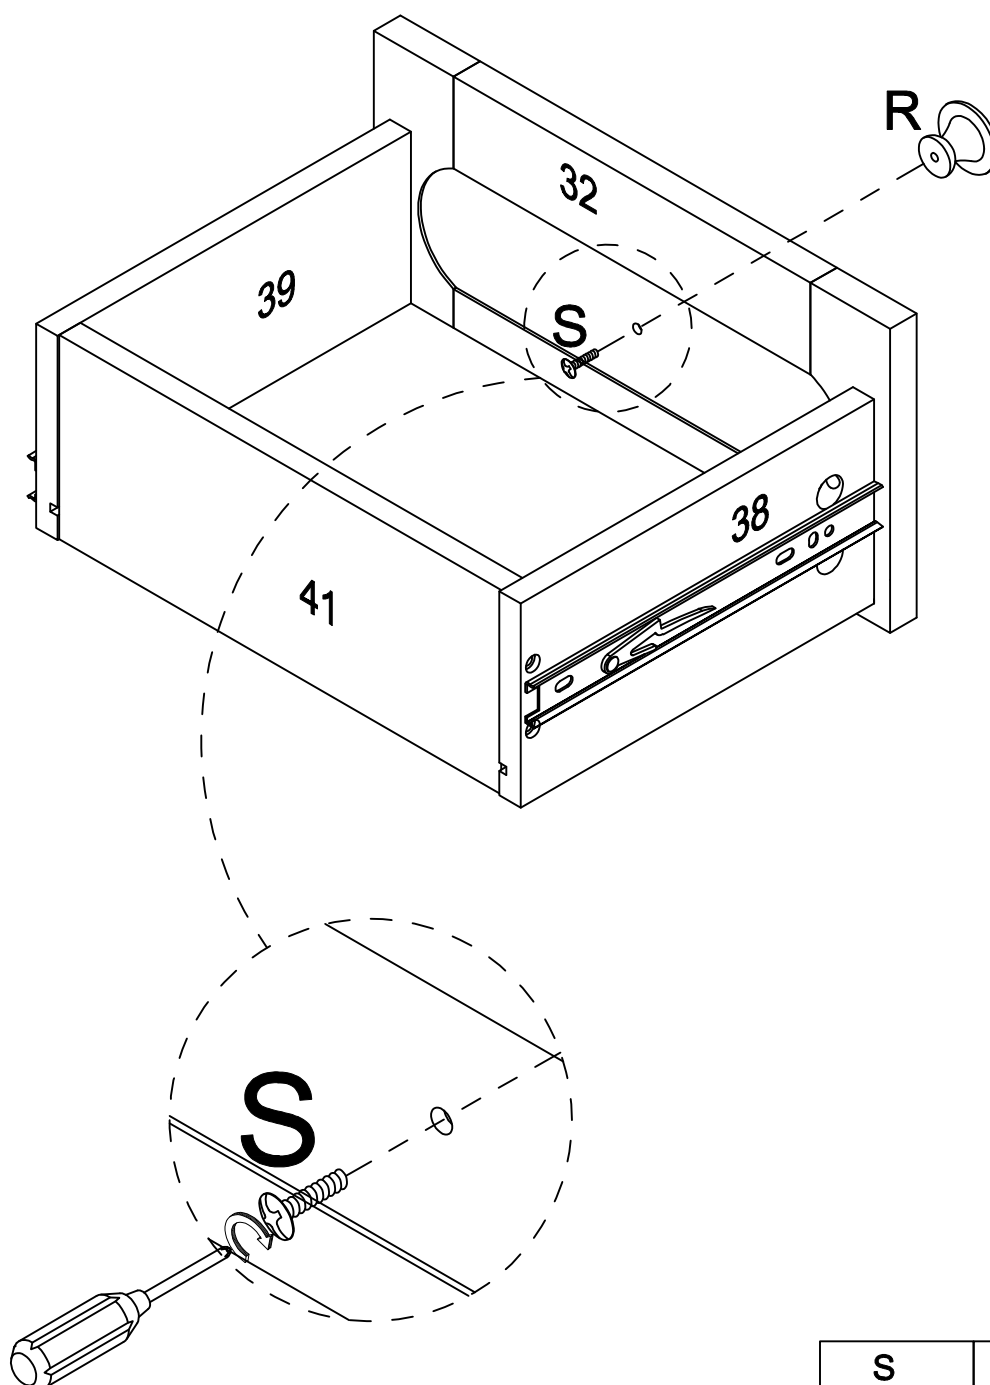


S	R
	
X2	X2

Step 34

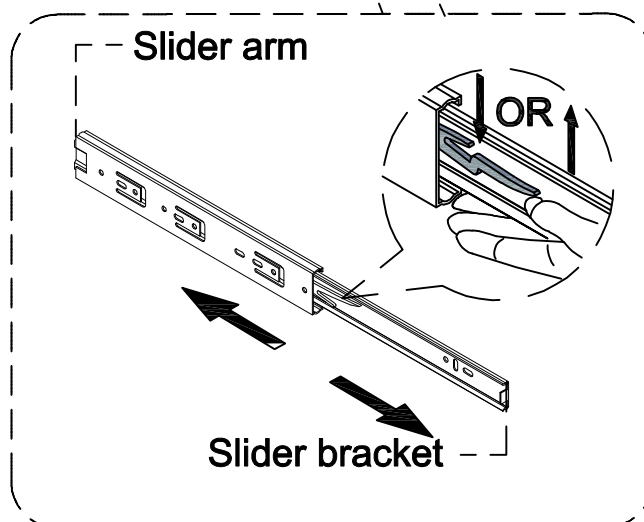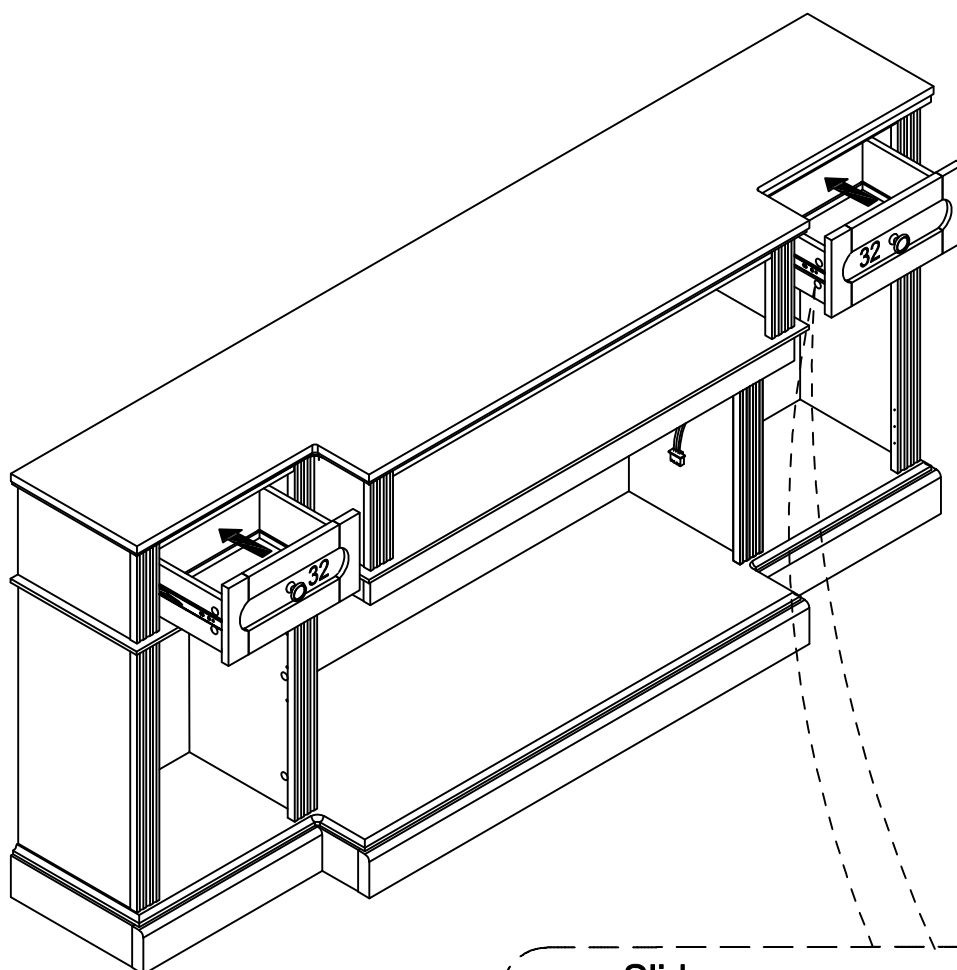


Step 35

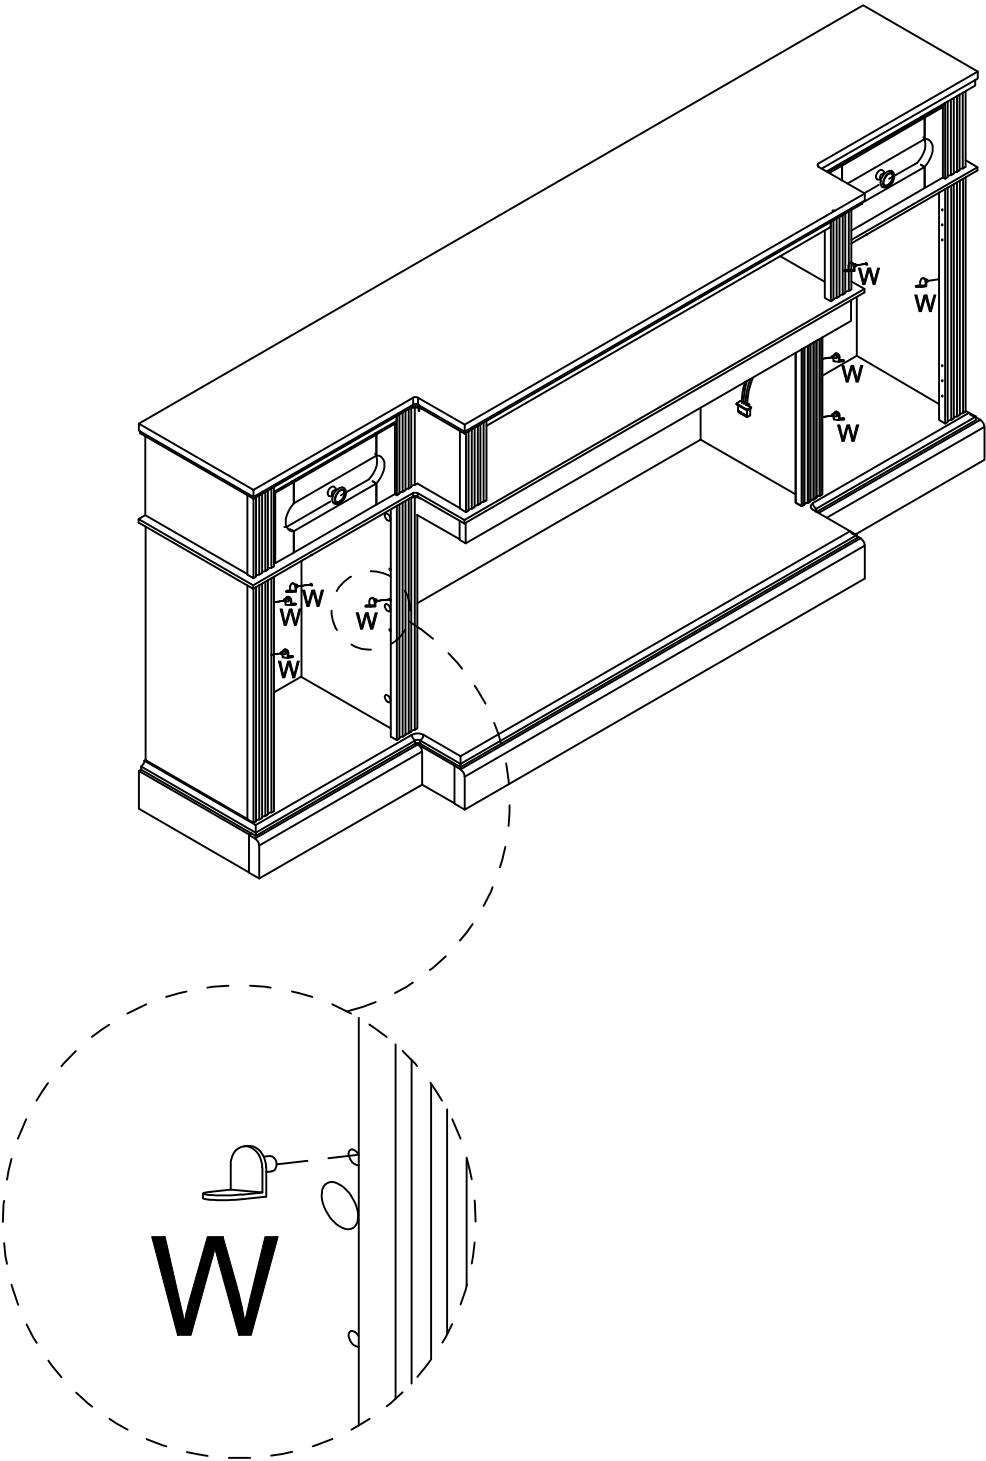


W

X8

Step 36

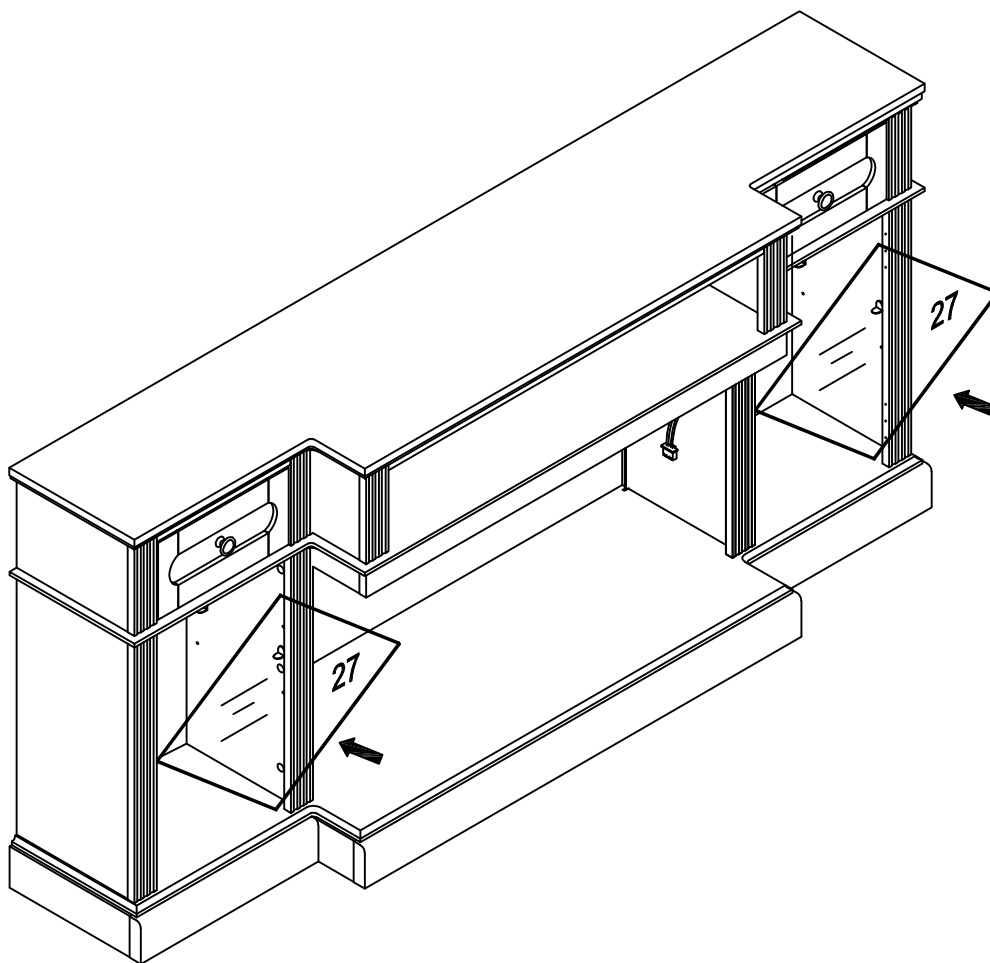


Step 37

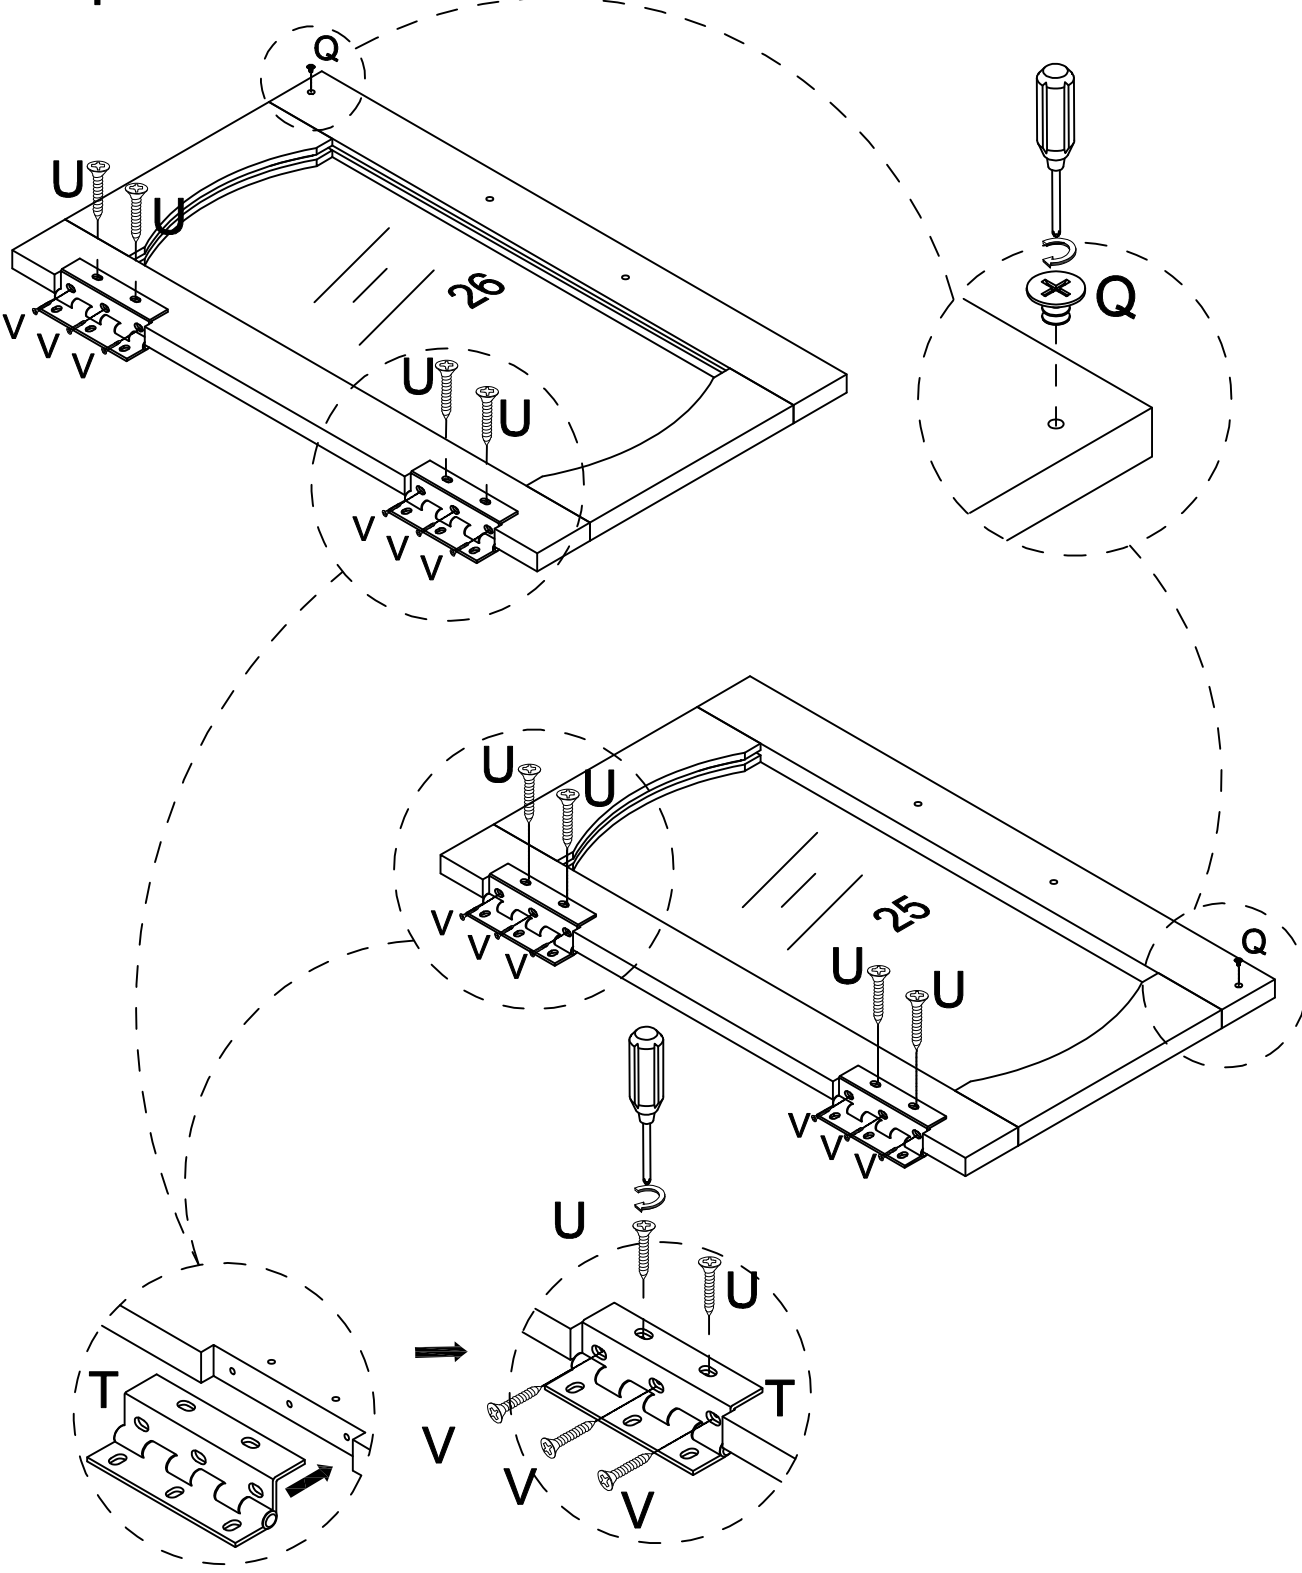

Q	V	U	T
X2	X12	X8	X4


Step 38

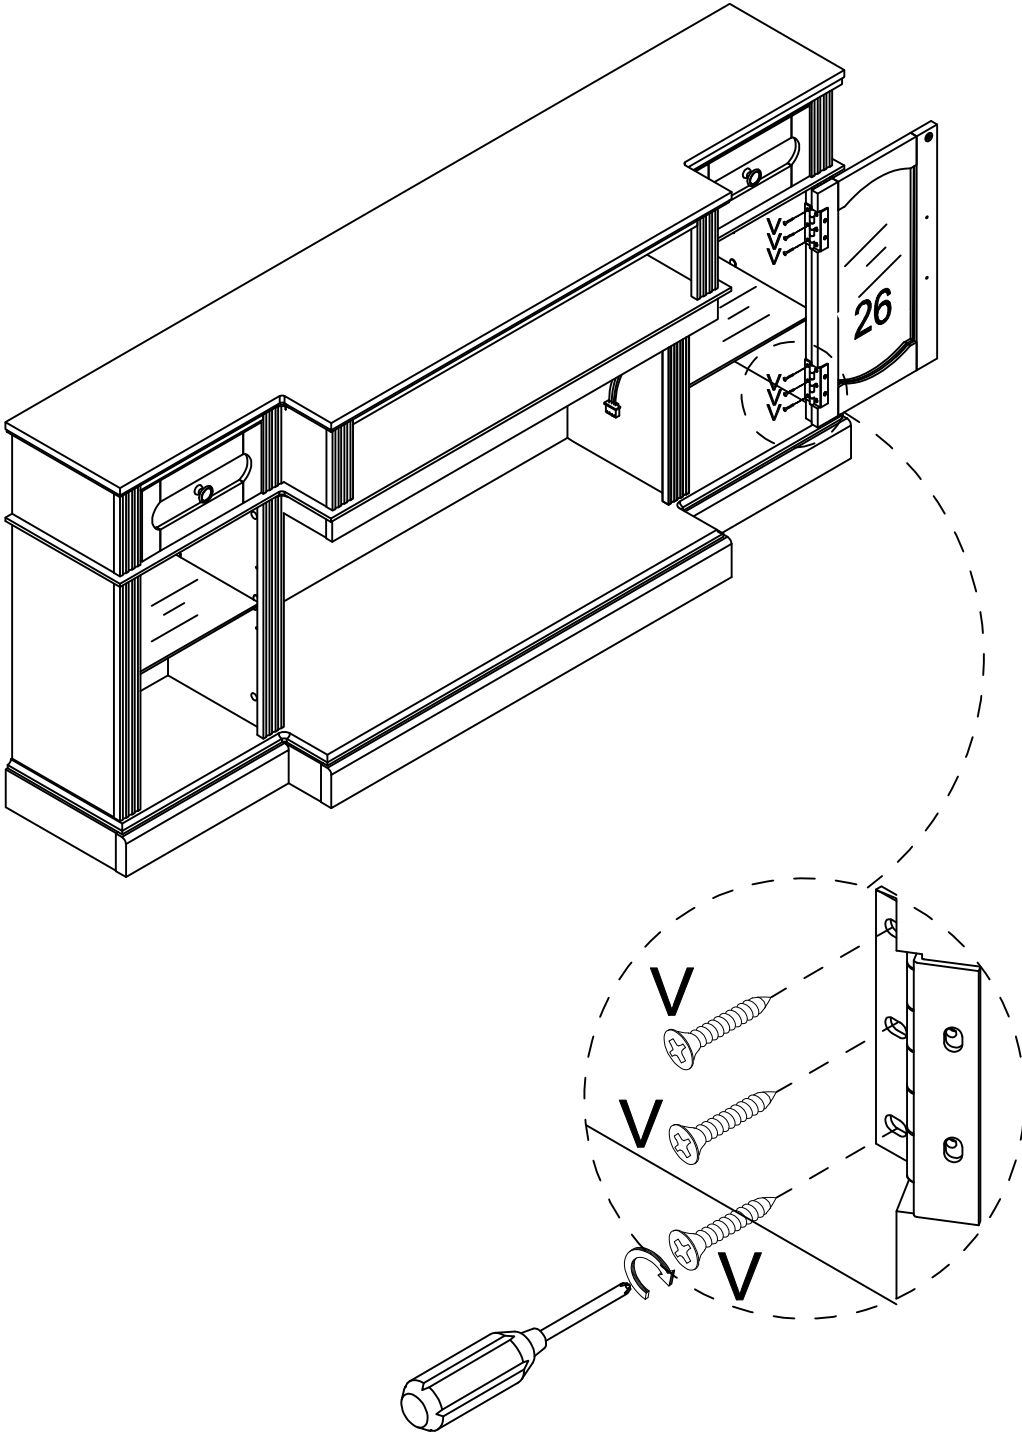

V


X6

Step 39

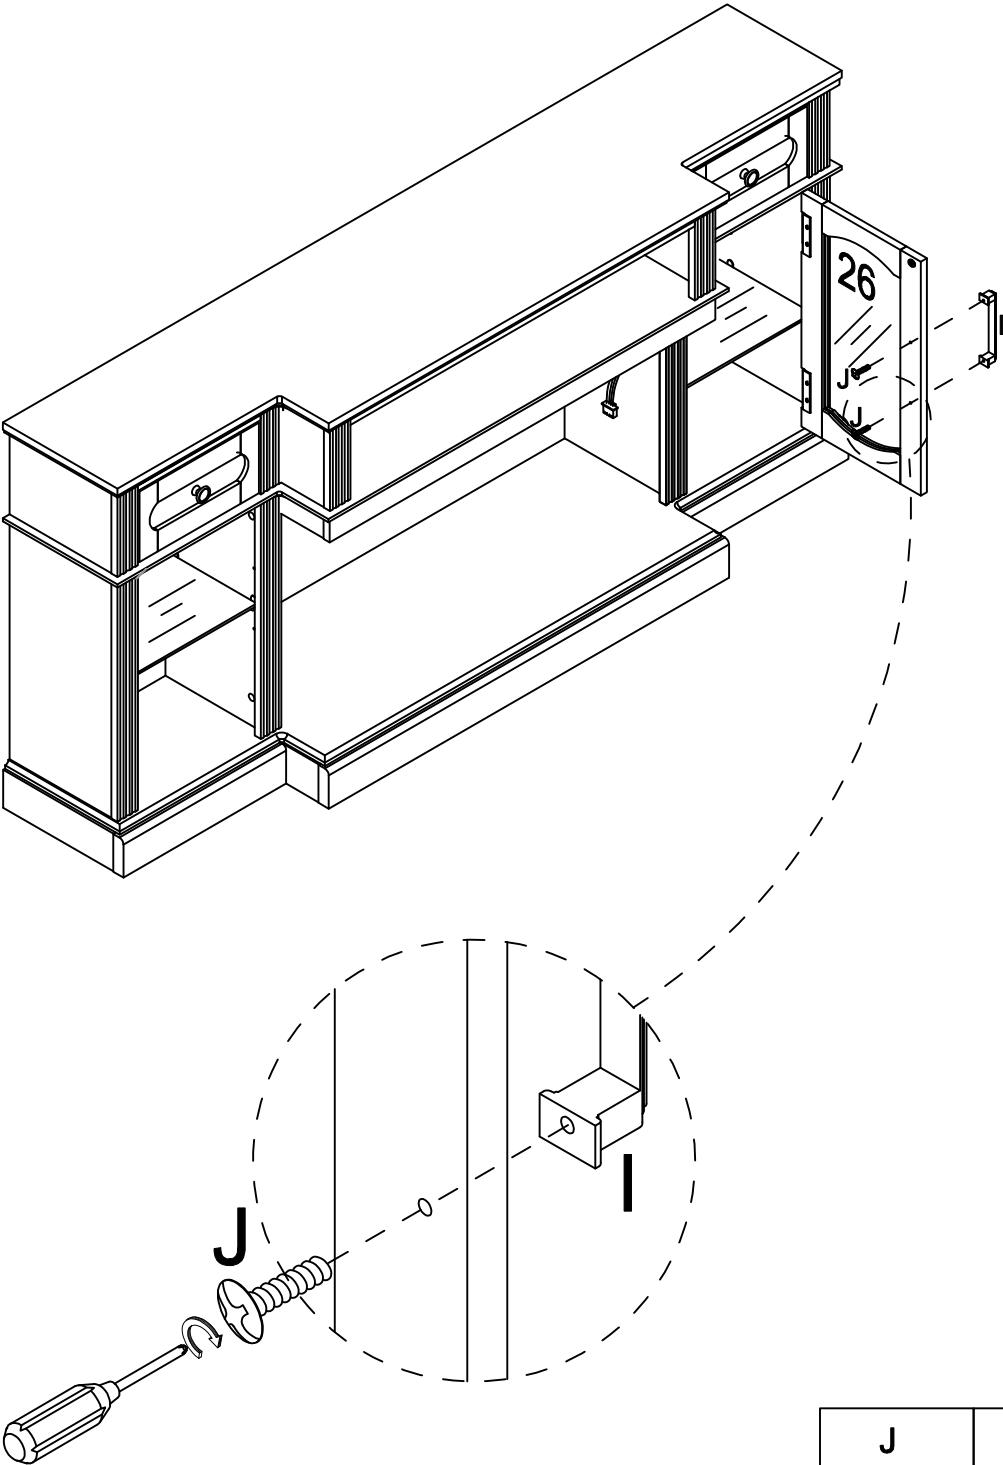

J	I
	
X2	X1


Step 40

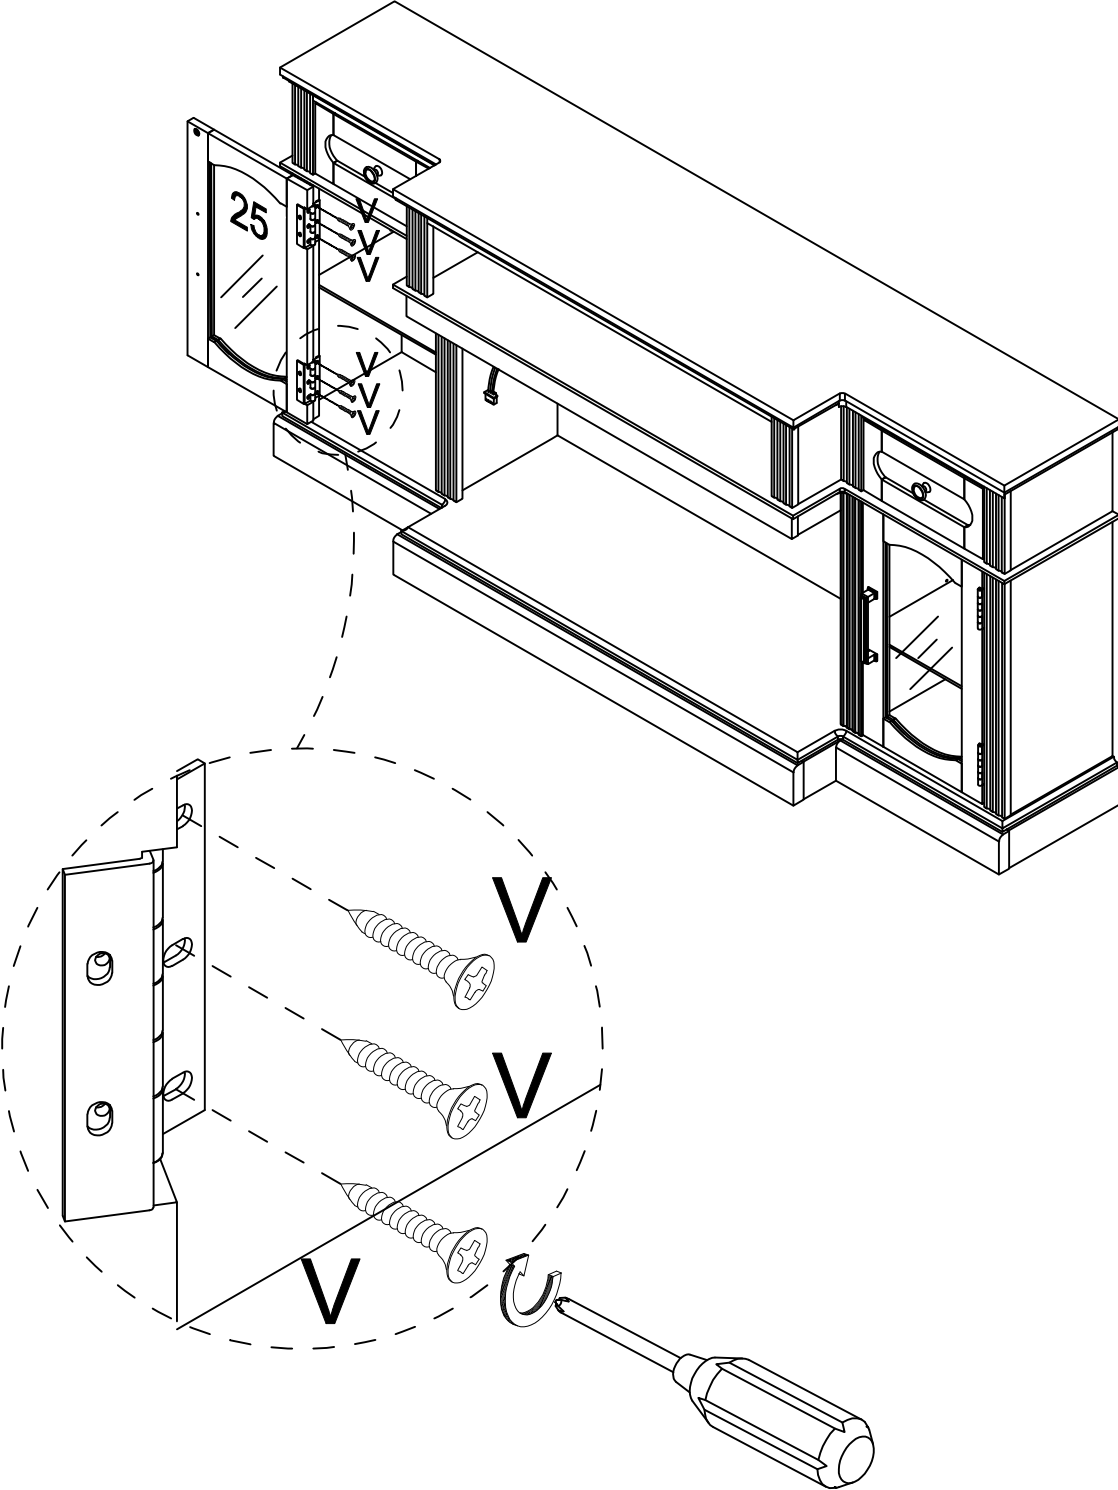

V


X6

Step 41

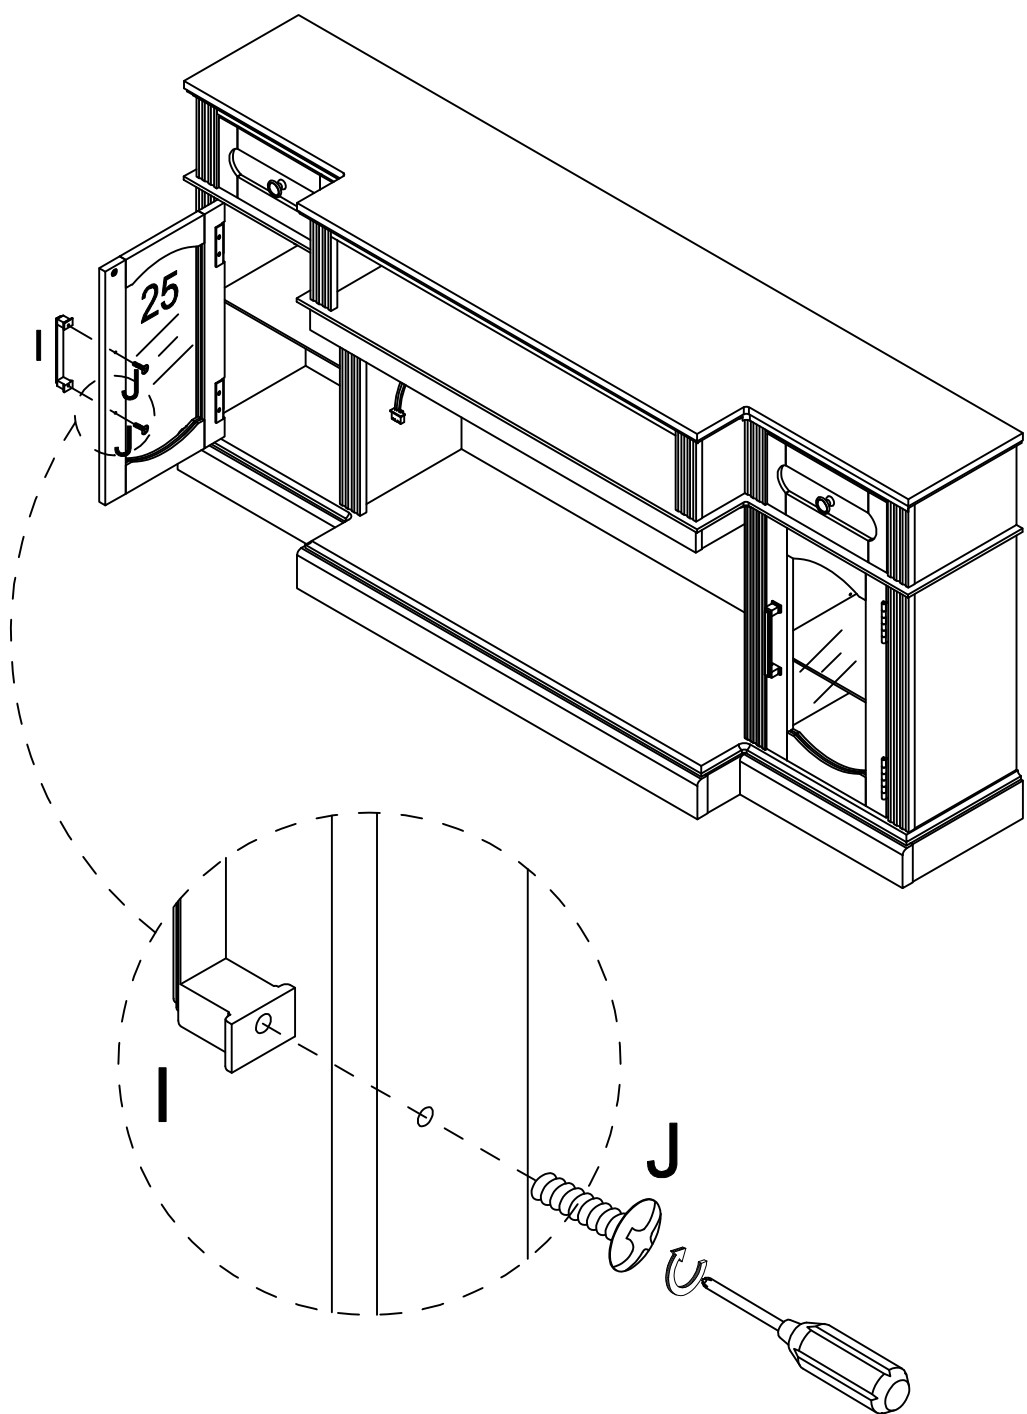


J	I
	
X2	X1

Step 42

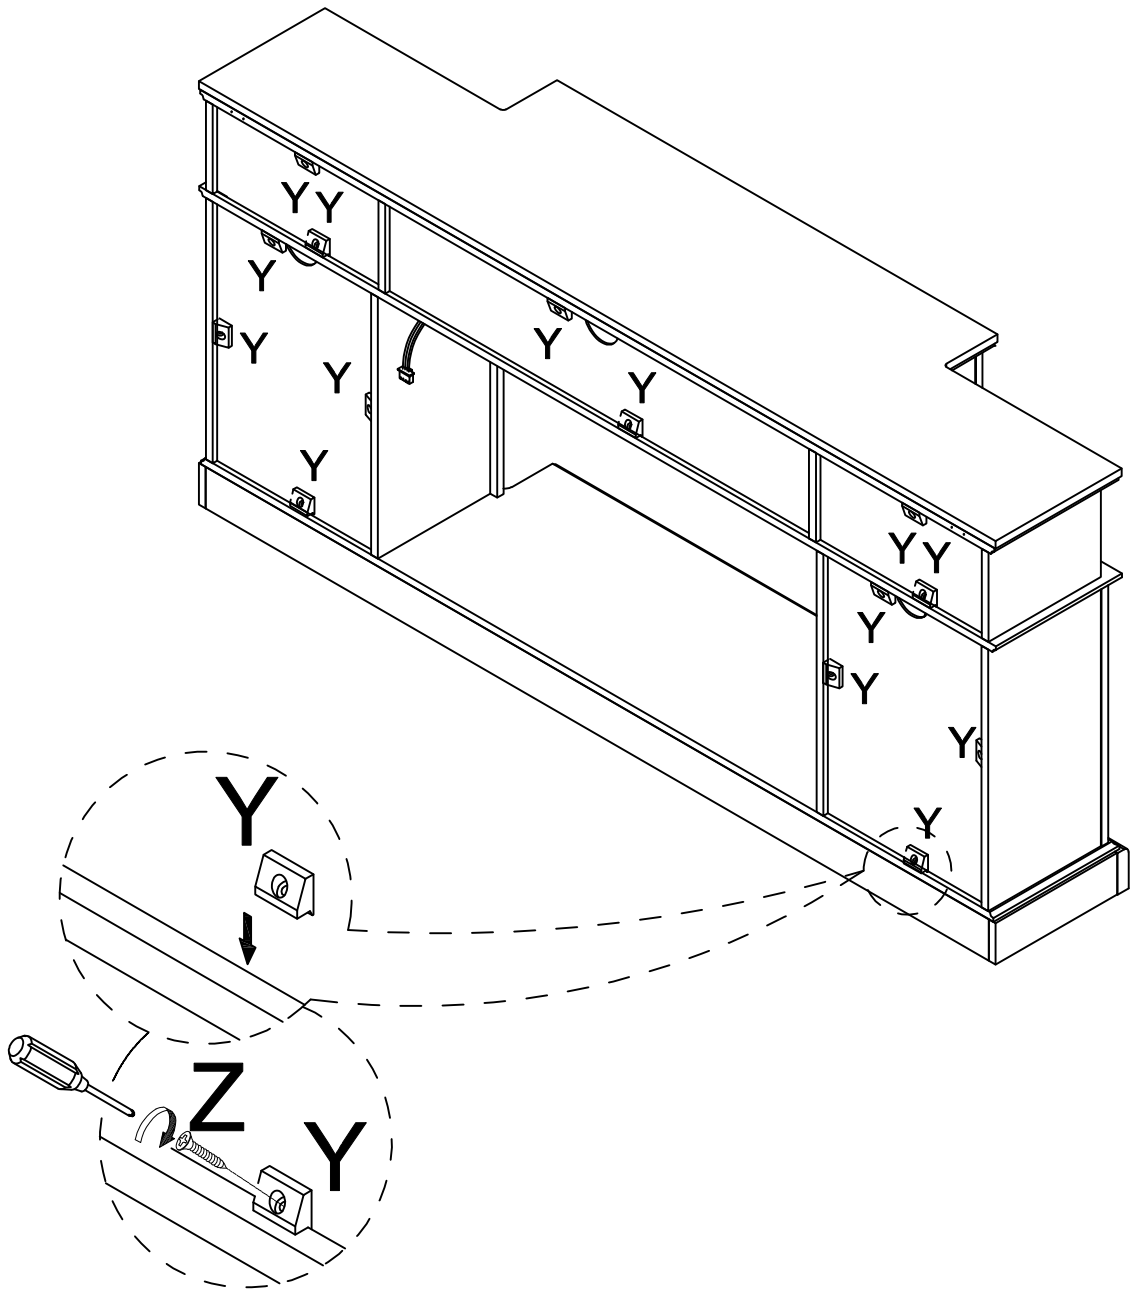


Z	Y
	
X14	X14

Step 43

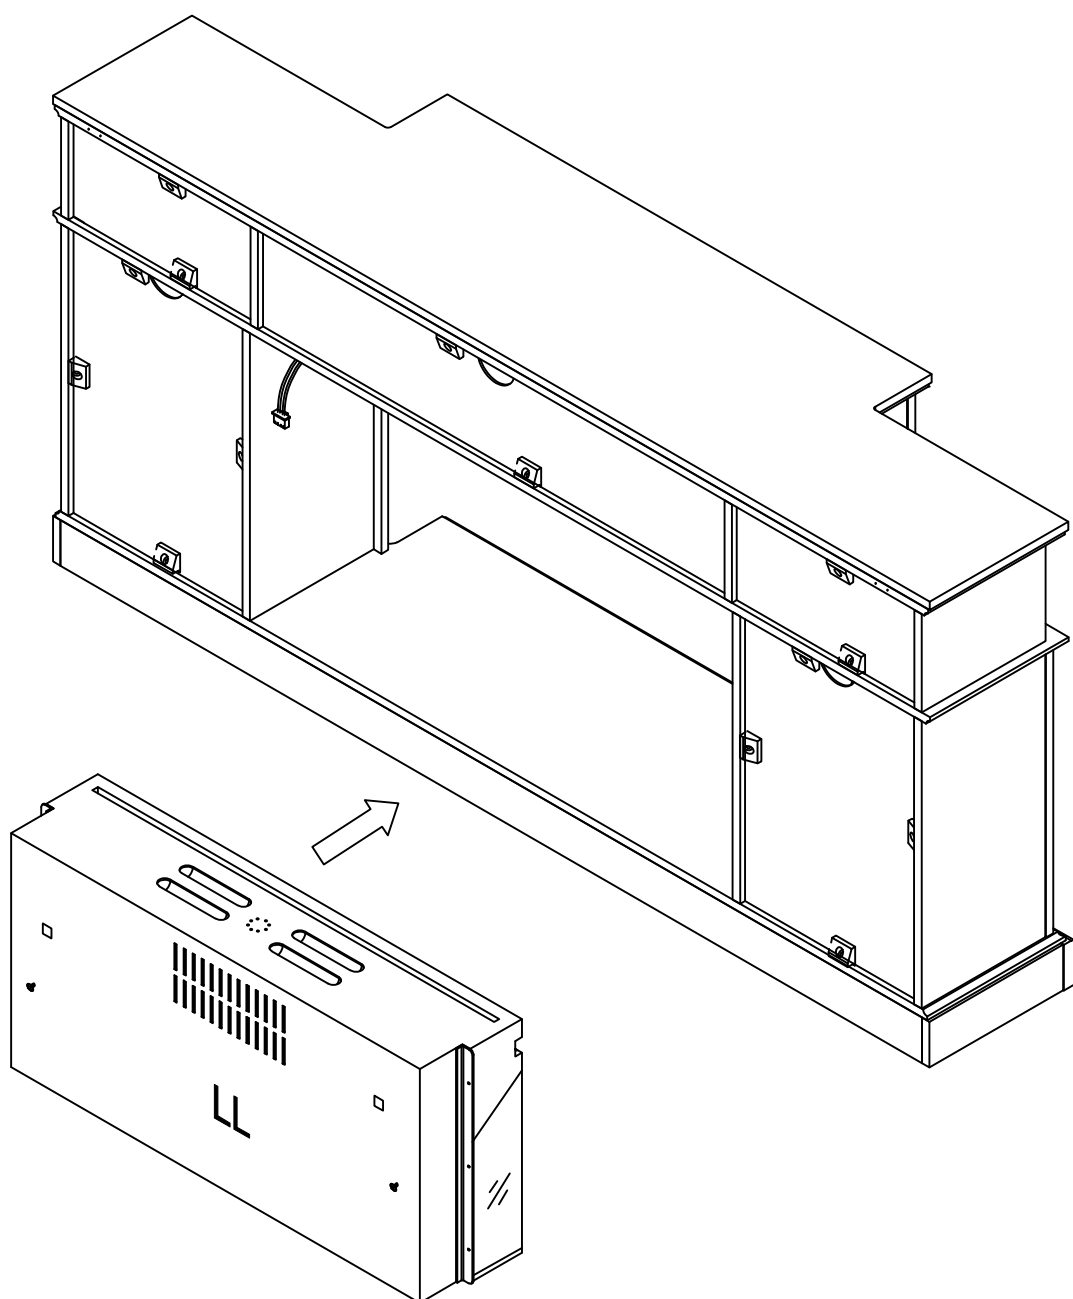


Step 44

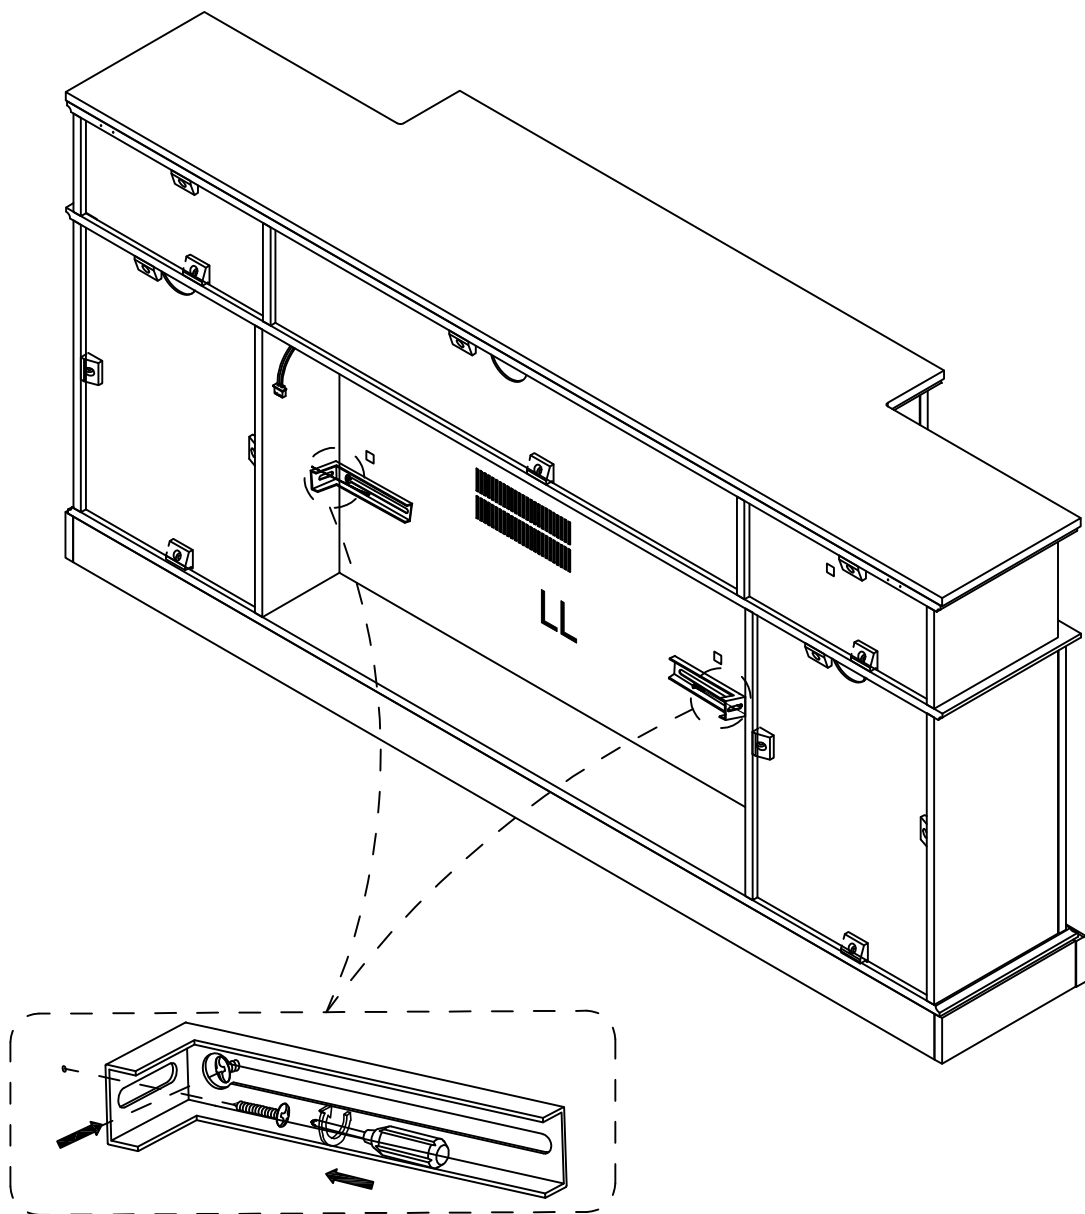






The fireplace blocking parts are in the B packing box, please refer to the fireplace installation instructions for installation steps

Step 45

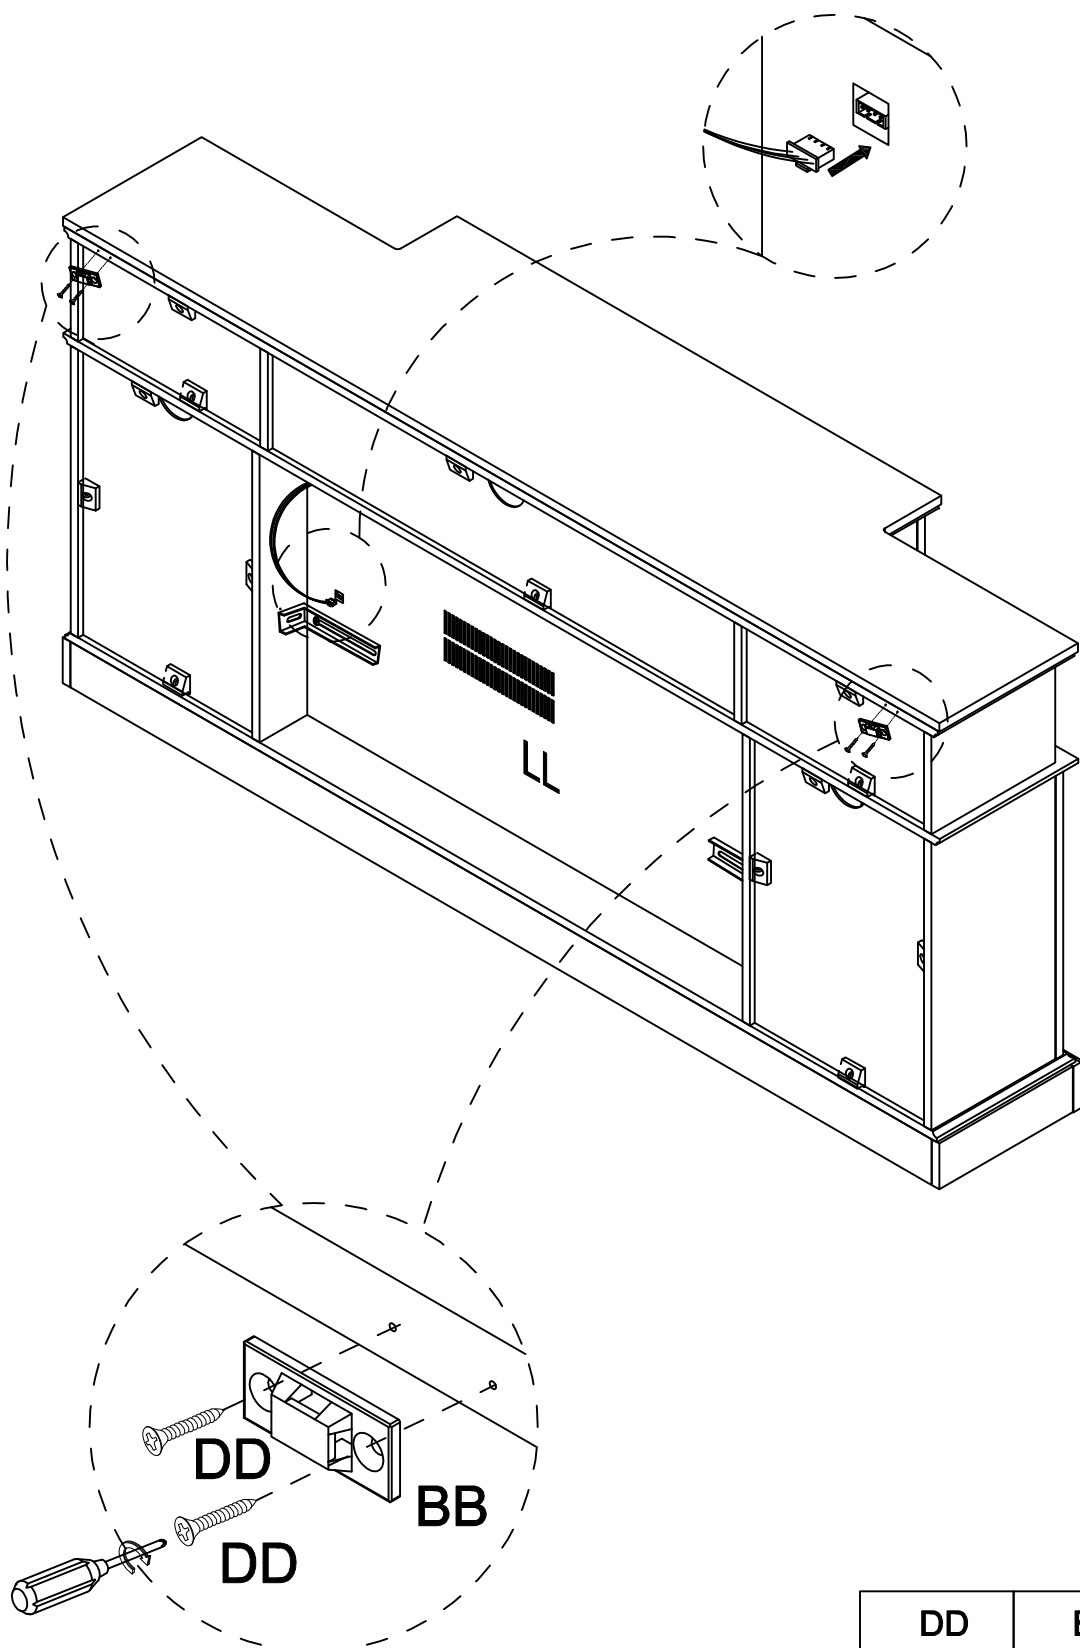

DD	BB
	
X4	X2


Step 46

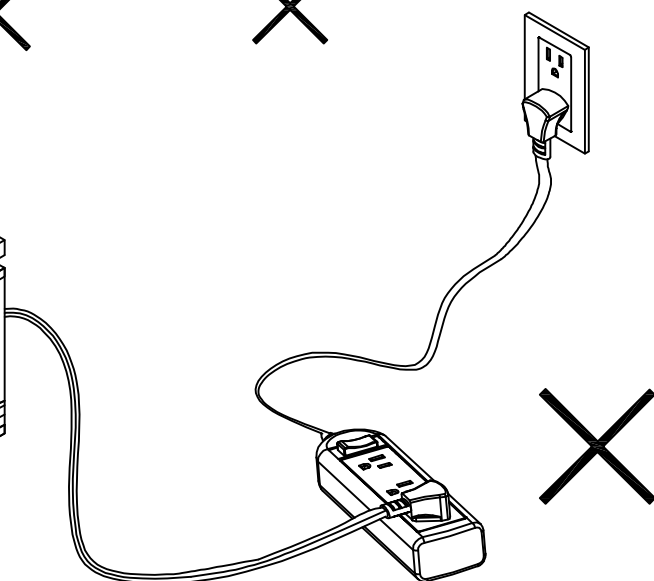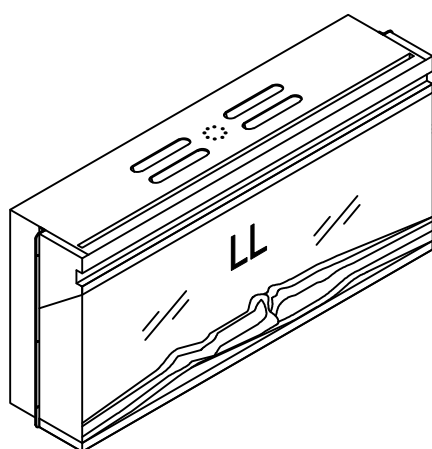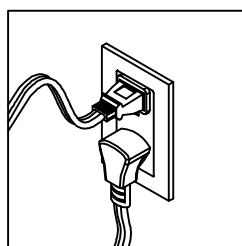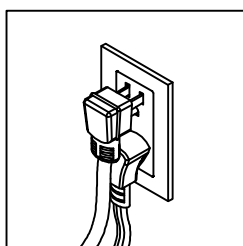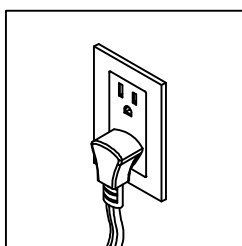


Step 47

Wall

Make four holes 45mm deep

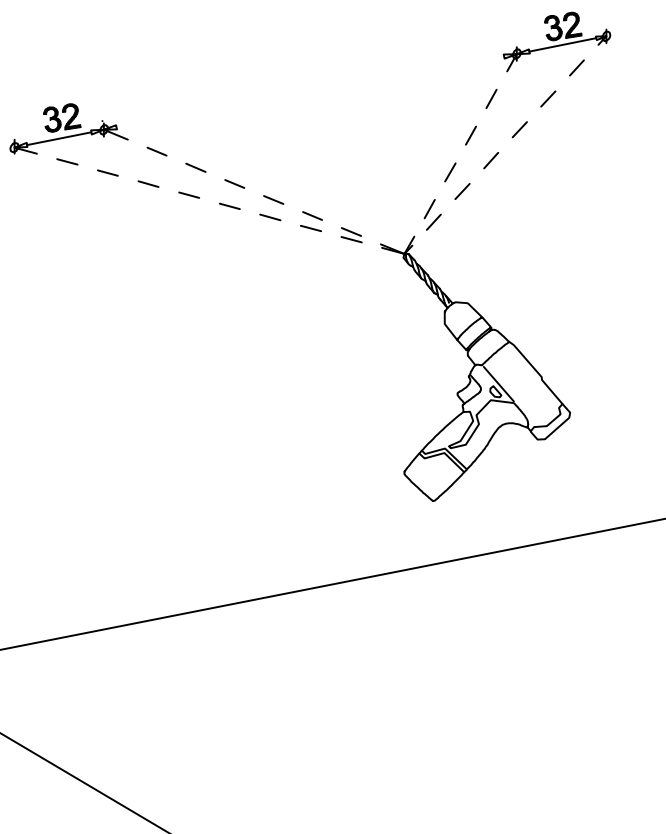


Step 48

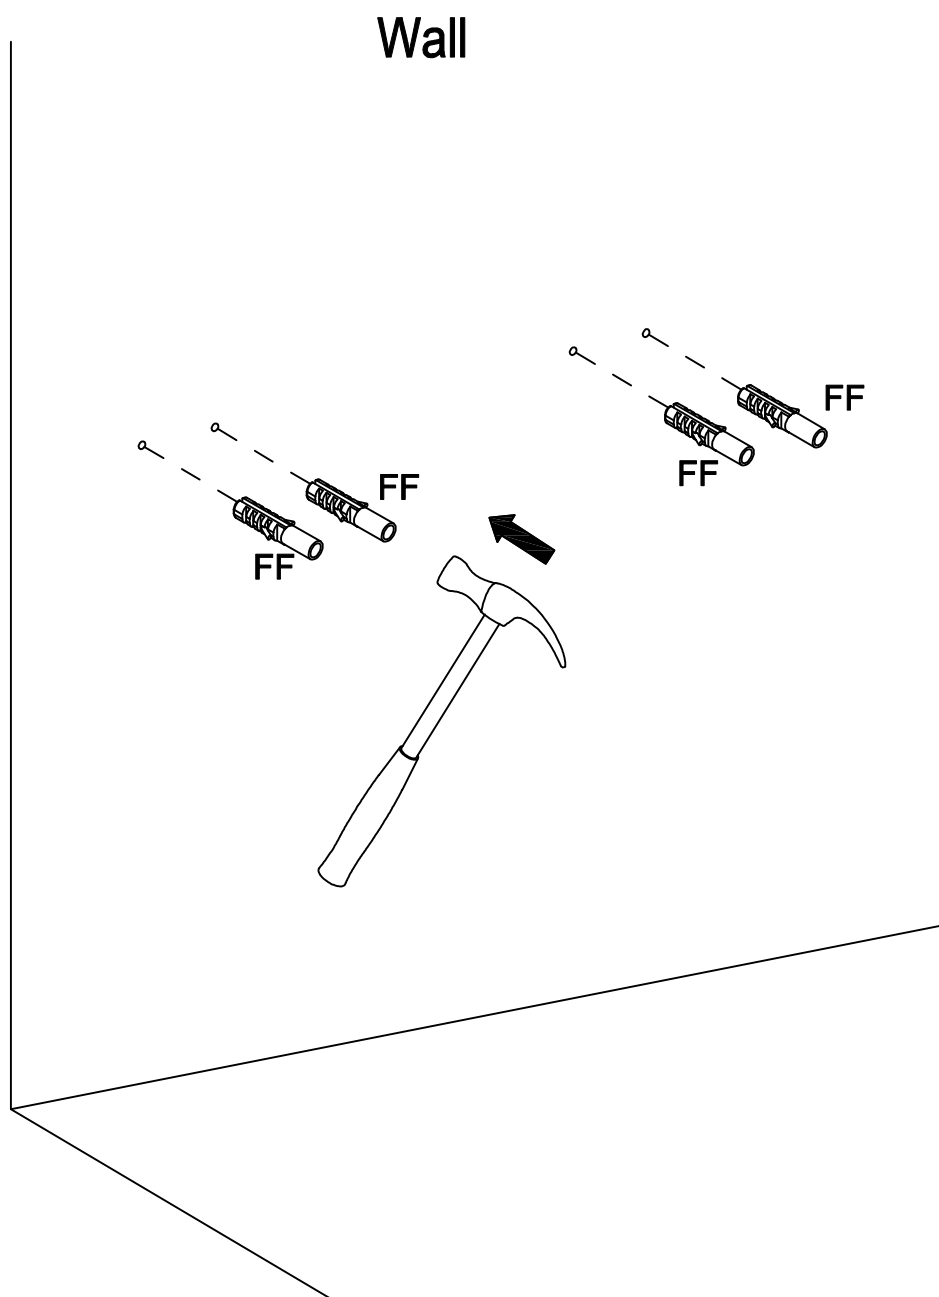

FF


X4

Step 49

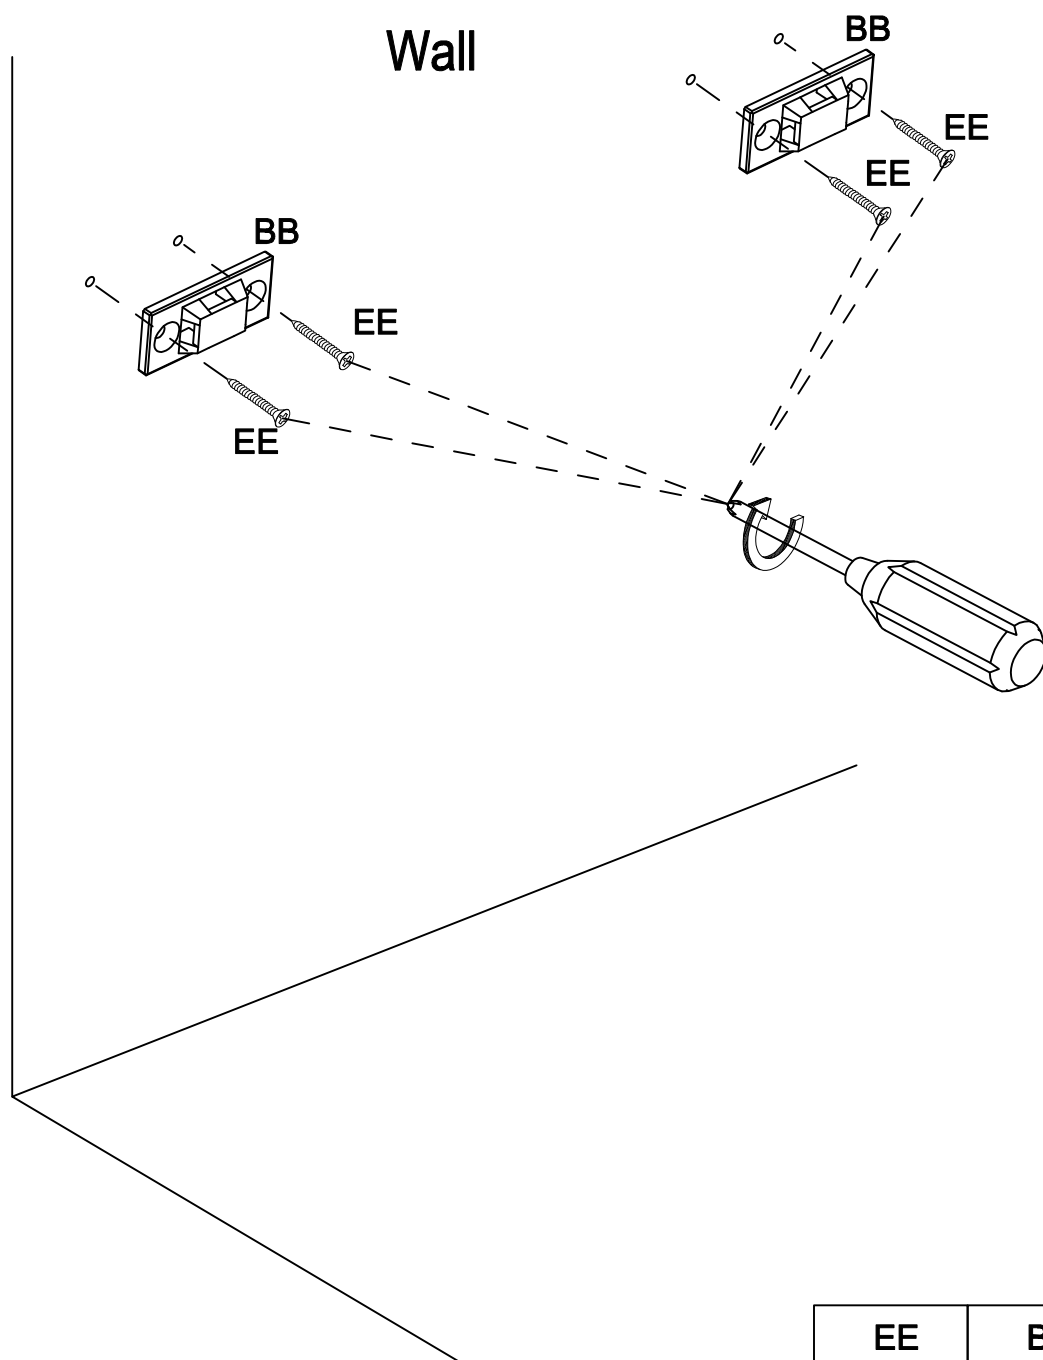

EE	BB
X4	X2

Step 50

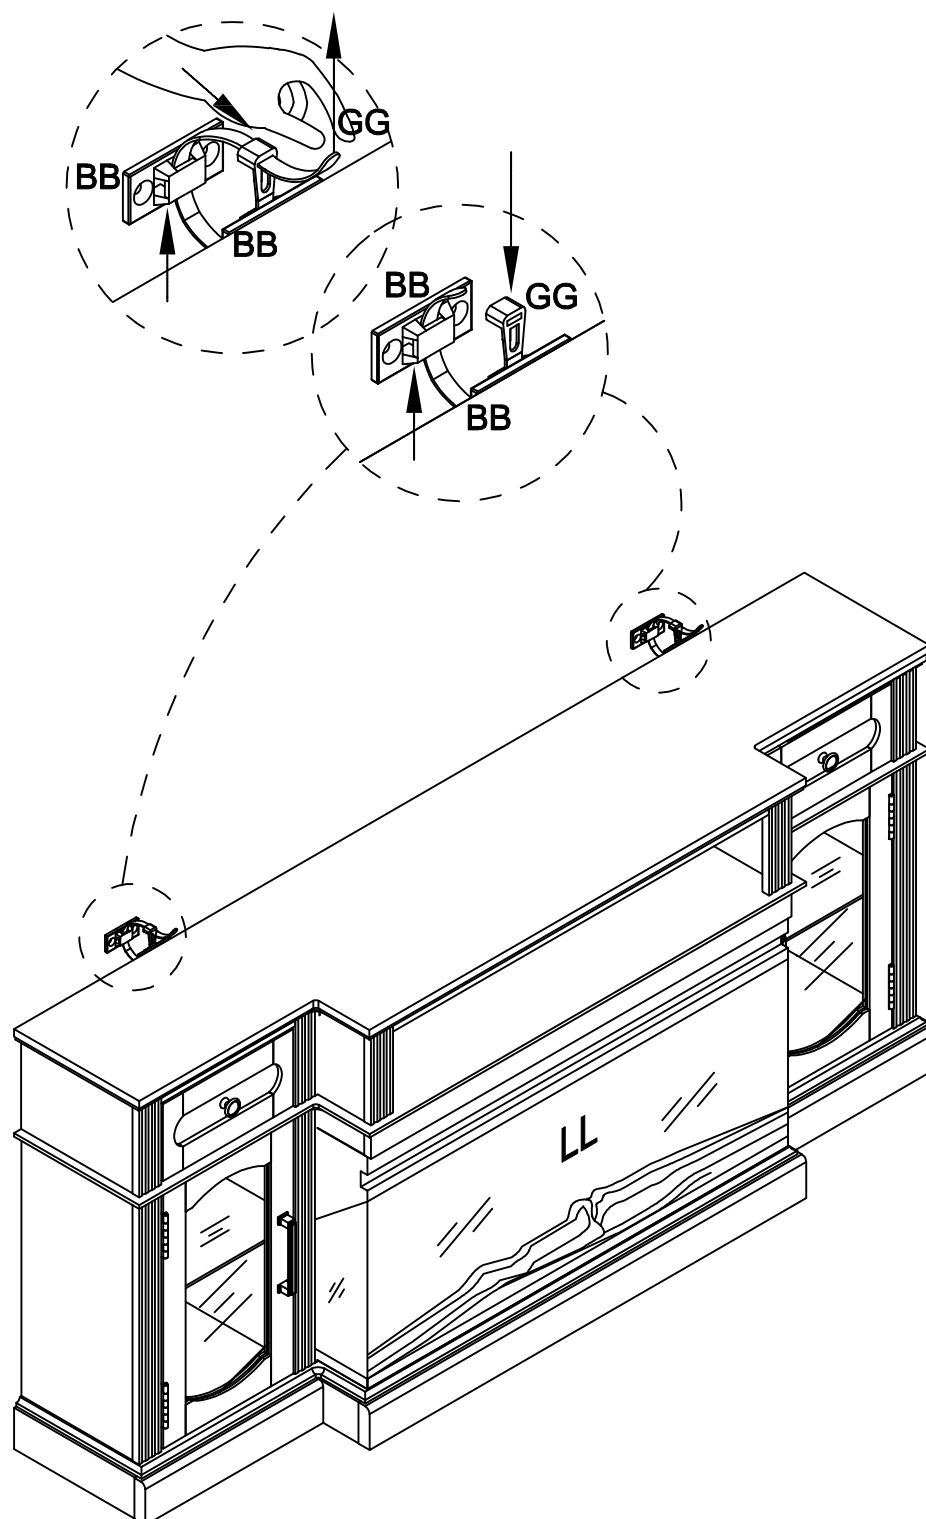

GG

X2

Step 51

ASSEMBLY COMPLETED

