


Item # : LM066-60



Assembly Instructions

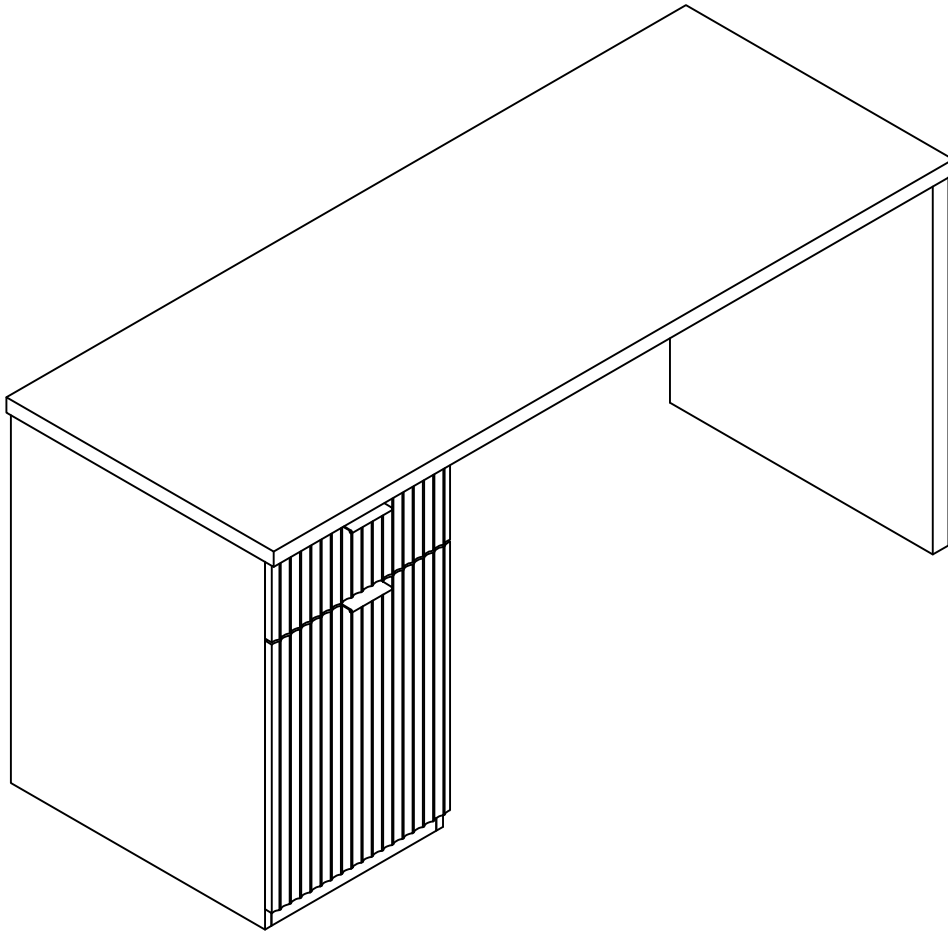

If you have any questions, please follow these steps(“Find Your Orders” – “Problem with the Order” – “Contact Seller”) to contact our customer service. Thanks!


Revsied 25/05/2024

According to your demand, the cabinet can be assembled to the left or right side,thank you !

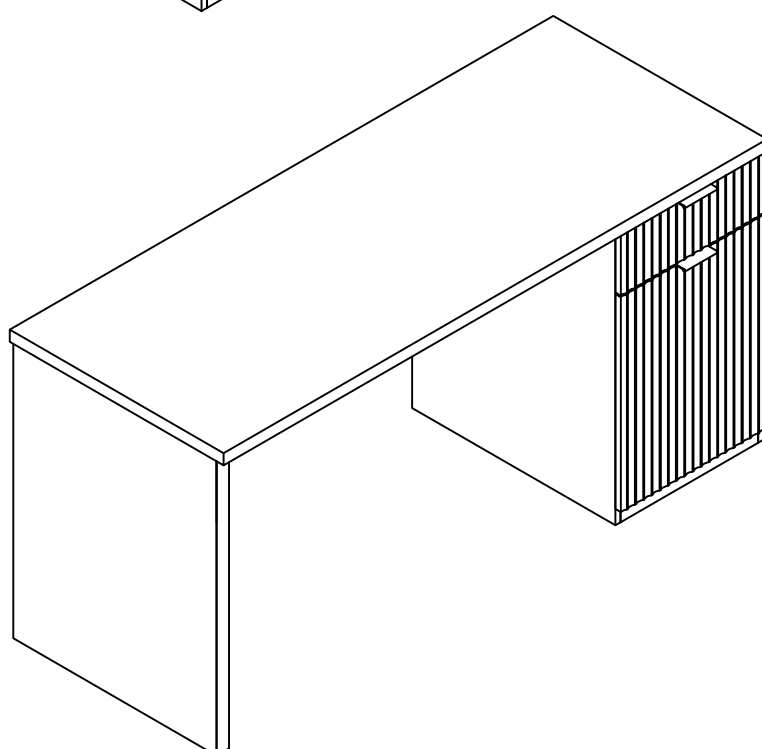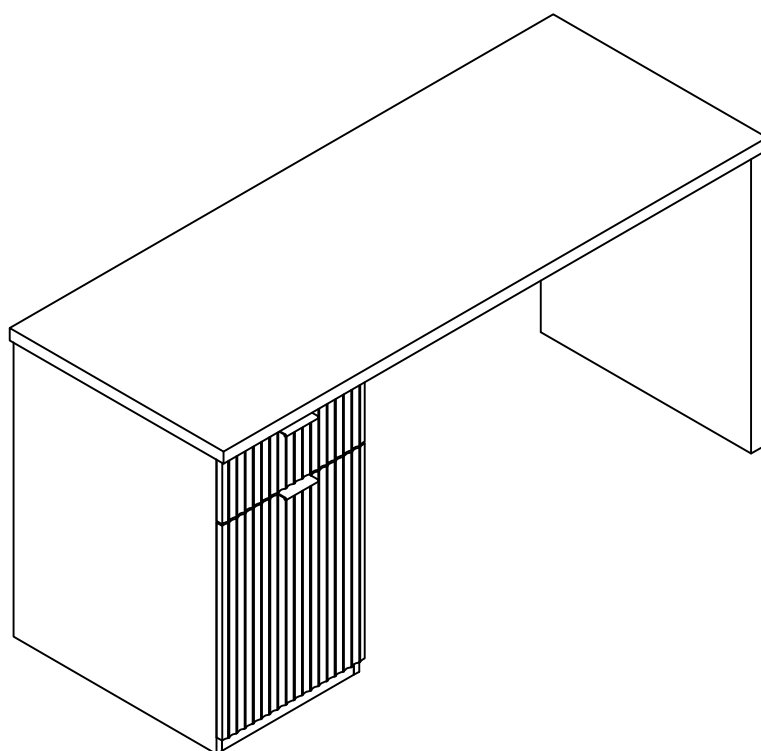


General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

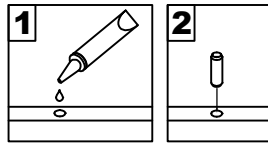


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

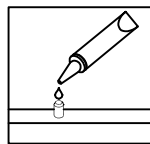


- VI. A Phillips head screwdriver is required for the assembly of this product .

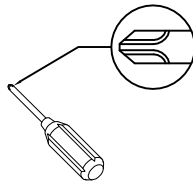





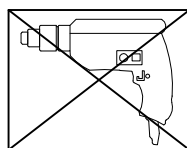



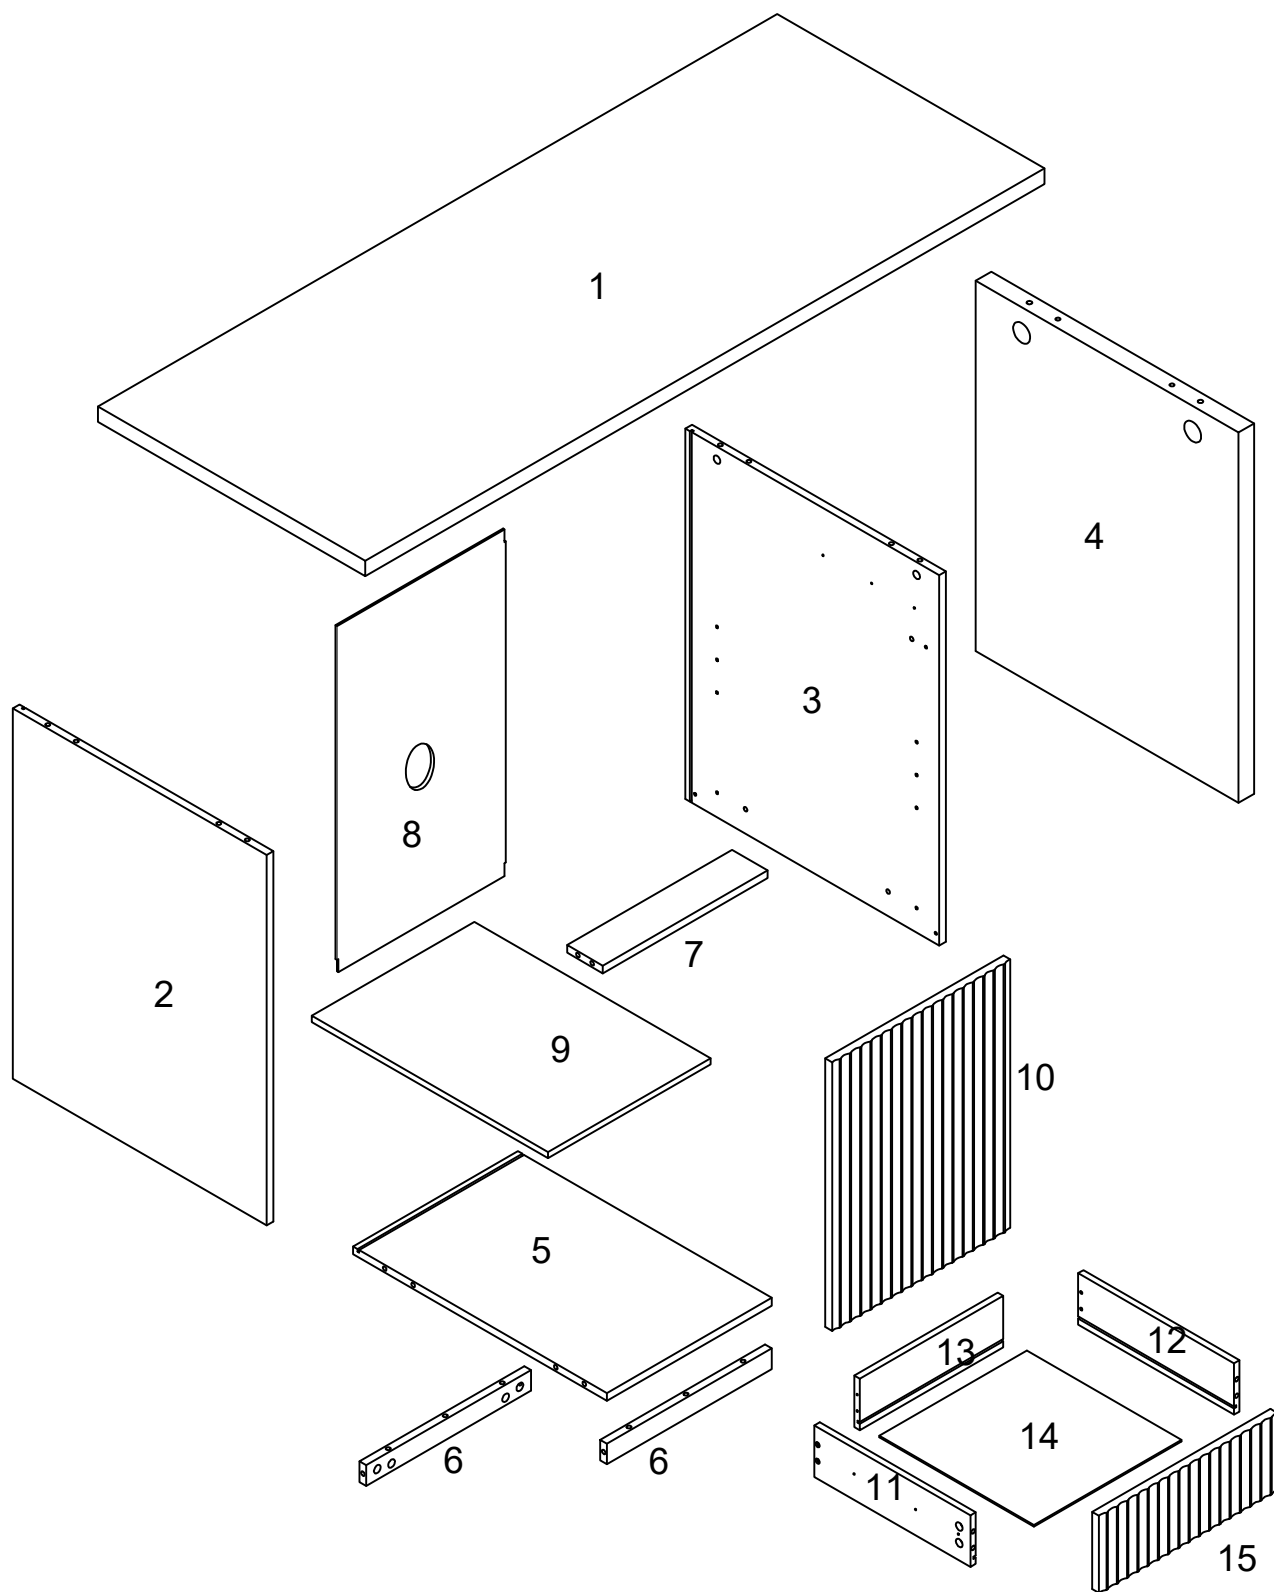











- VII. Power tools should not be used to assemble this product .




Parts List



Hardware List


A		Ø8x30mm	Wooden dowel	14 pcs
B		Ø6x35mm	Cam bolt	22 pcs
C		Ø15x11mm	Cam lock	18 pcs
D		Ø15x9mm	Cam lock	4 pcs
E		Ø30mm	Sticker	22 pcs
F		Ø4x32mm	Screw	4 pcs
G		Ø5/16in	Nuts	2 pcs
H		Ø5/16in	Half-moon part	2 pcs
I		Ø5/16in	Wrench	1 pcs
J		Ø8x95mm	Screw	2 pcs
K			Handle	2 pcs
L		12"	Drawer slides	1 pc
M		Ø3x12mm	Screw	16 pcs
N		Ø5x13x26mm	Shelf support pin	4 pcs
O		Ø35	Big Bend Hinge	2 pcs
P		Ø3.5x14mm	Screw	12 pcs
Q			Plastic wedge	4 pcs
R		Ø3x17mm	Screw	4 pcs
X			Plastic cap	2 pcs
T			Glue tube	1 pc

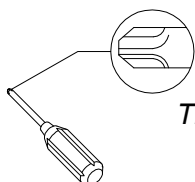


Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*


Step 1

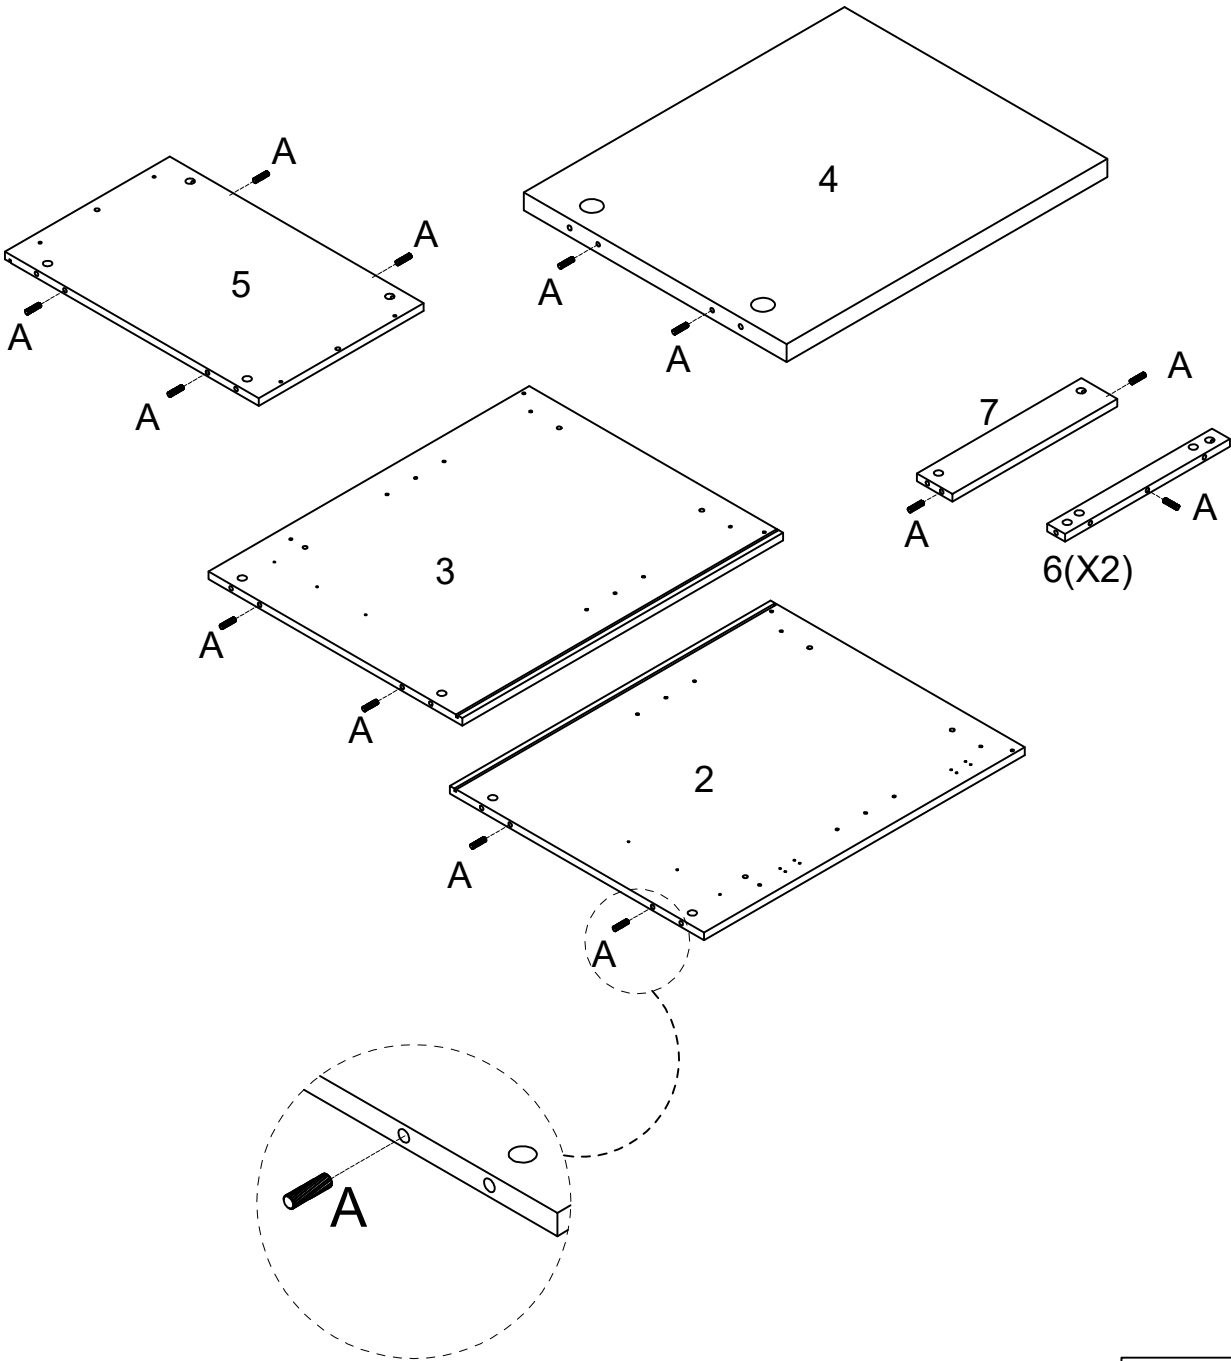


A

X14

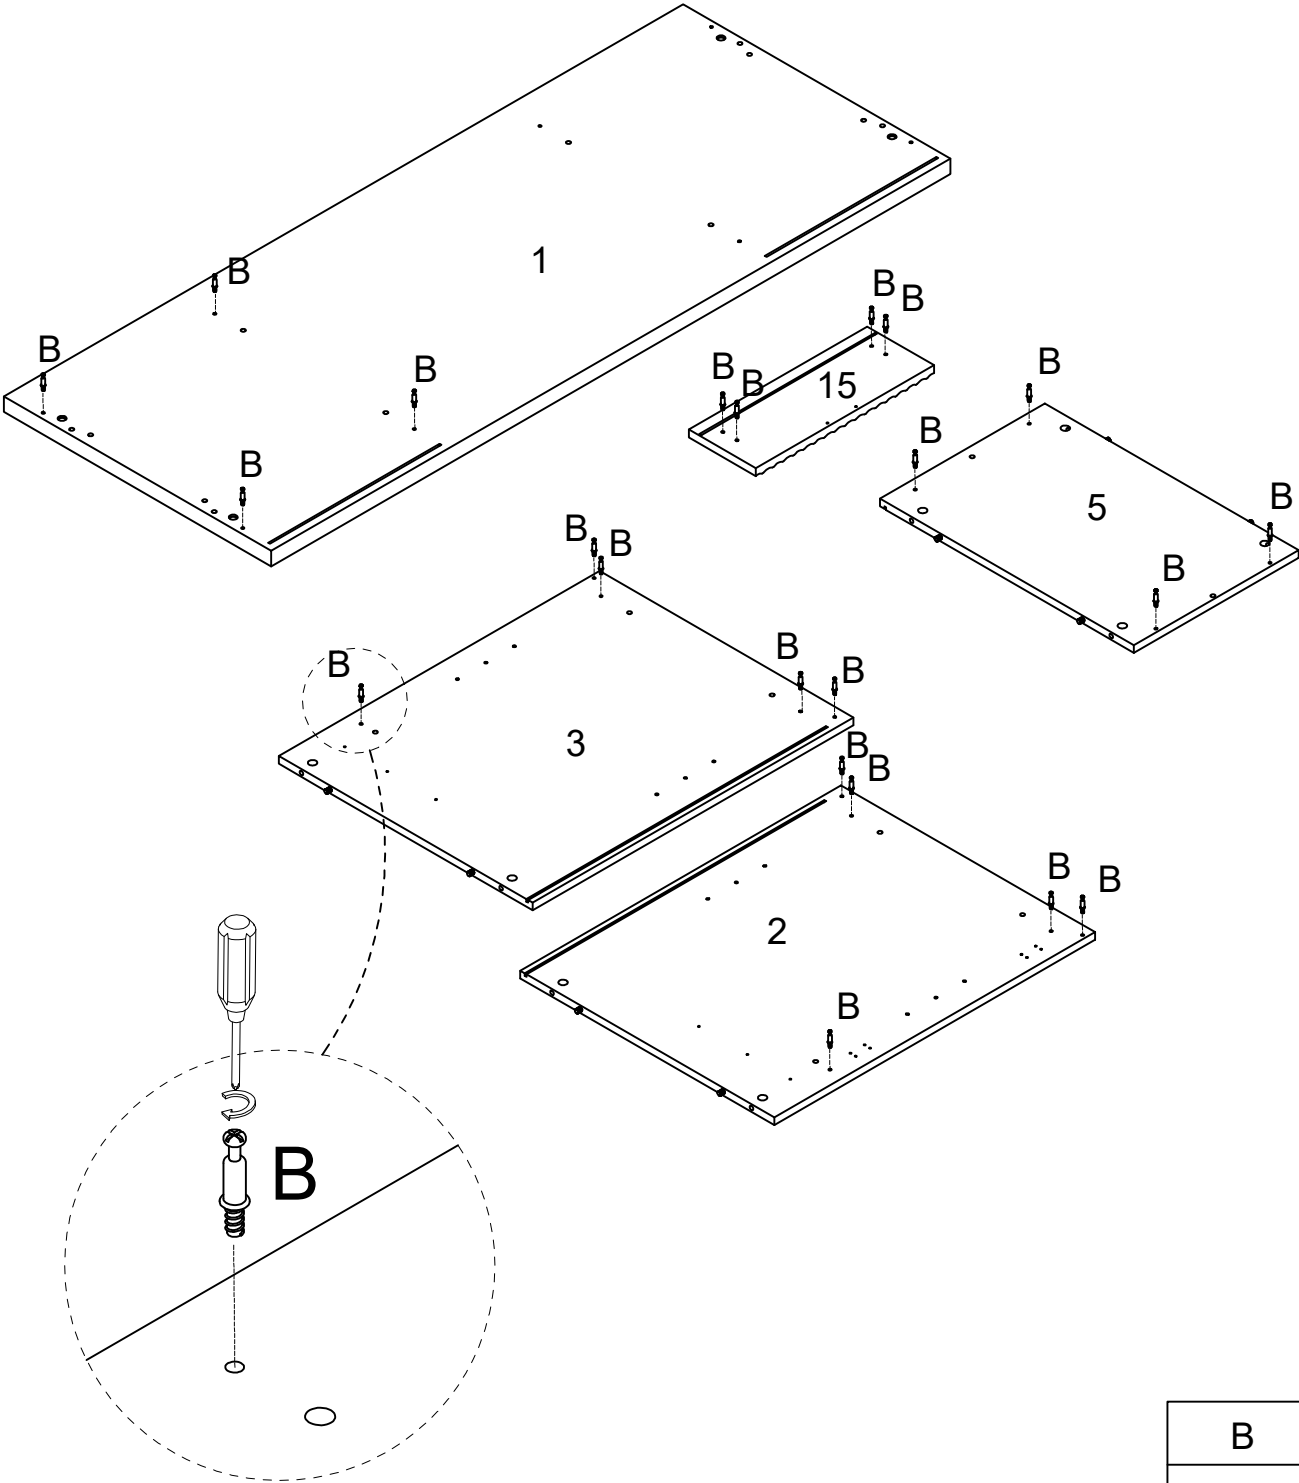Step 2




B

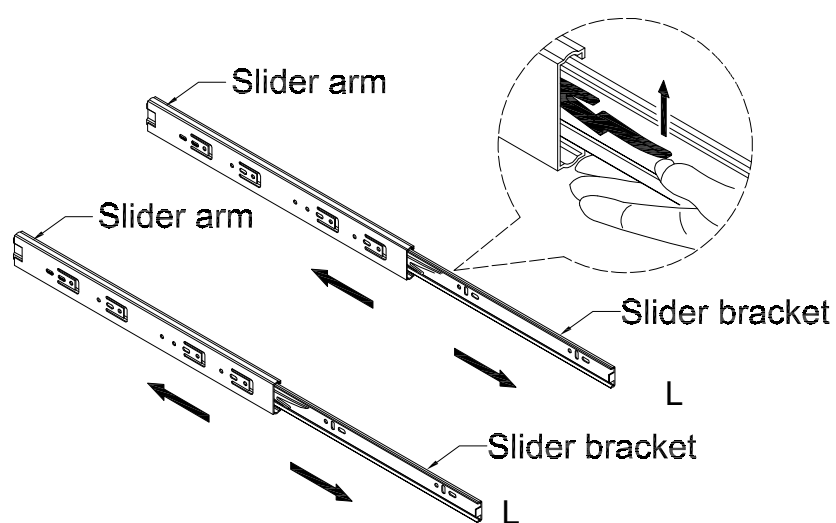X22

Step 3





Put slider bracket into slider arm as per diagram.

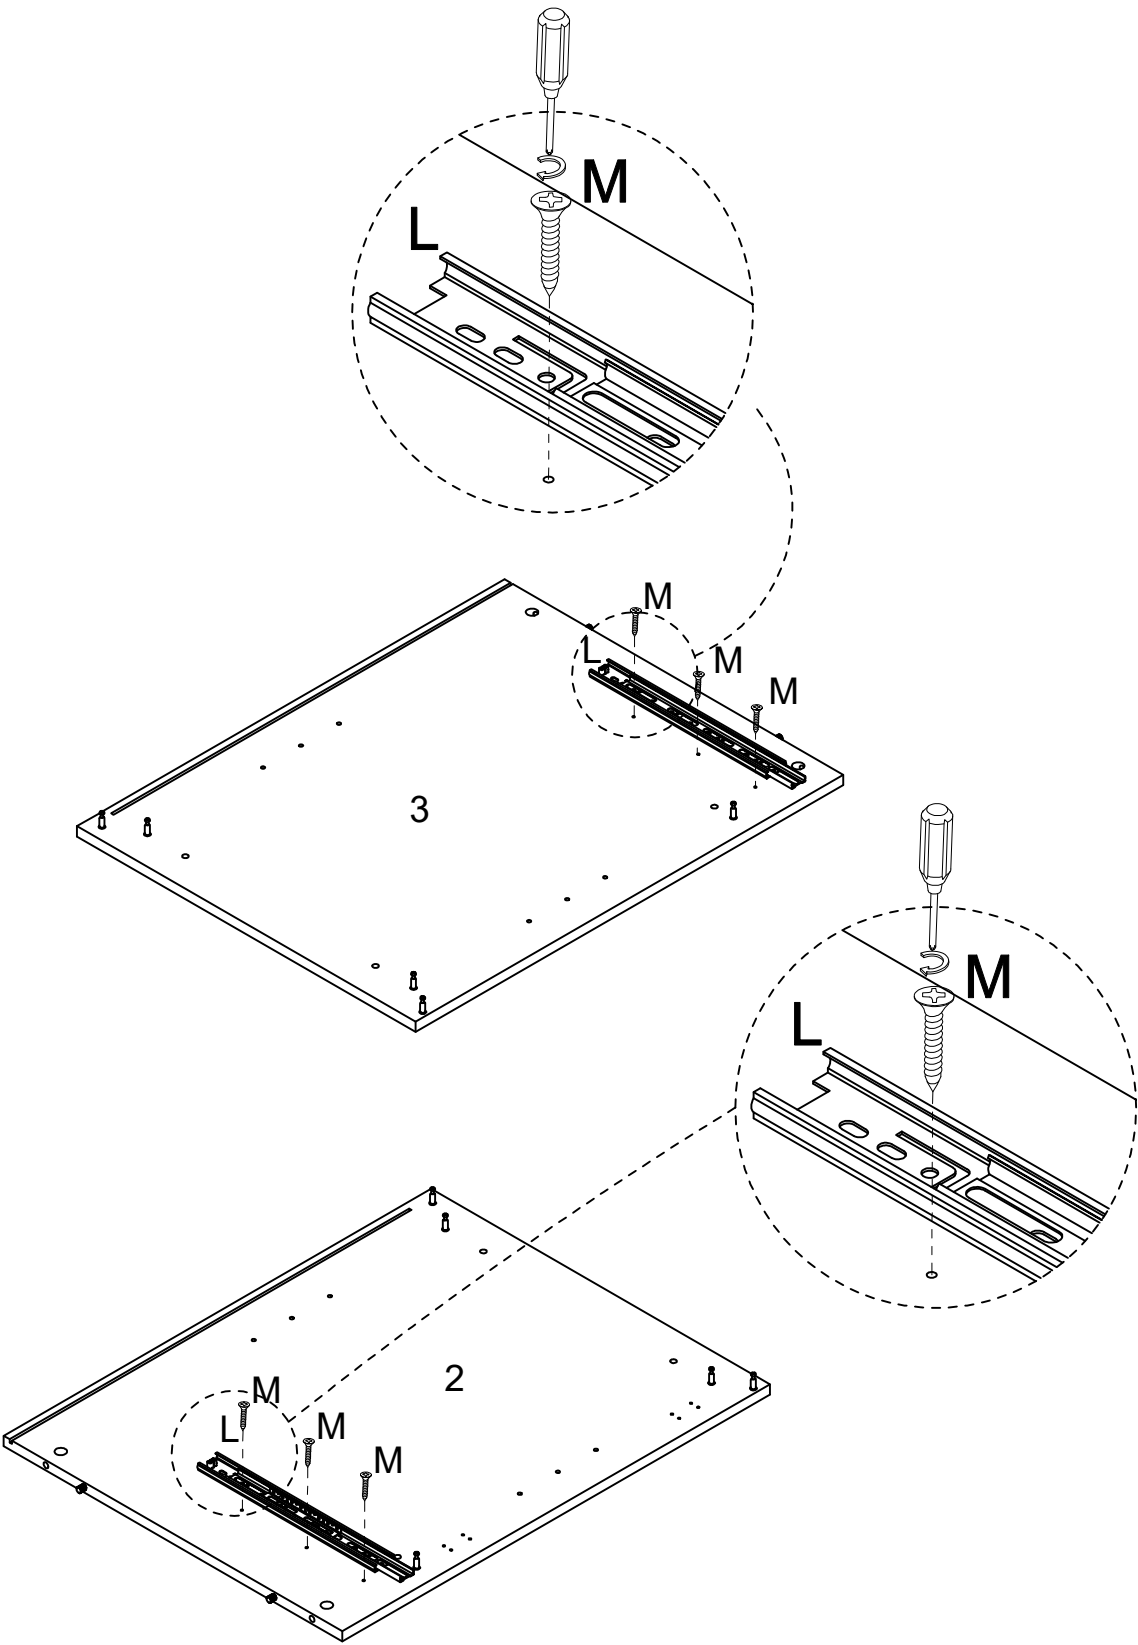
Step 4





M	L
X6	X1


Step 5

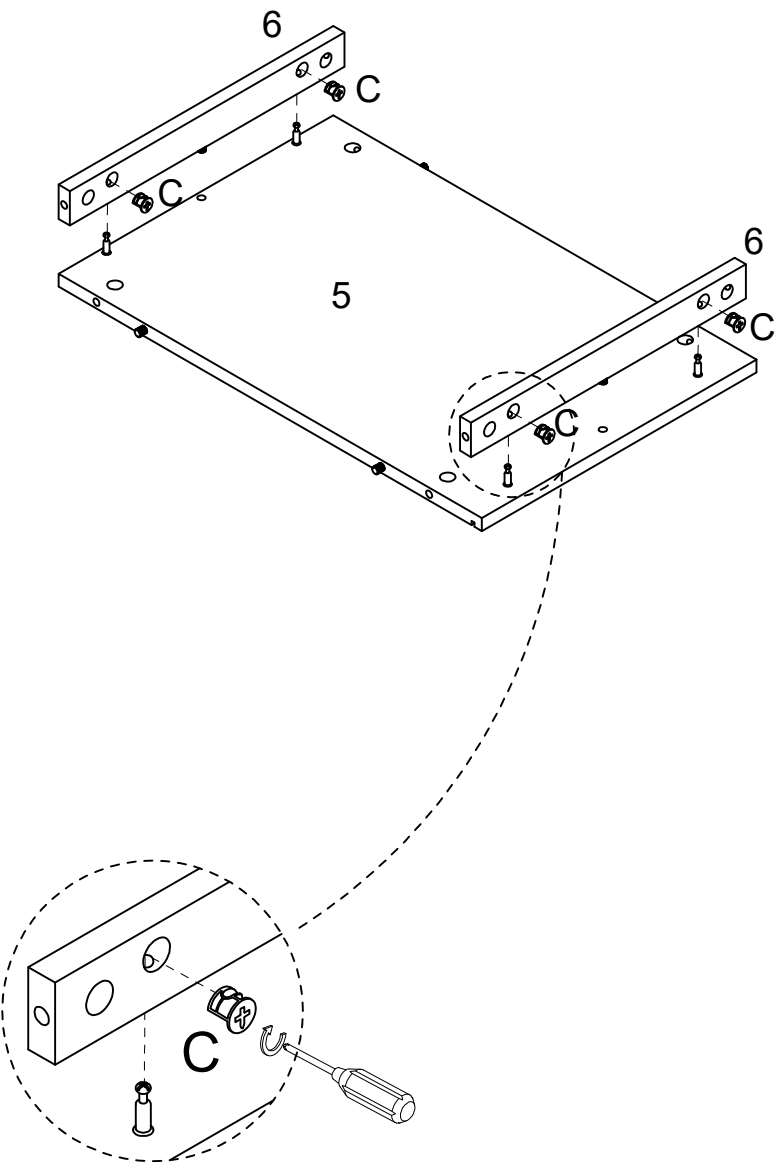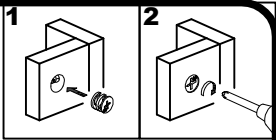



C

X4

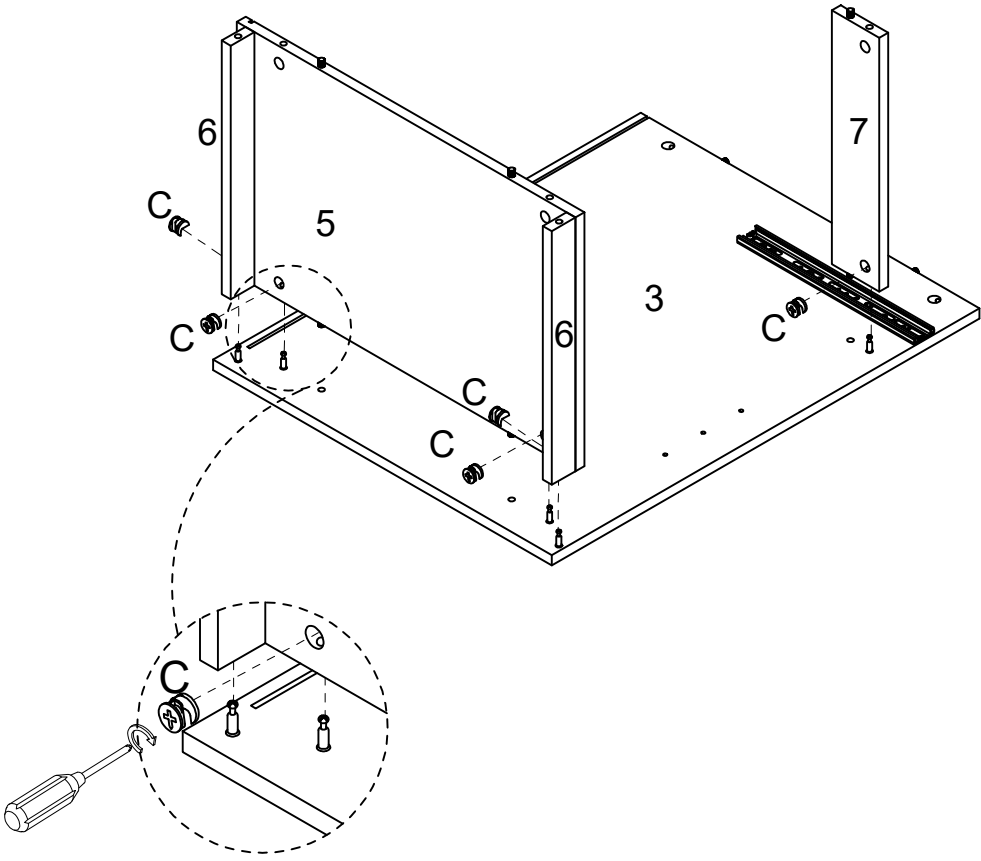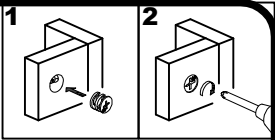
Step 6




C

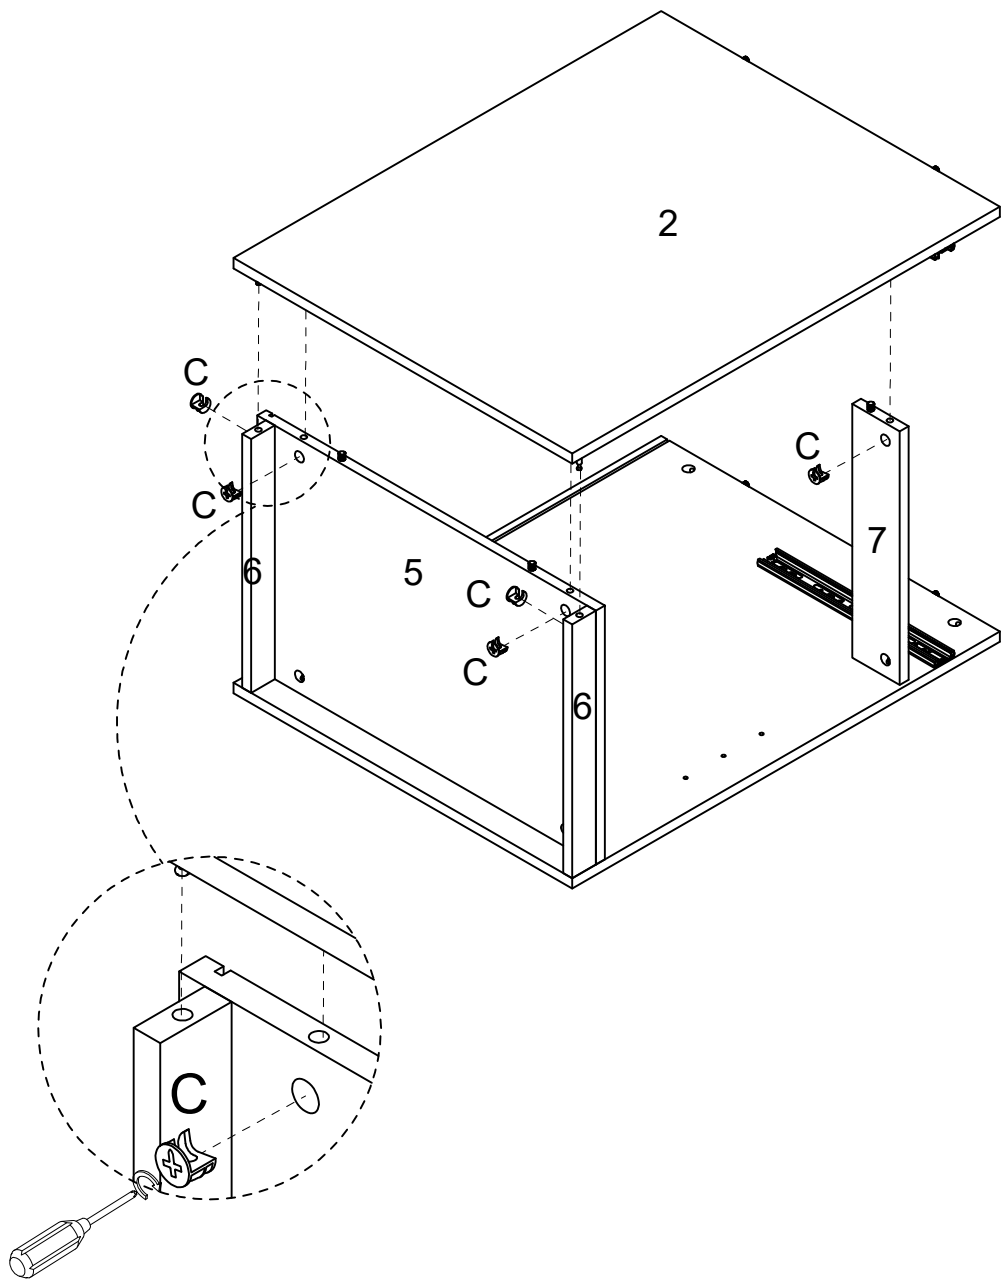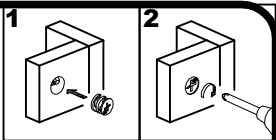X5

Step 7





C

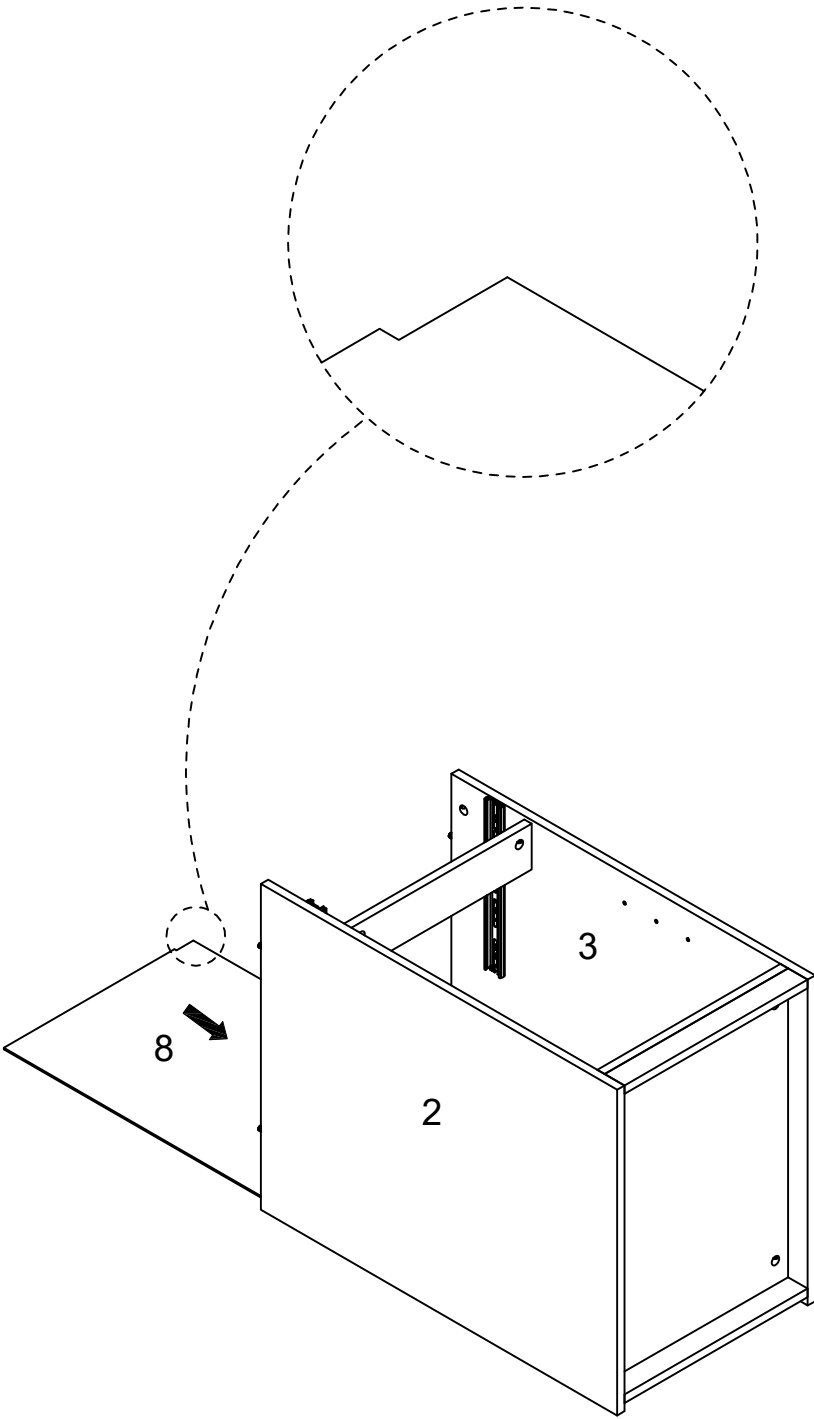X5

Step 8

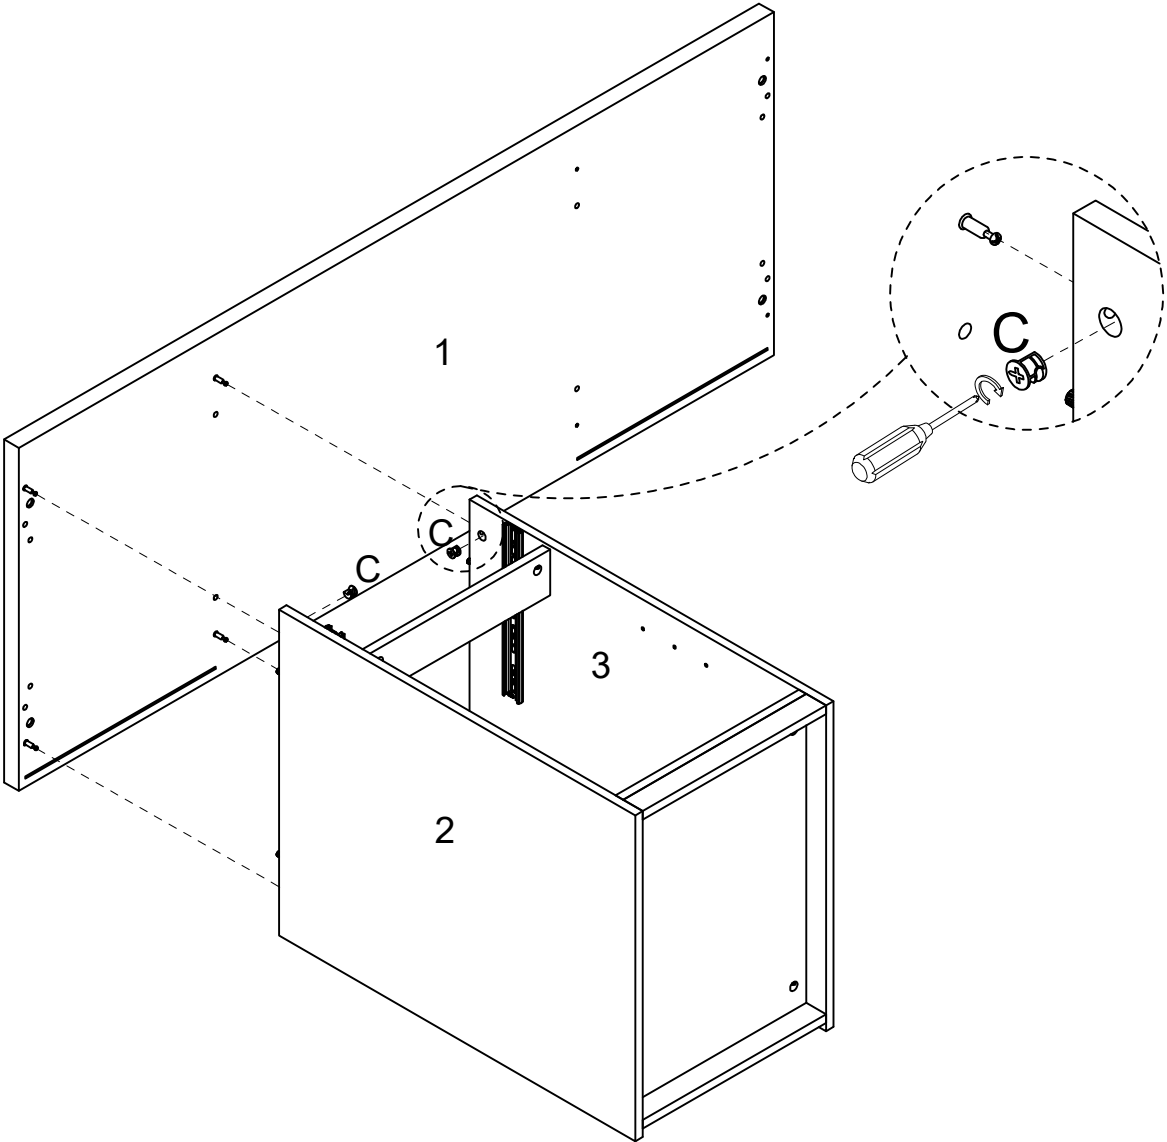



Step 9




C

X4

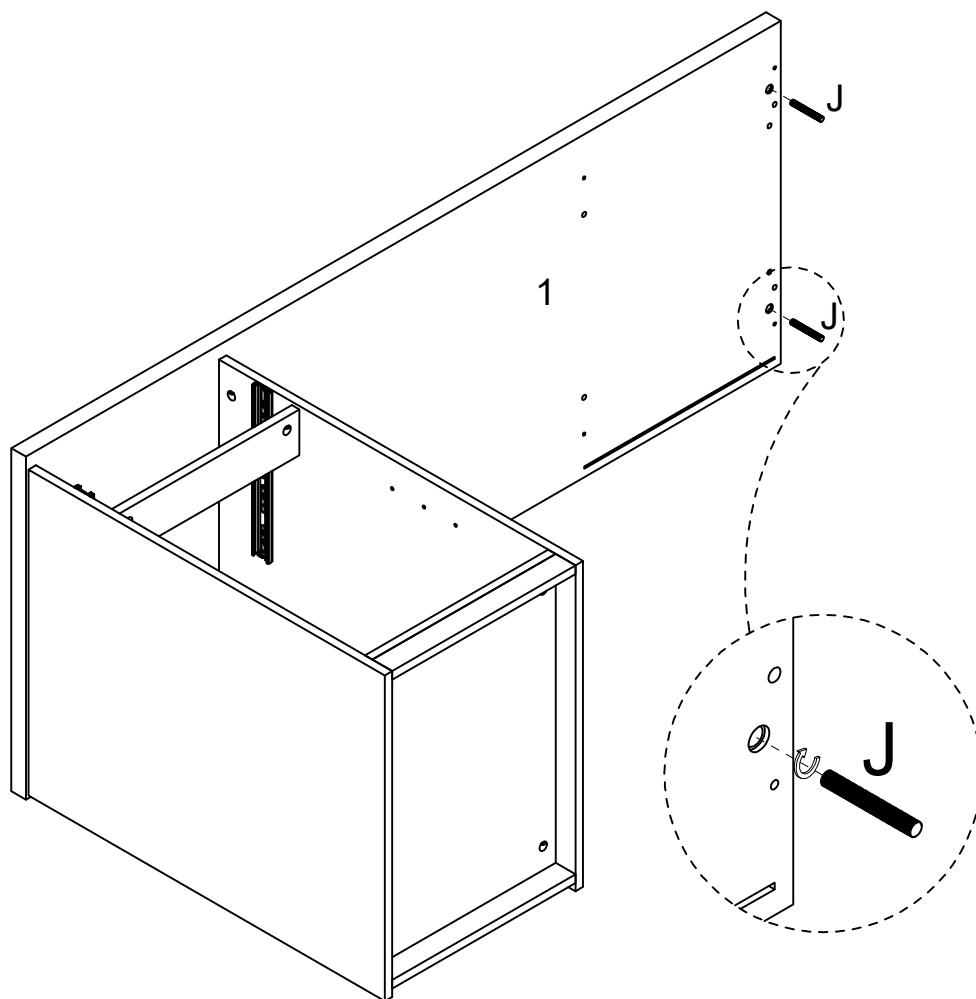


Step 10

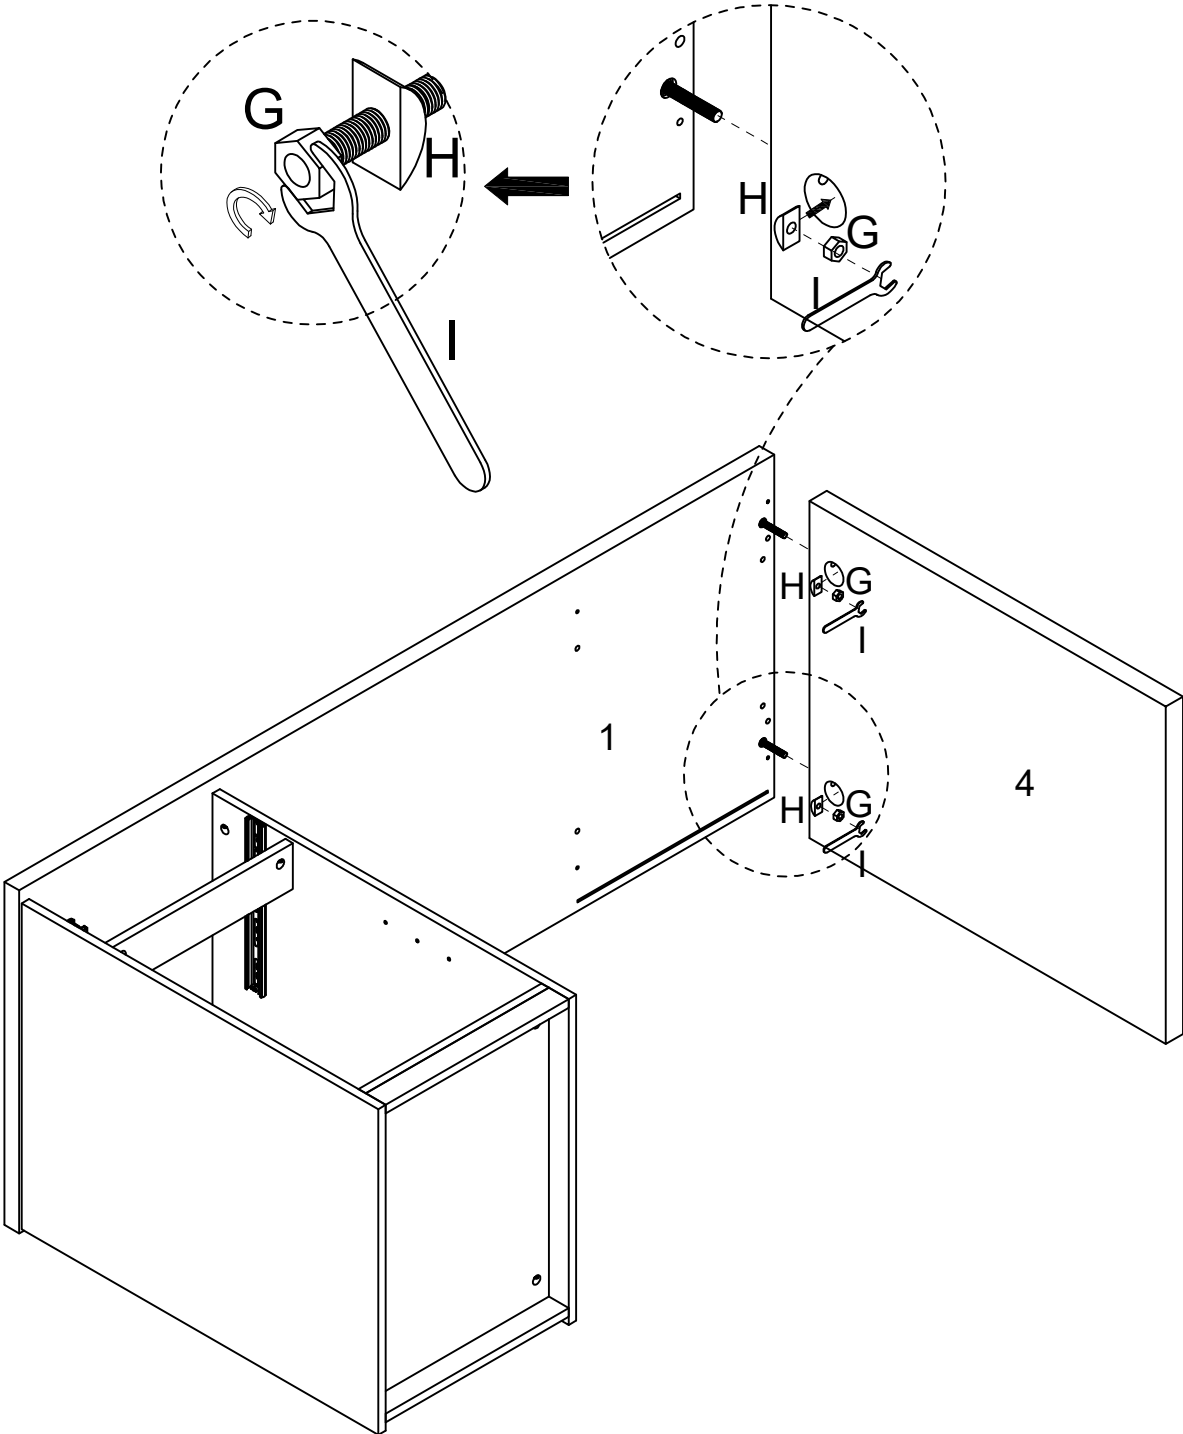


J

X2



Step 11

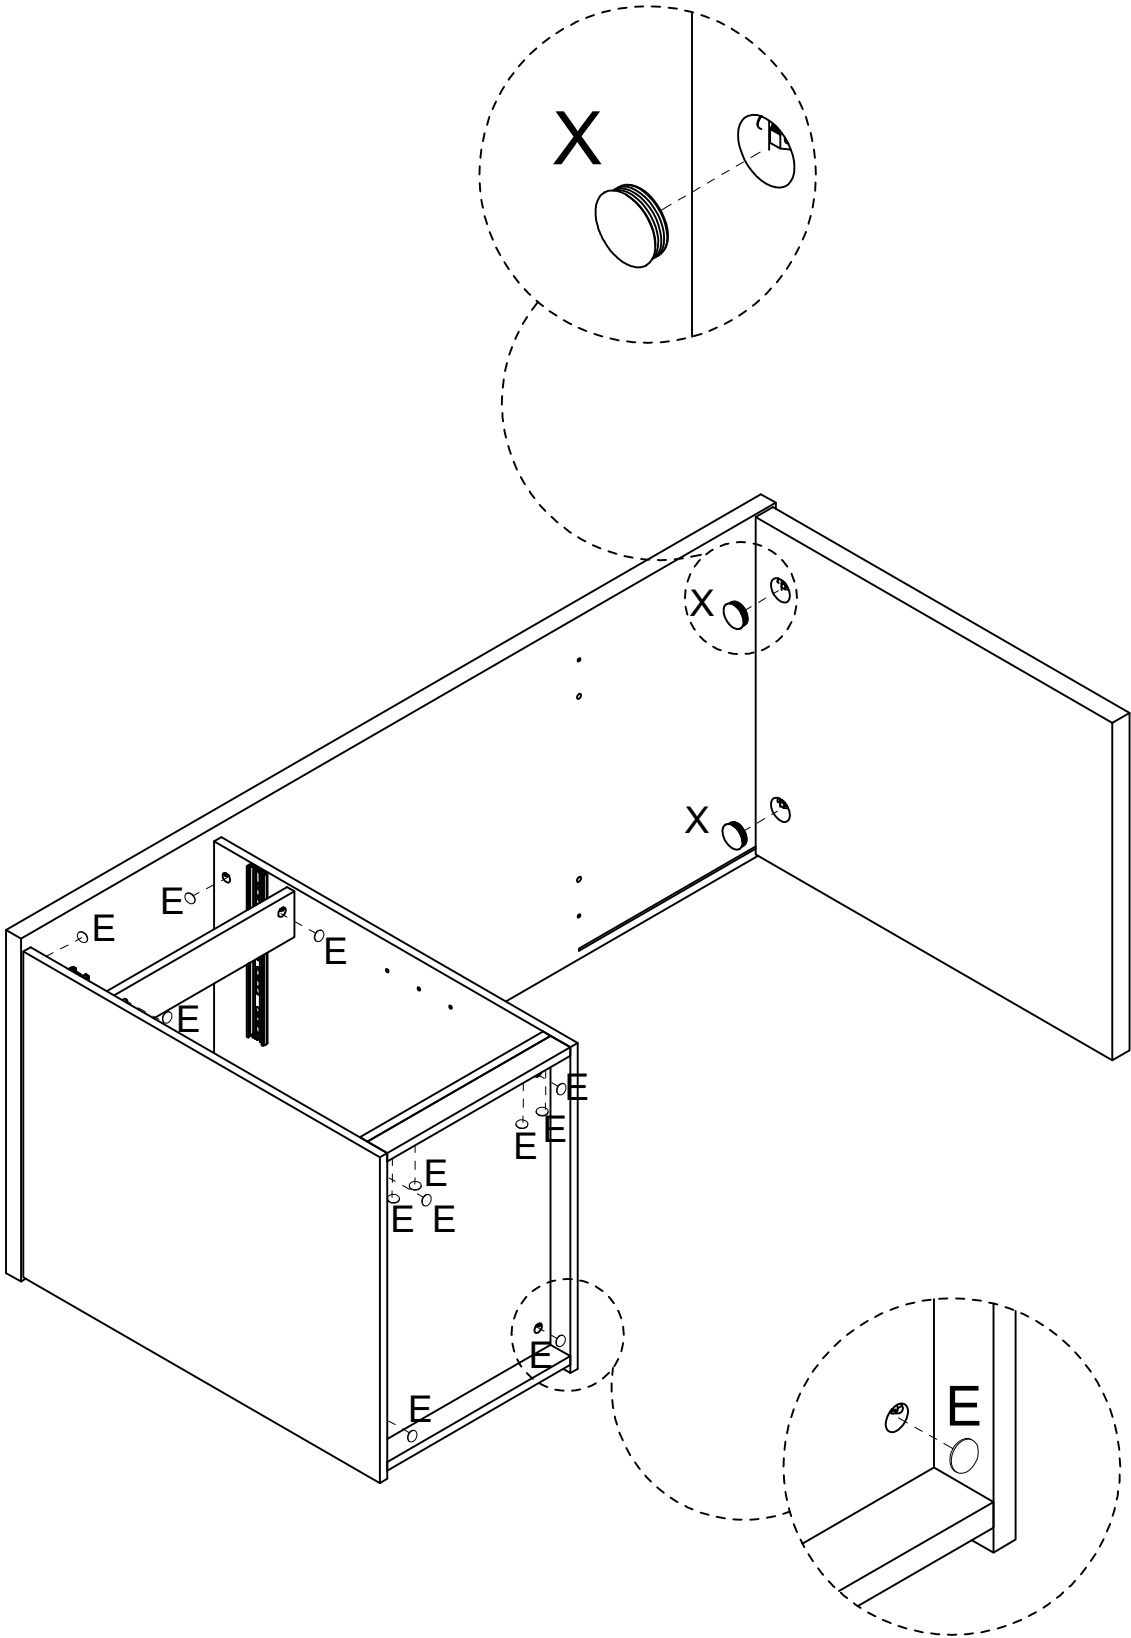


I	H	G
		
X1	X2	X2


Step 12




X	E
	
X2	X18

Step 13

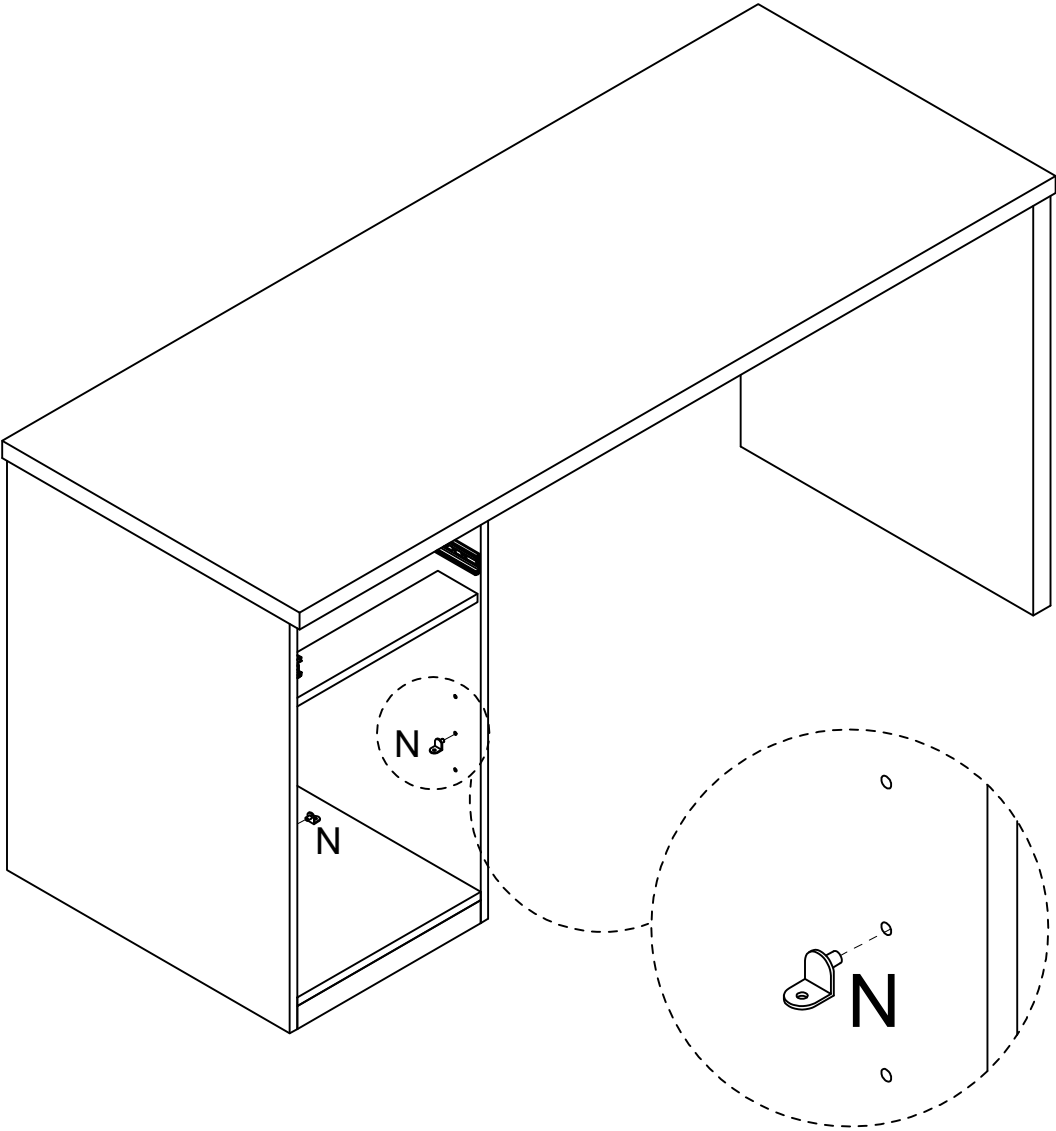



N

X4

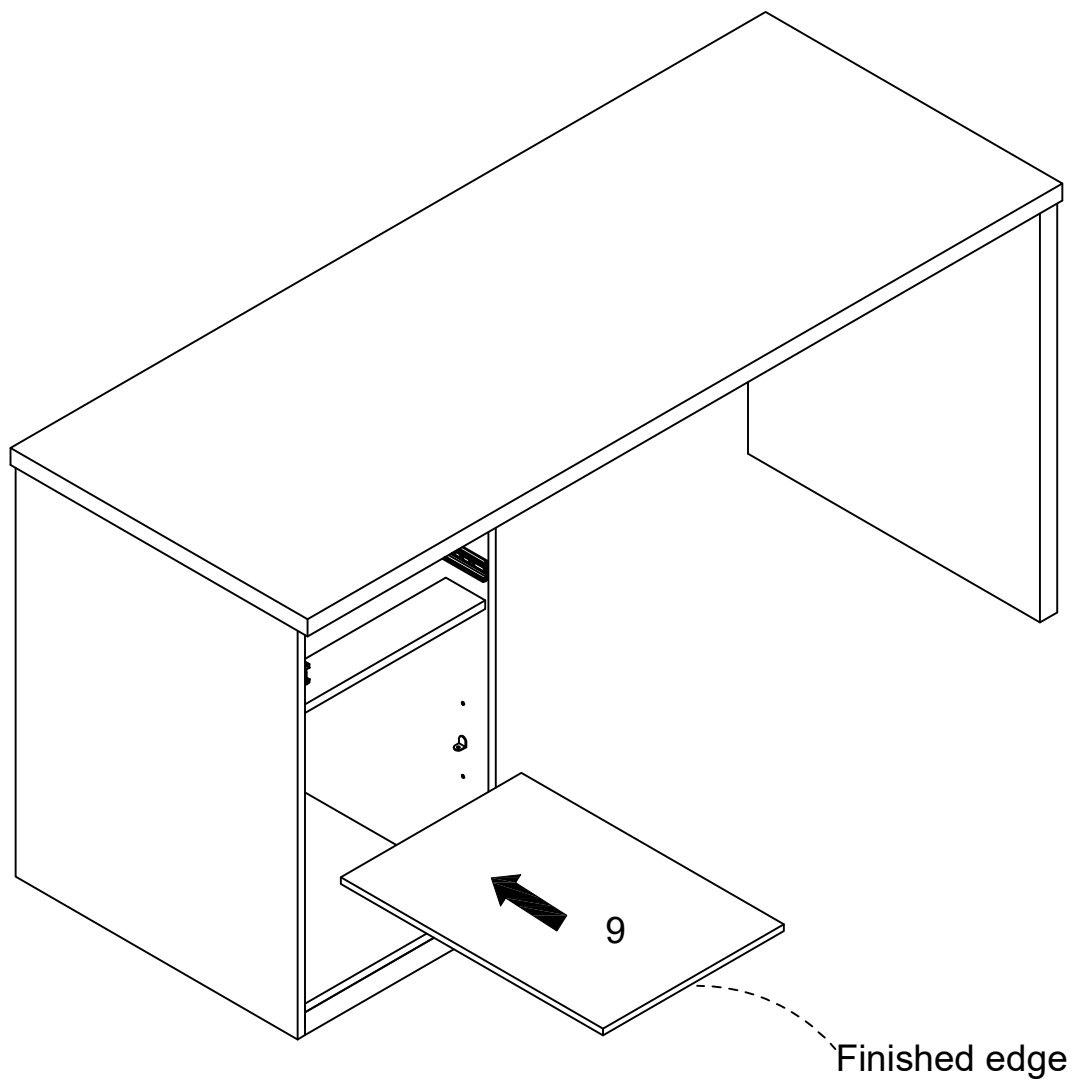Step 14

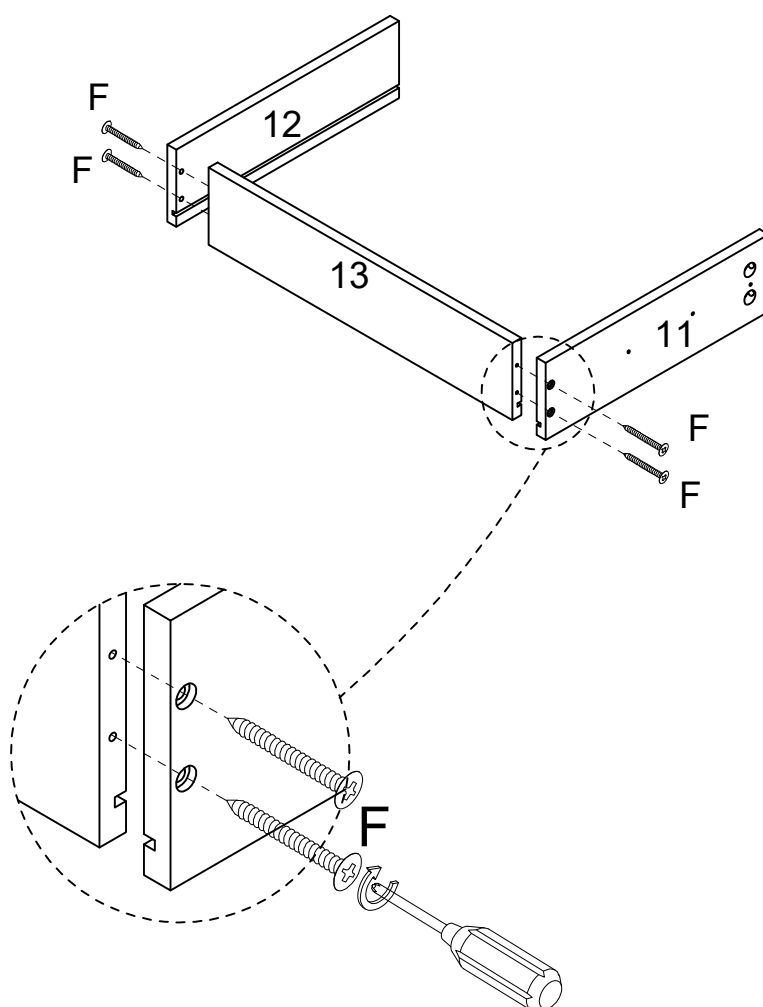


Step 15






F

X4

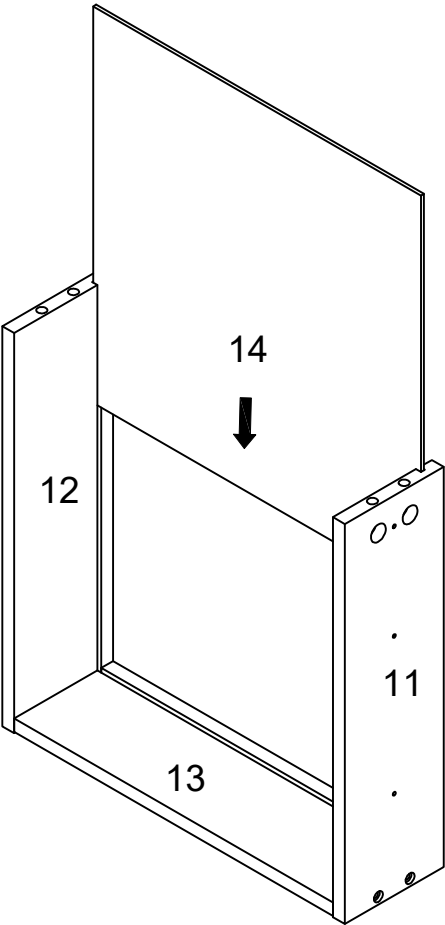Step 16

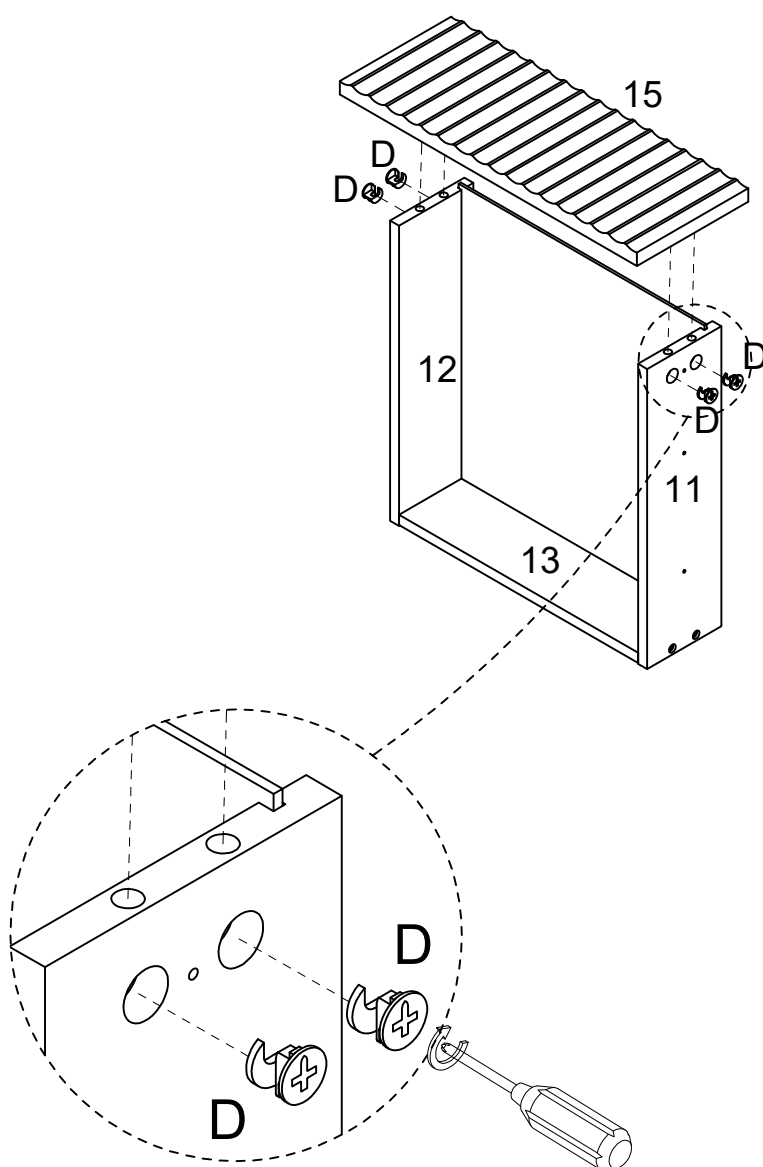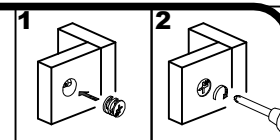


Step 17




D

X4

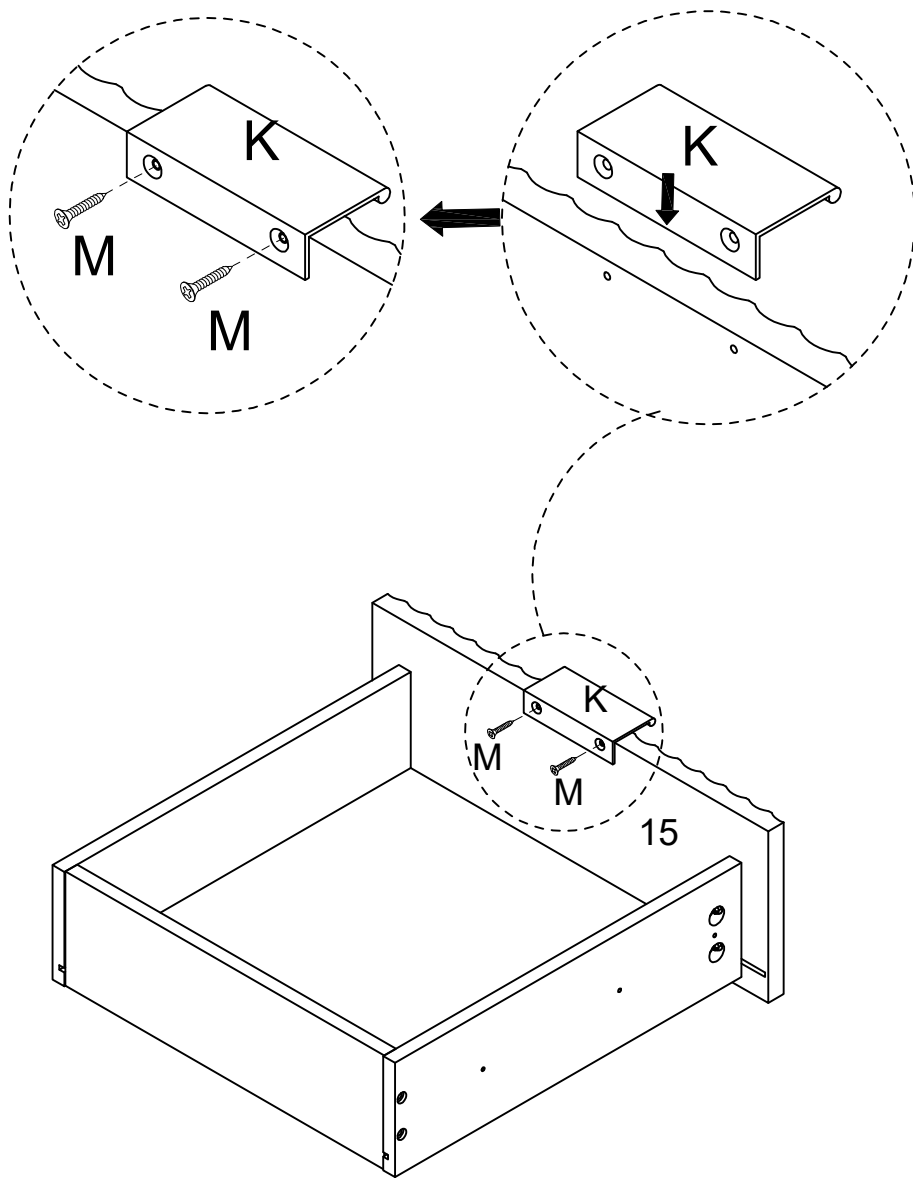Step 18




K	M
X1	X2

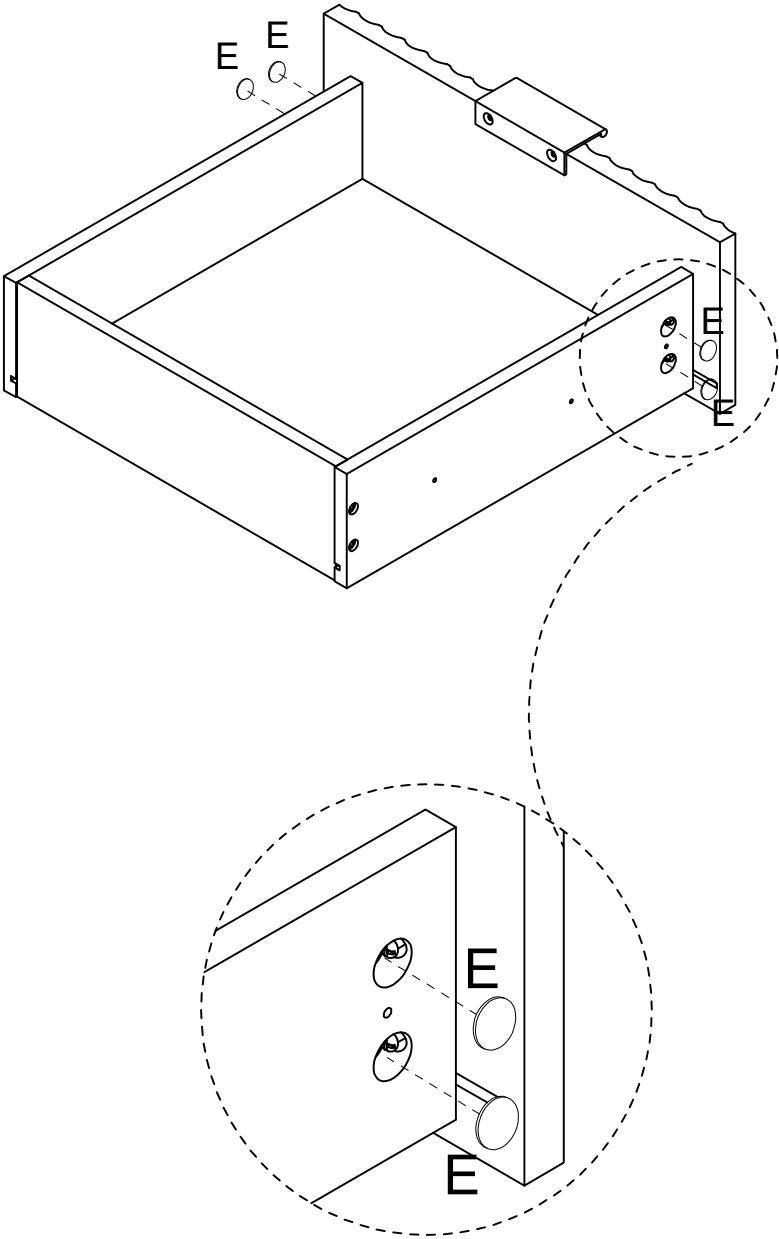

Step 19





E
O
X4

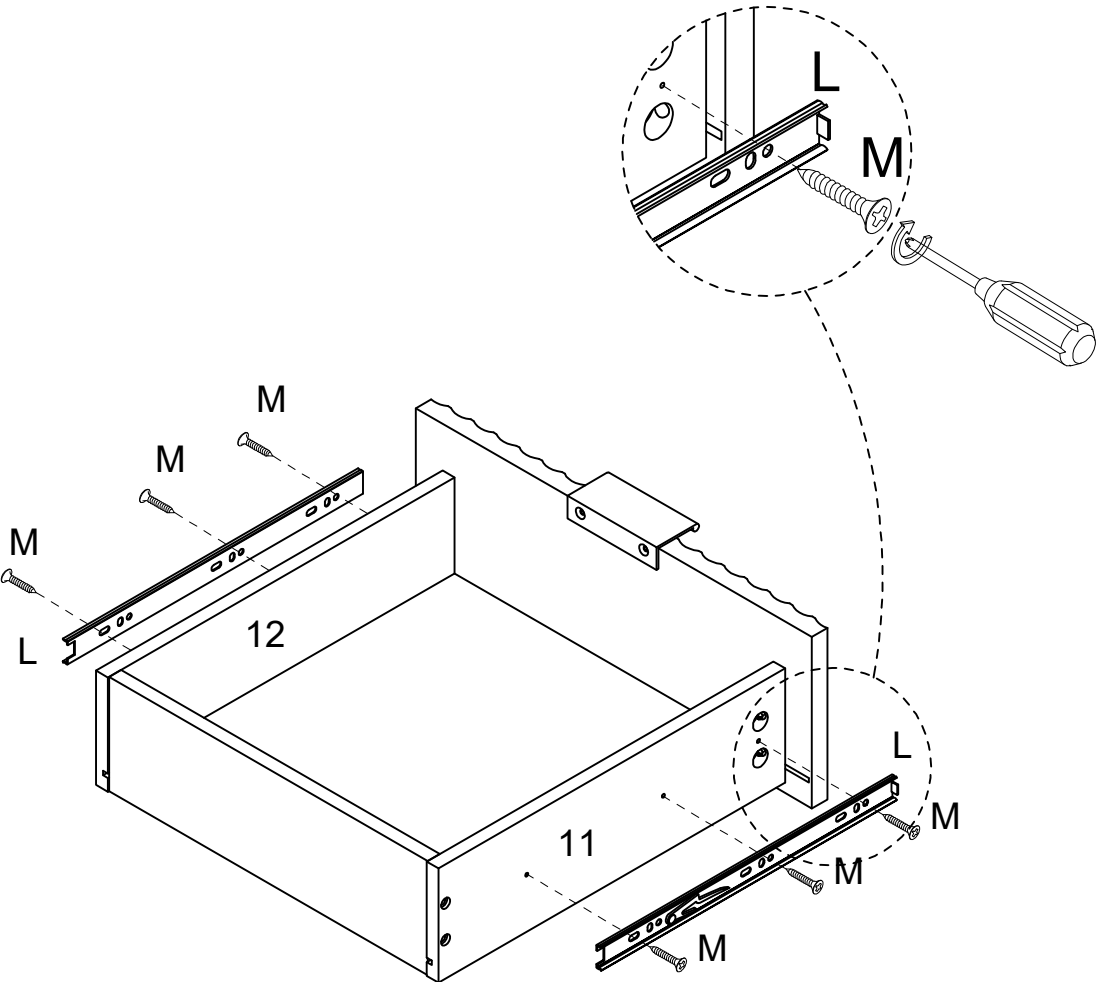Step 20






M	L
	
X6	X1

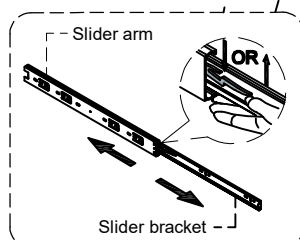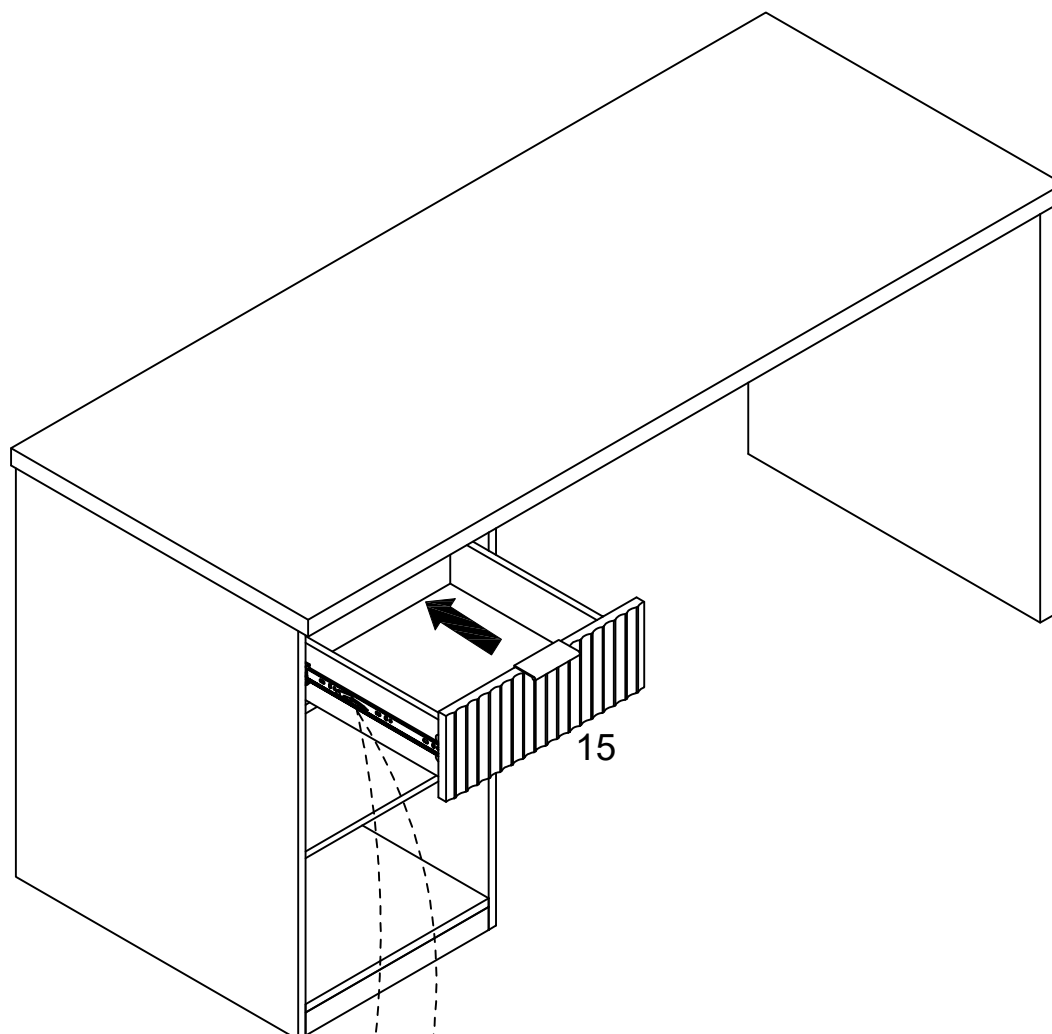Step 21

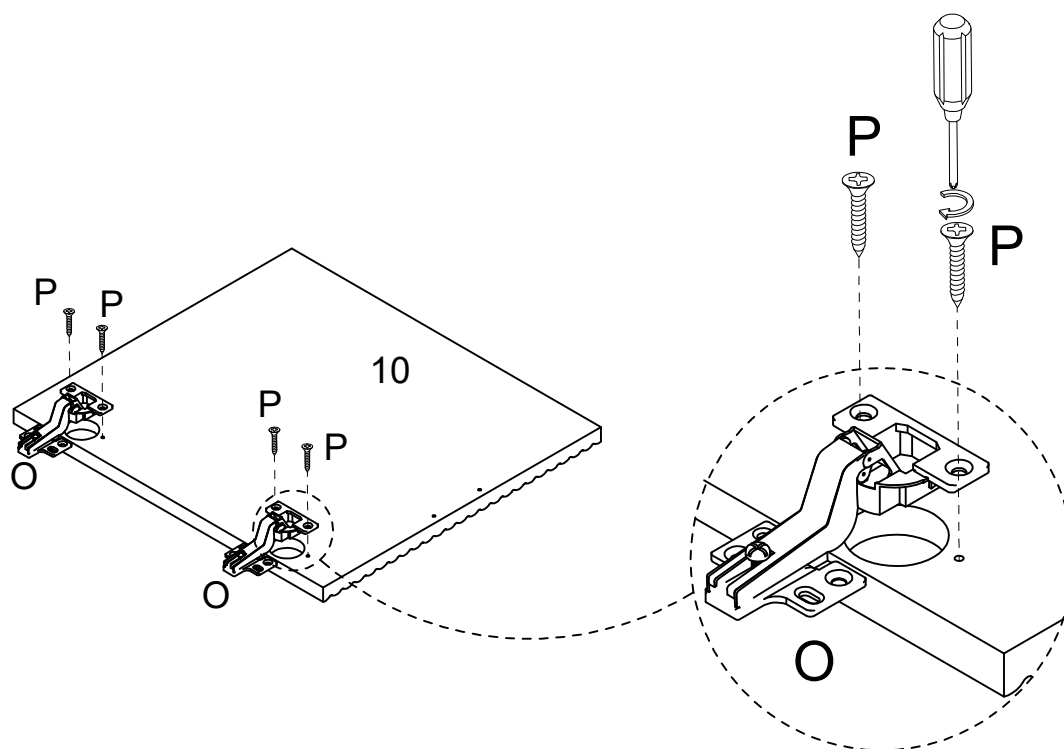



Step 22




P	O
	
X4	X2



Step 23

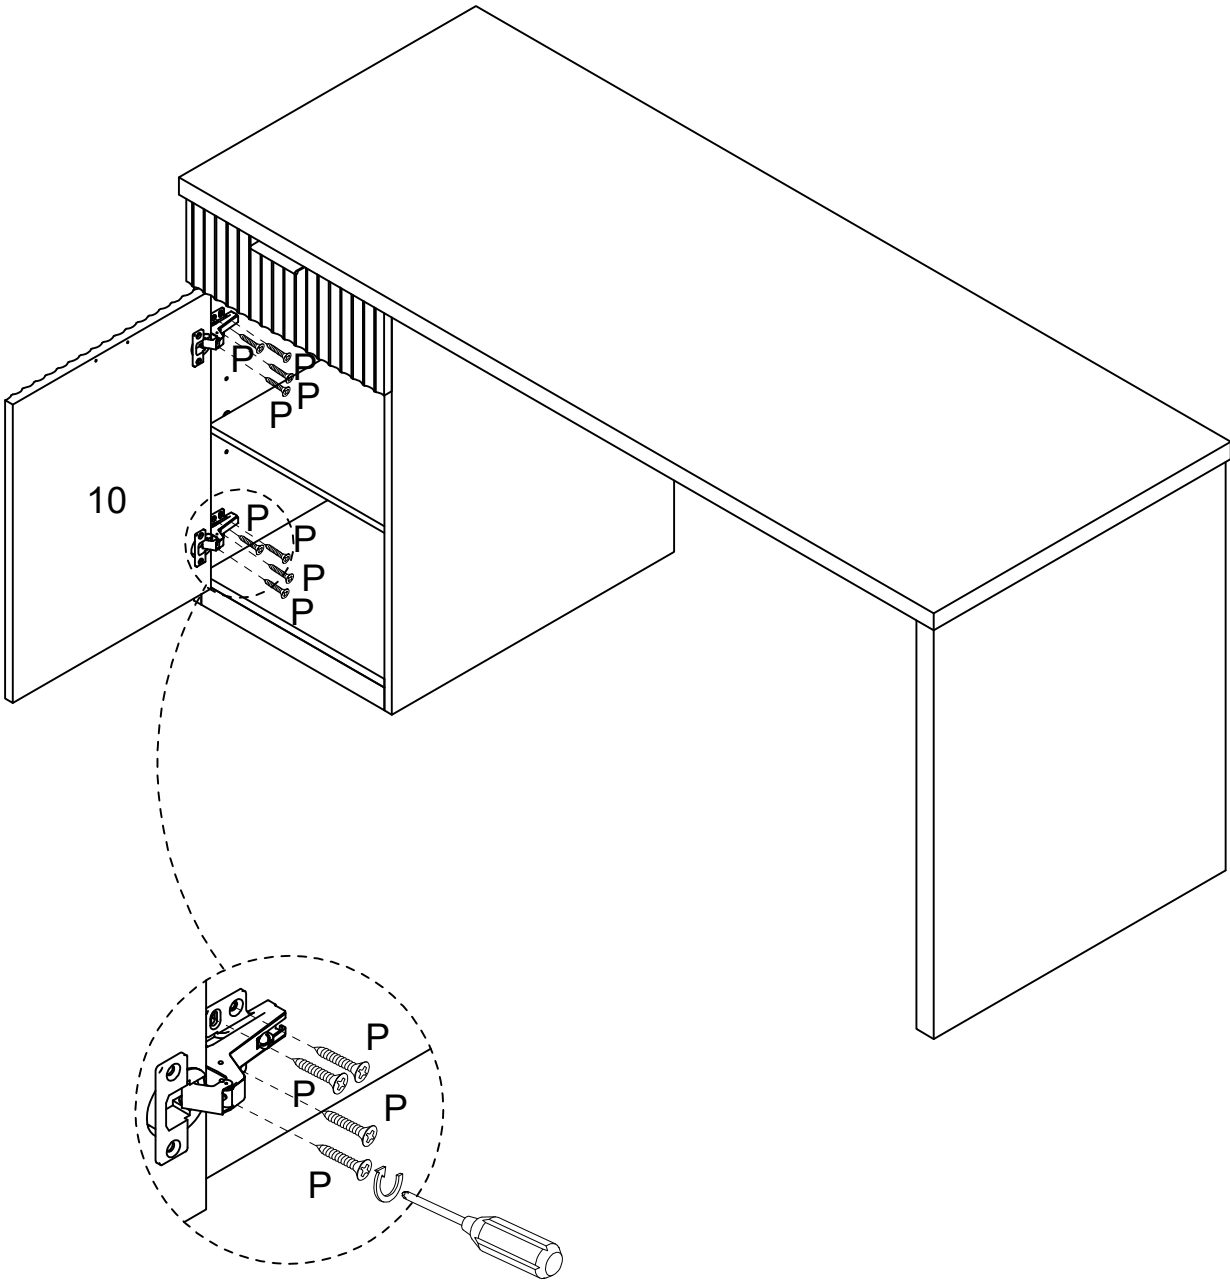


P

X8

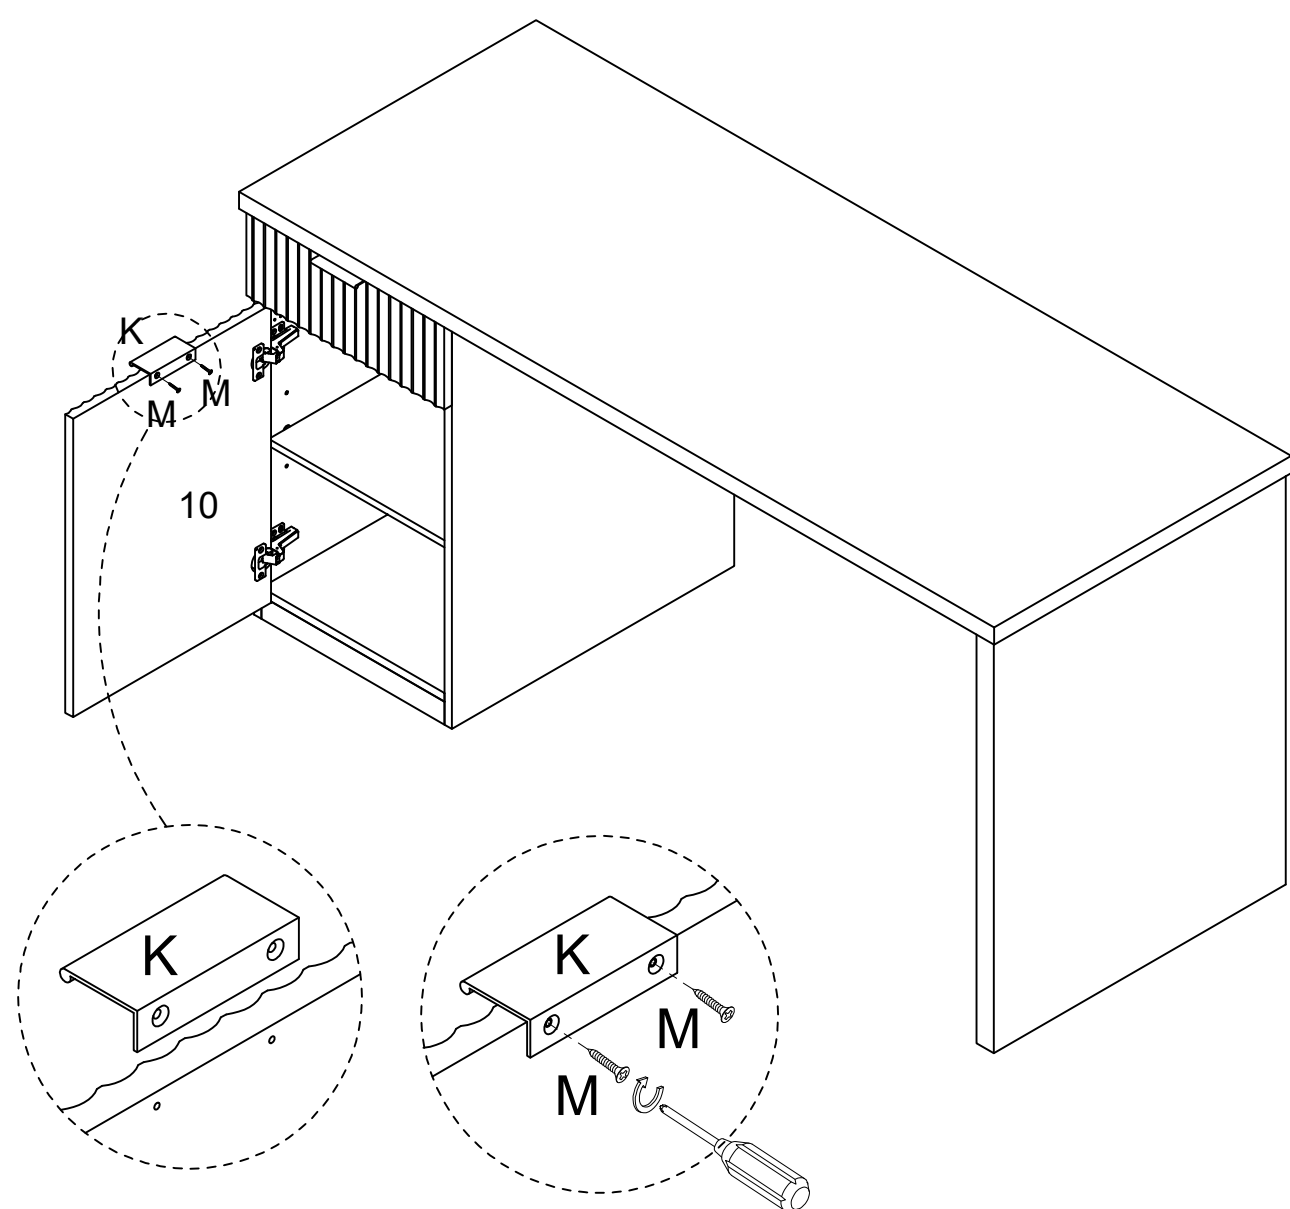

Step 24



K	M
	
X1	X2

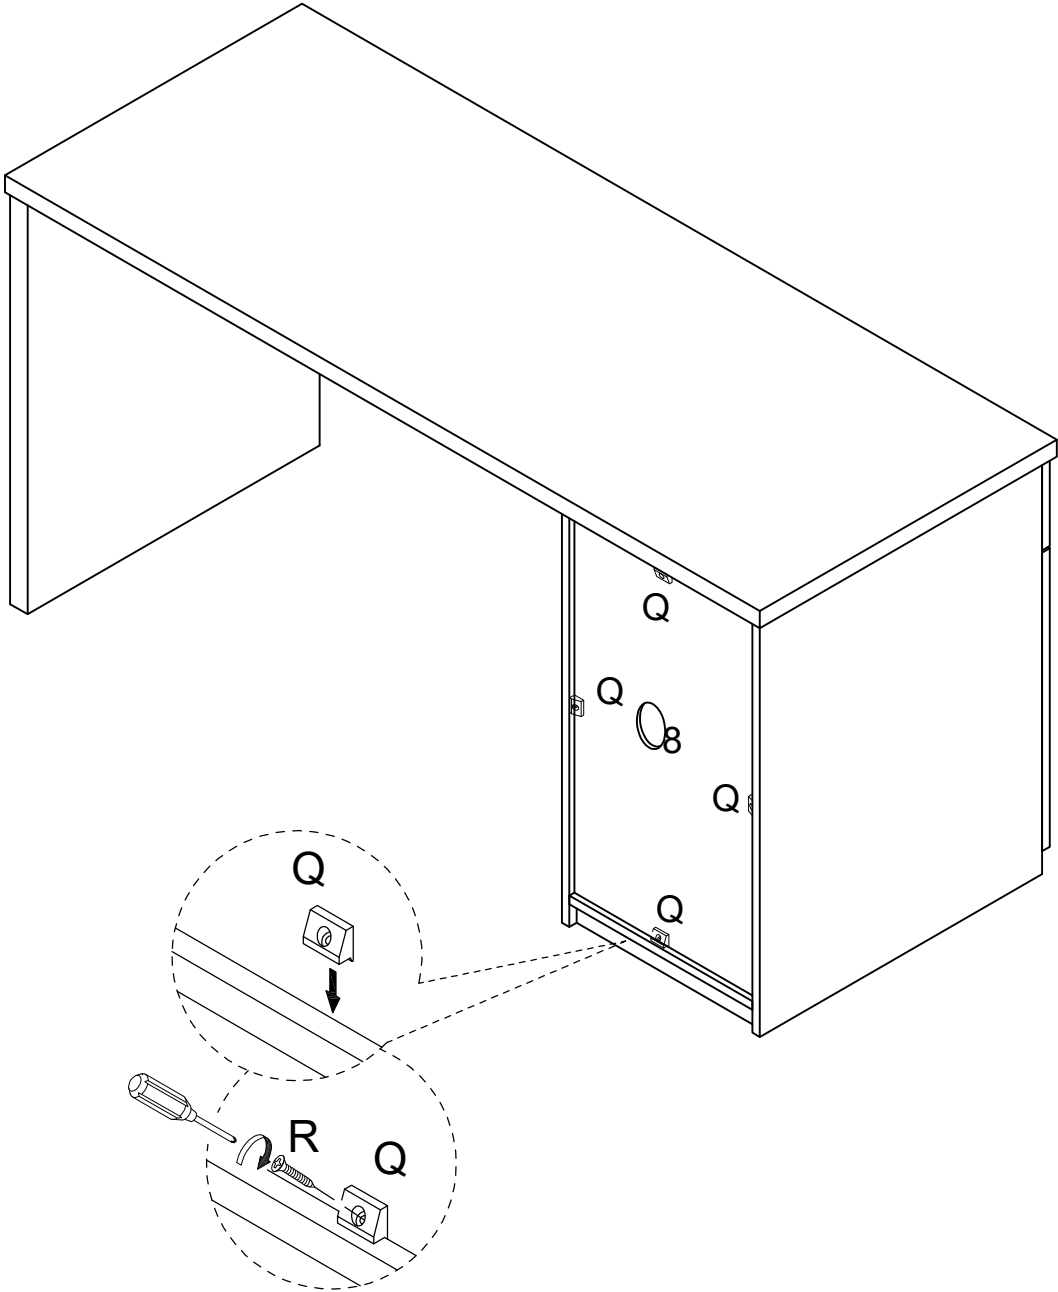Step 25



R	Q
	
X4	X4

Step 26

