


# Item # : LM043-BD59

## Assembly Instructions

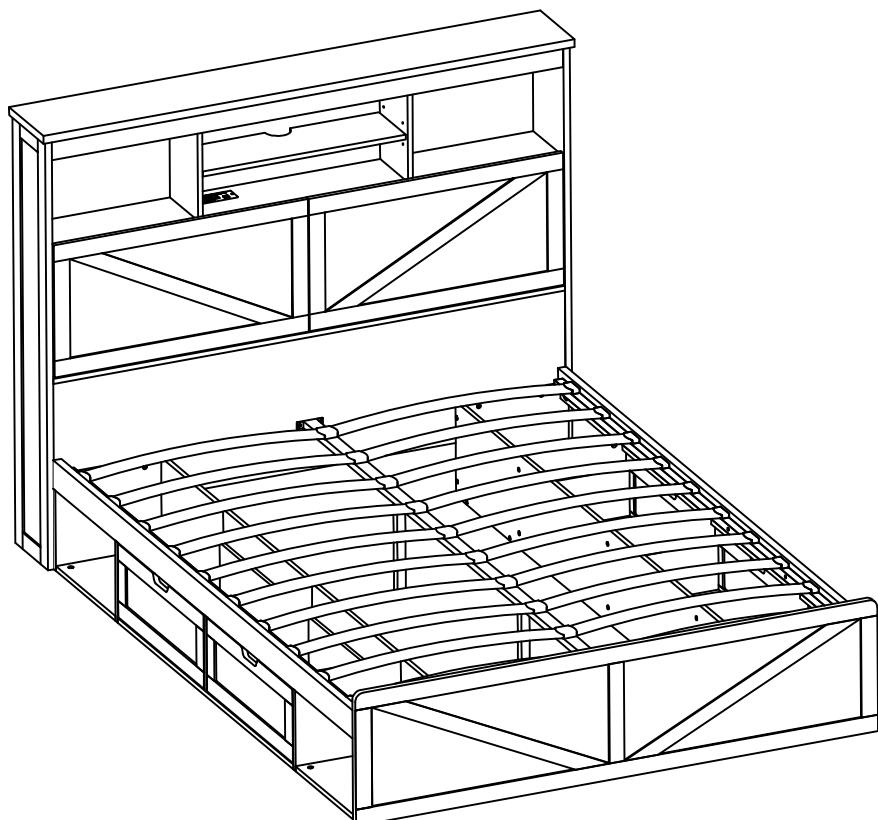


If you have any questions, please follow these steps( “Find Your Orders” – “Problem with the Order” – “Contact Seller” ) to contact our customer service. Thanks!

NOTE: There are two packages A and B for this item. Please wait patiently if you only receive one for now


Revised 08/03/2024

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

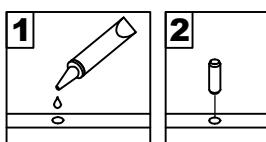


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

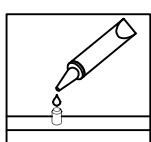


- VI. A Phillips head screwdriver is required for the assembly of this product .

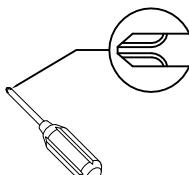


- VII. Power tools should not be used to assemble this product .

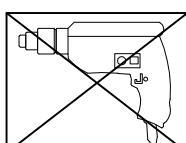


- VIII. Concealed hinges are three-way adjustable.

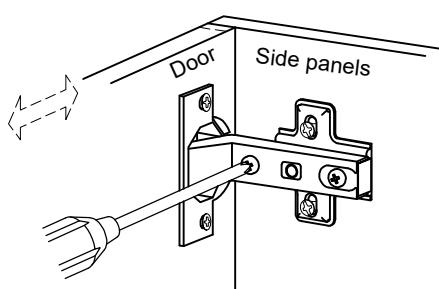

Horizontal  
by screw adjustment

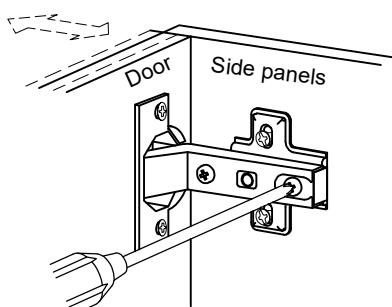


In-and-Out  
by loosening the hinge-arm  
mounting screw or via cam  
adjustment

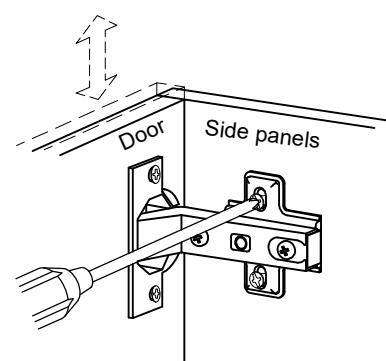


Vertical  
Via slots in the mounting  
plate or via cam adjustment

# Parts List

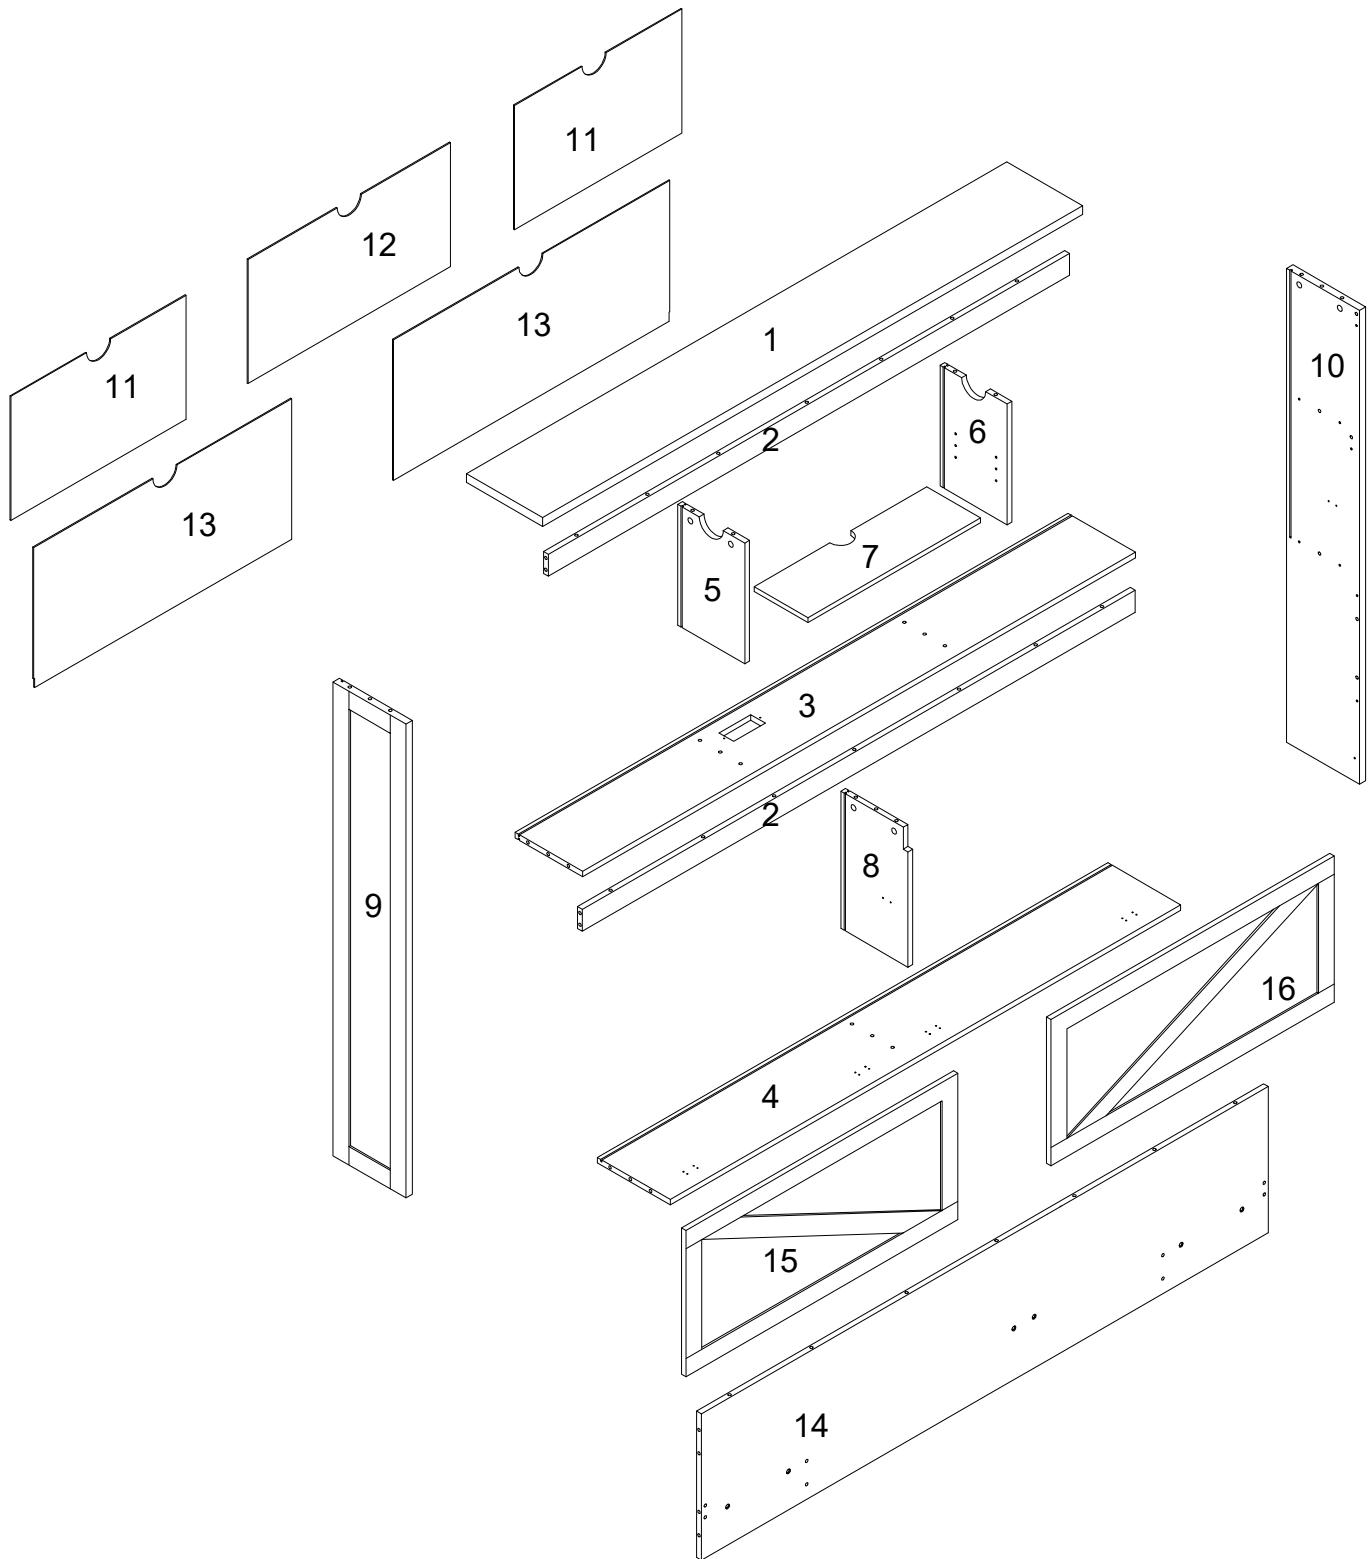


# Parts List

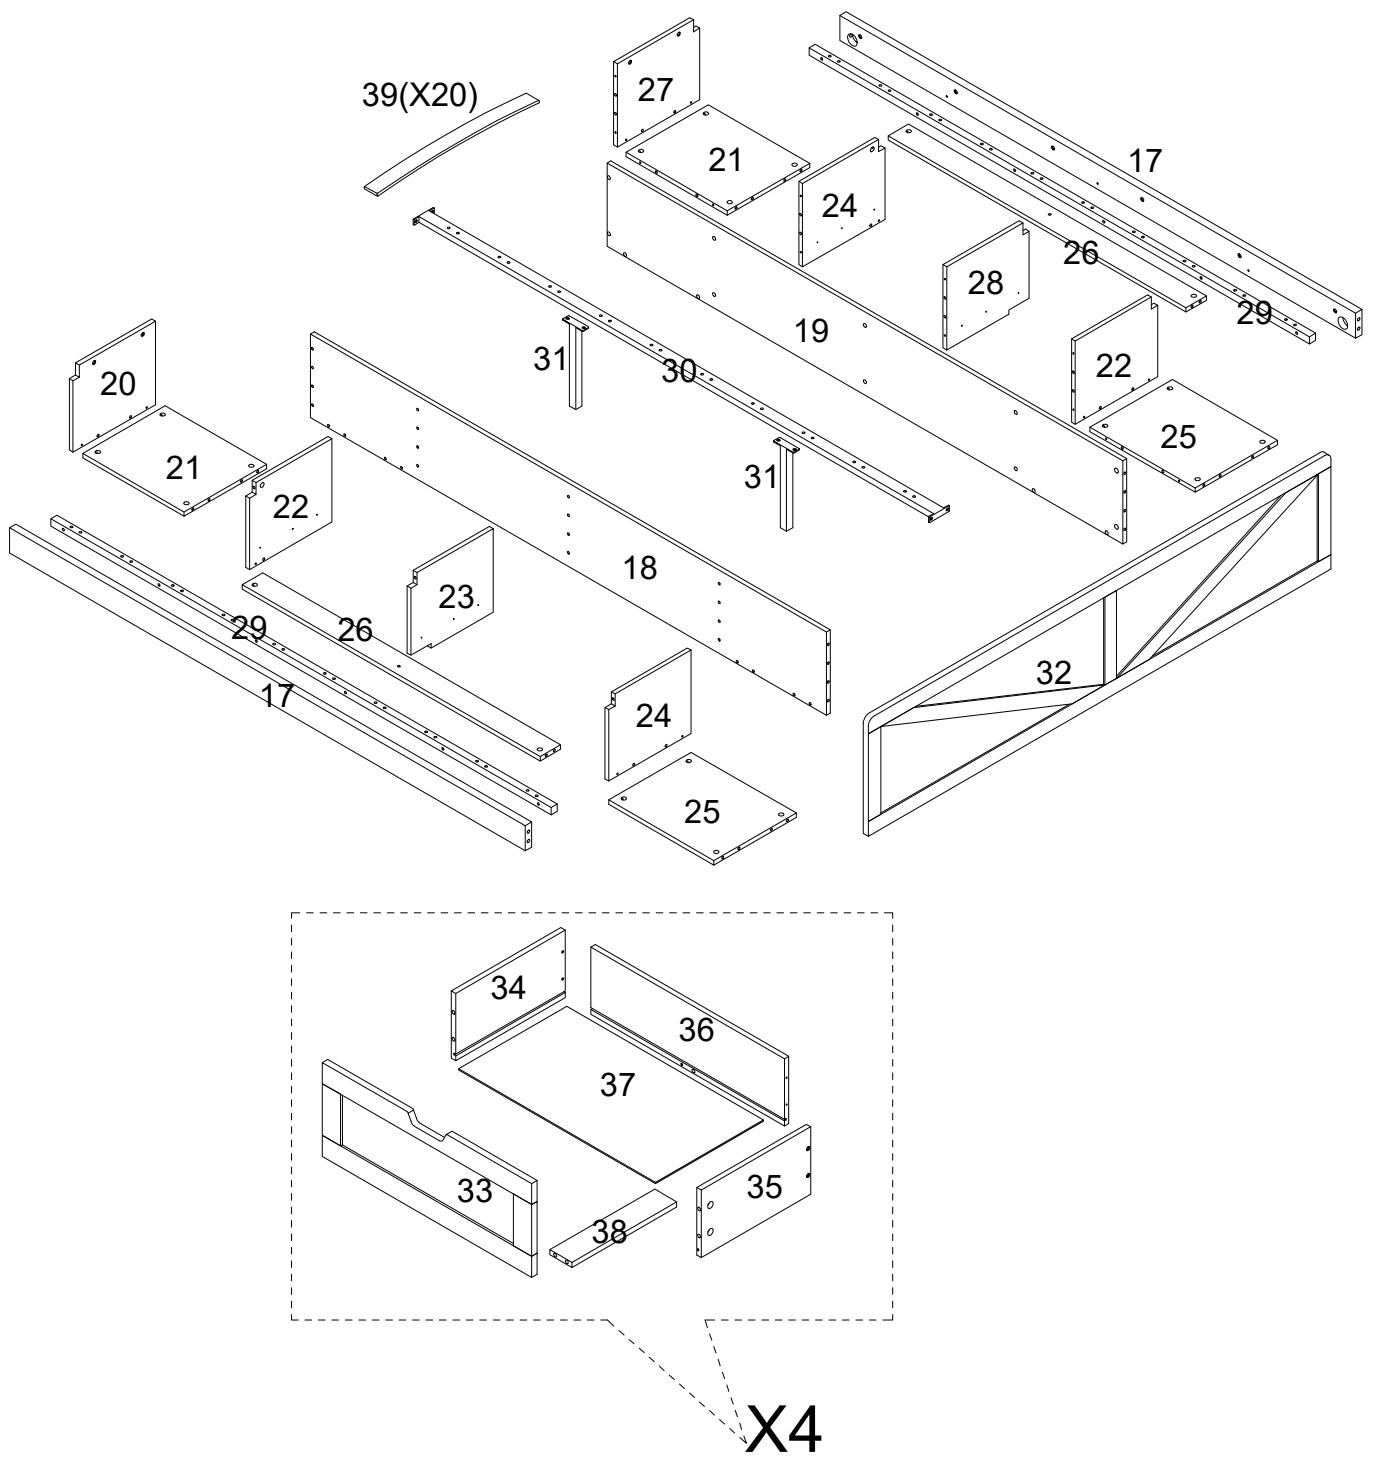

## Hardware List


A		Ø8x30mm	Wooden dowel	83	pcs
B		Ø6x32mm	Cam lock	88	pcs
C		Ø15x9mm	Cam lock	58	pcs
D		Ø15x11mm	Cam lock	30	pcs
E		Ø30mm	Sticker	88	pcs
F		Ø6x50mm	Bolt	36	pcs
G		M 4	Hex Key	1	pc
H		M6*12mm	Screw	8	pcs
I		M6*40mm	Screw	12	pcs
J		M 5	Hex Key	1	pc
K		M8*60mm	Screw	2	pcs
L		Ø5/16in	Nuts	4	pcs
M		Ø5/16in	Half-moon part	4	pcs
N		Ø5/16in	Wrench	1	pc
O		Ø8x60mm	Screw	2	pcs
P			Electric socket	1	pc
Q		Ø3x12mm	Screw	68	pcs
R			Plastic wedge	24	pcs
S		Ø3x17mm	Screw	24	pcs
T			West hinge	4	pcs
U		Ø3.5x14mm	Screw	24	pcs
V-R			Curved Hand	2	pcs
V-L			Curved Hand	2	pcs

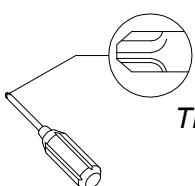


Philips head screwdriver required for assembly  
(not included)

*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

# Hardware List


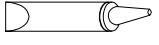
W		Led strip light (Included in plastic bag)	1	set	
X		Individually packed	4	set	
Y		Single head set	20	pcs	
Z		Double head set	10	pcs	
AA		Ø5x13x26mm	Shelf support pin	4	pcs
BB		Ø4x32mm	Screw	20	pcs
CC		Ø10x30mm	Wooden dowel	4	pcs
DD		M6*15mm	Screw	4	pcs
EE		Ø5x12mm	Screw	4	pcs
FF		L angle iron	2	pcs	
GG		Small White Glue	2	pcs	

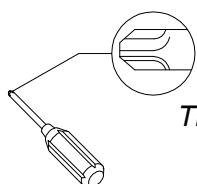

Philips head screwdriver required for assembly  
(not included)


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

# Step 1

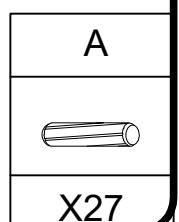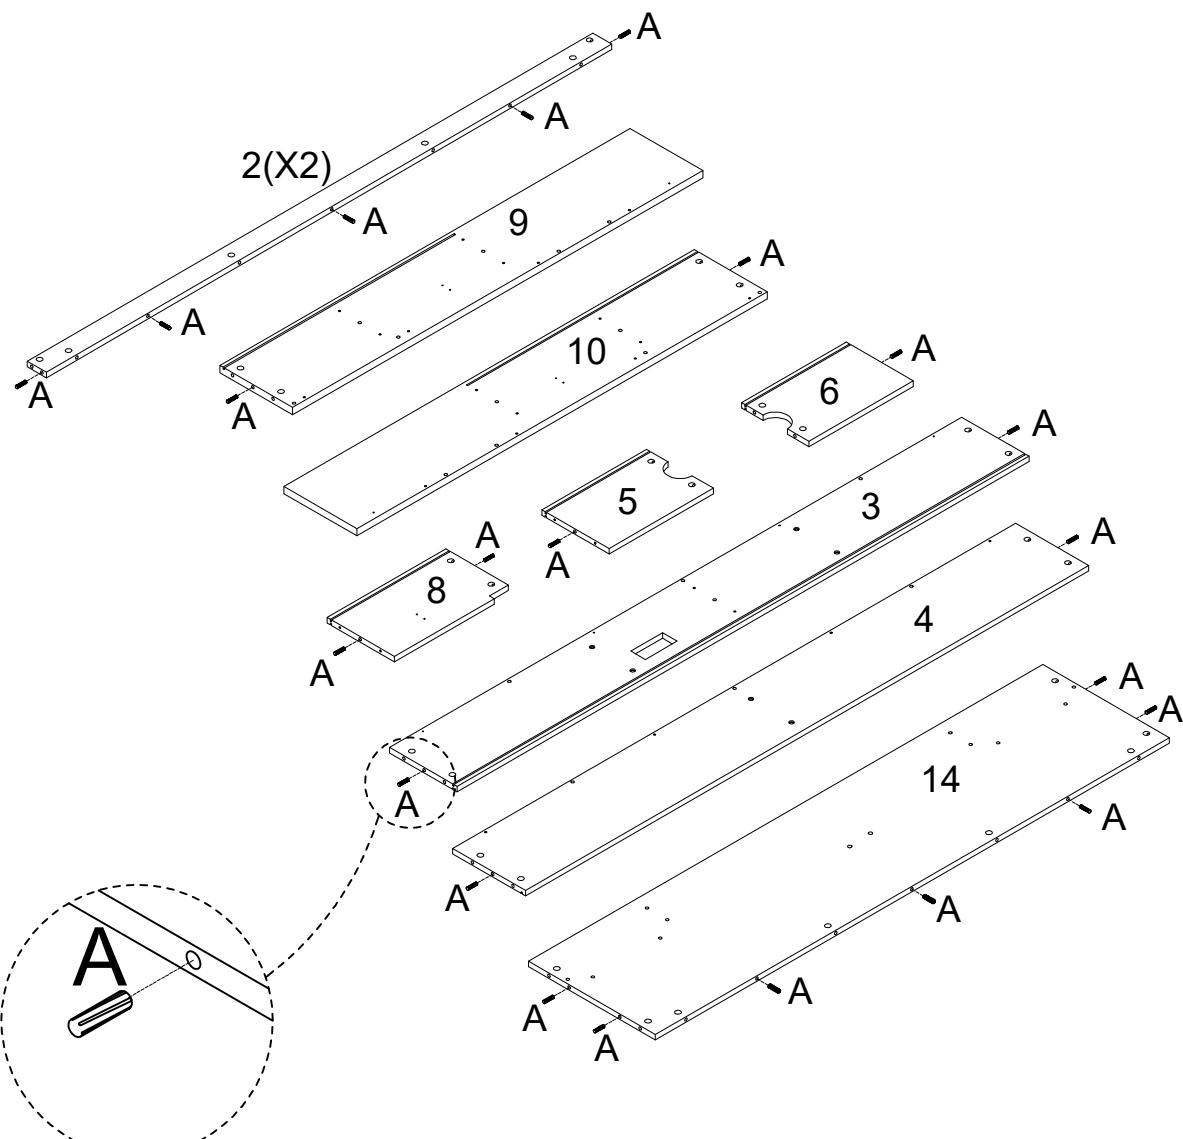



X27

## Step 2


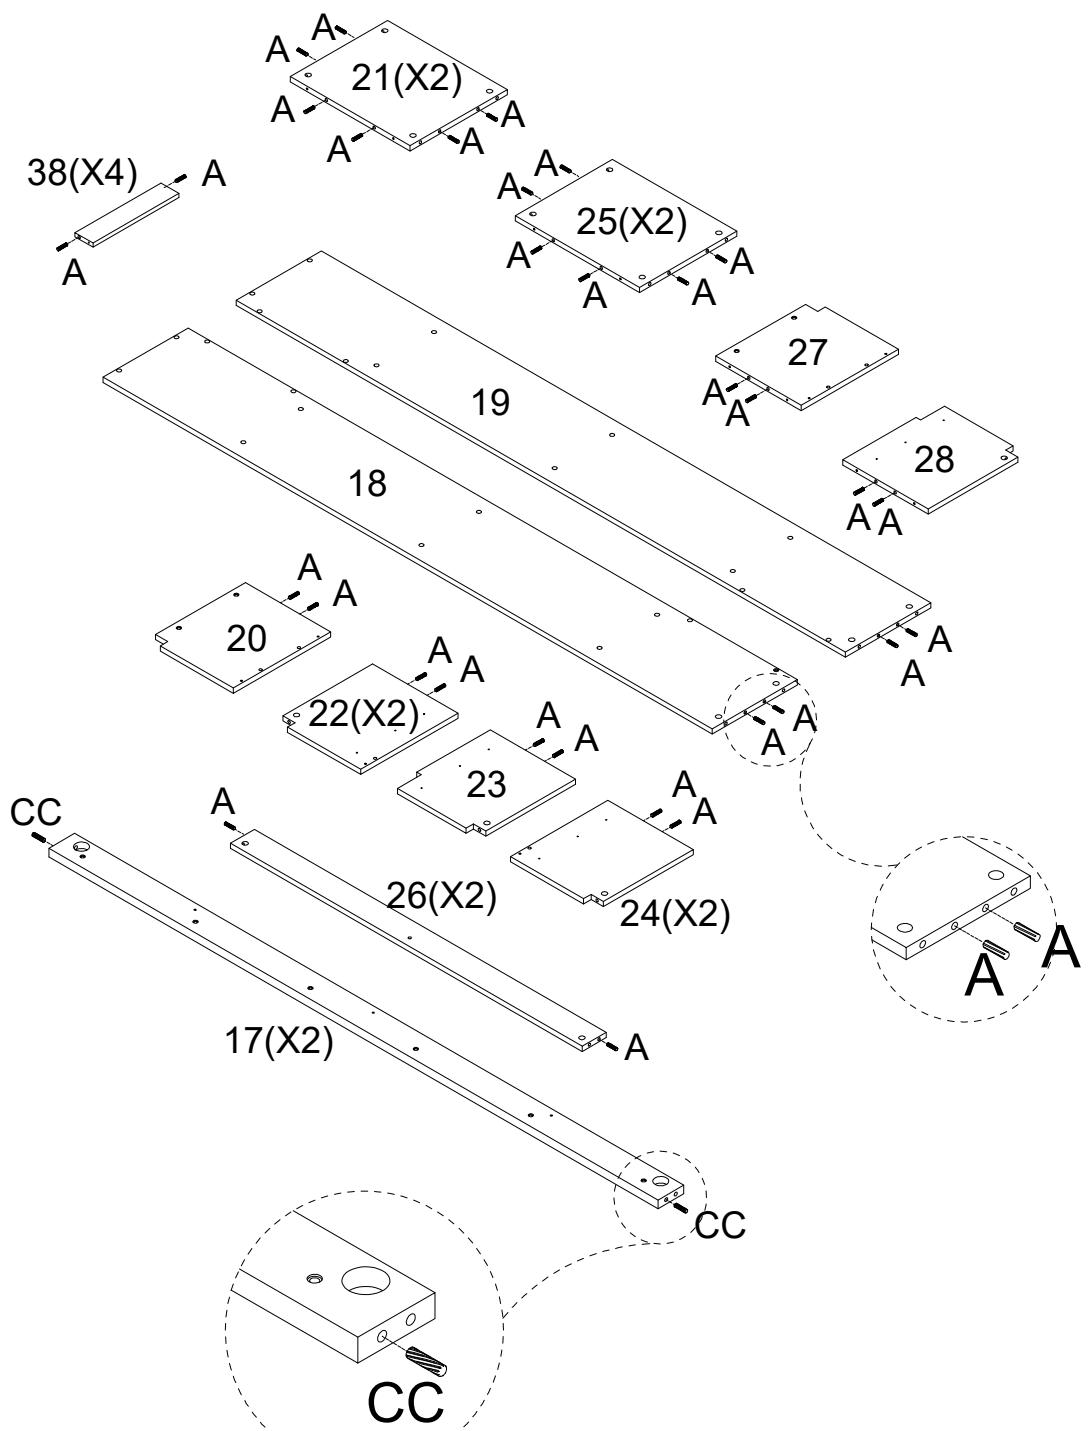


CC	A
(Image of part CC)	(Image of part A)
X4	X56



## Step 3

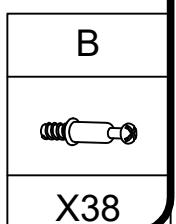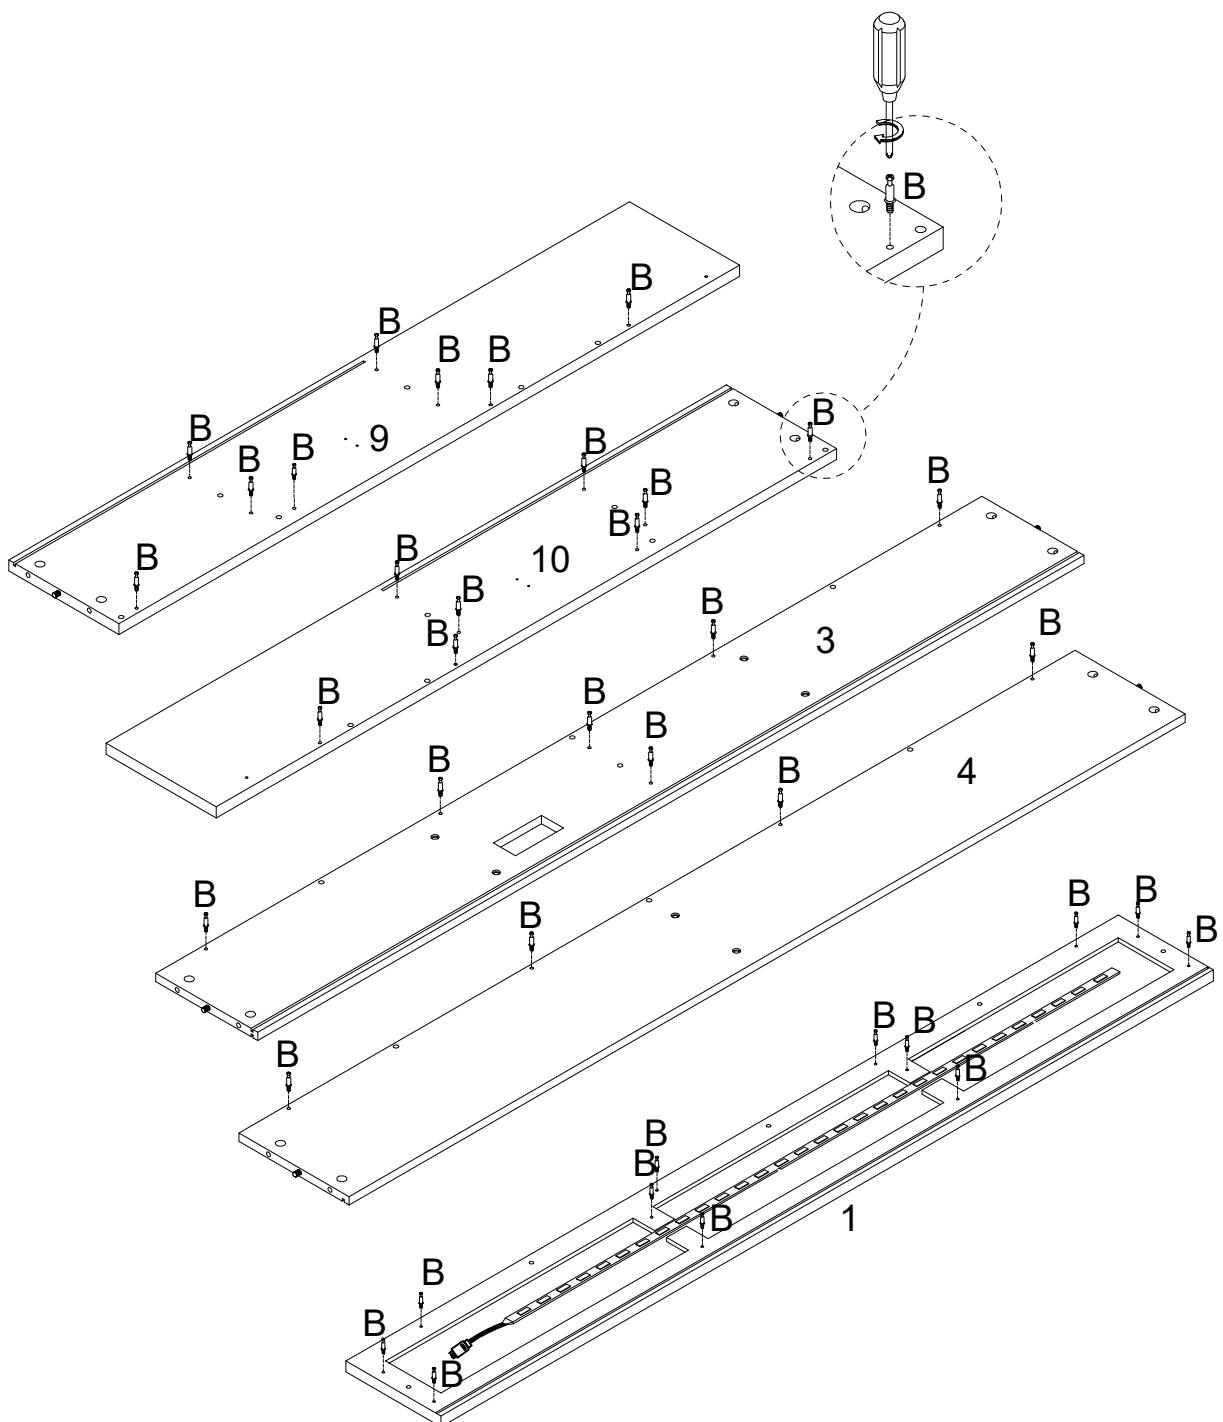

## Step 4

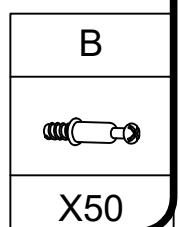
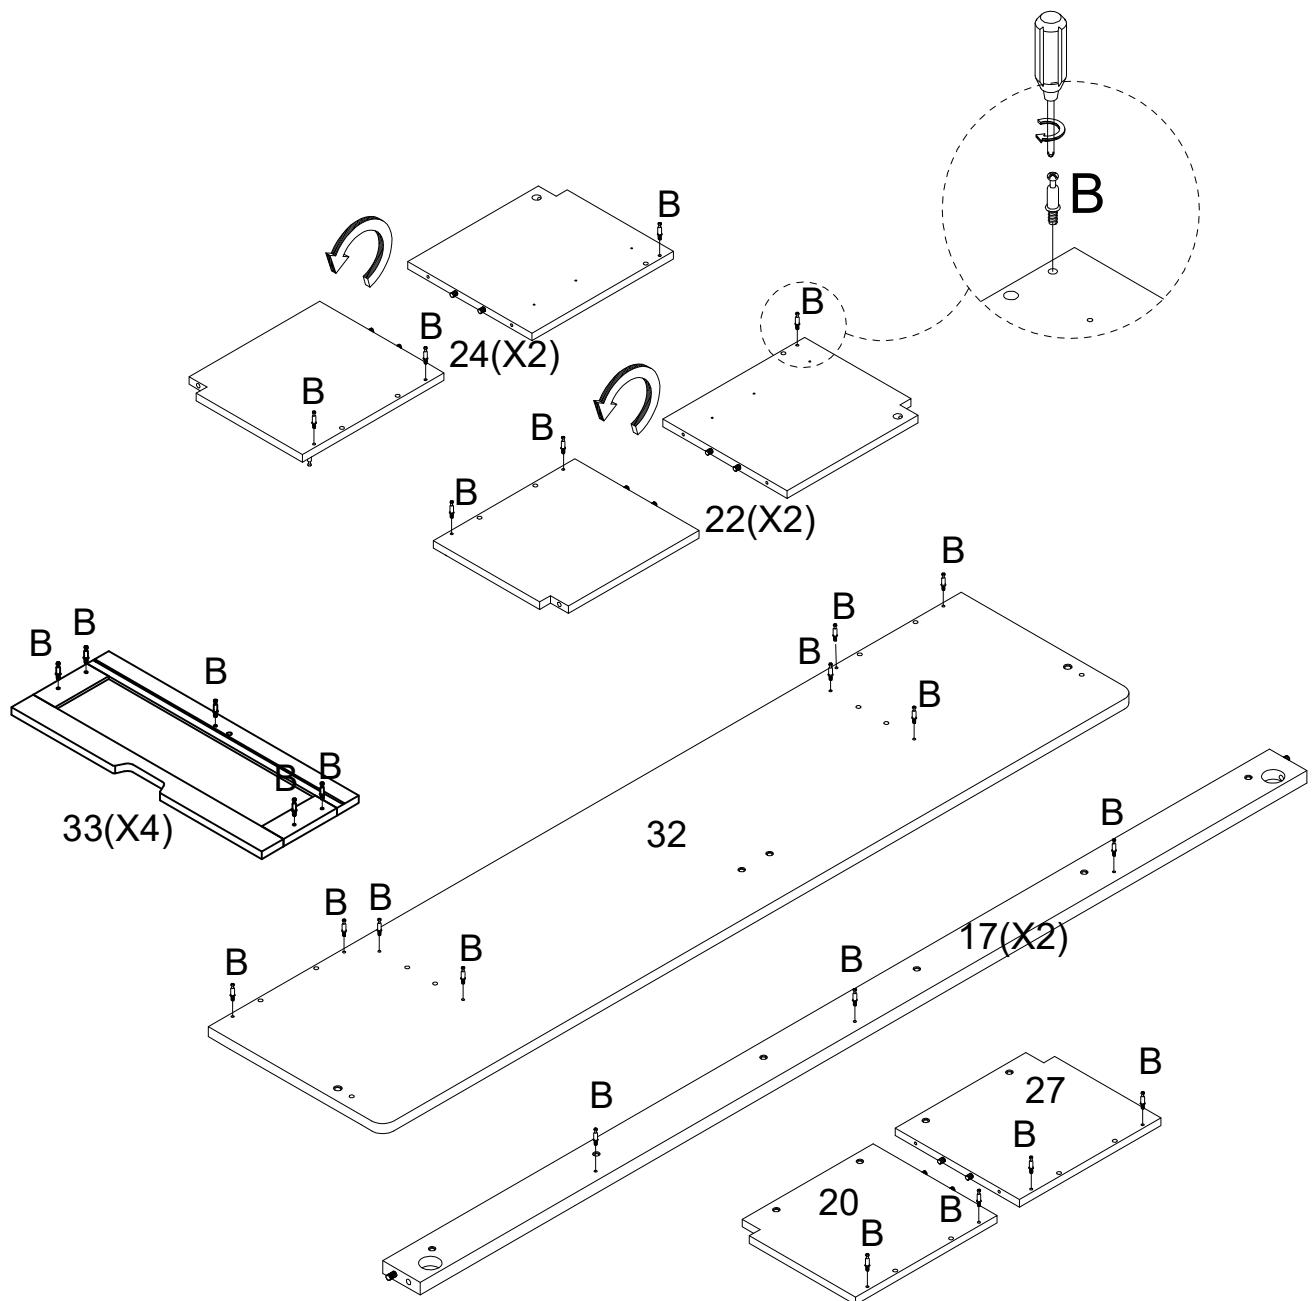


## Step 5

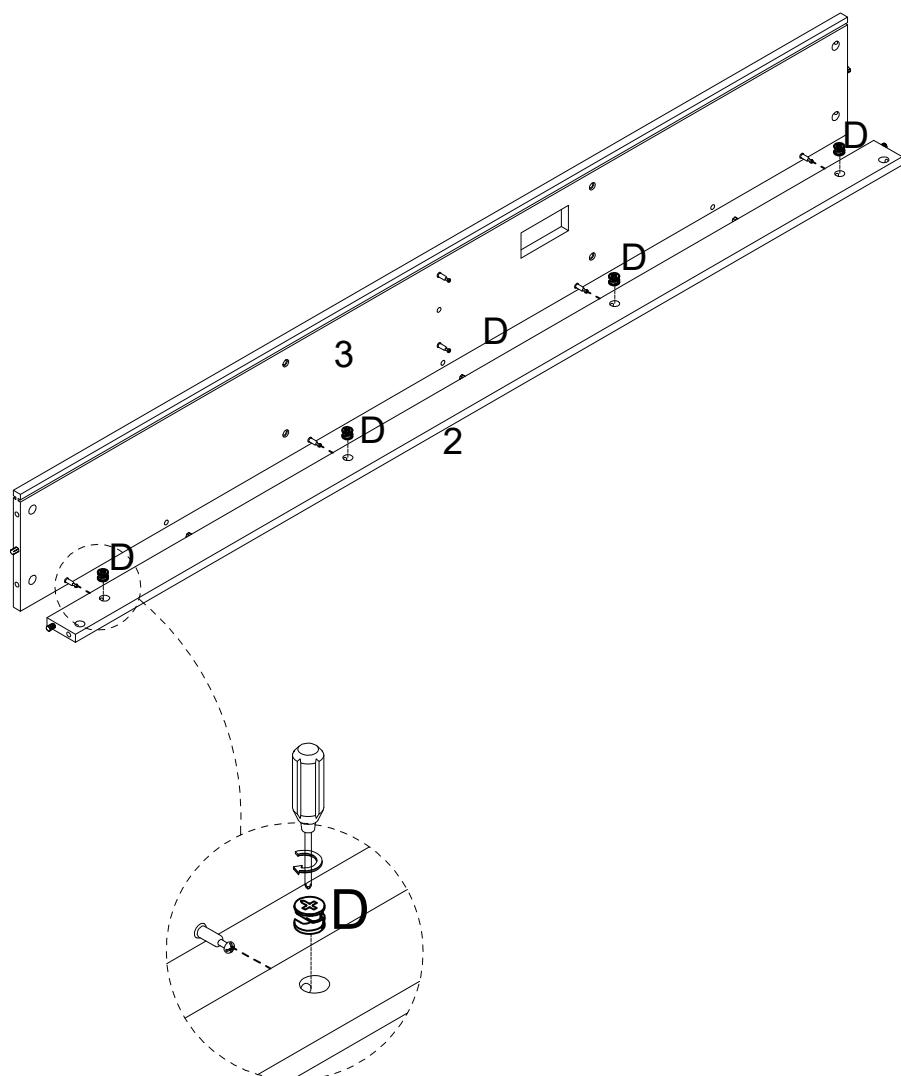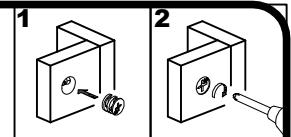


D
X4

## Step 6

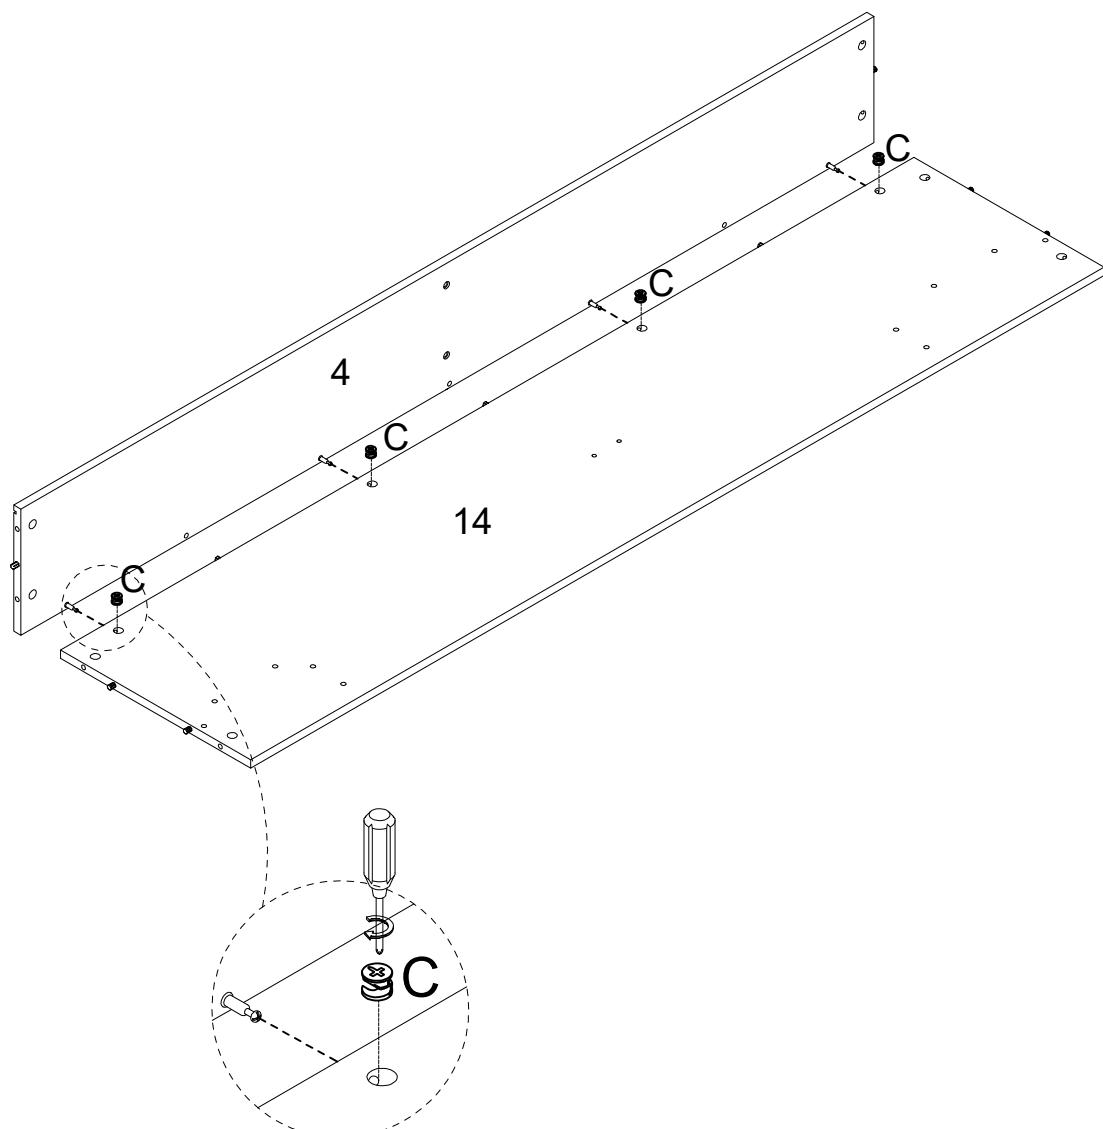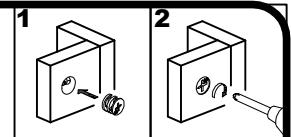



C
X4

## Step 7

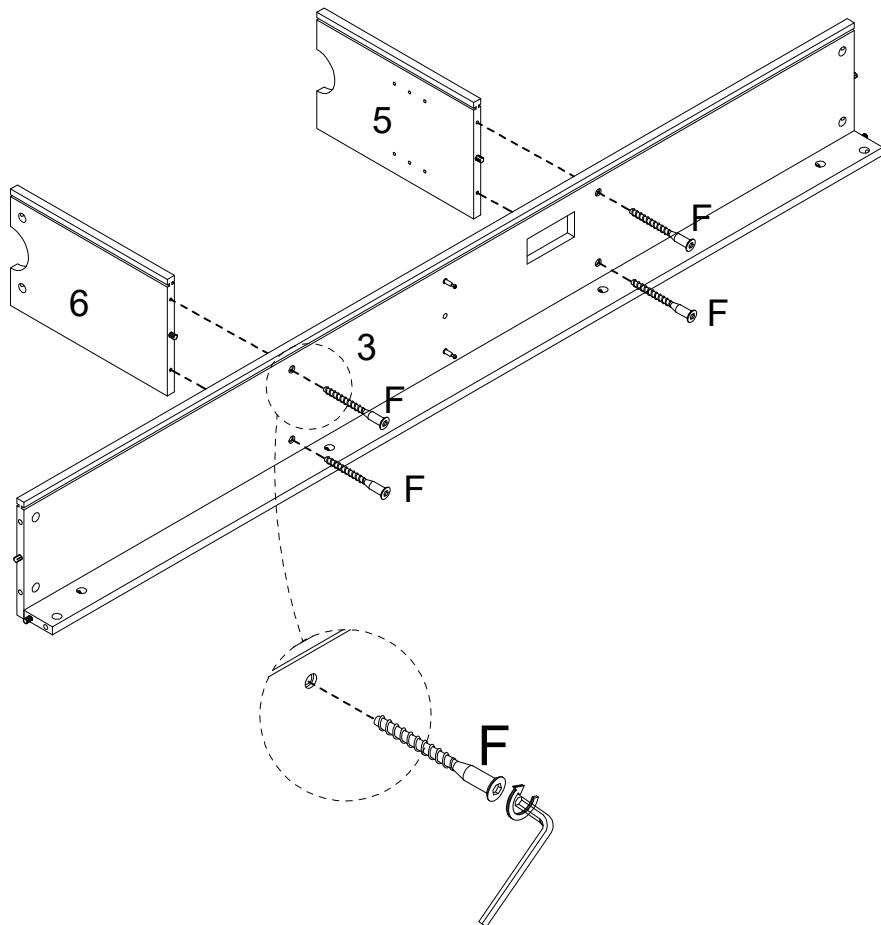


G	F
X1	X4

## Step 8

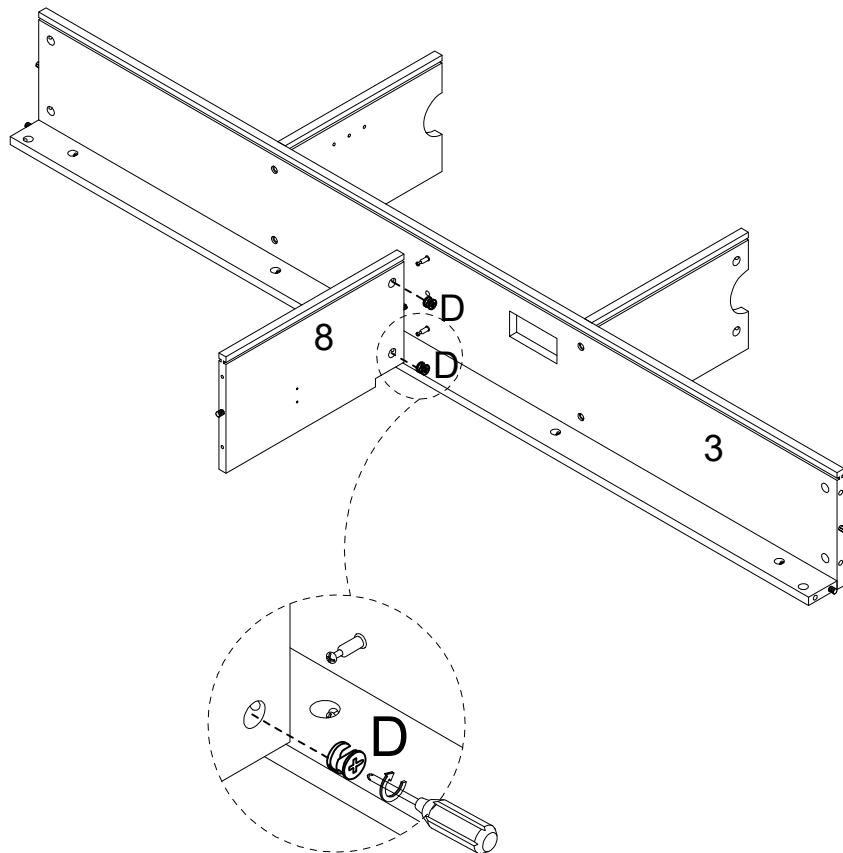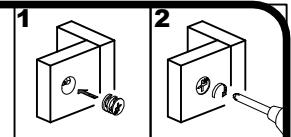


D
X2

## Step 9


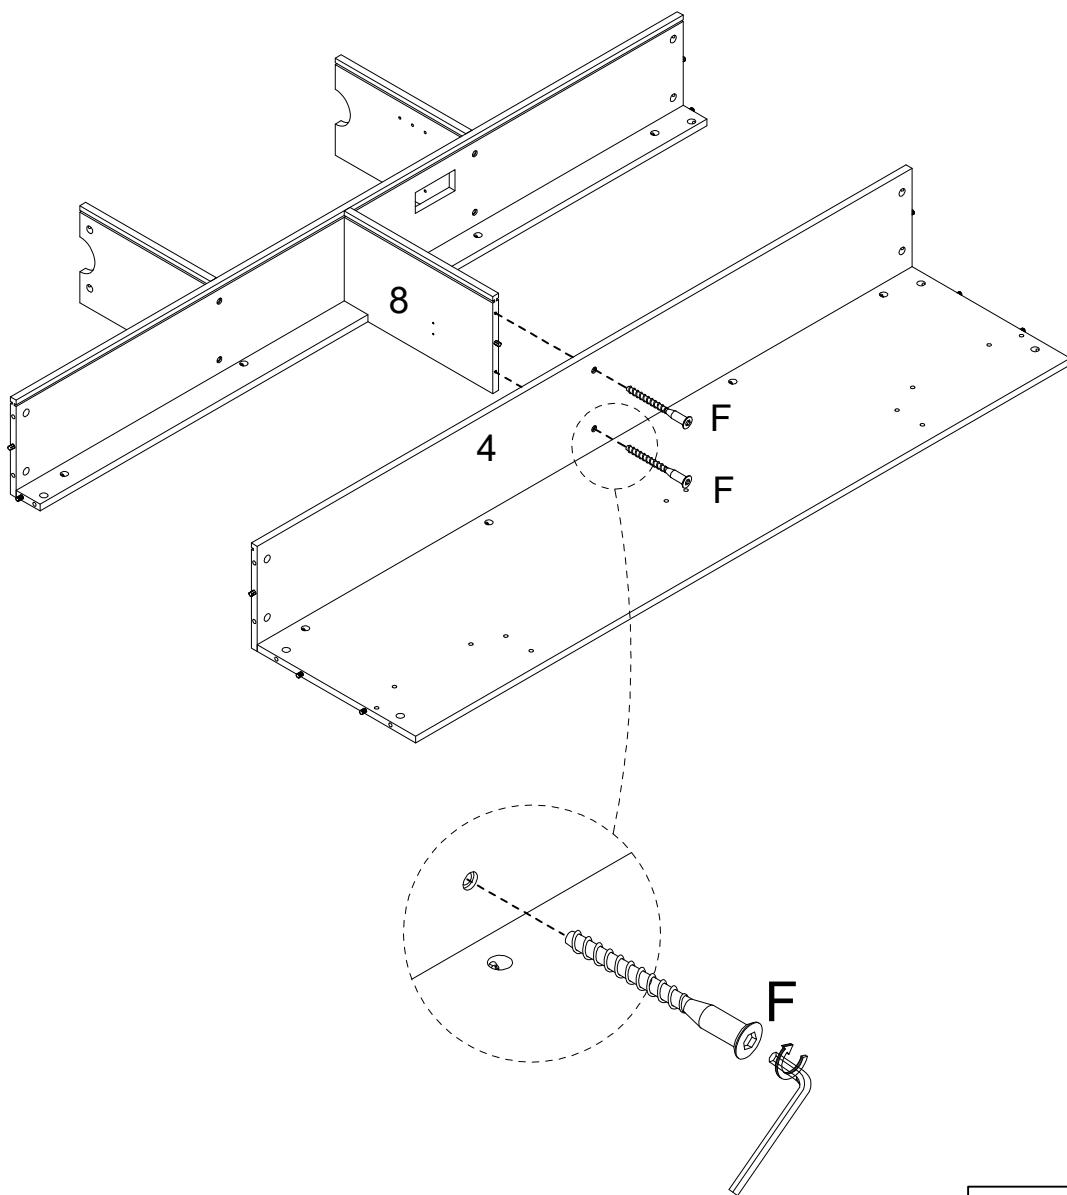


G	F
X1	X2

## Step 10



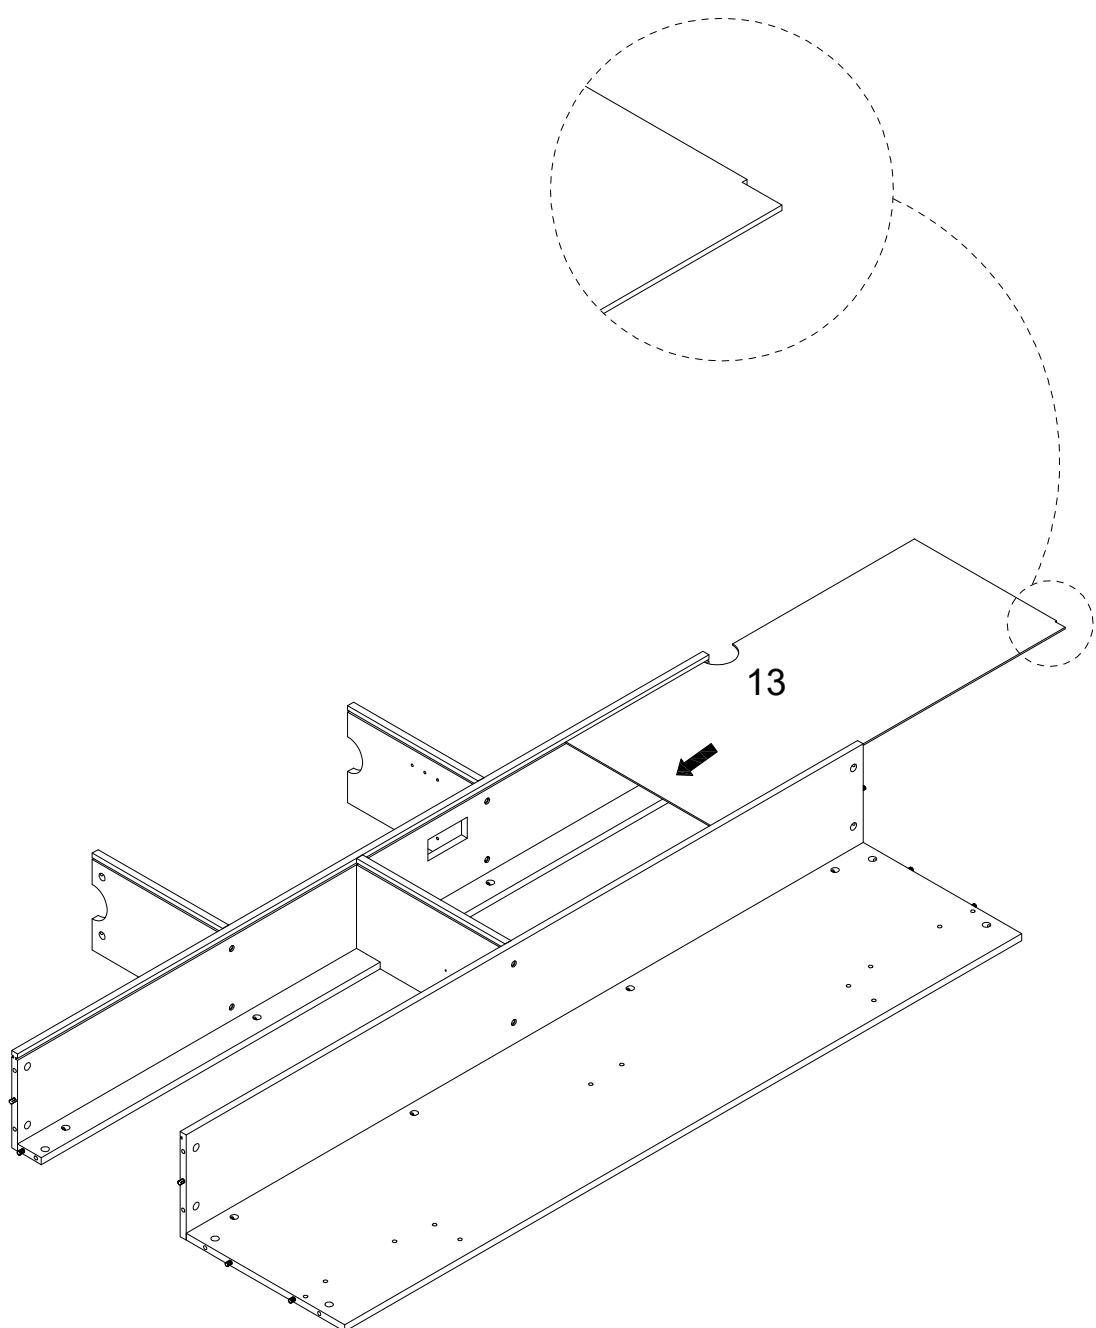


# Step 11

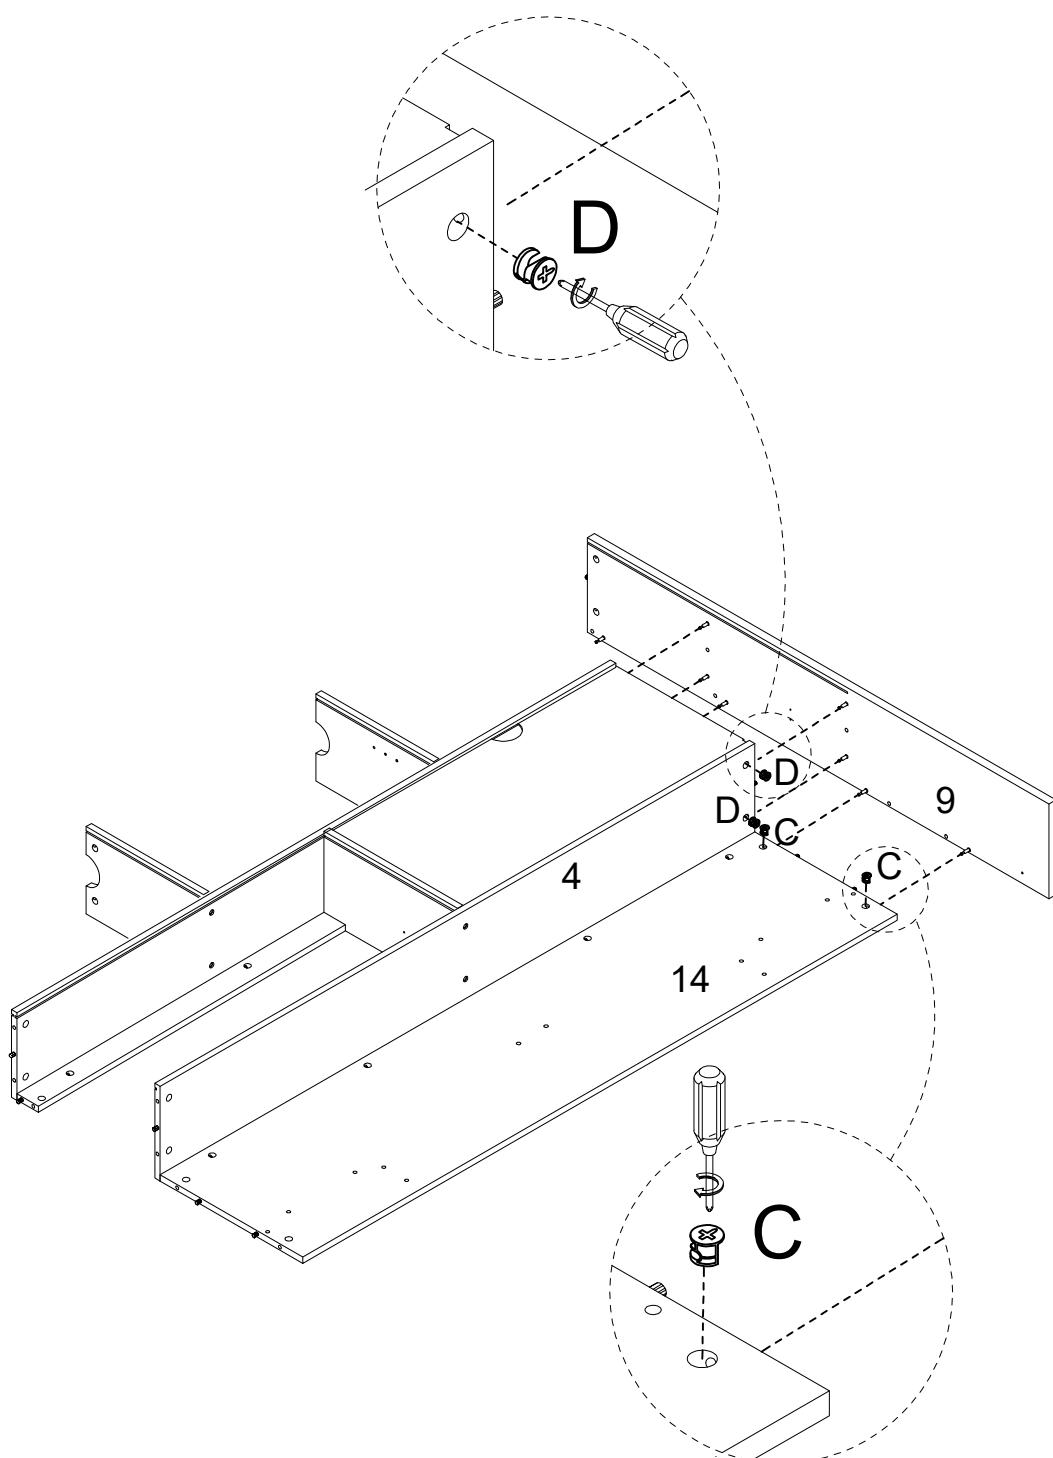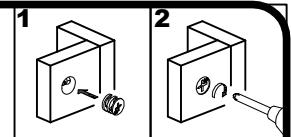


D	C
	
X2	X2



## Step 12

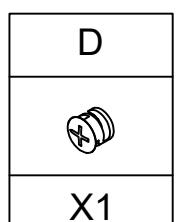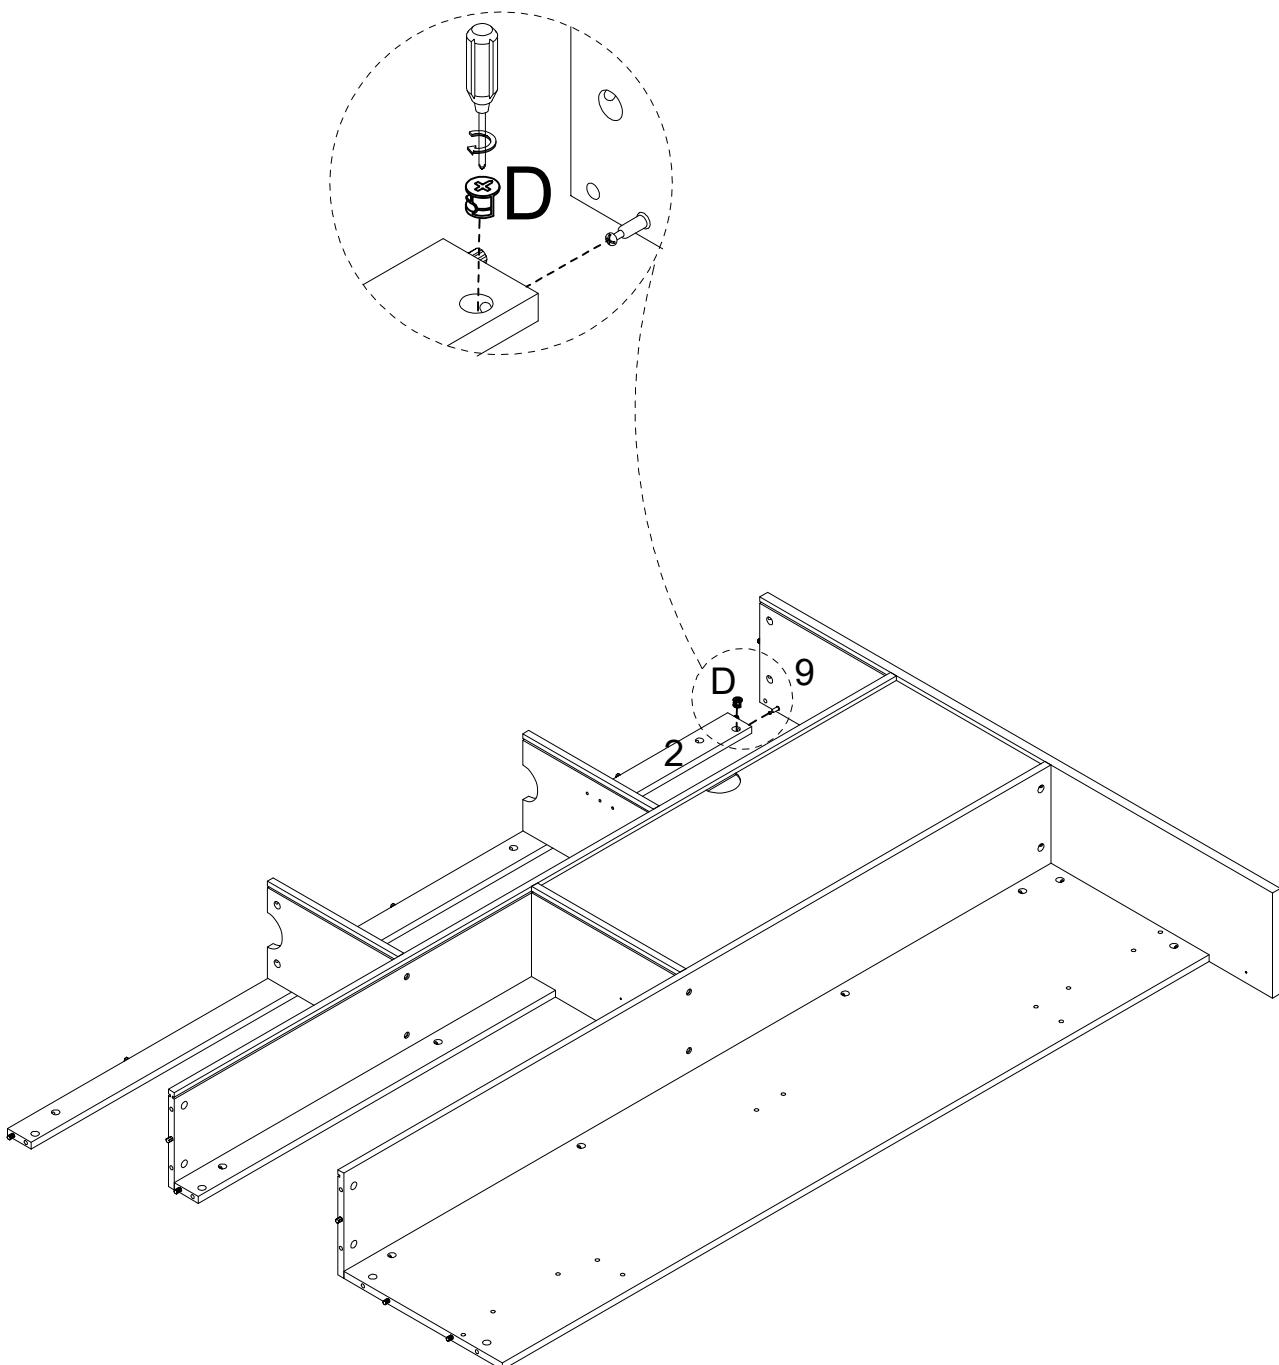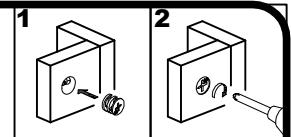

## Step 13

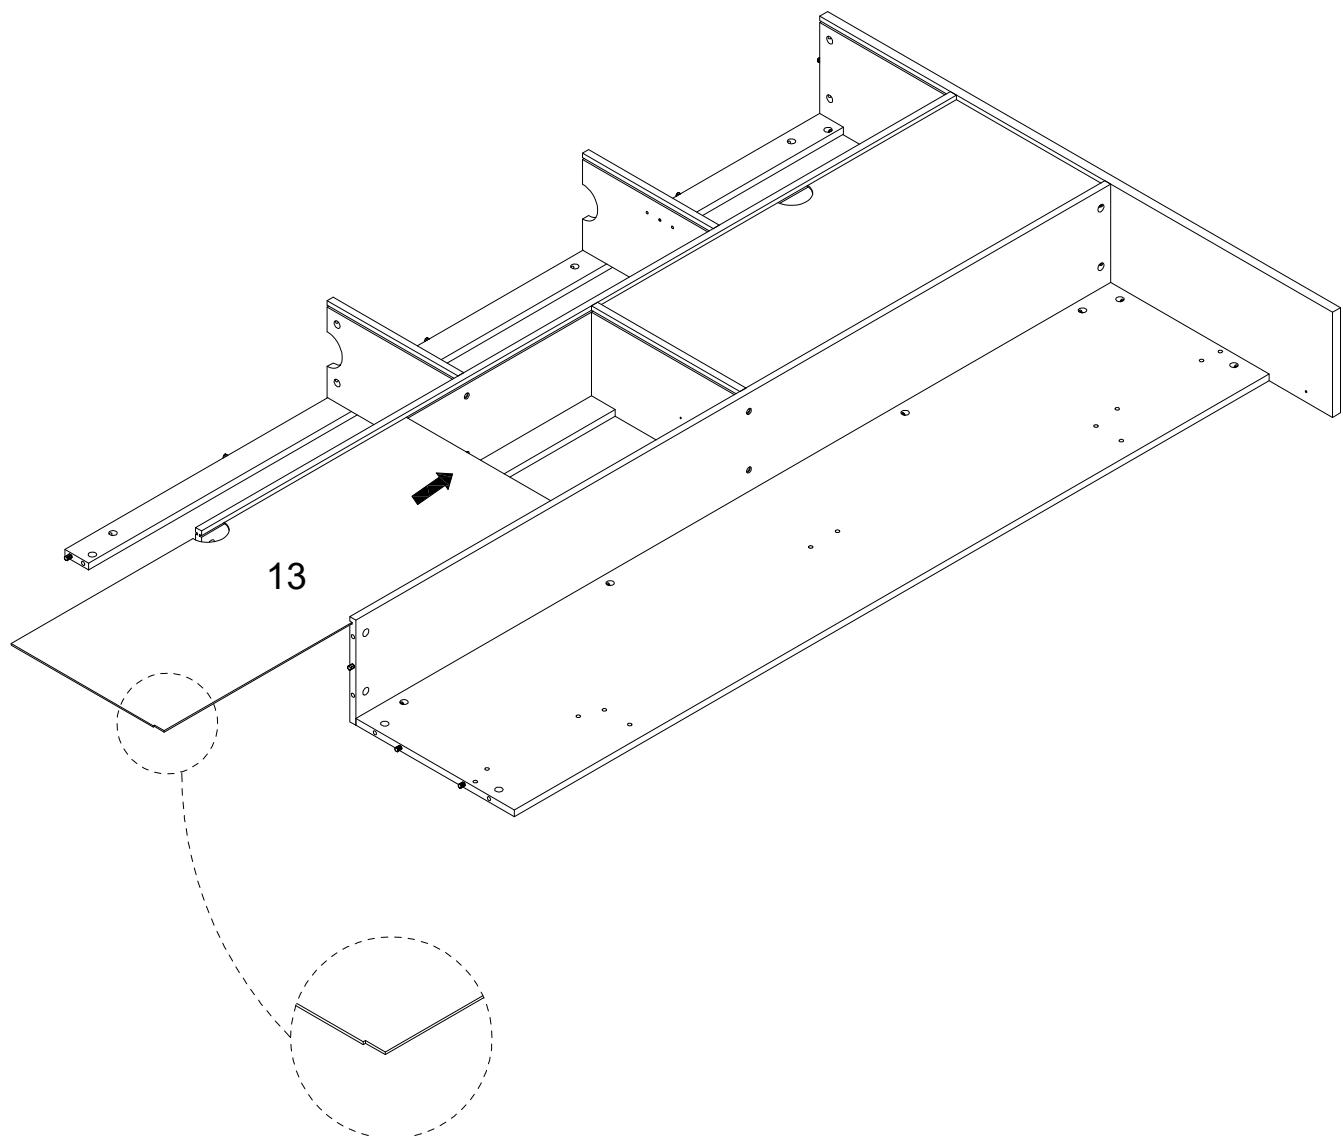


# Step 14


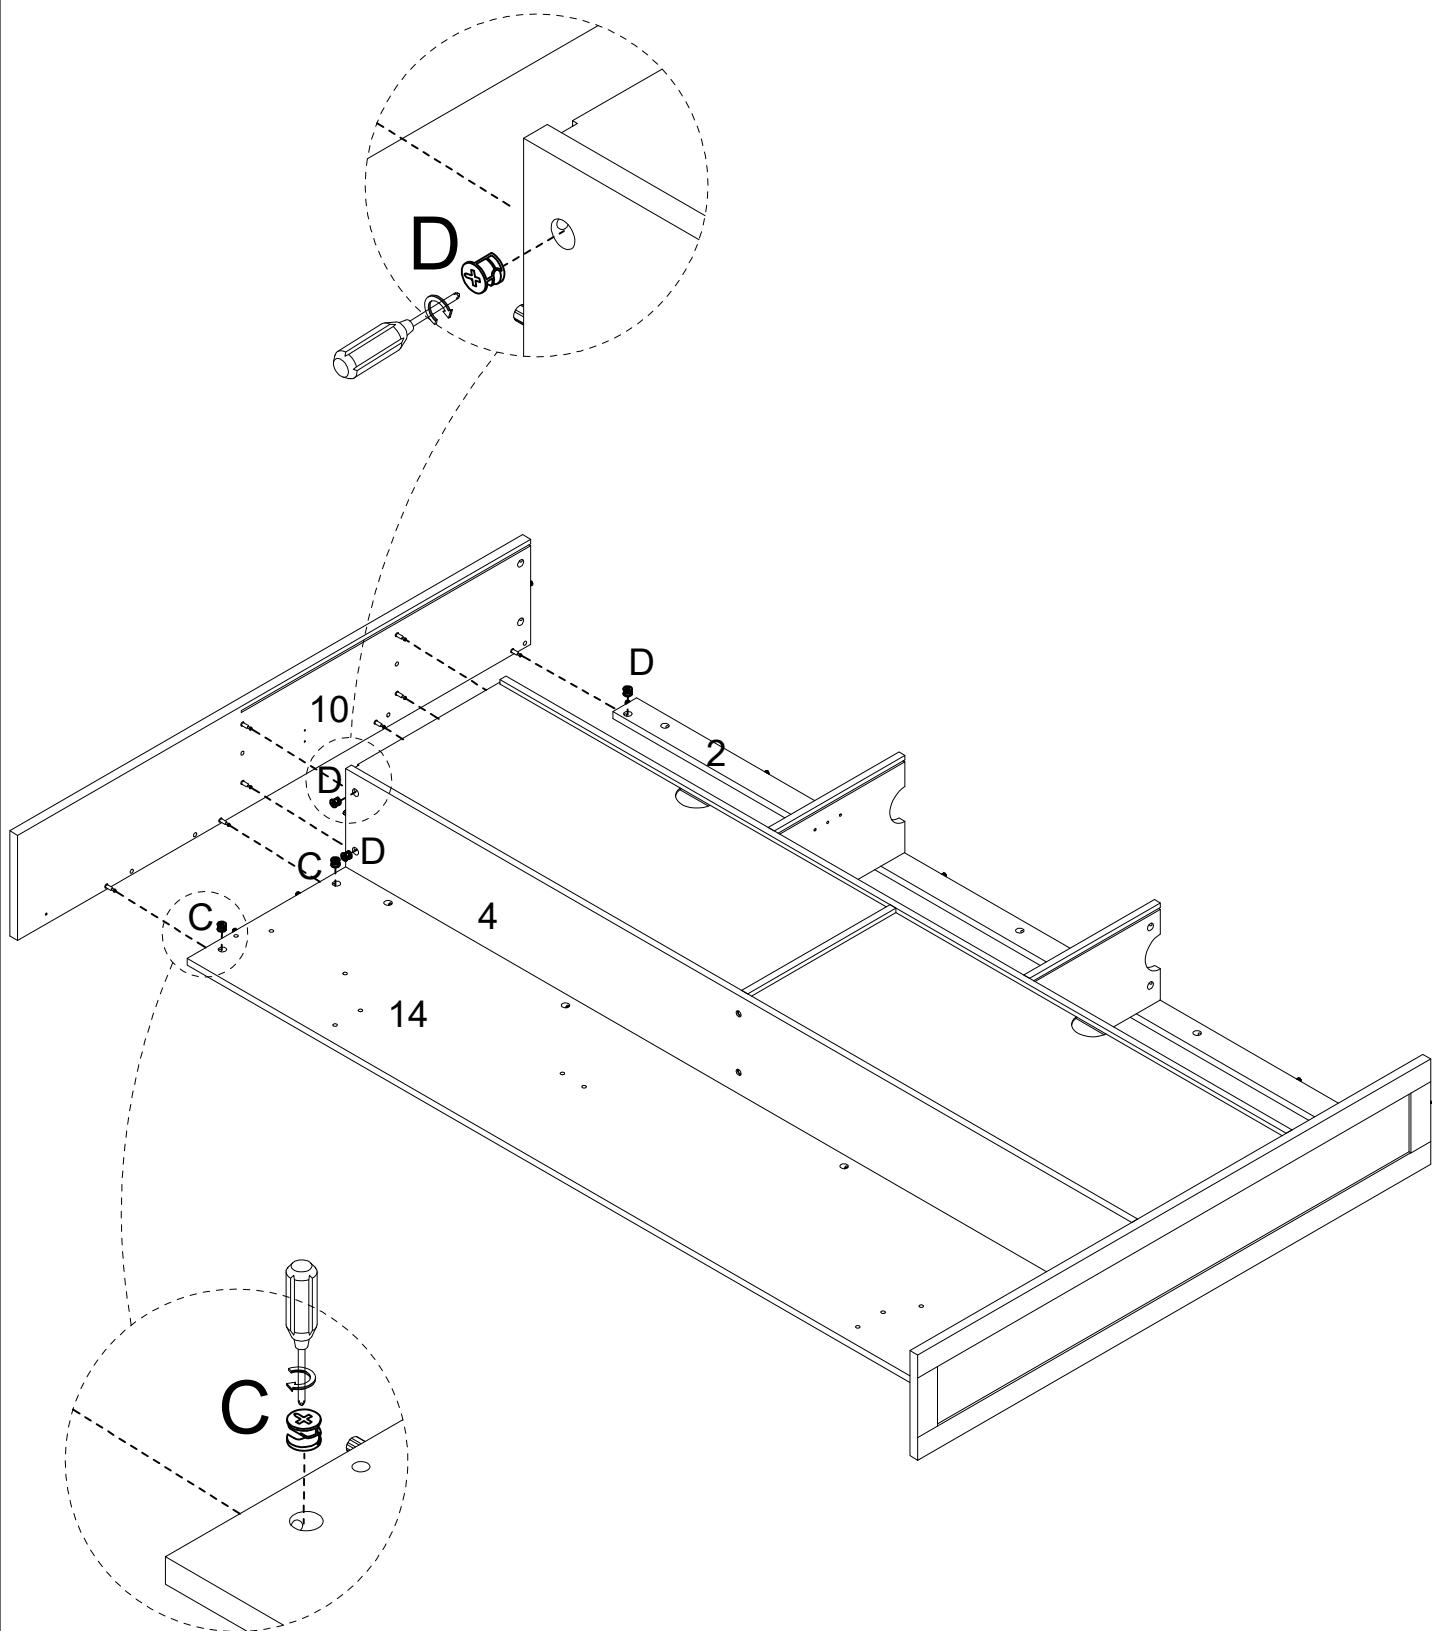
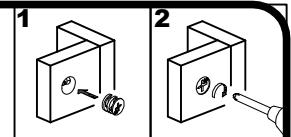


D	C
X3	X2


## Step 15

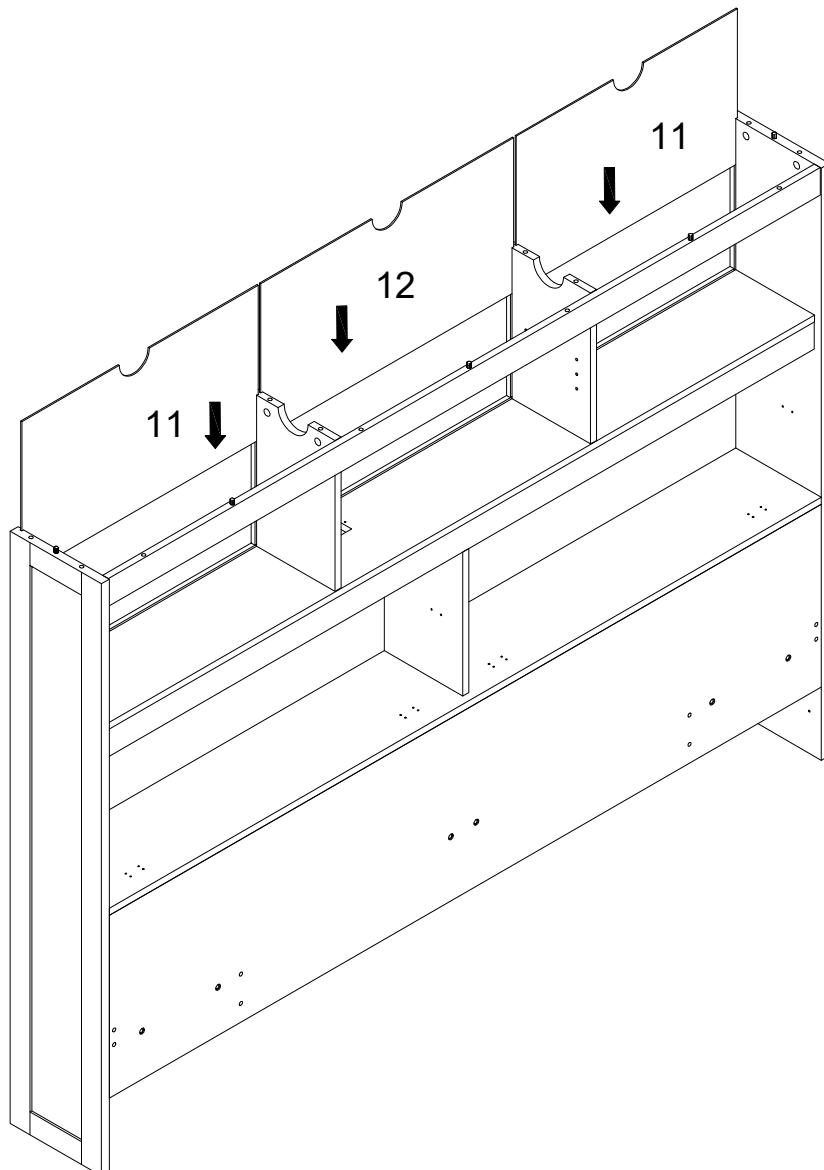


# Step 16

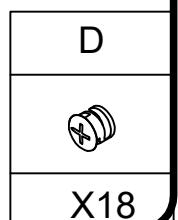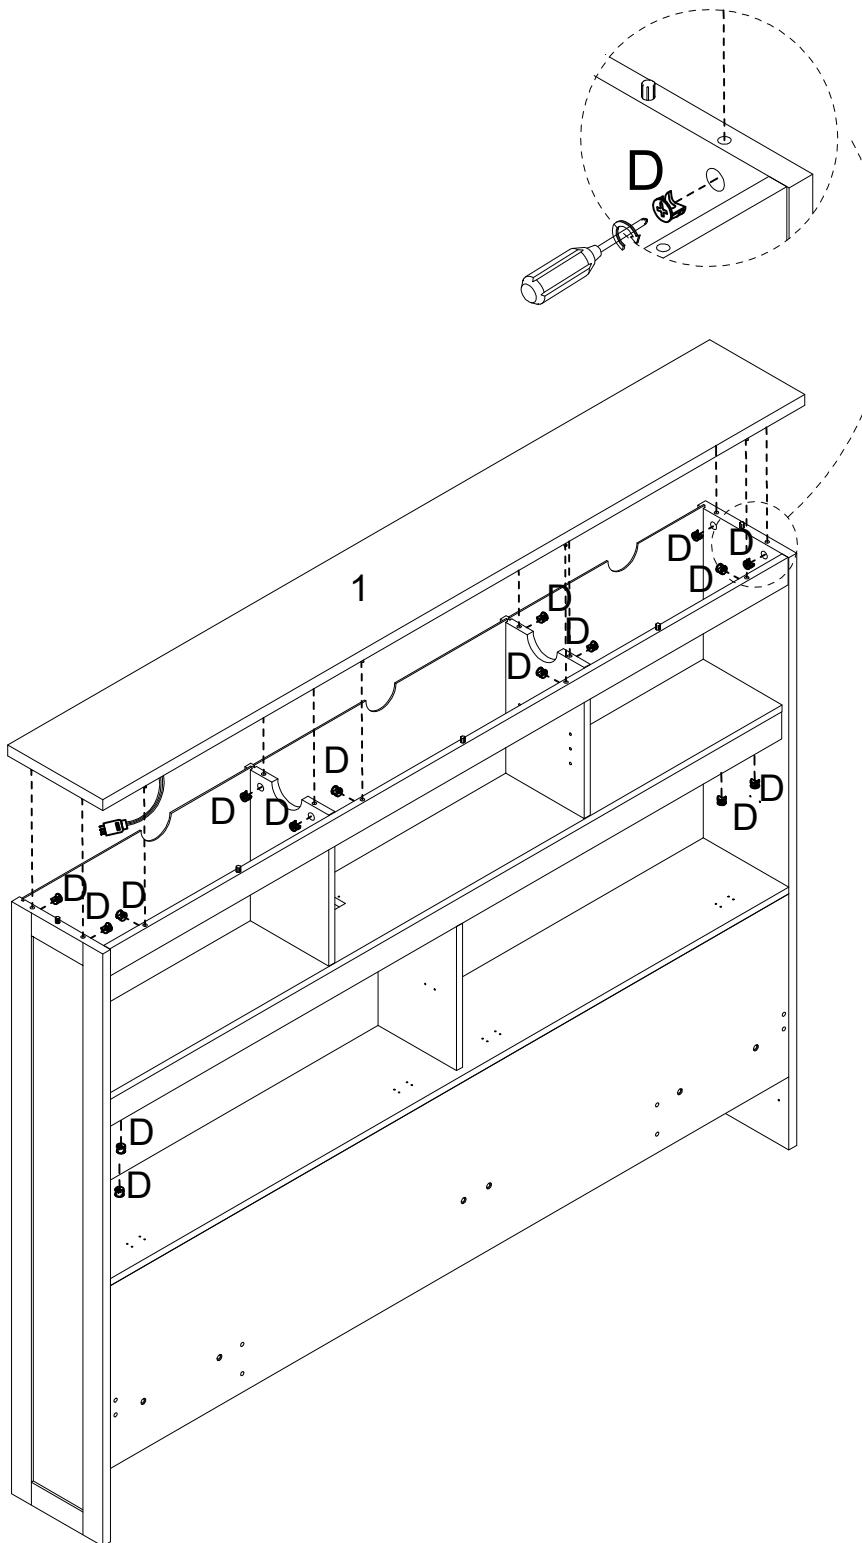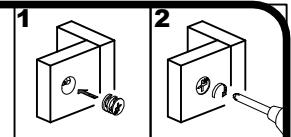

## Step 17

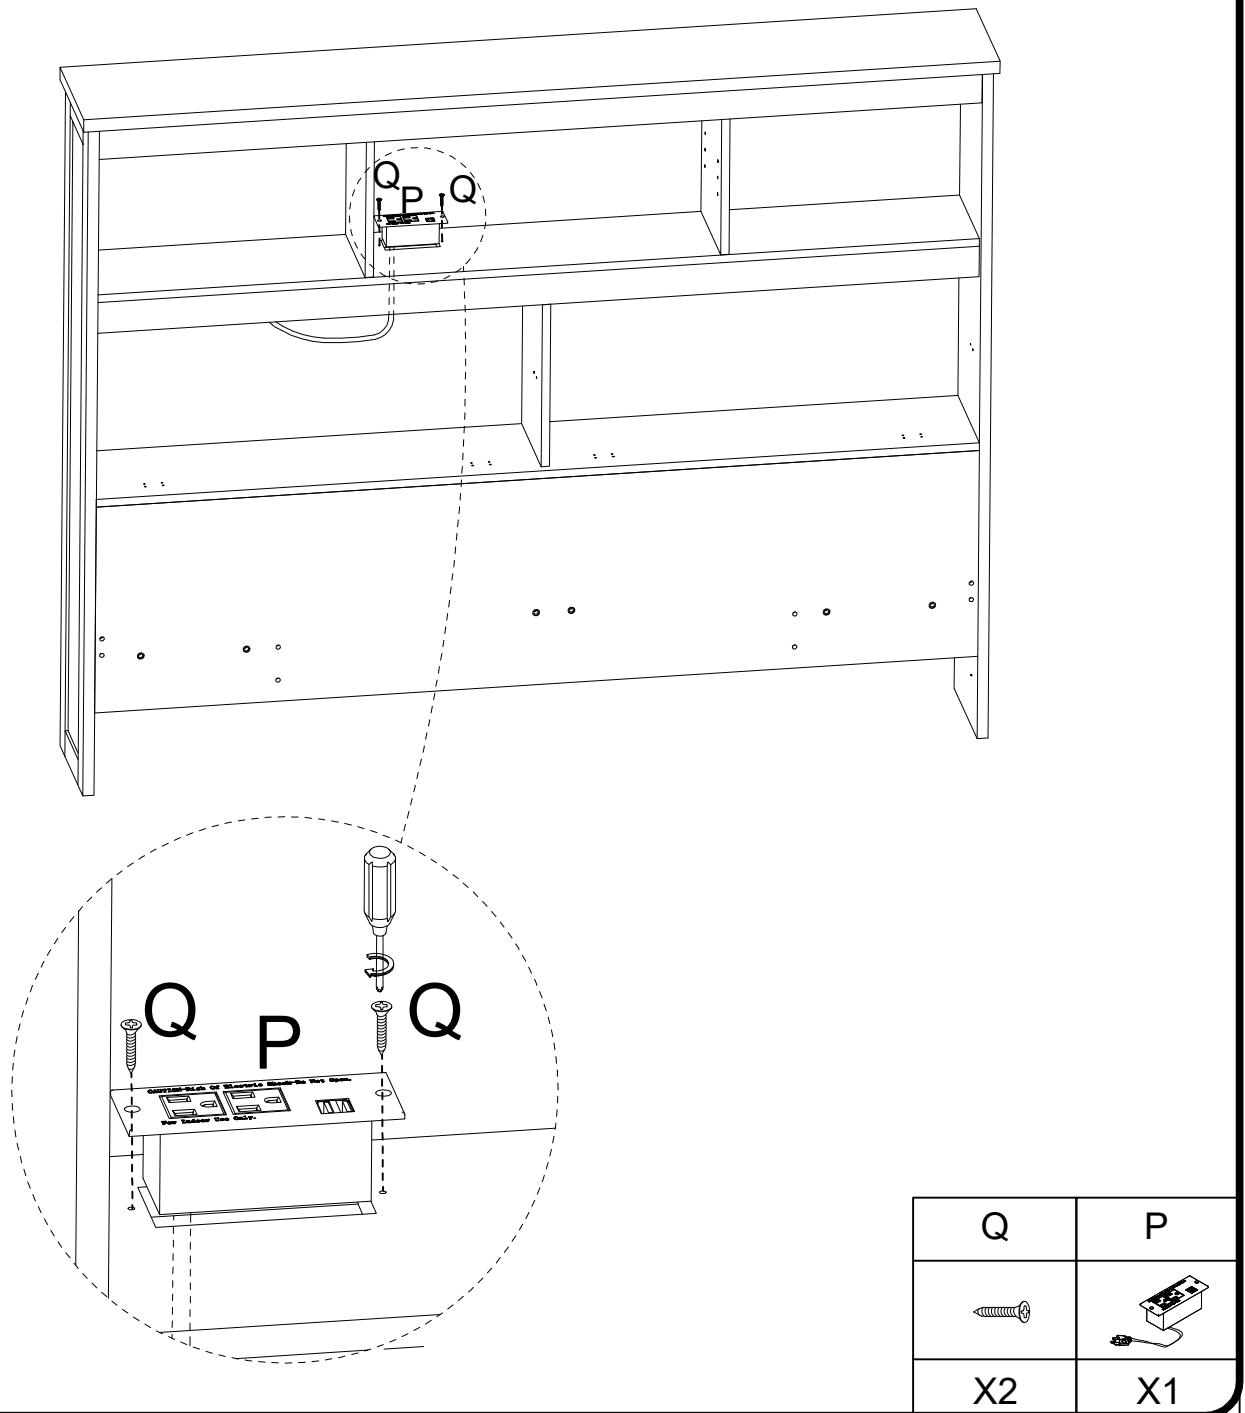


## Step 18

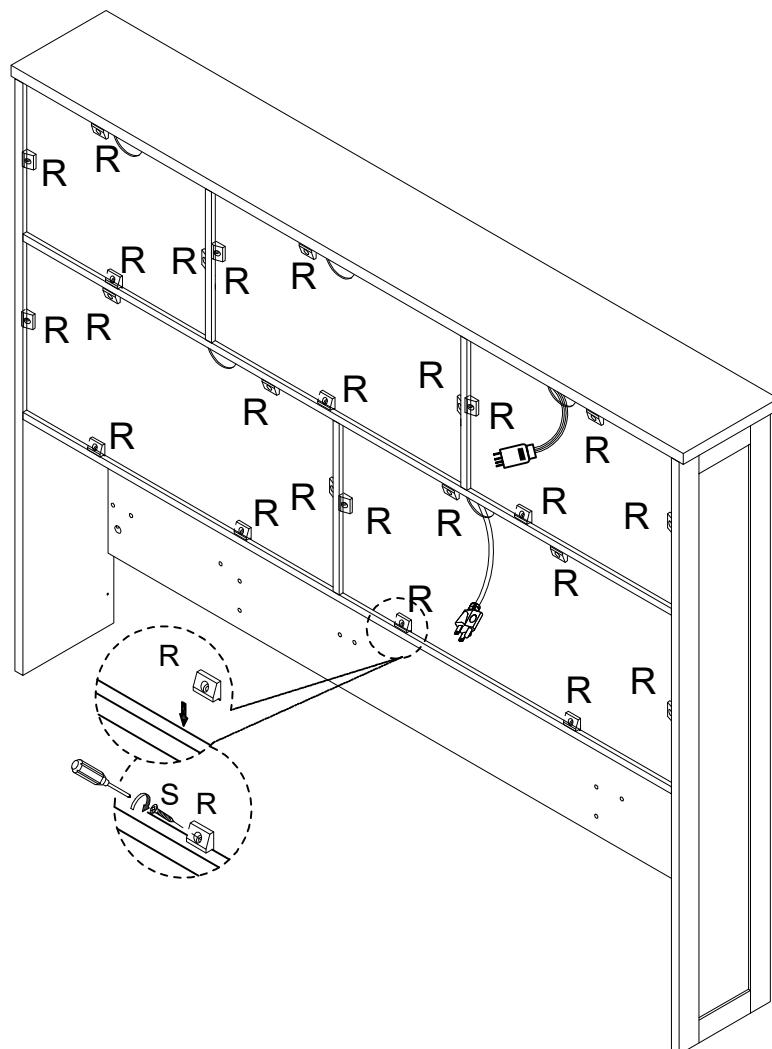



S	R
X24	X24

## Step 19

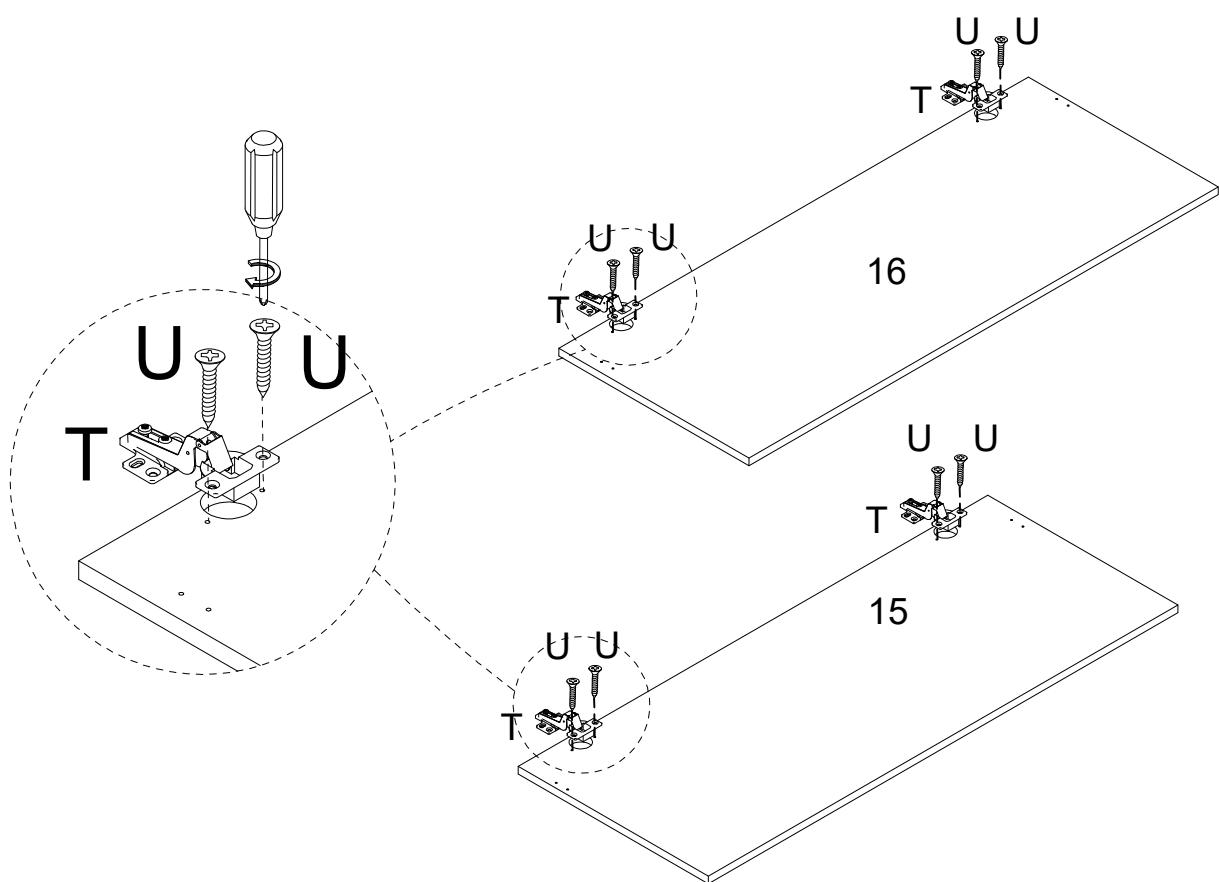


U	T
X8	X4

## Step 20

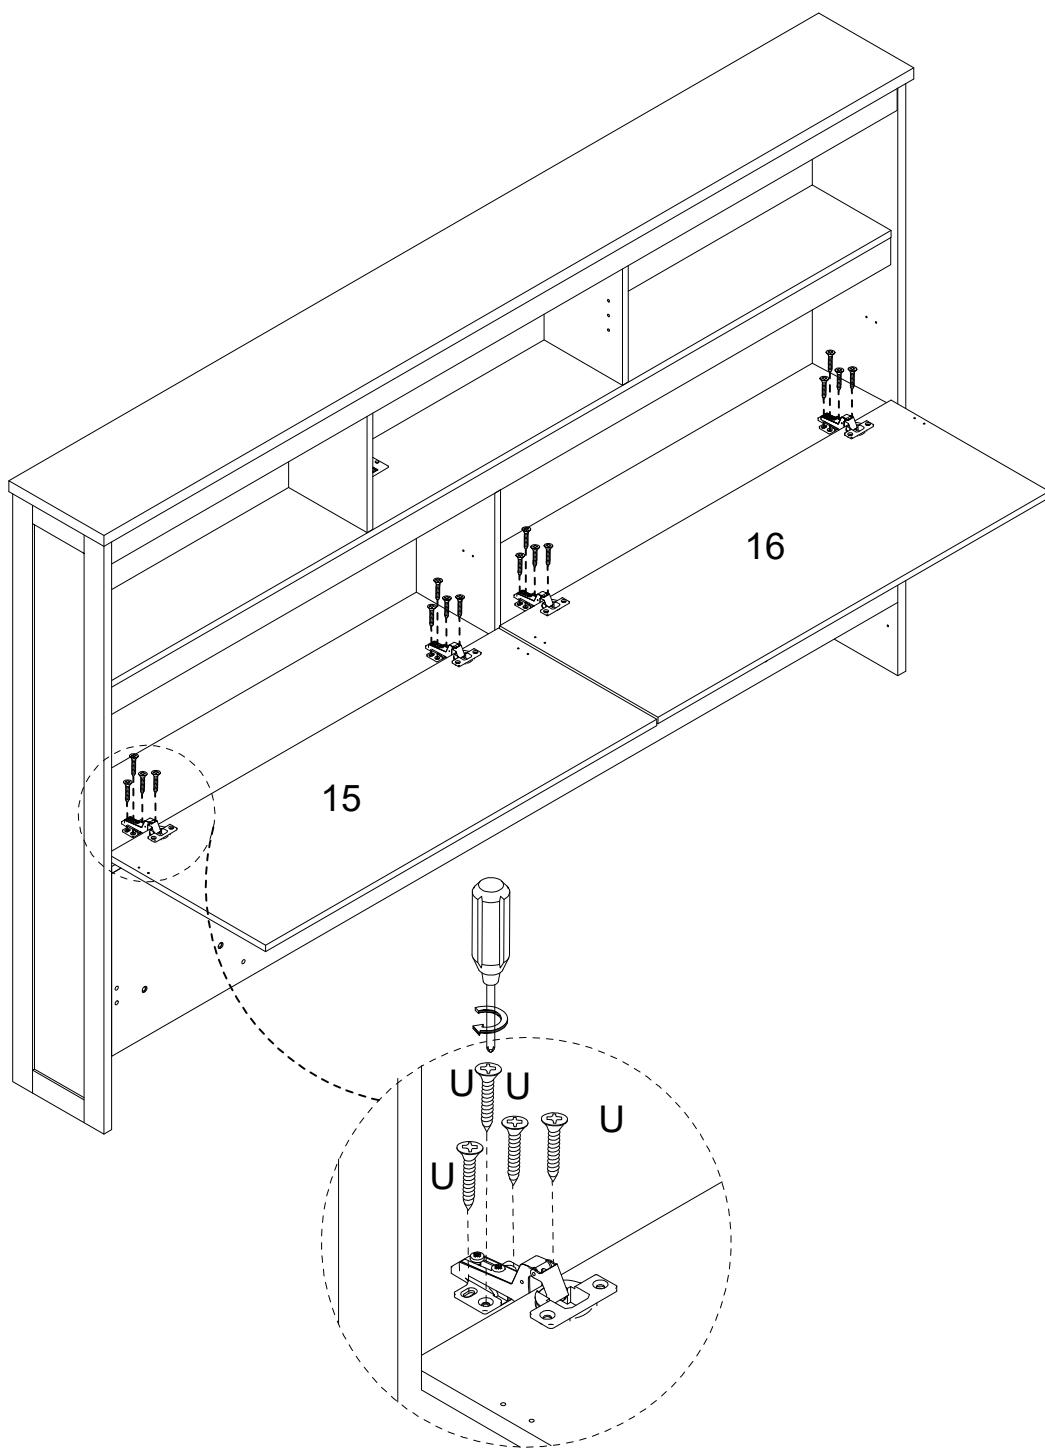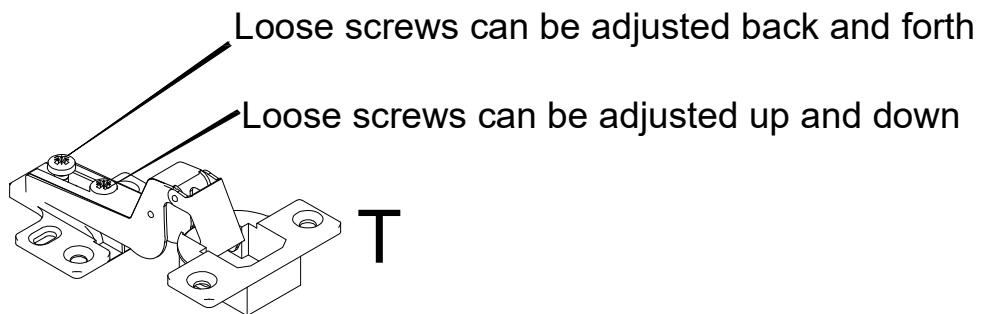


## Step 21

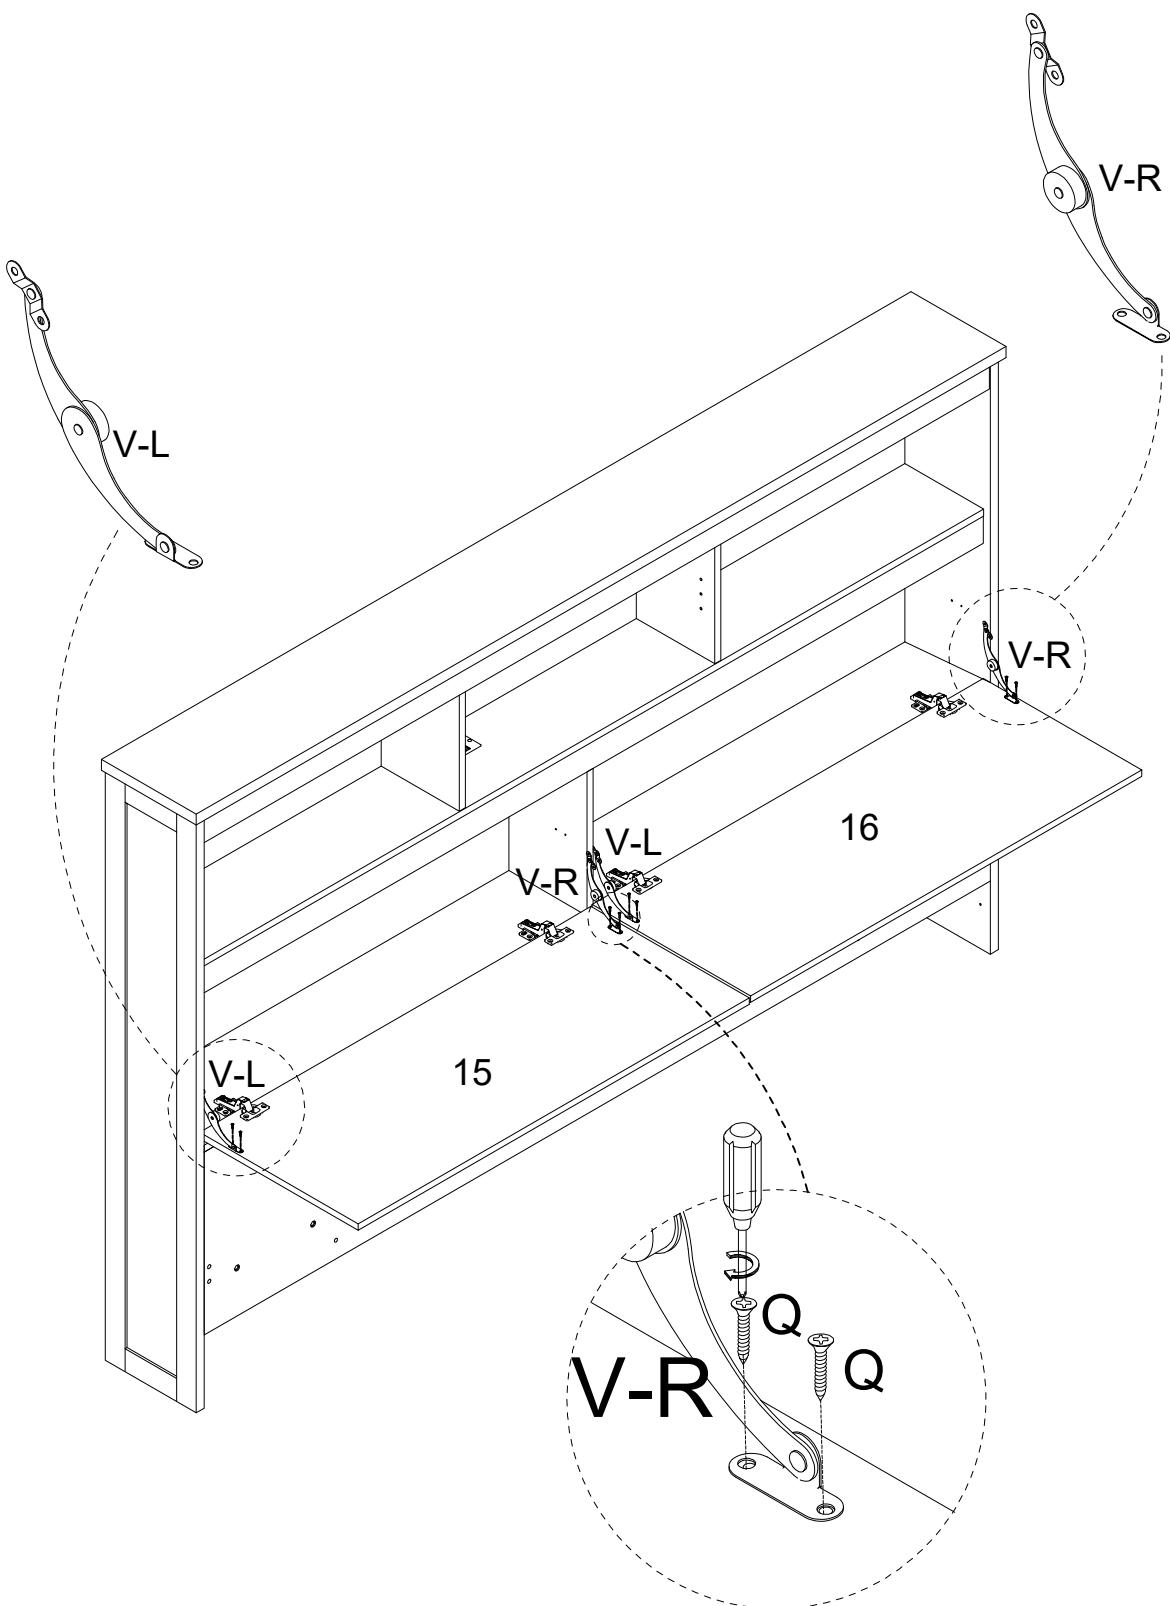


Q	V-L	V-R
X8	X2	X2

## Step 22

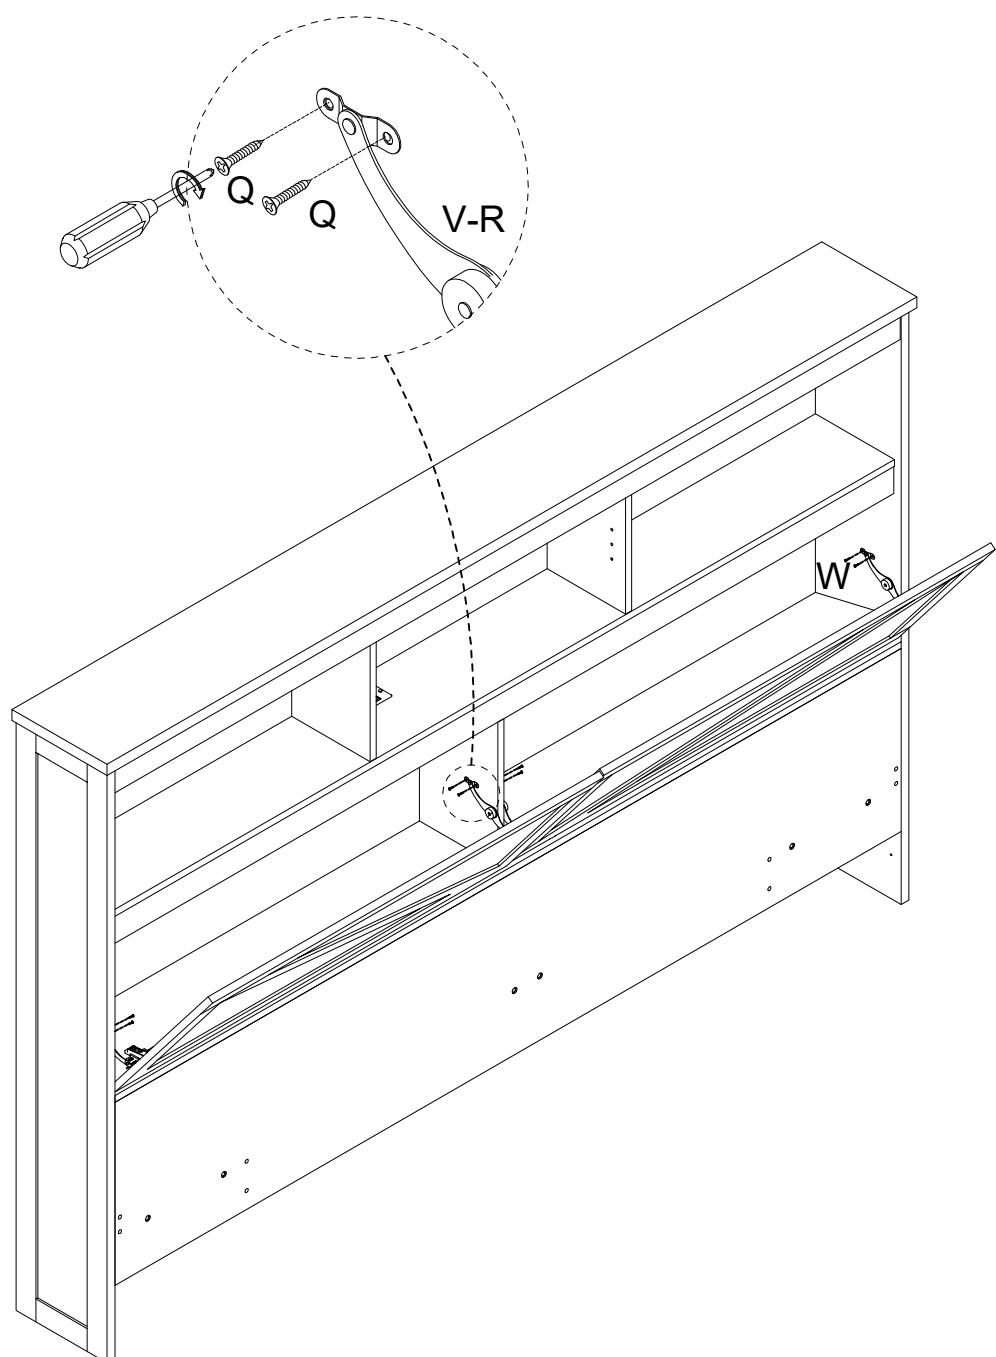


Q
~~~~~
X8

## Step 23


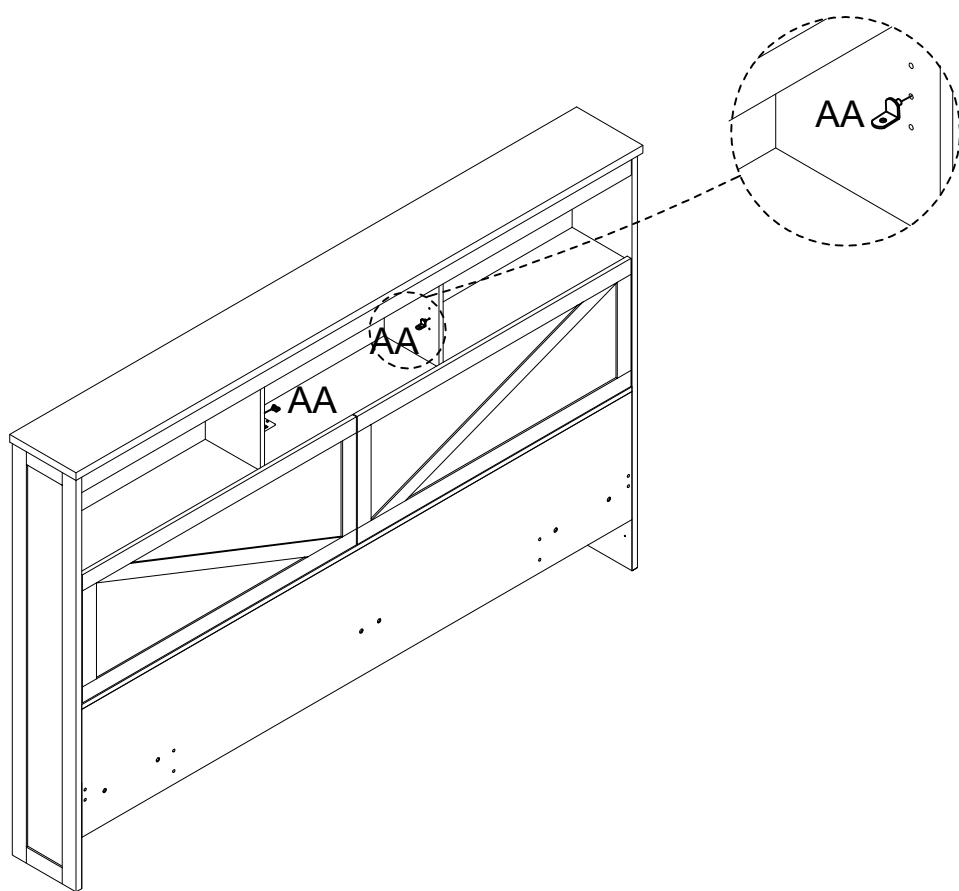


AA
↙
X4

## Step 24

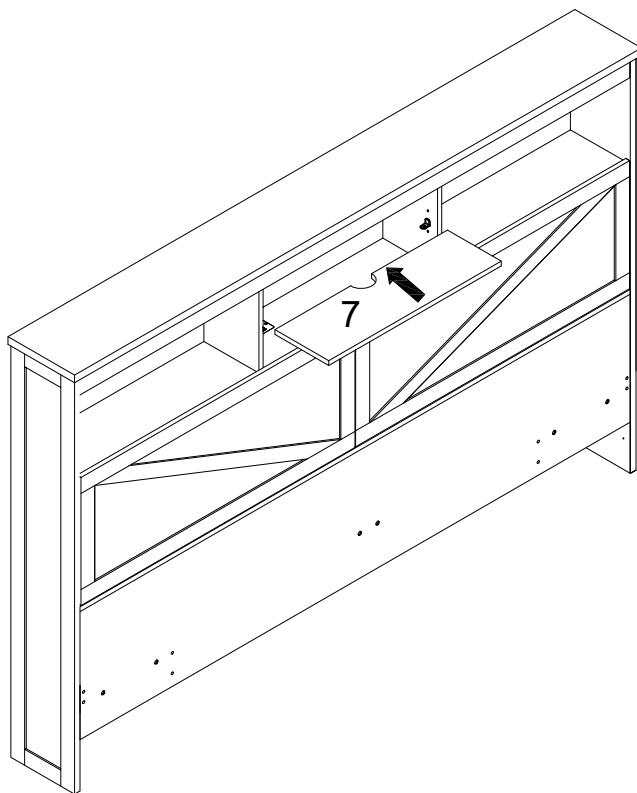




## Step 25

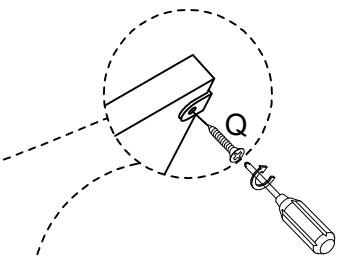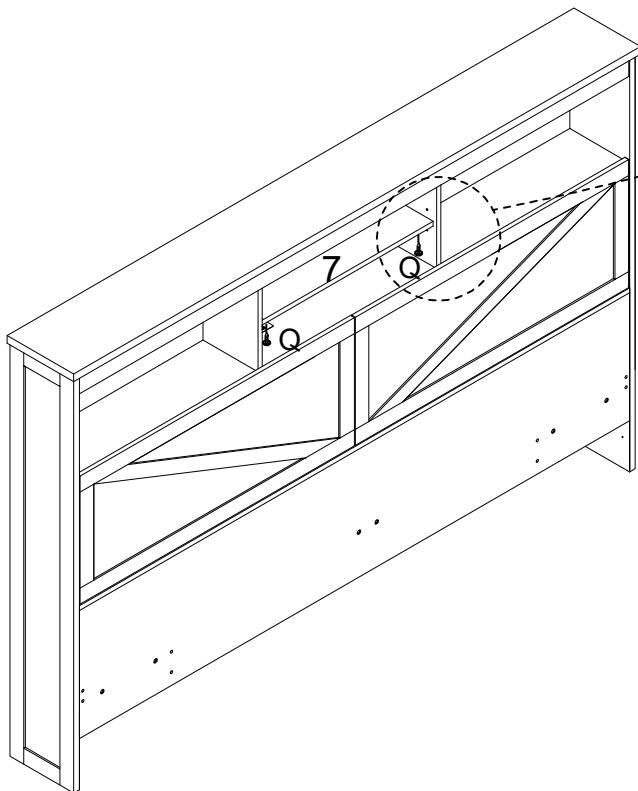

Due to their own needs,  
you can lock or not to lock  
this layer screw

Q
X2

## Step 26

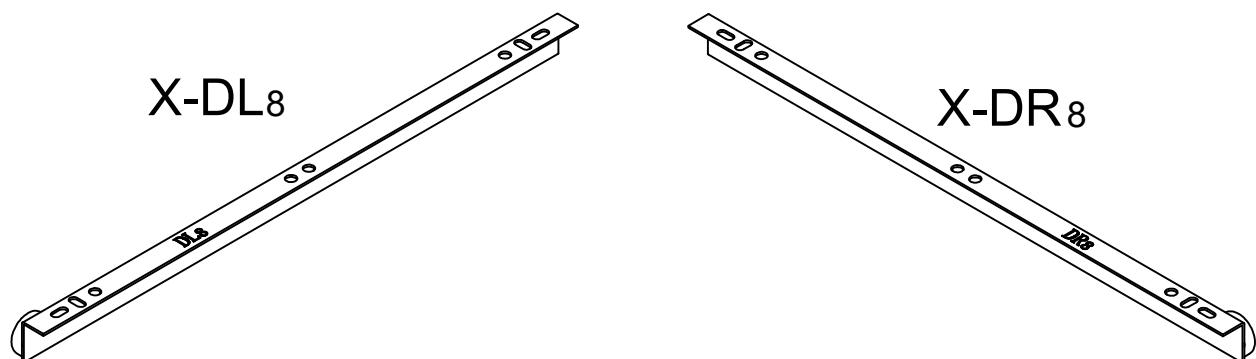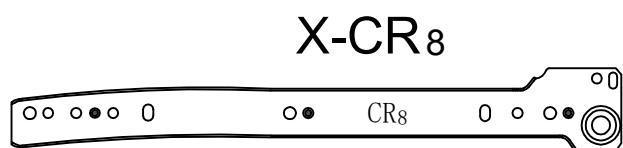
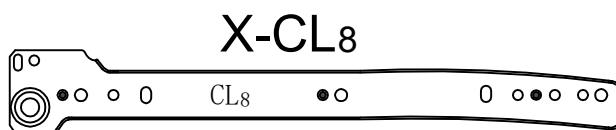


# Step 27




## NOTE:

Refer to the images to identify X-CL8 (left) and X-CR8 (right). Attach X-CL8 to #22 panel and X-CR8 to #24 panel. [R] screws must go in the exact spots shown.

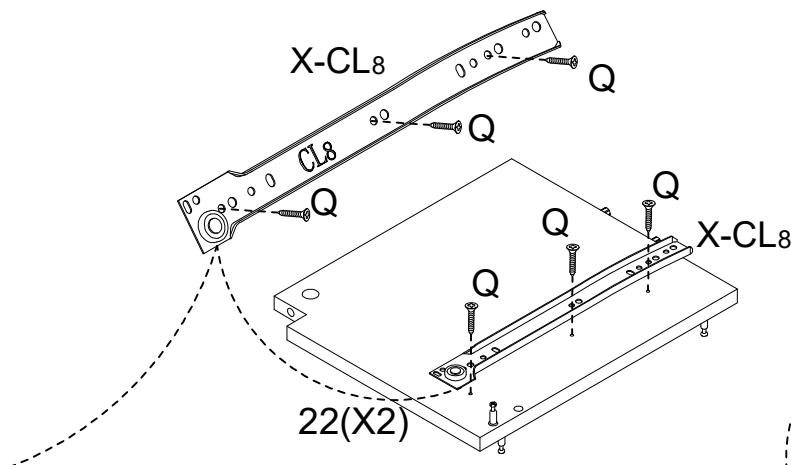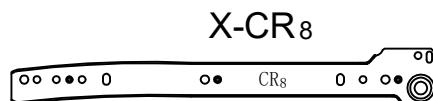


Make sure the rollers on the slides face downward.

Make sure the rollers on the slides face downward.

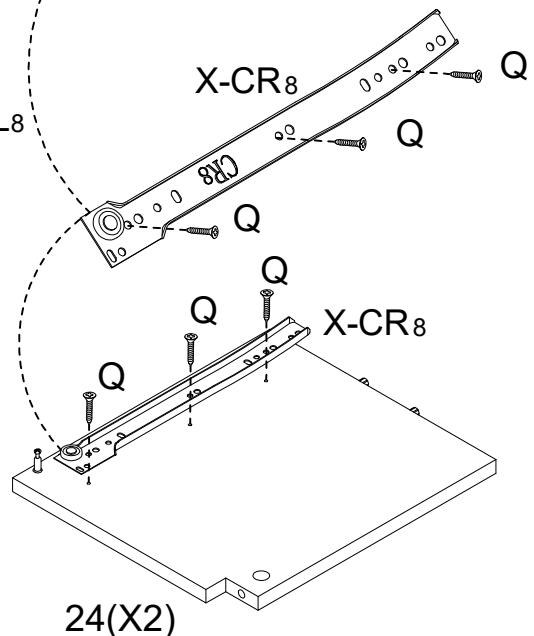




Q	X
X12	X2

## Step 28


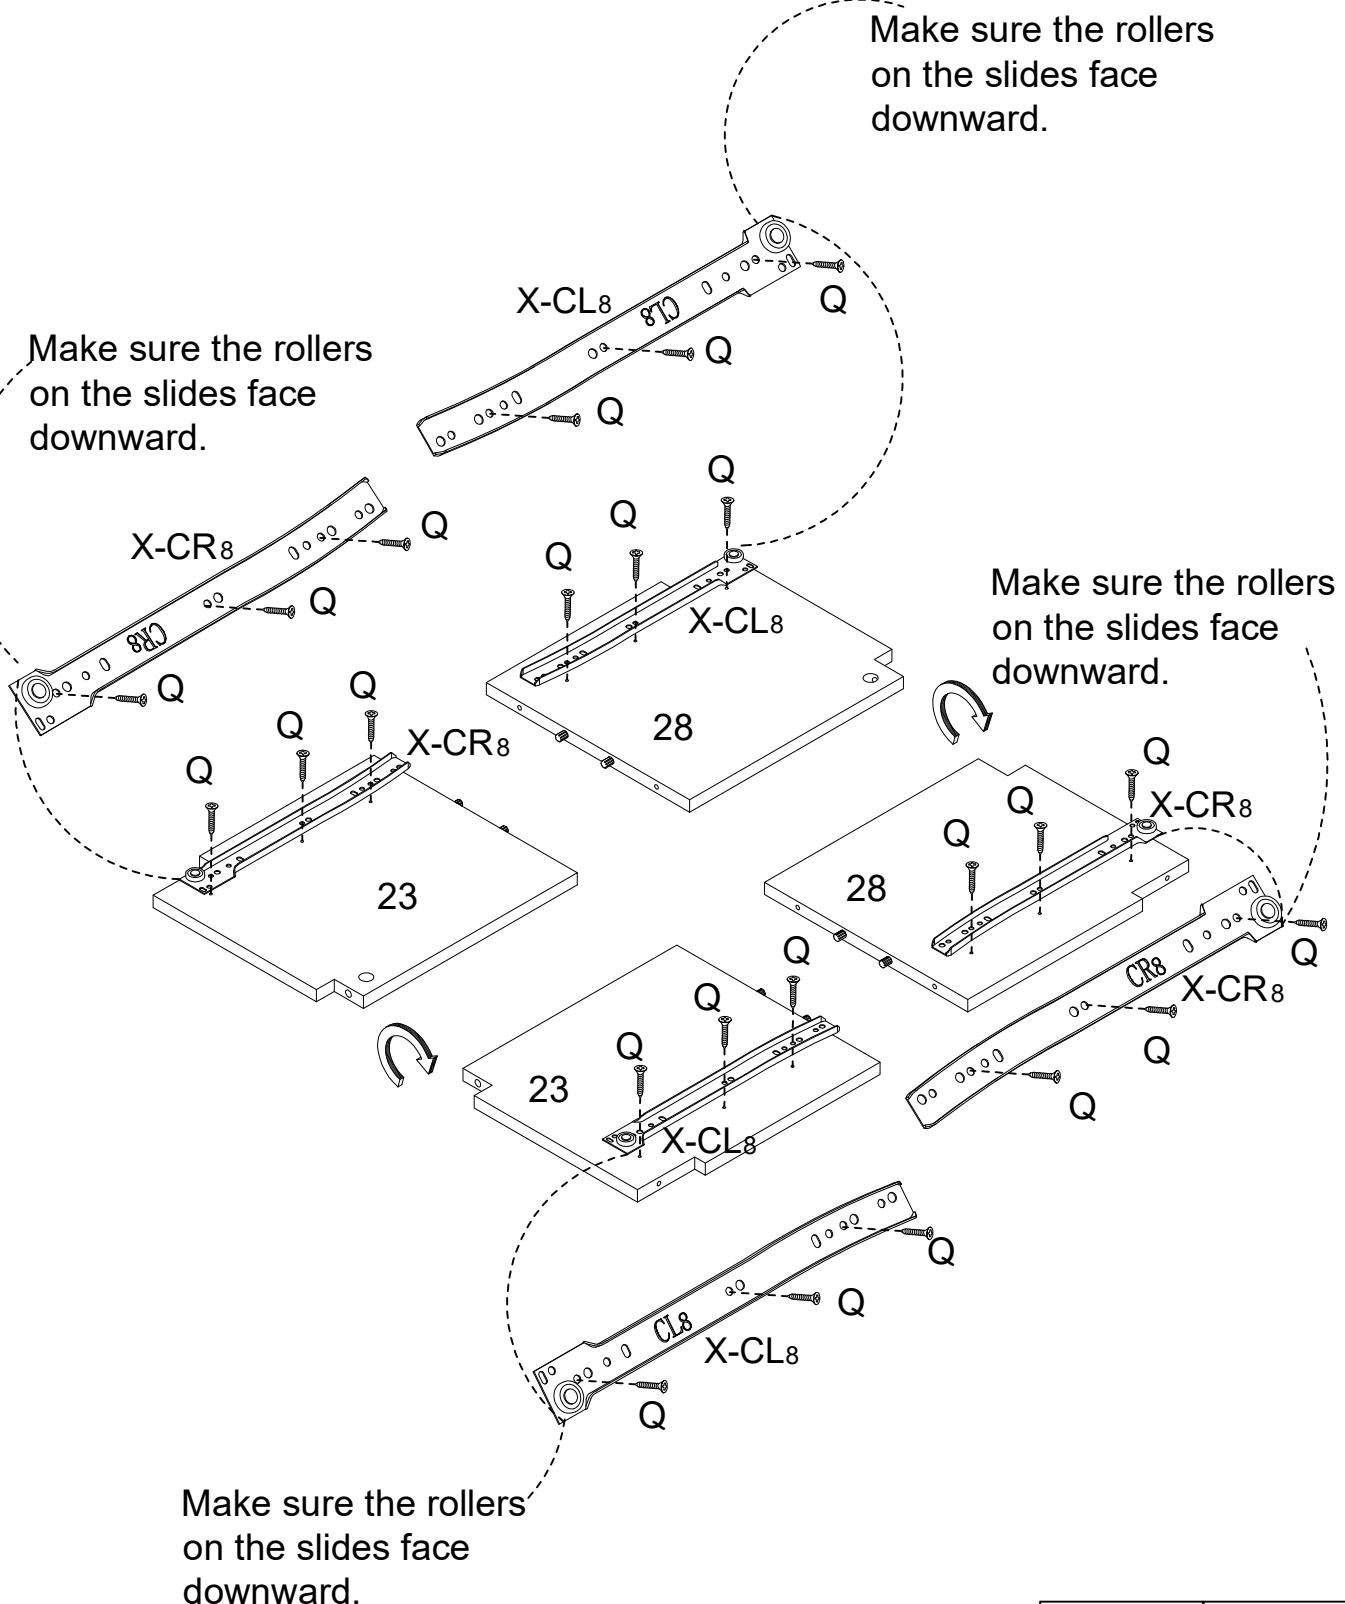


Q	X
X12	X2

# Step 29

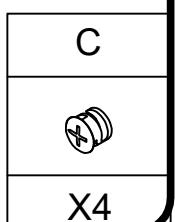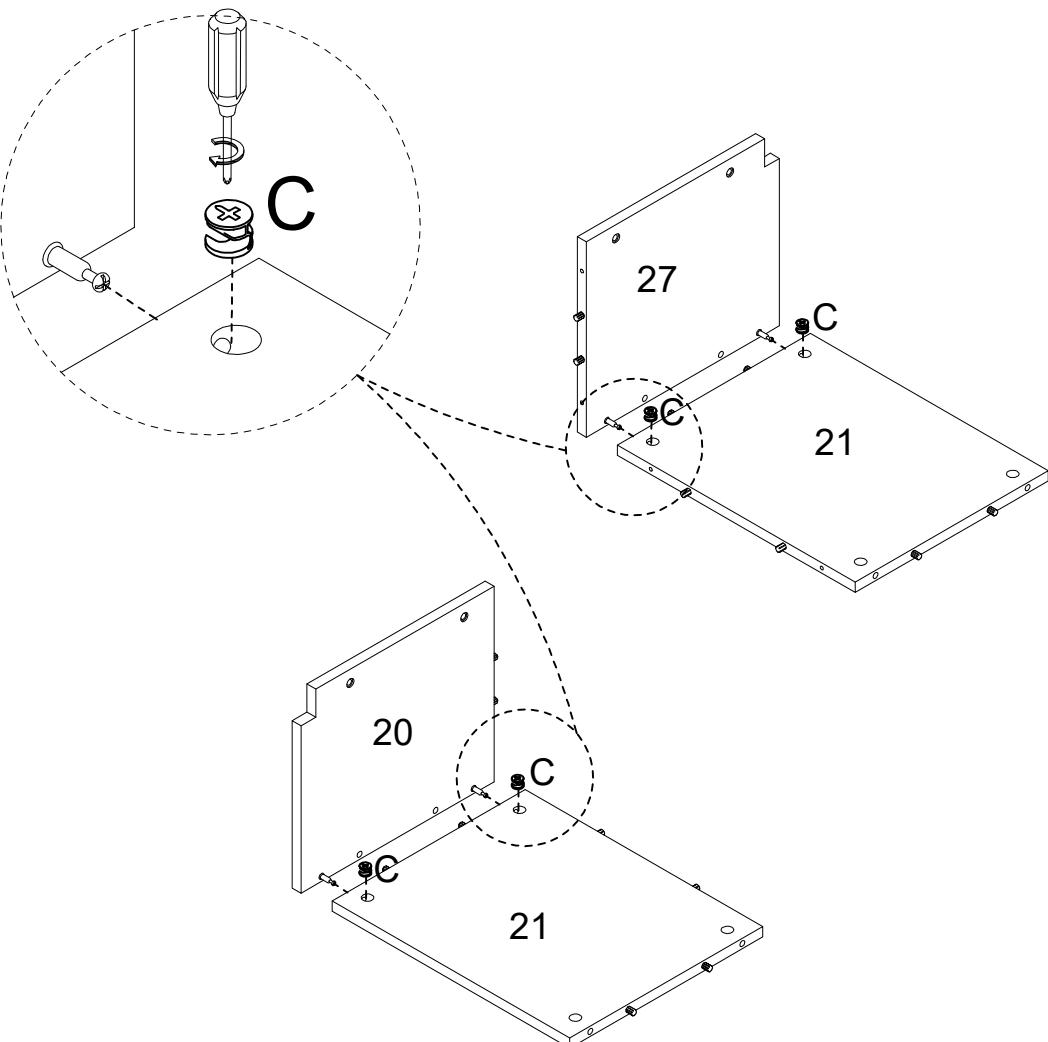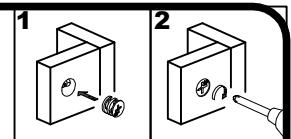


# Step 30

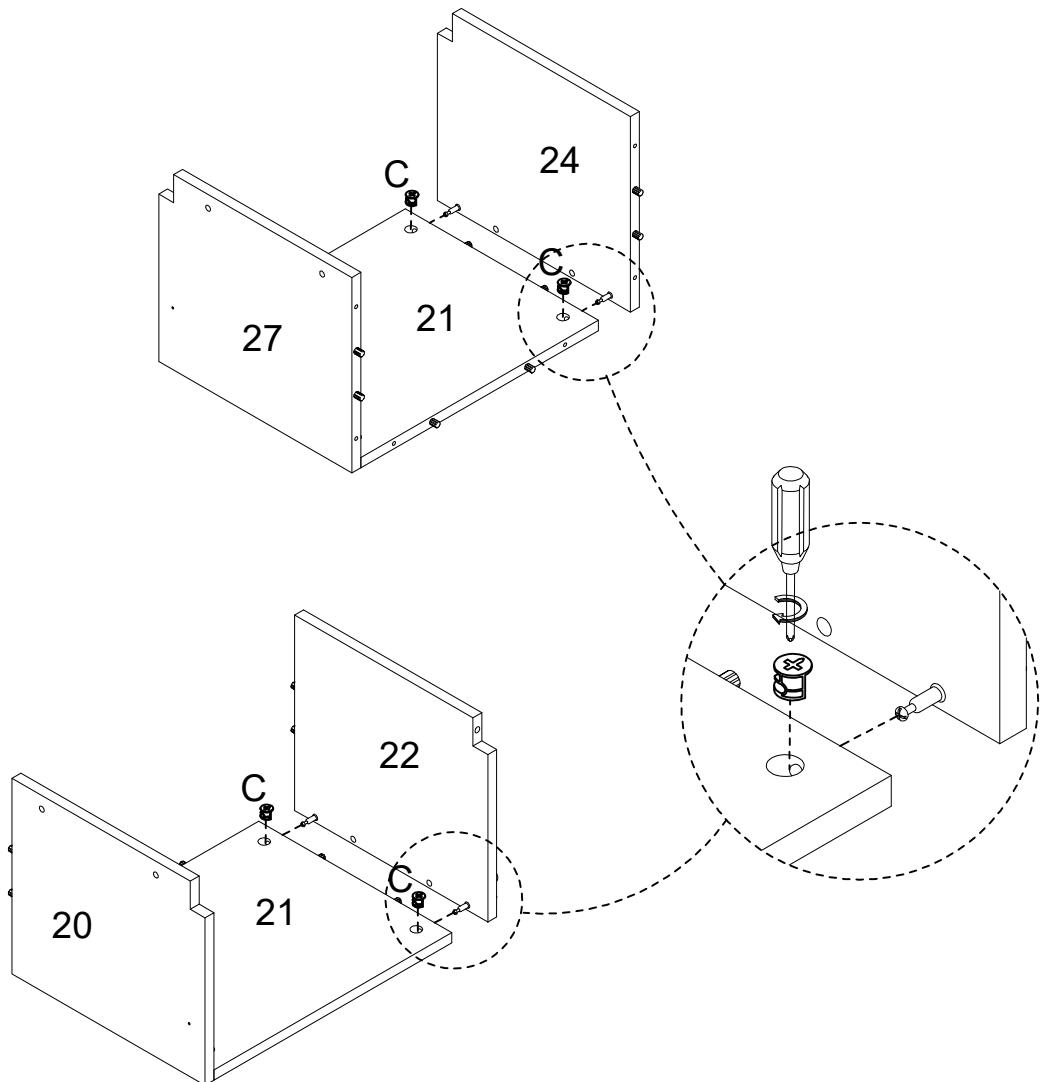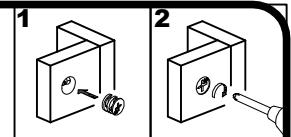




C
X4

## Step 31



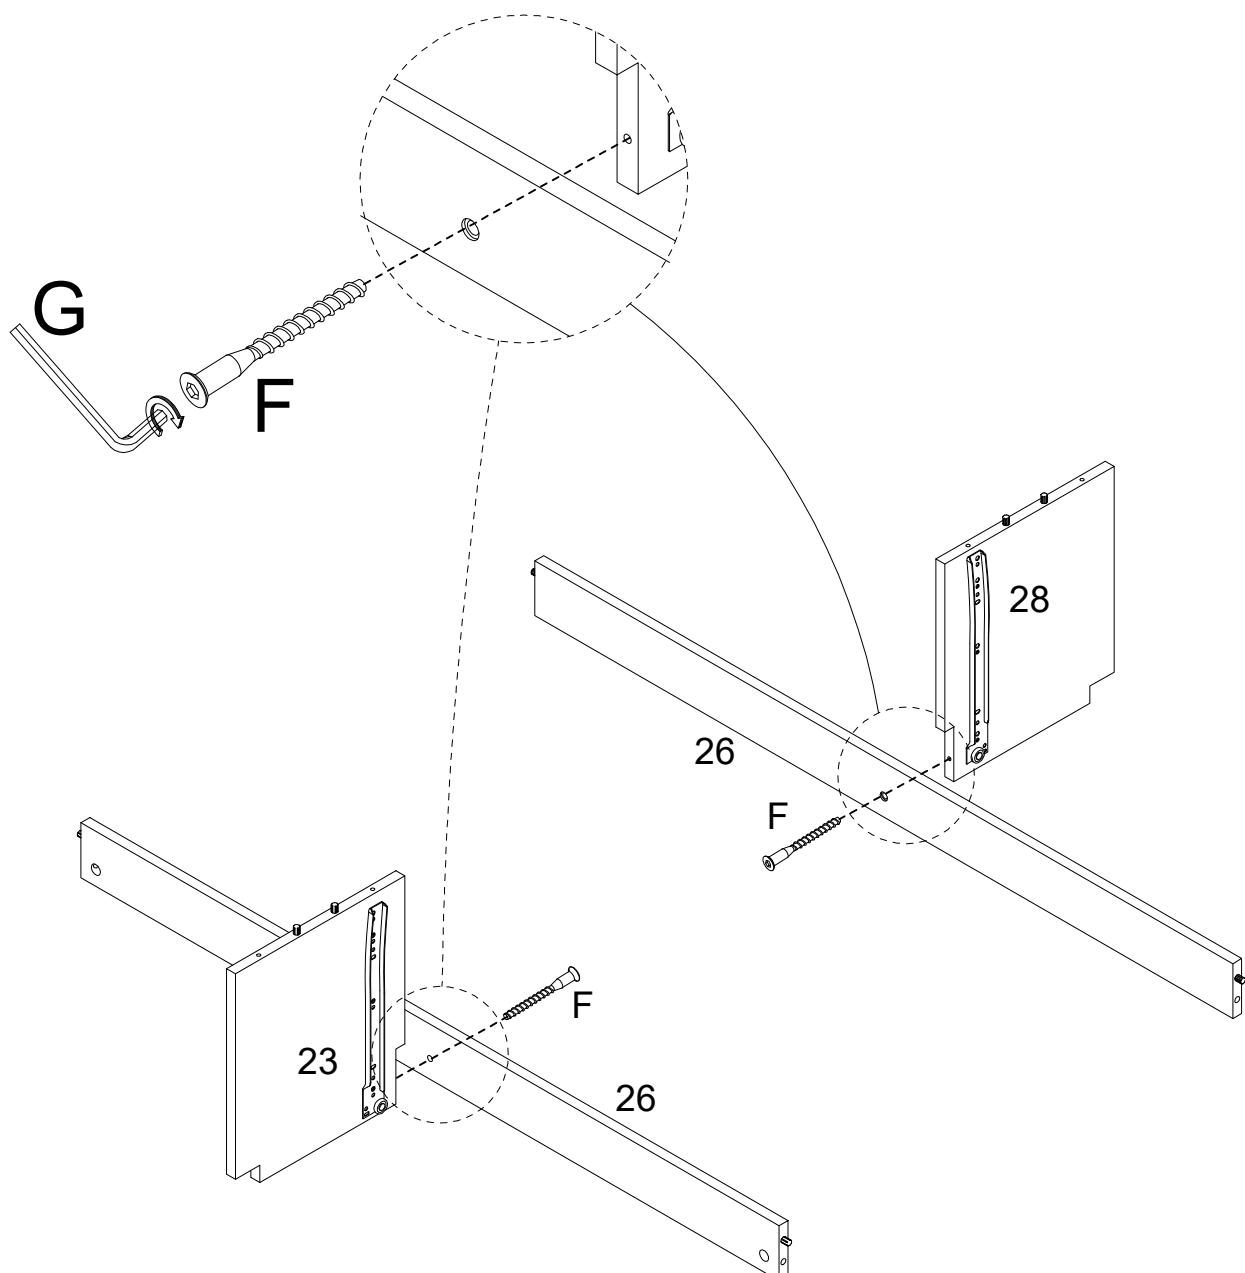


G	F
X1	X2




## Step32

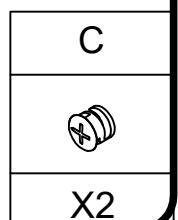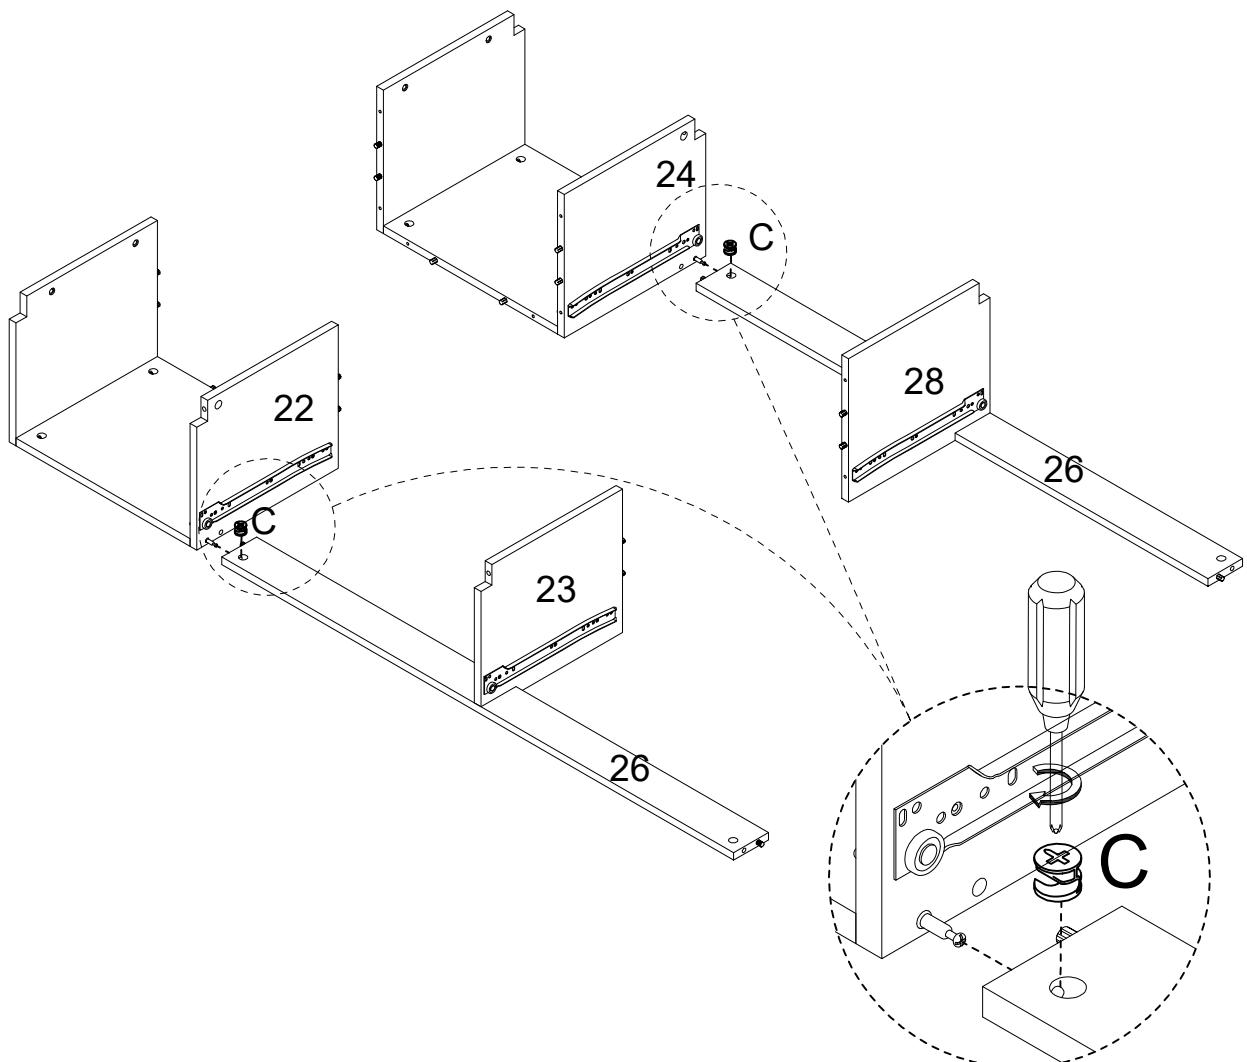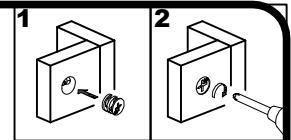


# Step 33

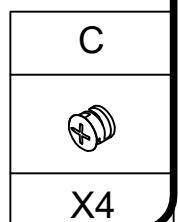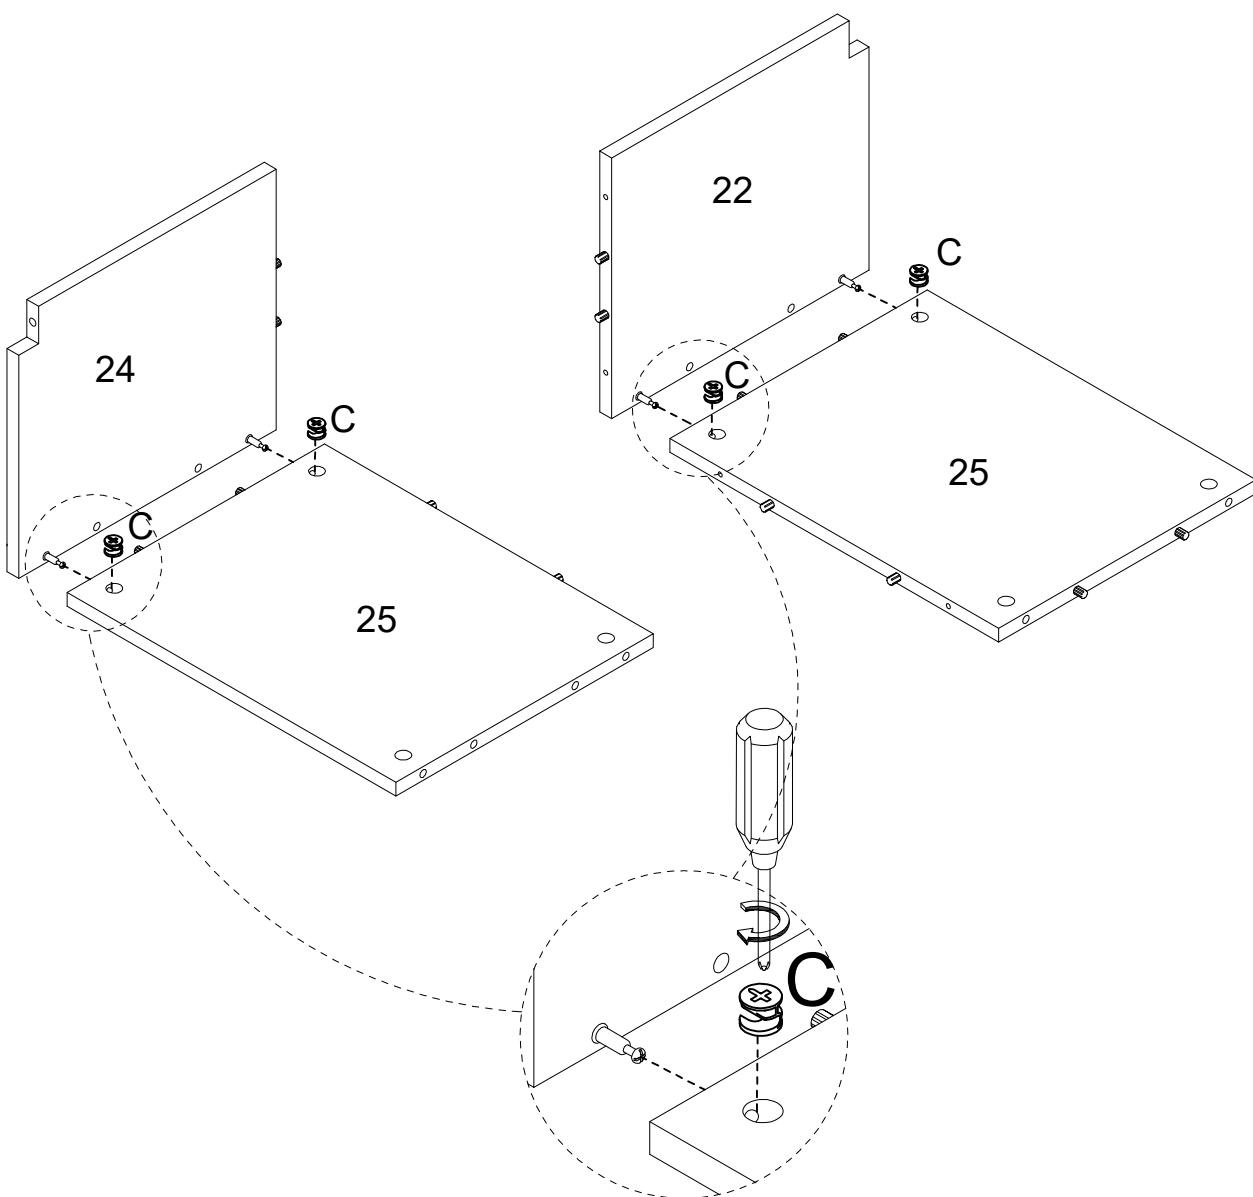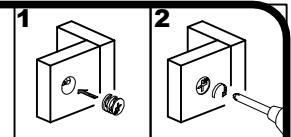

## Step 34

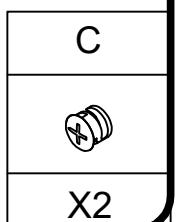
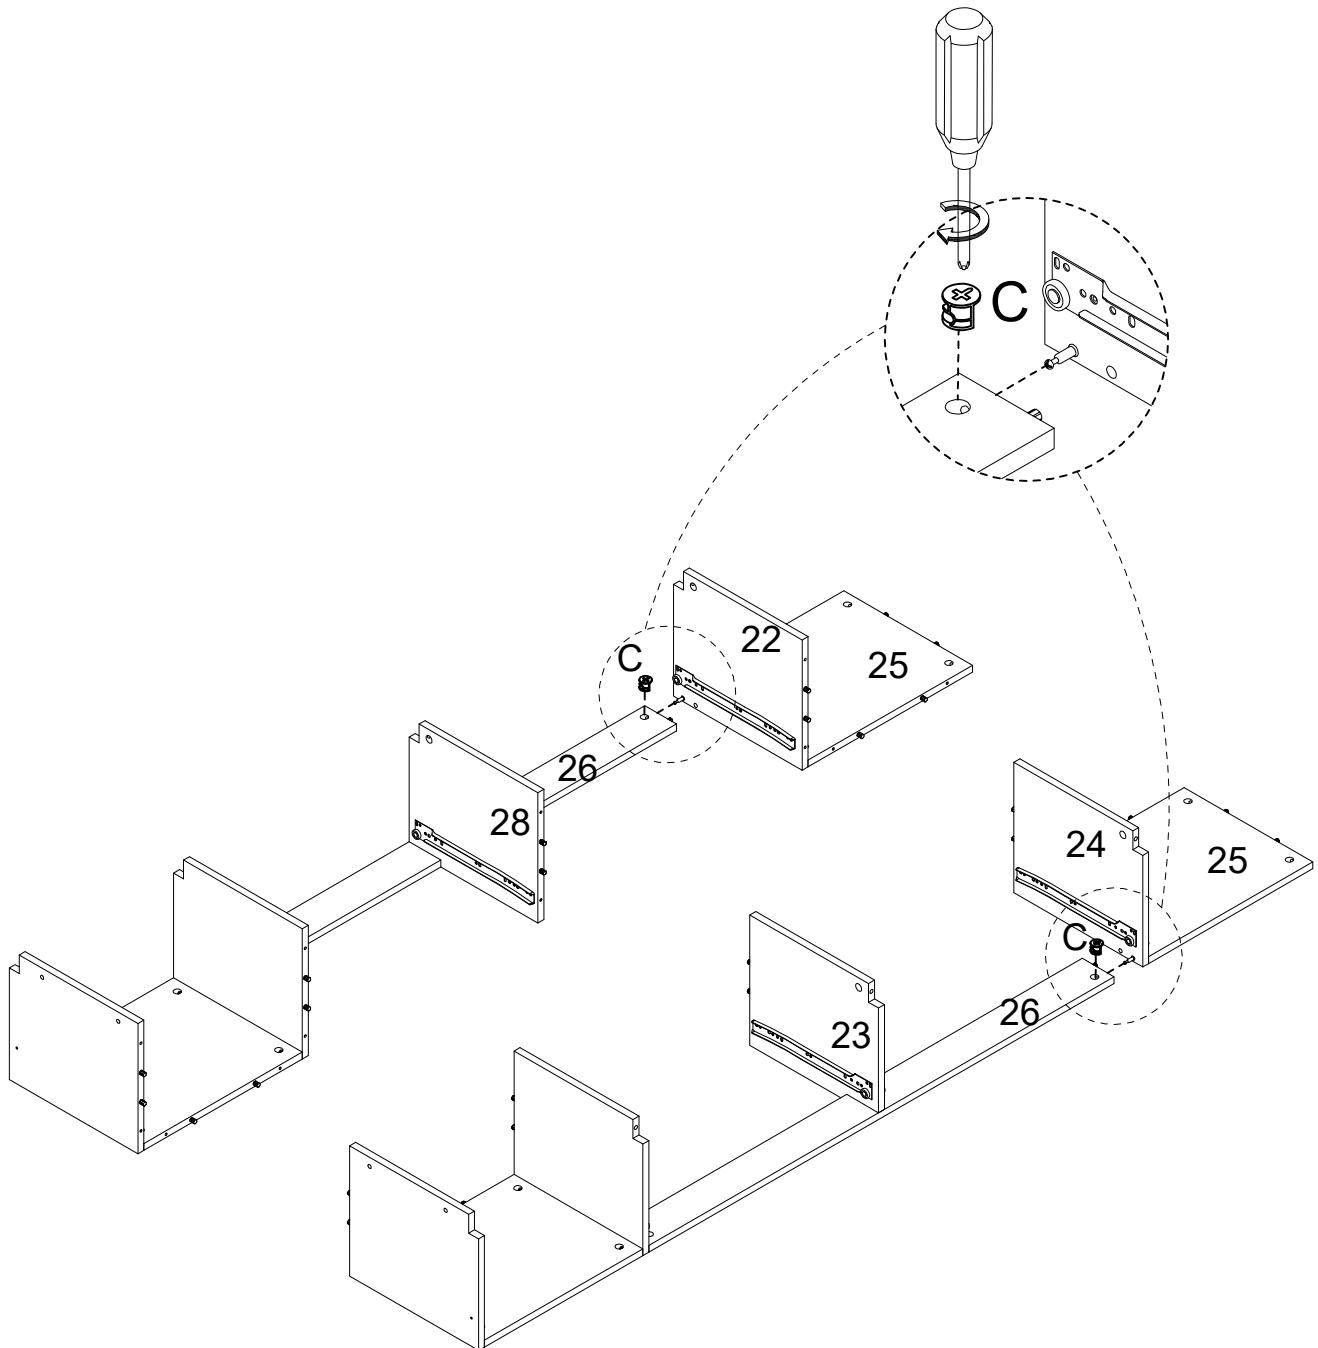
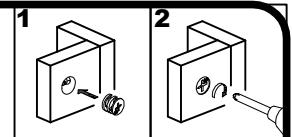


# Step 35


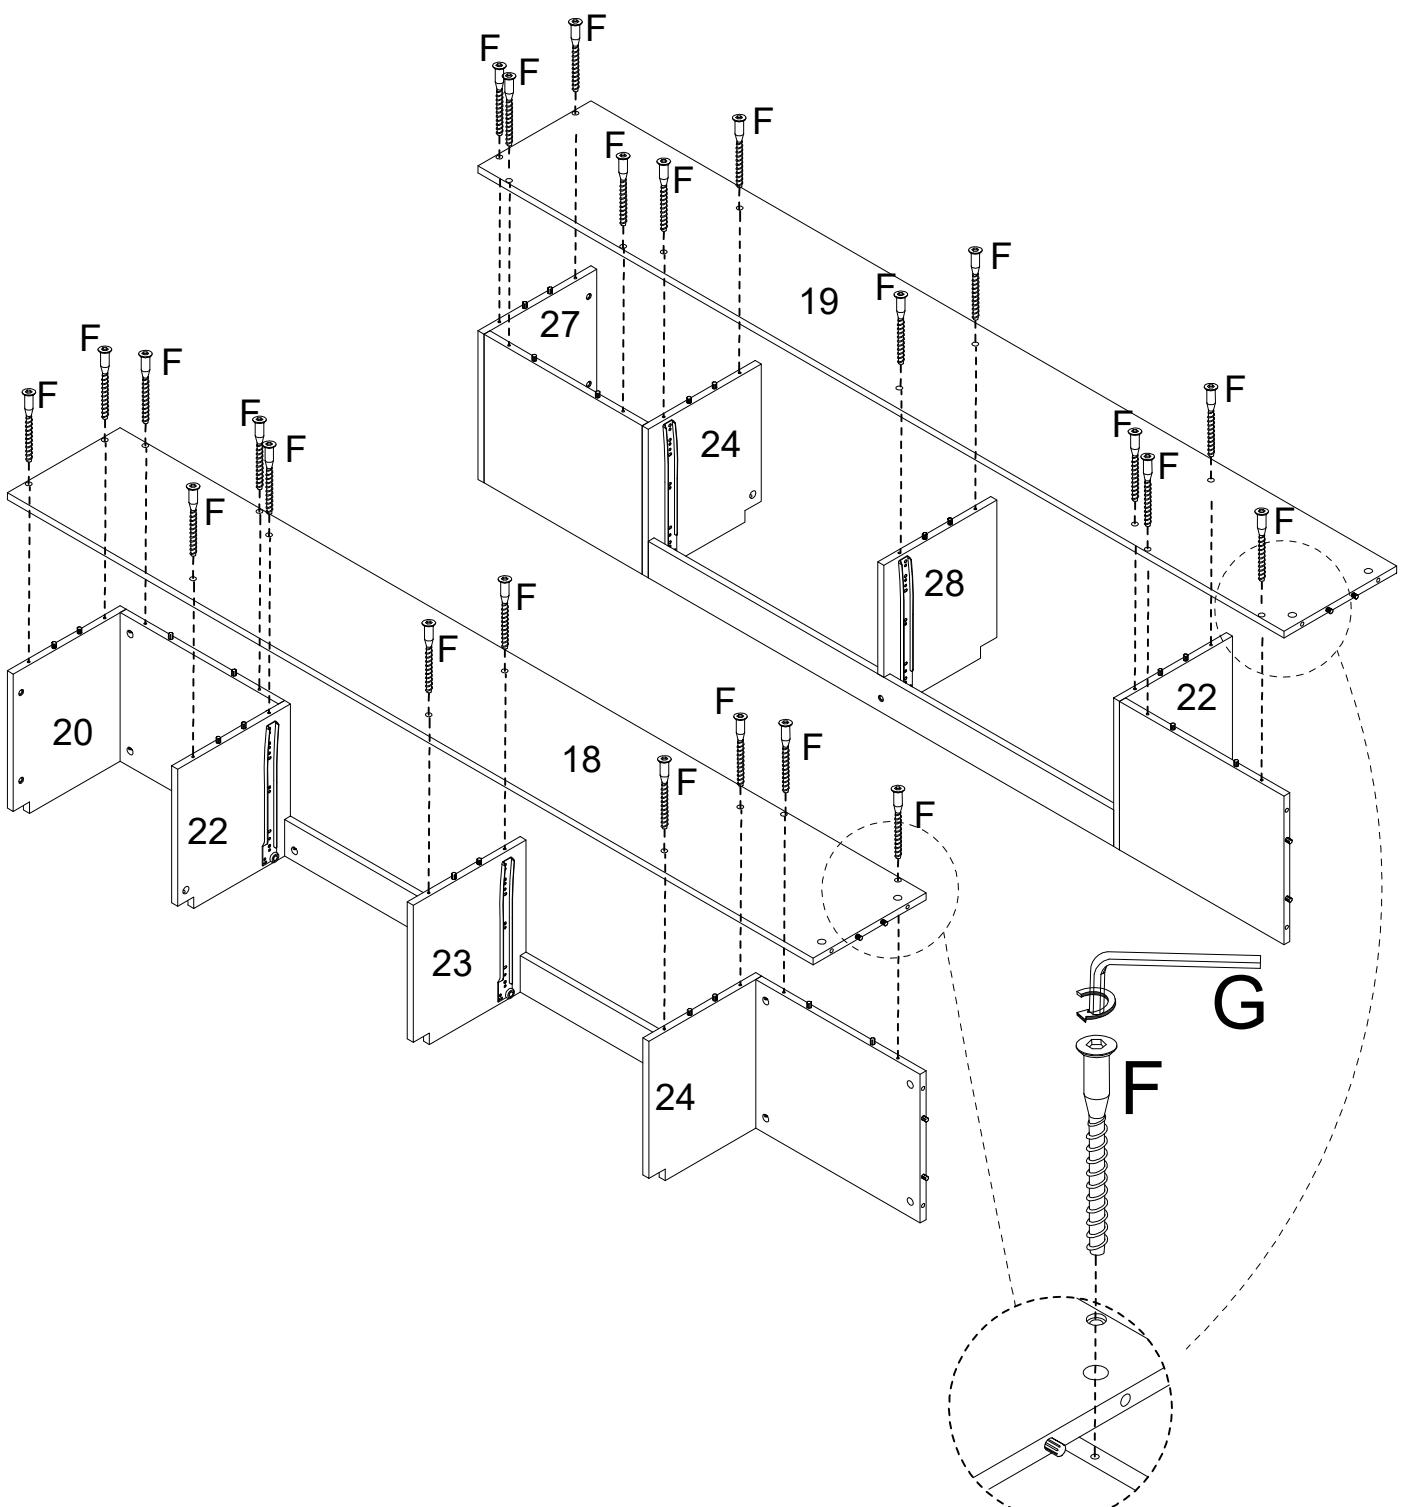


G	F
X1	X24


## Step 36

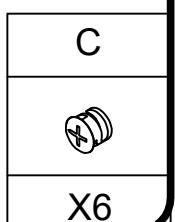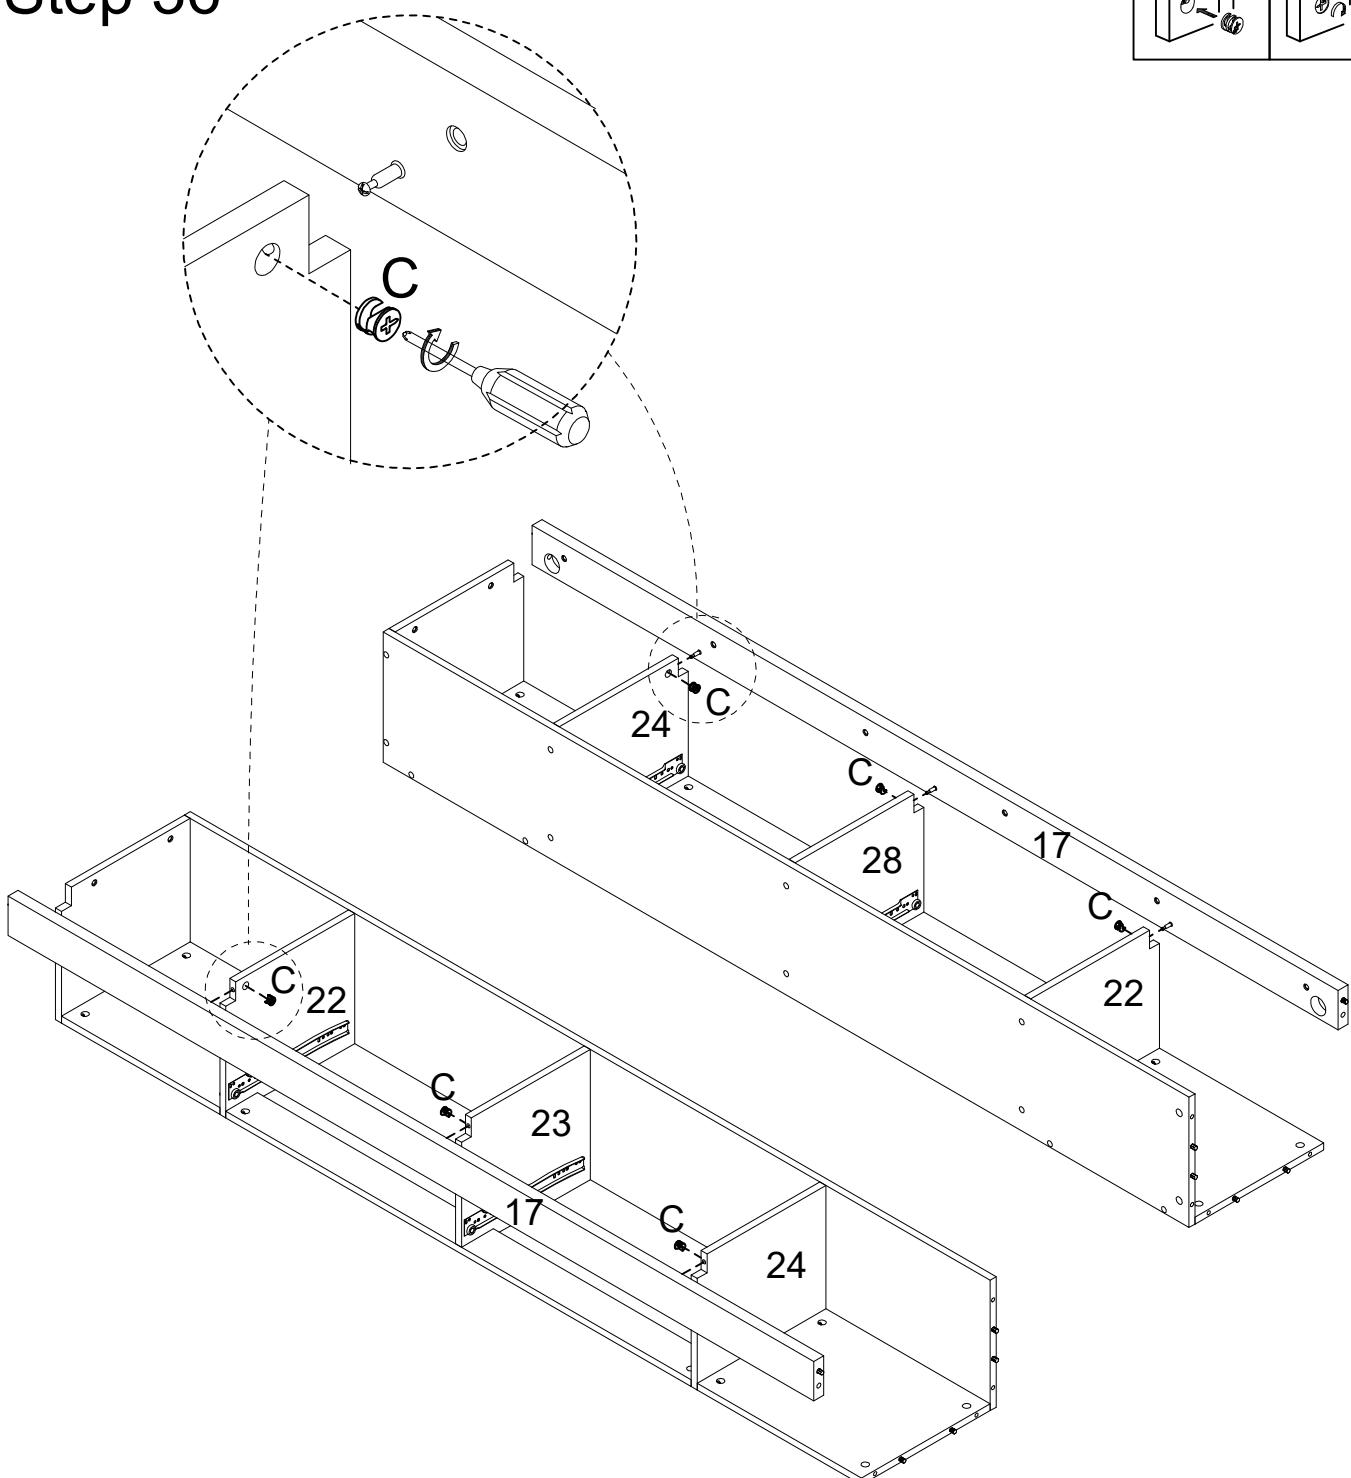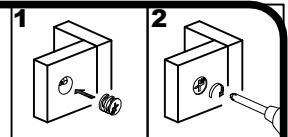

## Step 37

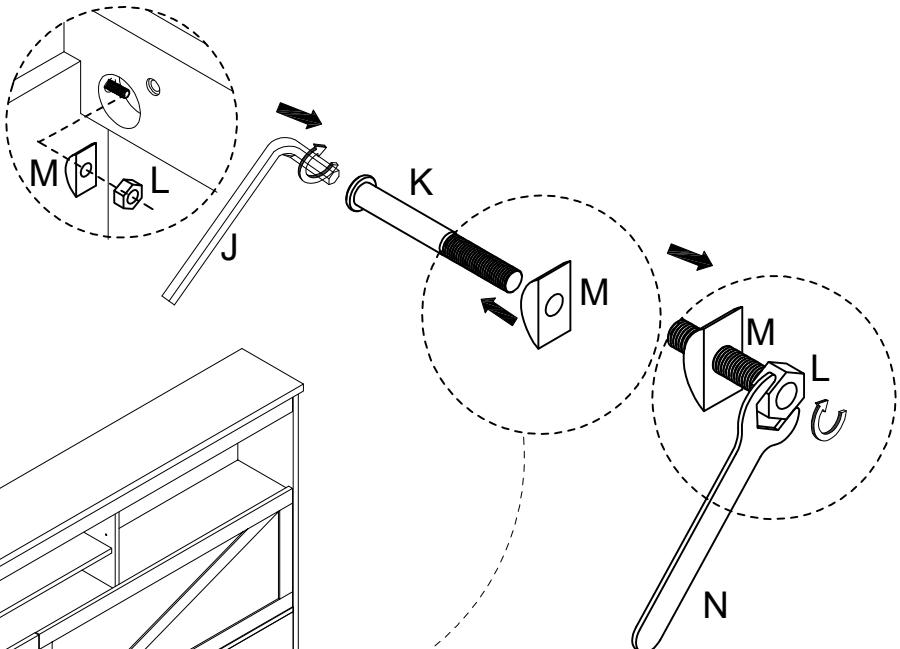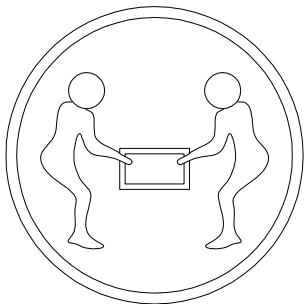


CAUTION: Heavy! You may need assistance with this step.

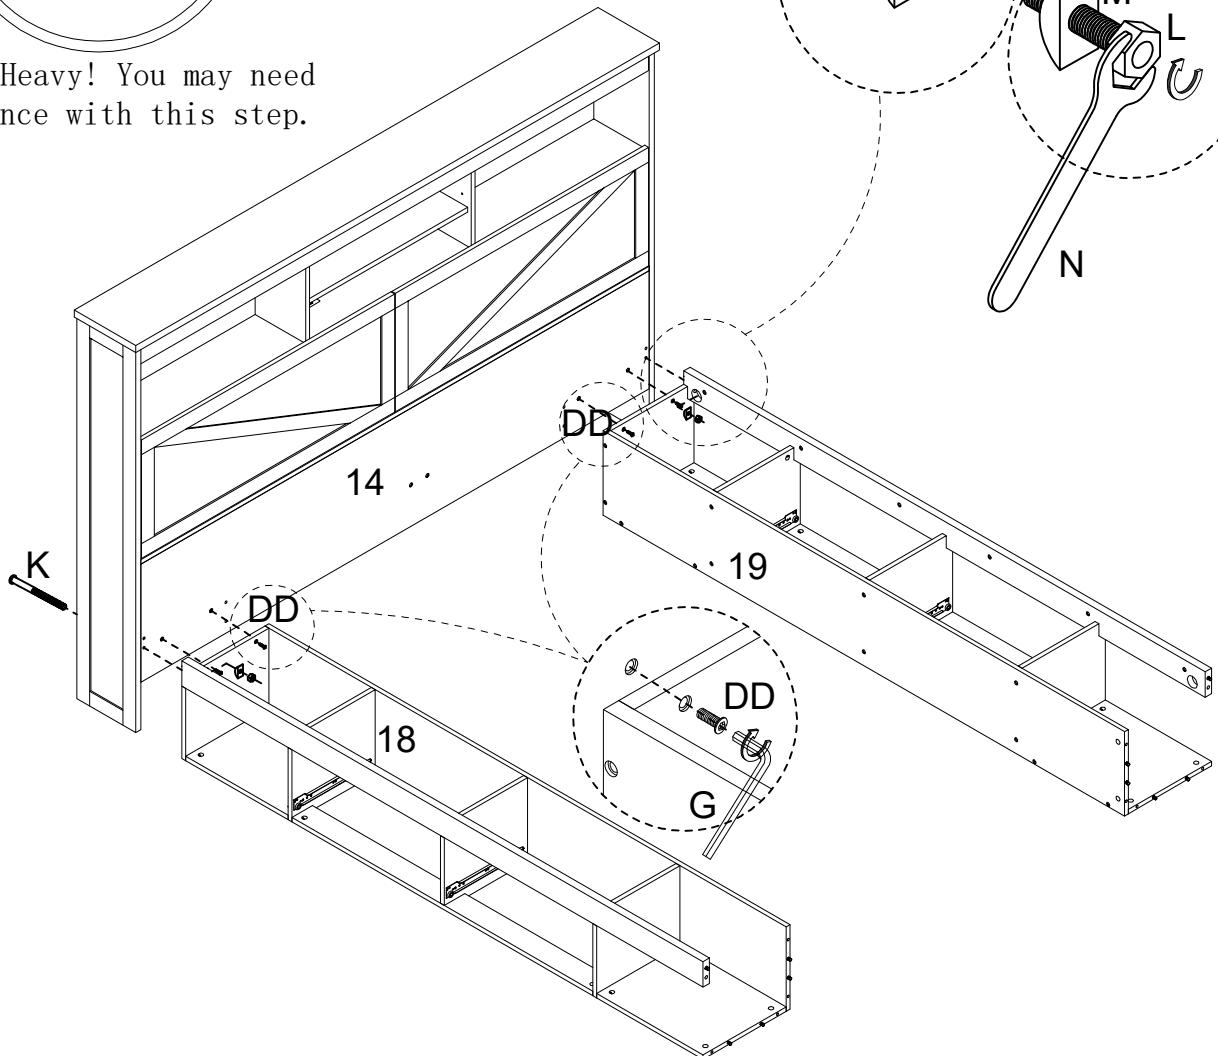


G	DD	J	N	M	L	K
X1	X4	X1	X1	X2	X2	X2

## Step 38

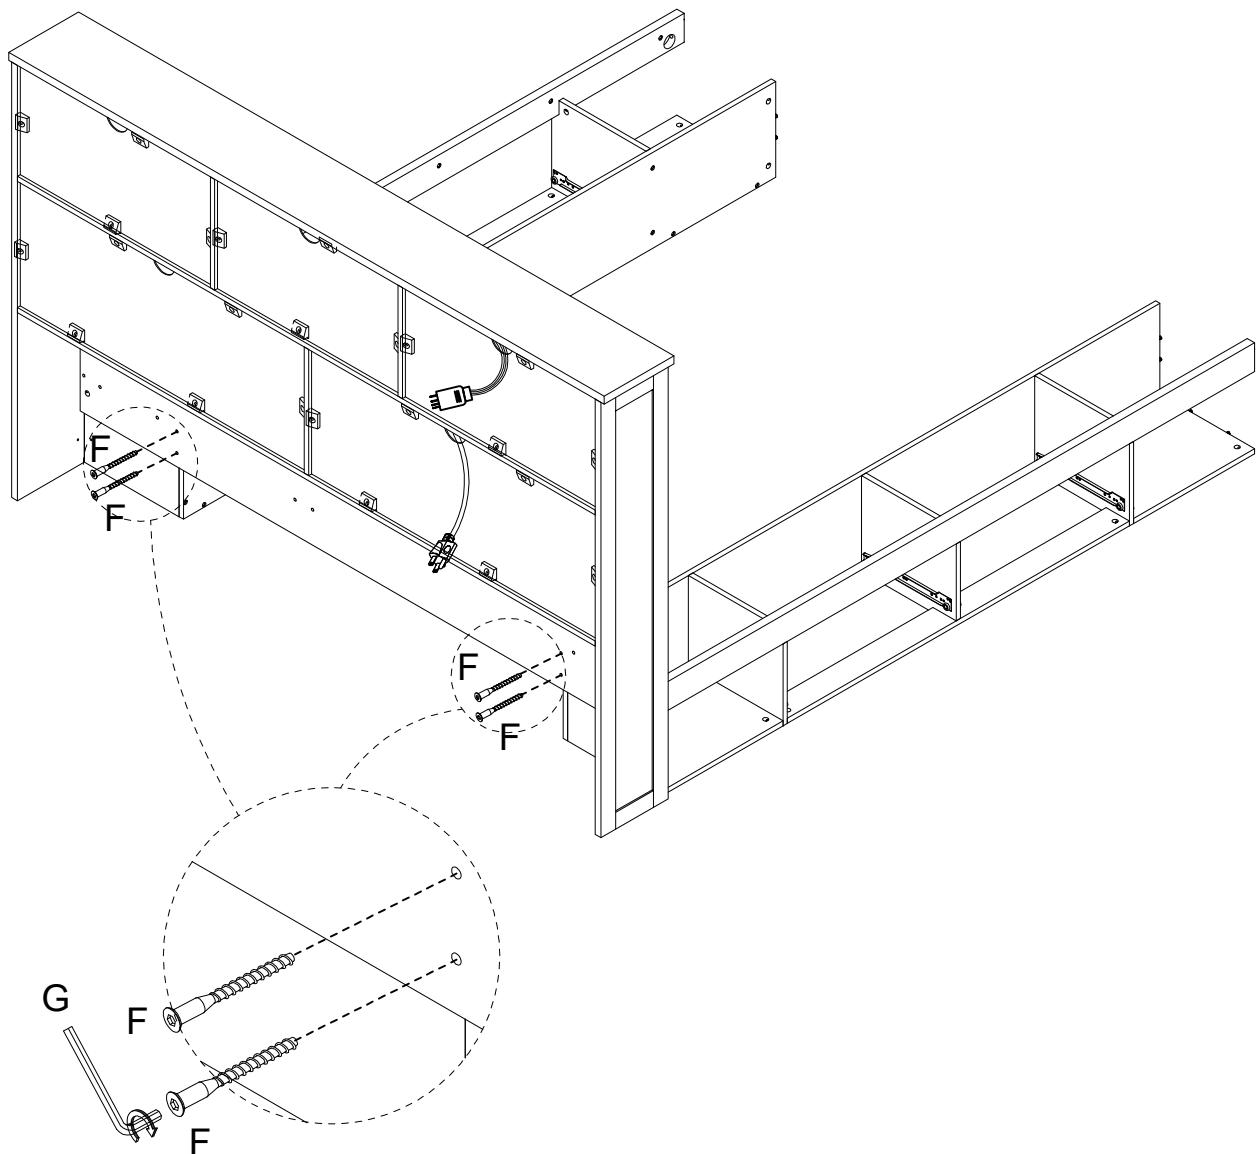


F	G
	
X4	X1

## Step 39

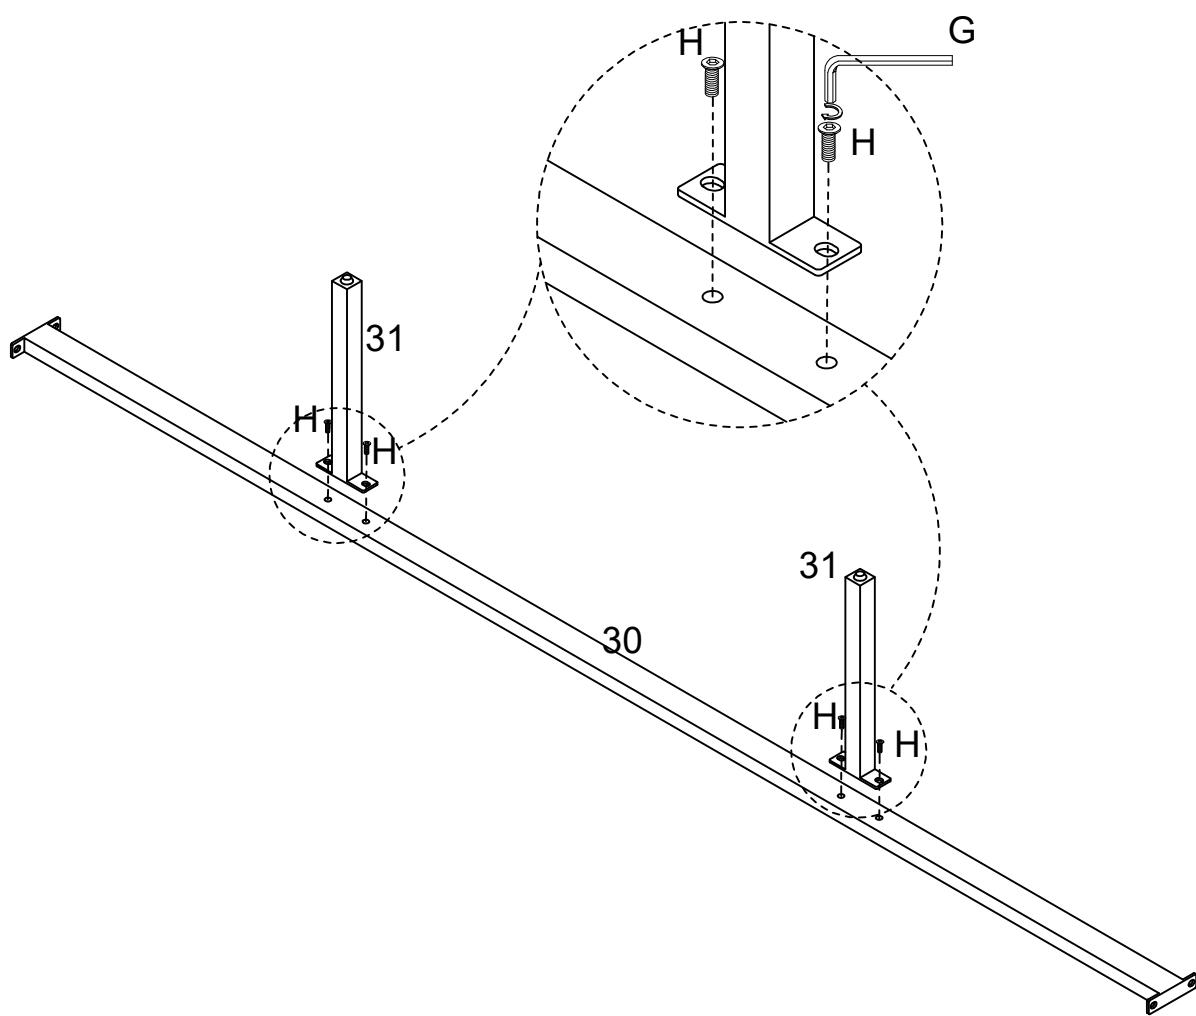



G	H
X1	X4

## Step 40


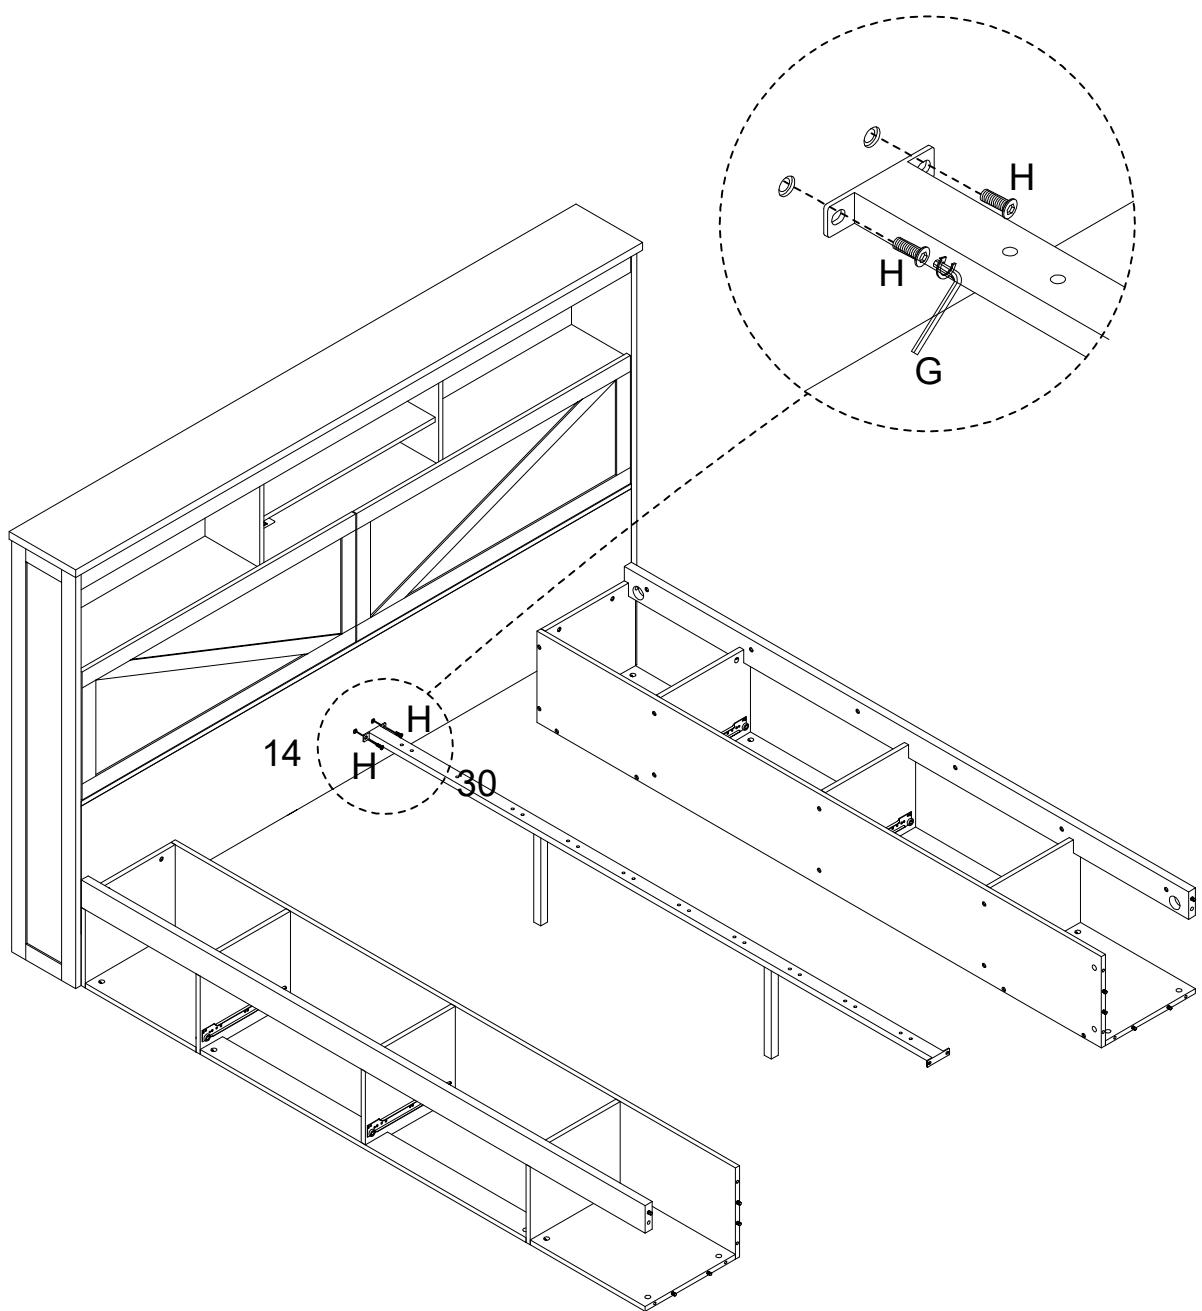


G	H
X1	X2

## Step 41

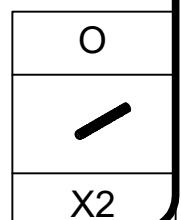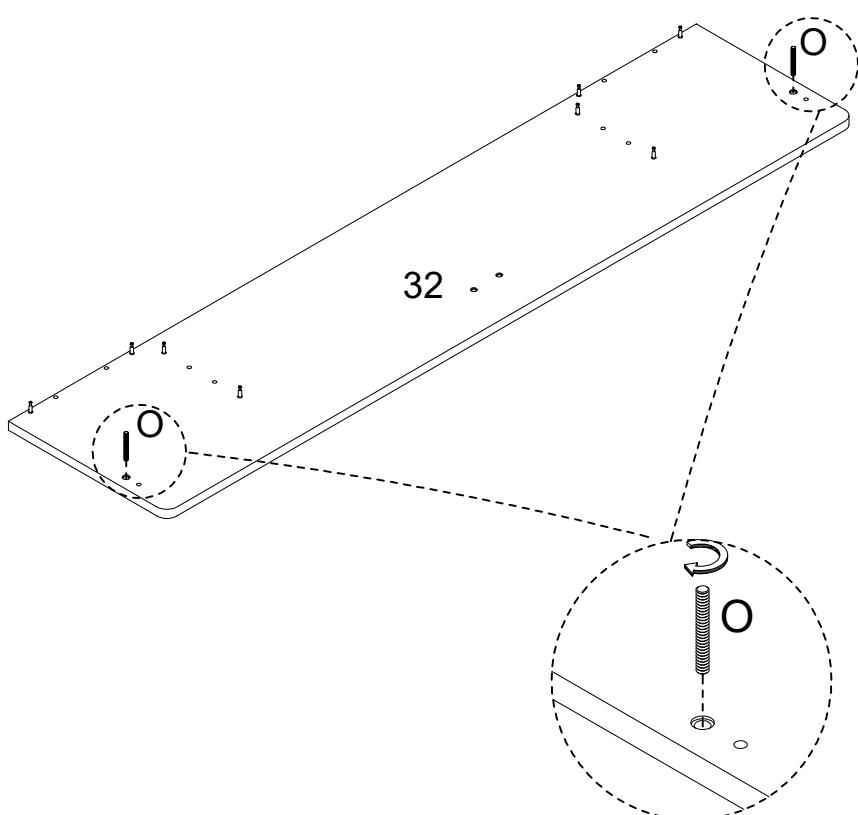


## Step 42

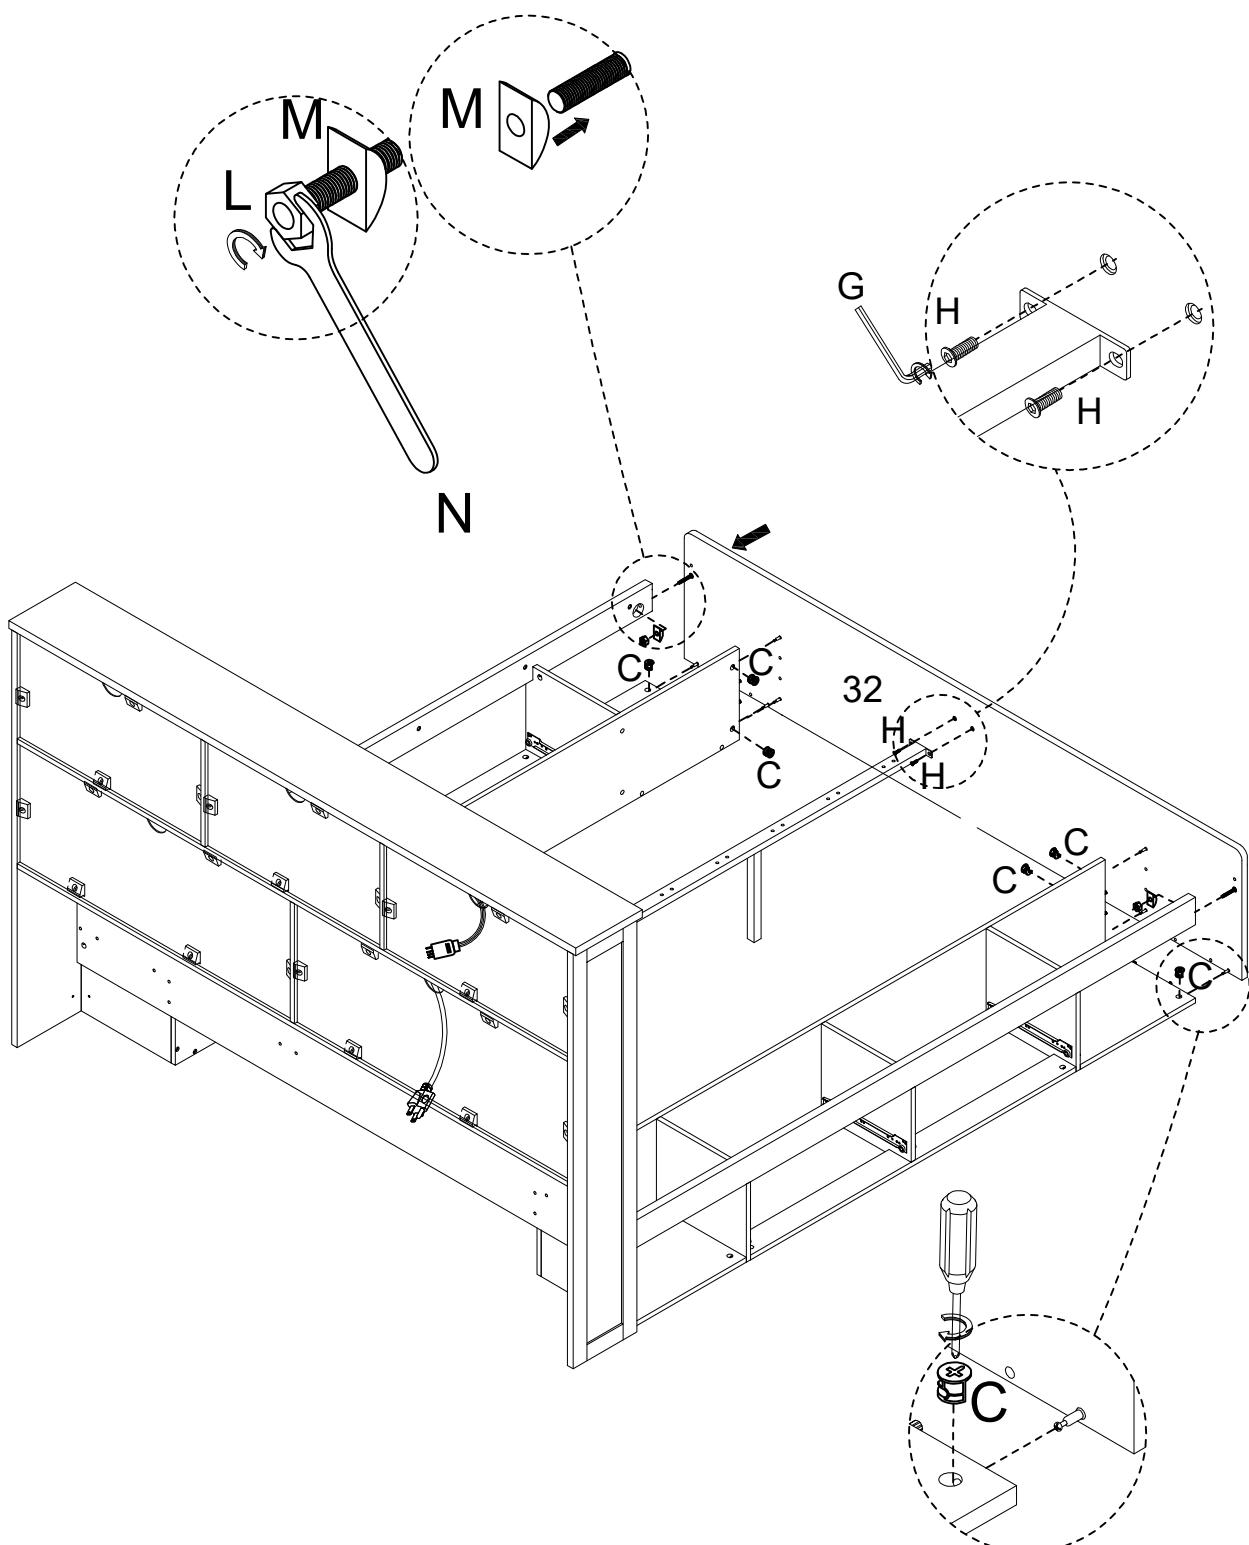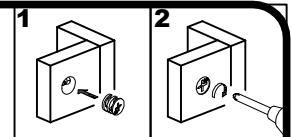


C	G	H	N	M	L
X8	X1	X2	X1	X2	X2

## Step 43

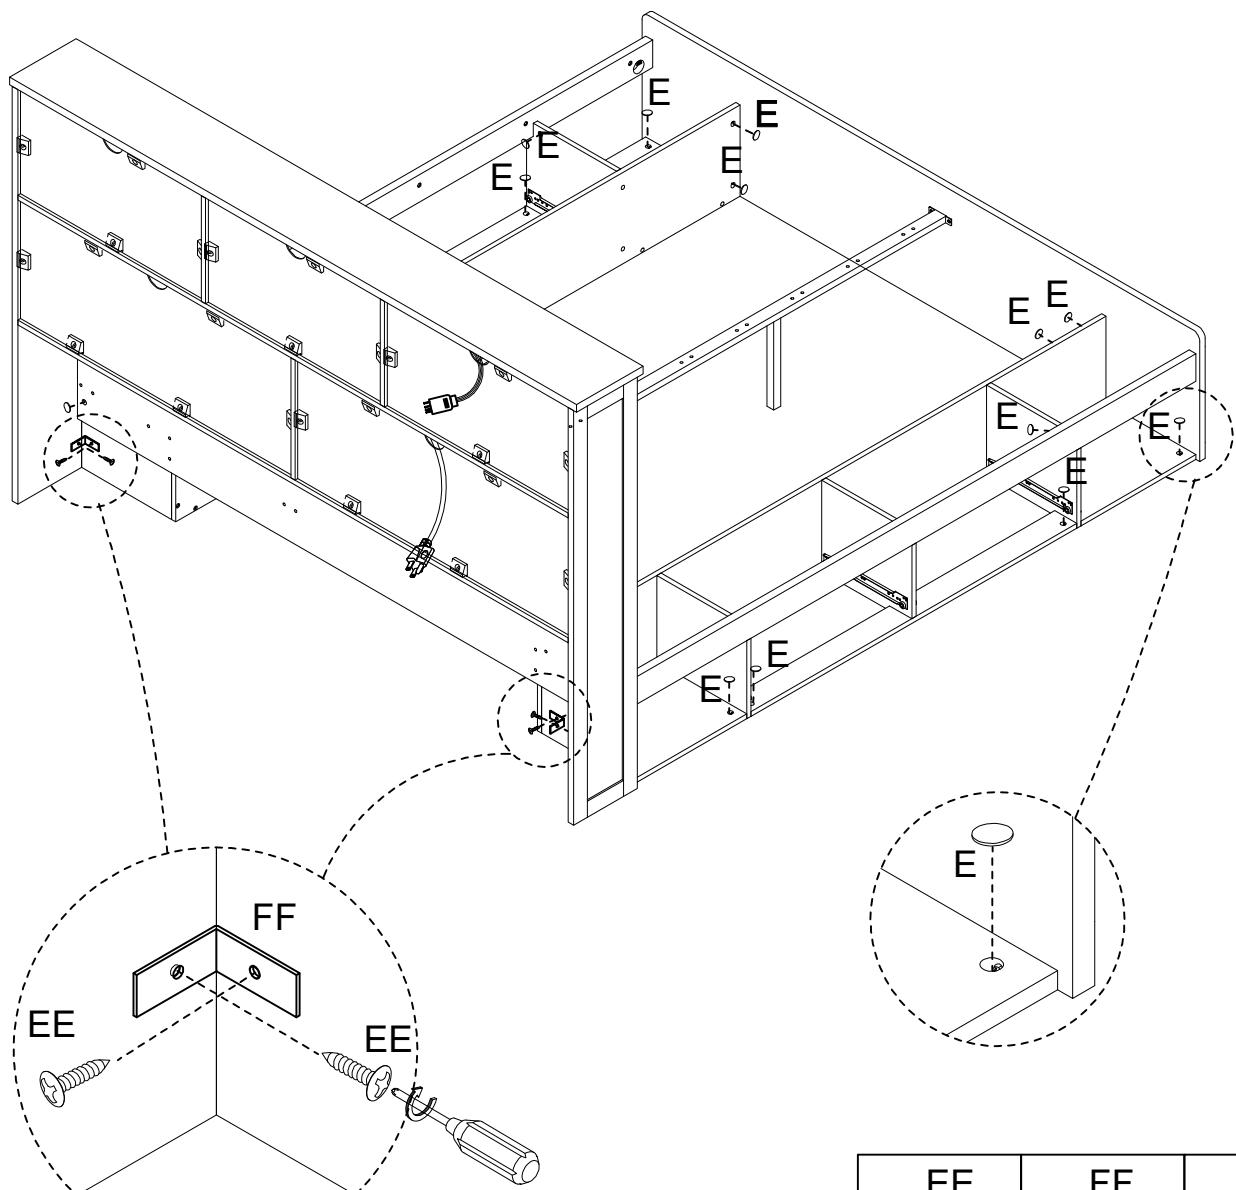



EE	FF	E
X4	X2	X71

## Step 44


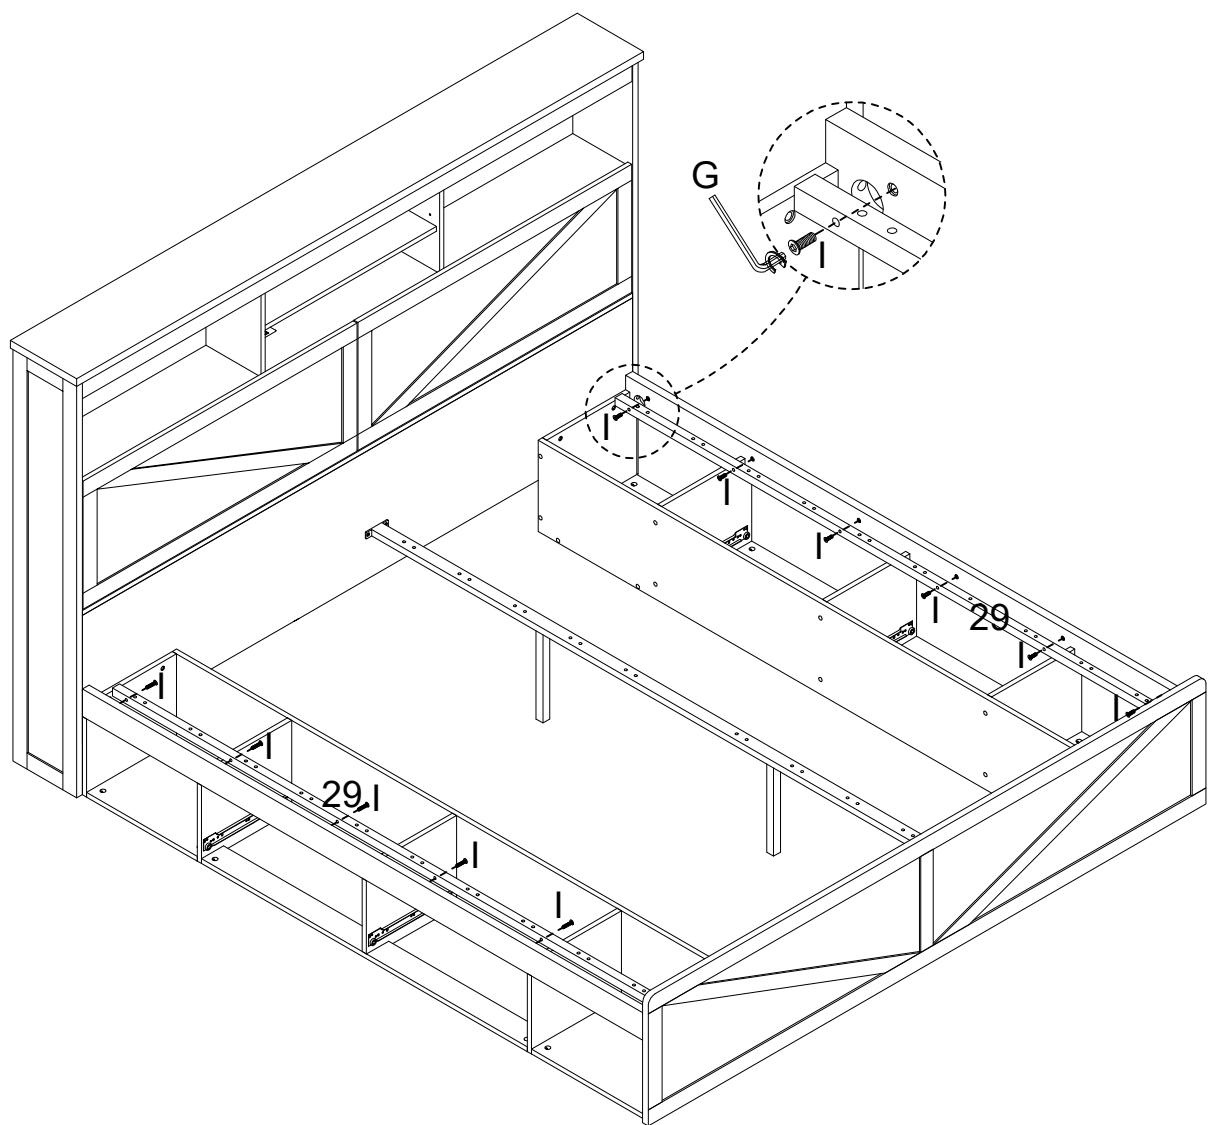


G	I
X1	X12


## Step 45

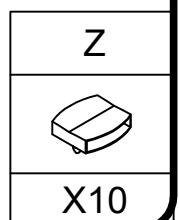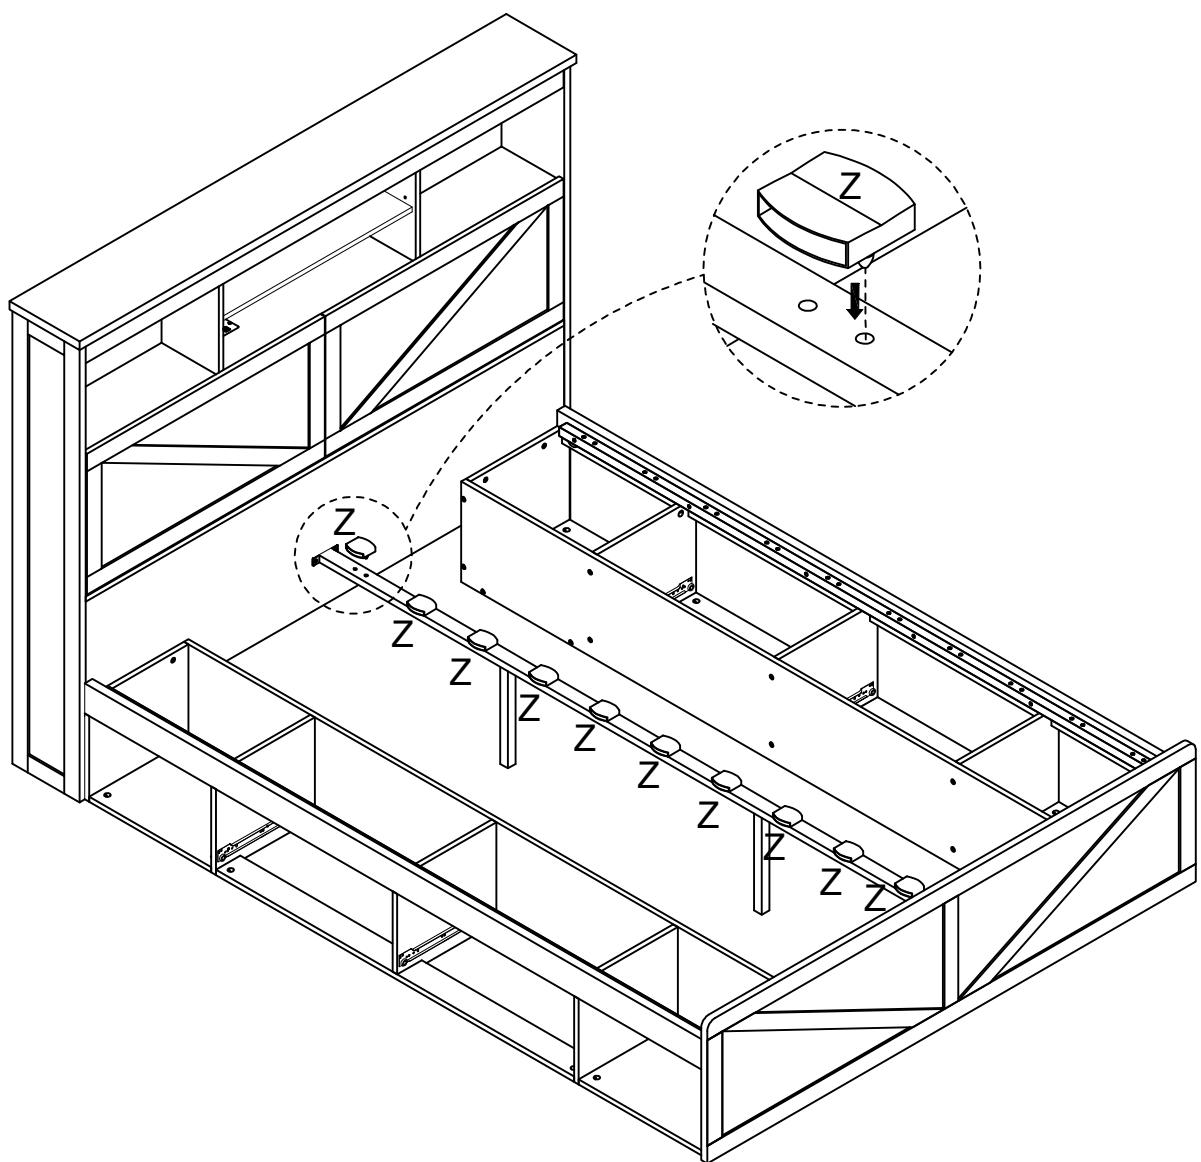


## Step 46

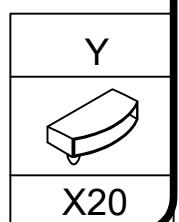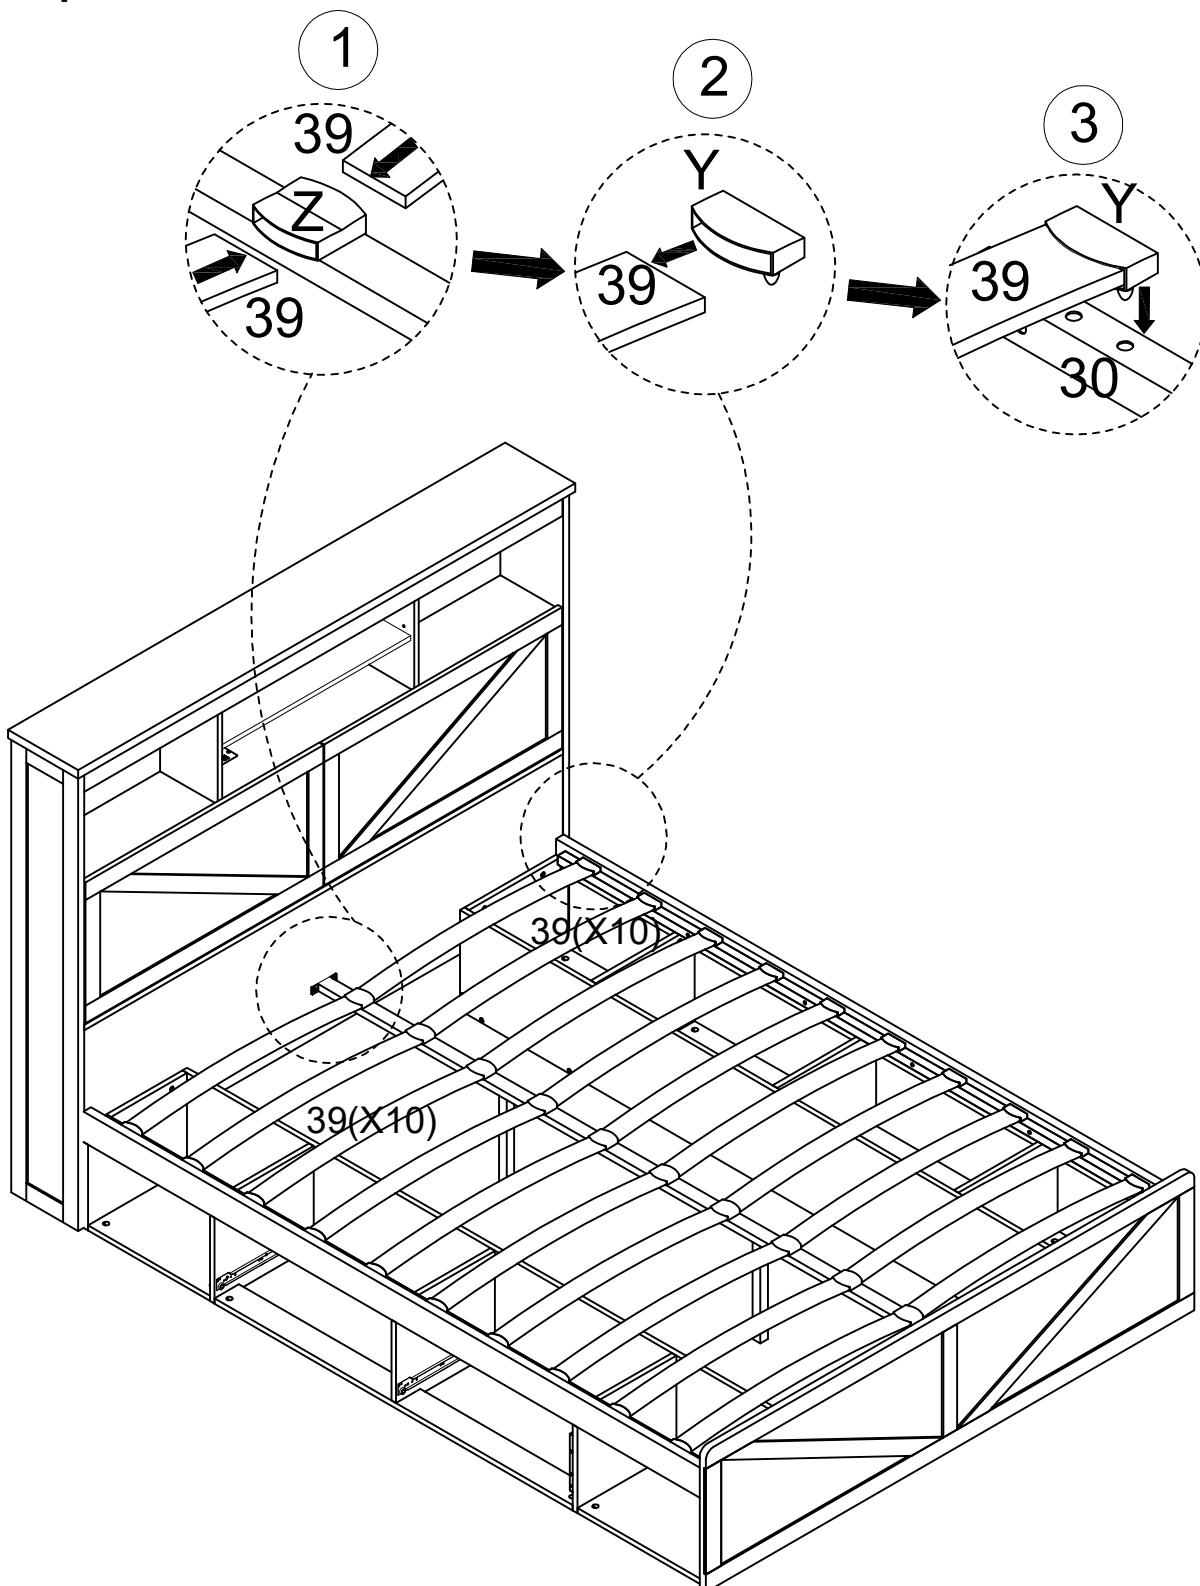




## Step 47

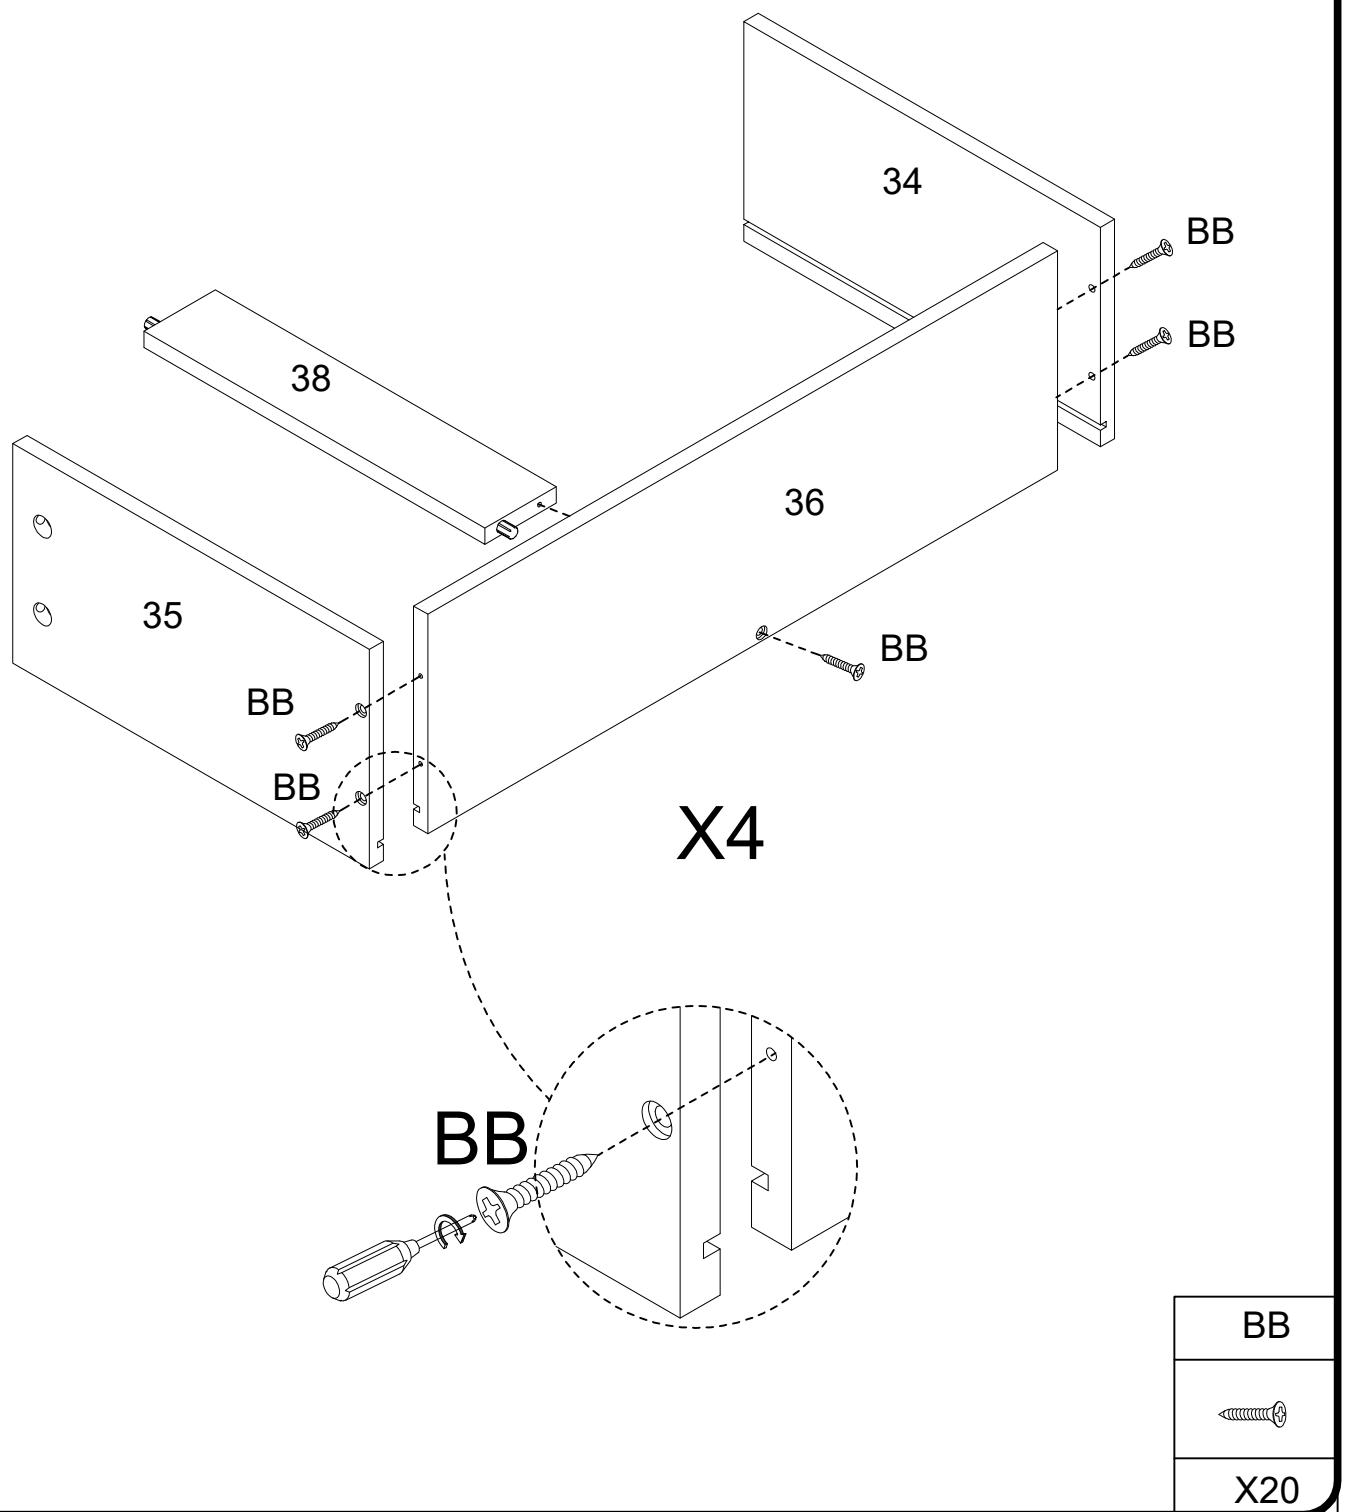

## Step 48

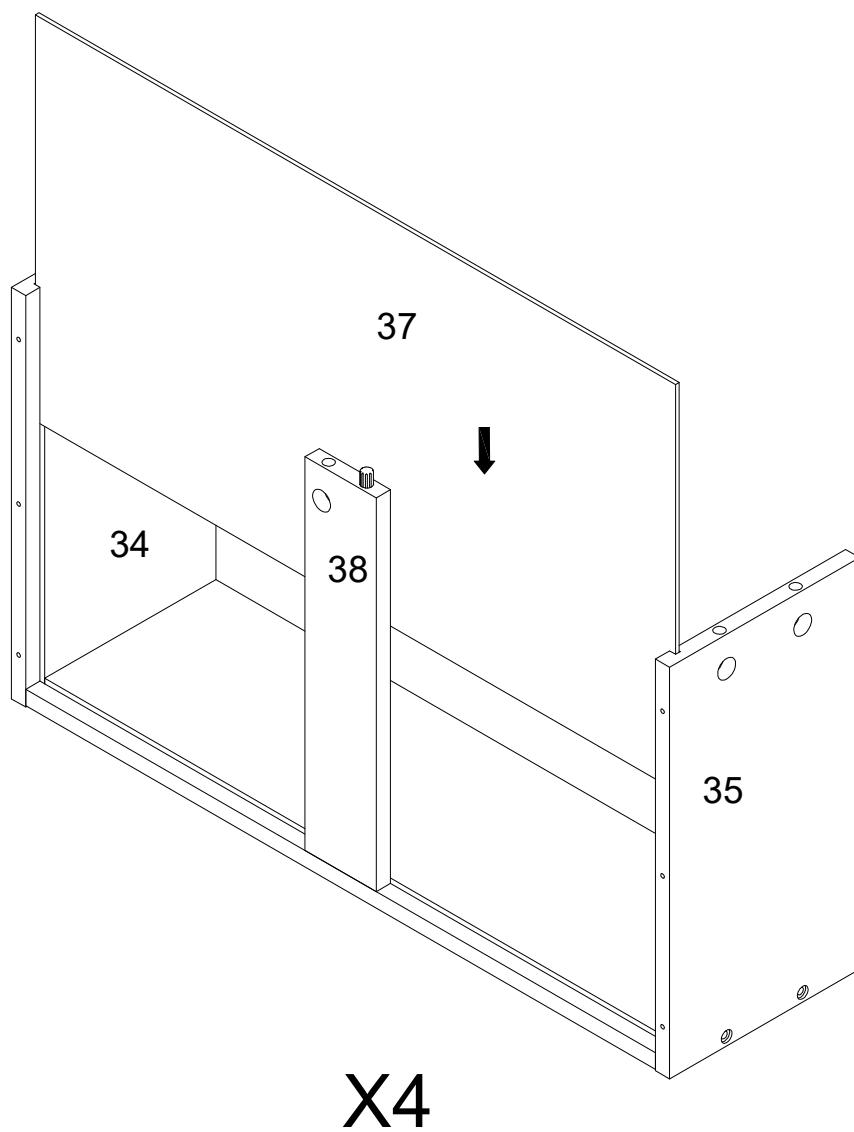

# Step 49

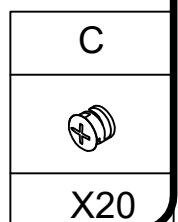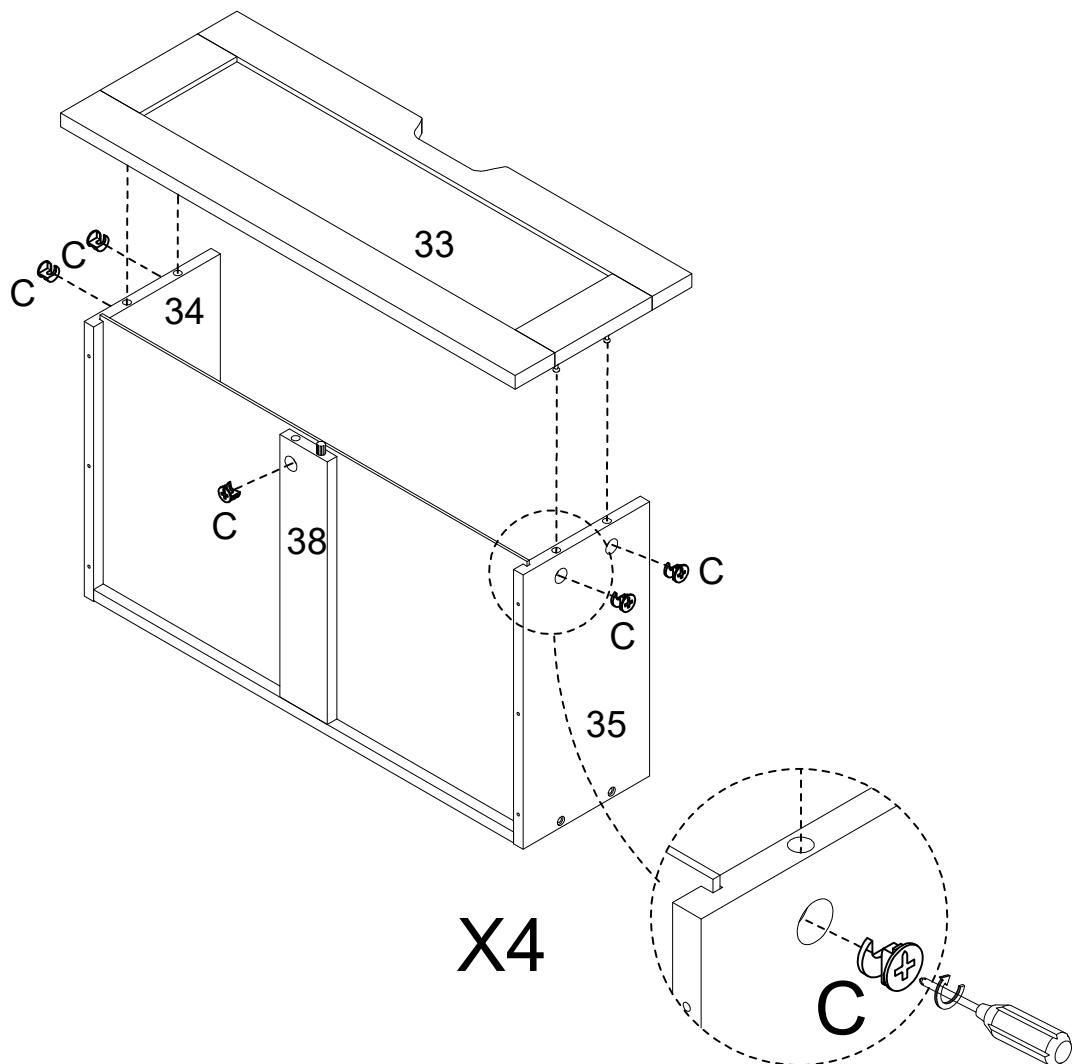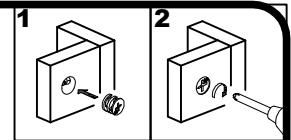


# Step 50

NOTE:




Refer to the images to identify X-DL8 (left) and X-DR8 (right). Attach X-DL8 to #34 panel and X-DR8 to #35 panel. [R] screws must go in the exact spots shown.

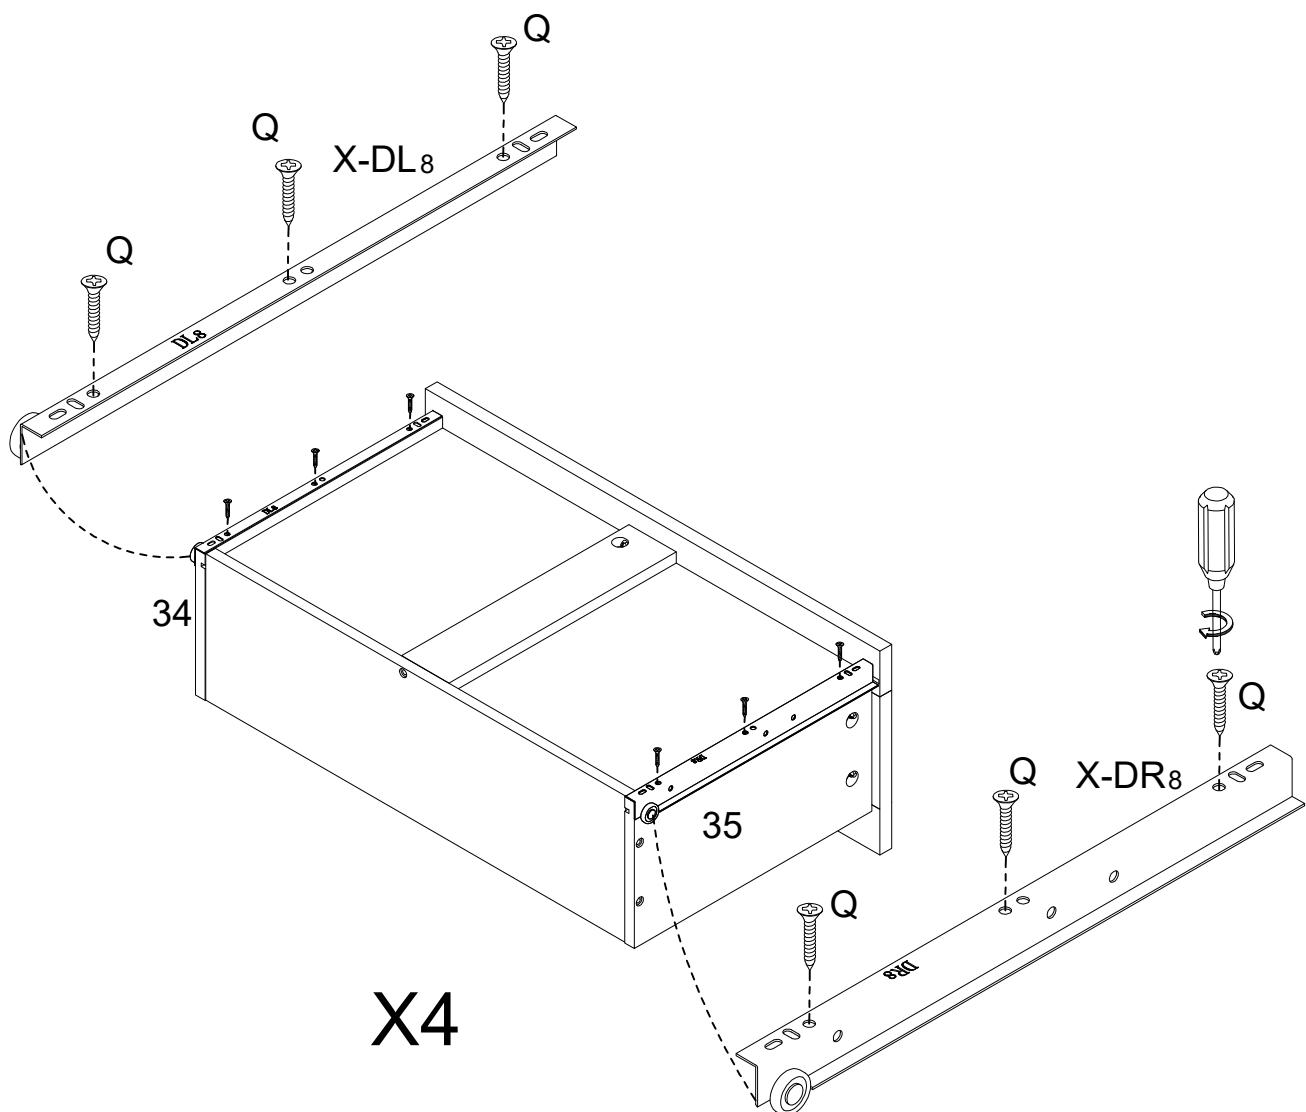


X	Q
X4	X24

## Step 51


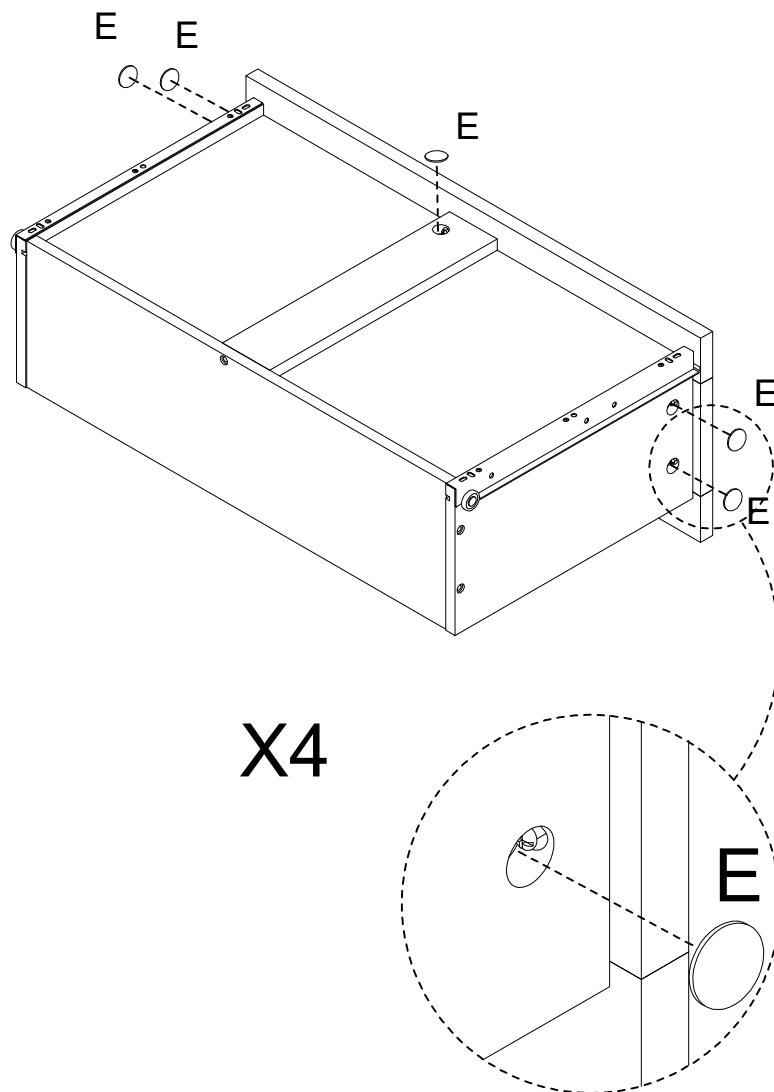


E
O
X20

## Step 52

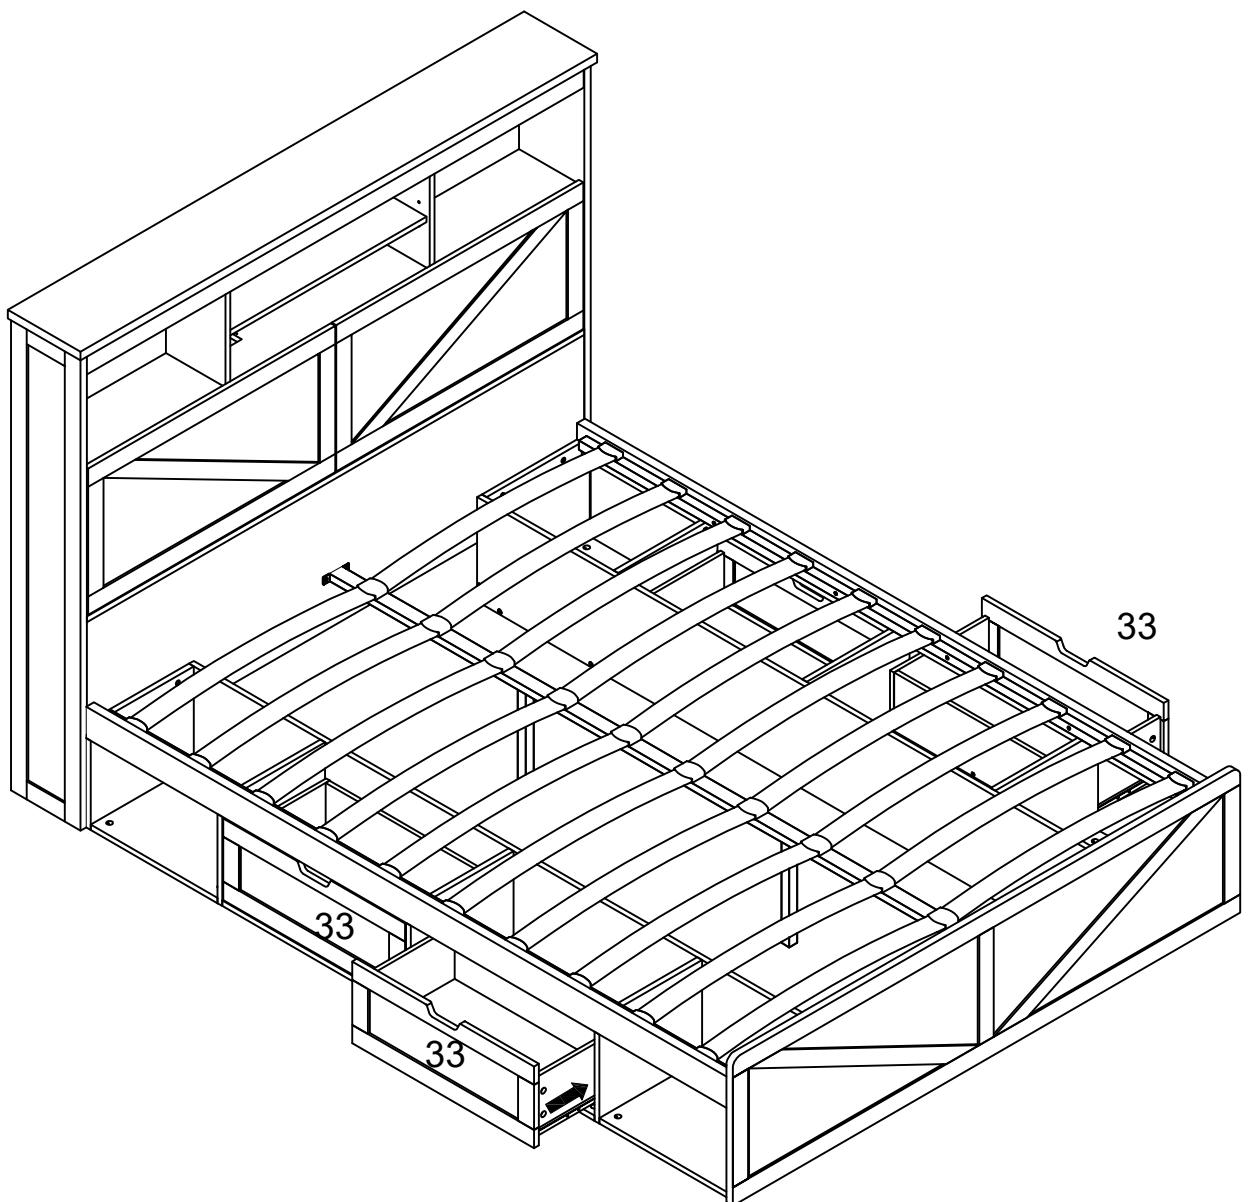

## Step 53

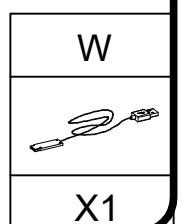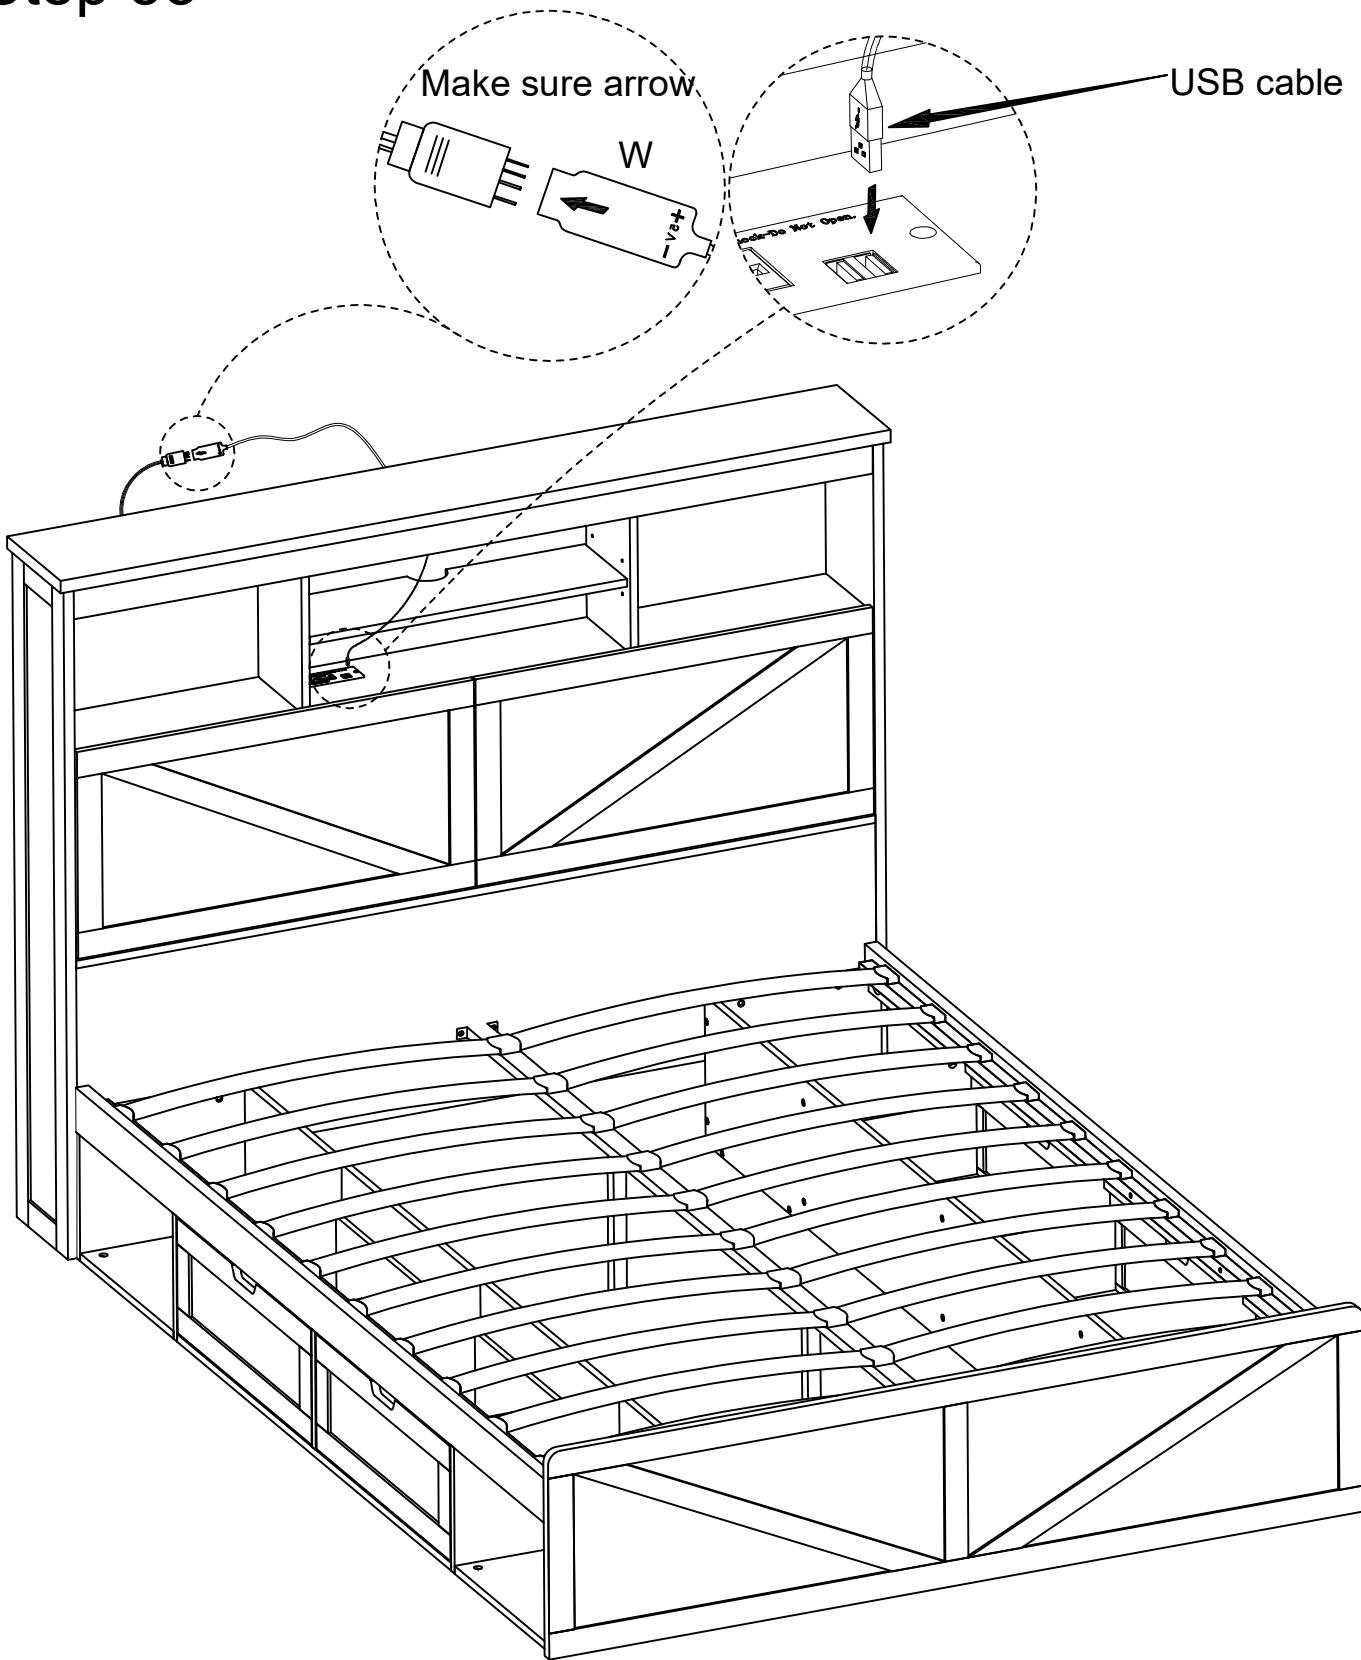

## Step 54

