



ASSEMBLY INSTRUCTION

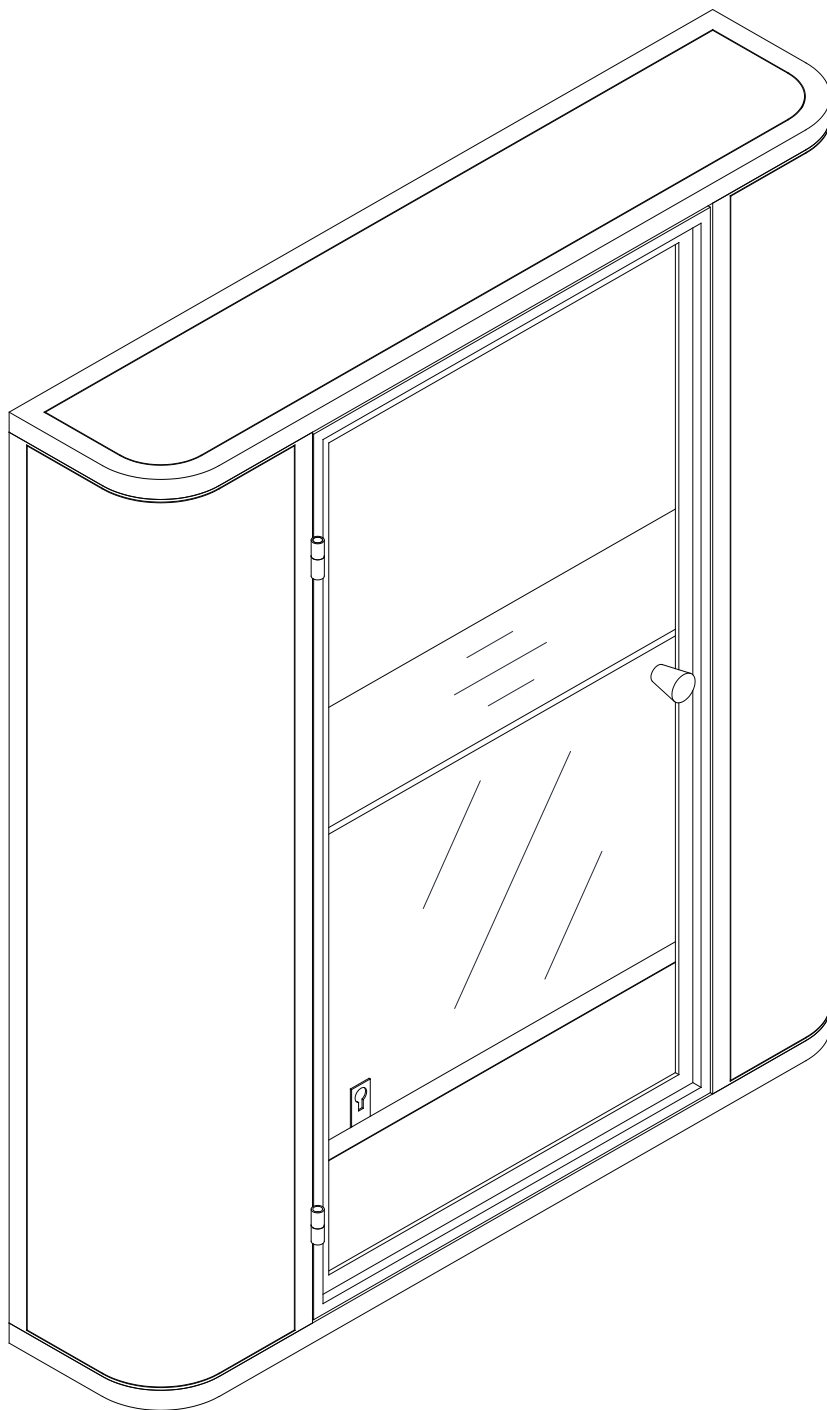


2 PERS



30 MIN












Pozi Screwdriver(Not Provided)






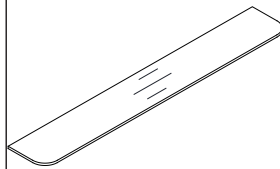
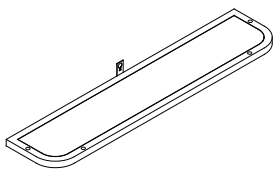

Hexagonal wrench(Provided)

Assembly Instruction


HARDWARE LIST

A1 	B  M6x16mm	C 	D 	E  M4x12mm
A2 				
2 PCS	8 PCS	2 PCS	1 PC	1 PC
F 	G  M4x30mm	H 		
1 PC	3 PCS	3 PCS		







PART LIST

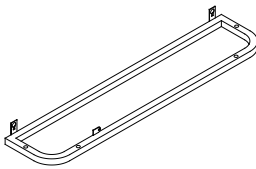I 	J 	K 	L 	M 
1 PC	1 PC	1 PC	1 PC	1 PC
N 				
1 PC				

- Do not use power tools to assemble your furniture.
Power tools may strip or damage the parts.


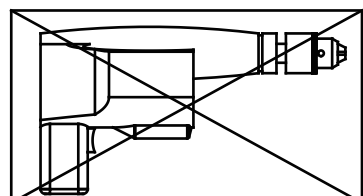


Explosive View

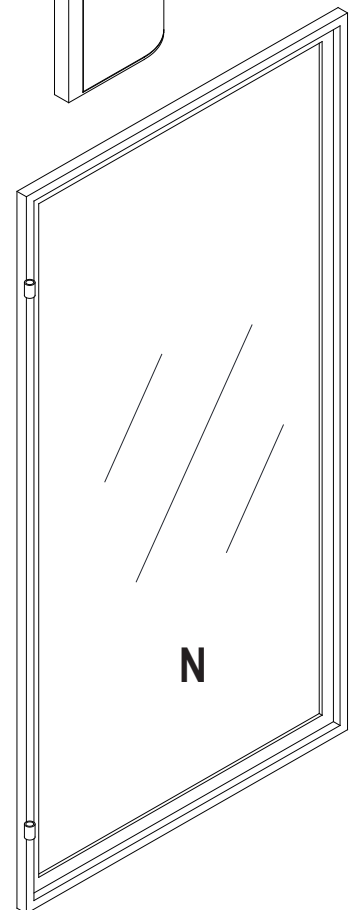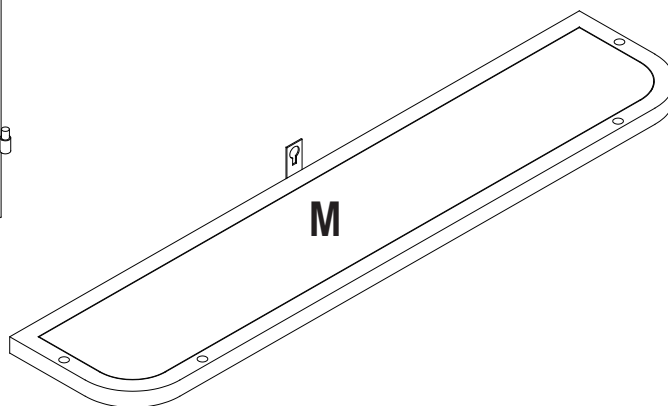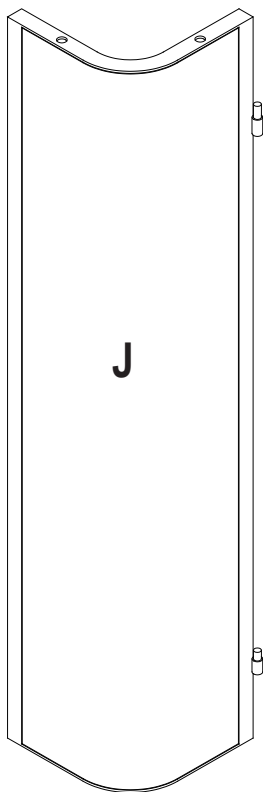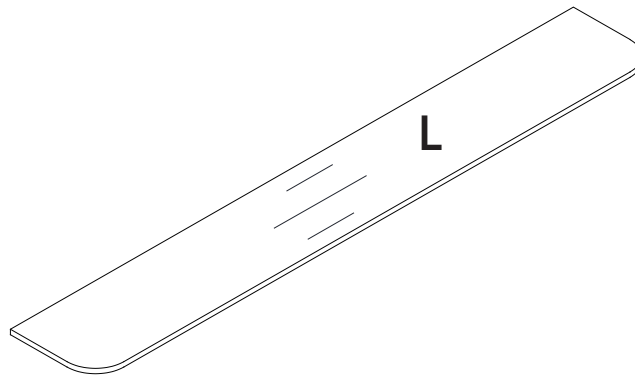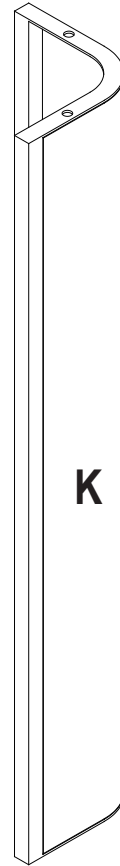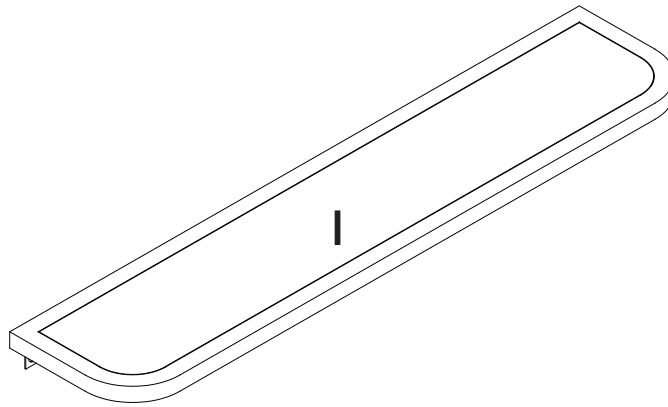

IMPORTANT NOTE: DO NOT tighten all screws and bolts until completely assembled



Step 1

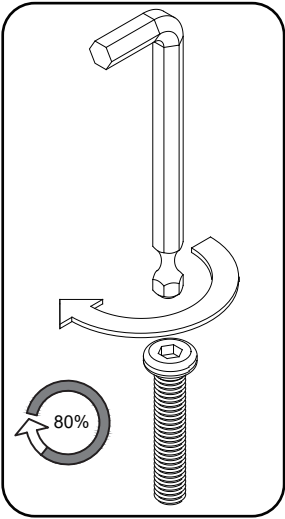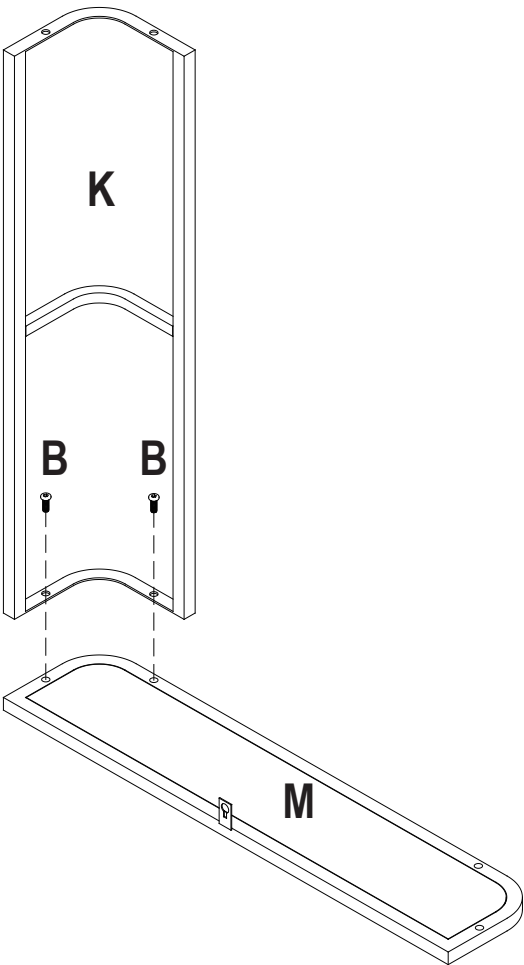

B X 2 PCS


A2 X1 PC

Step 2

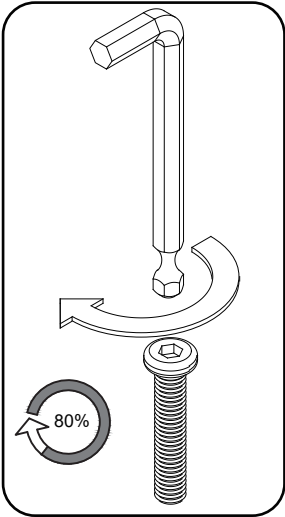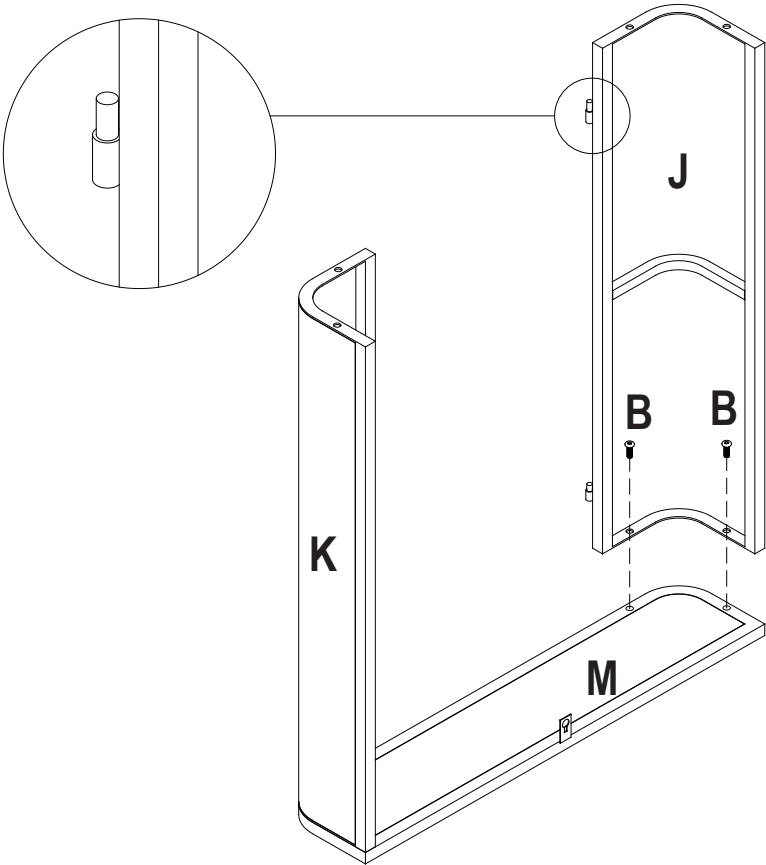


B X 2 PCS

Step 3



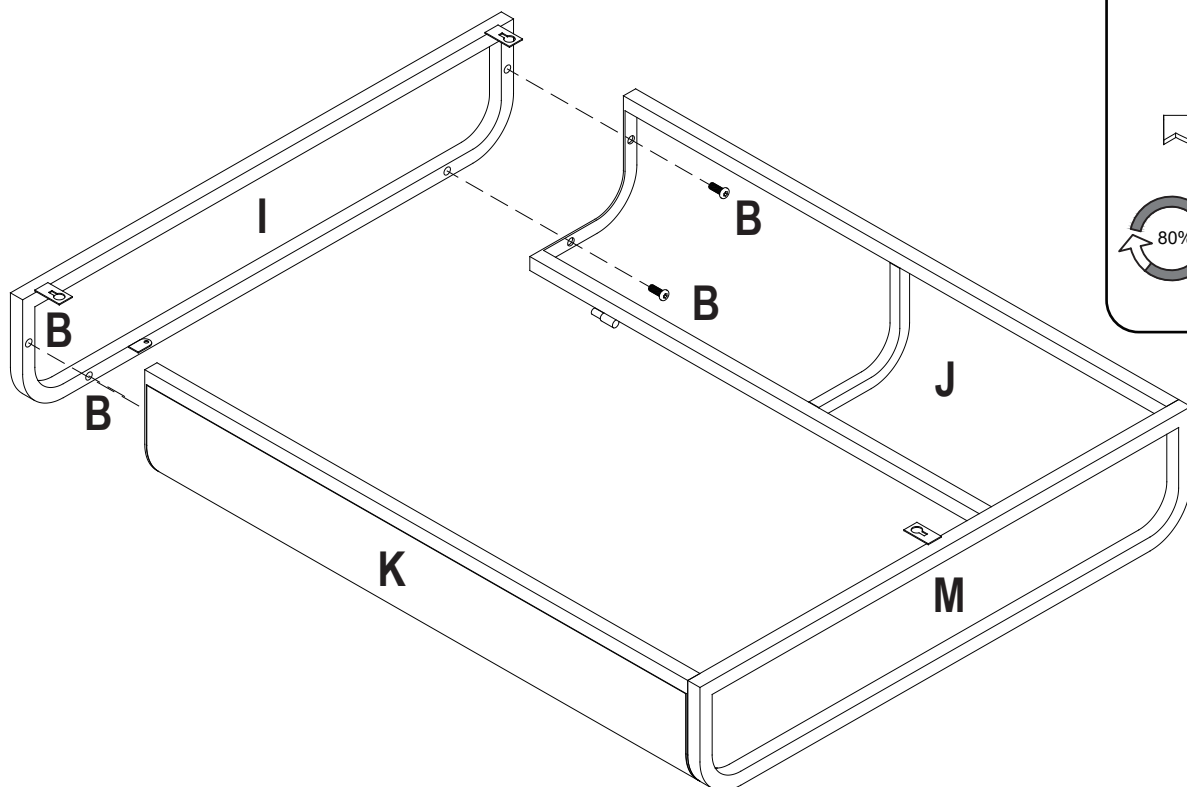


B X4 PCS

Step 4

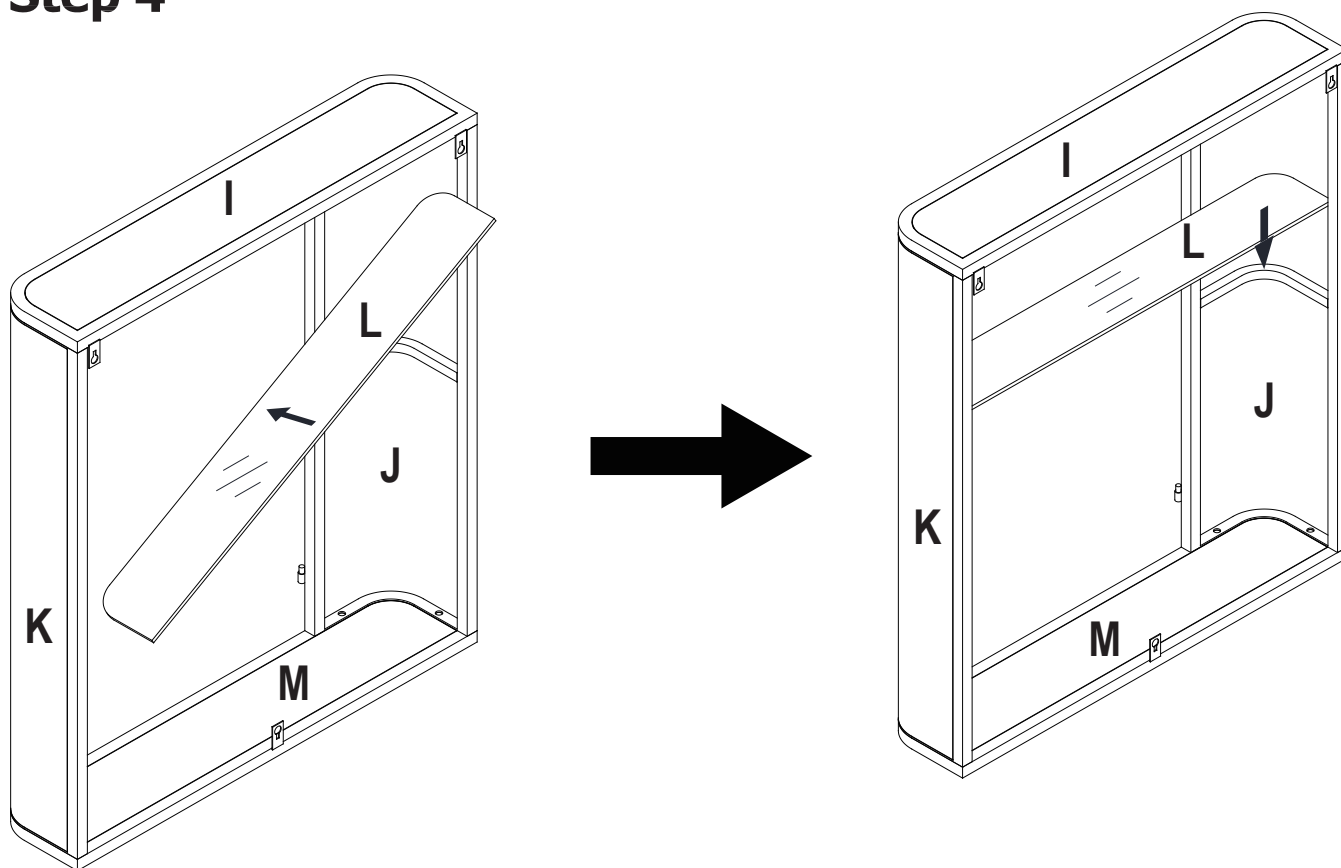

Step5

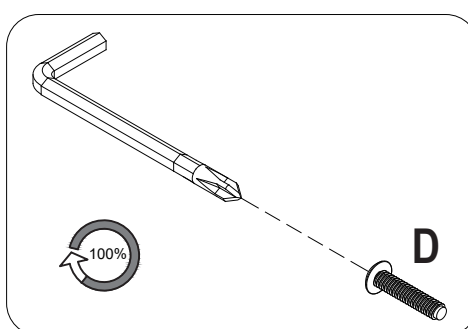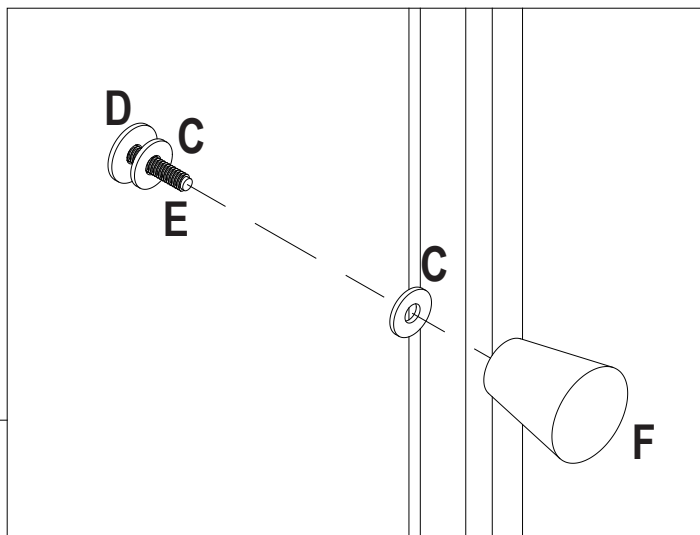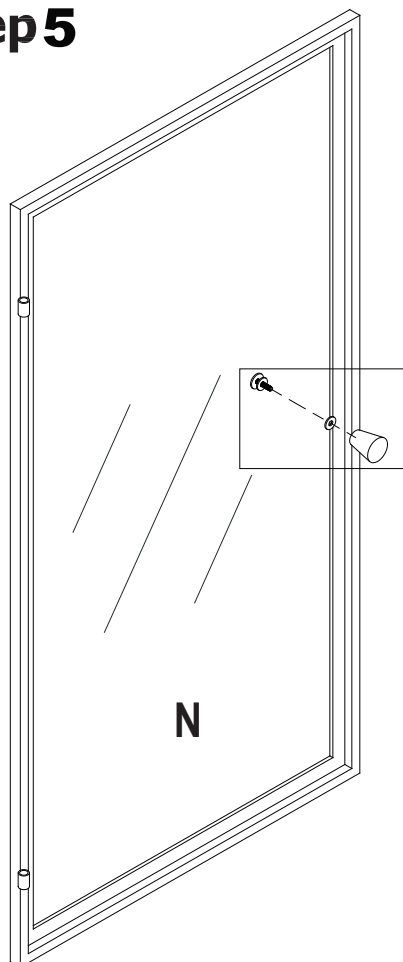

A1 X1 PC



C X2 PCS

D X1 PC



E X1 PC

F X1 PC

Step6

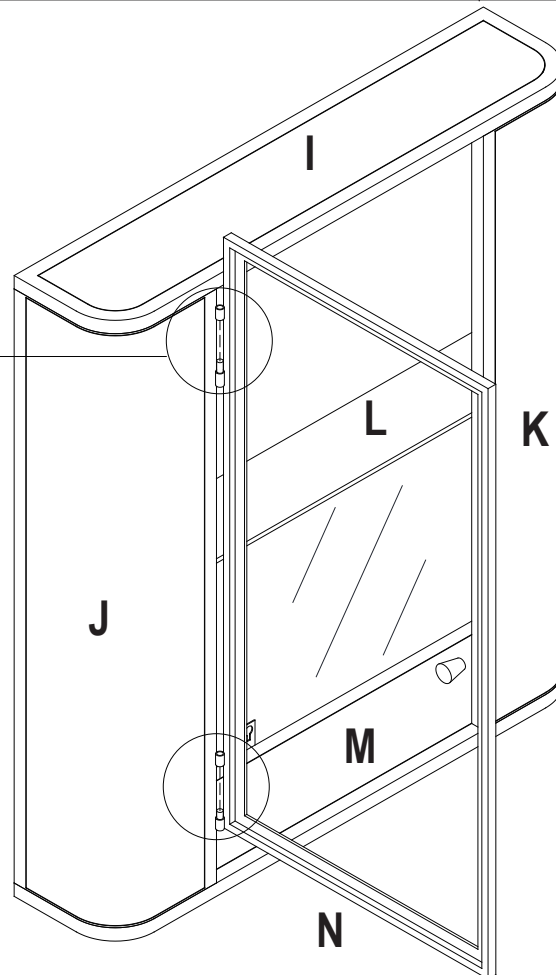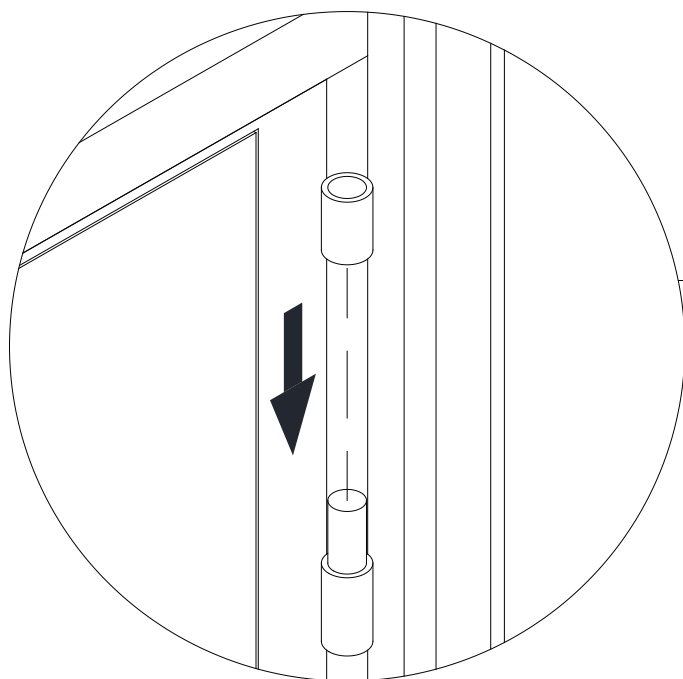

Step 7

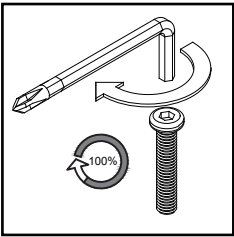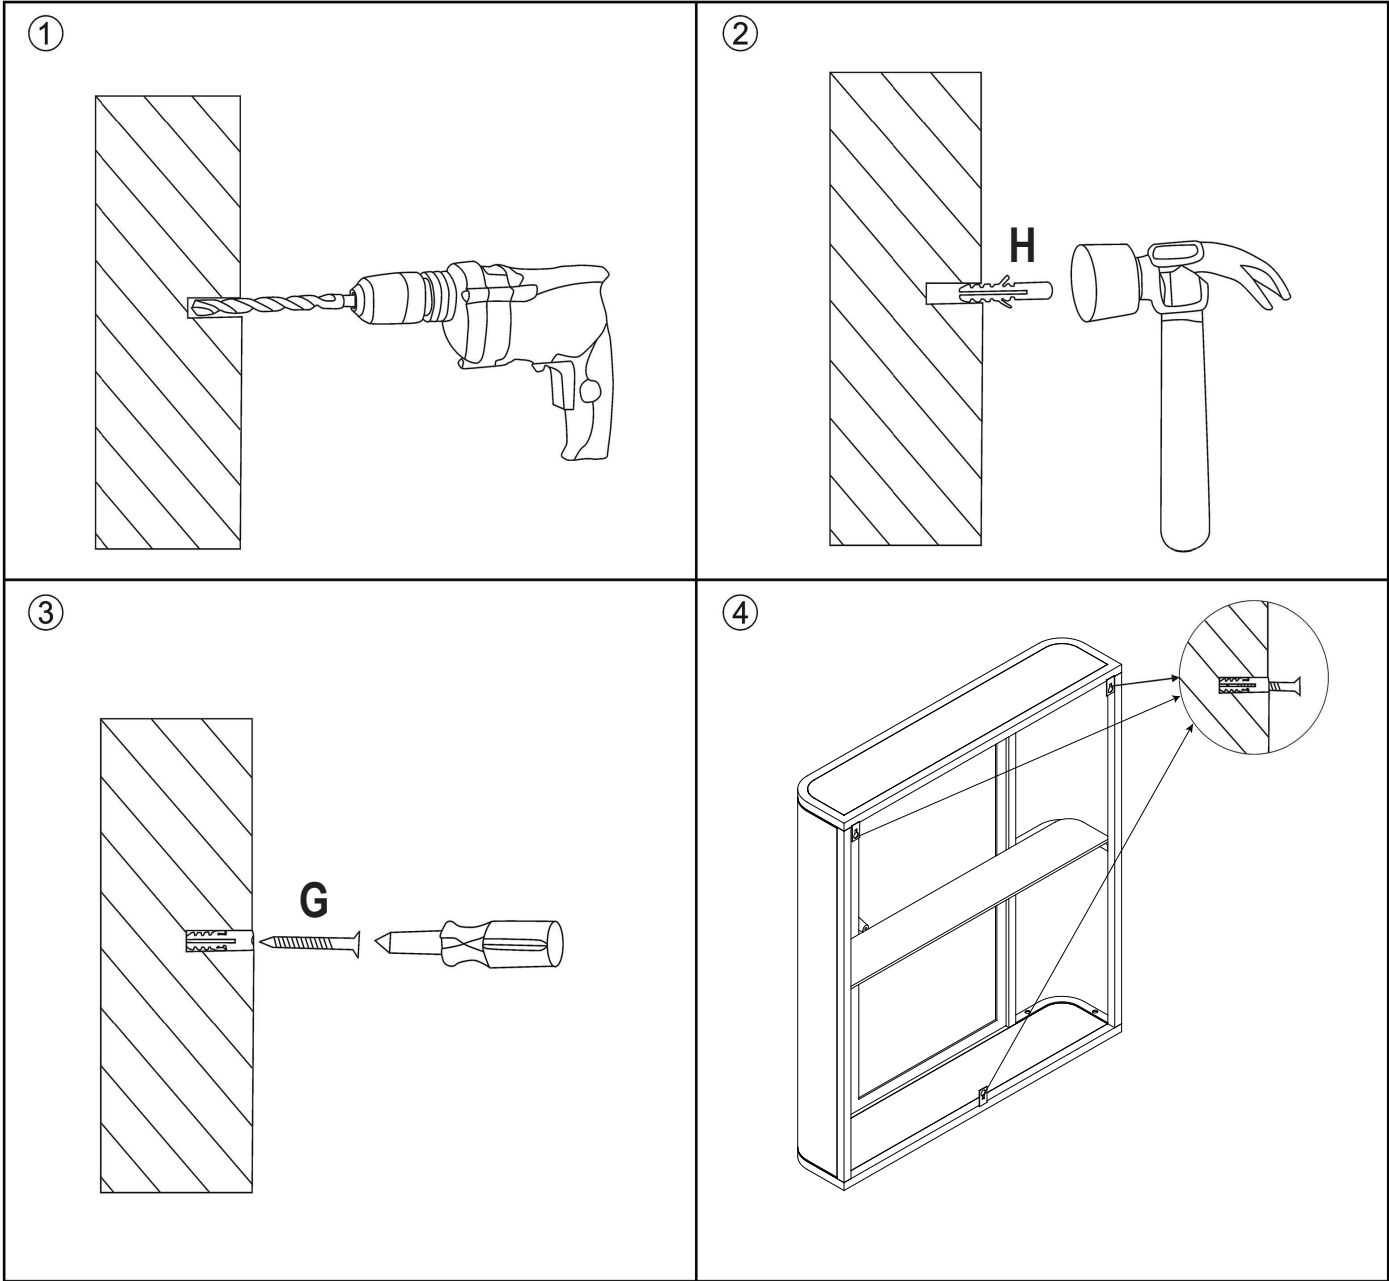

NOTE:AFTER ASSEMBLY,PLEASE MAKE SURE THAT ALL SCREWS ARE 100% LOCKED

G X 3 PCS
H X 3 PCS