



# ASSEMBLY INSTRUCTION

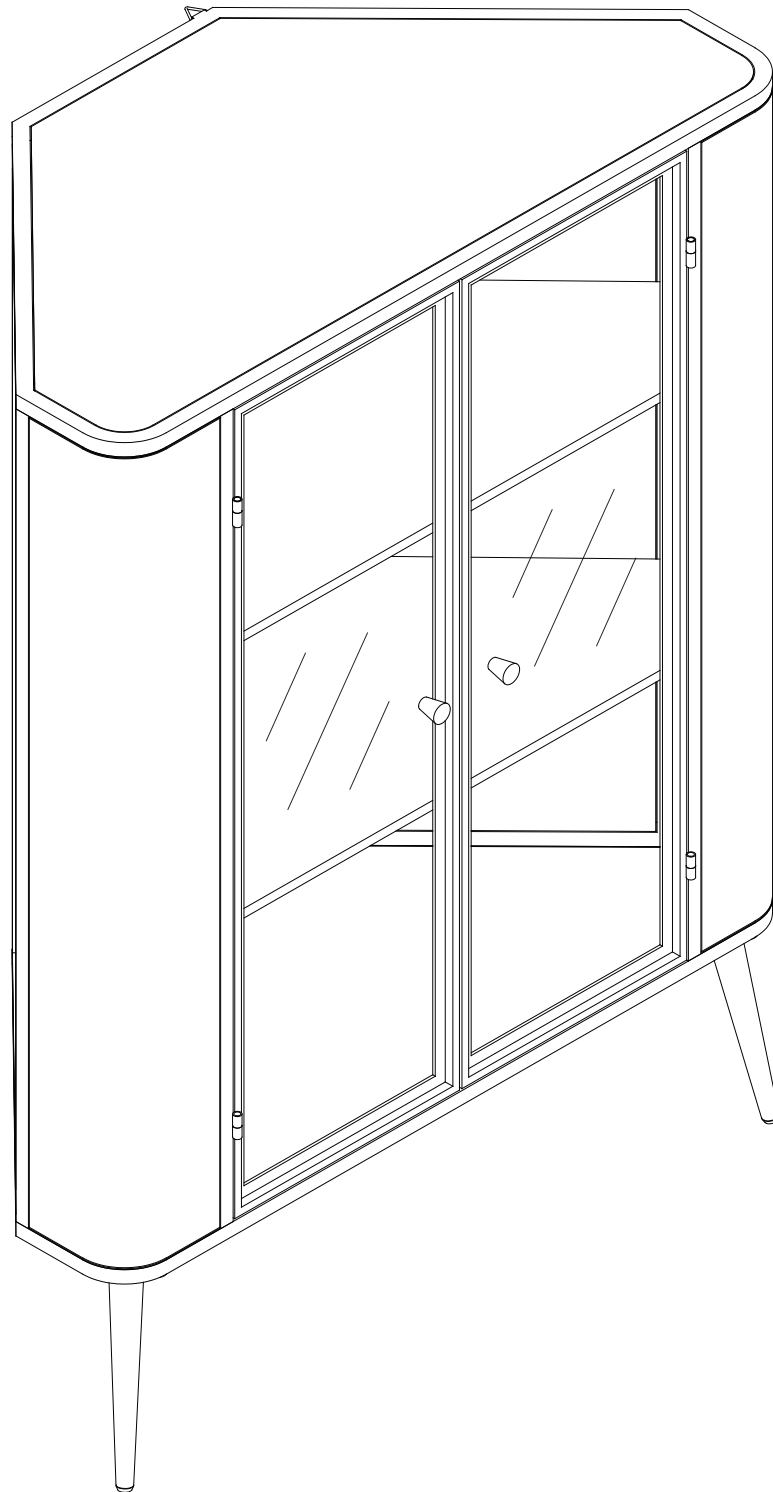


2 PERS



40 MIN












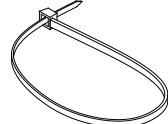


Pozi Screwdriver(Not Provided)






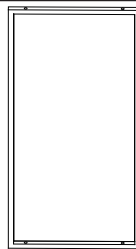

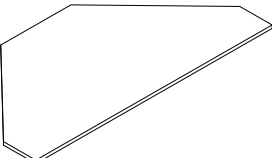
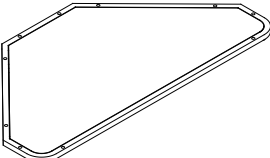



Hexagonal wrench(Provided)

# Assembly Instruction


## HARDWARE LIST

|  |  |  |   |   |
|--|--|--|---|---|
| <b>A1</b><br>           | <b>B</b><br><br>M6x25mm | <b>C</b><br><br>M6x16mm | <b>D</b><br><br>M4x8mm | <b>E</b><br> |
| <b>A2</b><br><br>2 PCS  | 12 PCS   | 8 PCS  | 2 PCS   | 2 PCS   |
| <b>F</b><br><br>M4x30mm | <b>G</b><br>            | <b>H</b><br>            | <b>I</b><br>            | <b>J</b><br> |
| 2 PCS  | 2 PCS  | 1 PC   | 1 PC  | 4 PCS   |
| <b>K</b><br>            |  |  |   |   |
| 2 PCS  |  |  |   |   |

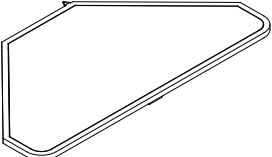
## PART LIST

|  |   |   |   |   |
|--|---|---|---|---|
| <b>L</b><br> | <b>M</b><br>  | <b>N</b><br>  | <b>O</b><br>  | <b>P</b><br>  |
| 1 PC   | 1 PC  | 1 PC  | 2 PCS   | 1 PC  |
| <b>Q</b><br> | <b>R</b><br> | <b>S</b><br> | <b>T</b><br> | <b>U</b><br> |
| 2 PCS  | 1 PC  | 3 PCS   | 1 PC  | 1 PC  |
|  |   |   |   |   |
|  |   |   |   |   |

- Do not use power tools to assemble your furniture.  
Power tools may strip or damage the parts.


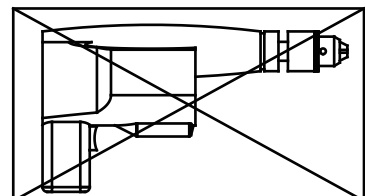


Explosive View

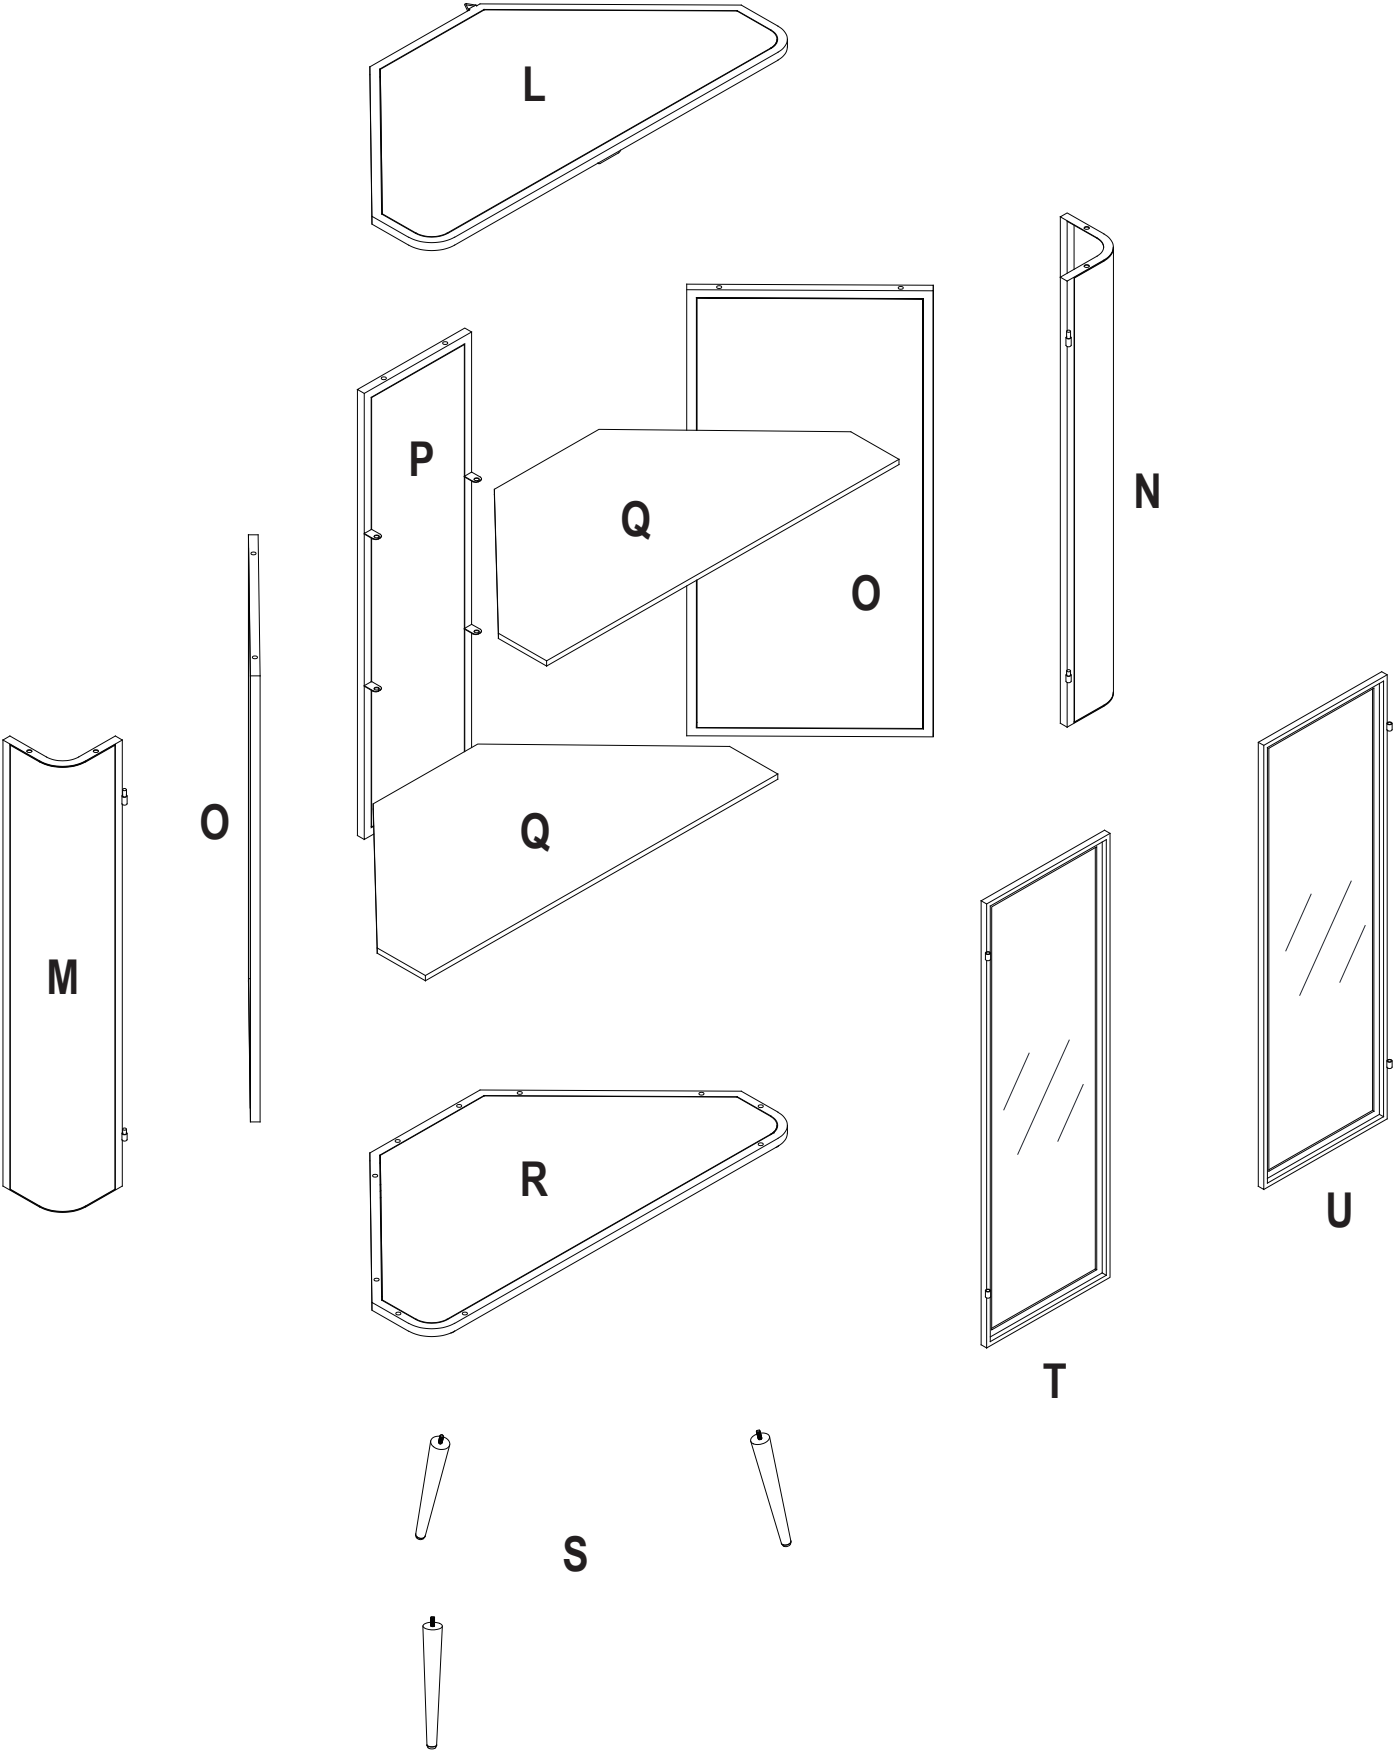



**IMPORTANT NOTE:** DO NOT tighten all screws and bolts until completely assembled

**Step 1**

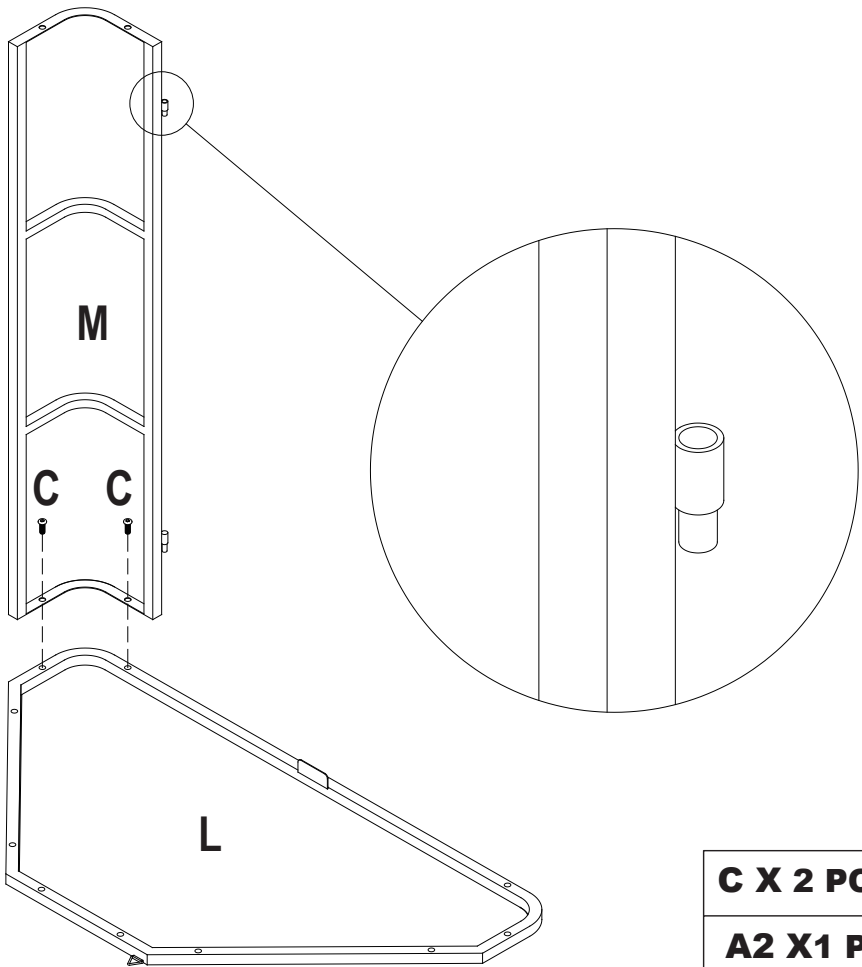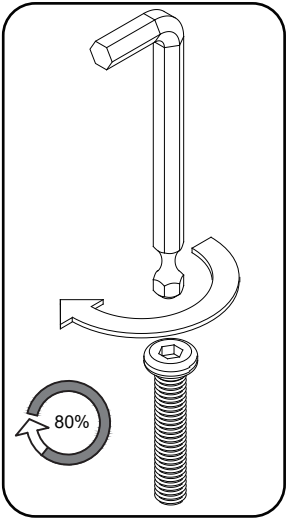



|                  |
|------------------|
| <b>C X 2 PCS</b> |
| <b>A2 X1 PC</b>  |

**Step 2**

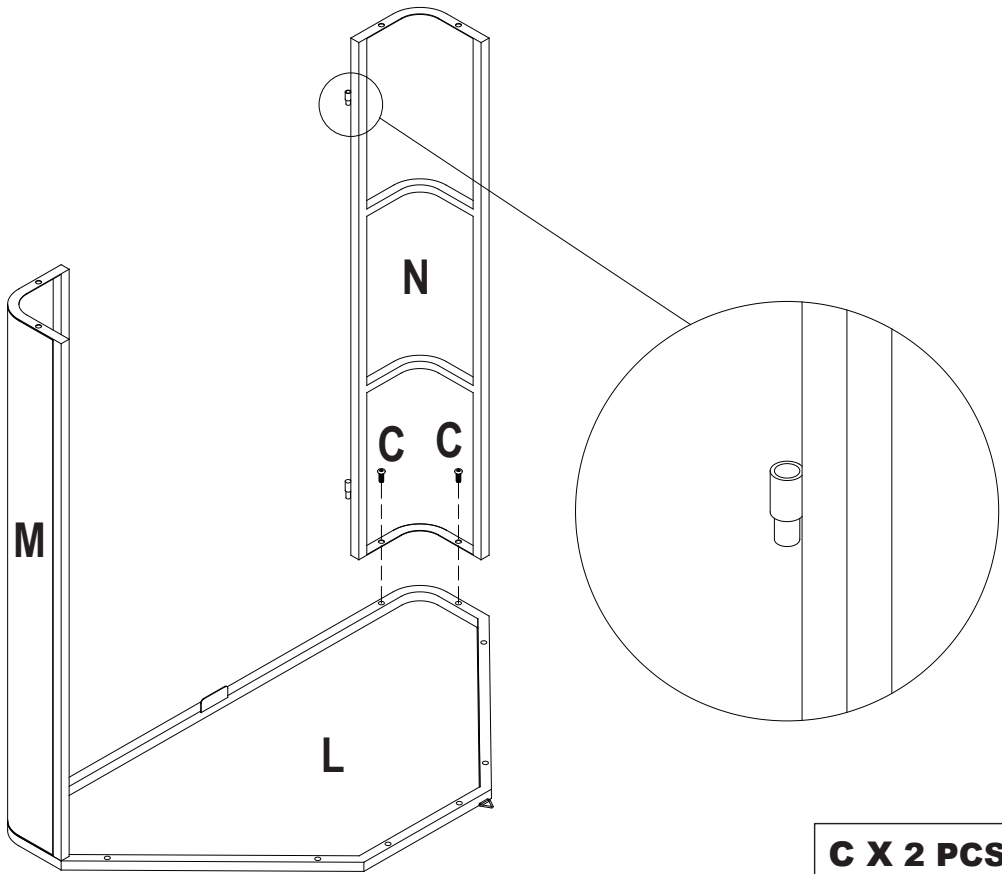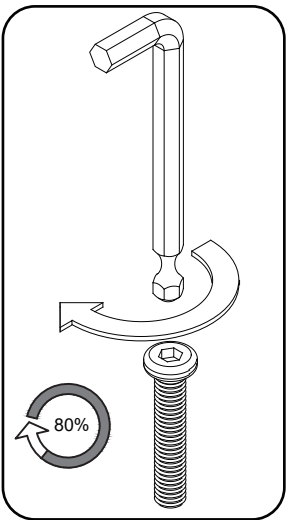



|                  |
|------------------|
| <b>C X 2 PCS</b> |
|------------------|

### Step 3

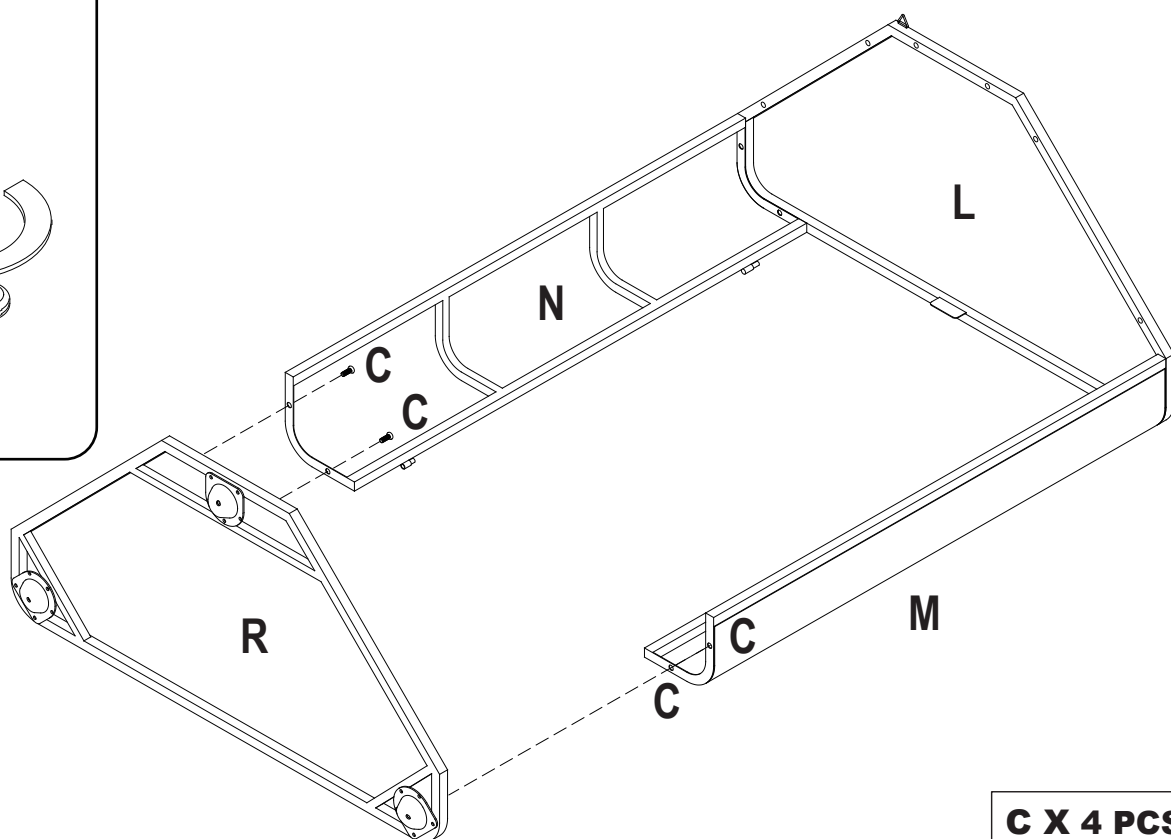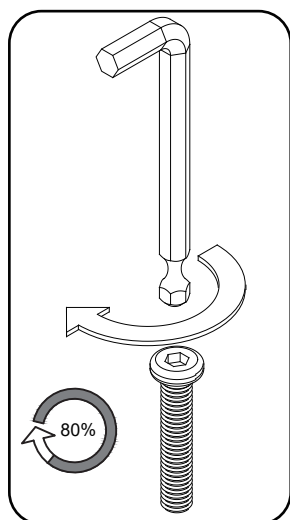



**C X 4 PCS**

### Step 4

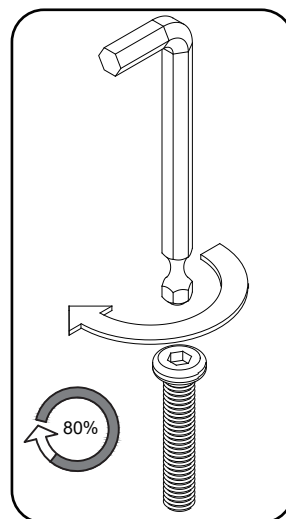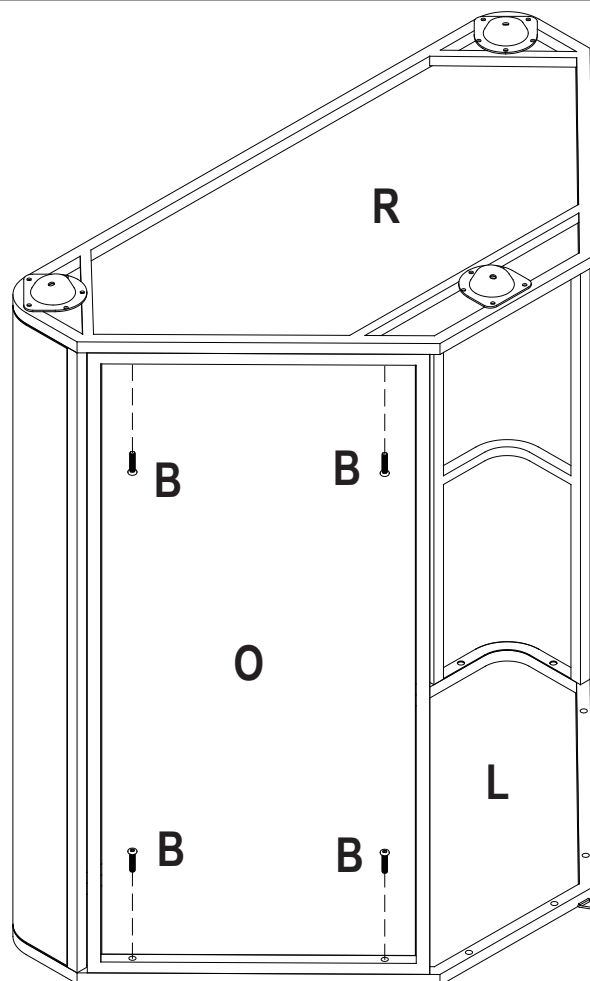



**B X 4 PCS**

## Step5

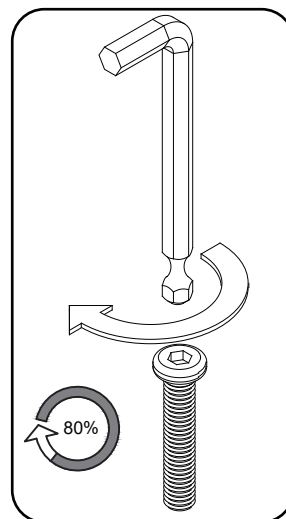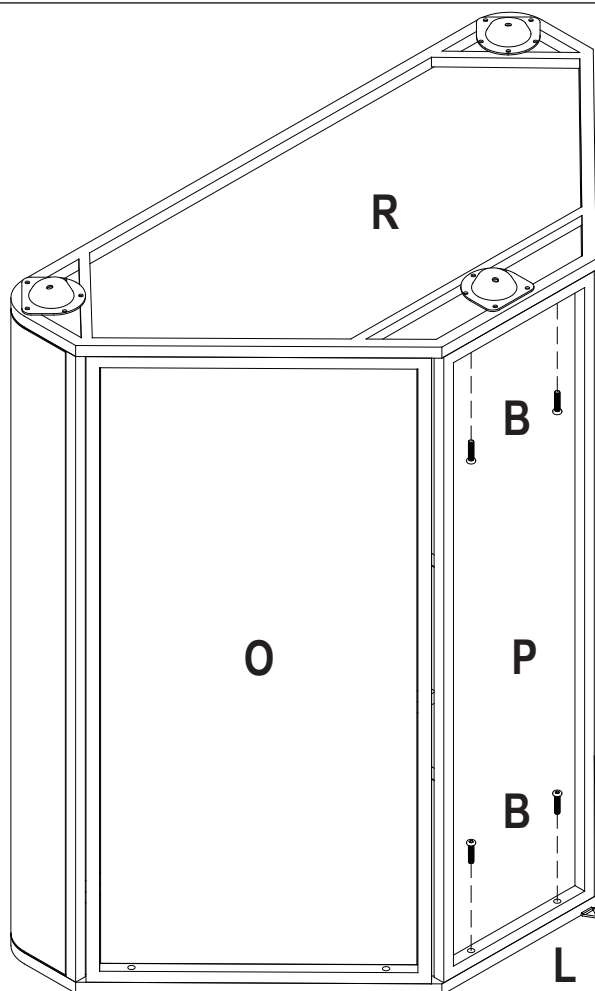


**B X4 PCS**

## Step6

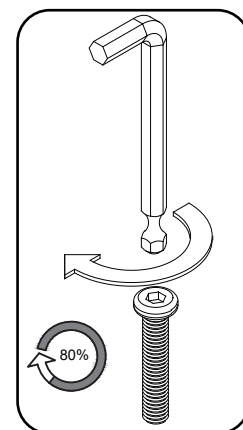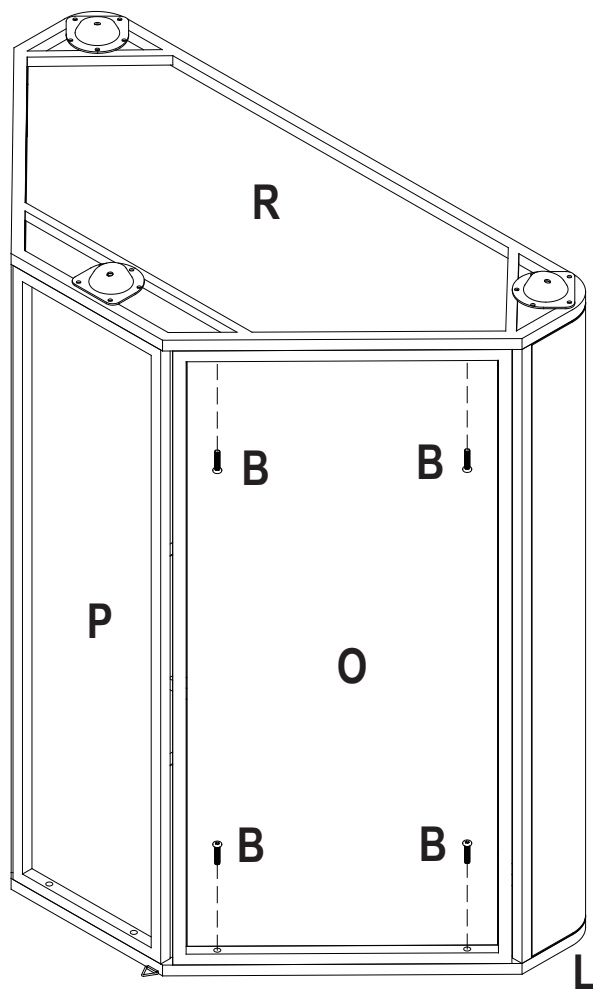


**B X4 PCS**




## Step 7

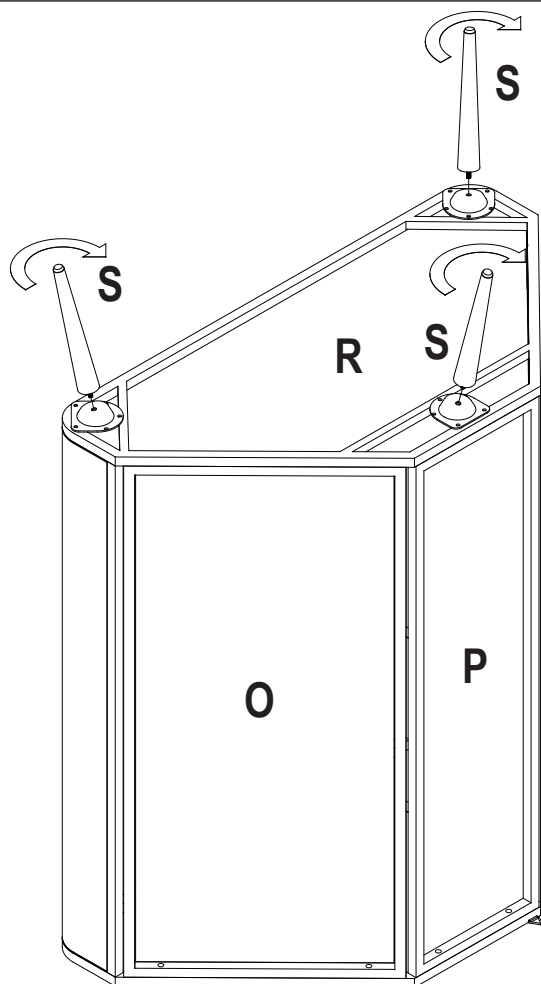

## Step 8


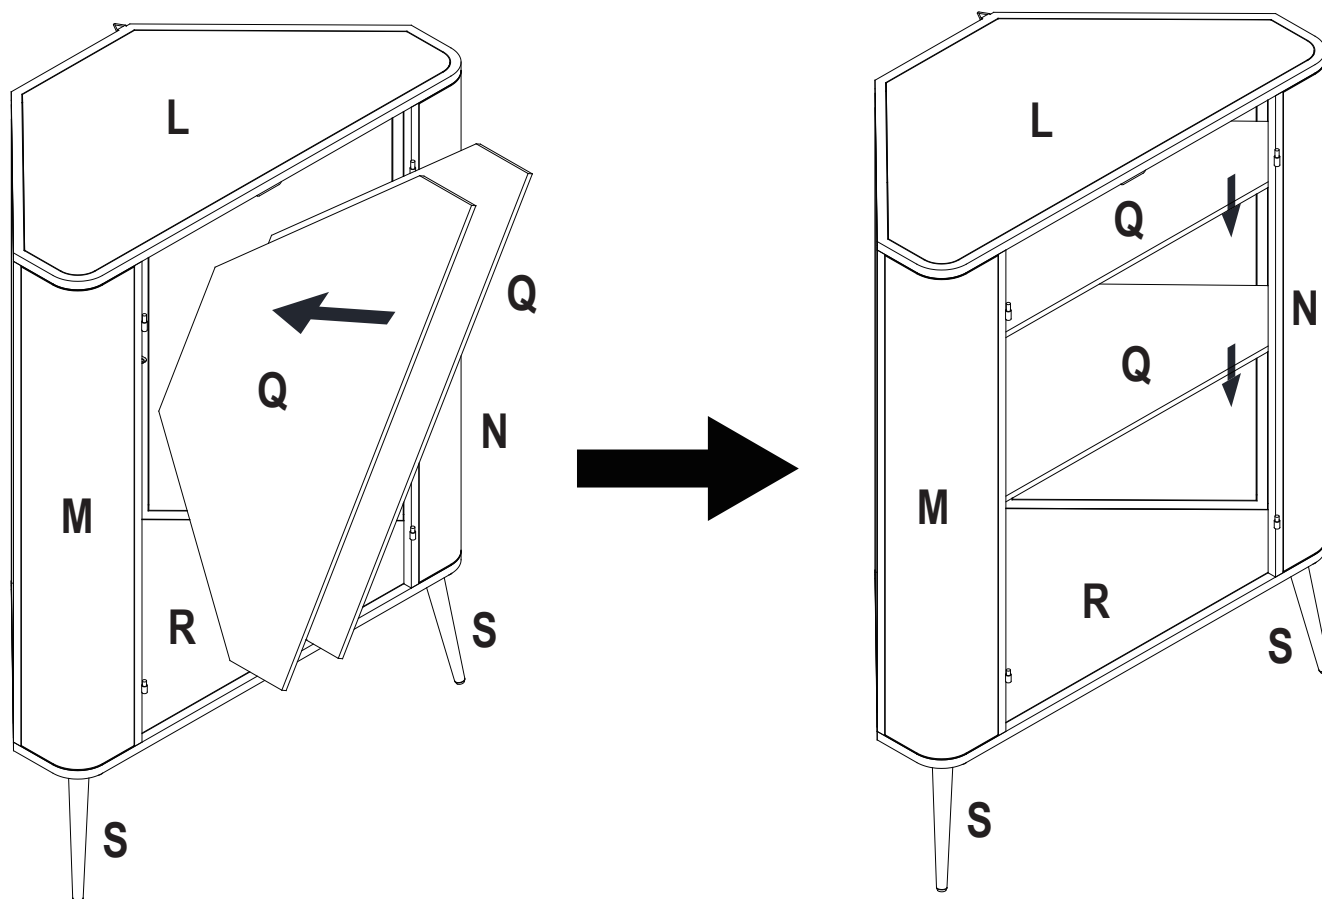


## Step 9

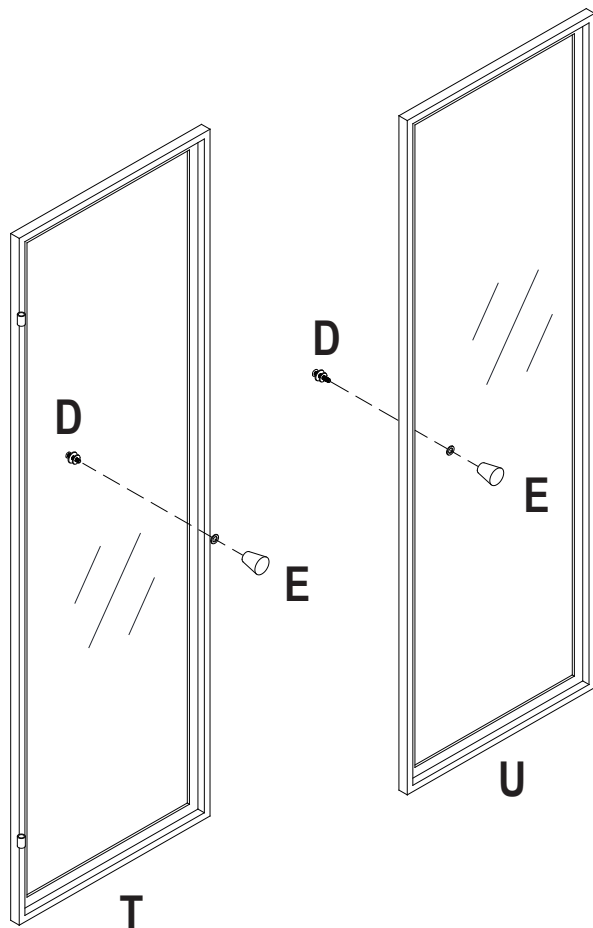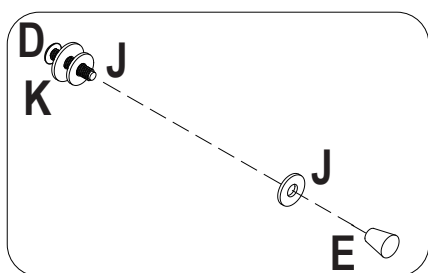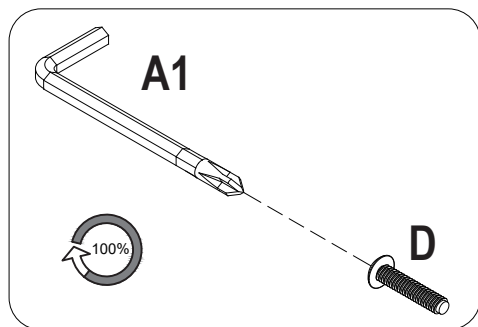


|                  |
|------------------|
| <b>A1 X 1 PC</b> |
| <b>D X 2 PCS</b> |
| <b>E X 2 PCS</b> |
| <b>J X 4 PCS</b> |
| <b>K X 2 PCS</b> |

## Step 10

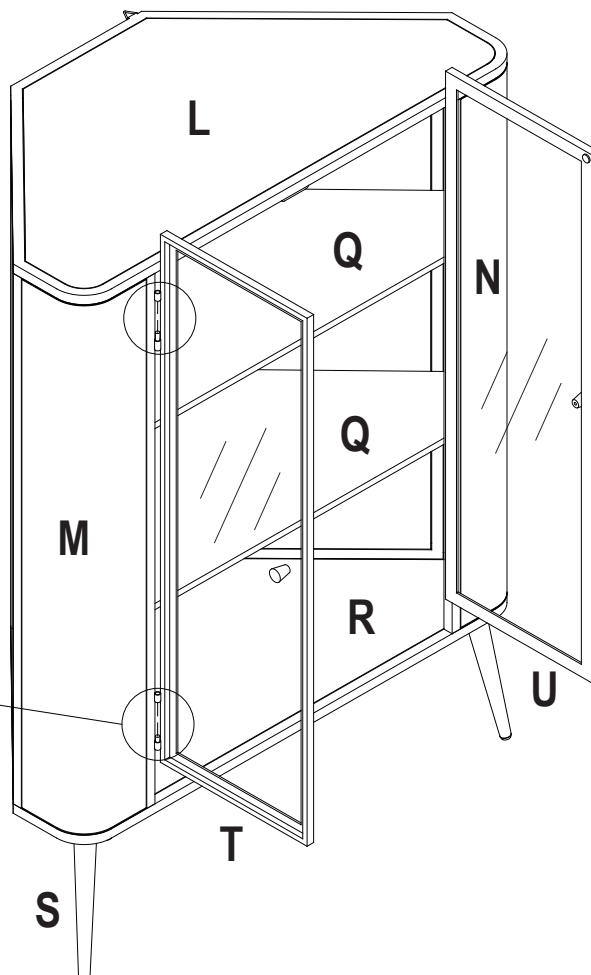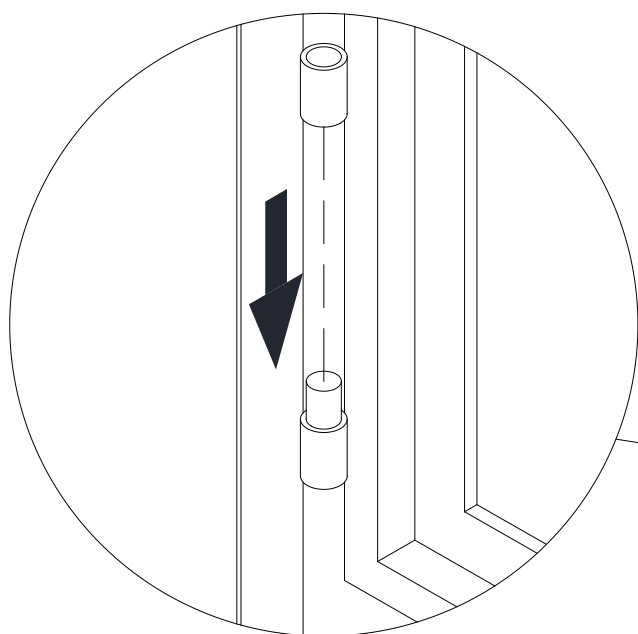



# Step 11

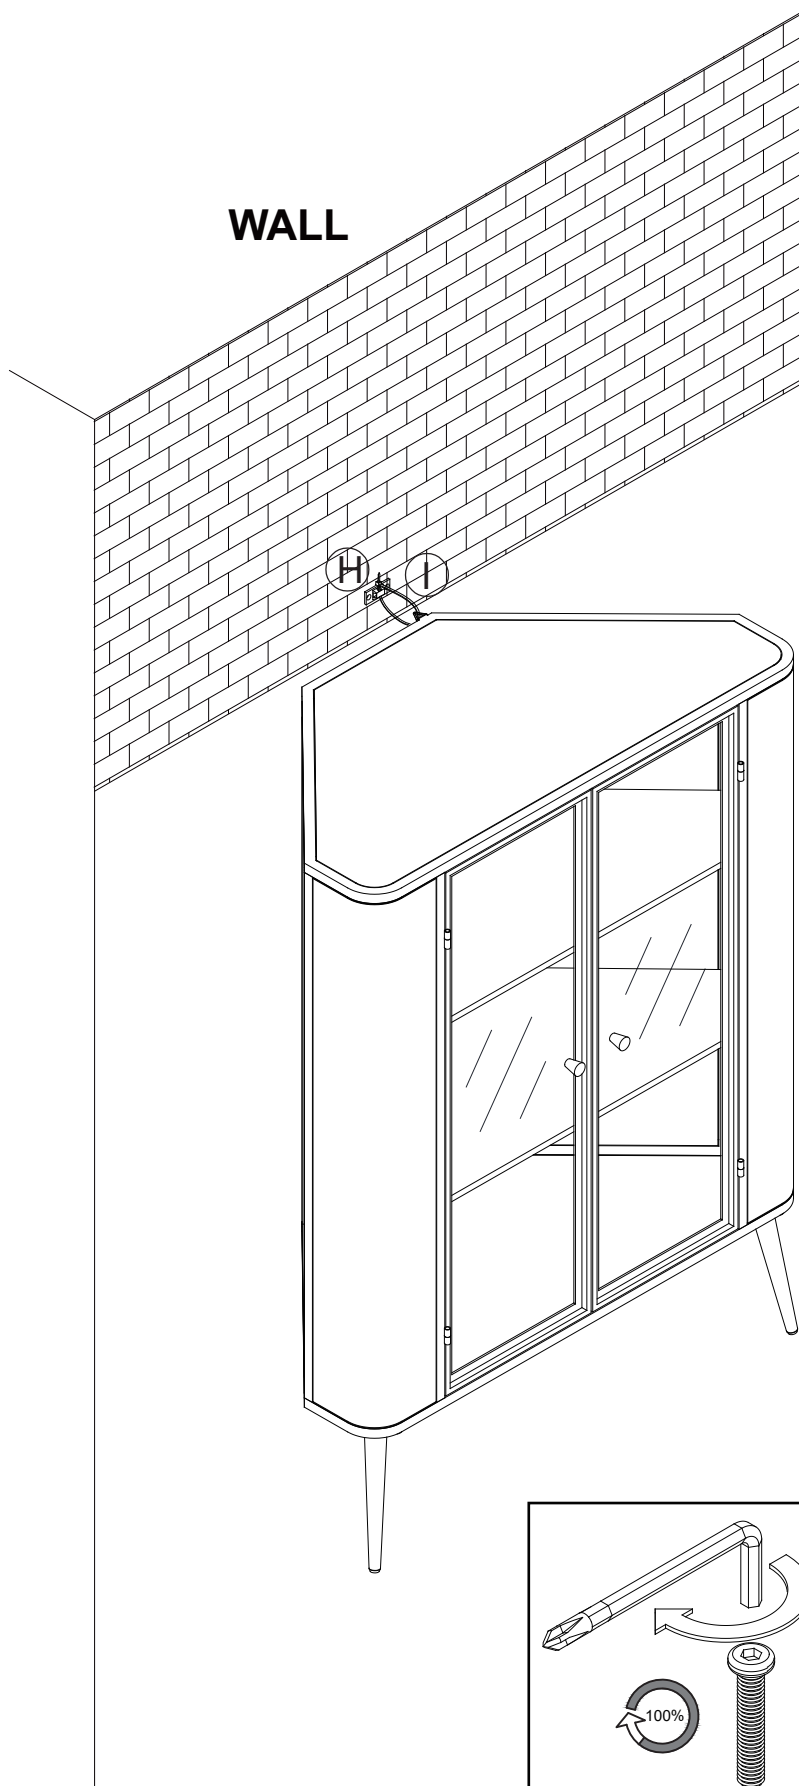

**WALL**

(1)

**WALL**

**drilling hole  
Ø6x30mm**

(2)

**WALL**

(3)

**WALL**

(4)

(5)

**F X 2 PCS**

**G X 2 PCS**

**H X 1 PC**

**I X 1 PC**

**NOTE:**AFTER ASSEMBLY,PLEASE MAKE SURE THAT ALL SCREWS ARE 100% LOCKED