



# ASSEMBLY INSTRUCTION

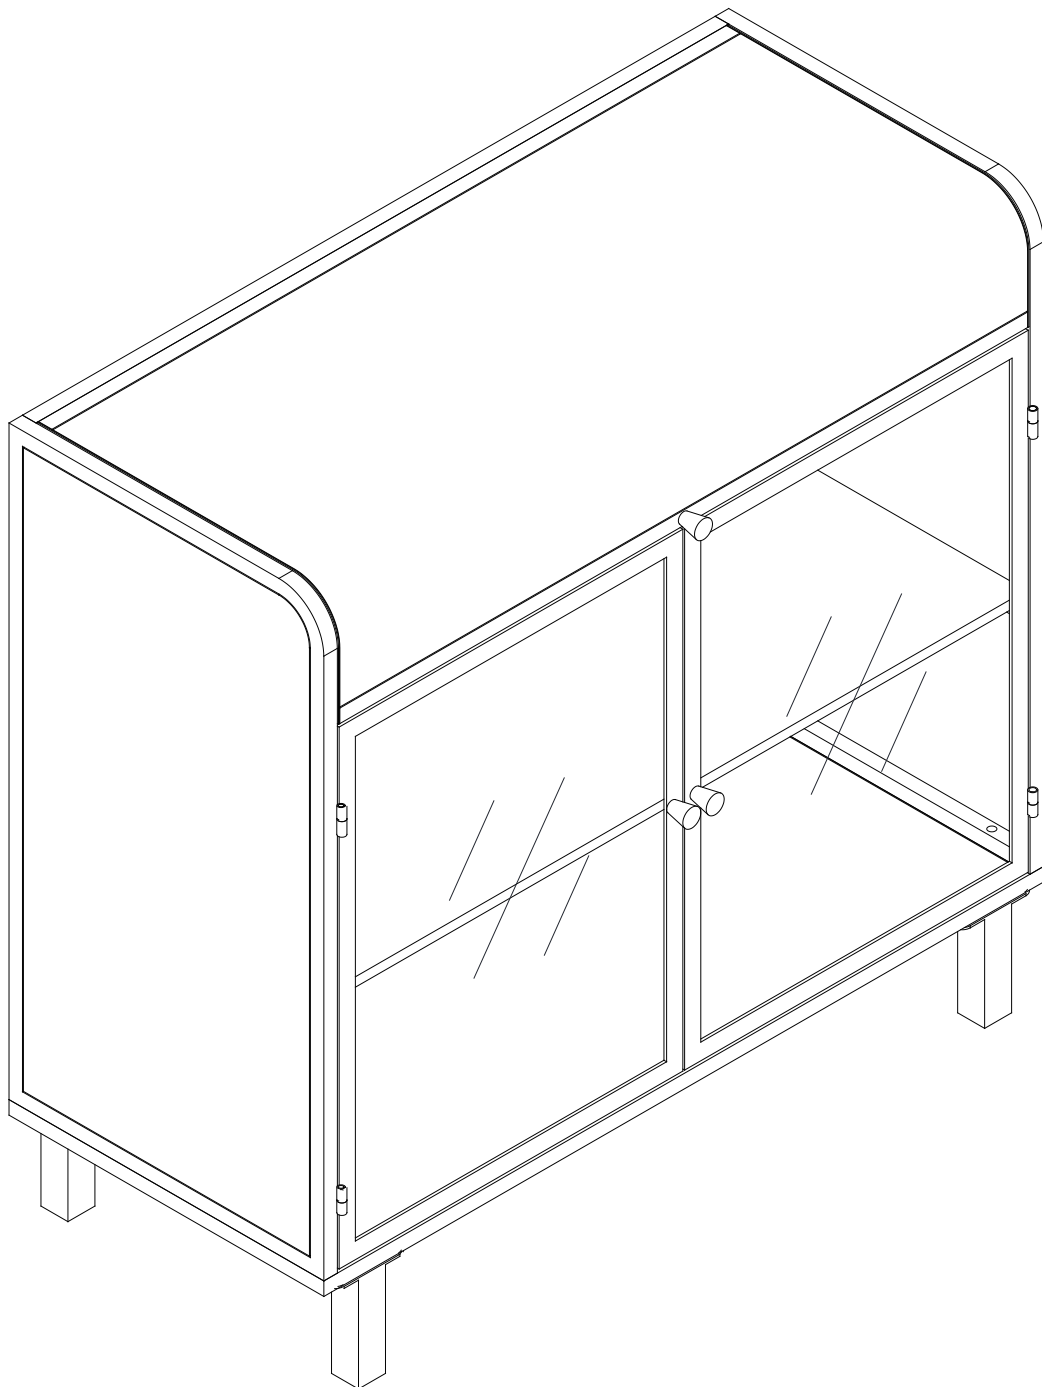


2 PERS



50 MIN














Pozi Screwdriver(Not Provided)














Hexagonal wrench(Provided)

# Assembly Instruction


## HARDWARE LIST
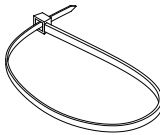
<b>A1</b> 	<b>B</b>  M6x25mm	<b>C</b>  M6x10mm	<b>D</b>  M4x20mm	<b>E</b>  M4x10mm
<b>A2</b> 				
2 PCS	18 PCS	10 PCS	1 PC	2 PCS
<b>F</b> 	<b>G</b>  M4x30mm	<b>H</b> 	<b>I</b> 	<b>J</b> 
3 PCS	2 PCS	1 PC	1 PC	2 PCS


## PART LIST
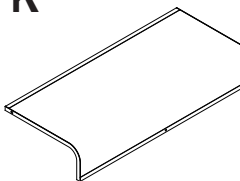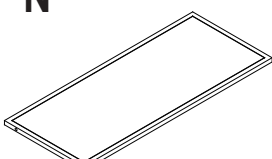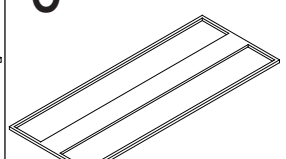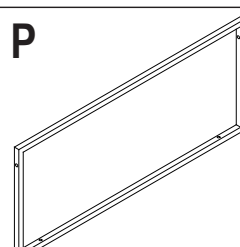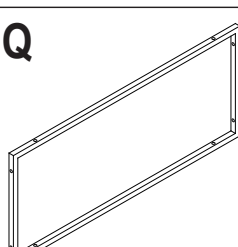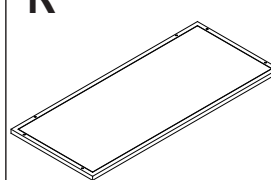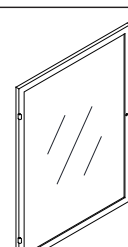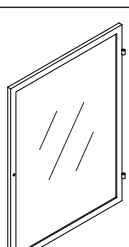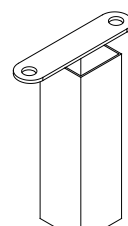
<b>K</b> 	<b>L</b> 	<b>M</b> 	<b>N</b> 	<b>O</b> 
1 PC	1 PC	1 PC	1 PC	1 PC
<b>P</b> 	<b>Q</b> 	<b>R</b> 	<b>S</b> 	<b>T</b> 
1 PC	1 PC	1 PC	1 PC	1 PC
<b>U</b> 				
4 PCS				

- Do not use power tools to assemble your furniture.  
Power tools may strip or damage the parts.


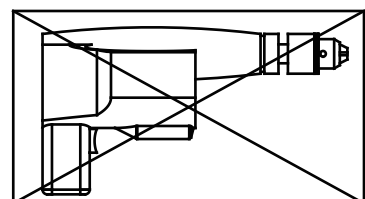


Explosive View

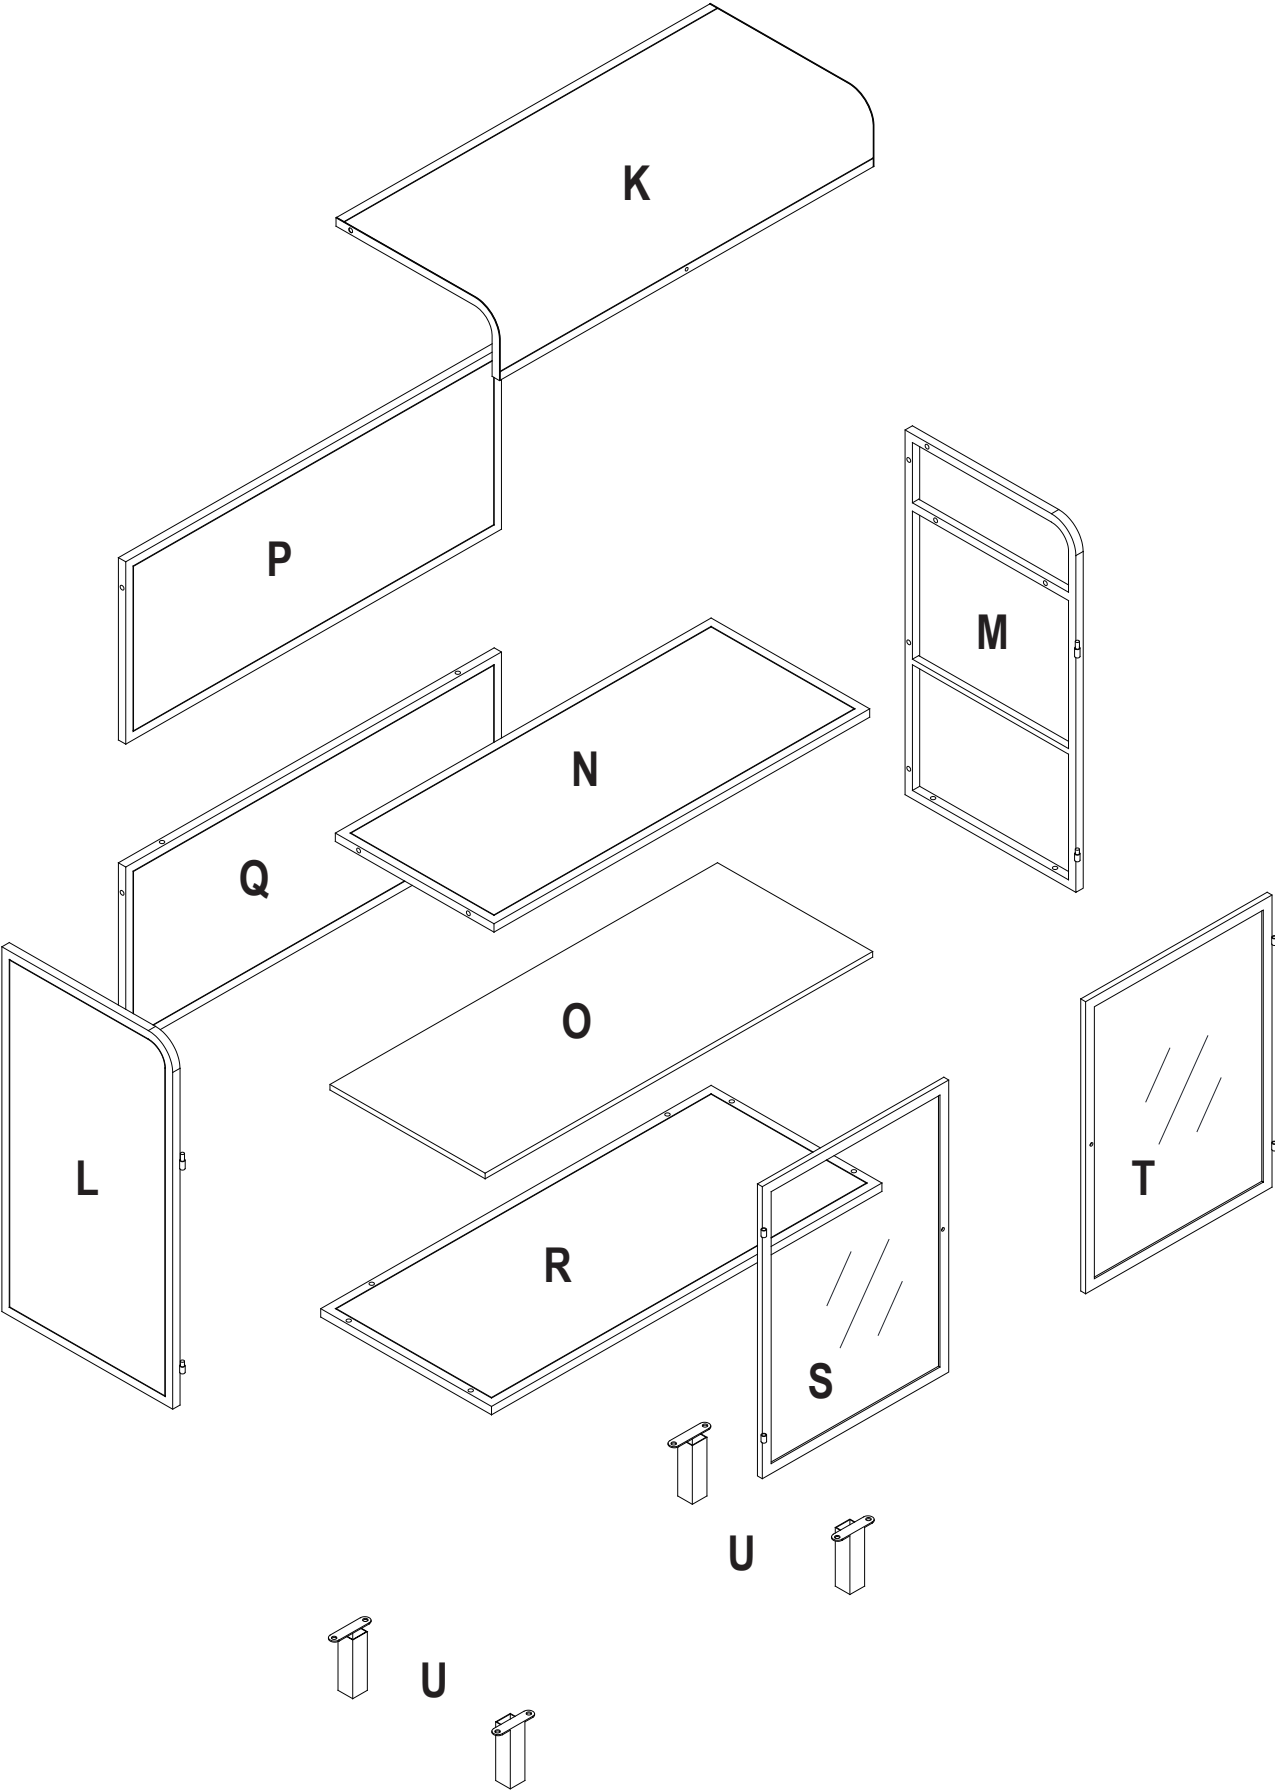

**IMPORTANT NOTE:** DO NOT tighten all screws and bolts until completely assembled



**Step 1**

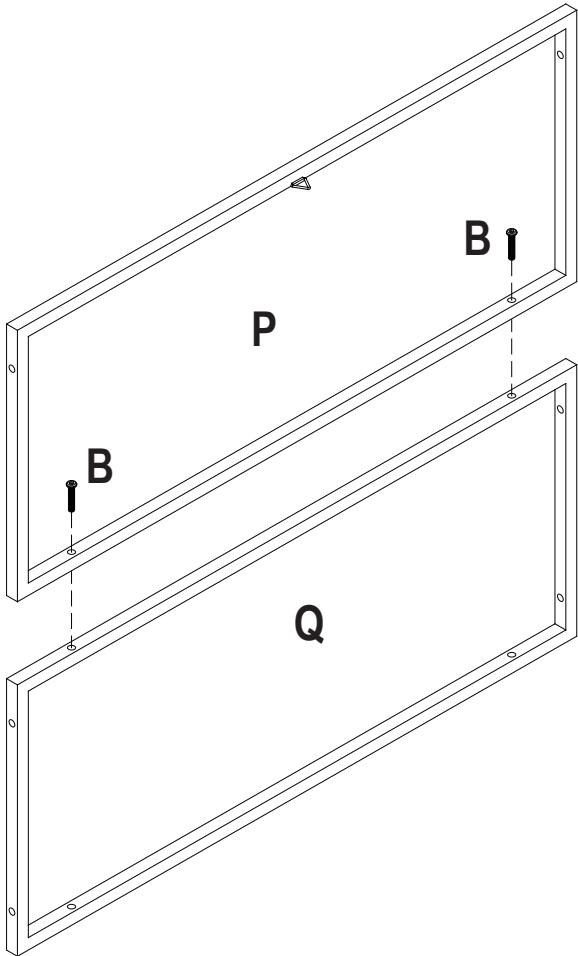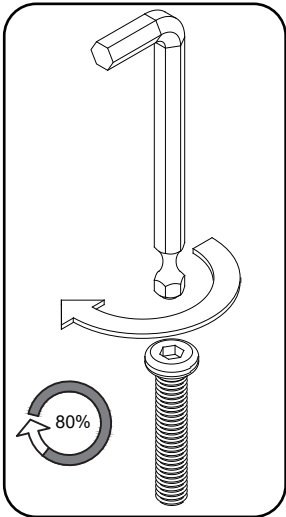

**B X 2 PCS**



**A2 X 1 PC**

**Step 2**

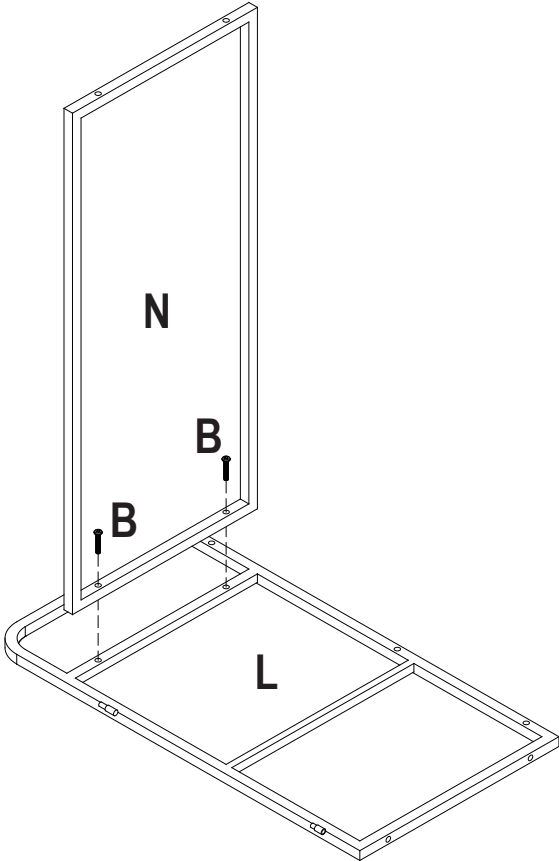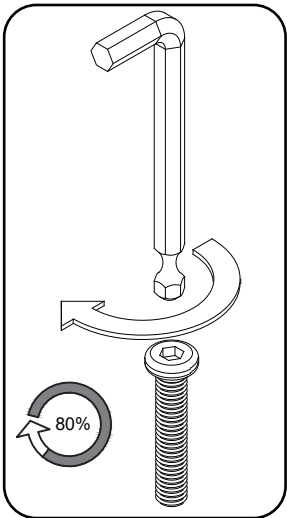



**B X 2 PCS**

## Step 3

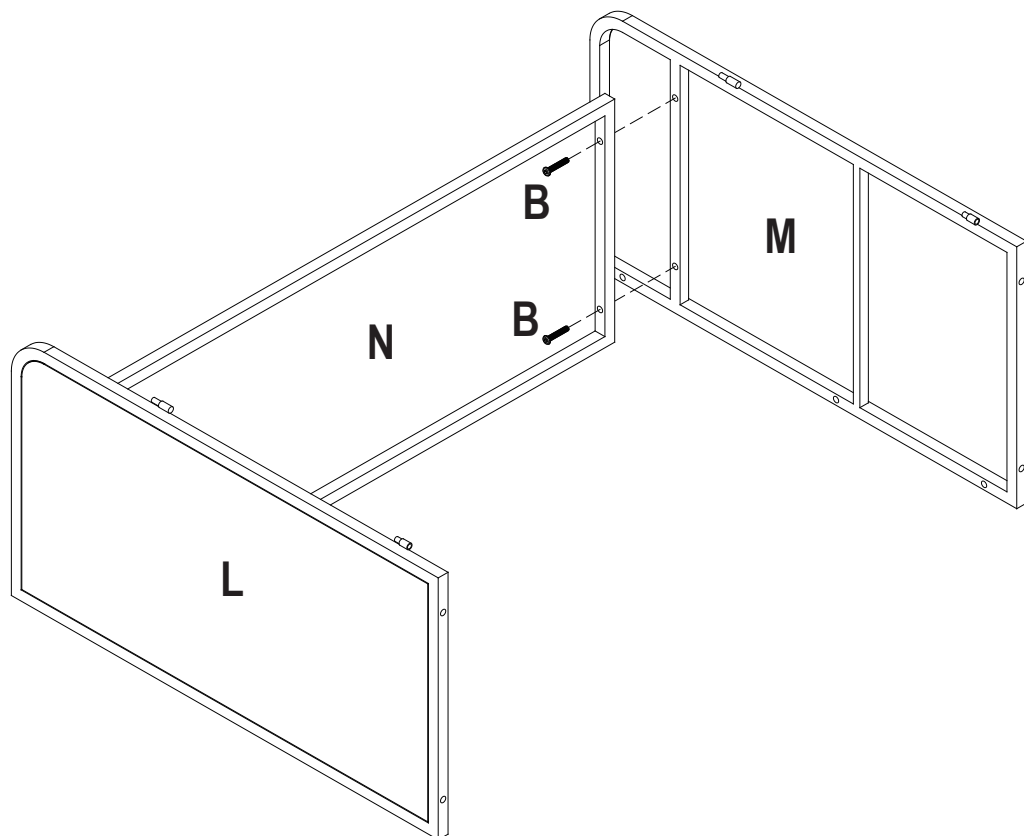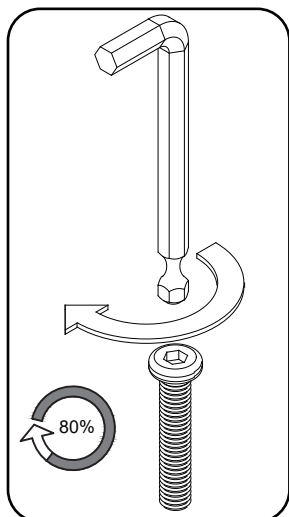



**B X2 PCS**

## Step 4

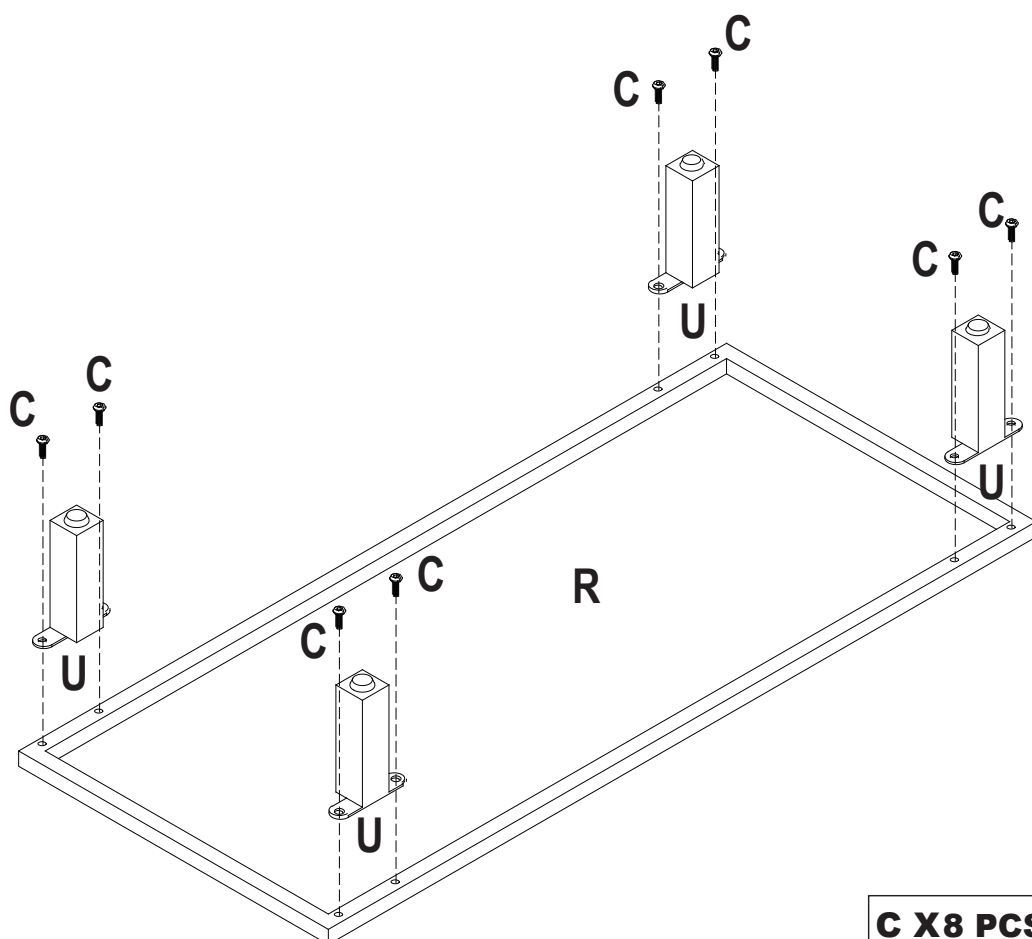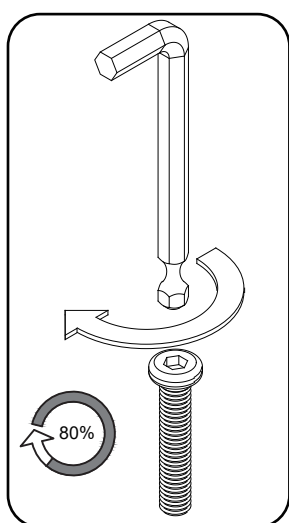



**C X8 PCS**

## Step5

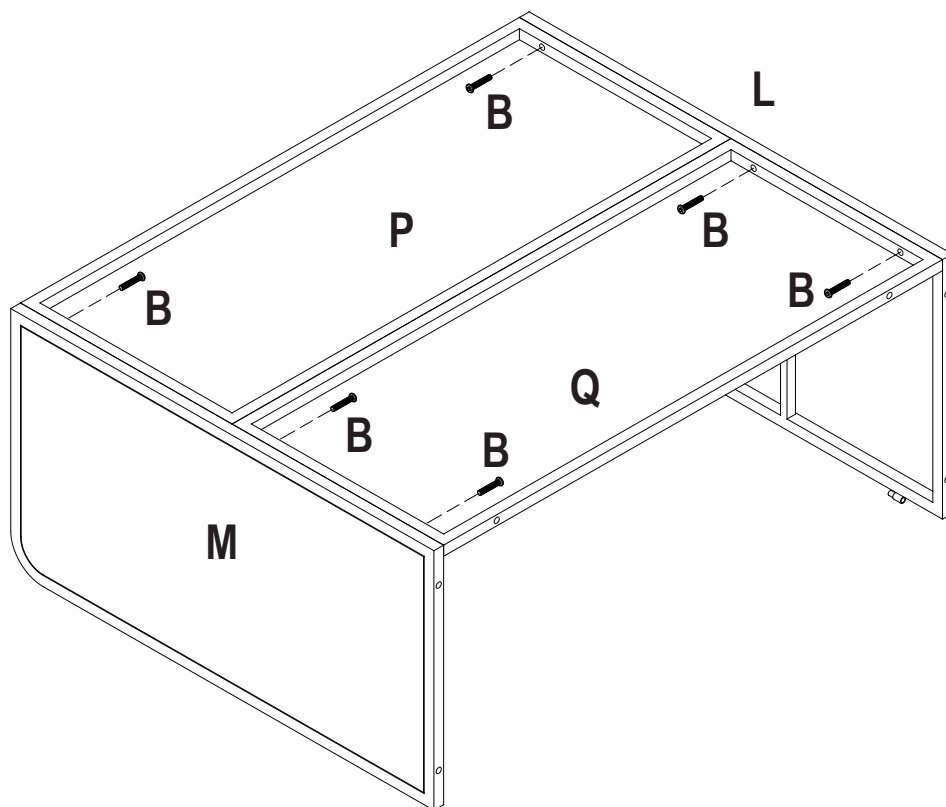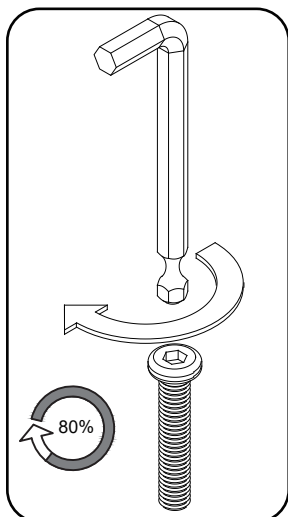



**B X6 PCS**

## Step6

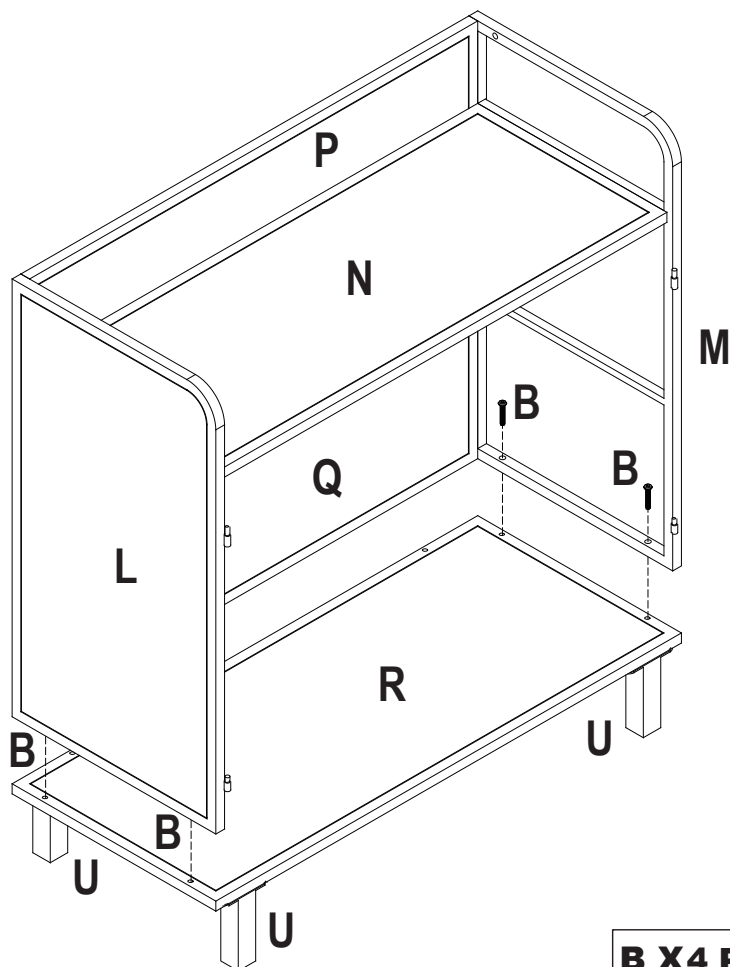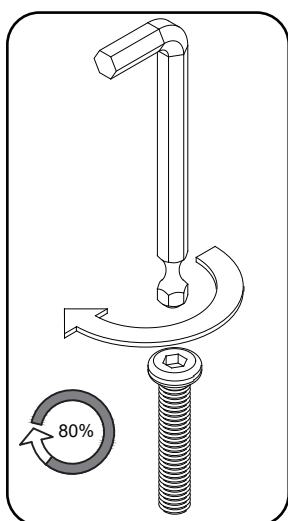



**B X4 PCS**

## Step 7

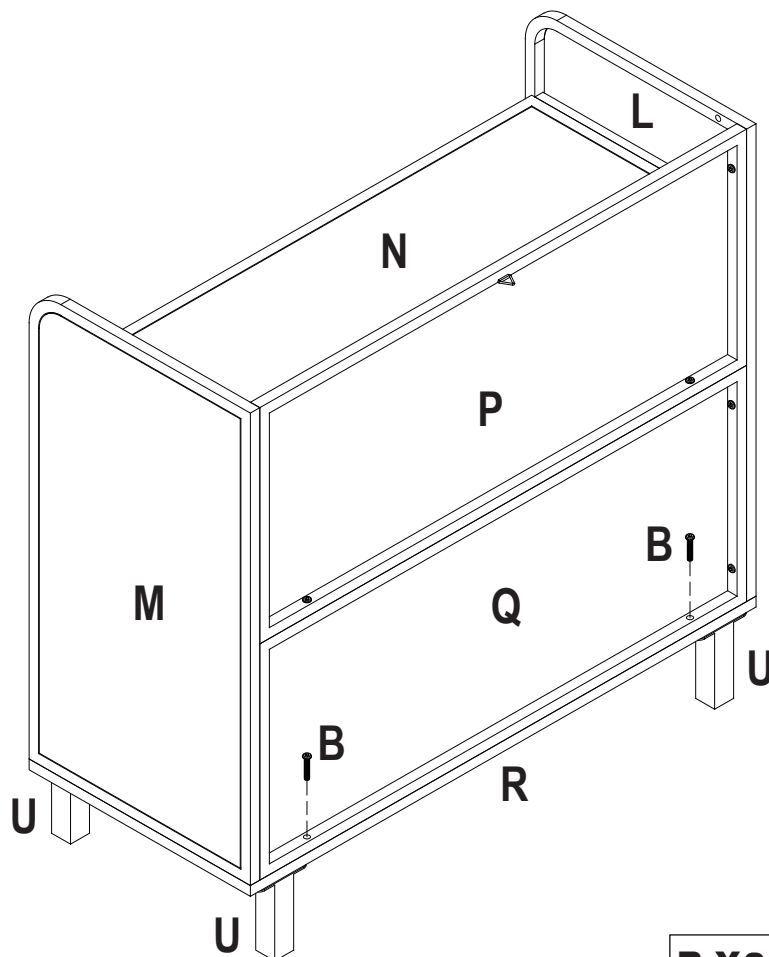
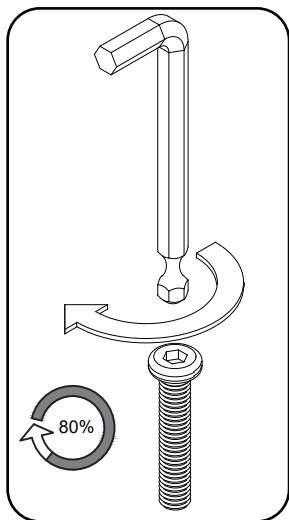


**B X2 PCS**

## Step 8

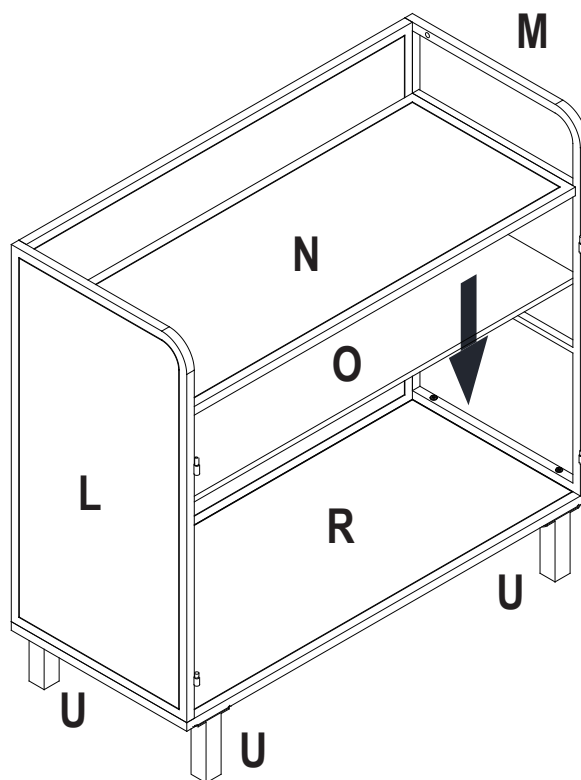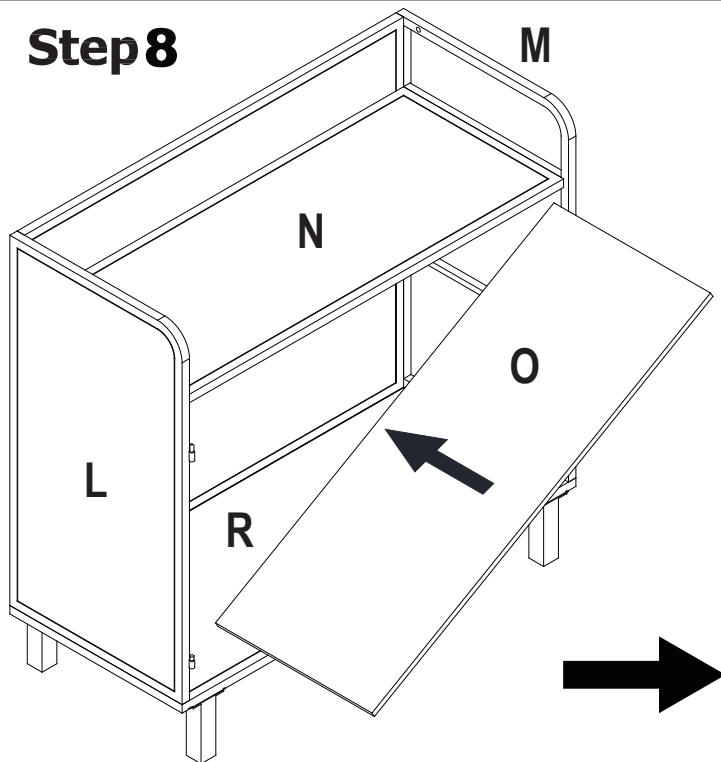

## Step 9

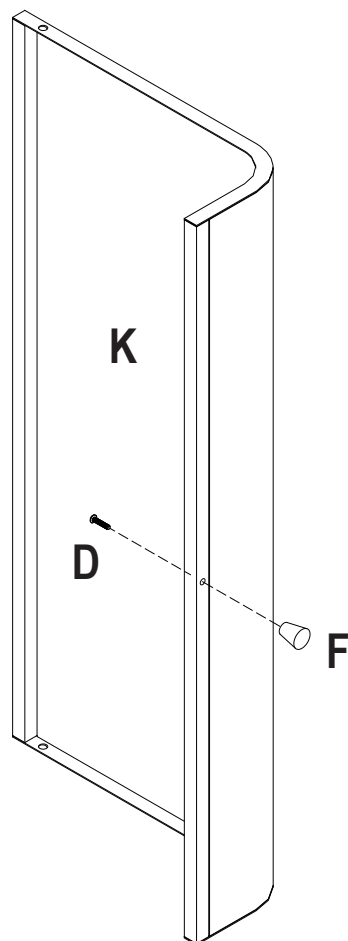
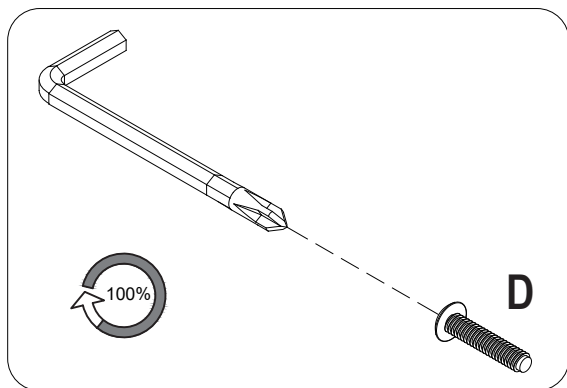


**A1 X 1 PC**

**F X 1 PC**

**D X 1 PC**



## Step 10

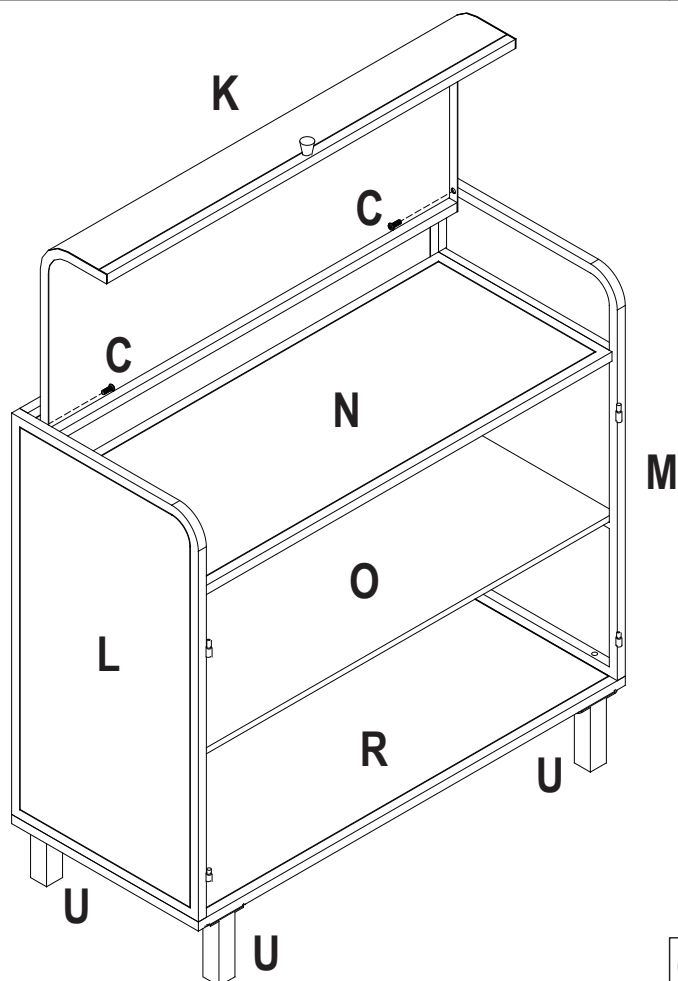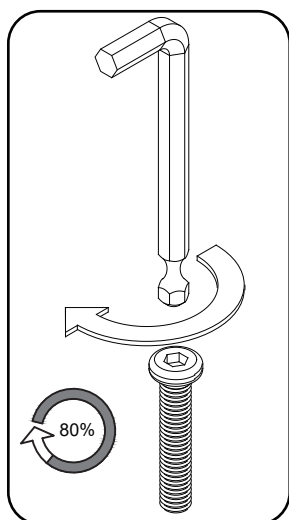

**C X 2 PCS**




## Step 11

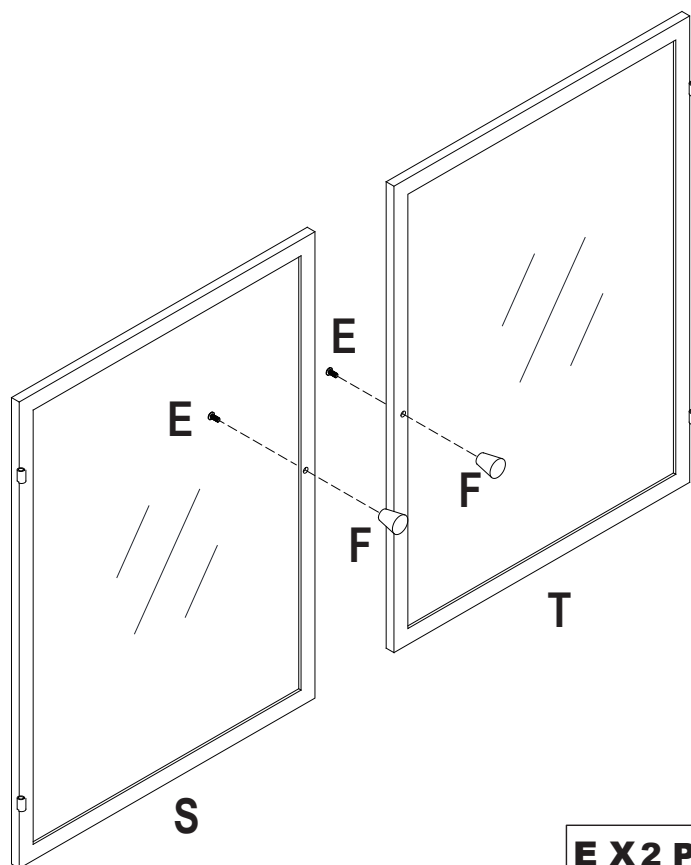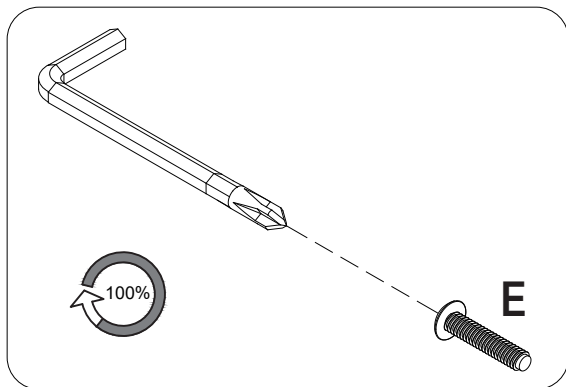



**E X 2 PCS**

**F X 2 PCS**

## Step 12

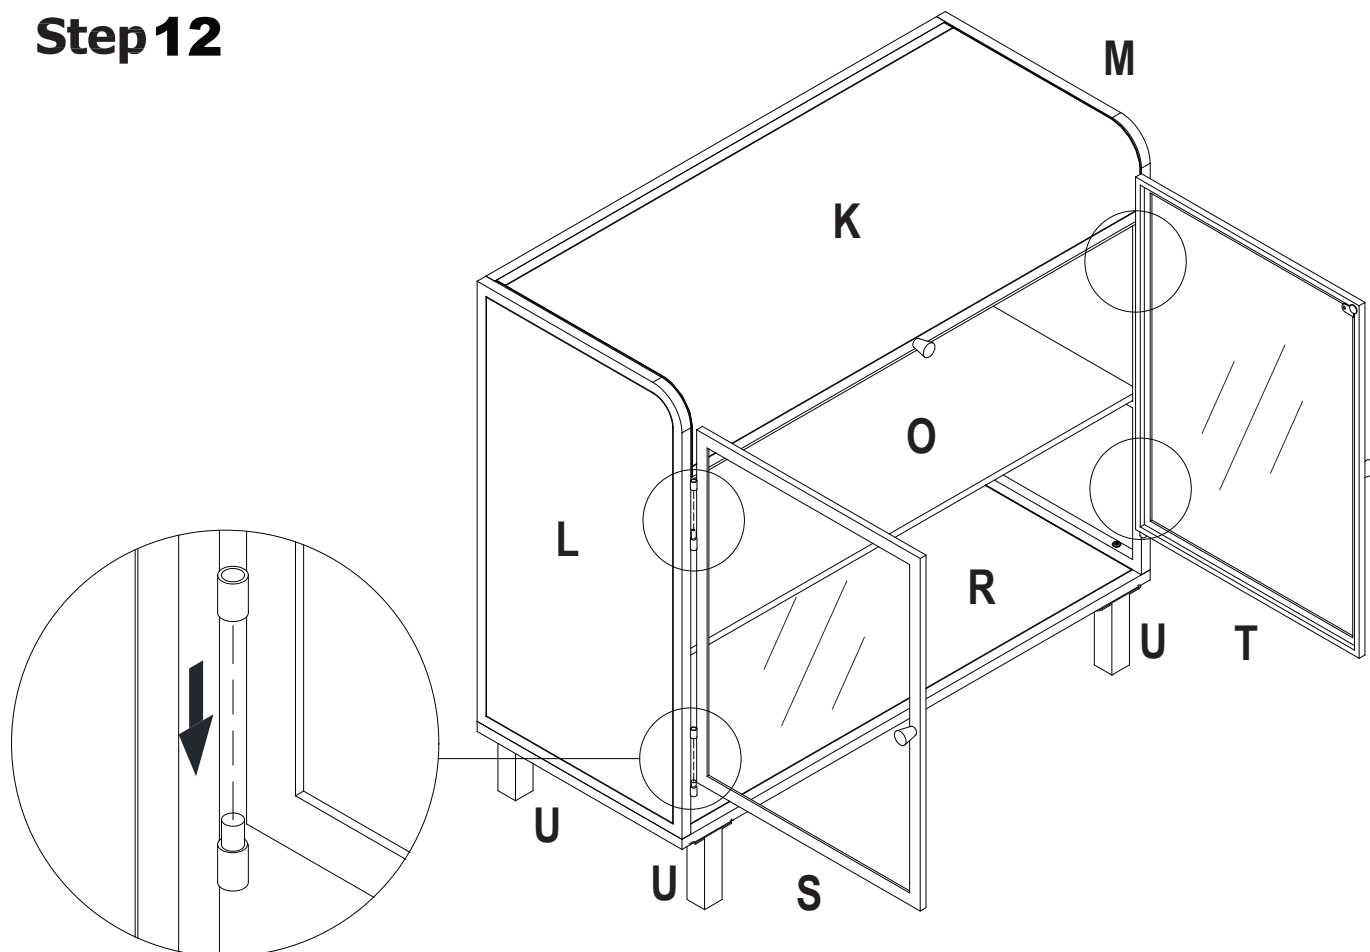

## Step 13

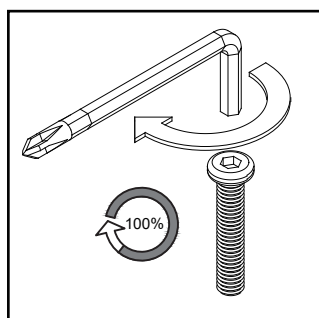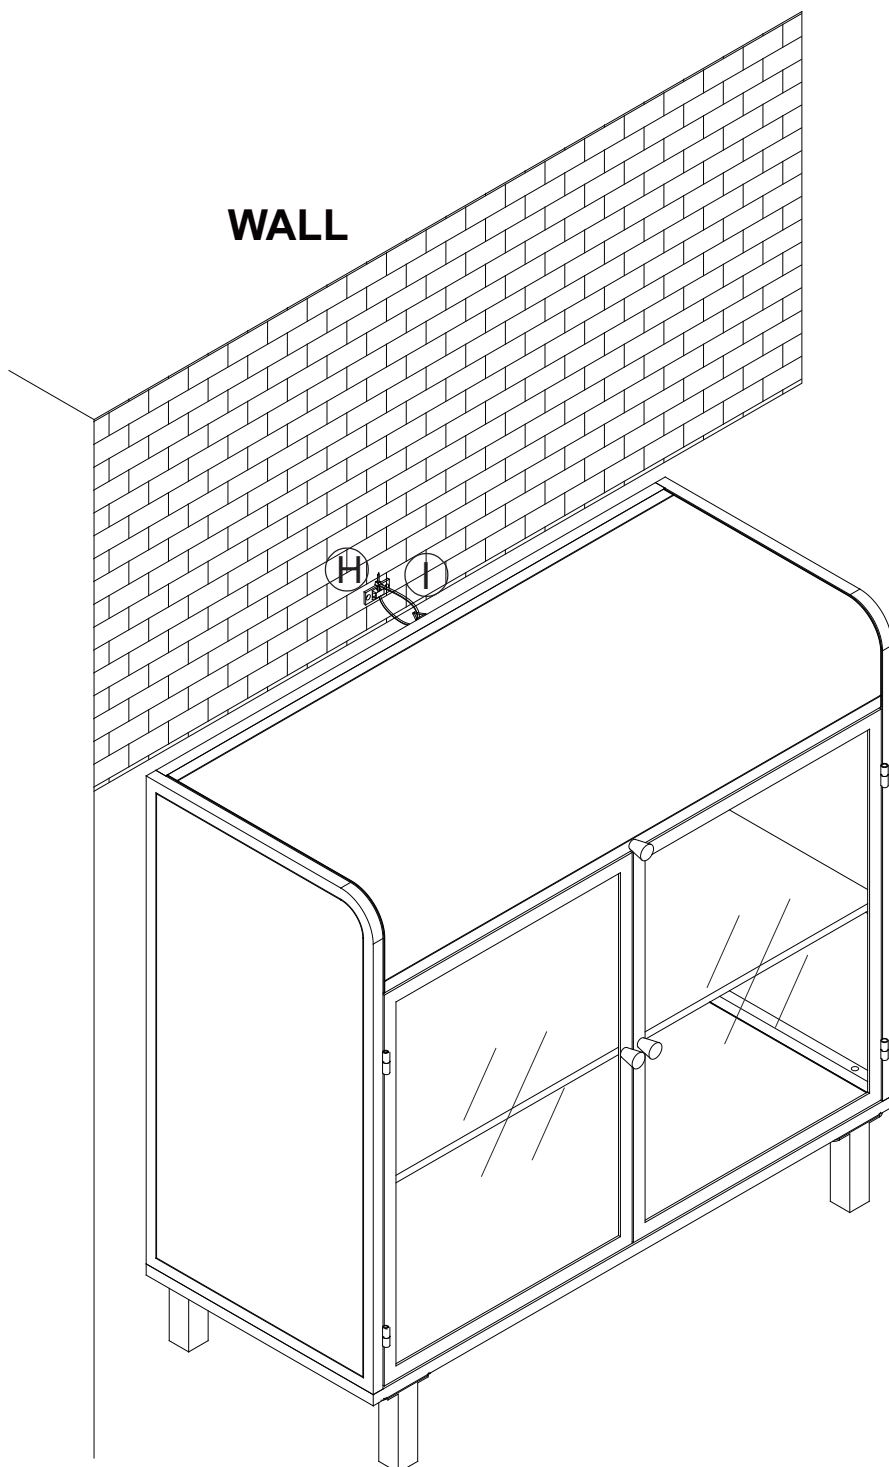

**NOTE:**AFTER ASSEMBLY,PLEASE MAKE SURE THAT ALL SCREWS ARE 100% LOCKED

**WALL**

(1)

**WALL**

drilling hole  
Ø6x30mm

(2)

**WALL**

(3)

**WALL**

(4)

(5)

**G X 2 PCS**

**J X 2 PCS**

**H X 1 PC**

**I X 1 PC**