




ASSEMBLY INSTRUCTION

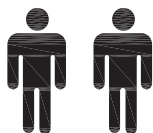


2 PERS

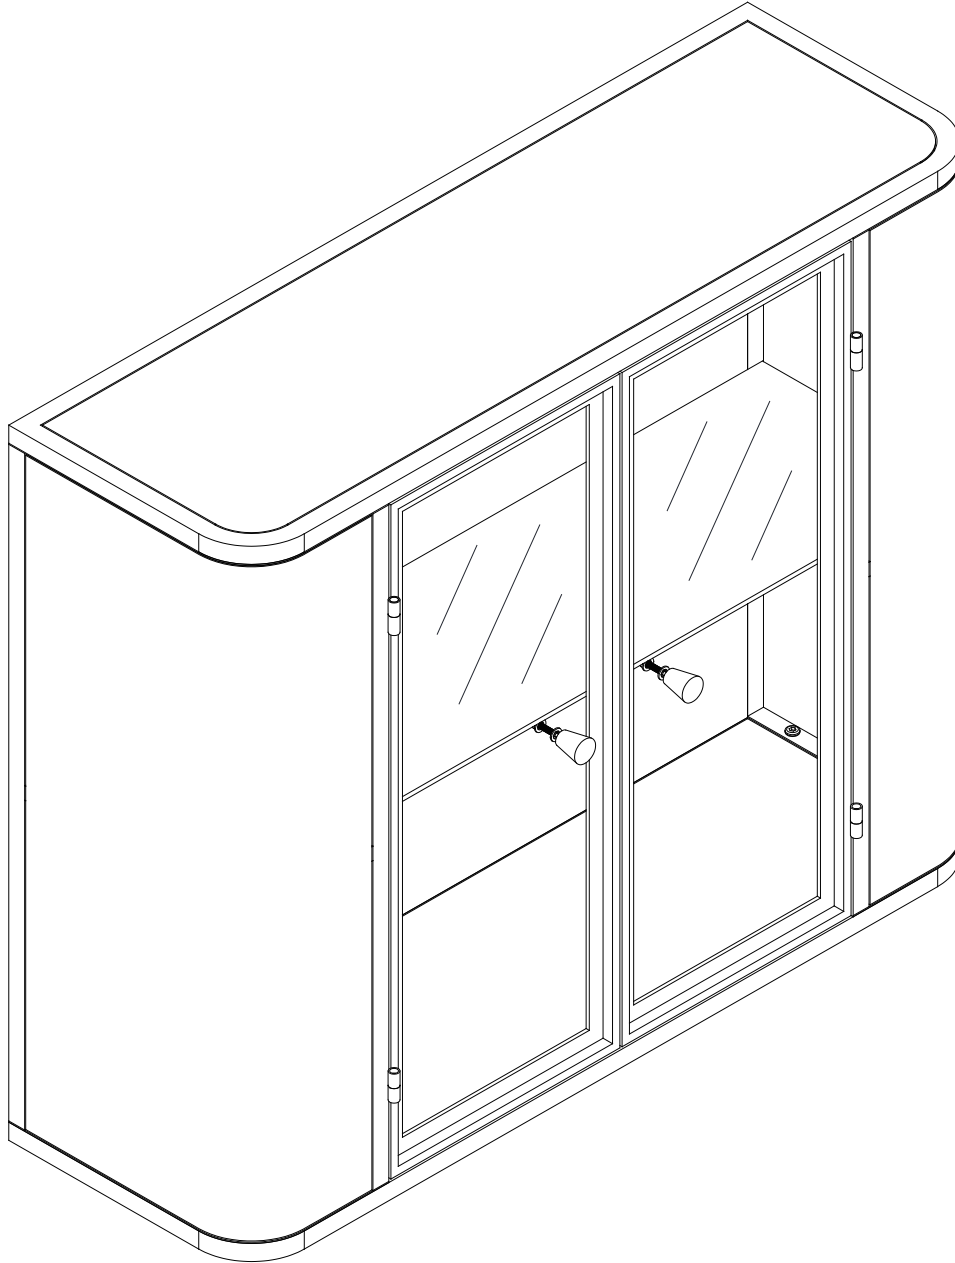

40 MIN













Pozi Screwdriver(Not Provided)












Hexagonal wrench(Provided)

Assembly Instruction


HARDWARE LIST

| | | | | |
|--|--|--|---|---|
| A1  | B  M6x25mm | C  M6x10mm | D  M4x10 mm | E  |
| A2  | | | | |
| 2 PCS | 8 PCS | 12 PCS | 2 PCS | 2 PCS |
| F  | G  | H  M4x30mm | I  | |
| 4 PCS | 2 PCS | 2 PCS | 2 PCS | |
| | | | | |
| | | | | |


PART LIST
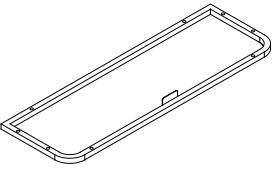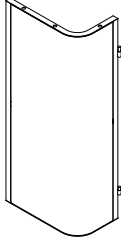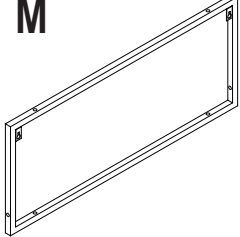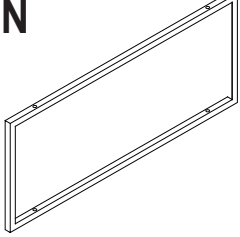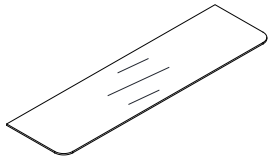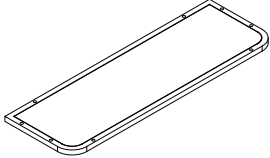
| | | | | |
|--|---|---|---|--|
| J  | K  | L  | M  | N  |
| 1 PC | 1 PC | 1 PC | 1 PC | 1 PC |
| O  | P  | Q  | R  | |
| 1 PC | 1 PC | 1 PC | 1 PC | |
| | | | | |
| | | | | |

- Do not use power tools to assemble your furniture.
Power tools may strip or damage the parts.


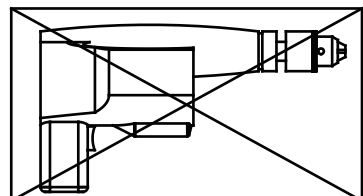


Explosive View

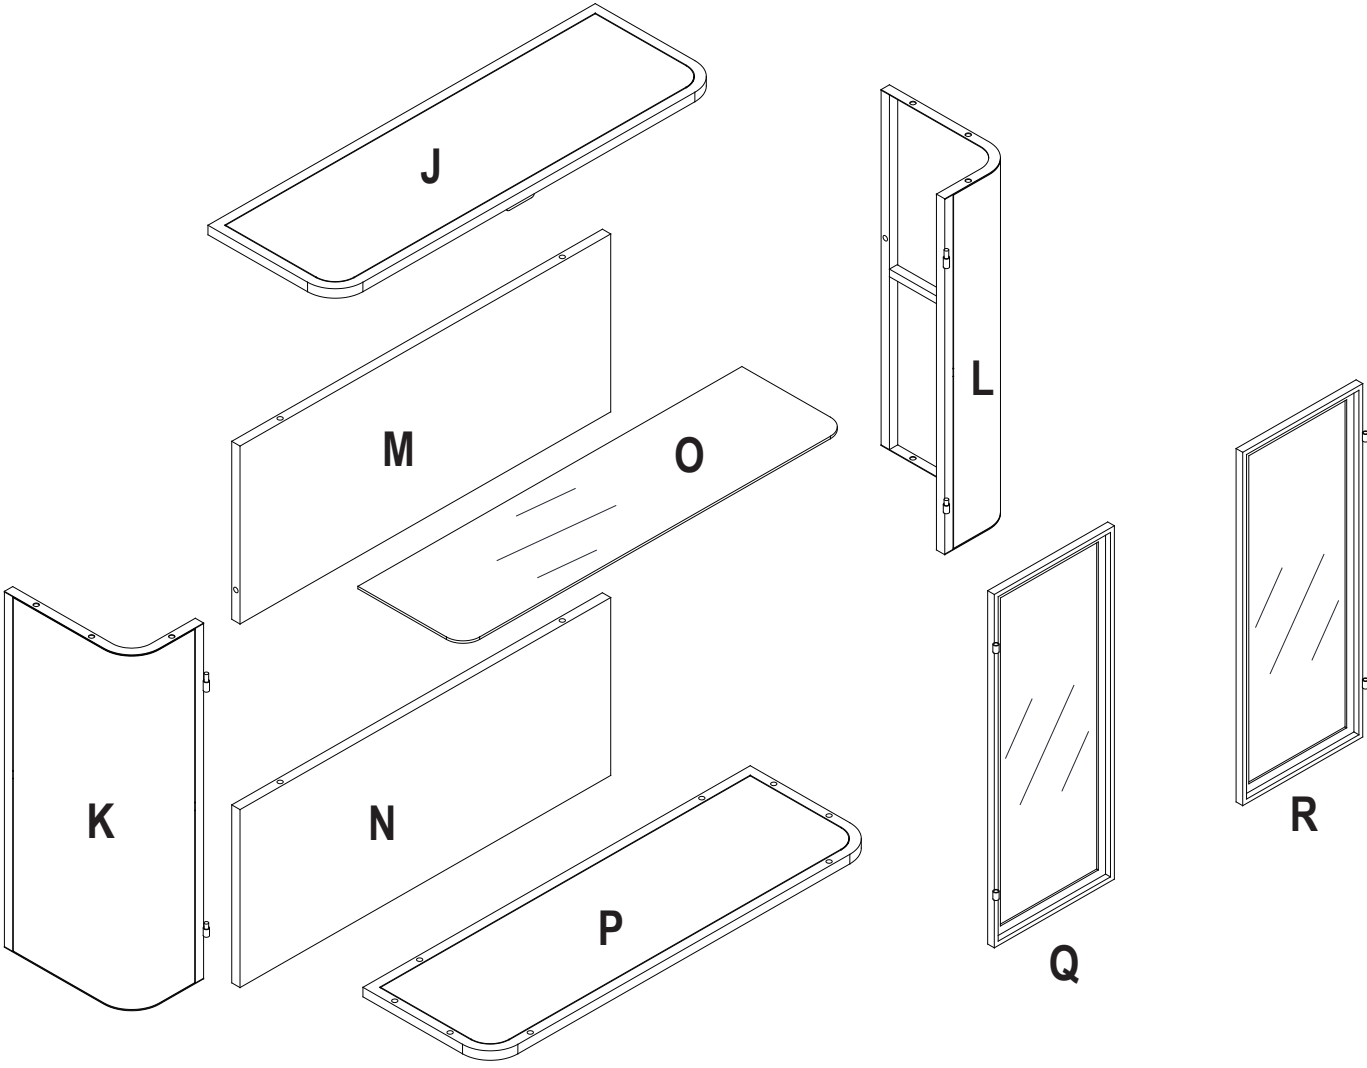

IMPORTANT NOTE: DO NOT tighten all screws and bolts until completely assembled



Step 1

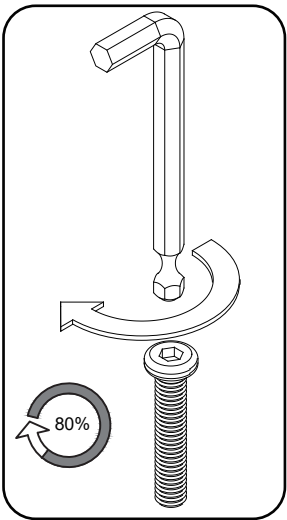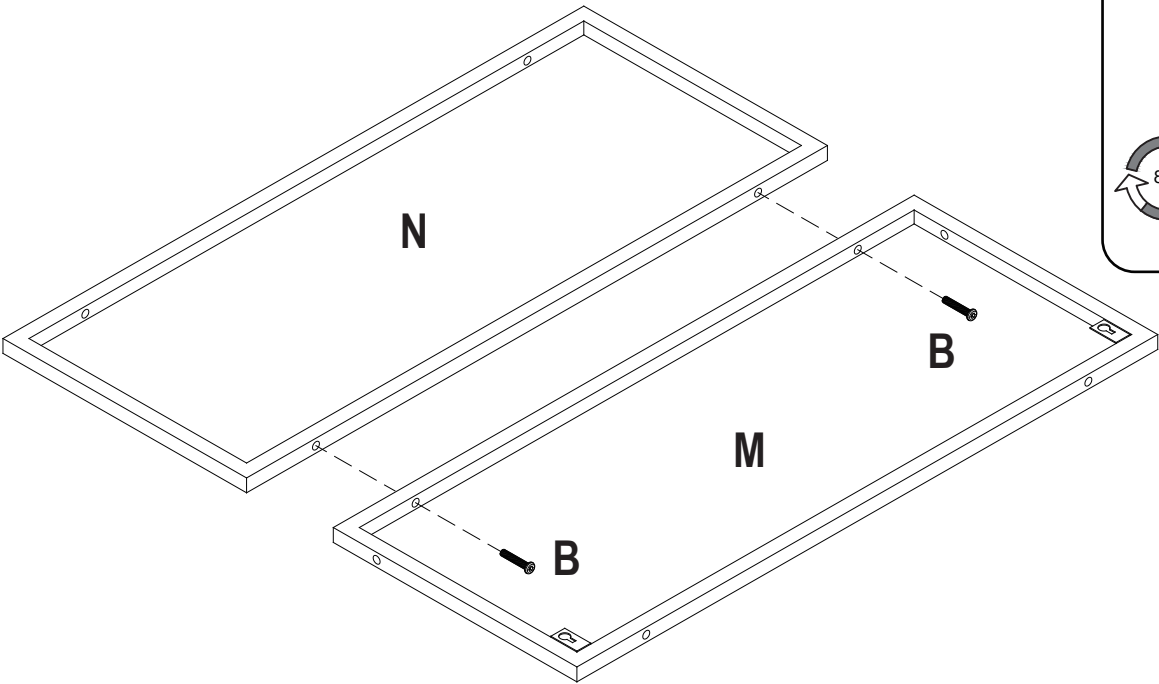

B X 2 PCS



A2 X 1 PC

Step 2

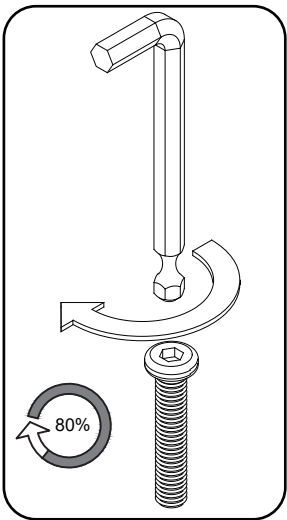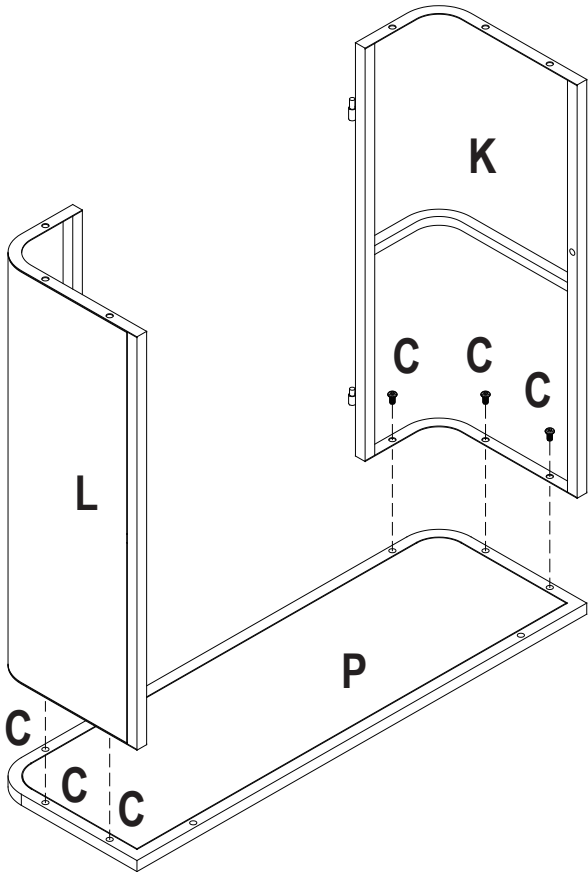



C X 6 PCS

Step 3

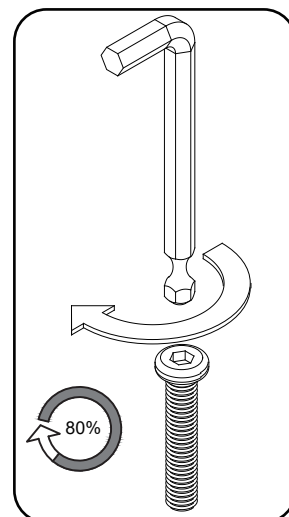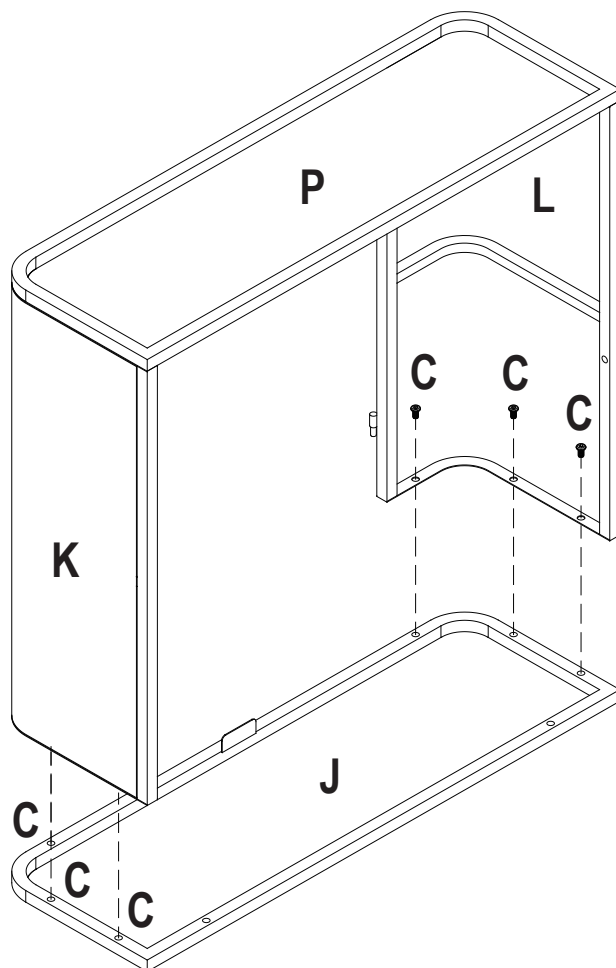


C X 6 PCS

Step 4

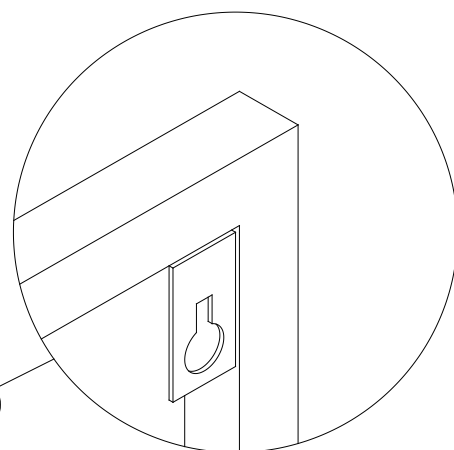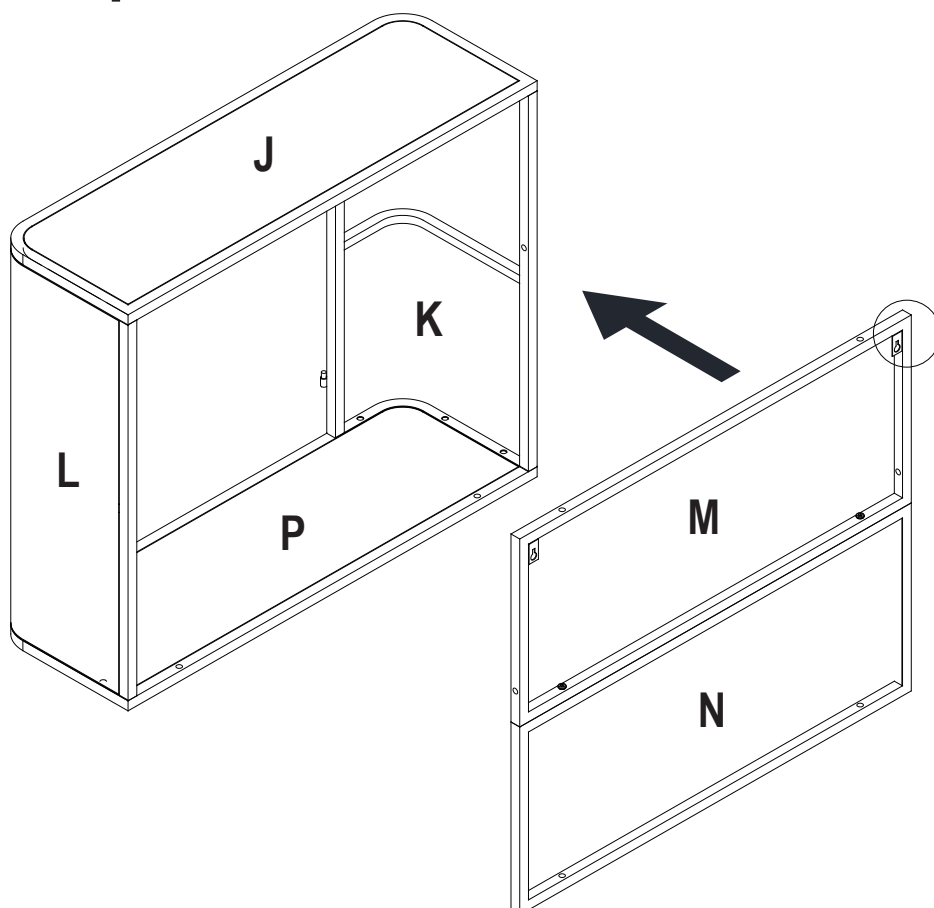


Step 5



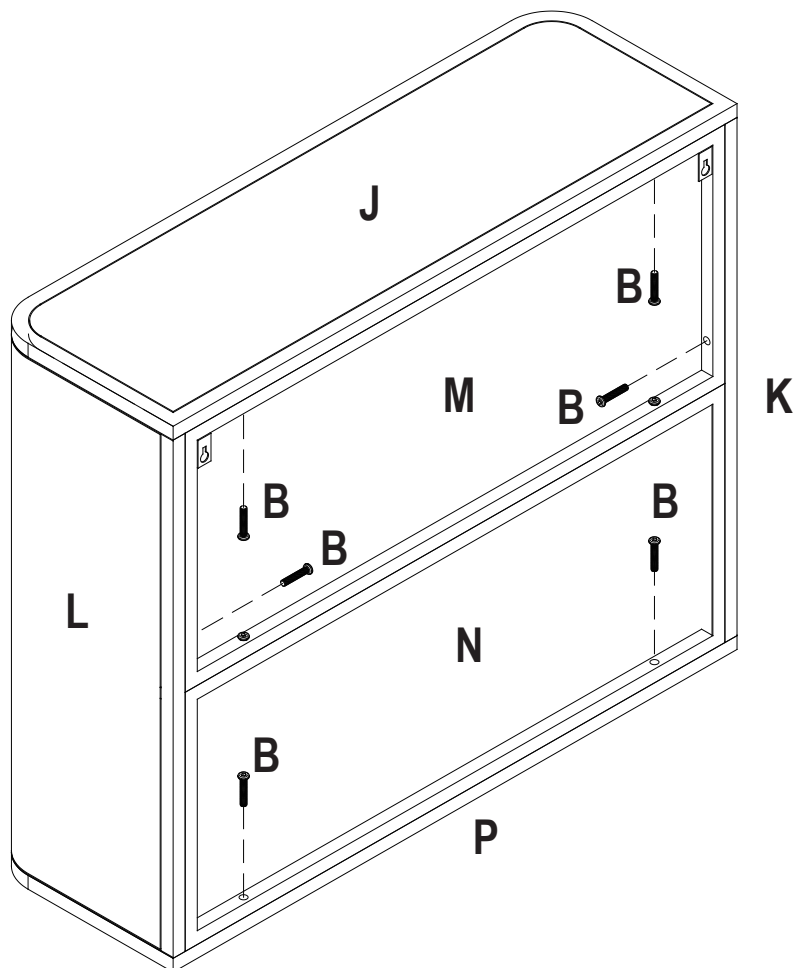


B X6 PCS

Step 6

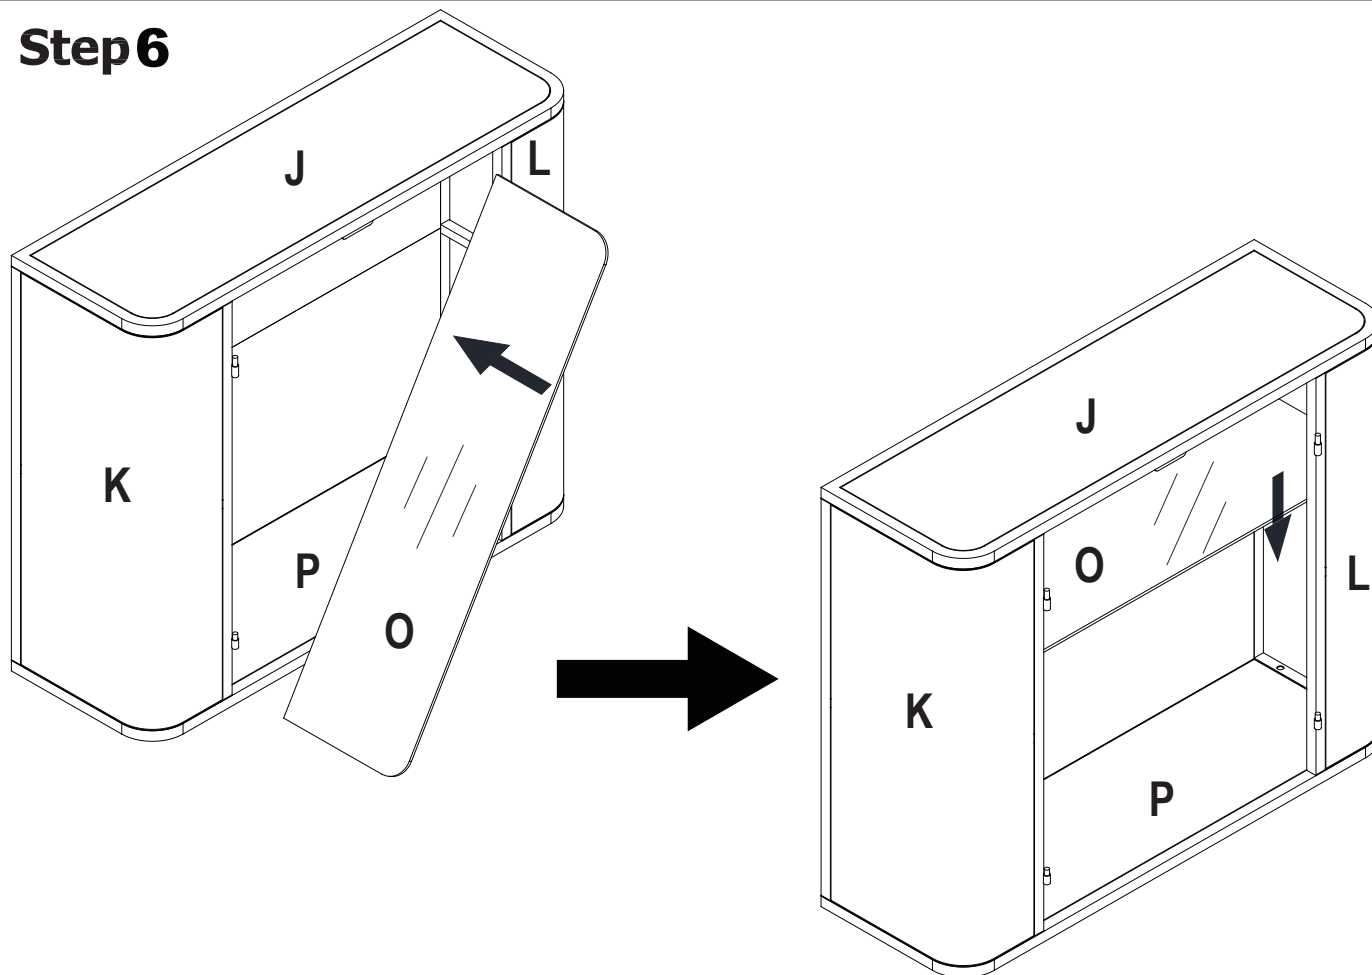

Step 7

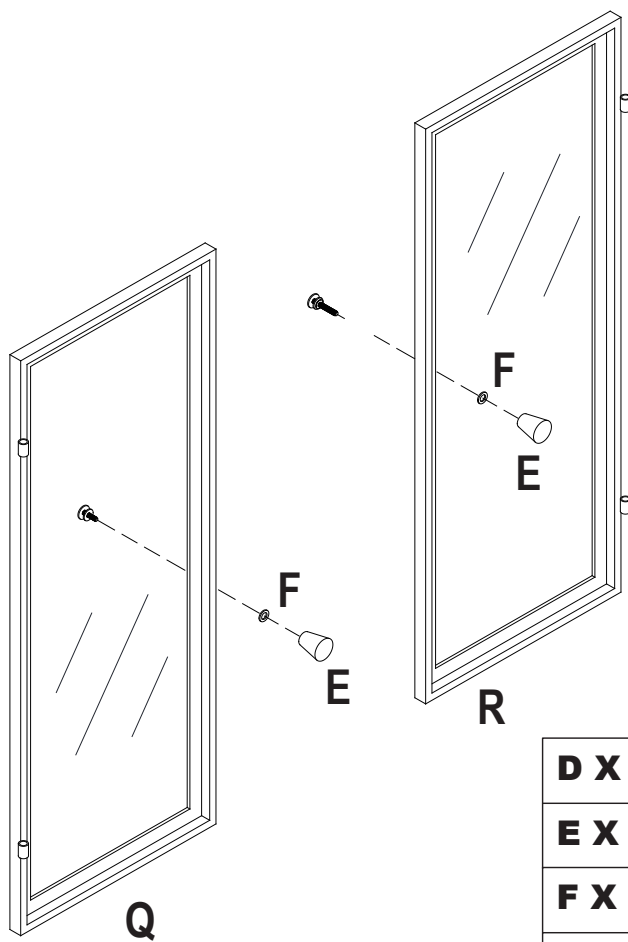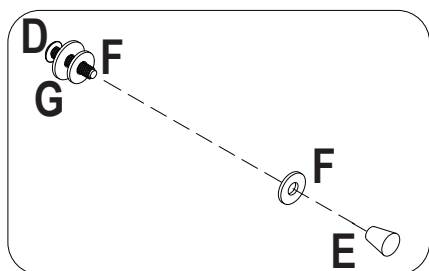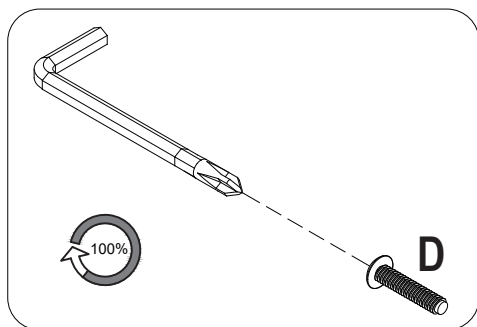



D X 2 PCS

E X 2 PCS



F X 4 PCS

G X 2 PCS

Step 8

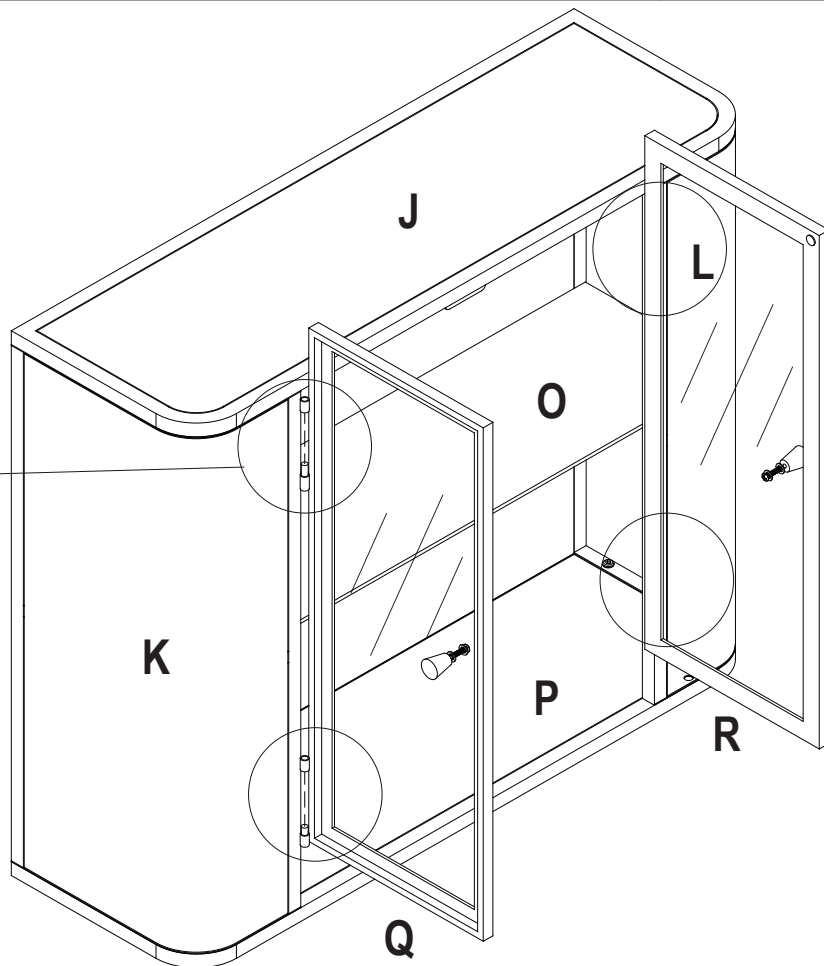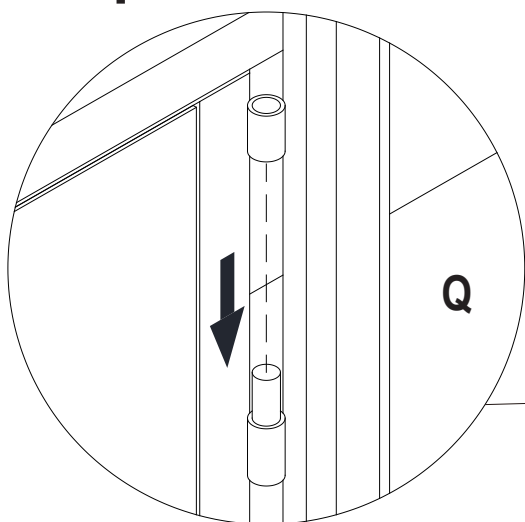


Step 9

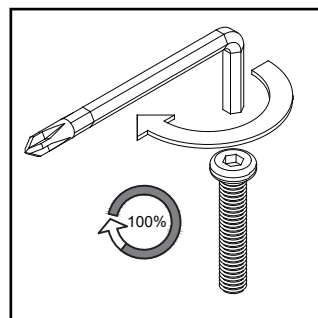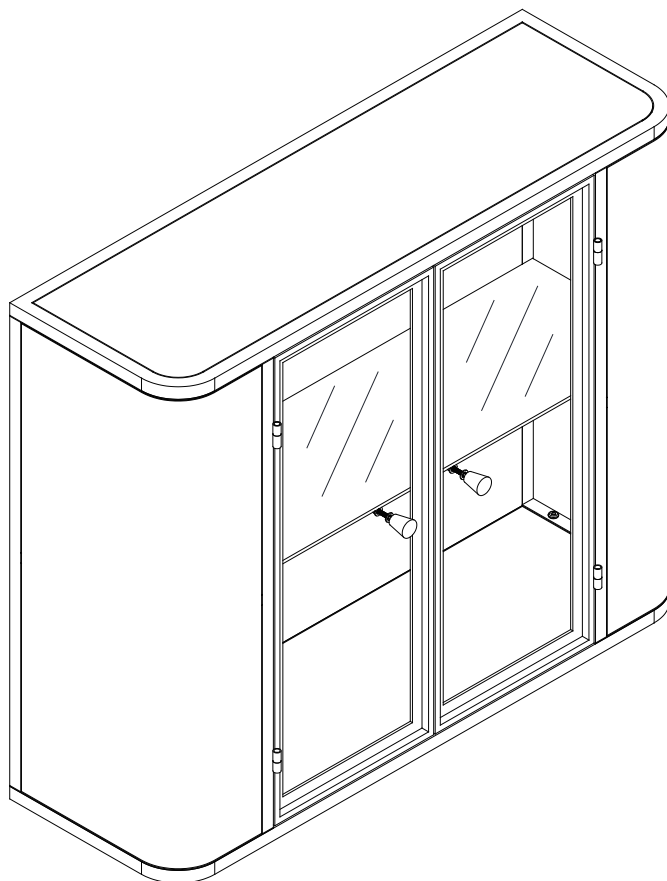

NOTE:AFTER ASSEMBLY,PLEASE MAKE SURE THAT ALL SCREWS ARE 100% LOCKED

Step 10

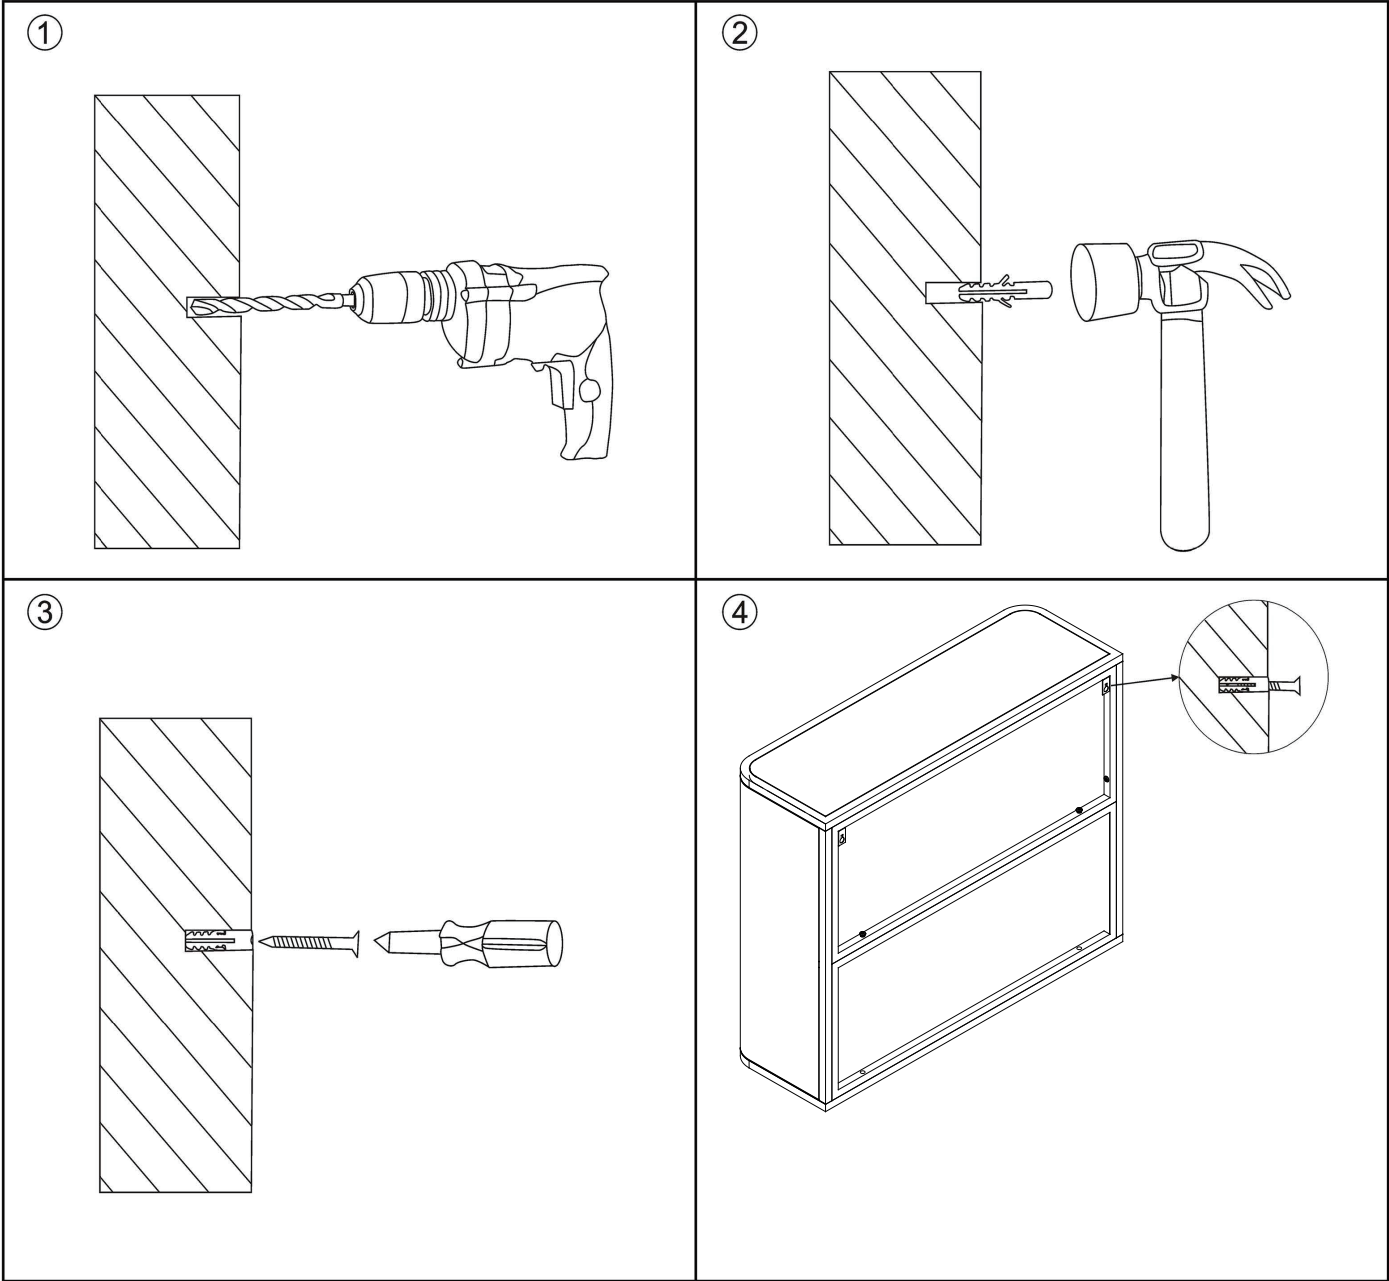

H X 2 PCS

I X 2 PCS