


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET


SKU-N710P276724



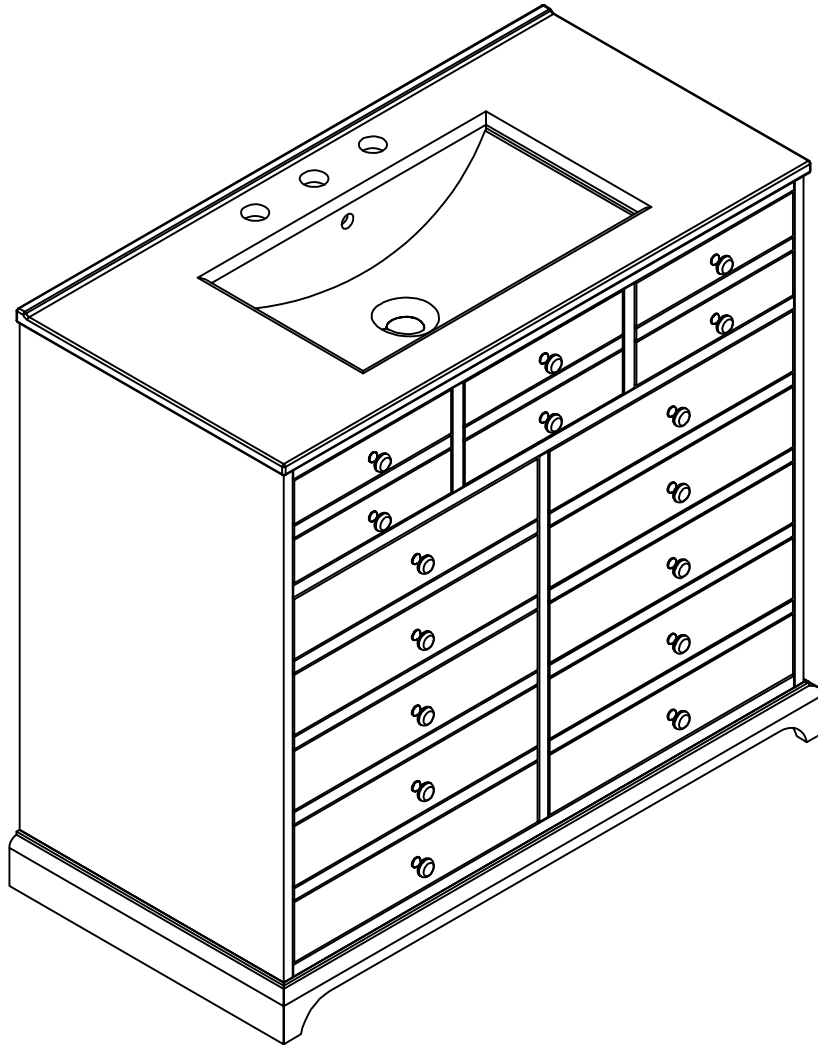


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

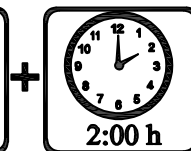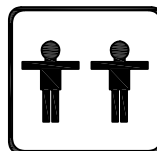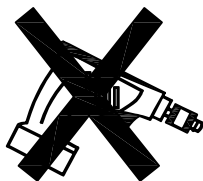

Tools Required




(Not included)



(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

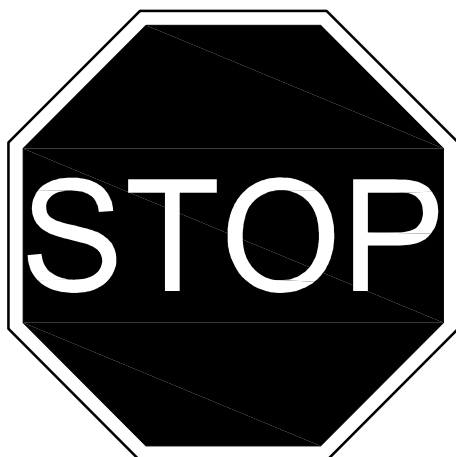

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

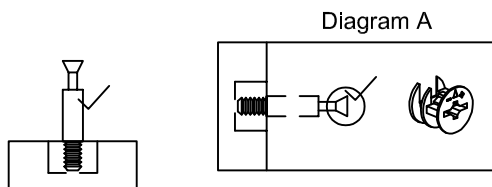


Insert Cam Bolt into hole as shown in diagram A.

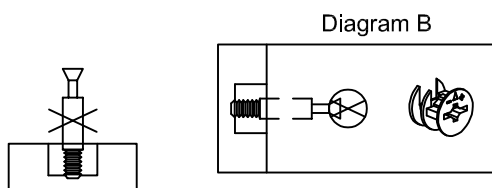


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause
the Cam Lock to be misaligned and unable to
interlock properly.

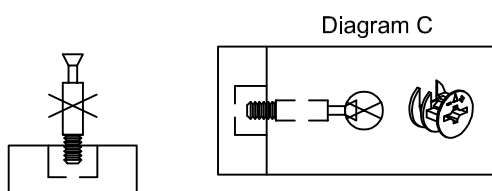


Also avoid inserting the Cam Bolt too close to the
surface of the hole as shown in figure C, as this
will cause the Cam Lock to be too loose, and not
interlock properly.

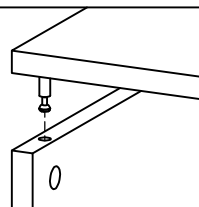

Connect the panels together.

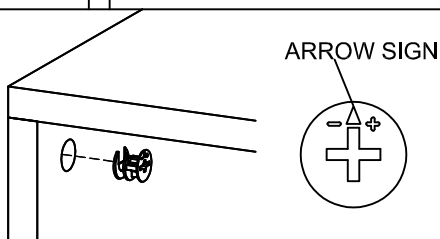


Insert the Cam Lock so the side opening fits over
the head of the Cam Bolt.

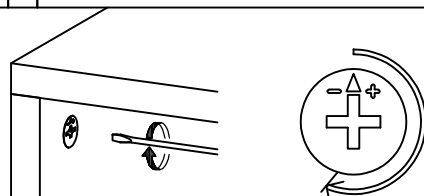

To tighten the Cam Lock, turn it clockwise on half
a turn with a flat screwdriver.











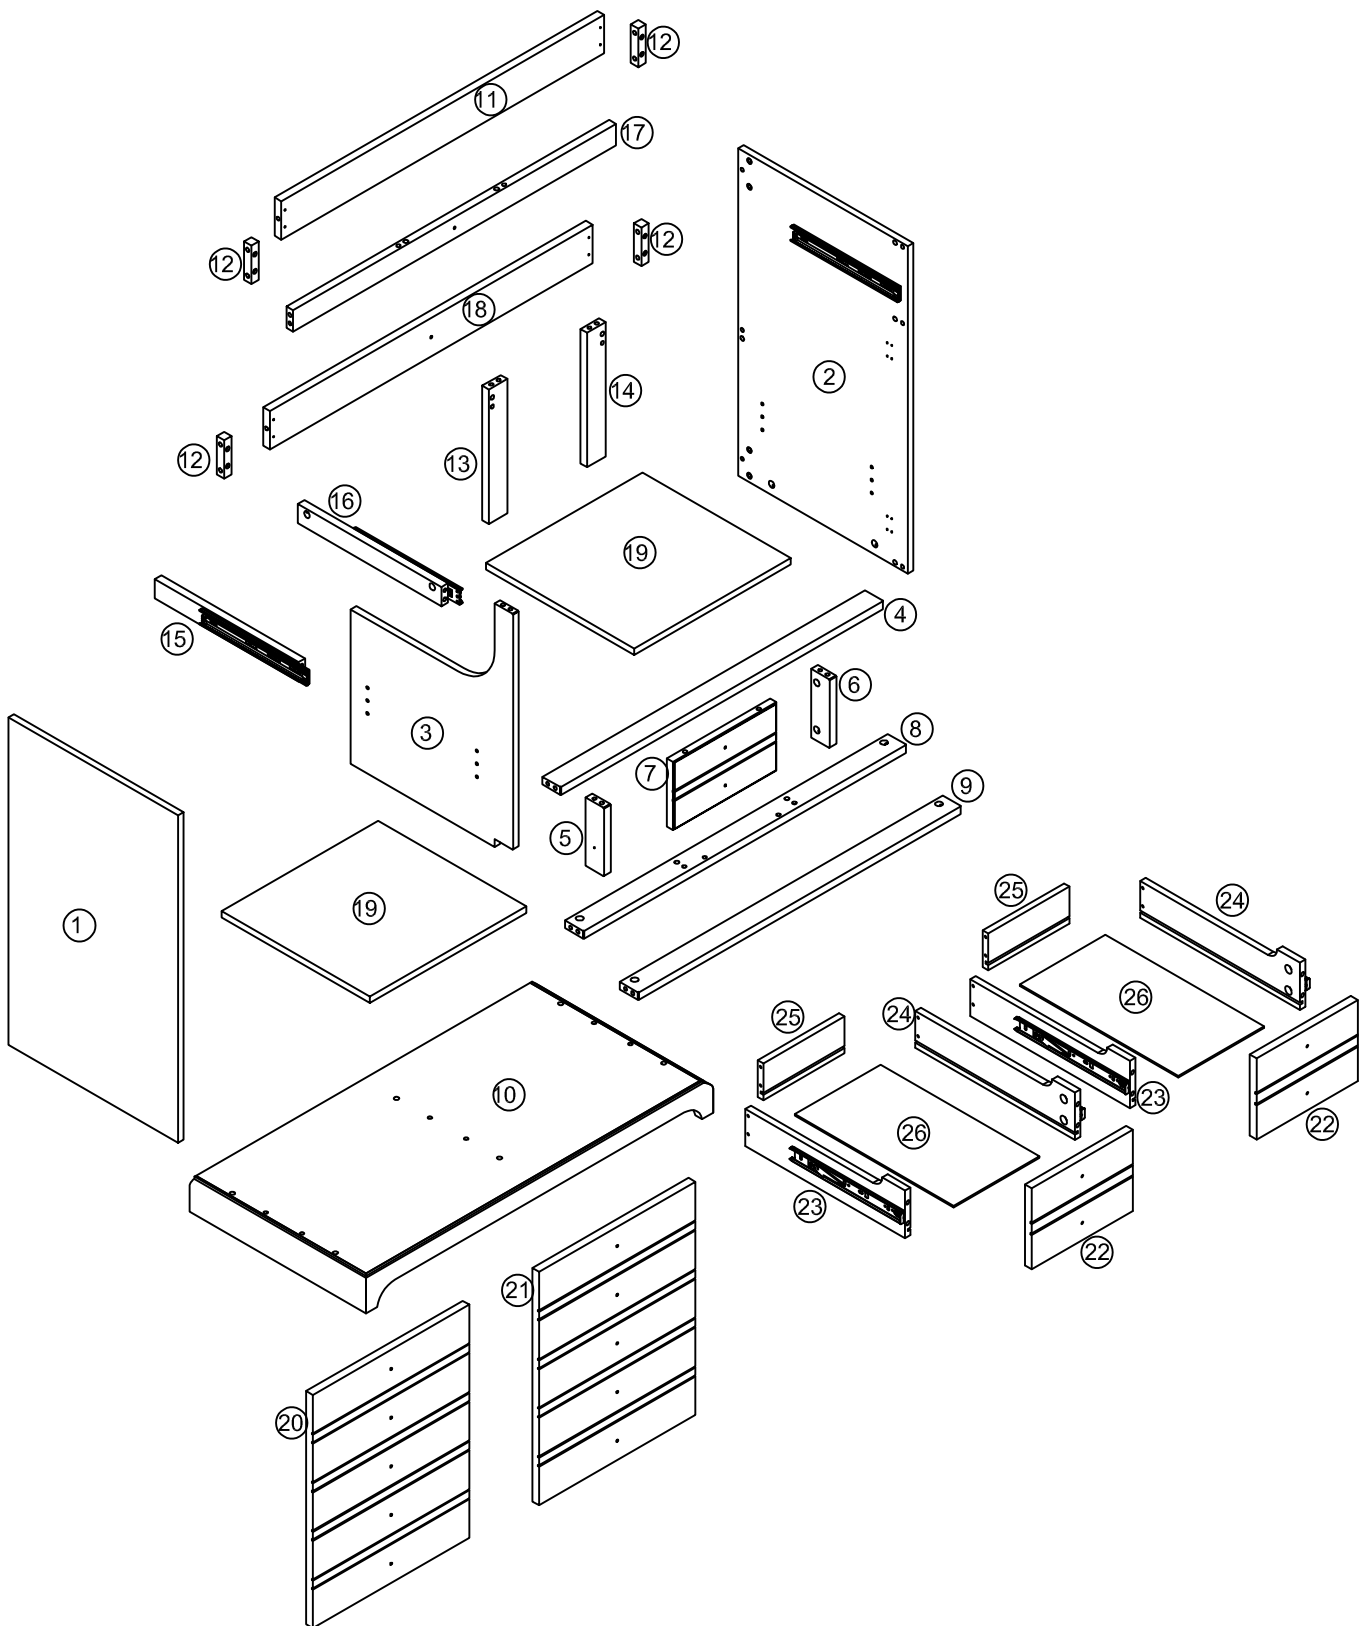



**Do not use an automatic screwdriver as it may
bend or break if too much power is imposed.*

Detail View

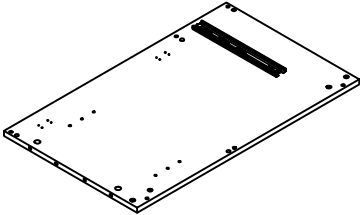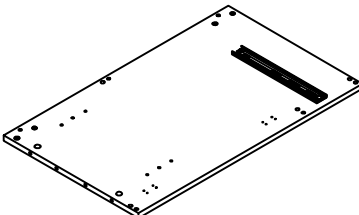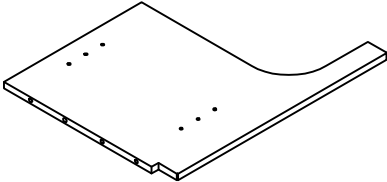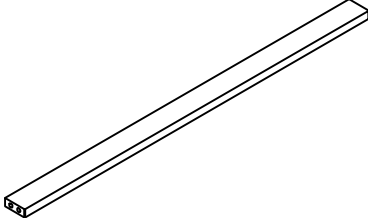


Identifying the Hardware-Identify the hardware using the illustrations below.

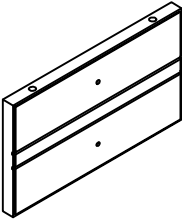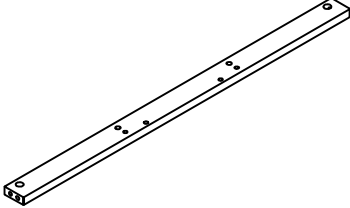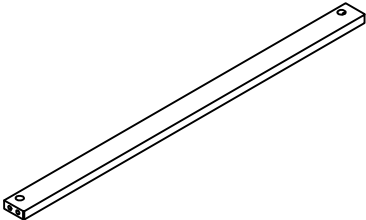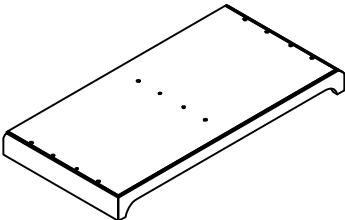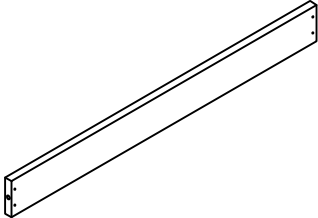Part Lists N710P276724

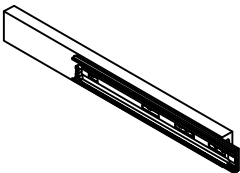1		2	
3		4	
5		6	
7		8	
9		10	
11		13	
14		15	


Part Lists N710P276724

16

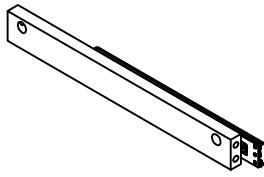


Side Mid Crossbar (R)- 1pc

17

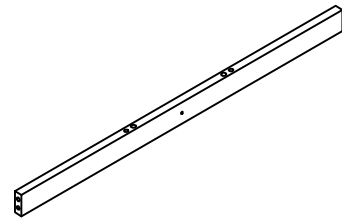


Mid Rear Crossbar - 1pc

18

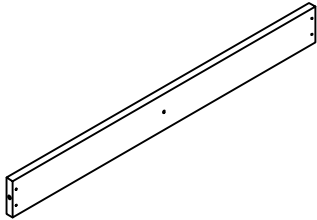


Bottom Rear Crossbar - 1pc

19

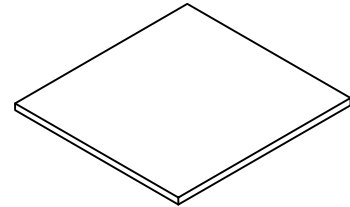


Adjustable Shelf - 2pcs

20

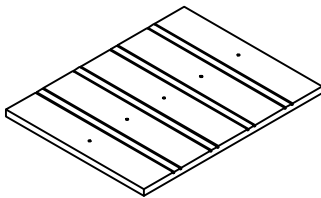


Door Cabinet (L) - 1pc

21

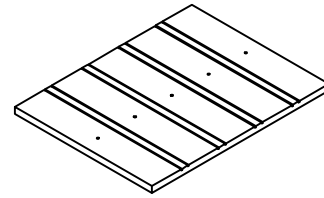


Door Cabinet (R) - 1pc

22

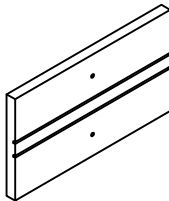


Drawer Face - 2pcs

23

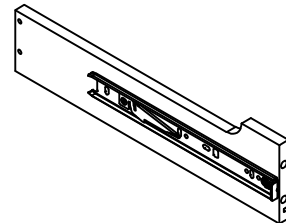


Side Drawer Panel (L) - 2pcs

24

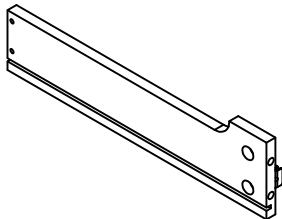


Side Drawer Panel (R) - 2pcs

25

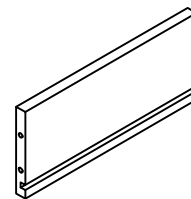


Rear Drawer Panel - 2pcs

26


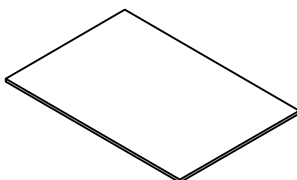







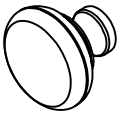
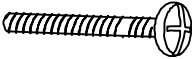
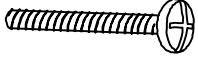
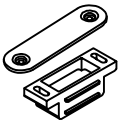
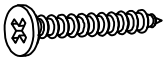



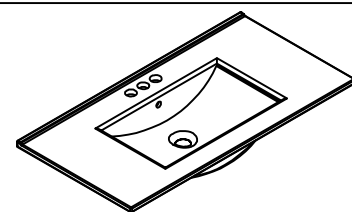


Bottom Panel - 2pcs

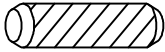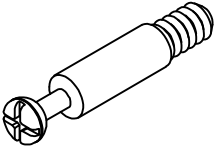





Sink - 1pc

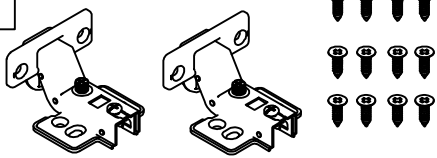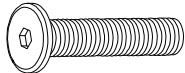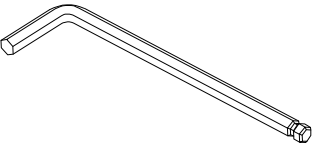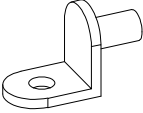Hardware Lists - N710P276724

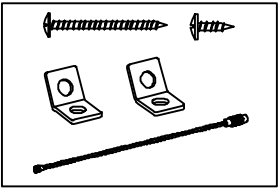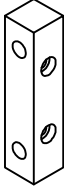A  <p>Ø8*20mm</p> <p>Wood dowel (35pcs)</p>	B  <p>Ø6*34mm</p> <p>Three in one bolts (35pcs)</p>	C  <p>Ø14.5*9.5mm</p> <p>Three in one locks (35pcs)</p>
D  <p>Ø8xØ4*25mm</p> <p>Round head screw (10pcs)</p>	E  <p>Damping hinge (2sets)</p>	F  <p>Ø13xØ1/4*30mm</p> <p>Hex-Head bolt (8pcs)</p>
G  <p>K4mm</p> <p>Allen key (1pc)</p>	H  <p>Shelf Pin (8pcs)</p>	I  <p>Ø6xØ3*12mm</p> <p>Round head screw (10pcs)</p>
J  <p>Handle(16pcs)</p>	K1  <p>Ø5/32*19mm</p> <p>Handle screw (12pcs)</p>	K2  <p>Ø5/32*15mm</p> <p>Handle screw (4pcs)</p>
L  <p>45*12*1mm 45*17*14mm</p> <p>Plastic Door Magnet (2sets)</p>	M  <p>Ø6xØ3*15mm</p> <p>Flat head screw (8pcs)</p>	N  <p>Ø10x10mm</p> <p>Plastic Canopy (8pcs)</p>
O  <p>Ø8xØ4*50mm</p> <p>Round head screw (8pcs)</p>	P  <p>Anti fall Hardware (2sets)</p>	12  <p>Support Piece (4pcs)</p>

STEP: 1










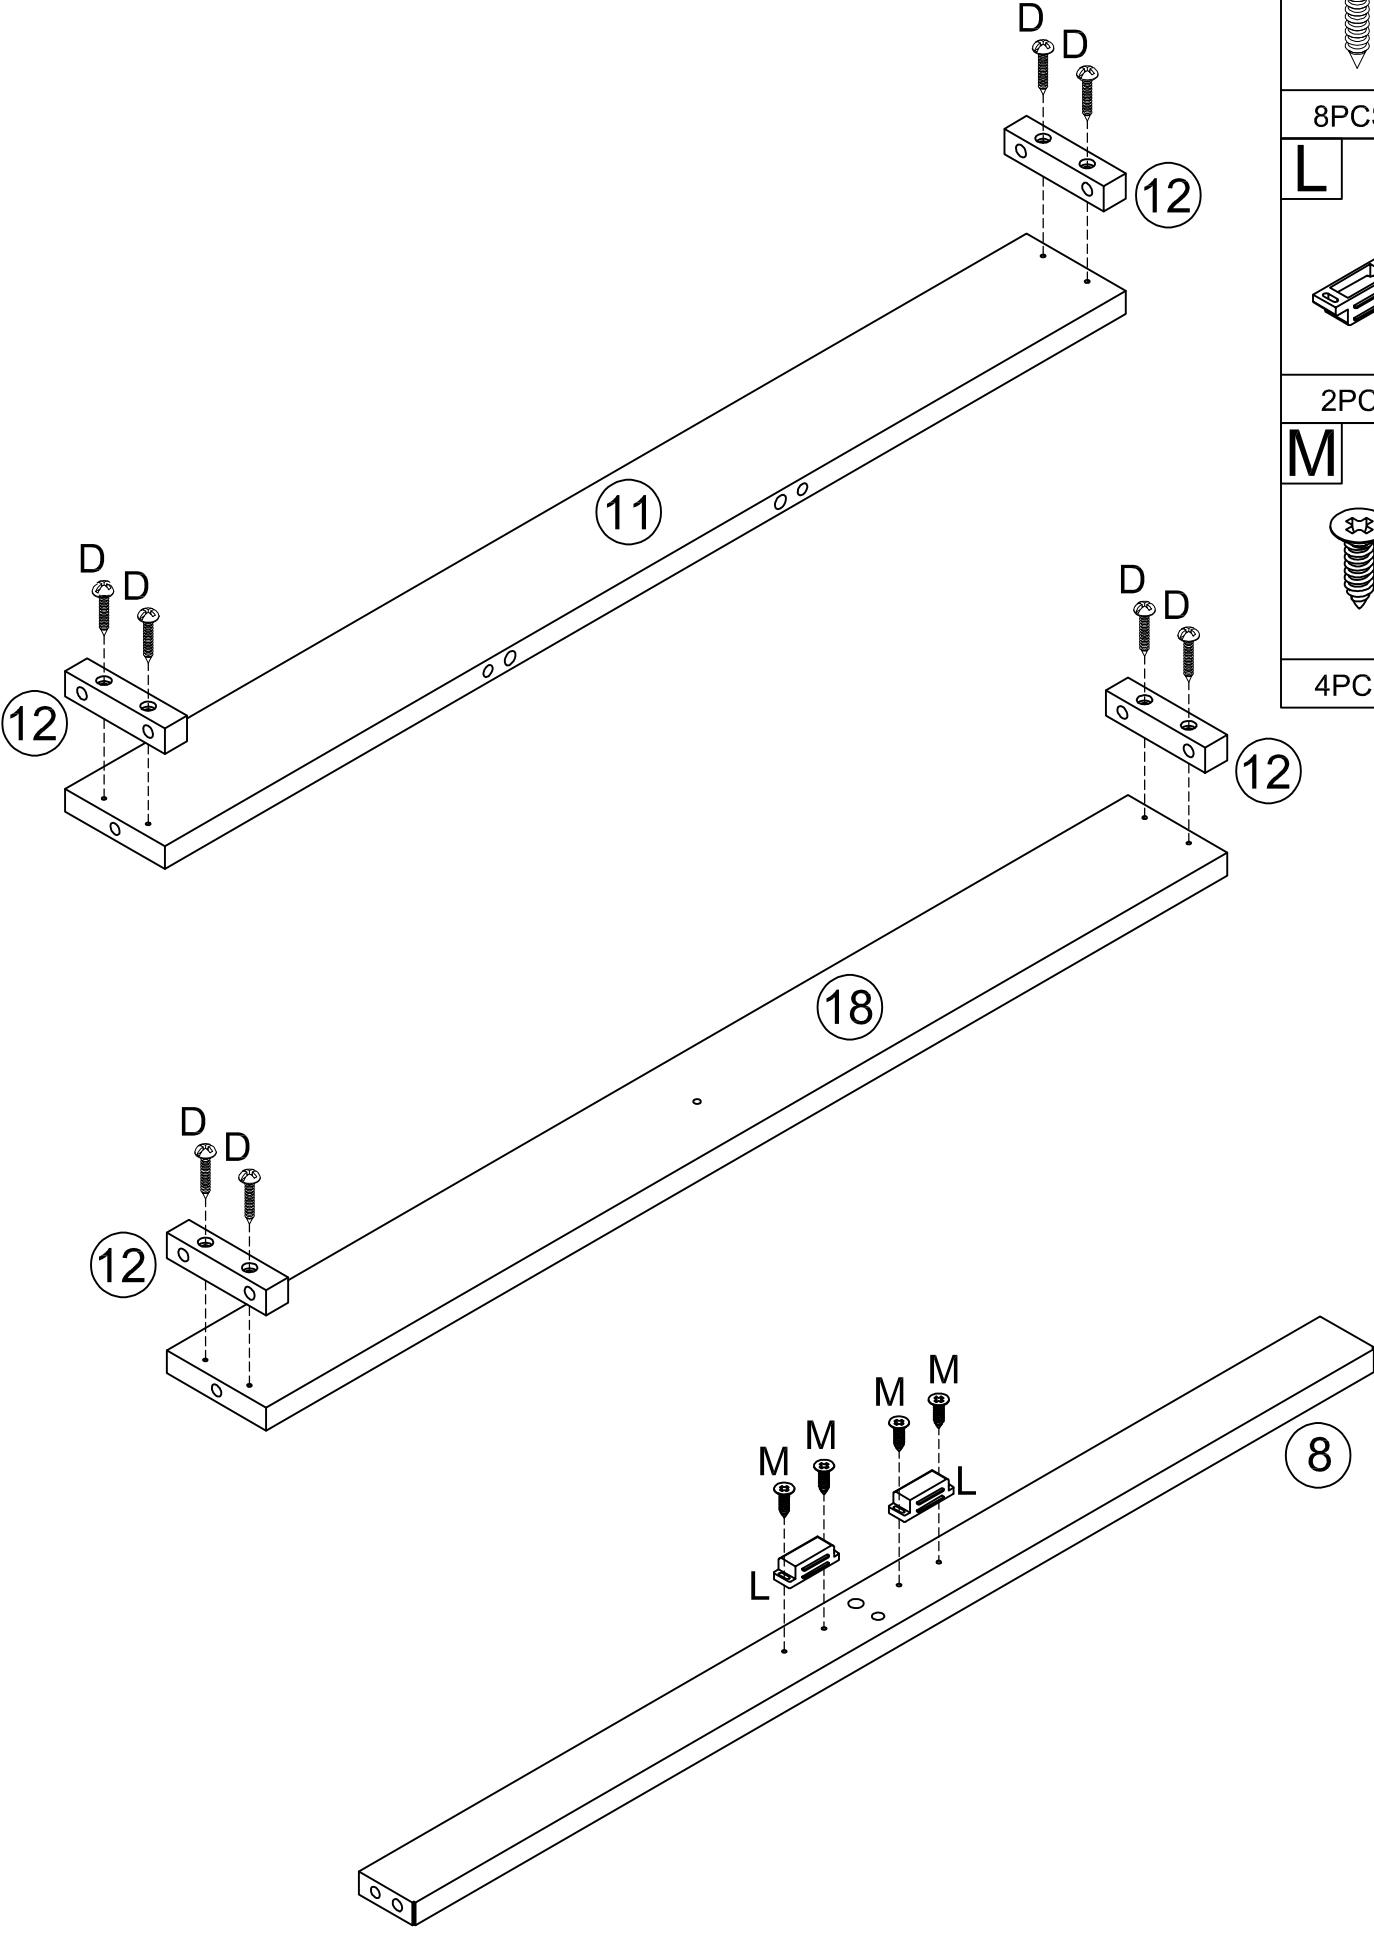


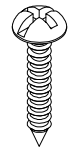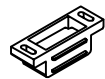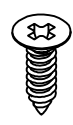D

8PCS
L

2PCS
M

4PCS

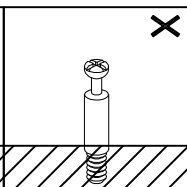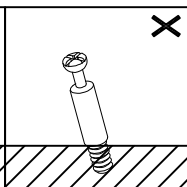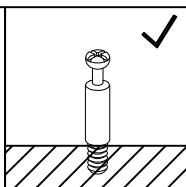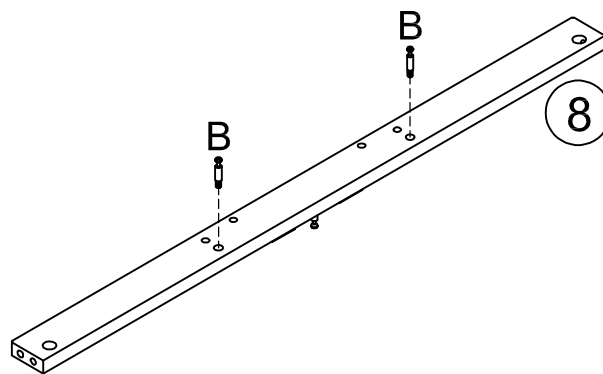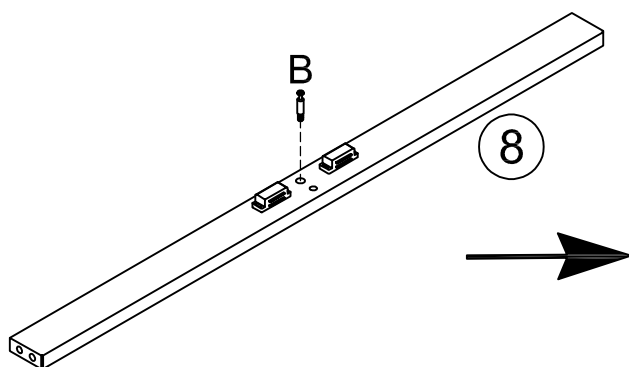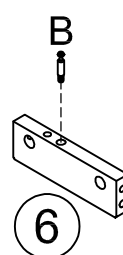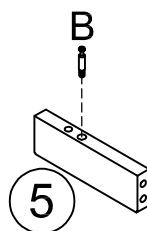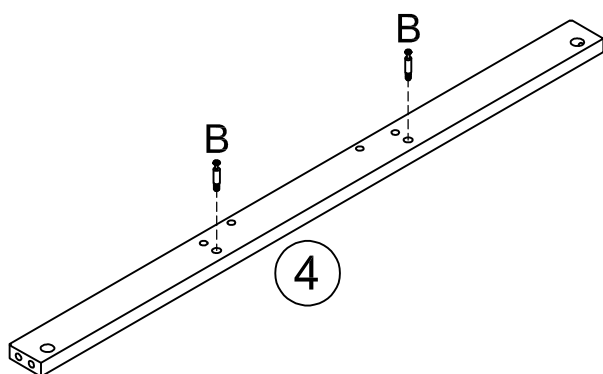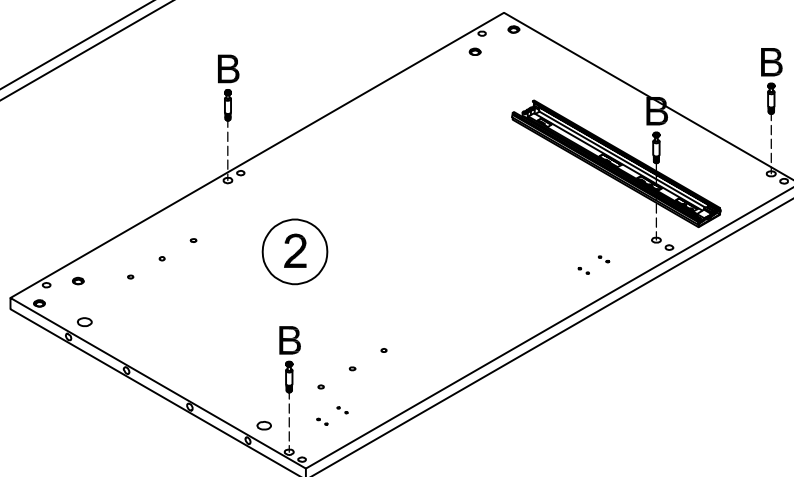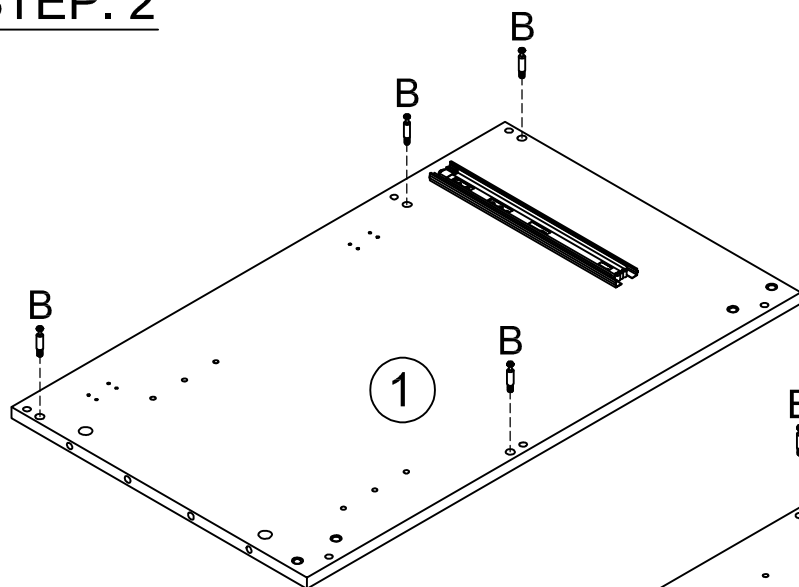STEP: 2


B

15PCS








STEP: 3


B




12PCS

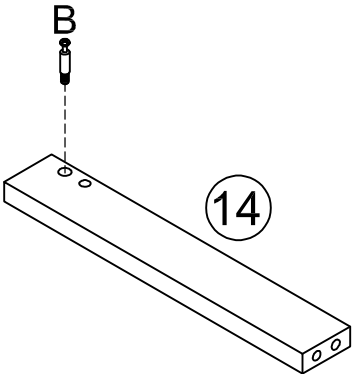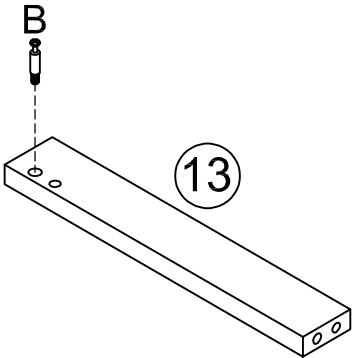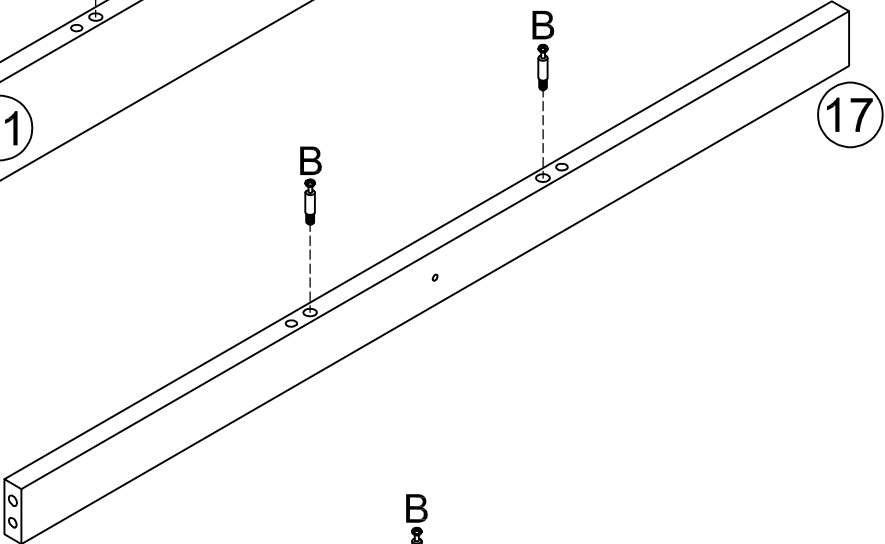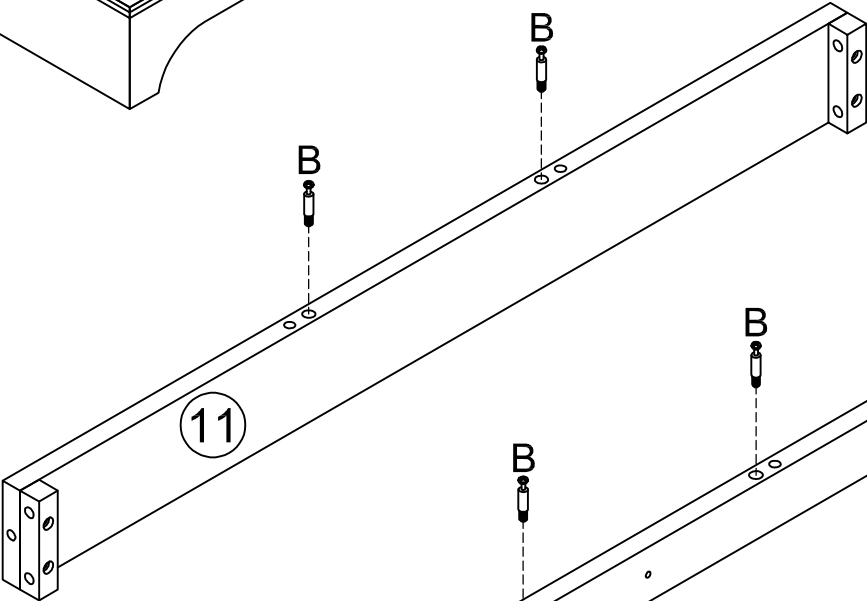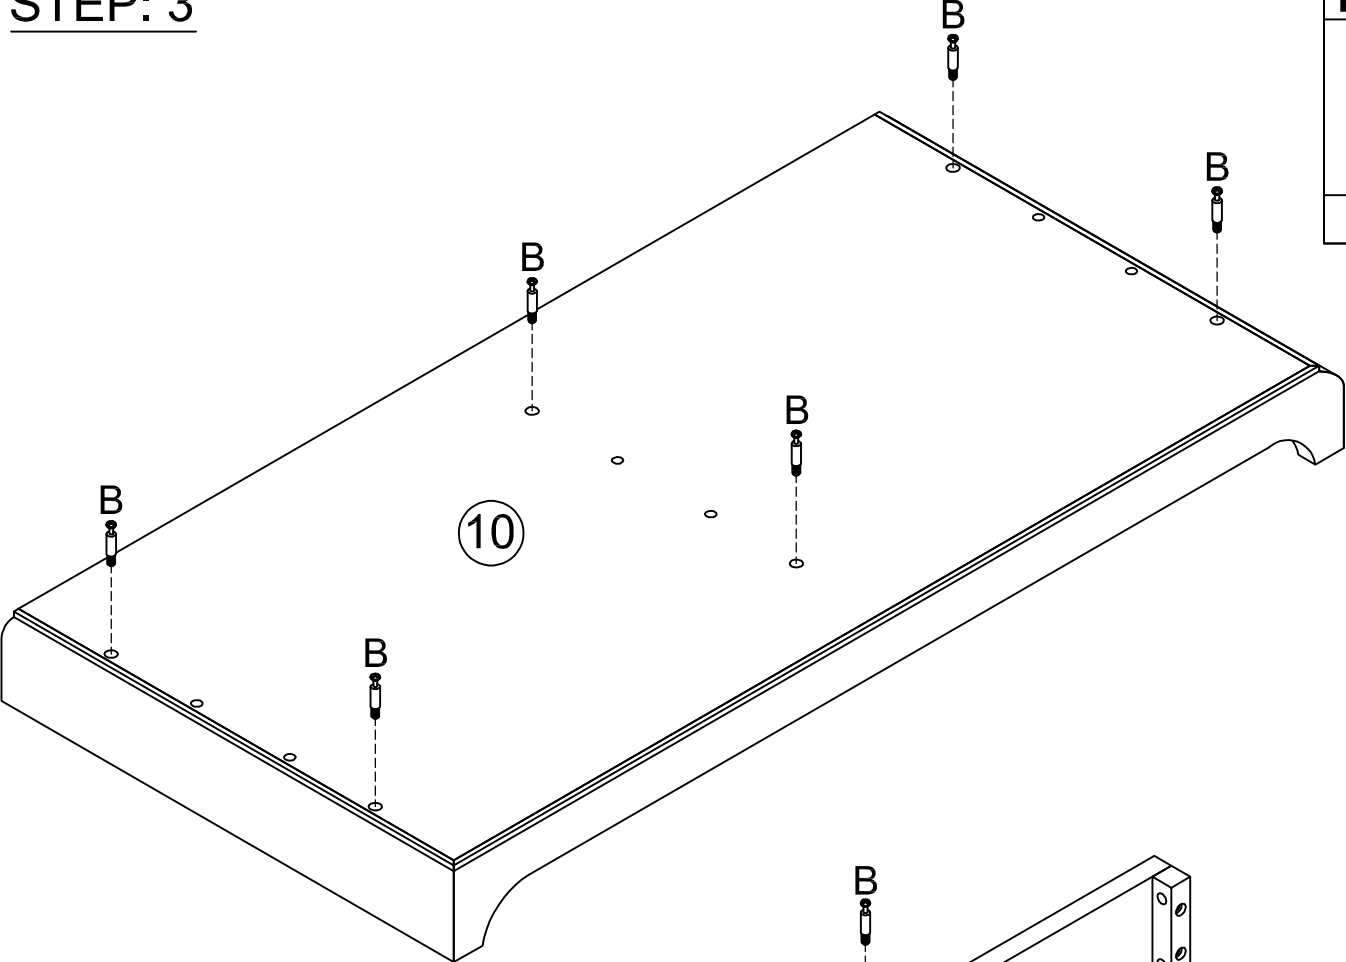


STEP: 4

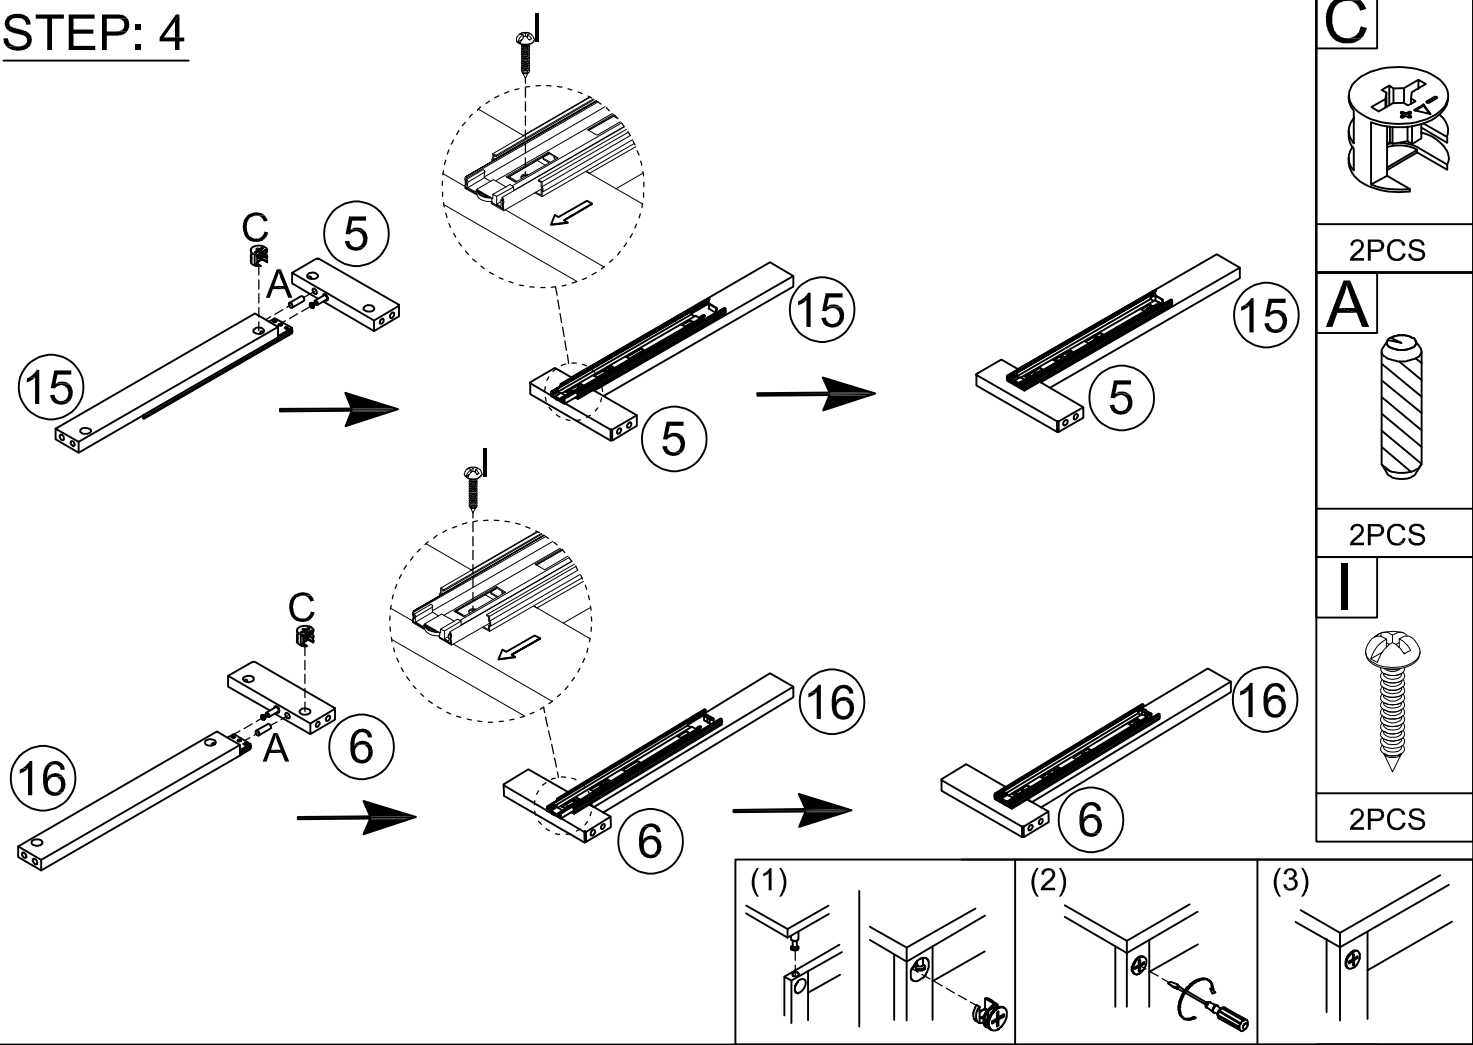


STEP: 5

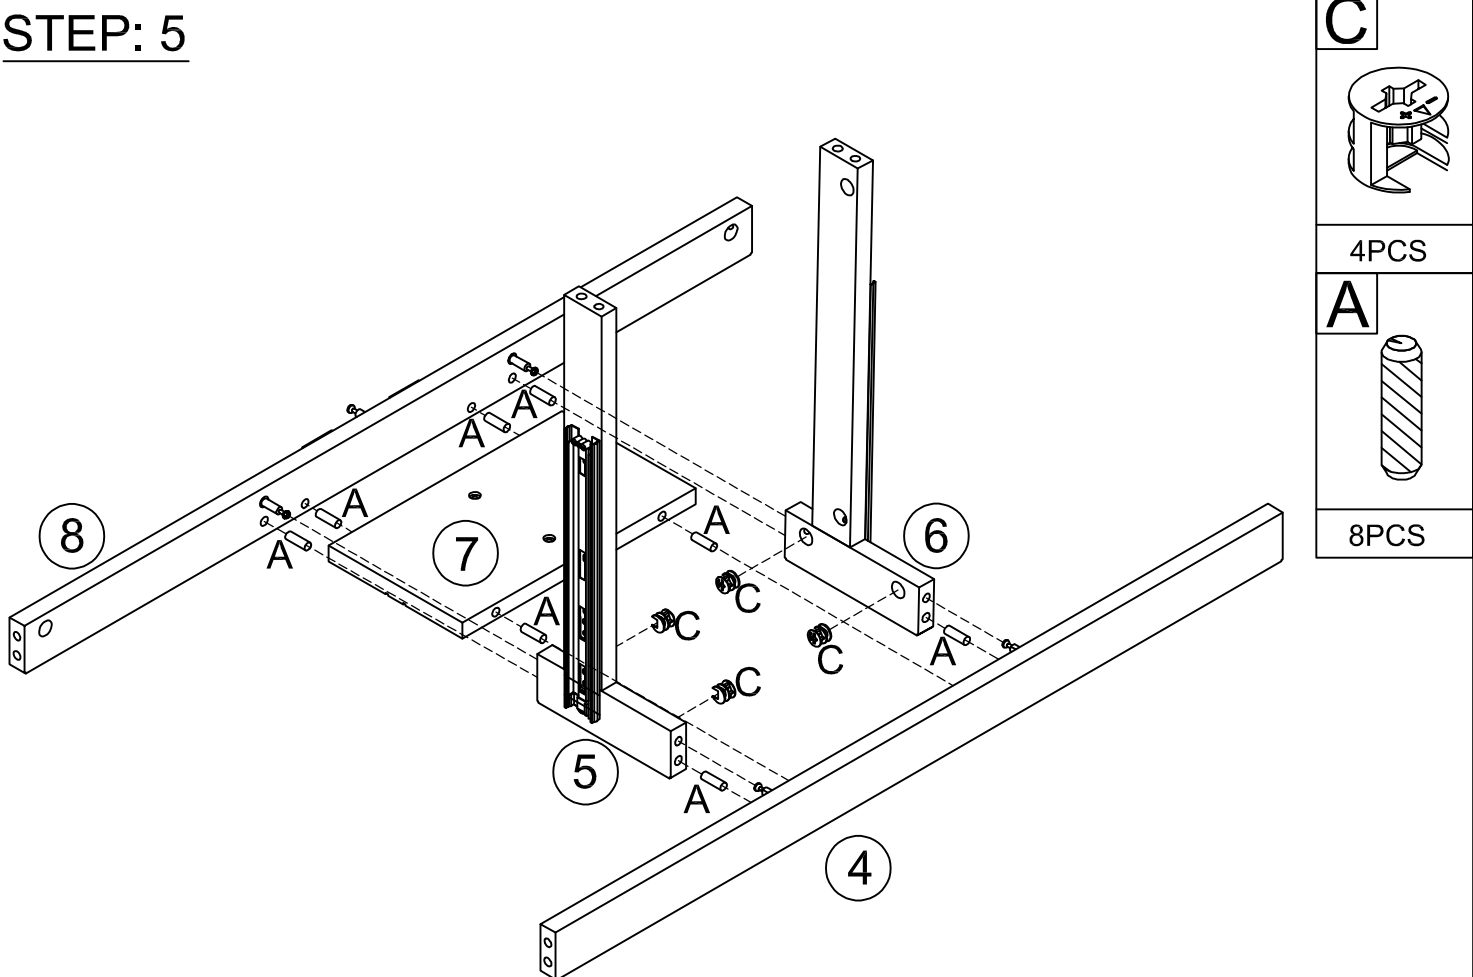

STEP: 6

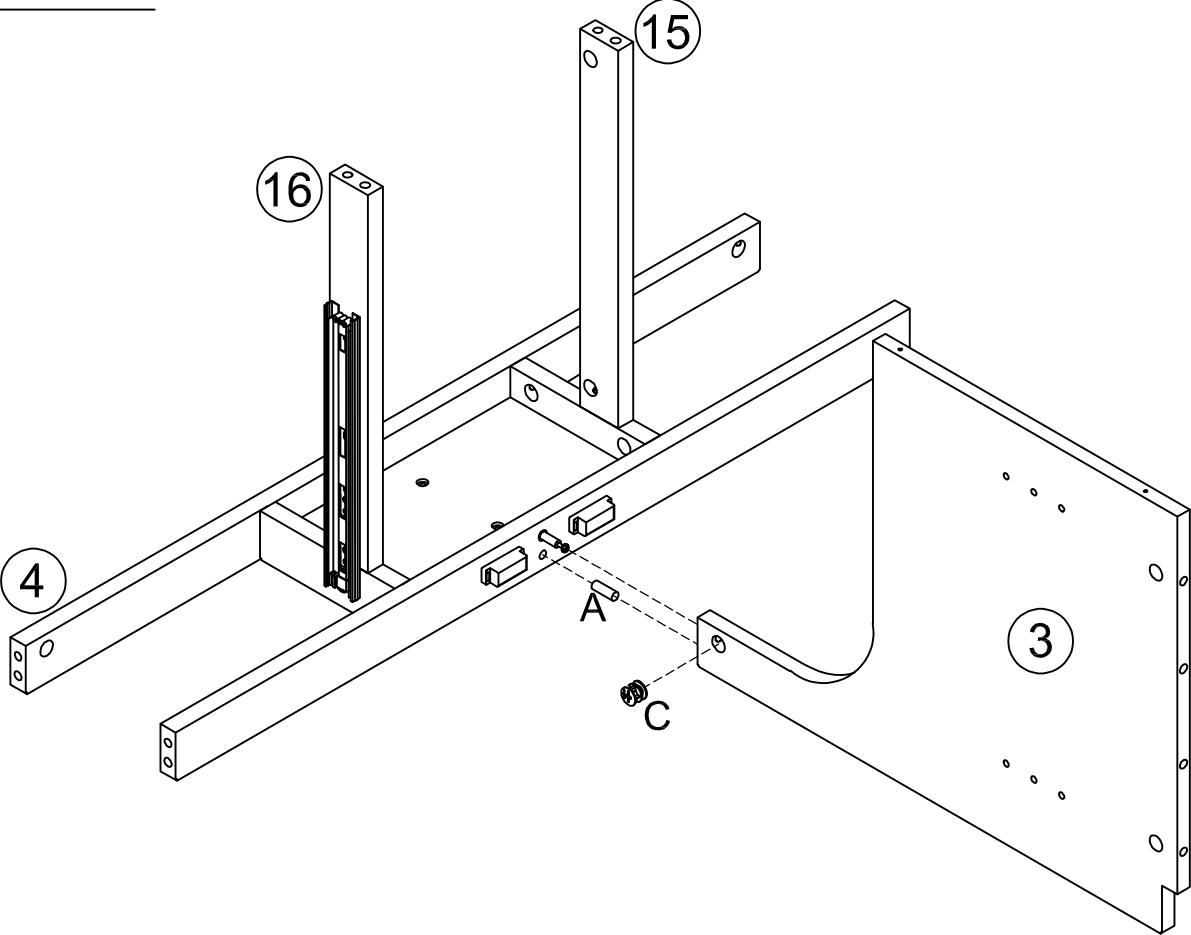

C




1PC

A




1PC

STEP: 7

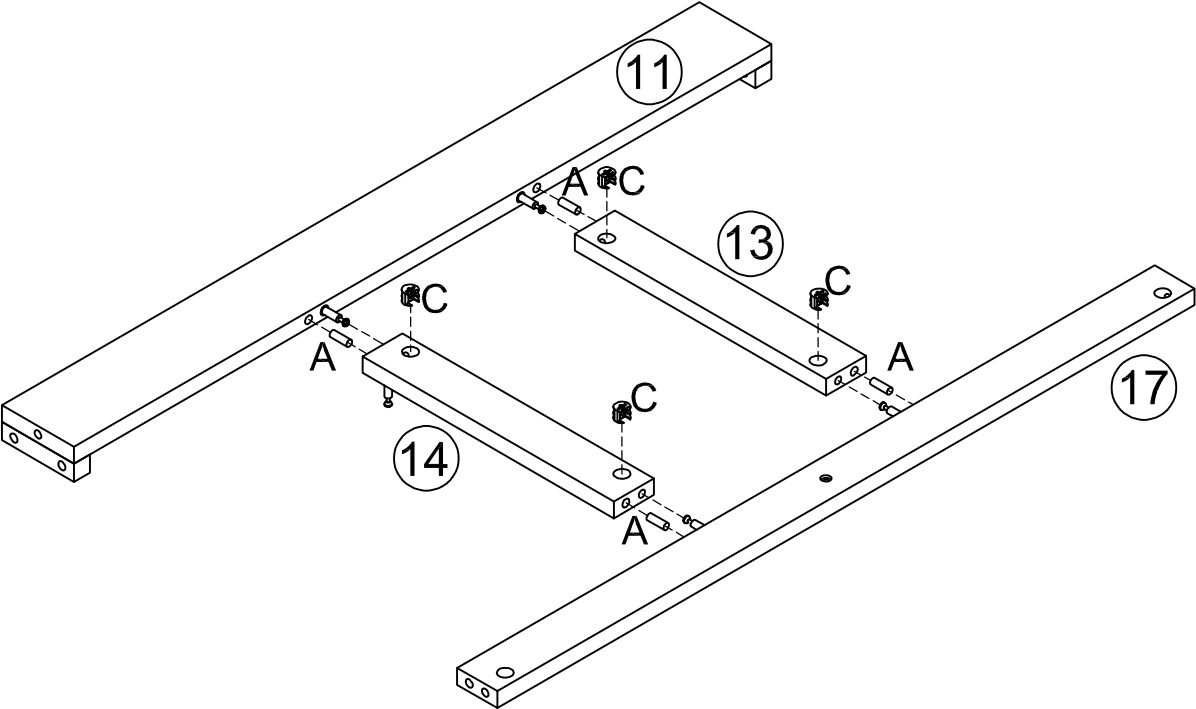

C




4PCS

A



4PCS

STEP: 8

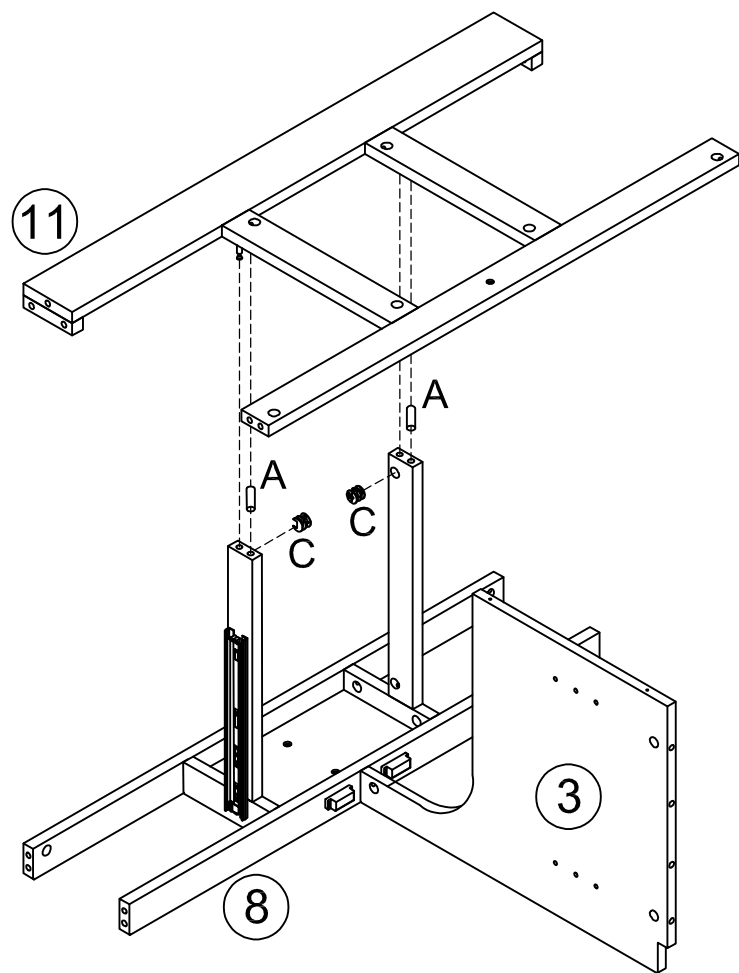

C




2PCS

A



2PCS

STEP: 9

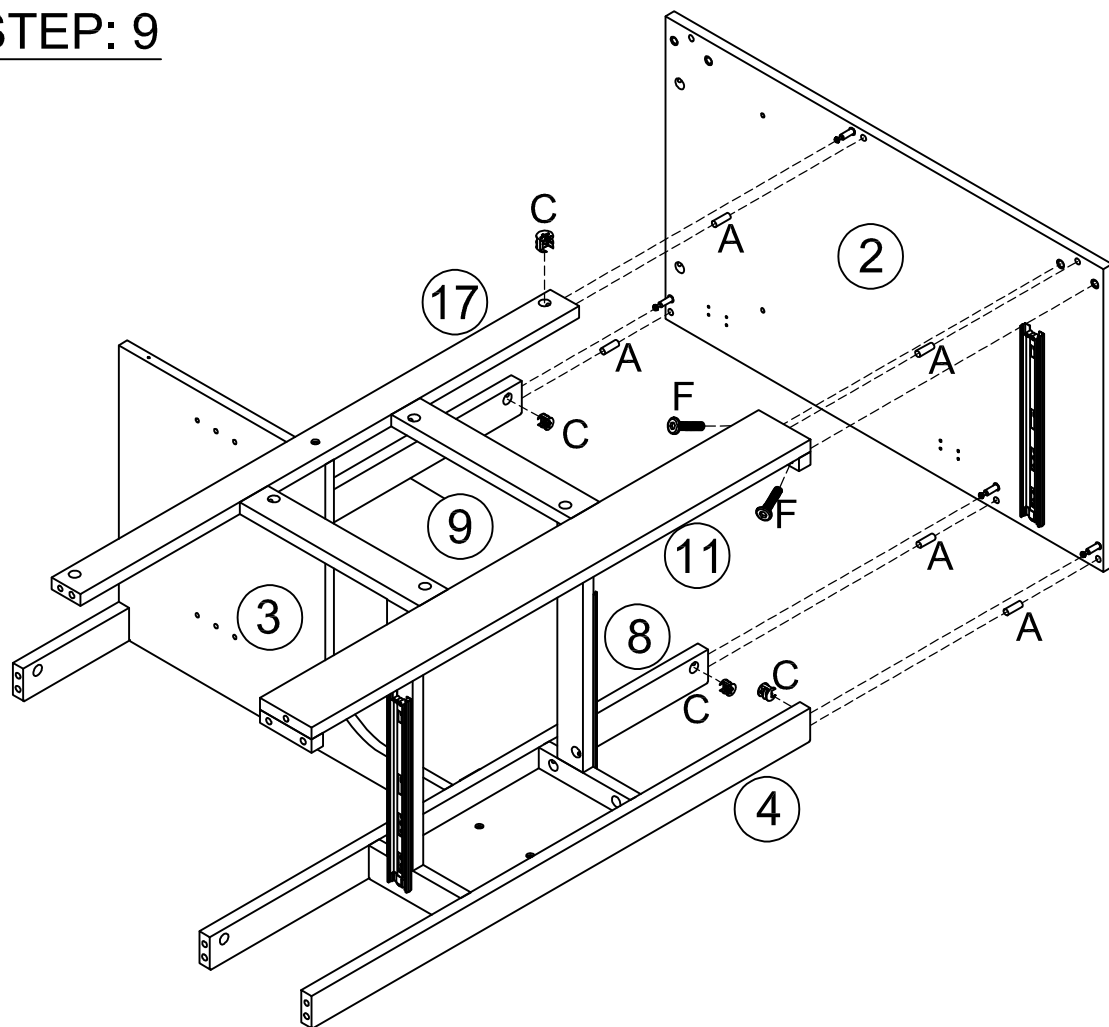

C




4PCS

A




5PCS


F





2PCS

STEP: 10

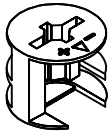C
4PCS


A
7PCS

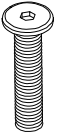F
6PCS

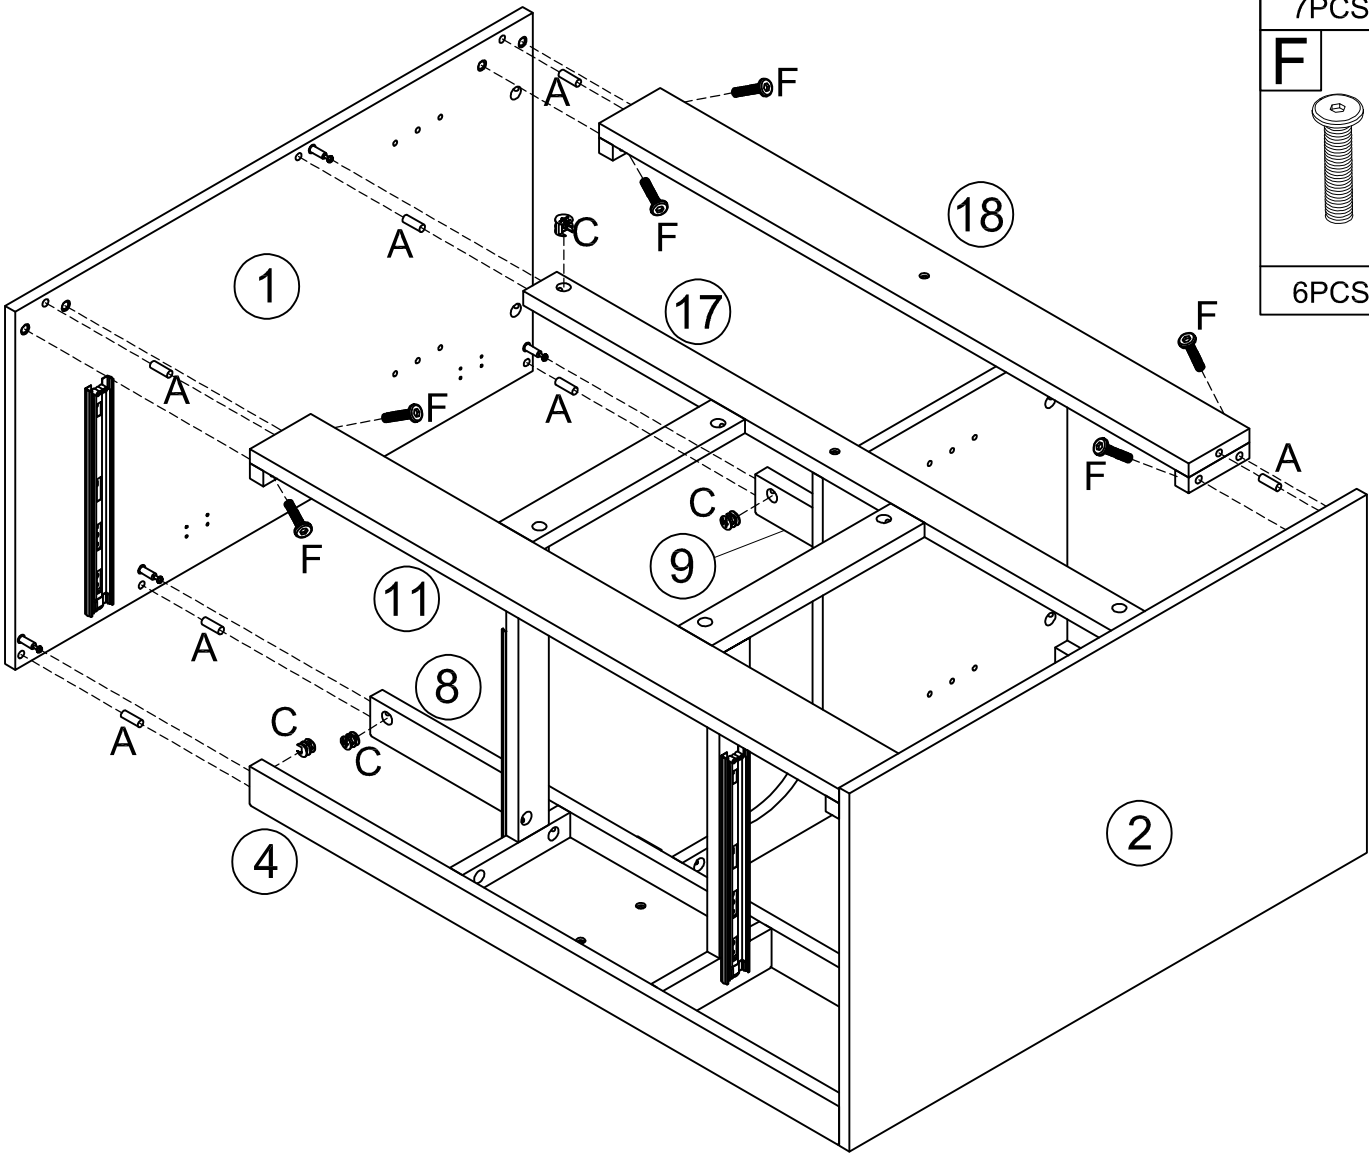


STEP: 11


D





2PCS


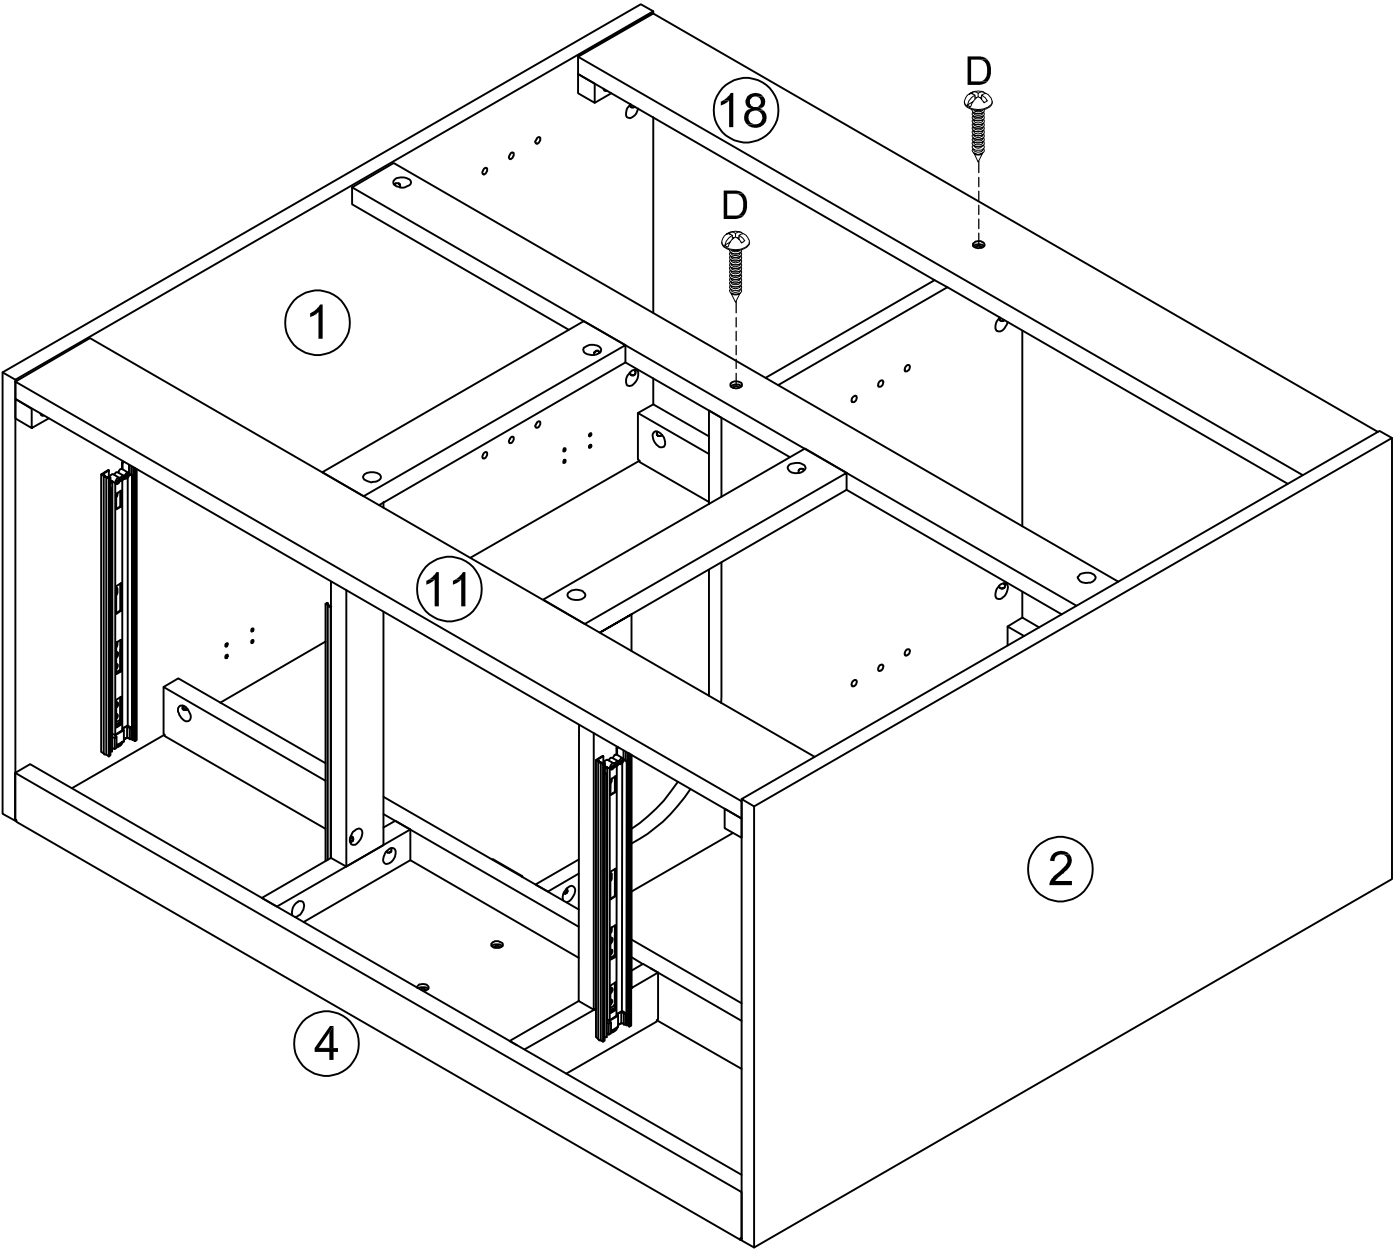


STEP: 12

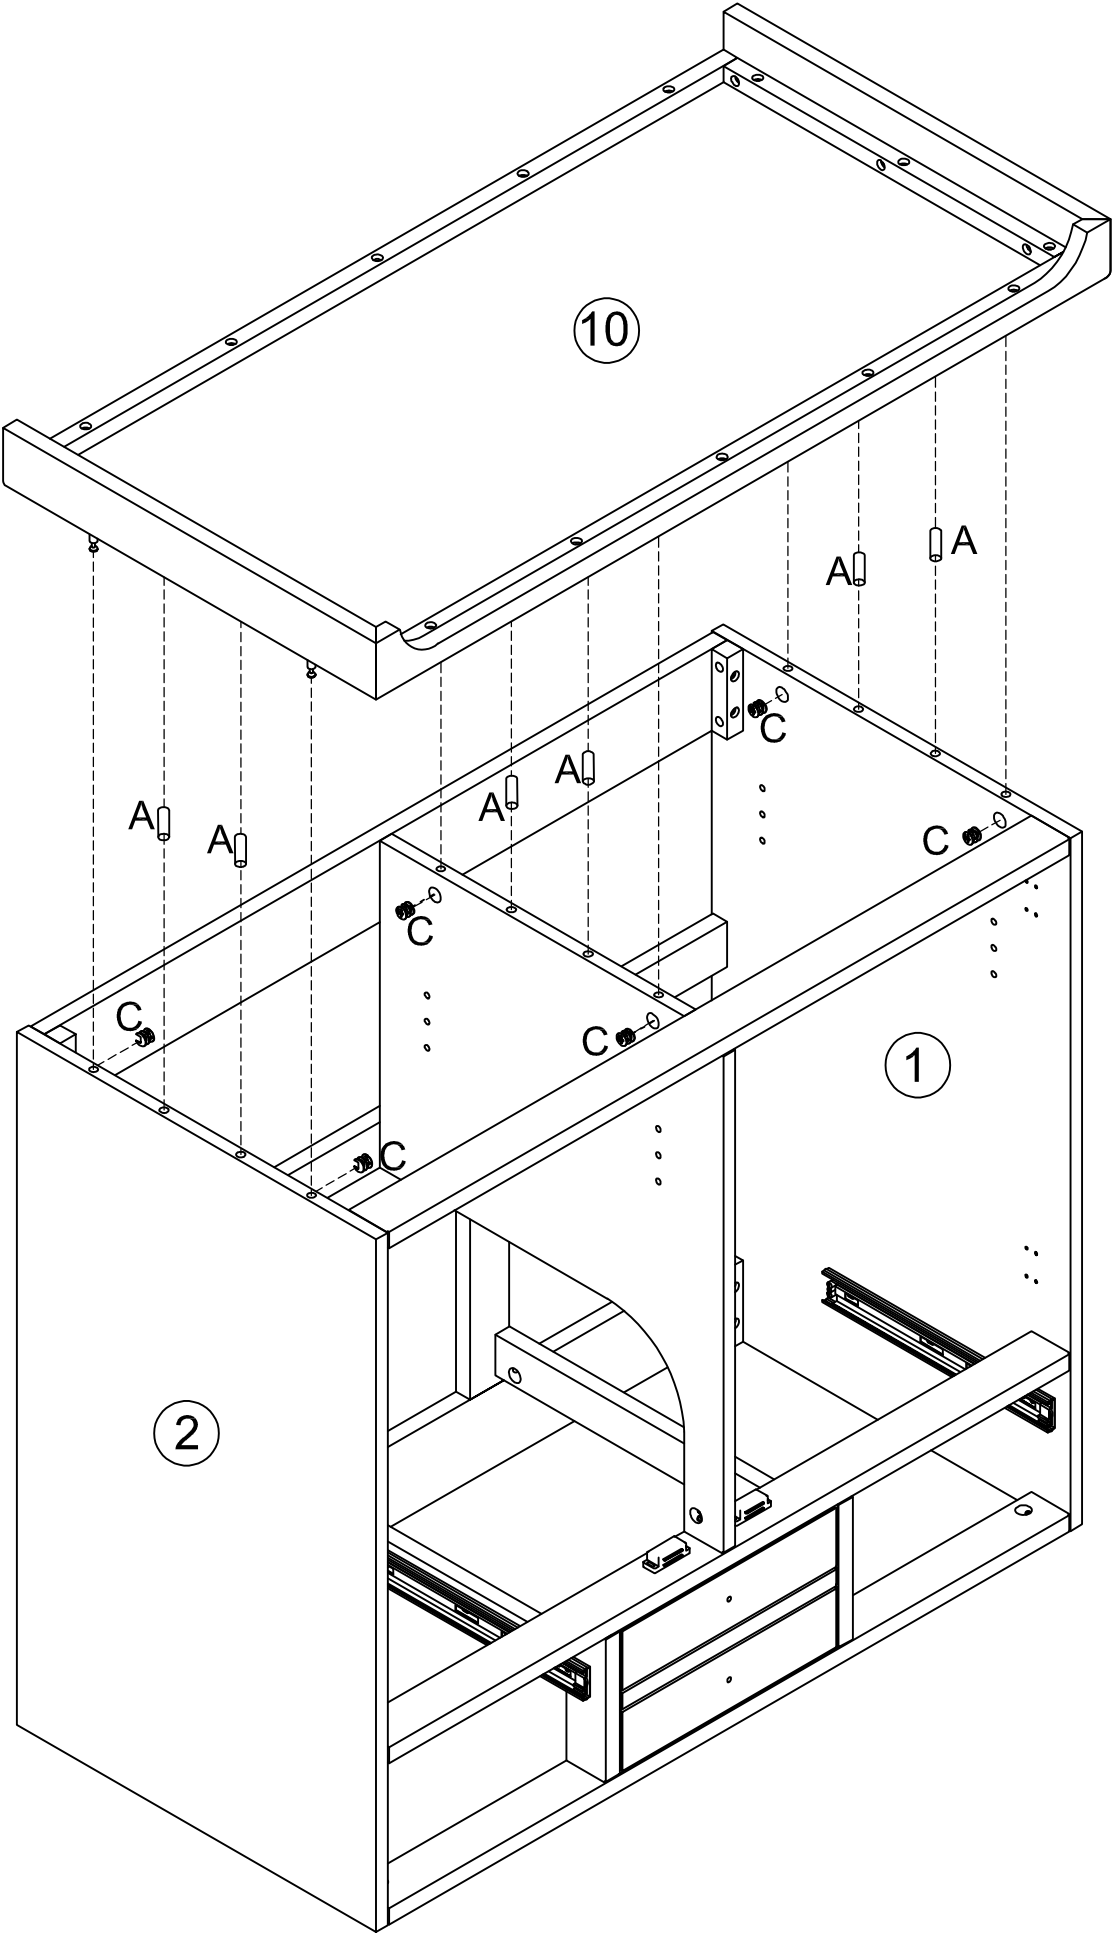


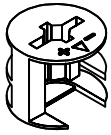C	
6PCS	
A	
6PCS	


STEP: 13

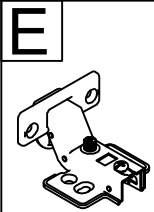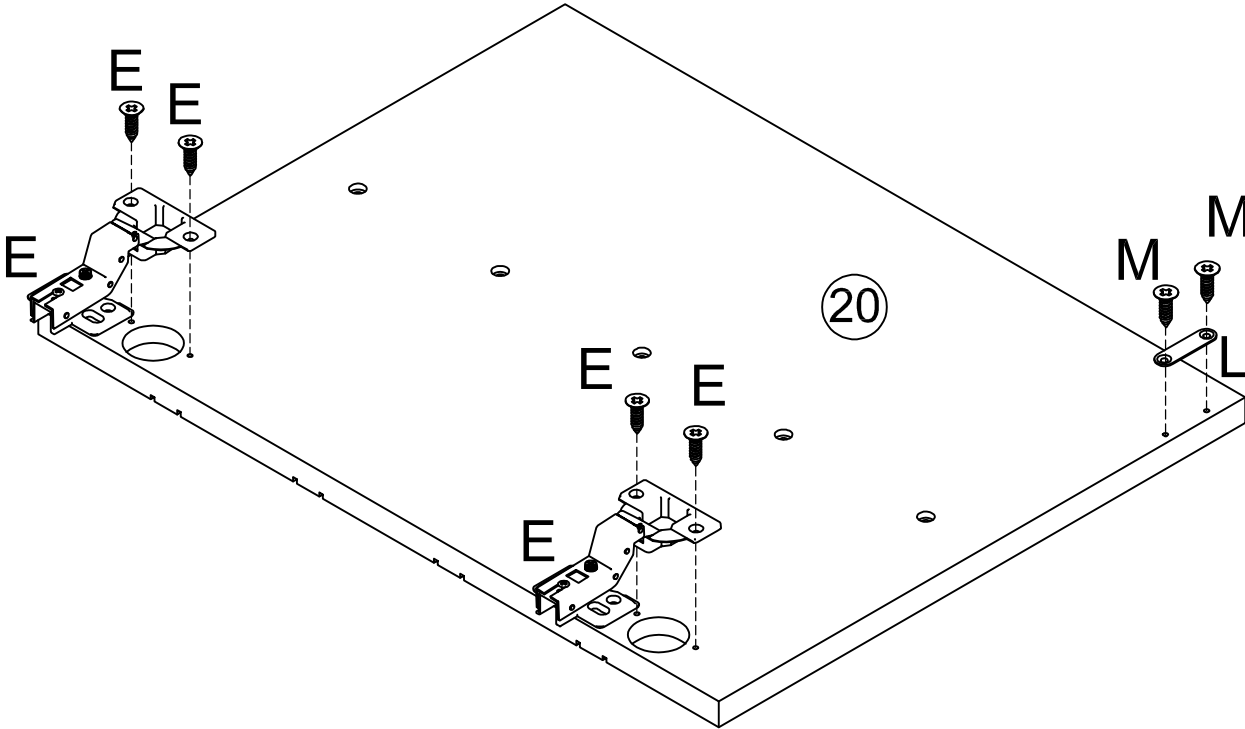


4PCS

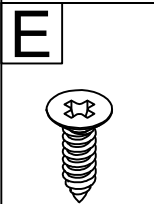


8PCS

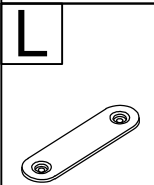


2PCS


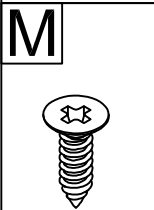



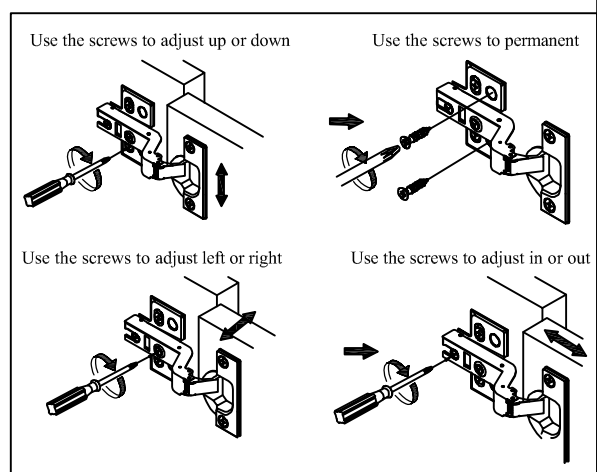
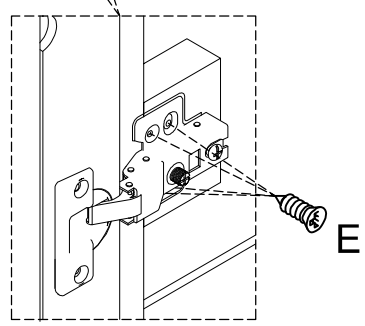
4PCS

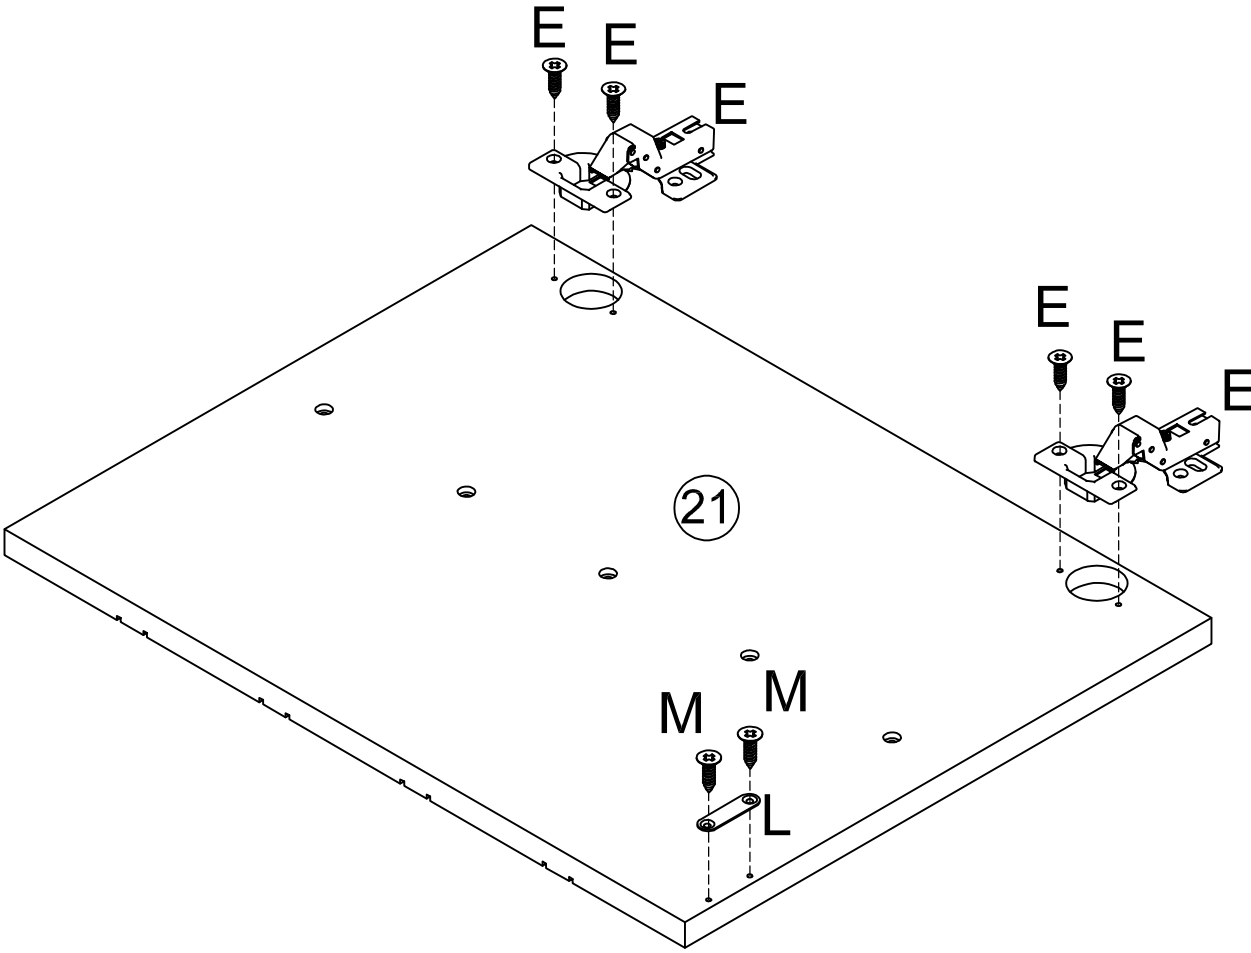

STEP: 14

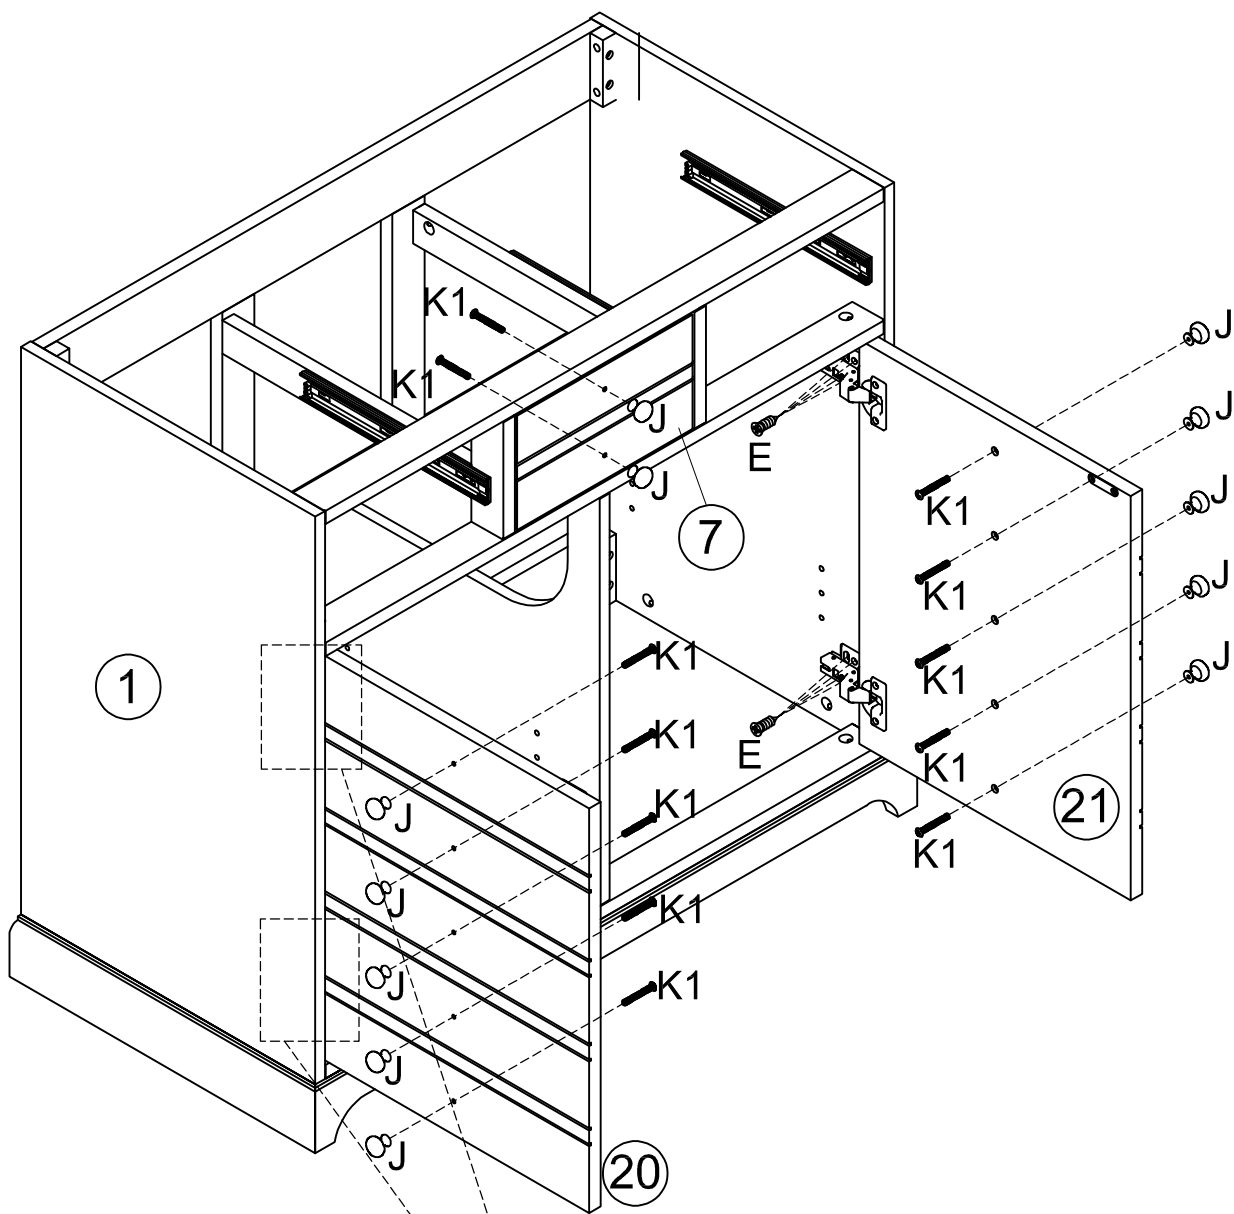


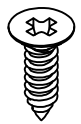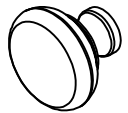E

16PCS
J

12PCS
K1

12PCS

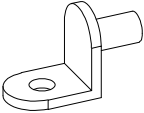


STEP: 15

H




8PCS

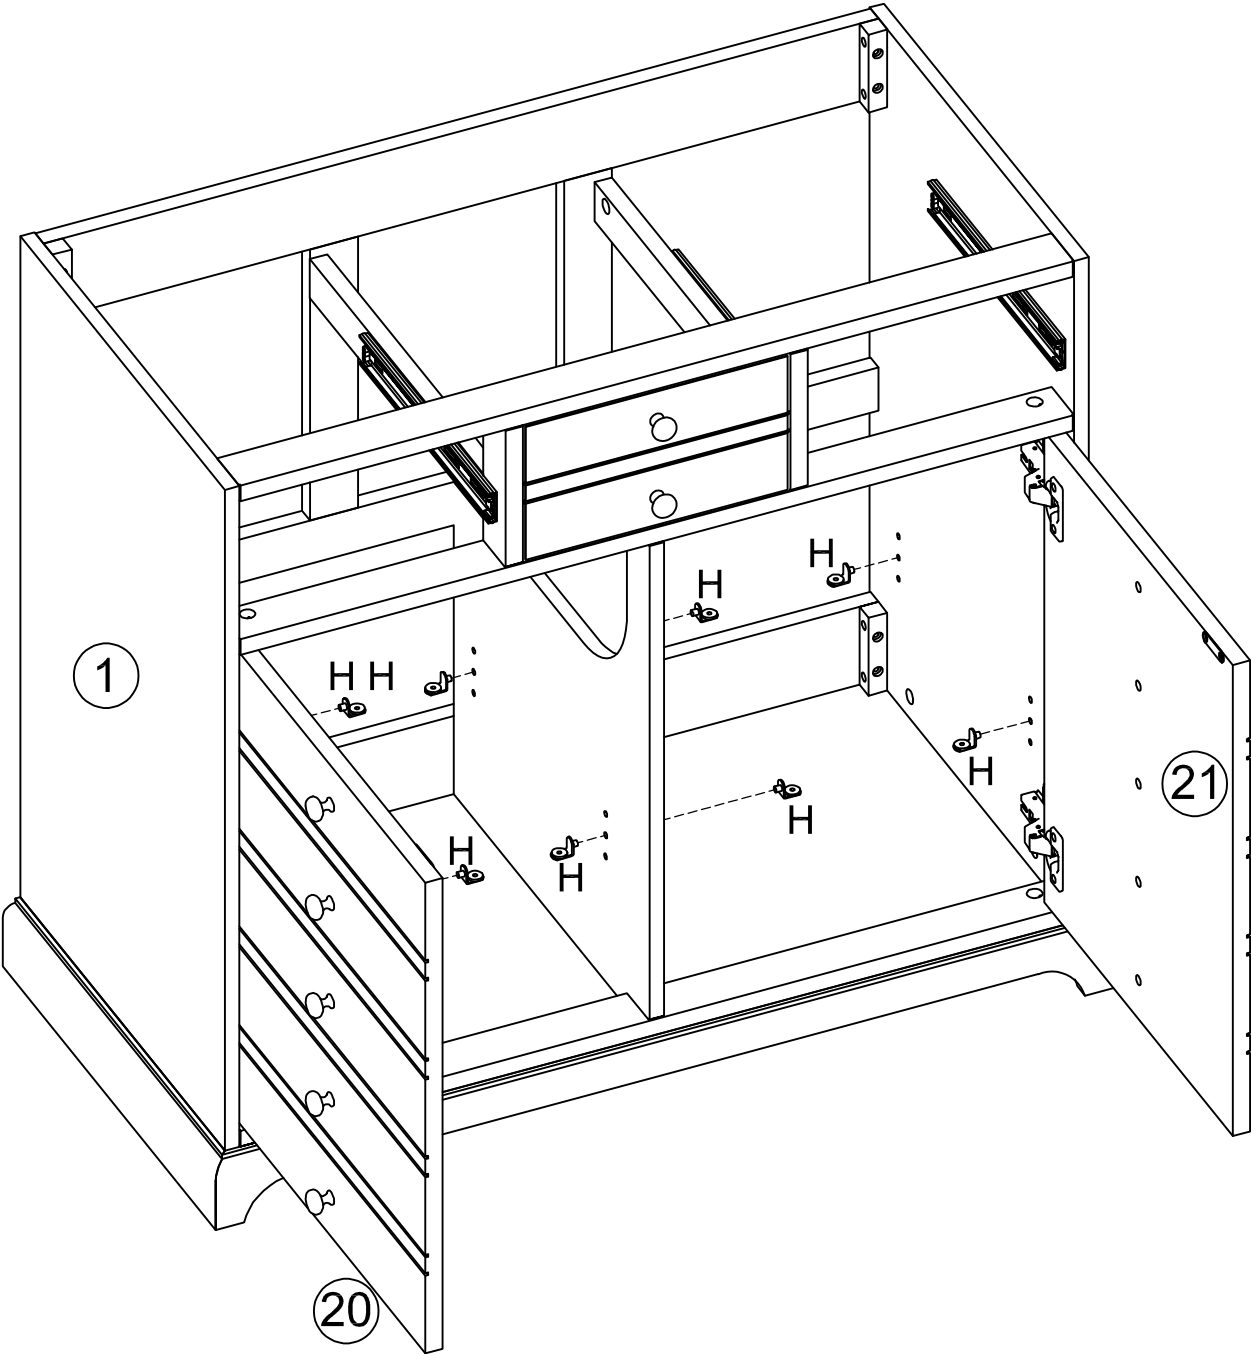


STEP: 16


I

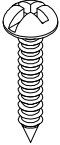
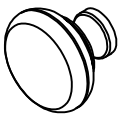




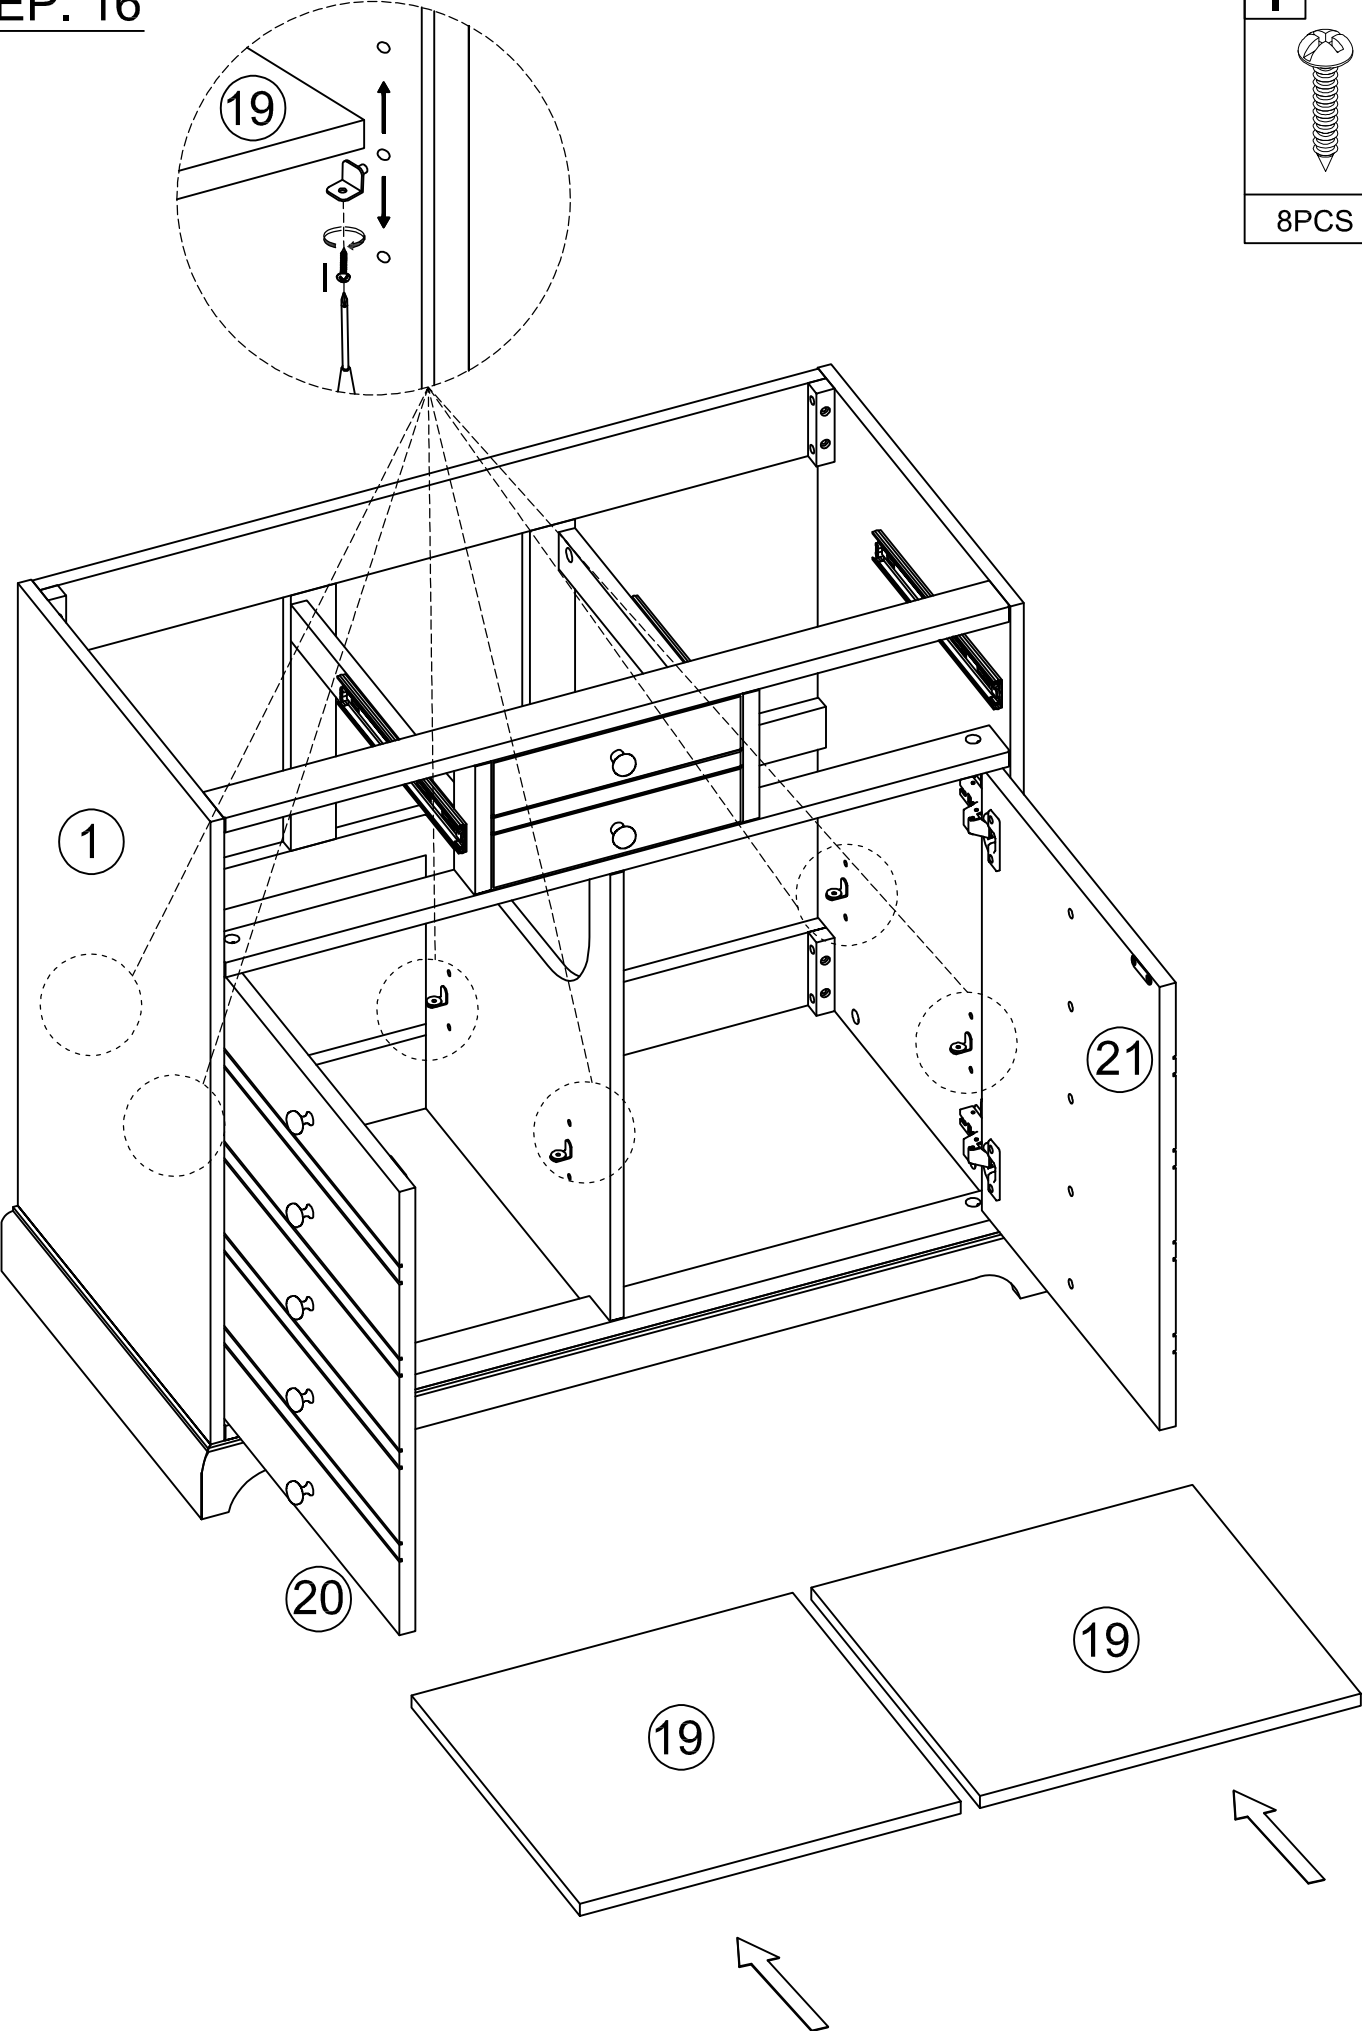





8PCS

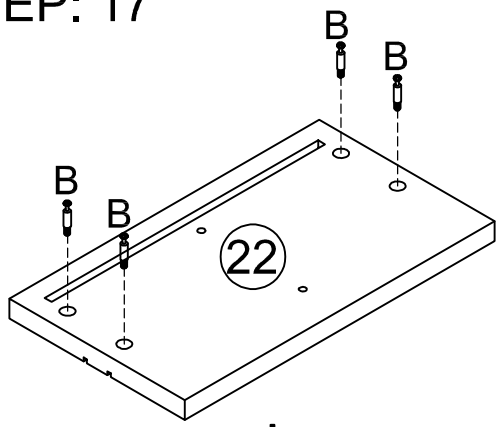

STEP: 17




B	J	K2
		
8PCS	4PCS	4PCS
C	N	O
		
8PCS	8PCS	8PCS

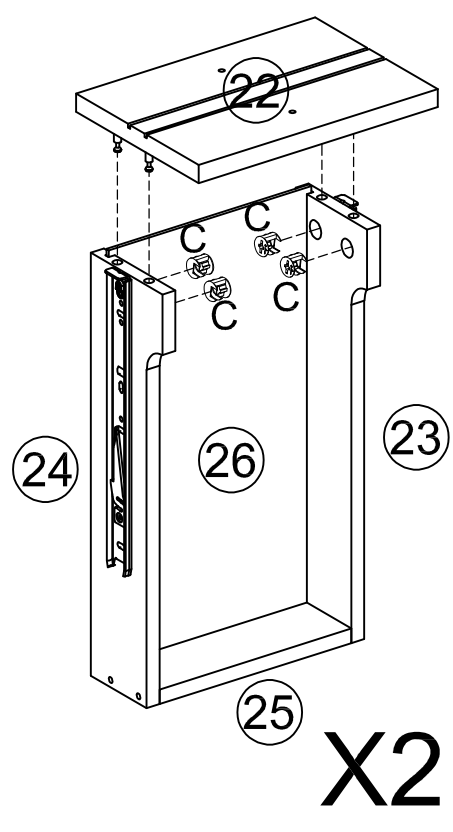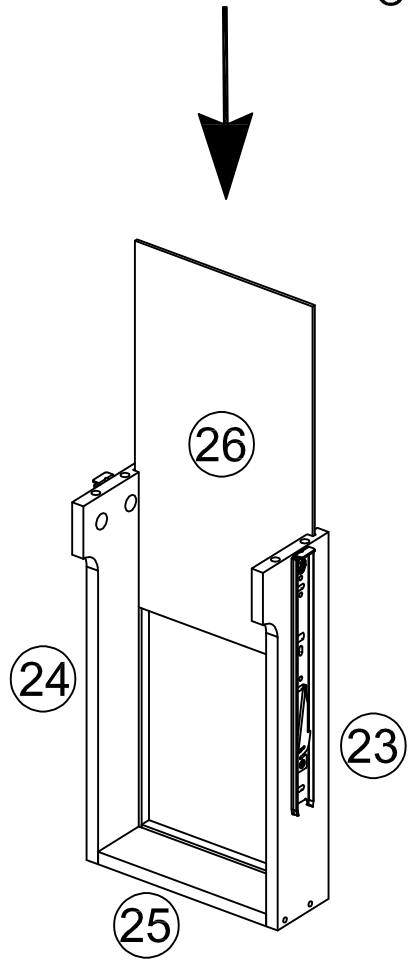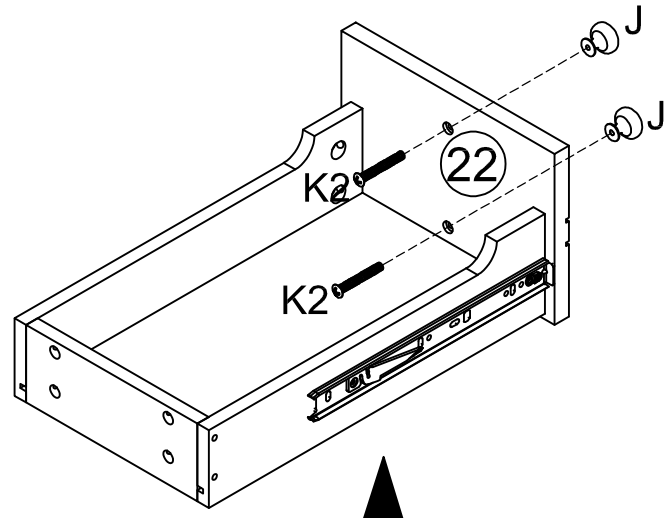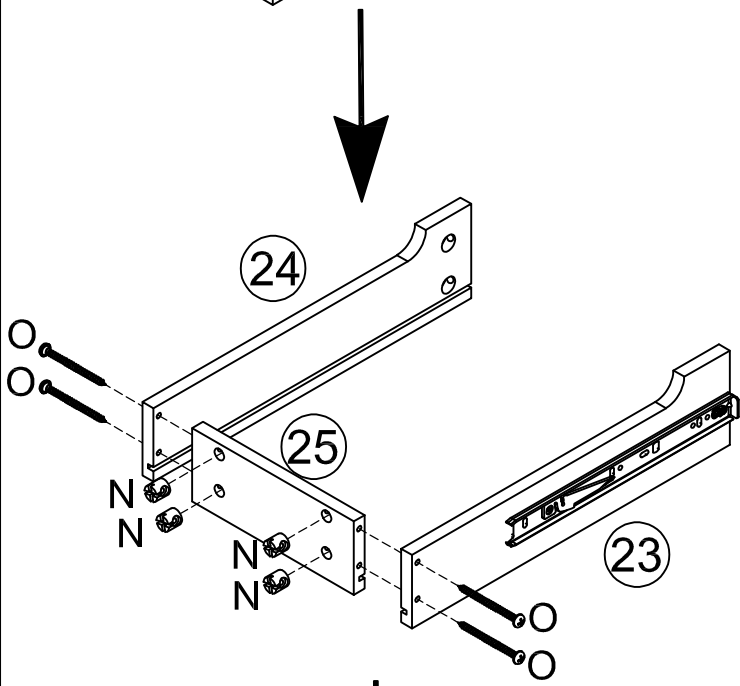


X2

STEP: 18

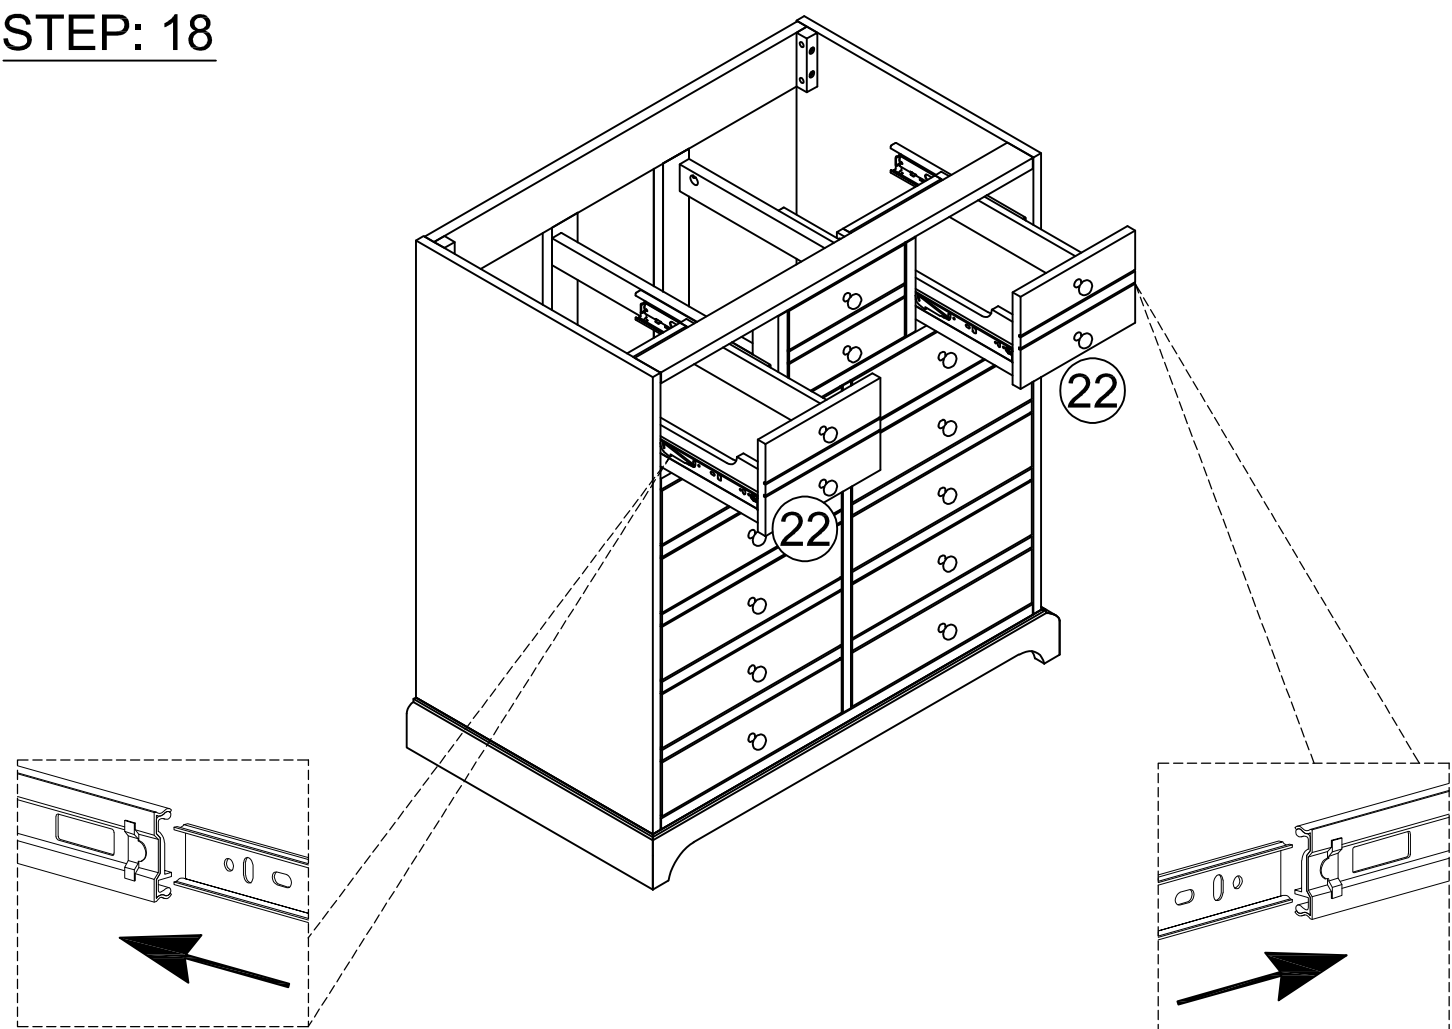


STEP: 19

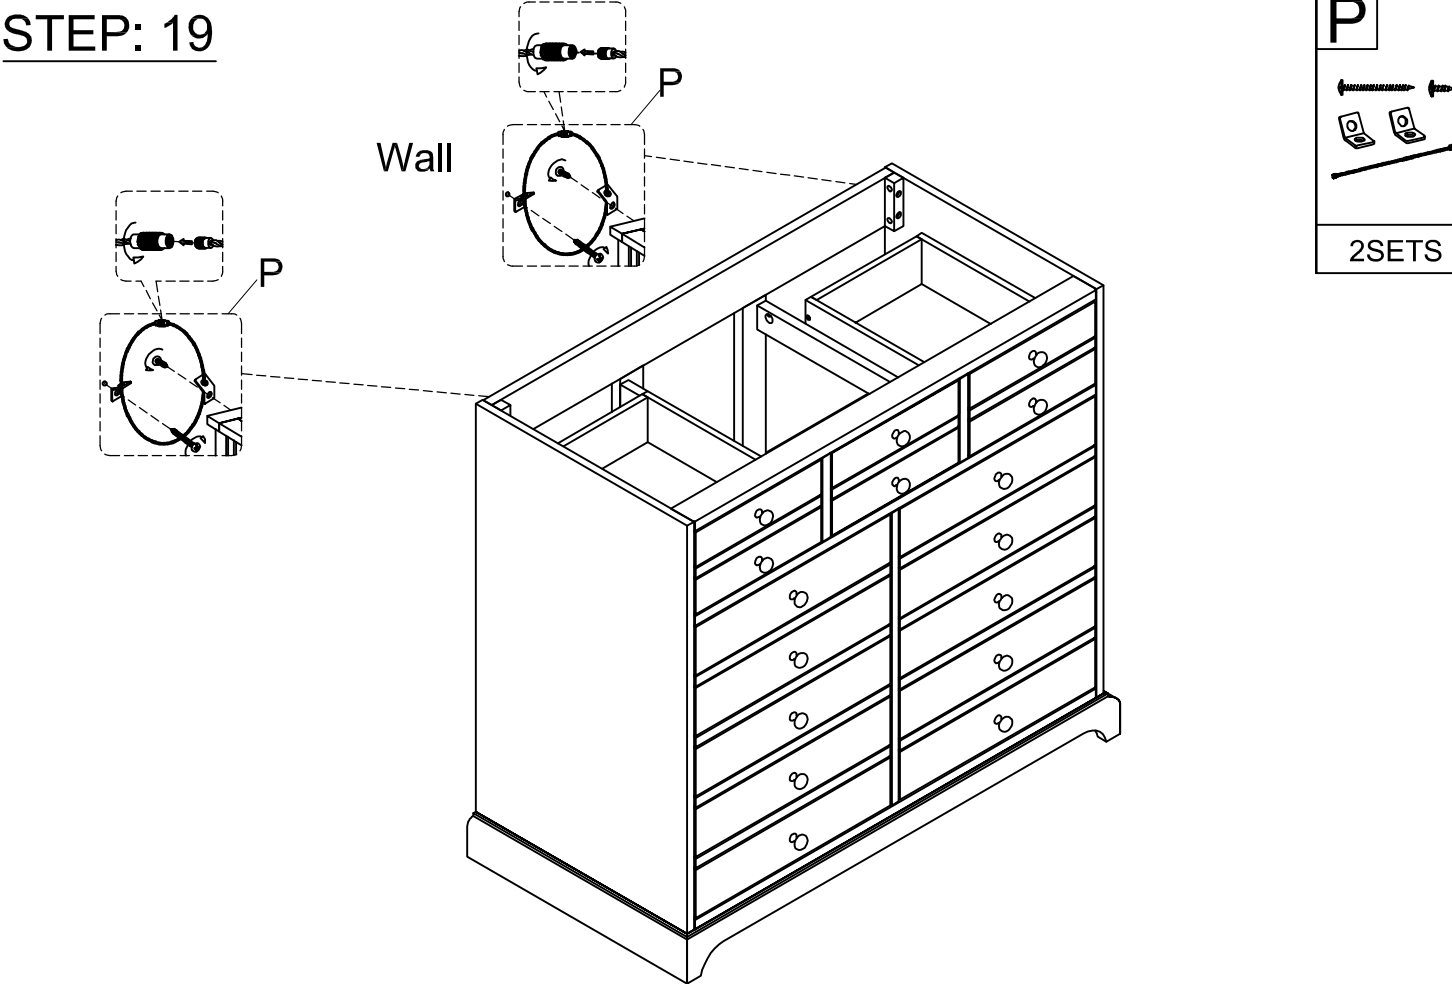



STEP: 20

Install the sink on the cabinet with glue.
Let stand for 24 hours

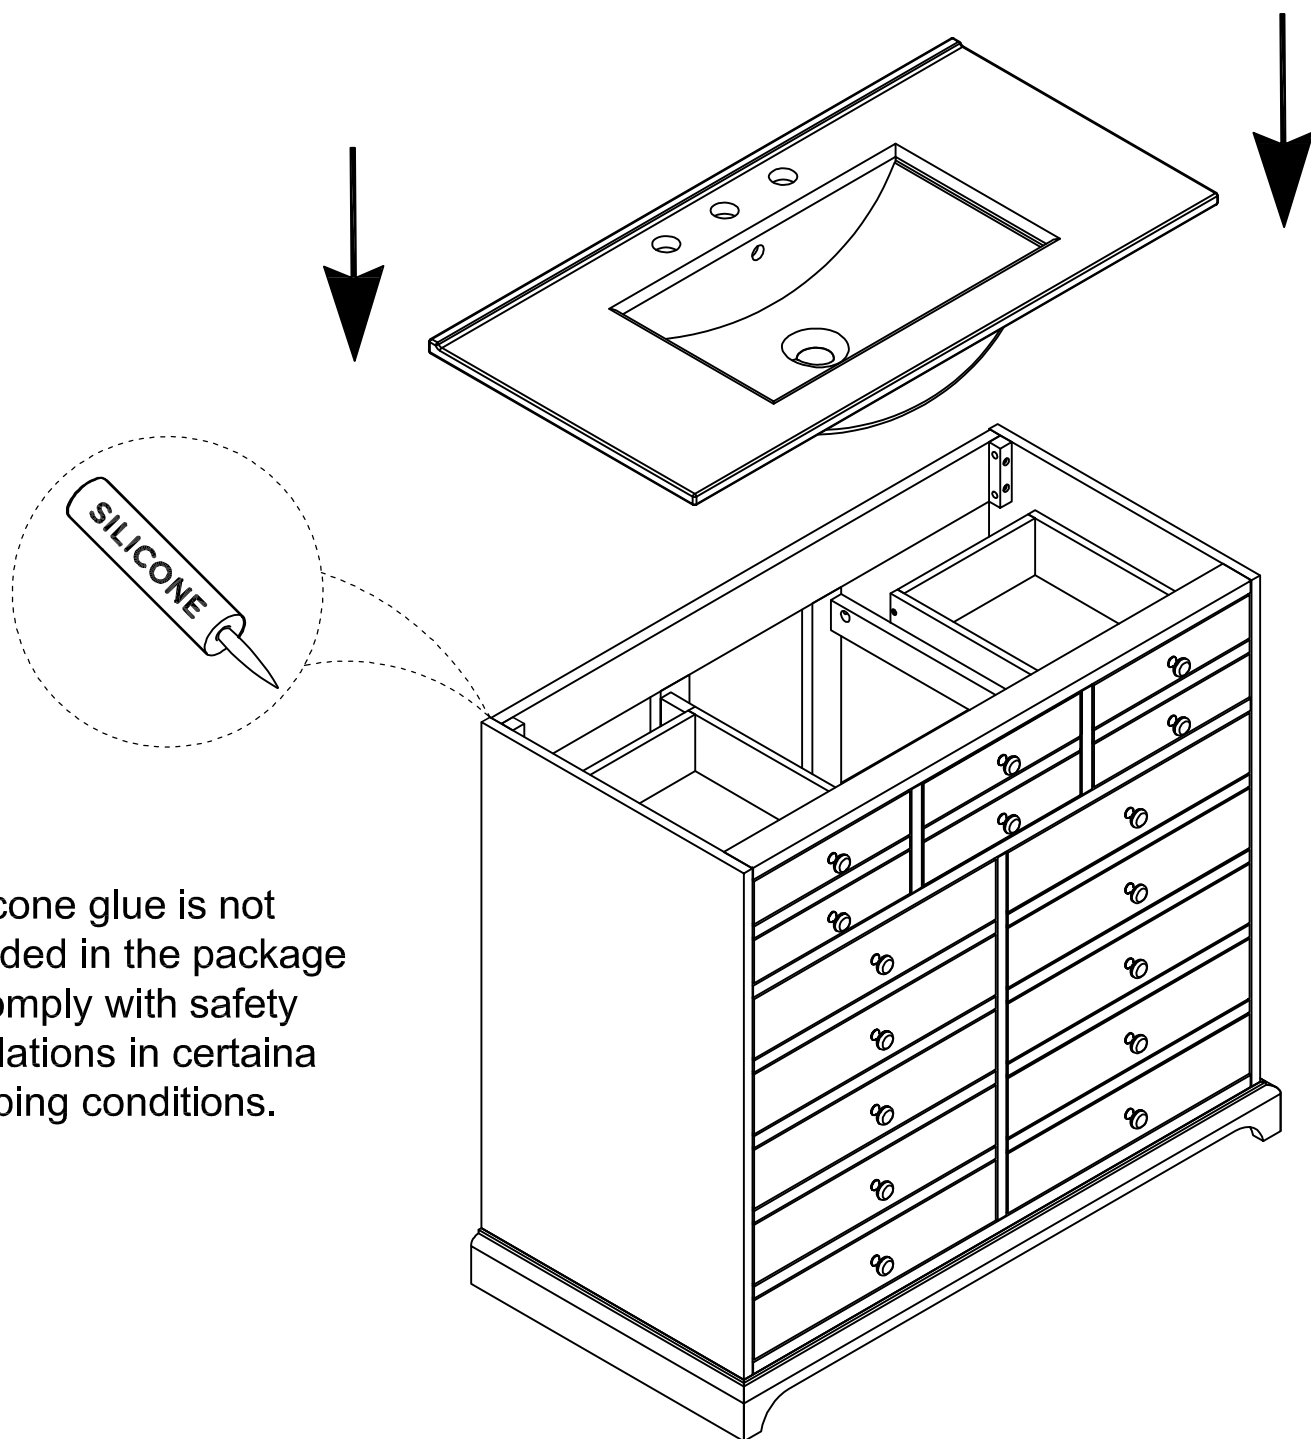


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 21

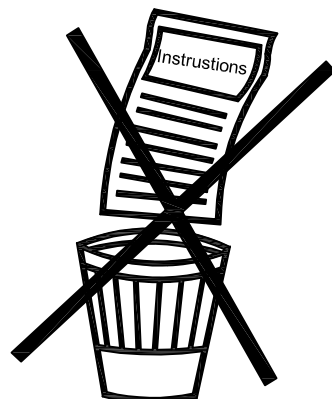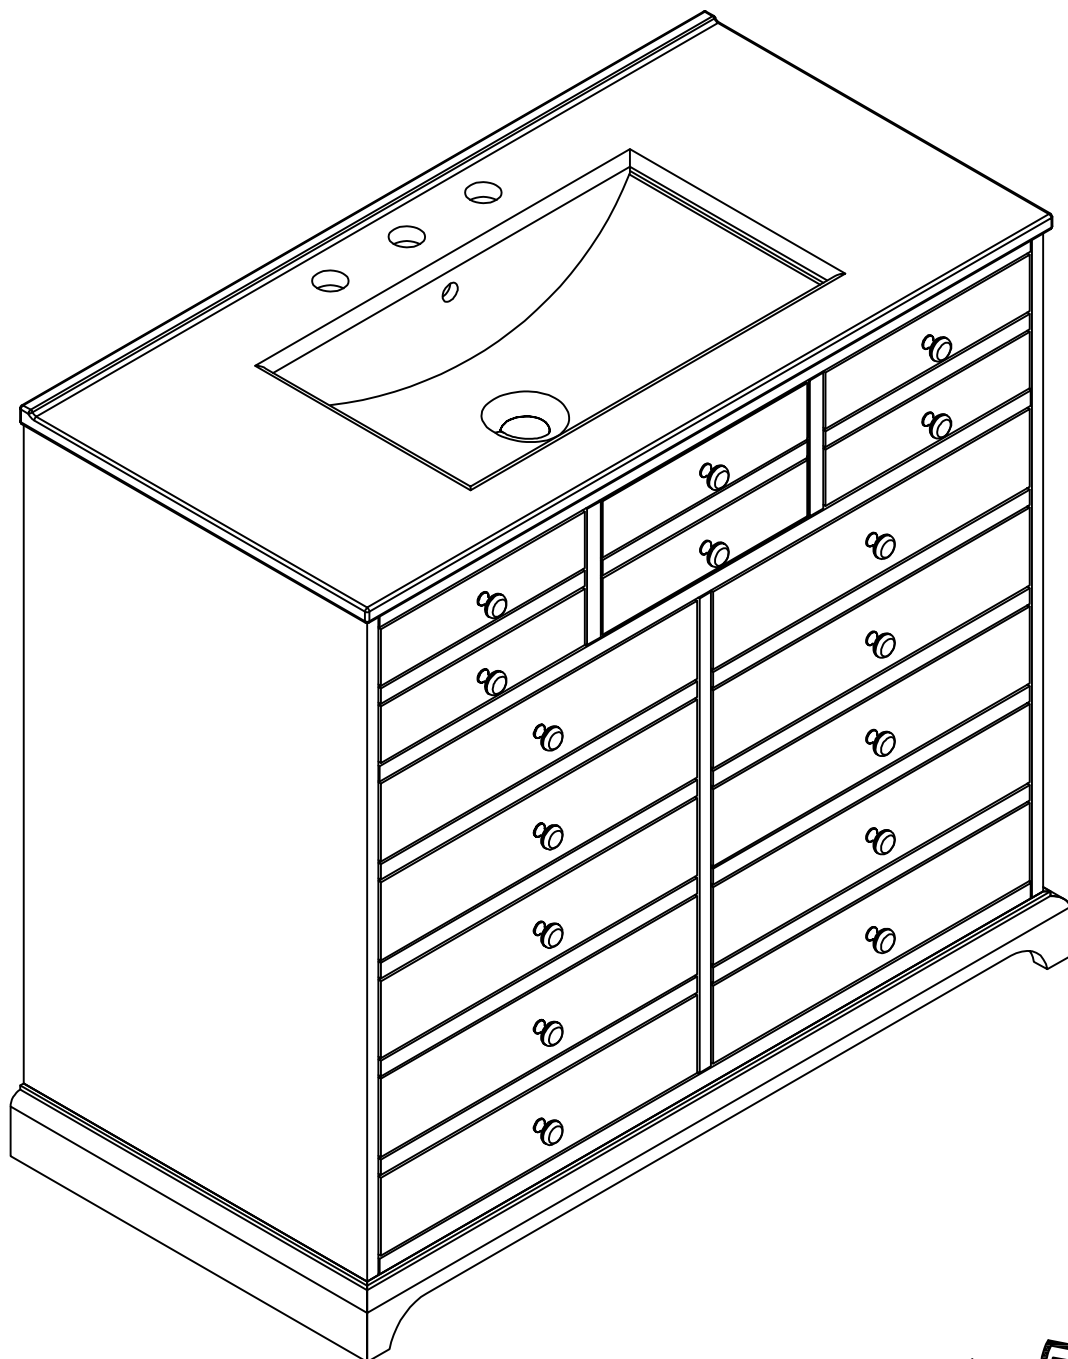


HINGE ADJUSTMENTS

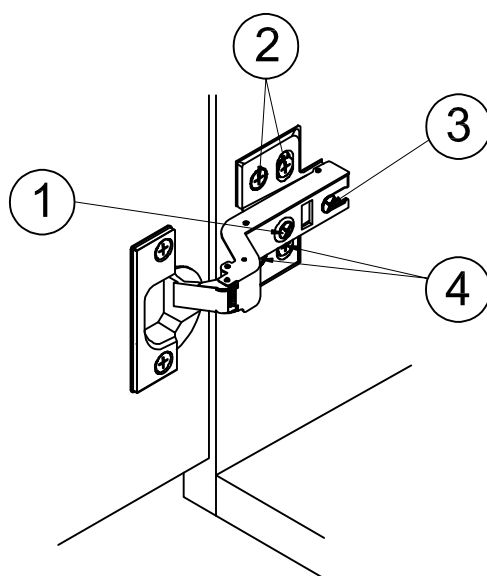


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

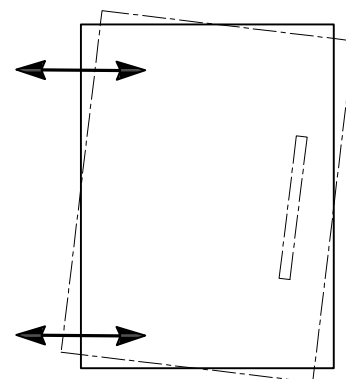

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

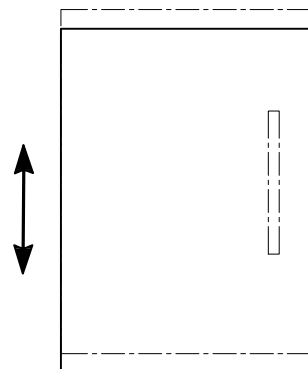

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

