Assembly Instructions

Caution: You must read this before you proceed.

Care & Maintenance



Not for commercial use. For residential use only.






- Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- Do not put hot items directly on furniture surface.
- Do not clean furniture with harsh cleansers or polish.
- O Do not place furniture under direct sunlight.
- Do not place furniture near heating or cooling vents.
- Do not write on furniture without a padded harrier to protect the surface.
- Do not place furniture outside. For indoor use only.
- Stains may be removed with mild soap solution and damp cloth.
- Children should not climb or jump on the furniture.
- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardwear packs and legs. Sets often ship in multiple boxes and may arrive a day or two apart.

CORNER CHAIR

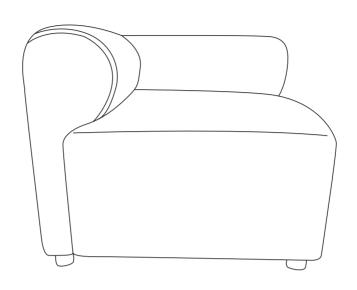



Parts List

Label	Picture	Description	QTY
Α		LEFT ARM BACKREST	1
В		RIGHT ARM BACKREST	1
С		BASE	1
D		LEGS	4

Hardwares List				
Label	Picture	Description	QTY	
1		IRON PIECE	3	
2		IRON PIECE	1	
3		PLASTICG ASKET	5	
4	(a)	BOLT(M8*18MM)	13	
5		BOLT(M8*40MM)	3	
6		BOLT(M8*55MM)	5	
7		WASHIER	21	
8		ALLEN WRENCH	1	
9	000	IRON PIECE	2	

Assembly Preparation



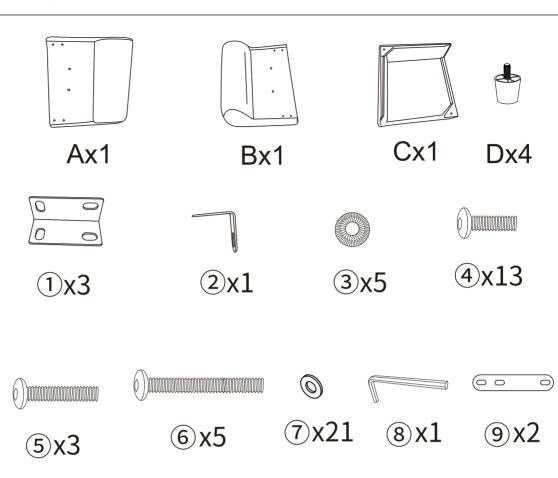



· Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

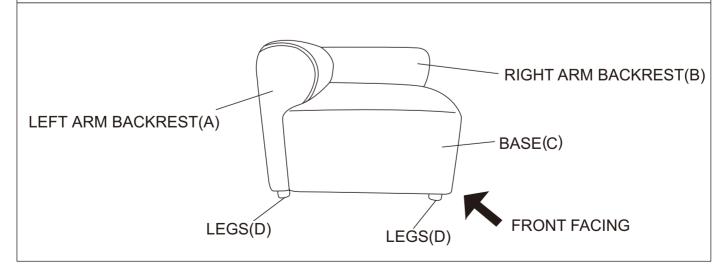


This sofa has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the sofa parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly

STEP 1

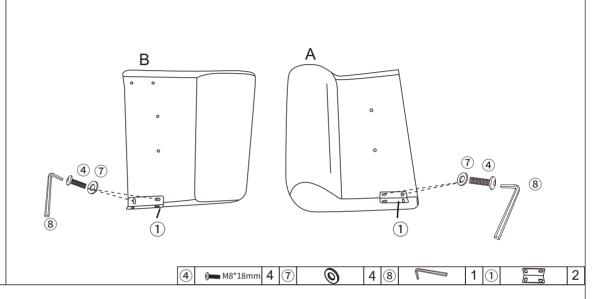

Connect IRON PIECE (1) and LEFT ARM BACKREST(A) and RIGHT ARM BACKREST(B) with Bolt 5 as shown, and tighten Bolt 5 with Allen Wrench 8 please.


STEP 2

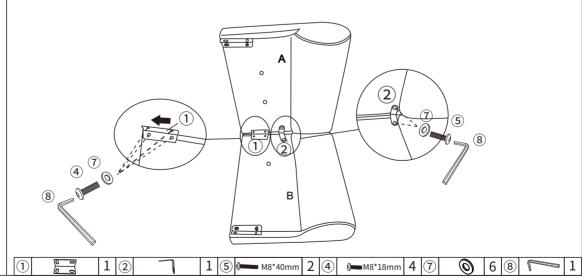

Connect LEFT ARM BACKREST(A) and RIGHT ARM BACKREST(B) with IRON PIECE (①) and fix them with Bolt④ as shown,


and tighten Bolt 4 & Bolt 5 with Allen Wrench 8 please.

STEP 3

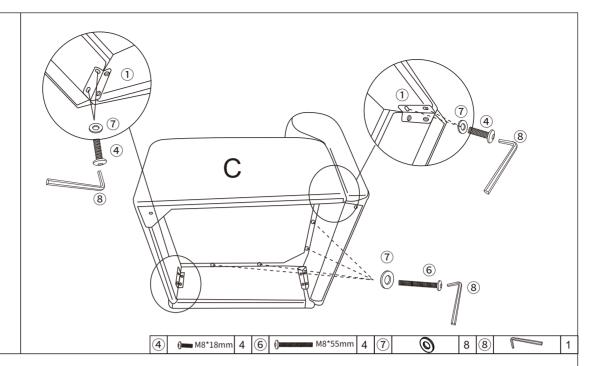

Connect LEFT ARM BACKREST(A) and BASE (C) with IRONPIECE (①) and fix them with Bolt 4, Connect RIGHT ARM BACKREST(B) and BASE (C) with IRONPIECE (①) and fix them with Bolt 4, Connect LEFT ARM BACKREST(A) and BASE (C) with Bolt 6 and Washer 7, Connect RIGHT ARM BACKREST(B) and BASE (C) with Bolt 6 and Washer 7 as shown, and tighten Bolt 4 & Bolt 6 with Allen Wrench 8 please.


STEP 4

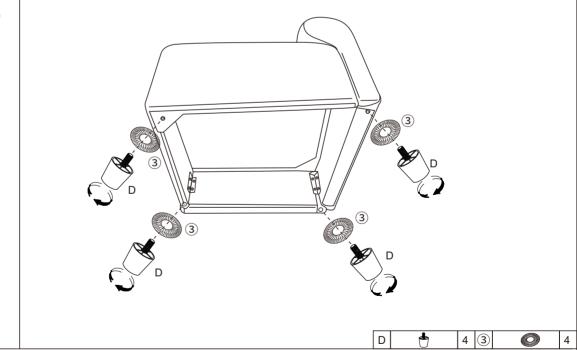

Install the Leg(D) at the bottom of the Sofa by placing one Gasket(③) on the threaded stem. Then insert threaded stem into the mounting postion at the corner of the BASE. Tighten by turning the Leg clockwise, Do not over tighten.

Repeat the same process to install the remaining three Legs.


STEP 5

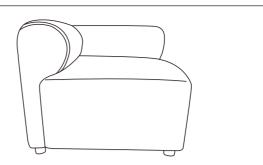

Your Sofa is ready for use.

This Sofa can only be used on a flat, level surface.

STEP 6

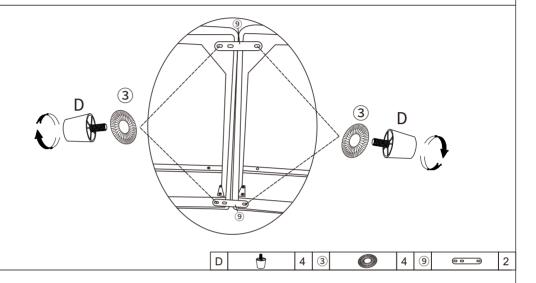

Combination 1	3	
Combination 2	4	1
Combination 3	4	1
Combination 4	4	2