

# DREAMS

IDEA

Instruction Manual



DREAMS/IDEA

NO:CH0020N



ASSEMBLY INSTRUCTIONS

Tel.5627813327

Please contact us: [info@firstopintl.com](mailto:info@firstopintl.com)

<https://www.dreamsidea.com>

# ABOUT US

*D*REAMSIDEA IS A ONE-STOP HOME

FURNISHING AND SERVICE COMPANY BASED IN USA.

WE ARE DEDICATED TO BRINGING YOUR DREAM HOME TO LIFE.

OUR SERVICES COVER FROM DESIGN, PRODUCTION,

DIRECT SELL, STORAGE, AND TRANSPORTATION.

IF REALITY IS THE NEAR SHORE

AND IDEALISM THE FAR SHORE,

*D*REAMSIDEA

AS THE FERRY BETWEEN THEM,

EAGER TO ACCOMPANY YOU ON A JOURNEY

TO YOUR IDEAL HOME.

ITEM NO. CH0020N

# WARRANTY

WE STRIVE TO OFFER HIGH-QUALITY PRODUCT AND WE ALSO TRY OUR BEST TO SATISFY EACH CUSTOMER THAT ORDERS FROM US WITH PRODUCT OR SERVICE AS NEEDED. EACH CUSTOMER RECEIVES A RECORD OF THEIR ORDER, SUCH AS THE ORDER NUMBER OR ITEM RECEIPT. FOR ANY ITEMS THAT ARE OUT OF THE WARRANTY PERIOD, YOU MAY STILL RECEIVE REPLACEMENT PARTS BY PURCHASING THEM FROM OUR COMPANY IF THEY ARE AVAILABLE.

Are you having difficulty

with assembly? Missing parts?

Please contact us : [info@firstopintl.com](mailto:info@firstopintl.com)


Tel.5627813327

send an email with your order No. to us

For return, please check the return policy with the retailer or market place you bought from.

Appreciate your purchasing from us.

Pop up your life by our furniture !

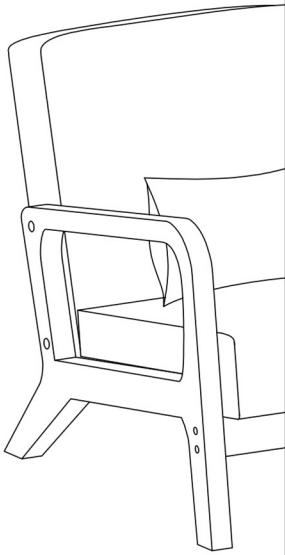



# MAINTAINANCE AND WARNING

Please read the manual thoroughly before  
you start install.

Please always use proper tools for  
installment.

Packaging and small parts may have  
chocking hazard, please keep them away  
from children and pets.

Please clean the product with dry clean  
cloth, some of the parts may be able to  
wash directly. Check with the product  
description!

Please keep the product away  
from fire.


Please keep the product away from  
sharp objects.

IF the product is placed under direct  
sunlight, the pattern or color might  
fade away.

Do not jump on the product.

Check the product periodically to make  
sure everything is tightened.

If you have any questions else, please  
contact us, we will be glad to help  
you out.

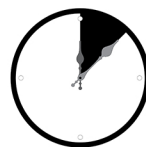

Around 45 min

# PRDOUCT DESCRIPTION

Soft Cotton Upholstery: Made from high-quality cotton fabric for a breathable and comfortable touch.

Durable Solid Wood Frame: Ensures stability and long-lasting use.

Mid-Century Modern Appeal: Adds a sophisticated, timeless style to your living space.

Easy to install: The product box comes with detailed installation instructions and all the parts and tools needed for installation, so even a single person can install it quickly

The chair should be assembled on cardboard or carpet for ease of handling and to avoid collision with the floor


Dream



House




# EXPLODED VIEW

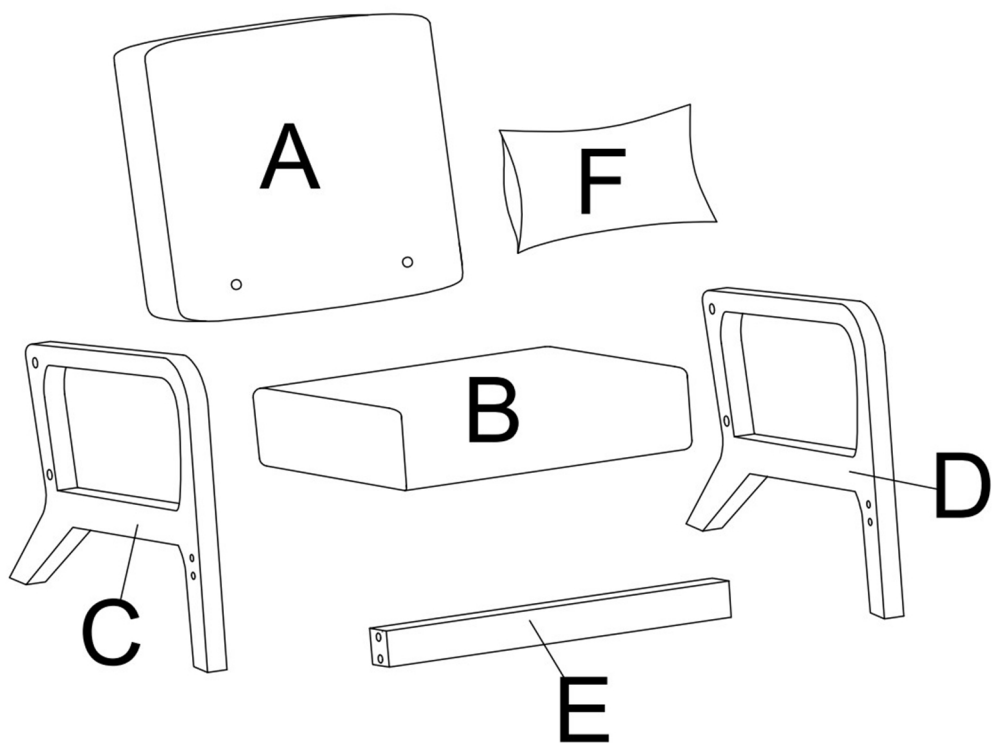


# PARTS

A\*1

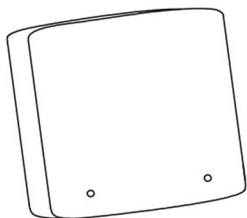


Back

B\*1




Seat frame

C\*1

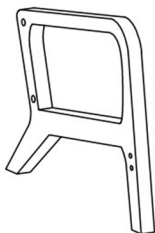

Left arm

D\*1

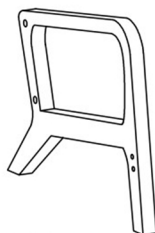

Right arm

E\*1



Front cross  
member

F\*1



Waist pillow

# HARDWARE

## TOOL LIST

①\*10



★M8\*60mm  
Bolt

②\*2



★Washer

③\*1



Allen key

④\*8



★Plastic cover

⑤\*4



Felt mat

⑥\*4




Vertical nut

BE SURE TO CHECK ALL  
PACKING MATERIAL  
FITTING THE PACKING  
LIST. BE CAREFUL FOR  
SMALL PARTS, WHICH  
MAY HAVE COME  
LOOSE INSIDE THE  
CARTON DURING  
SHIPMENT.

NOTE: Designated with (★) We provide  
additional spare parts in the hardware package

# step 1


USING ALLEN KEY (3) PROVIDED TO REMOVE THE ARMRESTS (C & D) FROM THE WOODEN BOARD, THE WOODEN BOARD IS FOR FIXING THE ARMRESTS DURING THE TRANSPORATION, NOT PART OF THE PRODUCT.

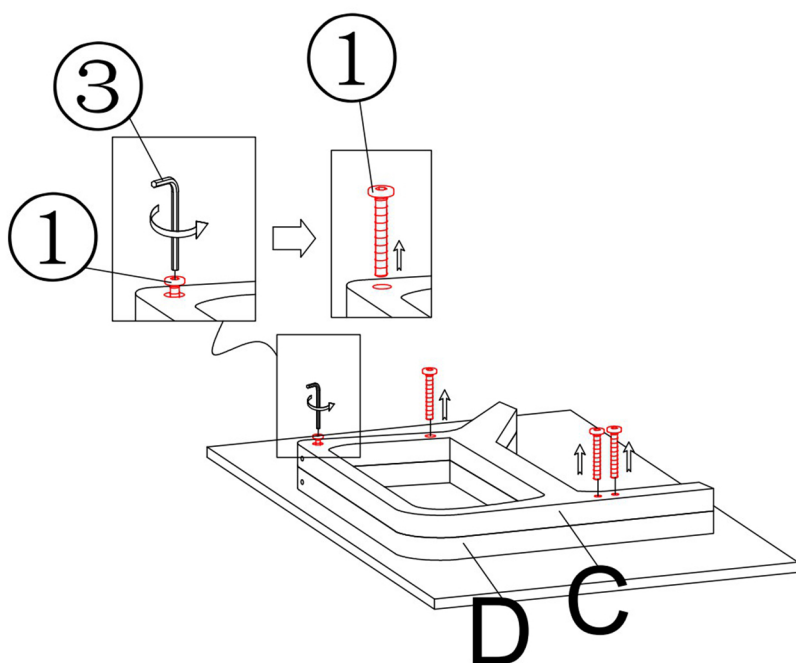

\* You may place a rug or some covers underneath the seatframe, in order to protect your floor and the product.


# step 2

CONNECT BACK (A) AND THE SEAT CUSHION (B) WITH THE BOLTS (1) AND WASHERS (2), USING ALLEN WRENCH (3) PROVIDED TO TIGHTEN THE BOLTS, MAKE SURE ALL THE BOLTS ARE FULLY TIGHTENED BEFORE NEXT STEP.

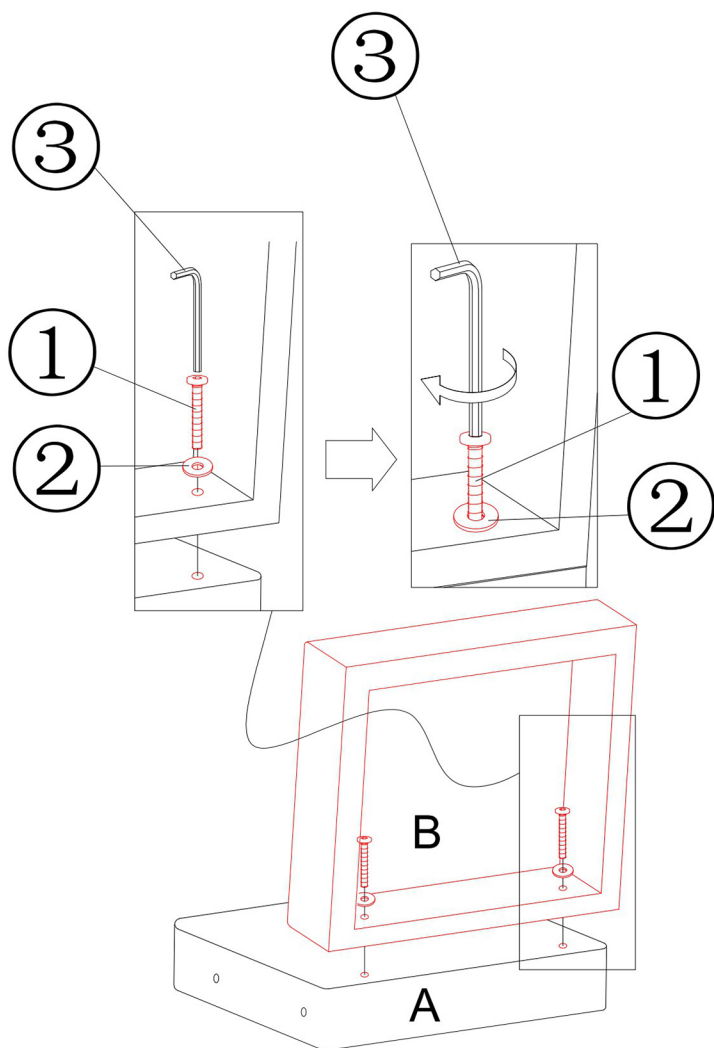

# step 3


USE THE BOLTS (1) TO TIGHTEN THE LEFT ARM (C) WITH THE FRAME AS SHOWN,  
USE THE ALLEN WRENCH (3) PROVIDED TO TIGHTEN THE BOLTS.

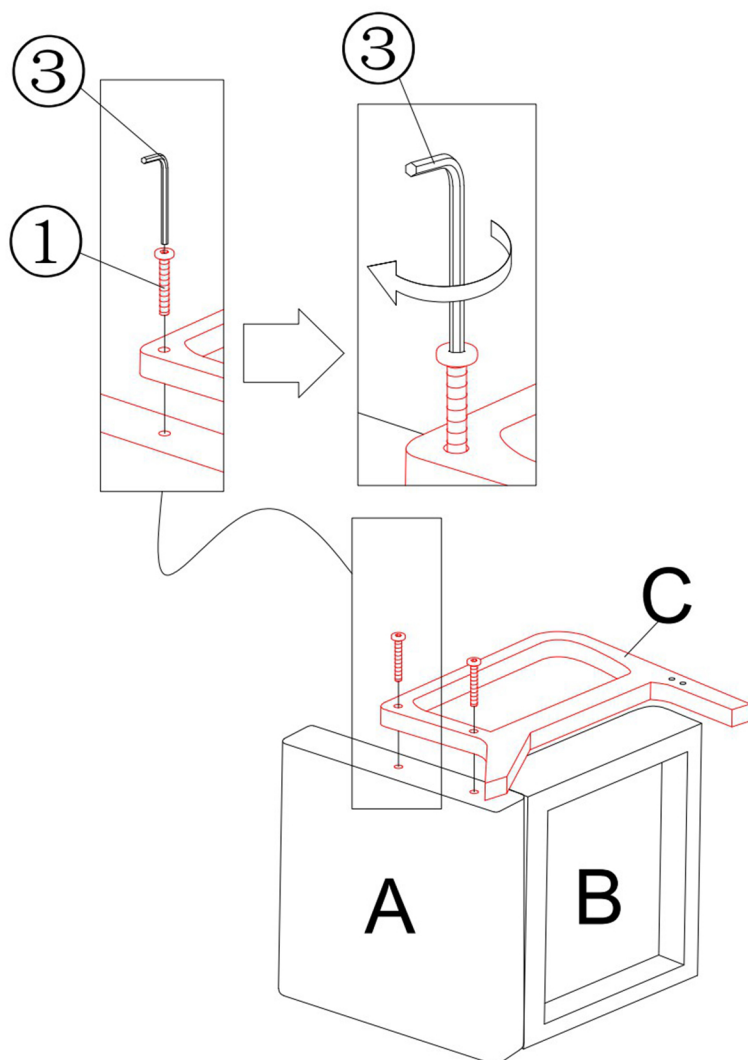





# step 4

USE THE BOLTS (1) TO TIGHTEN THE RIGHT ARM (D) WITH THE FRAME AS SHOWN,  
USE THE ALLEN WRENCH (3) PROVIDED TO TIGHTEN THE BOLTS.

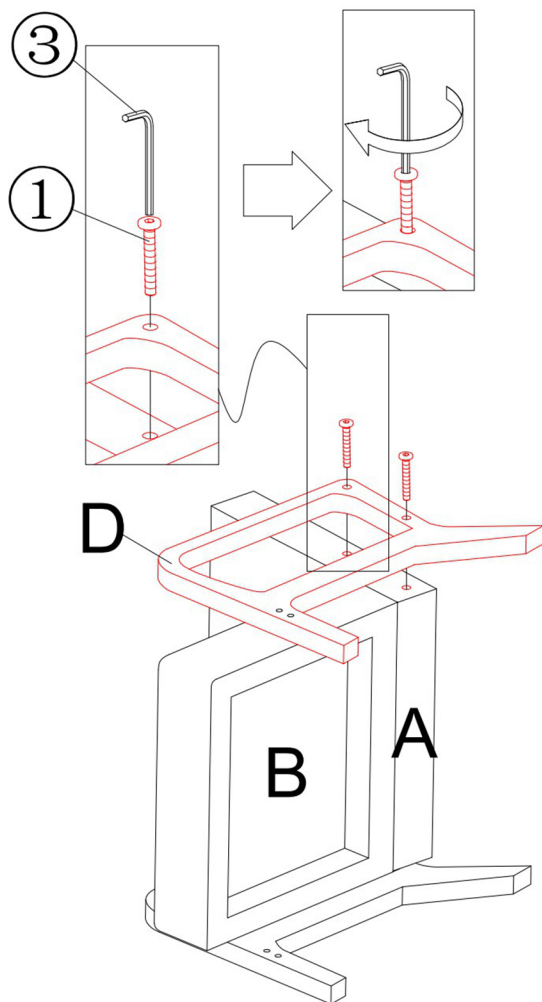

# step 5


INSERT THE VERTICAL NUTS (6) INTO THE FRONT TRANSOM (E) AS SHOWN, MAKE SURE THE HOLES ON VERTICAL NUTS ARE ALIGNED WITH THE HOLES ON THE SIDES OF TRANSOM. THEN INSTALL THE TRANSOM TO THE SEAT FRAME AS SHOWN, USE THE BOLT (1) TO TIGHTEN THE TRANSOM TO BOTH ARMS, USE THE ALLEN WRENCH (3) PROVIDED TO TIGHTEN THE BOLTS, MAKE SURE ALL BOLTS ARE FULLY TIGHTENED.

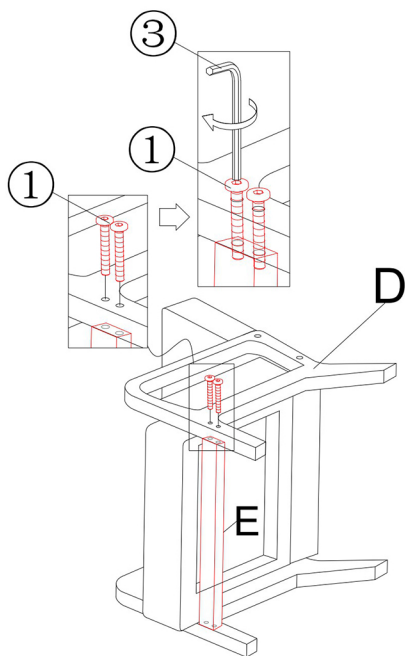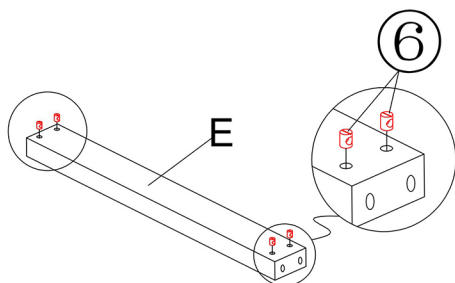

# step 6

USE THE BOLT (1) TO TIGHTEN THE TRANSOM TO BOTH ARMS, USE THE ALLEN WRENCH (3) PROVIDED TO TIGHTEN THE BOLTS, MAKE SURE ALL BOLTS ARE FULLY TIGHTENED.

STICK ON THE ANTISLIP PADS (5) ONTO THE BOTTOM OF THE LEGS AS SHOWN.

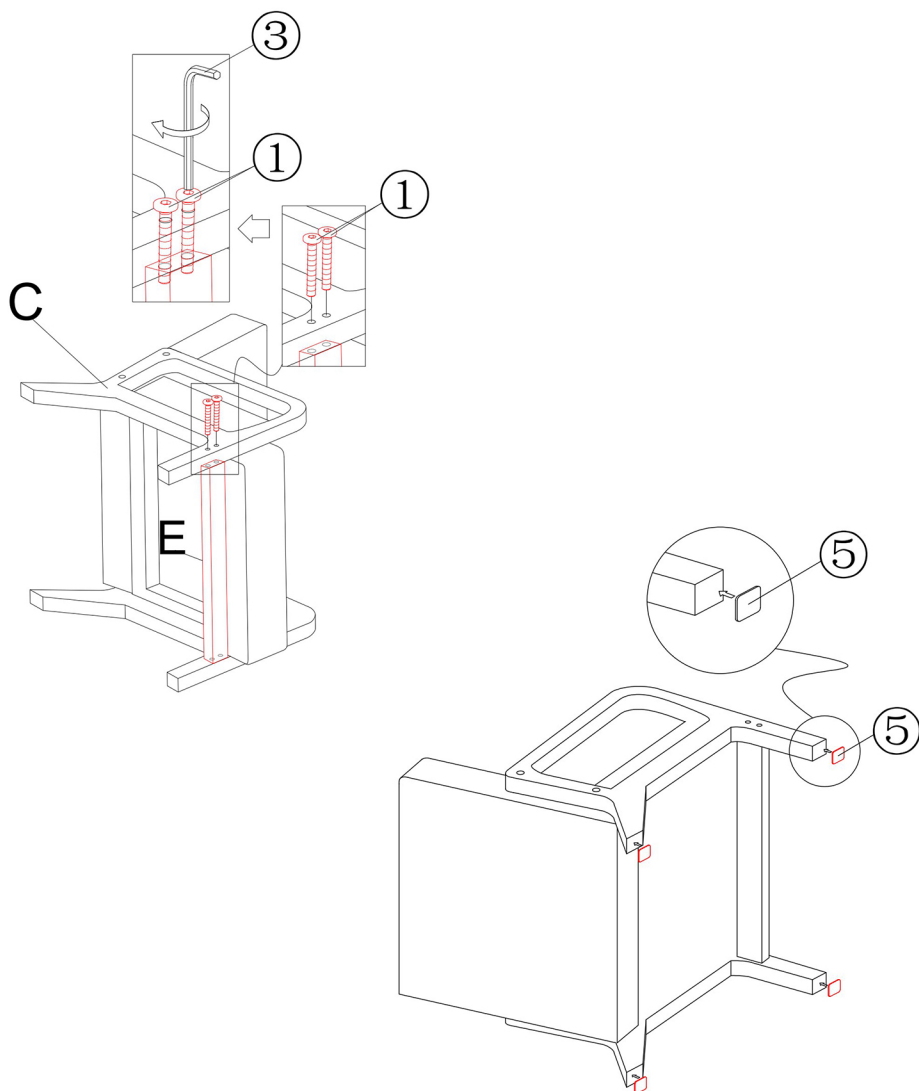

# step 7

INSERT THE PLASTIC COVERS (4) INTO EACH HOLES OF THE BOLT AS SHOWN.

PLACE THE WAIST PILLOW, THE ASSEMBLY IS COMPLETE

