

Product Assembly Instructions

Item #: LCLABASBUE26 / LCLABAAGSG26 Landyn Counter Height Non Swivel Stool LCLABASBUE30 / LCLABAAGSG26 Landyn Bar Height Non Swivel Stool

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment. Please identify and count all parts and compare with the HARDWARE LIST below.

Caution: Please read instructions carefully before unpacking assembly parts. Sharp, exposed staples can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


- * Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. *
- 1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process, and can help eliminate self injuries or damage to the product during assembly.
- 2. Please do not over tighten screws or bolt until the assembly is completed.
- 3. Please put all parts on a smooth, flat surface before assembly, and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.




PARTS LIST			
NO.	COMPONENT		QTY.
Α	Back Panel		1 pc
В	Box Seat		1 pc
С	Front Leg - Left (CL)		1 pc
D	Front Leg - Right (CR)	•	1 pc
Е	Short Stretcher		1 pc
F	Long Stretcher		1 pc
G	Cushion Seat		1 pc

HARDWARE LIST				
NO.	COMPONENT		QTY.	
1	JCBC Bolt M6 x 40mm		3 pcs	
2	JCBC Bolt M6 x 50mm		4 pcs	
3	JCBC Bolt M6 x 70mm		4 pcs	
4	1/4" Spring Washer	©	11 pcs	
5	1/4" Flat Washer	\odot	11 pcs	
6	CB Screw M4 x 25mm	-amm	2 pcs	
7	CB Screw M4 x 32mm		3 pcs	
8	CB Screw M4 x 38mm	-cammung	2 pcs	
9	Allen Key M4 x 65mm		1 pc	

^{*} Phillips screwdriver not included *

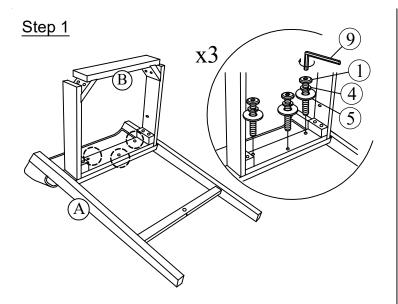


1) Attach Box Seat (B) into the Bank Panel (A) by using 3pcs JCBC bolts (1), 3pcs spring washers (4) and 3pcs flat washers (5). Use Allen Key (9) to secure. Do not fully tighten from this step.

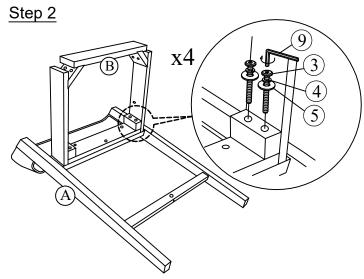

 Insert 4pcs JCBC bolts (3), 4pcs Spring Washers (4) and 4pcs Flat Washers (5). Use Allen Key (9) to tighten all the bolts securely for this step.


Step 3


Attach Front Leg - Left & Right (C & D) into the Box Seat (B) by using 4pcs JCBC bolts (2), 4pcs Spring Washers (4) and 4pcs Flat Washers (5). Use Allen Key (9) to secure.Do not fully tighten from this step.

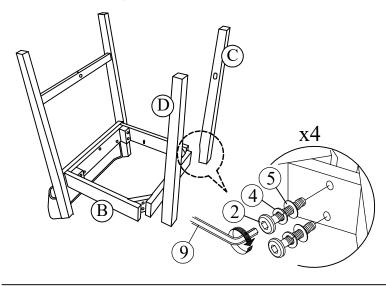

Step 5

Place the seat (H) underneath. Insert 3pcs screw (7) by using Phillips screwdriver to drive and tighten them securely.

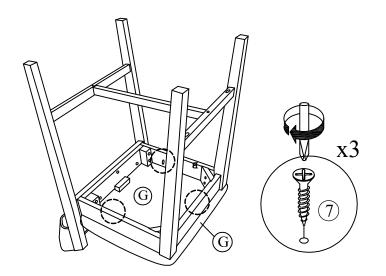

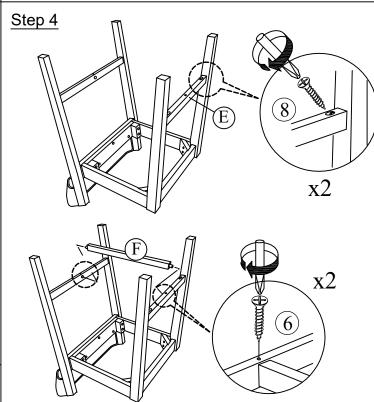

- Insert the Short Stretcher (E) into the Chair Leg . Insert 2pcs screw
 by using Phillips screwdriver to secure.
- Insert the Long Stretcher (F) into the Chair Leg . Insert 2pcs screw
 by using Phillips screwdriver to drive and tighten them securely.
- 3) Tighten all the bolts securely.

