

Item # : LCHABAWHFG26 / LCHABAAGDU26 Harper Counter Height Non Swivel Stool LCHABAWHFG30 / LCHABAAGDU30 Harper Bar Height Non Swivel Stool







Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.







Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

*** Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. ***

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.




PARTS LIST			
NO.	COMPONENT		QTY.
A	Back Panel		1 pc
B	Seat Base		1 pc
C	Swivel Base		1 pc
D	Footrest Ring		1 pc
E	Chair Leg		4 pcs
F	Cushion Seat		1 pc

HARDWARE LIST			
NO.	COMPONENT		QTY.
1	JCBC Bolt M6 x 40mm		18 pcs
2	JCBC Bolt M6 x 30mm		4 pcs
3	1/4" Spring Washer		22 pcs
4	1/4" x 16 x 2mm Flat Washer		18 pcs
5	CB Screw M4 x 32mm		4 pcs
6	Allen Key M4 x 65mm		1 pc


* Phillips screwdriver not included *

Step 1

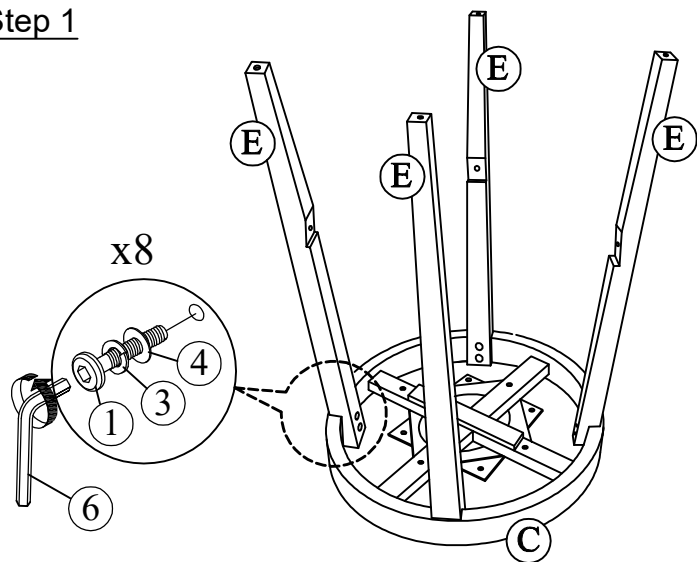


- 1) Attach Chair Leg (E) to the Swivel Base (C) by using 8pcs JCBC bolts (1) , 8pcs spring washers (3) and 8pcs flat washers (4). Use Allen Key (6) to secure . Do not tighten all the bolt from this step.

Step 2

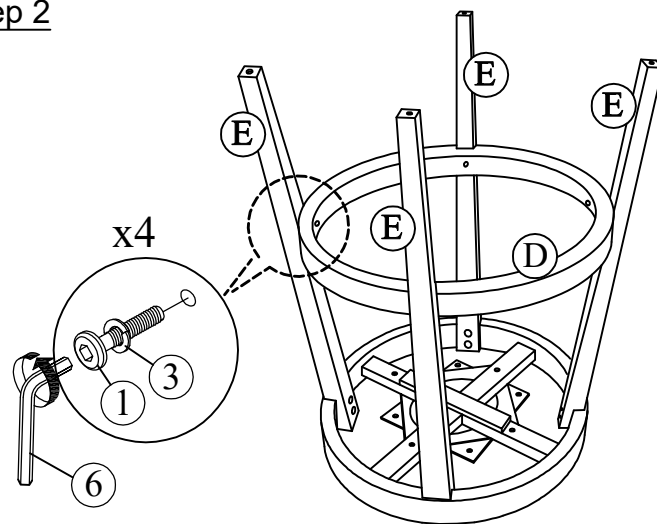


- 1) Attach Footrest Ring (D) to the Chair Legs (E) by using 4pcs JCBC bolts (1) and 4pcs Spring Washers (3) . By using Allen Key (6). Tighten all the bolts securely.

Step 3

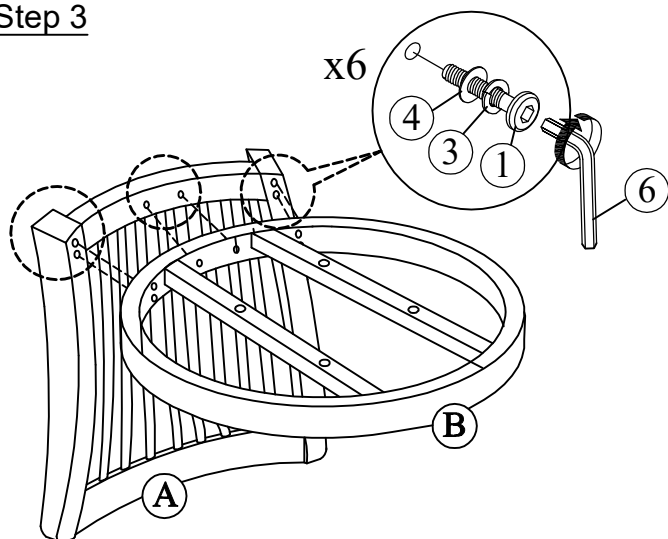


- 1) Attach Seat Base (B) to the Back Panel (A) by using 6pcs JCBC bolts (1) , 6pcs spring washers (3) and 6pcs flat washers (4). By using Allen Key (5) to secure . Fully tighten all the bolt.

Step 4

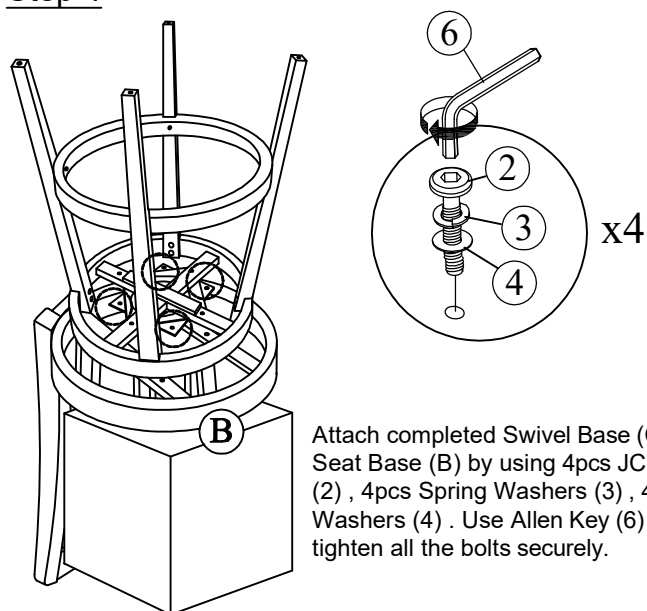

Attach completed Swivel Base (C) to Seat Base (B) by using 4pcs JCBC bolts (2) , 4pcs Spring Washers (3) , 4pcs Flat Washers (4) . Use Allen Key (6) to tighten all the bolts securely.

Step 5

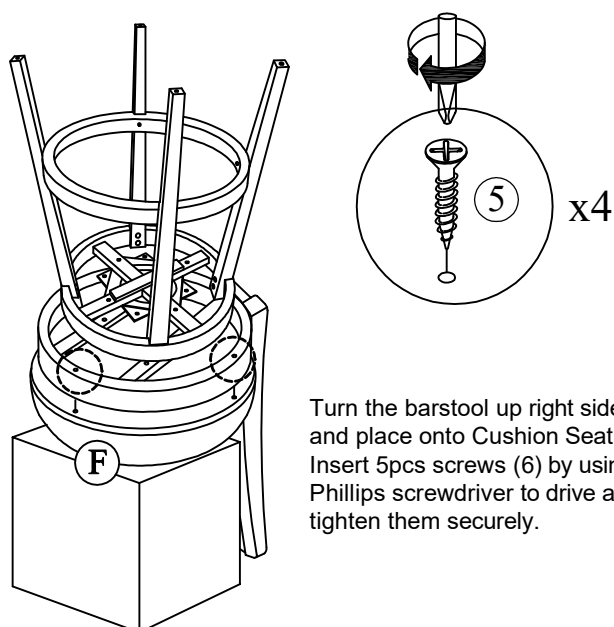

Turn the barstool up right side and place onto Cushion Seat (F). Insert 5pcs screws (6) by using Phillips screwdriver to drive and tighten them securely.

