

OFFICE CHAIR

ASSEMBLY INSTRUCTIONS

9400



ATTENTION









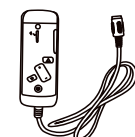
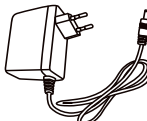
1. This chair comes in 1 box, please check the part list carefully to make sure you've received all the parts.
2. If there're any missing parts, please contact us with the part # and quantity, we will send them to you ASAP.
3. If there're any damaged parts, please contact us with clear pictures or video, we will offer you the best solution after confirming it.

NOTE







1. If one or some screws are fully tightened during assembly, the other screws may not be aligned with screw holes. 70% tighten before fastening all screws. Allen wrench is recommended instead of an electric drill.
2. If some screws are not aligned with holes during assembly, please loosen all the other screws to 70% and continue the assembly process.
3. If the items is not stable, please loosen all the screws, adjust it on a flat ground and tighten all the screws.

Assembly Instruction

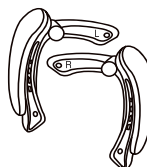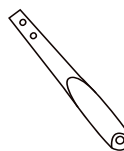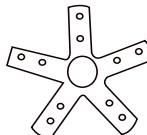Parts List

A	B	C	D	E	F
					
1 pc	1 pc	2 pcs	5 pcs	1 pc	5 pcs
G	H	I	J		
					
1 pc	1 pc	1 pc	1 pc		

Hardware List

#1	#2	#3	#4	#5	#6
					
M6*16mm	M6*30mm	M8*45mm	M8*20mm		
10 pcs	4 pcs	4 pcs	3 pcs	4 pcs	1 pc

Please note: Please check carefully if there are any missing parts before installation. If there are any missing parts, please place all the parts and take pictures then tell us the missing part number. We will reply you as soon as possible.

Assembly Instruction

Office Chair Assembly


Step 1

D*5

F*5

E*1

#1*10

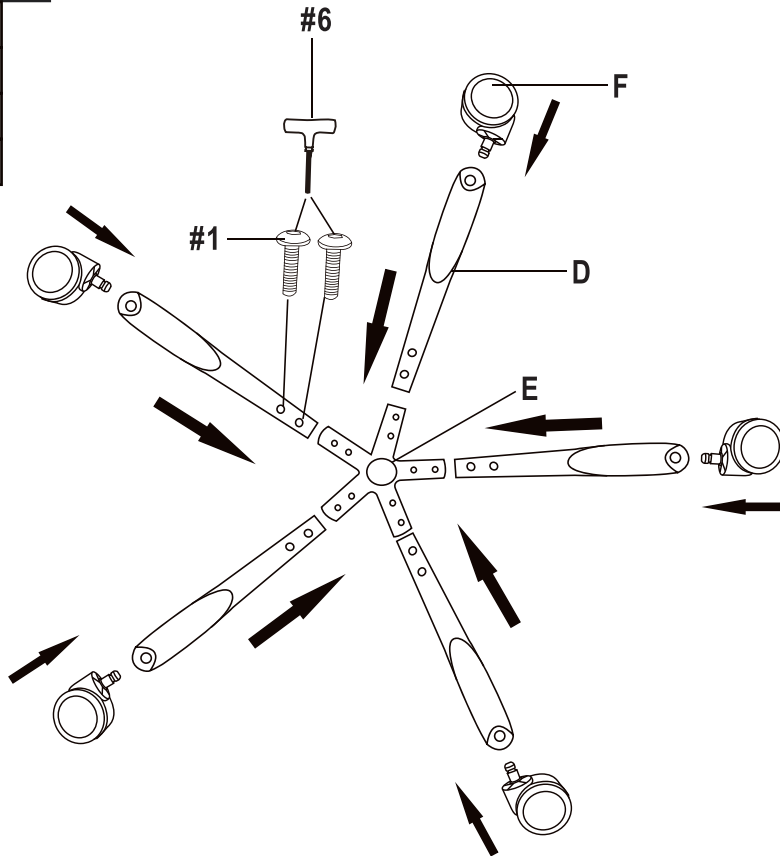


First, we need to prepare the connector (E), 5* metal feet (D), 5* universal wheels (F), 10*16mm screws (#1) and a wrench (#6). Then, according to the figure, insert the 5* metal feet into the connector, align the screw holes, install the screws and tighten them. Finally, a universal wheel is installed on the tail of each metal foot.

Assembly Instruction

Office Chair Assembly


Step 9

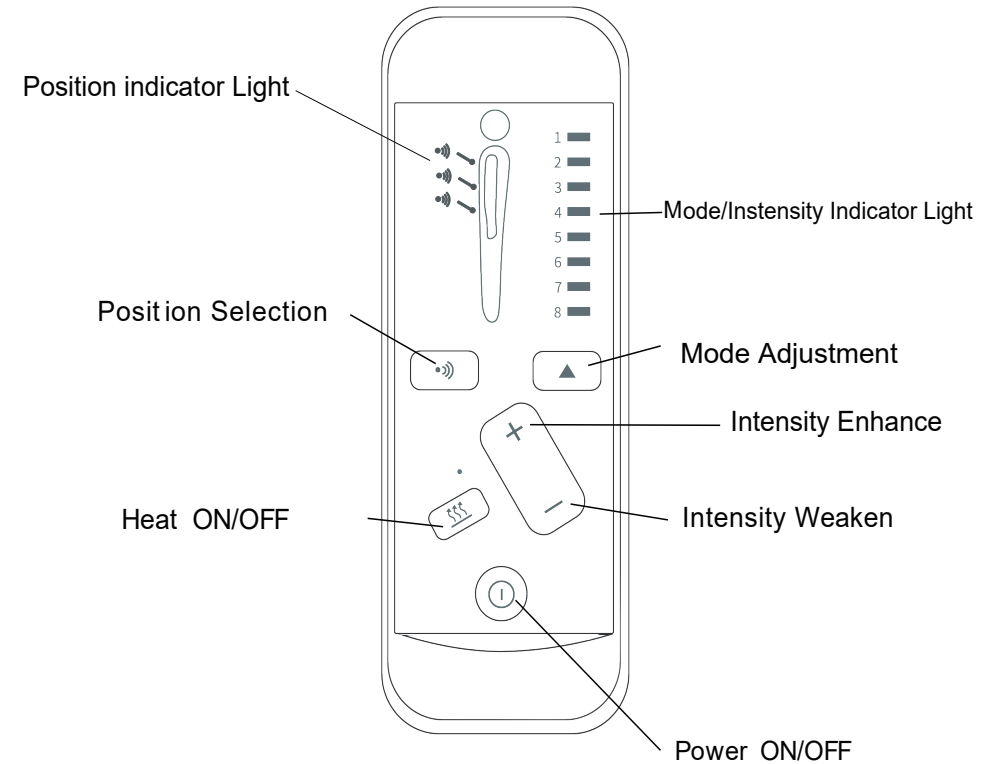

Assembly Instruction

Office Chair Assembly

Step 8

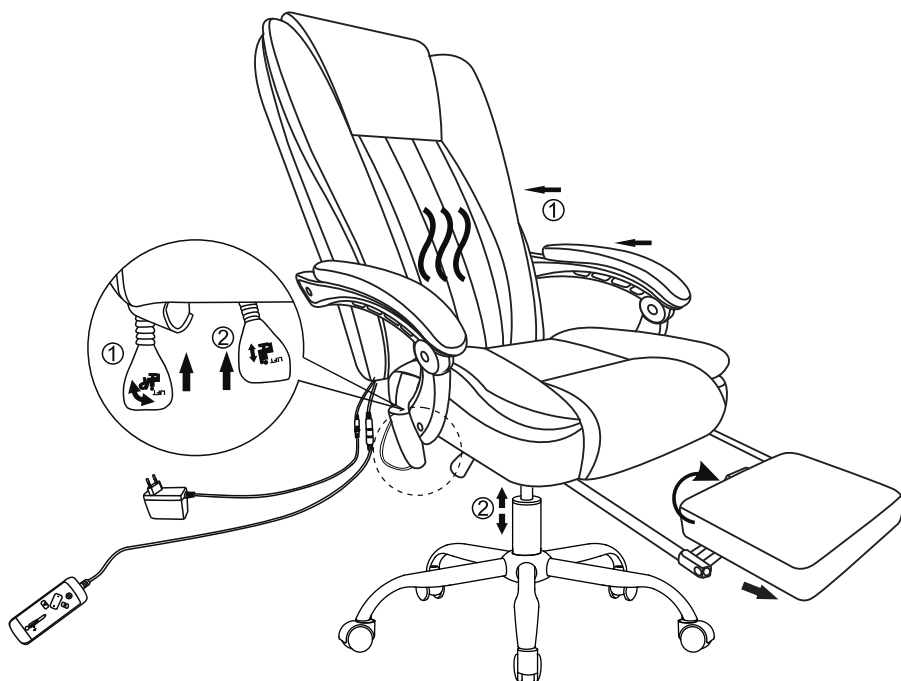


6

Assembly Instruction

Office Chair Assembly

Step 2

G*1

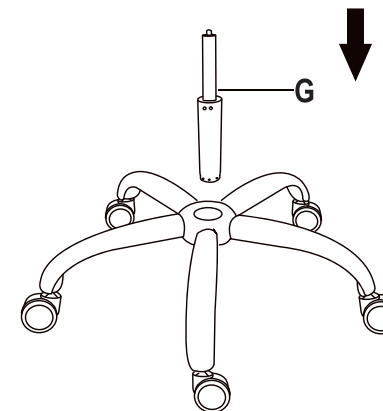


Step 3

#2*4

H*1

A*1

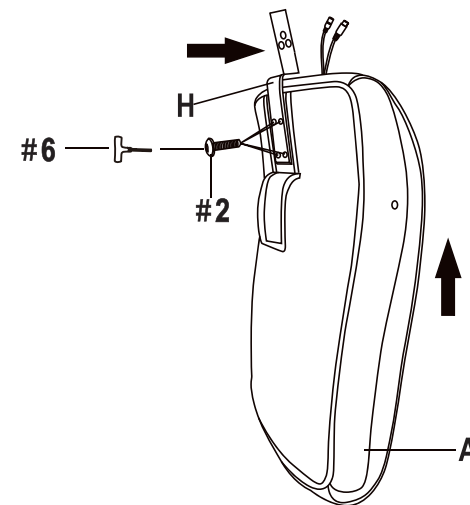

As shown in the figure, insert the connecting piece 'H' into the interface at the bottom of the backrest and fix it with 4 screws numbered '#2'.

3


Assembly Instruction

Office Chair Assembly

Step 4

B*1

#4*3

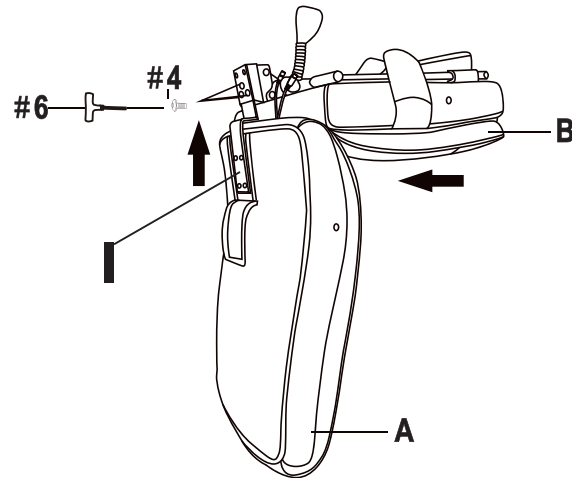


As shown in the figure, insert the other end of the connecting piece 'H' into the interface behind the cushion and fix it with 3 screws numbered '#4'.

Step 5

C*2

#3*4

#5*4

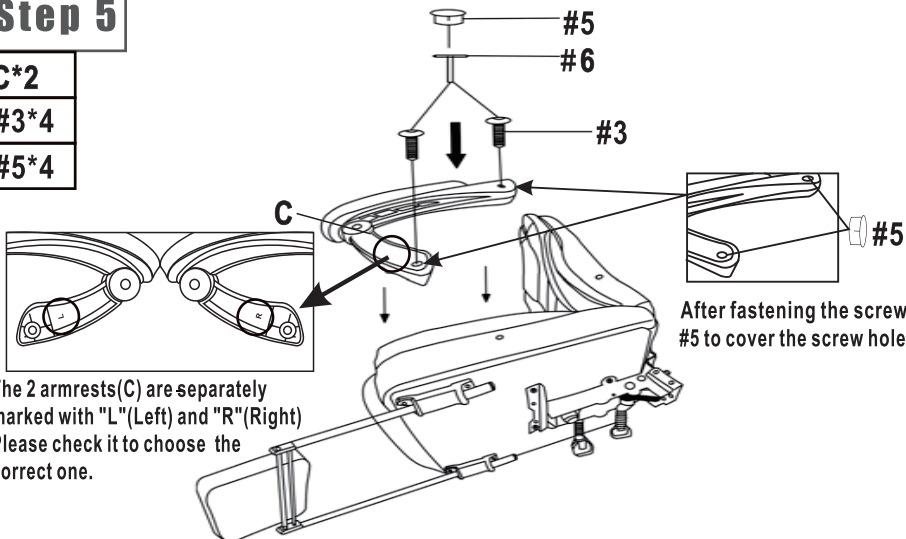

The 2 armrests(C) are separately marked with "L"(Left) and "R"(Right) Please check it to choose the correct one.


After fastening the screws, use part #5 to cover the screw holes

4

Assembly Instruction

Office Chair Assembly


Step 6

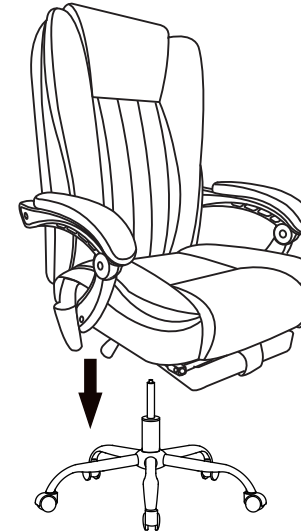

Step 7

J*1

I*1

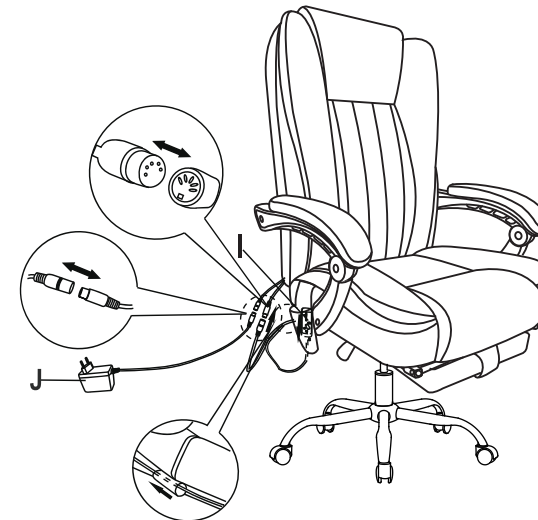

5