
Let's build the


Solace Storage Cabinet

4

SKU 31251

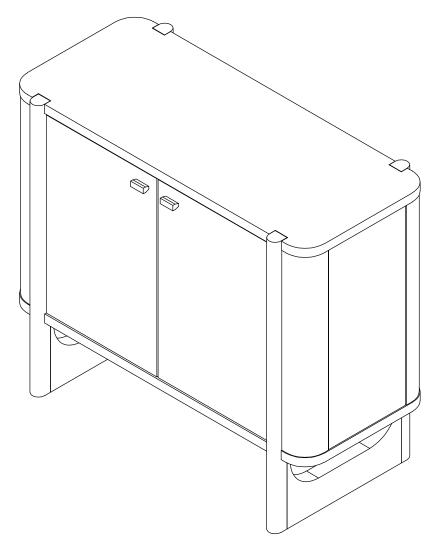



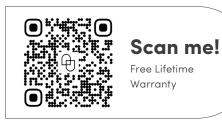

nathan james

Ok, let's get rolling

This should be easy, just follow our instructions and you will be back to Netflix in no time.


Estimated time for assembly



45:00

What you need

- Phillips-head screwdriver
- 5 /16" Drill Bit OR 1 /4" Drill Bit
- Drill
- Some of your favourite bubbly or your preferred relaxant
- Use the packaging carton as a working surface to prevent product damage during assembly

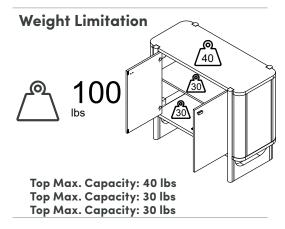


Toll-free at 1-866-619-1004 Help@nathanjames.com Nathanjames.com/help

	Description	Qty
Α	Right Side Panel	1
В	Upper Back Stretcher	1
С	Left Side Panel	1
D	Bottom Panel	1
Е	Back Panel	1
F	Top Panel	1
G	Right Door	1
Н	Left Door	1
ı	Shelf	1





The goods

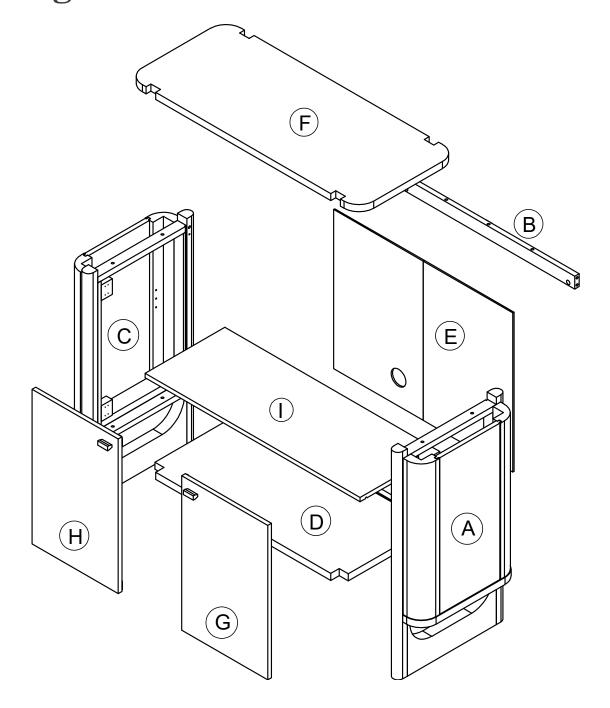


IMPORTANT

- 1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2. Do not over tighten screws and bolts to avoid stripping.

What's included

	Description	Qty
1	Magnetic Door Catches	2
2	Ø8x30mm Wooden Dowel (Extra 2pcs)	5
3	Cam Bolt	2
4	Cam Lock	2
5	Ø1/4" x 35mm Hex Button Head Bolt	8
6	Ø1/4" x 55mm Hex Button Head Bolt	2
7	M3 x15mm Screw	4
8	Ø1/4" x 10mm Spring Washer	10
9	Ø1/4" x 13mm Flat Washer	10
10	M3.5 x15mm Screw (Extra 2pcs)	26
11	Allen Key	1
12	Shelf Support Pin	4
13	Leveler (Extra)	2
14	Hinge	4
15	Drywall Anchor (for anti-tip kit)	2
16	Plastic Bracket (for anti-tip kit)	2
17	Non - Drywall Anchor (for anti-tip kit)	2
18	M4x50mm Screw (for drywall anti-tip kit)	2
19	Plastic Strap (for anti-tip kit)	1
20	M3.5x15mm Screw (for non-drywall anti-tip kit)	2

The goods

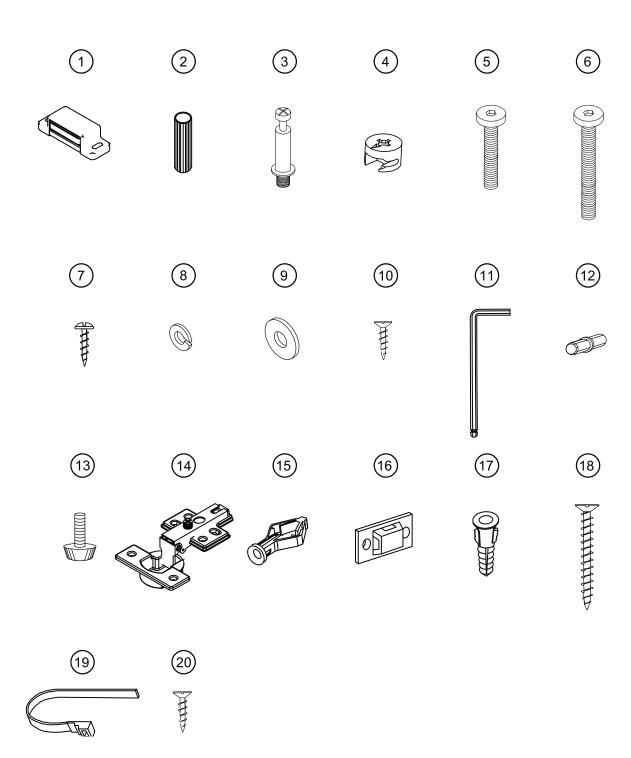








Let's get started!

Fist, attach the Magnetic Catches (1) to the Top Panel (F) and the Bottom Panel (D) using the Screws (7).

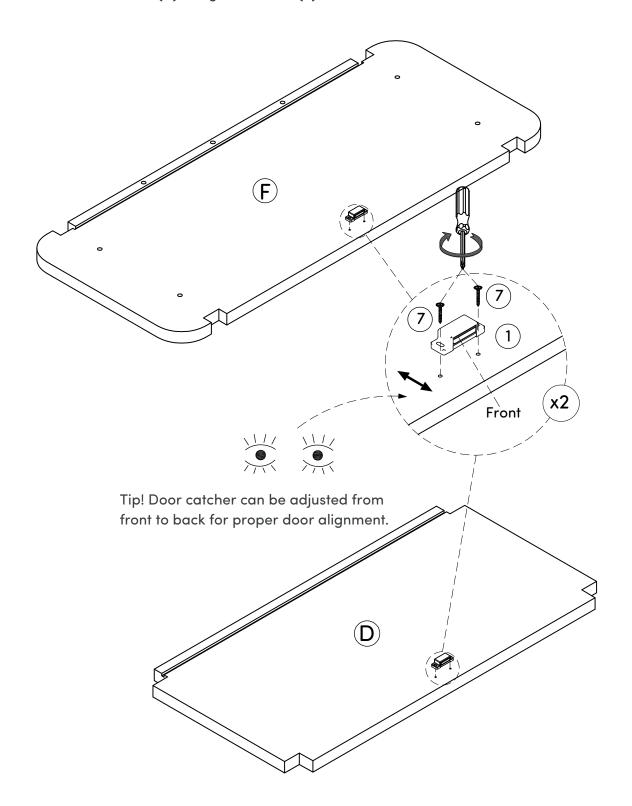


Next, lay out the Left Side Panel (C) and the Right Side Panel (A) on a soft surface or towel in front of you. Insert the Cam Bolts (3) into the designated holes following the image below.

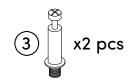


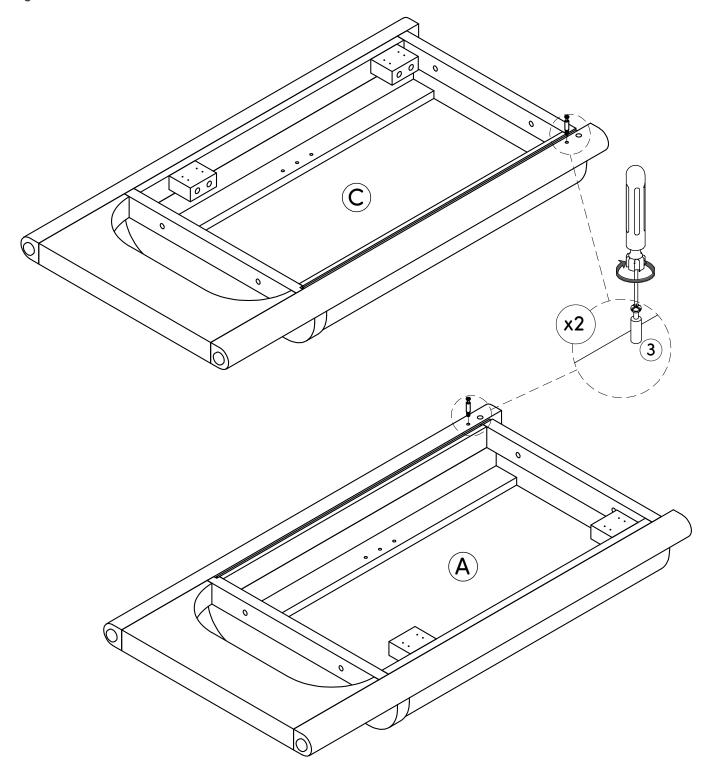


5 x2 pcs 8 x2 pcs 9 x2 pcs

Attach the Left Side Panel (C) to the Bottom Panel (D) using the Hex Button Head Bolts (5), as well as both washers (8)(9).

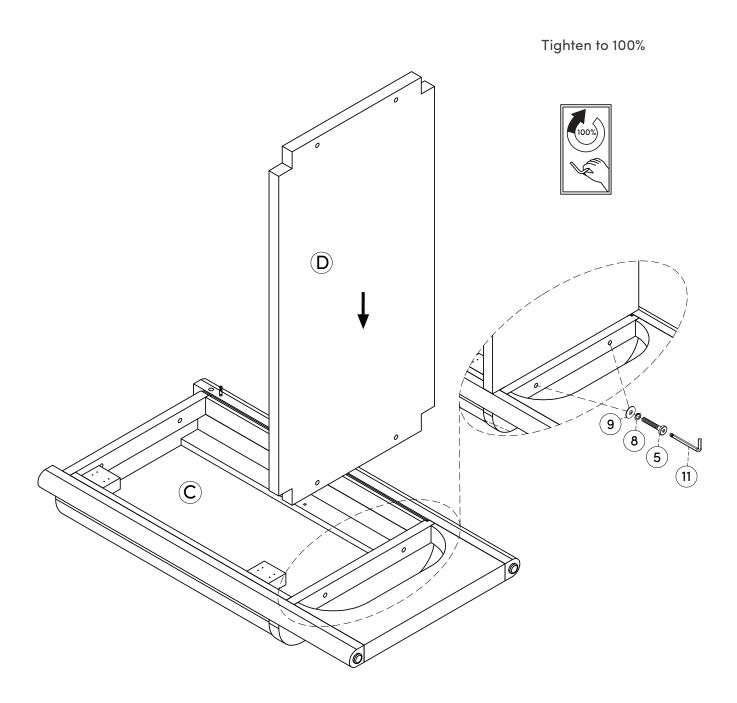

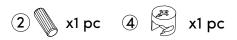

Attach the Left Side Panel (C) to the Upper Back Stretcher (B) onto the Wooden Dowels (2) and push together. Finish this step by using Cam Locks (4) to secure in place. See the next page for instructions on using Cam Locks.

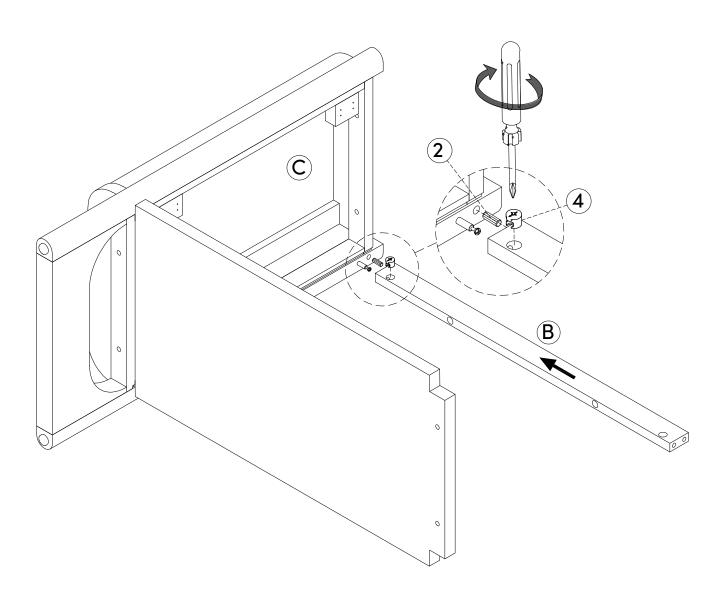


How to use cam locks

Did you know?

Cam locks are used to join two panels together, usually the edge of one to the flat side of another.


First, your cam bolt (or cam pin) will need to be properly inserted into the flat side of the board.

Important Note: Only tighten the cam bolt until it is secure. Do not over-tighten.

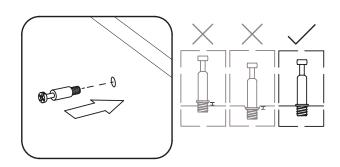


Next, you will fit the proper hole on the edge of the associated joining panel over the cam bolt.

Important Note: When installed properly, the head of the cam bolt will be visible through the larger hole on the side of the joining panel.

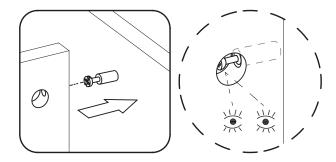


Next, you will notice the cam lock has a "C" shaped back. Commonly, an arrow on the front of the cam lock points in the same direction as the open section on back.

Using these as your cue, insert the cam lock into the large hole so the opening of the "C" fits over the head of the cam bolt.

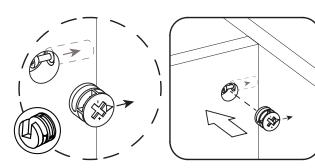

Using a screwdriver, you will turn the cam lock until it stops, usually between 130° or 180°. You will feel the panels pulling closer until they are secured.

Important Note: Only turn the cam lock until the panels are fully engaged & feel secure. Turning too far may lead to hardware failure.

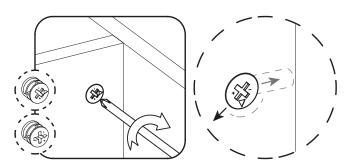

Still having issues?


If a cam lock seems to be spinning in place or is not "catching" or pulling the panels together as expected, first remove the cam lock & try again while making sure that everything is properly positoned & oriented.

If you are still having issues getting things work ing as expected, first remove the cam lock then unscrew the cam bolt slightly (less than 1 complete turn) to see if that helps with the alignment of the cam lock & bolt.




Next, attach the Right Side Panel (A) to the pieces you assembled in Step 4. Do this by inserting Wooden Dowels (2) into the coordinating holes, then push together.

Secure in place using the Cam Lock (4) and the Hex Button Head Bolts (5). Be sure to use the Flat Washers (9) and Spring Washers (8) on your bolt before securing. Tighten using the provided Allen Key (11).

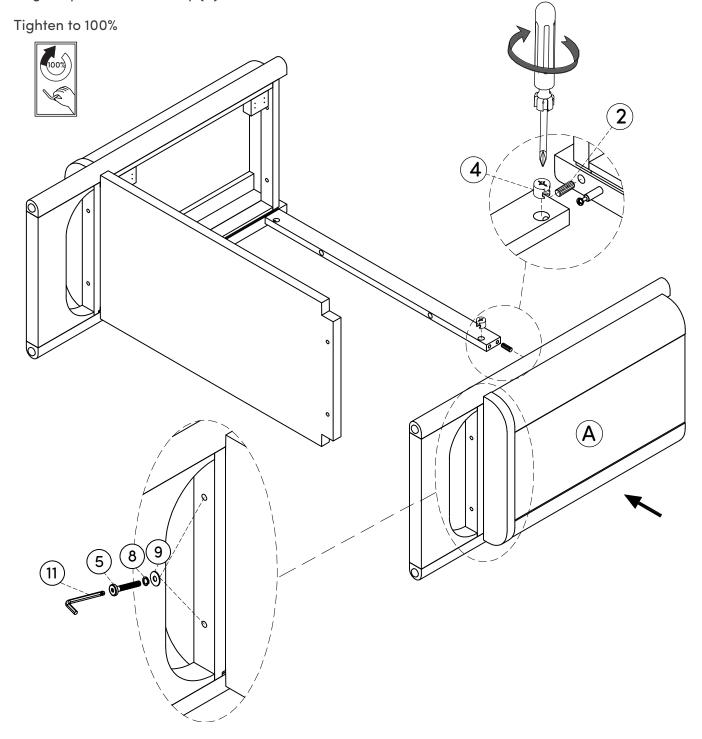

Unfold the Back Panel (E) and slide it into place on the cabinet. It should fit smoothly into the grooves.

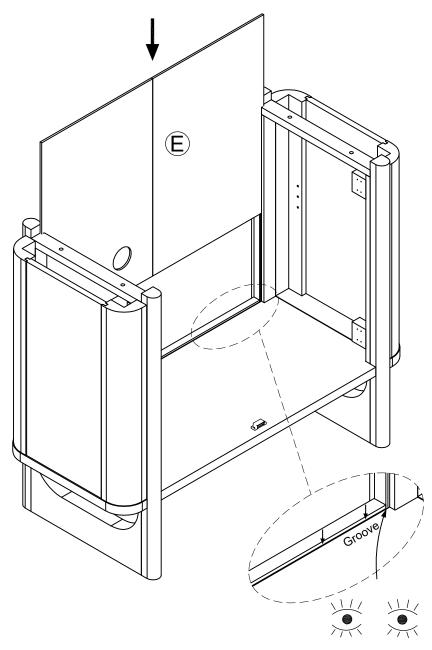


Tip: The back panel needs to be inserted vertically into the groove in the side panel.



It's time to install the shelf! First, attach the four Shelf Support Pins (12) at your desired height. Then, insert the Shelf (I) in the unit by tilting it, as shown below.


Next, rotate the Shelf (I) back to its original flat position and place it onto the

Shelf Support Pins (12).

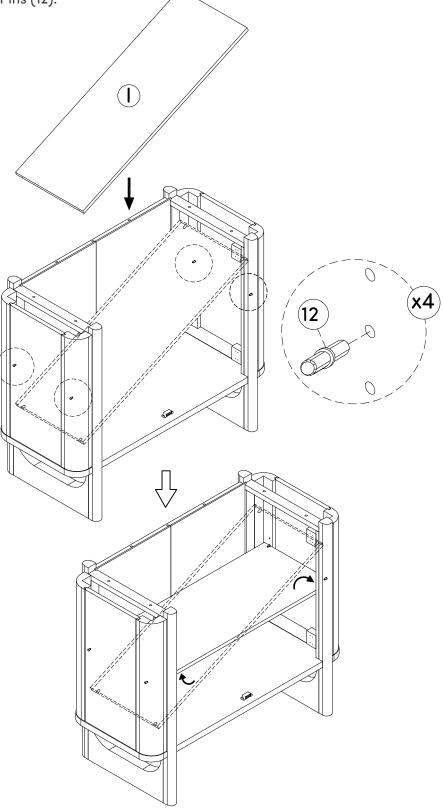




Now it's time to attach the Top Panel (F) to the pieces you assembled in Step 7 using a Wooden Dowel (2). Secure in place using the Bolts (5) with Spring Washers (8) and Flat Washers (9). Tighten using the Allen Key (11).

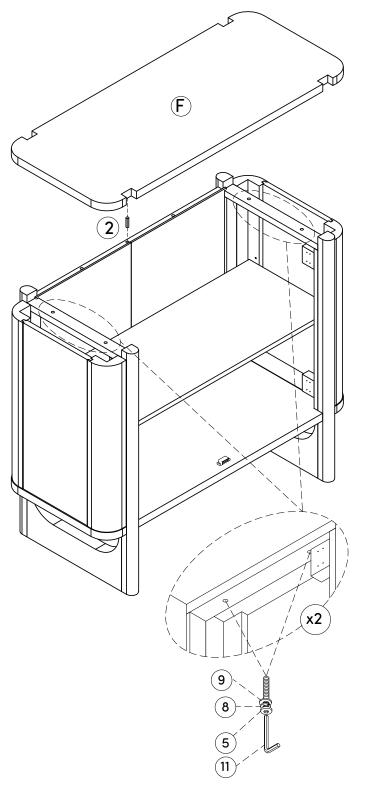


Tighten to 100%





Secure the Top Panel to the Upper Back Stretcher using the Hex Button Head Bolts (6). Be sure to use the Flat Washers (9) and Spring Washers (8) on your bolts before securing. Tighten using the provided Allen Key (11).

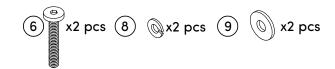

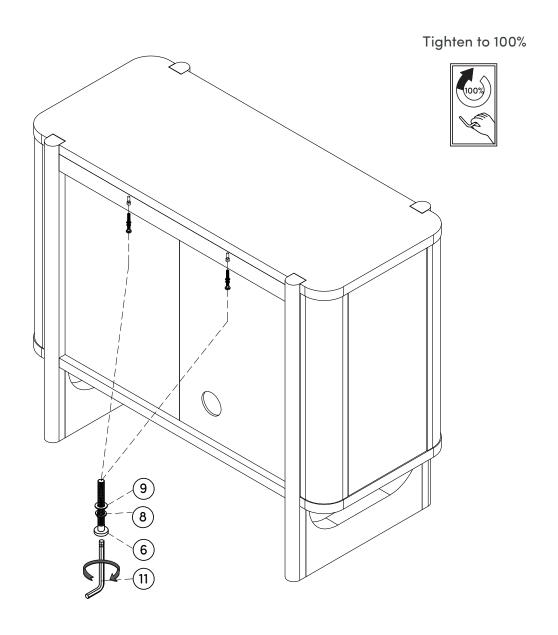

Let's get started on the Doors (G)(H)! Attach the Hinges (14) to the doors using two of the Screws (10) per hinge.

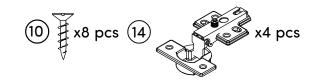


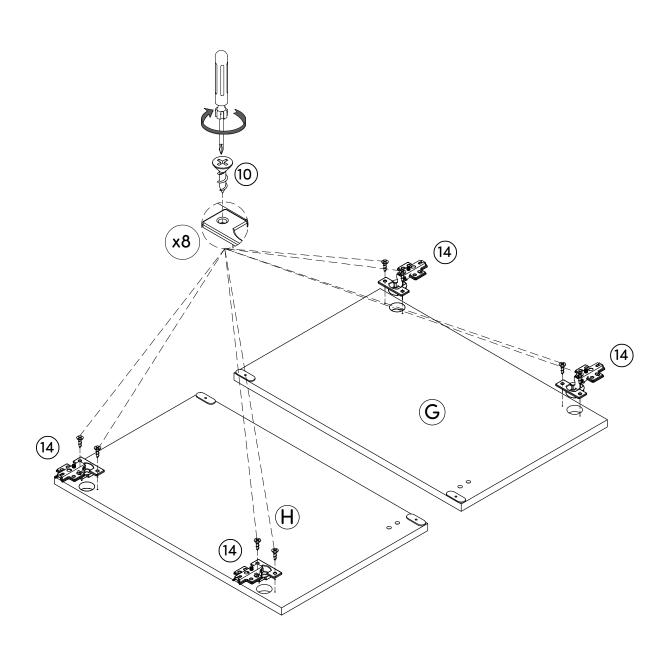




Time to get out those muscles! Flip the unit upright (you might need a friend for this) and then it's time to attach the doors!


Attach the doors by securing the Hinges (14) to the cabinet using the Screws (10).

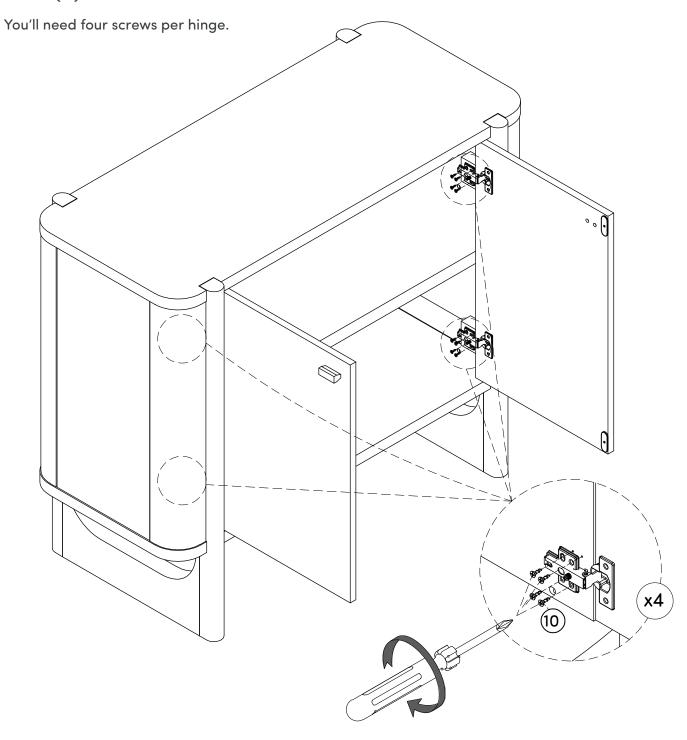


Is your cabinet door looking crooked or unevenly spaced?


Then you've come to the right place. Follow the illustrations below to get your cabinet door aligned and ready for action.

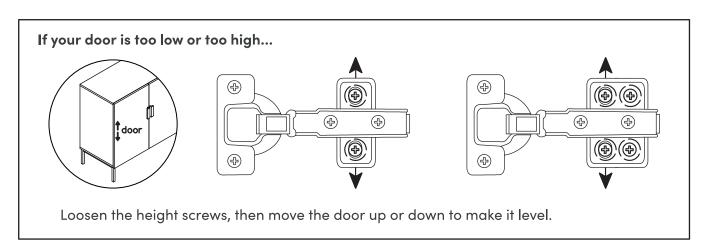

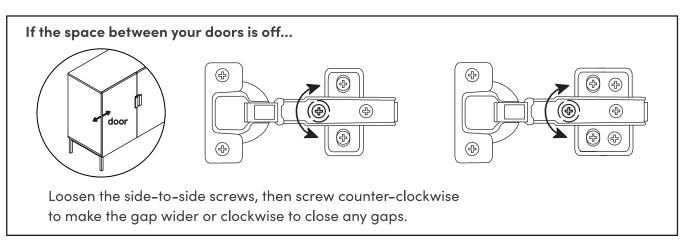

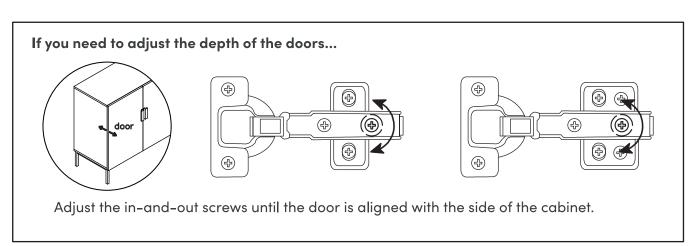

Now go ahead and check that your cabinet is level. If it's looking a little unlevel, adjust the levelers on the feet until it's nice and level.

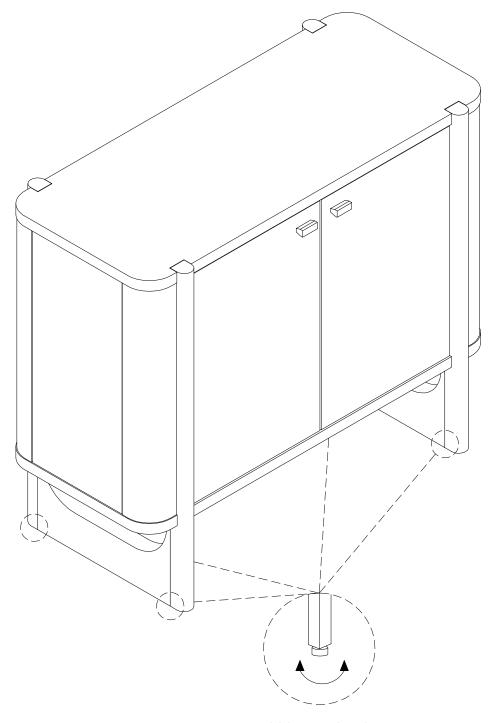


Wobbly or unlevel?

Adjust feet until stable!


Is your cabinet door looking crooked or unevenly spaced? (Cont.)

If you're still having trouble lining everything up, your next step should be to adjust the leveling glides to square up the cabinet and doors and make sure things are level. Follow the instructions below:


If the right door appears to be hanging low, you can adjust the adjustable leveler on the front right until the door is better aligned.

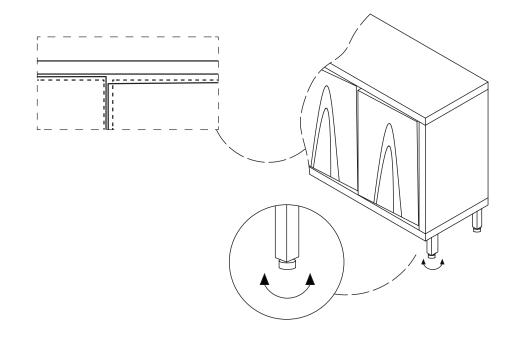

If the left door appears to be hanging low, you can adjust the adjustable leveler on the front left until the door is better aligned.

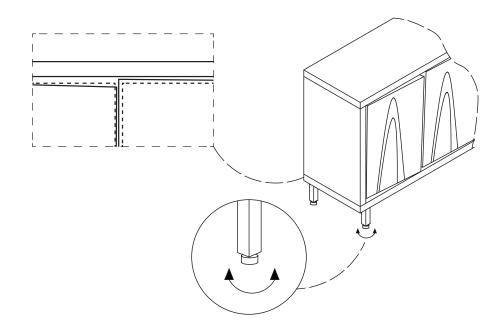


How to Use Drywall Anchors

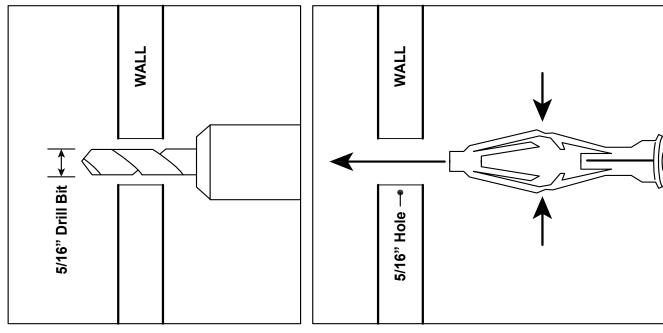

1. Drill hole with 5/16" bit.

2. Pinch and insert.

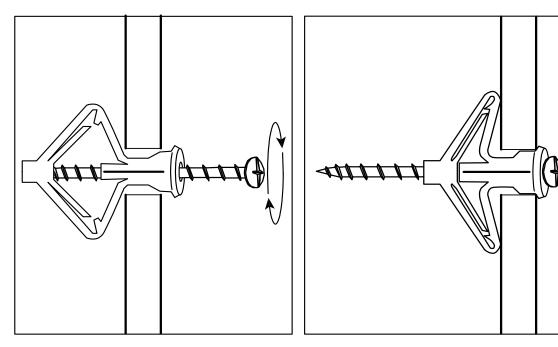


3. Begin tightening.

4. Anchor is secure when screw istightened to 100%/






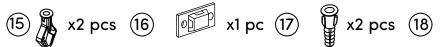



Safety first! Use the wall anchor to secure your storage unit to the wall. You'll need a drill and proper sized drill bit for this step.

First drill a hole for the proper wall anchor into the wall. Insert the Wall Anchor (15) or (17) in the hole, then secure the Plastic Bracket (16) to the wall using the Screw (18).

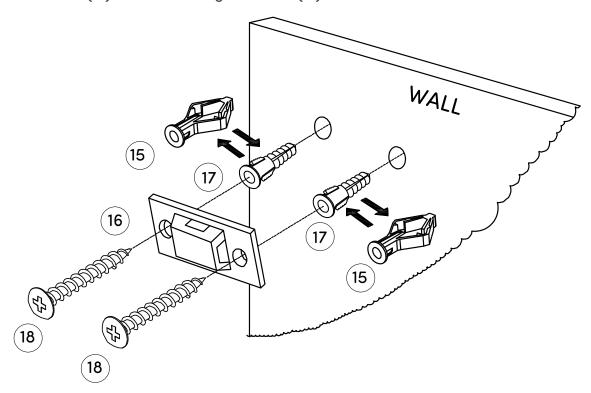

IMPORTANT NOTE:

Non-Drywall Anchor (17) requires a 1/4" Drill Bit Drywall Anchor (15) requires a 5/16" Drill Bit.

IMPORTANT NOTE:

Young children (and/or pets) can be seriously injured by tipping furniture units.


You must install the provided anti-tip kit hardware solution, as instructed, to prevent the furniture unit(s) from tipping over - which could possibly lead to injuries or damage.

The provided anti-tip kit hardware solution is intended only as an additional safety measure & deterrent; it is not a substitute for proper adult supervision.

The provided anti-tip kit hardware solution is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased & installed separately.




And now for the final step! Attach the Plastic Bracket (16) to the cabinet using the Screws (20). Finally, thread the Plastic Tether (19) through the Plastic Bracket (16) to secure the cabinet to the wall.

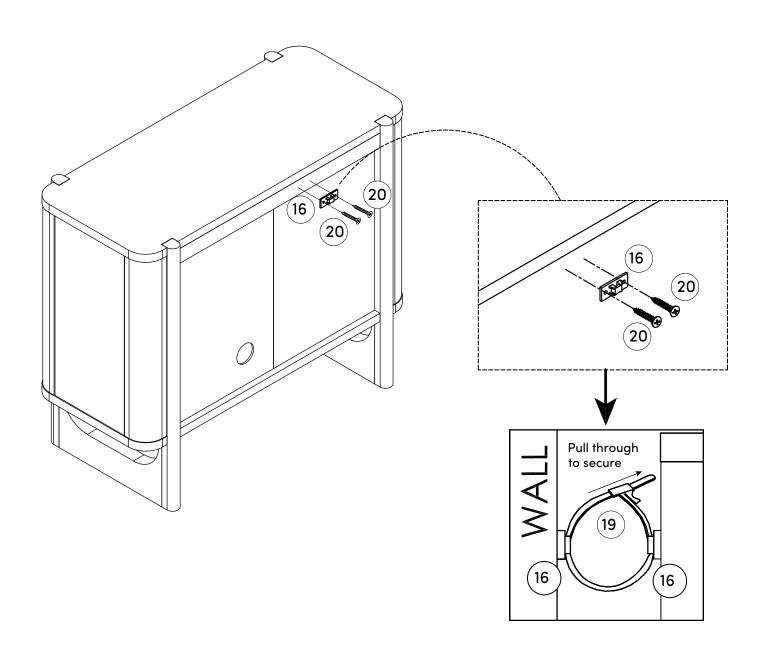

No heartburn, when we handle the return

Give us a call **1-866-619-1004** or shoot us a message at **help@nathanjames.com** we will issue you a free replacement with **zero hassle**.

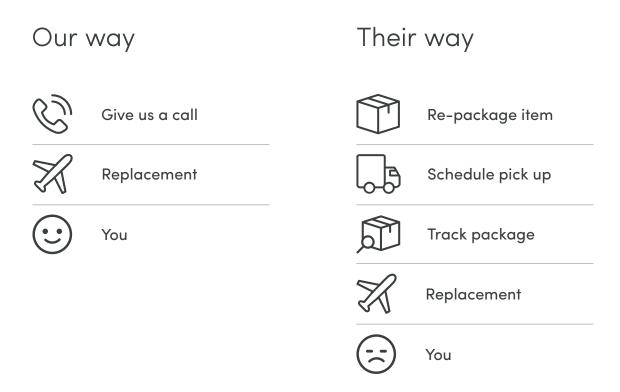

We really don't want you to go through the hassle of re-packaging your item and sending it back, because let's be honest...nobody has time for that.

Safety first, fun later

We want your Storage Cabinet to last as long as possible, so we recommend that you tighten the screws 2 weeks after assembly and for added safety check the tightness of all screws every 2 months.

For proper care and treatment of wood and metal please check our website at Nathanlames.com/products

Safe use of this product starts with you.

Use this storage cabinet responsibly with the primary concern for your safety. Follow assembly instructions carefully and inspect product upon receipt and each use.

Nathan James and its parent companies cannot be held legally responsible for any injuries or death resulted from failure to follow instructions or improper use of this product.

Do not modify the structure of this product in any way.

Our products have been tested to meet specific safety measures as they were originally intended to be sold. Any modifications will present the risk of creating significant safety issues which NI will not be responsible for.

Proper use

DO NOT	use for commercial purposes
DO NOT	climb on storage cabinet
DO NOT	exceed weight limit
DO NOT	leave spilled liquid on storage cabinet
DO NOT	use if storage cabinet is damaged or broken
DO NOT	make temporary repairs
DO NOT	use outdoors

We are only in business if you're happy

For starters, thanks for being you.

Solution Toll-free at 1-866-619-1004

MathanJames.com/help

We do our best to ensure your furniture arrives without any problems, but occasionally mistakes happen—as humans we are imperfect beings. In the event that a part is damaged or missing, we will be more than happy to provide you with replacement part(s) for free.

Warranty

This product comes with a lifetime warranty from the date of purchase. Please use your phone to scan the QR code to register your product or visit https://goo.gl/i9dk3q



Did we do alright? Please spread the love!

If you are happy with your product, tell your friends and family about us or even better leave us a review online. Spreading the word gives us the opportunity to make more people happy and keep our prices low for your next purchase.

Founder, Nathan James