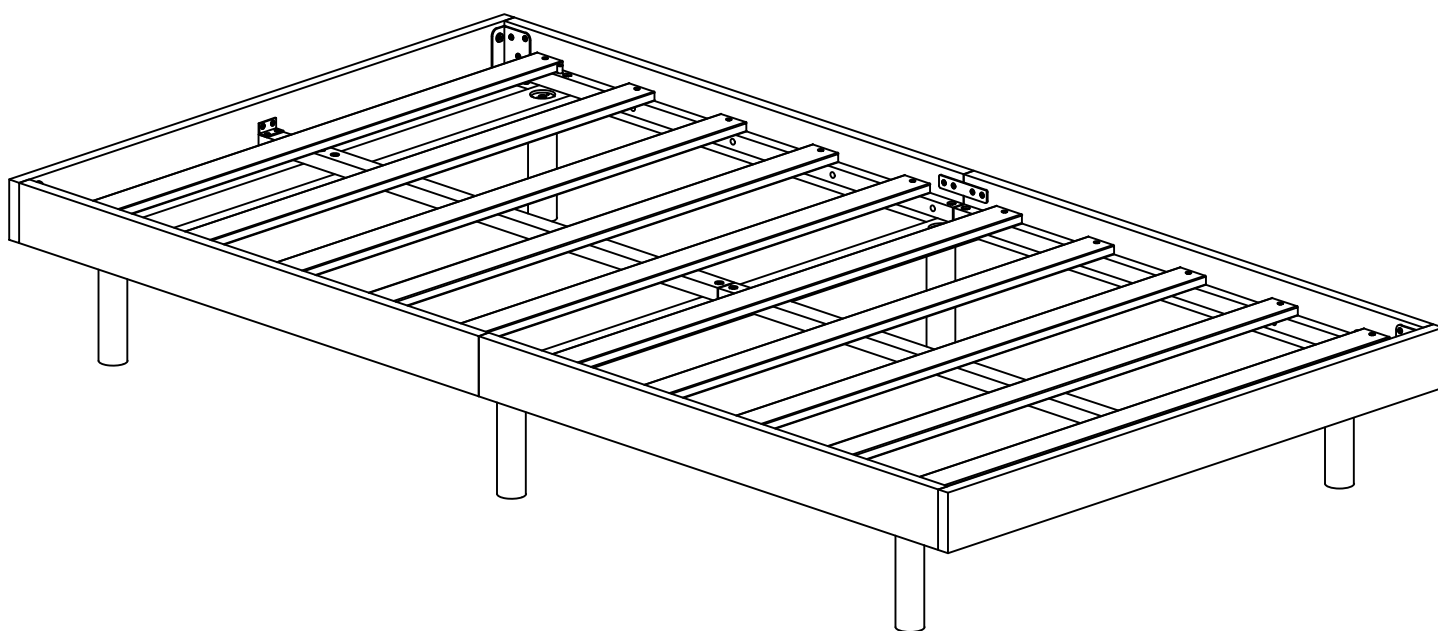


ASSEMBLY INSTRUCTIONS

W697123288


W697123289

W697123290










YX7105

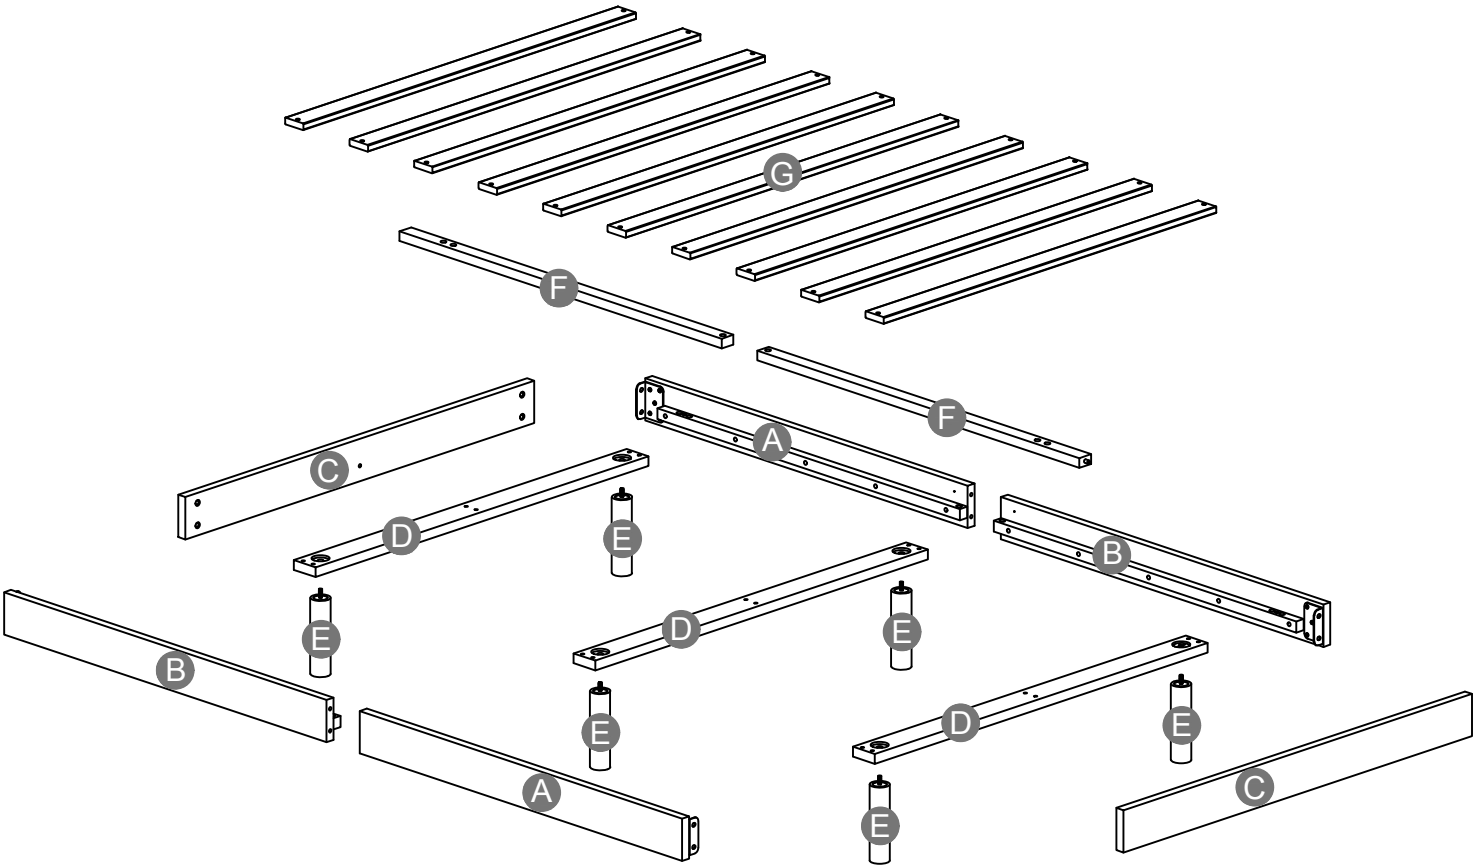








Detail View





Part List

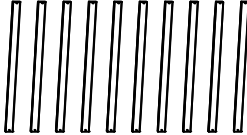A  Side rail(1/2) - 2pcs	B  Side rail(2/2) - 2pcs	C  Horizontal bar HB&FB - 2pcs
D  Support legs - 3pcs	E  Legs - 6pcs	F  Support rail - 2pcs
G  Slats - 10pcs		

Hardware List


1 (Spare Hardware) 1pc  Ø8*25mm Wood dowel (9 pcs)	2 (Spare Hardware) 2pcs  Ø4*16mm Wood screws (18 pcs)	3  100*20*2mm Metal bracket (2pcs)
4  M8*Ø36*17mm T-Nut (6pcs)	5 (Spare Hardware) 1pc  (Ø12)1/4"*15mm Hex-Head bolts (9pcs)	6  Ø4*25mm Wood screws (22 pcs)
7 (Spare Hardware) 2pcs  (Ø12)1/4"*38mm Hex-Head bolts (20pcs)	8  35*18*18*2mm Metal bracket (2pcs)	9  (1/4")4*60mm Allen key (1pc)


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

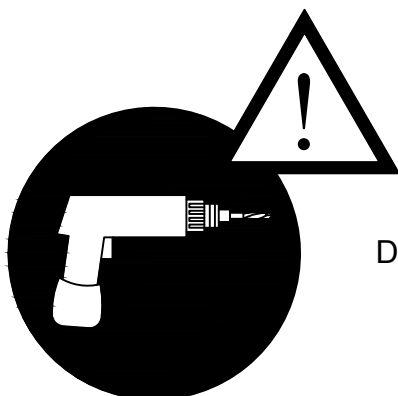


DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !


STEP 1:

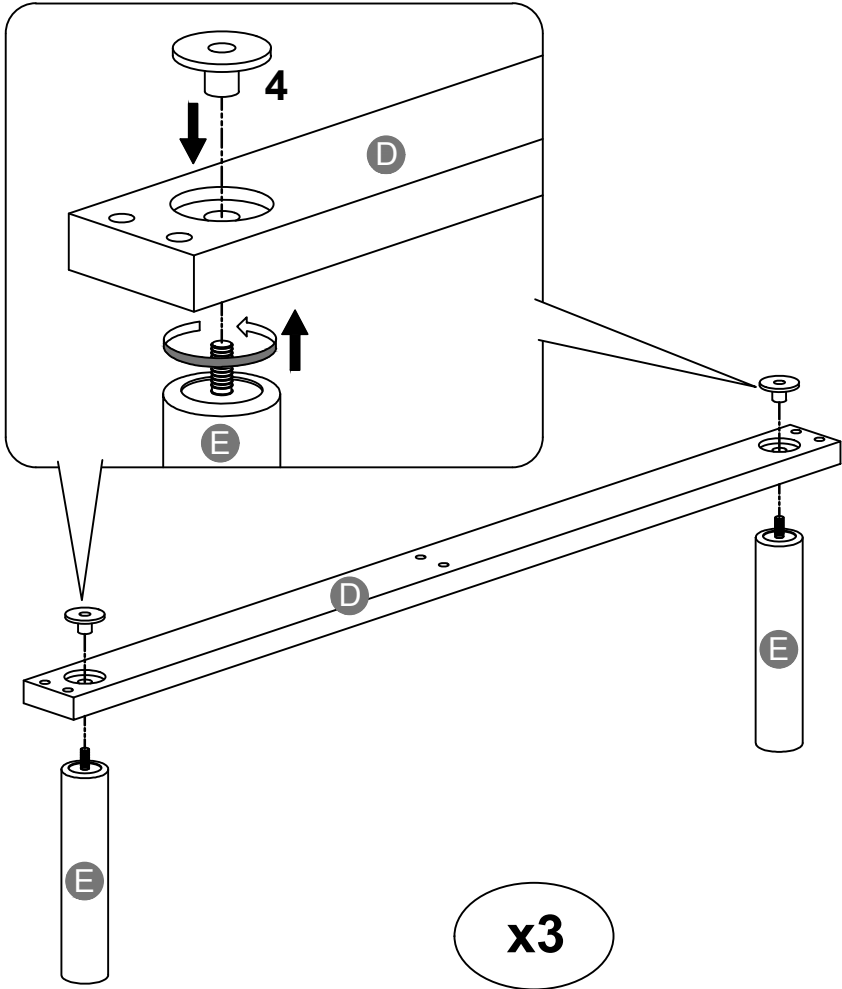



4

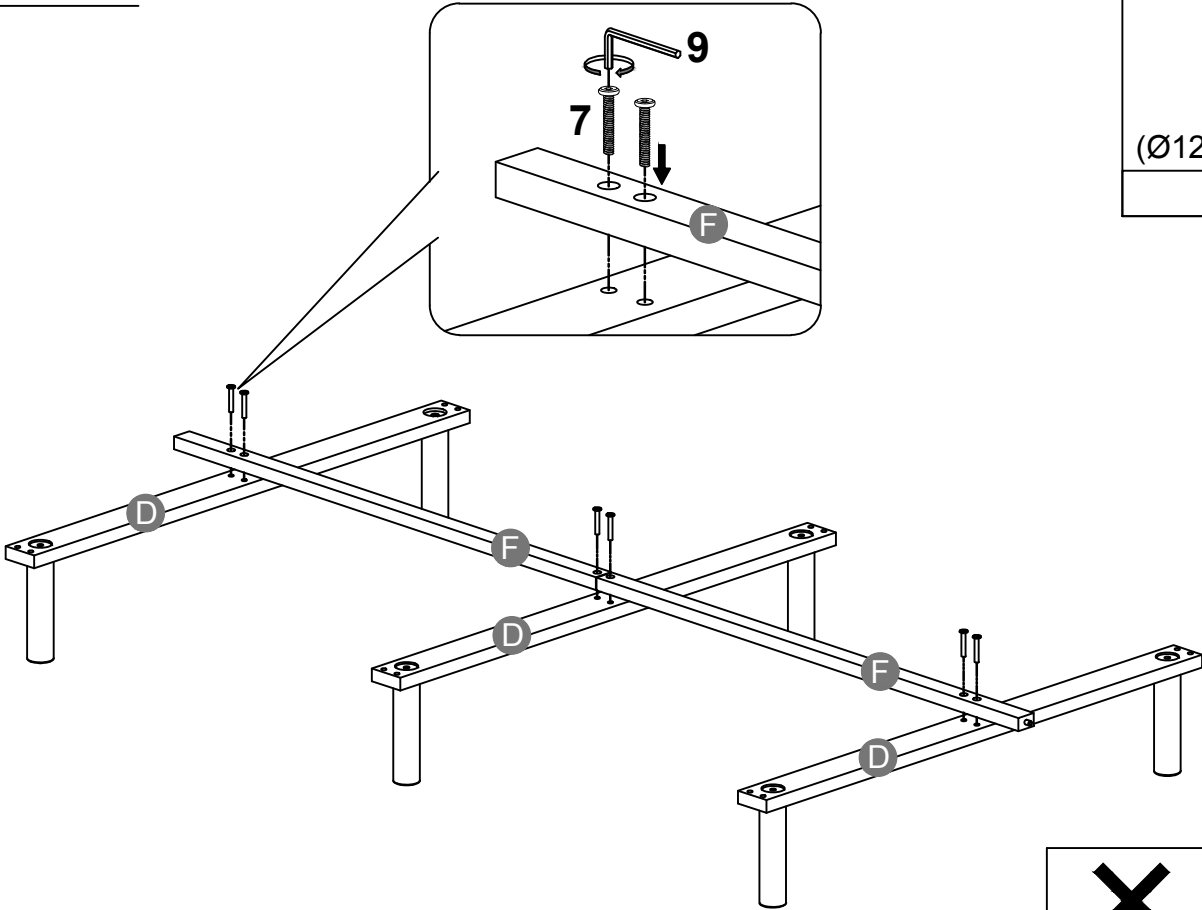6PCS


STEP 2:



7

(Ø12)1/4"*38mm
6PCS

	
---	---

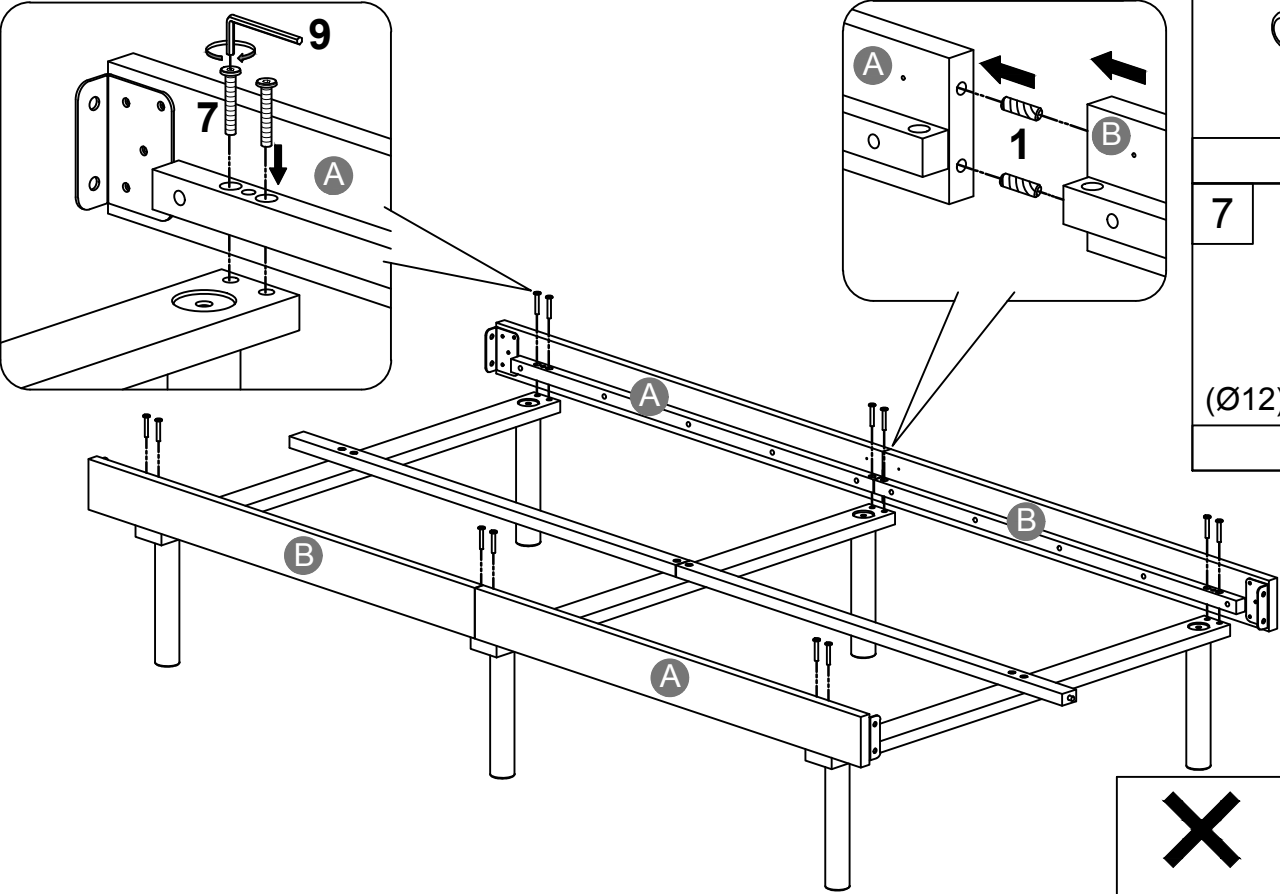
STEP 3:



1	
4PCS	
7	
(Ø12)1/4"*38mm	
12PCS	

--	--


STEP 4:



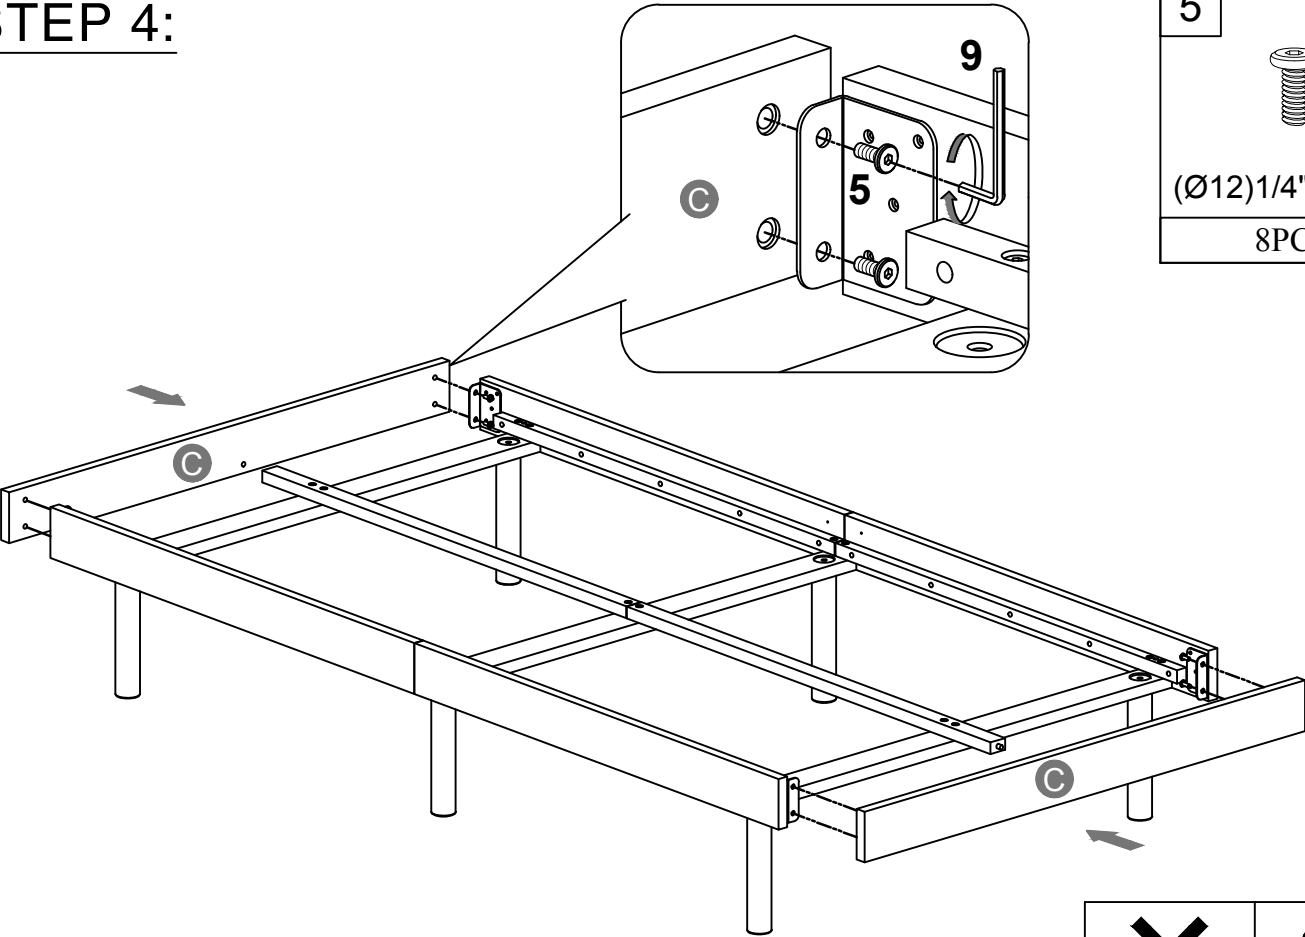


5	
(Ø12)1/4"*15mm	
8PCS	


--	--

STEP 5:

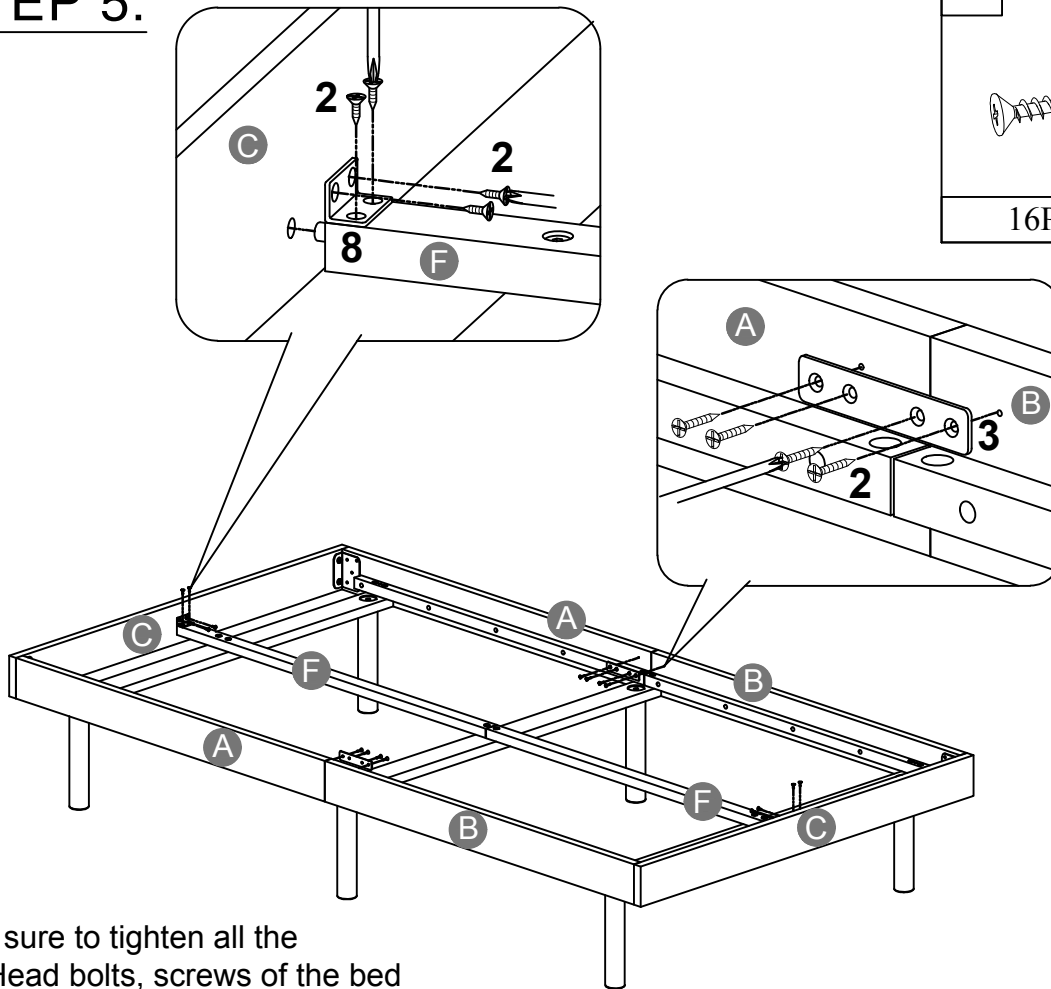


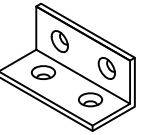
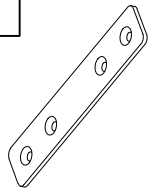
2	8
	
16PCS	2PCS
	3
	
	2PCS


Make sure to tighten all the Hex-Head bolts, screws of the bed

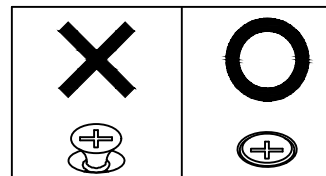

STEP 6:

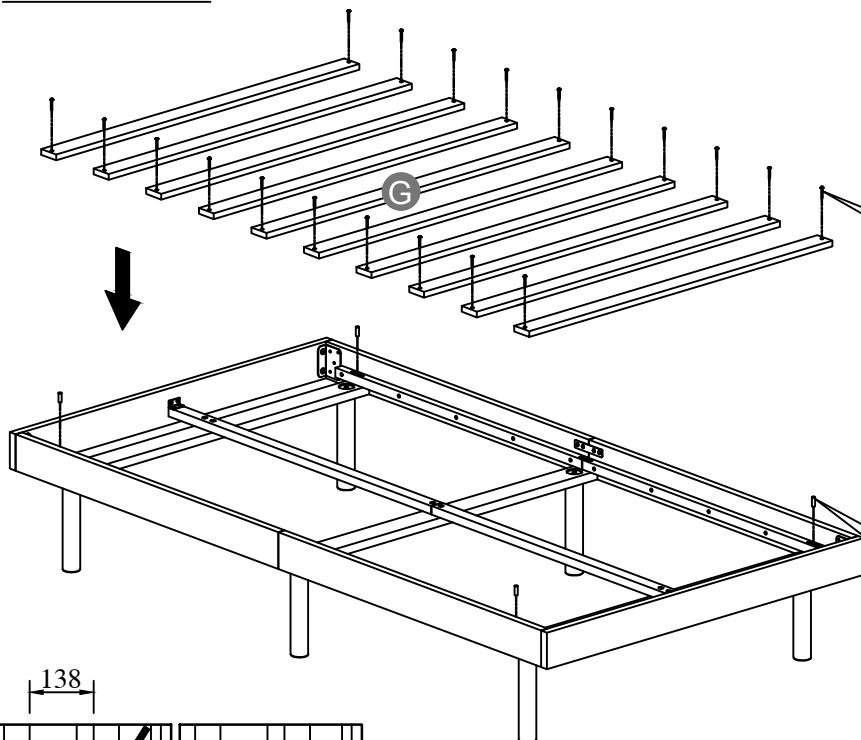

1	6
	
4PCS	4PCS

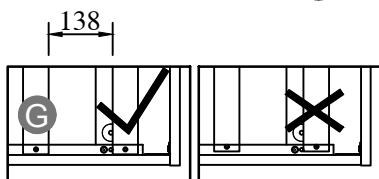

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

