


ASSEMBLY INSTRUCTIONS


ITEM NO.:N769P282378W/N769P282379W

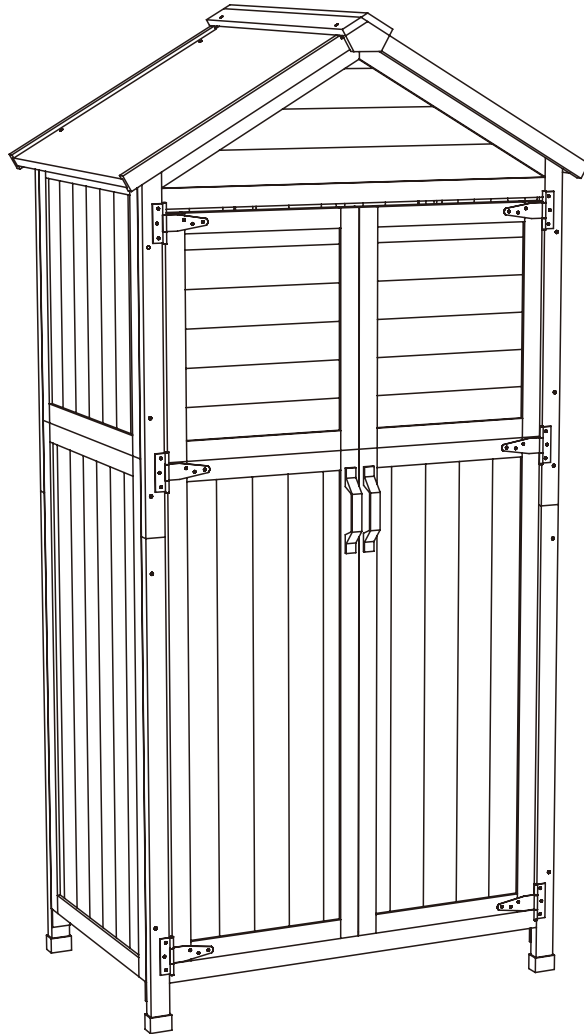














IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN,KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THIS ITEM IS FULLY SET-UP.


Detail View

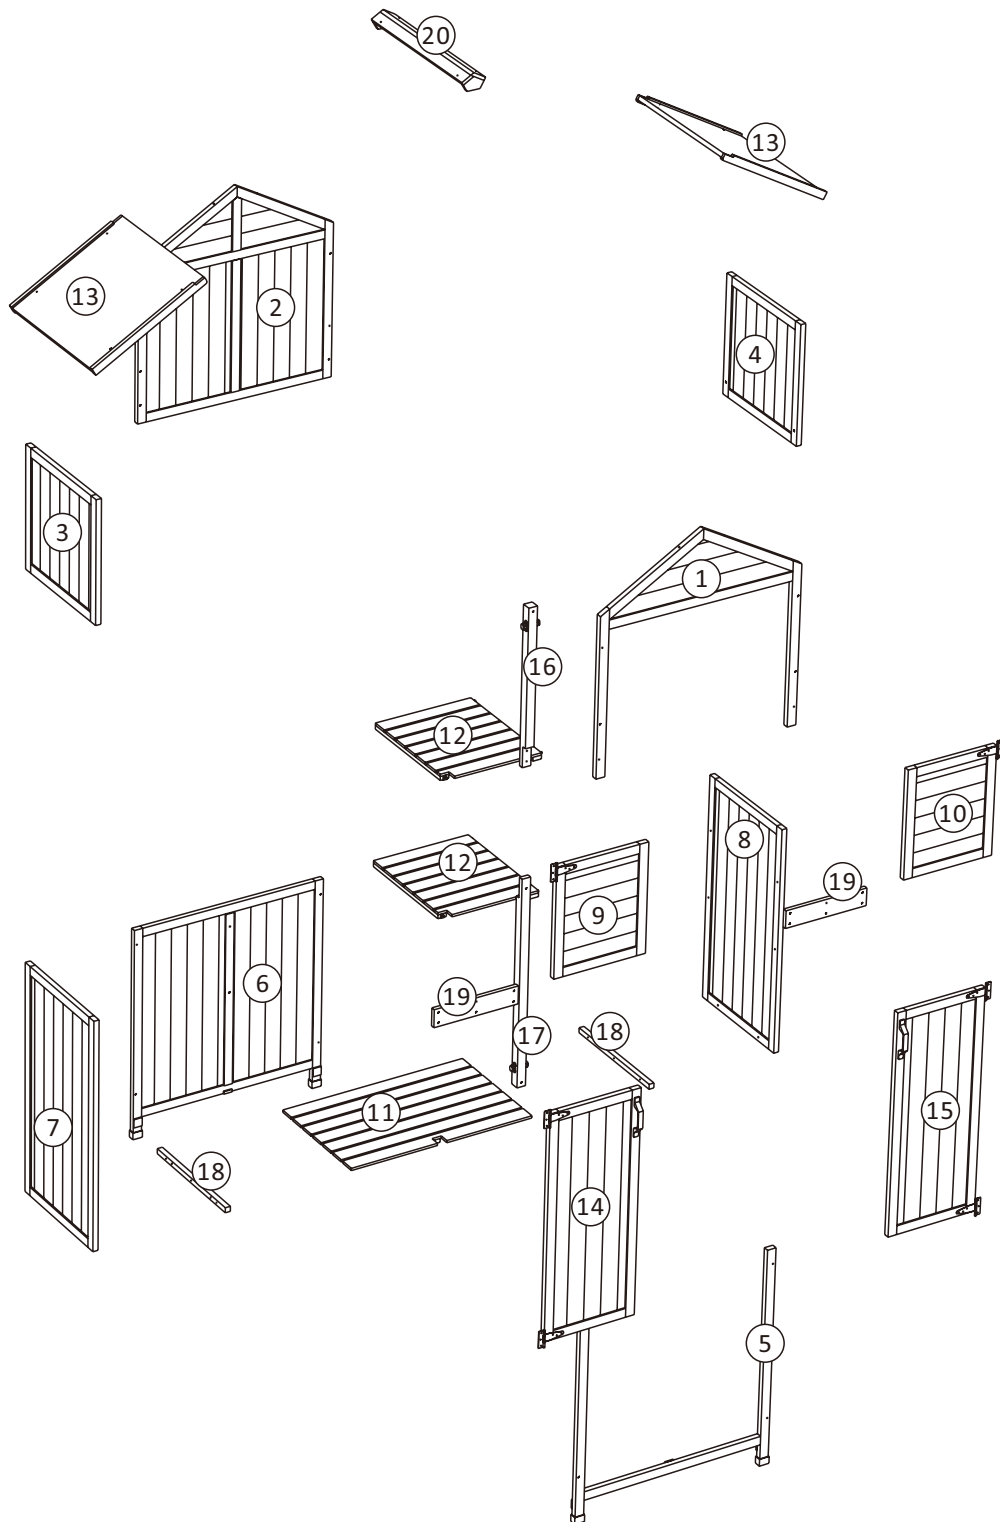

N769P282378W/N769P282379W

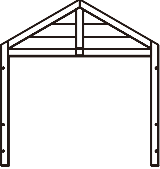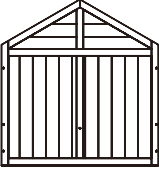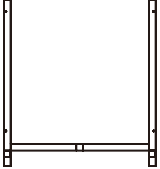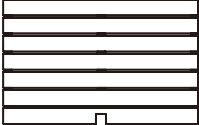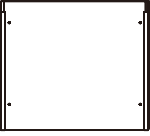1		2		3		4	
1pc		1pc		1pc		1pc	
5		6		7		8	
1pc		1pc		1pc		1pc	
9		10		11		12	
1pc		1pc		1pc		2pcs	
13		14		15		16	
2pcs		1pc		1pc		1pc	
17		18		19		20	
1pc		2pcs		2pcs		1pc	


Hardware List

A	 Ø 3.5*50 2pcs	B	 Ø 3.5*40 20pcs	C	 Ø 3.5*35 6pcs	D	 Ø 3.5*30 27pcs
E	 Ø 3.0*16 18pcs	F	 8pcs	G	 2pcs	H	 4pcs
I	 8pcs	J	 4pcs				

ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWERTOOLS !

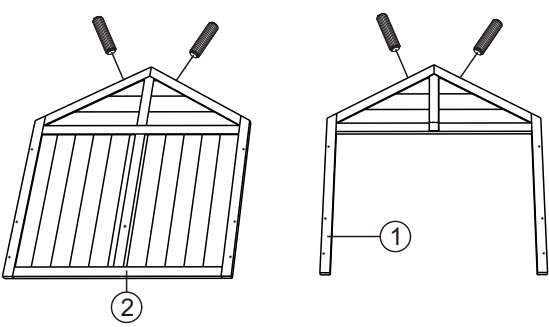


F*8

2

1


X2

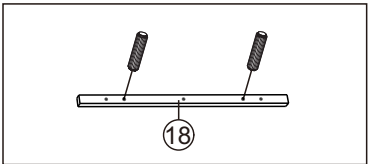

Step 1



F*8

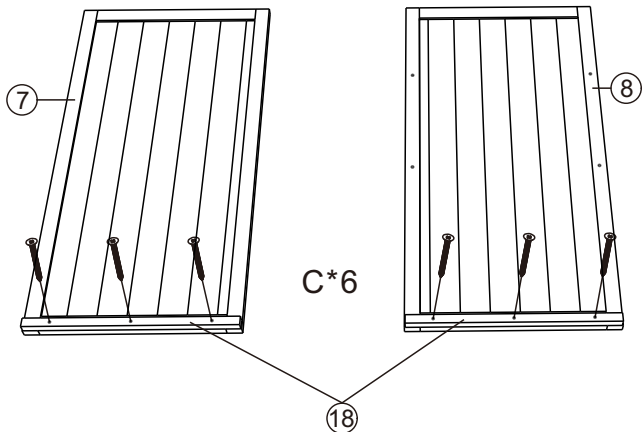

7

8


C*6

18



Step 2





C*6

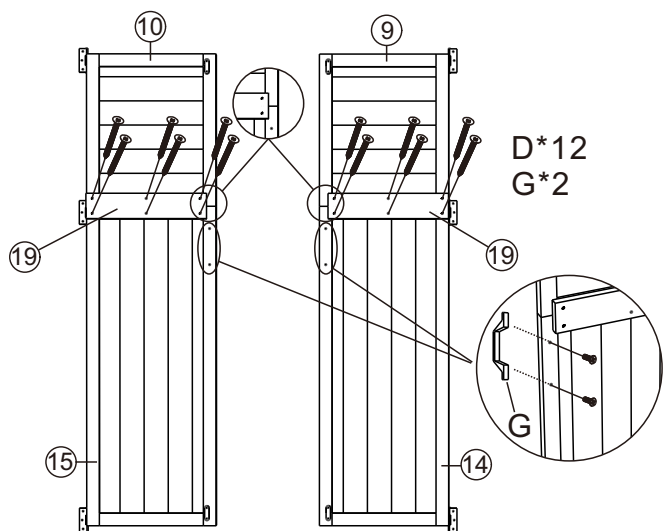



Step 3

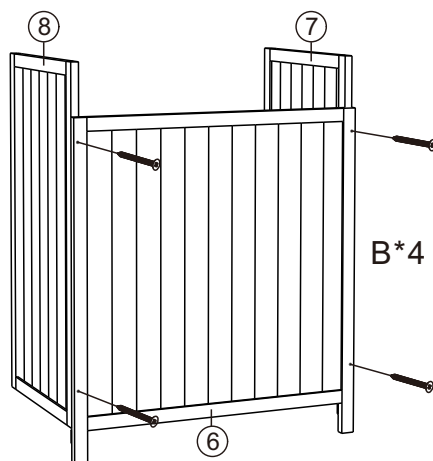



Step 4

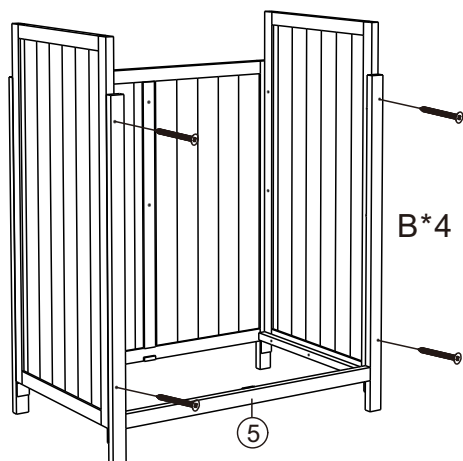



Step 5

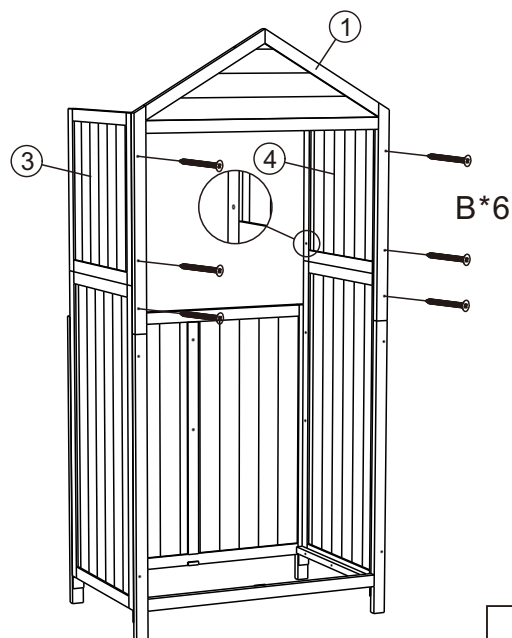


Step 6

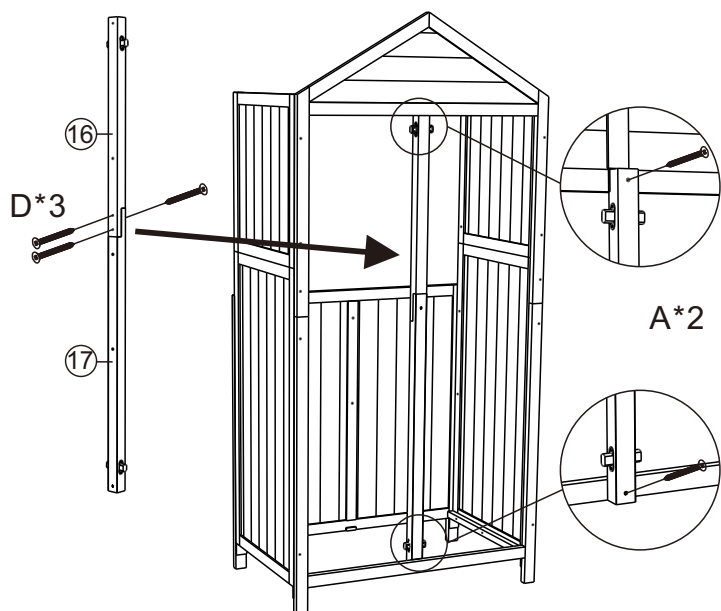


Step 7

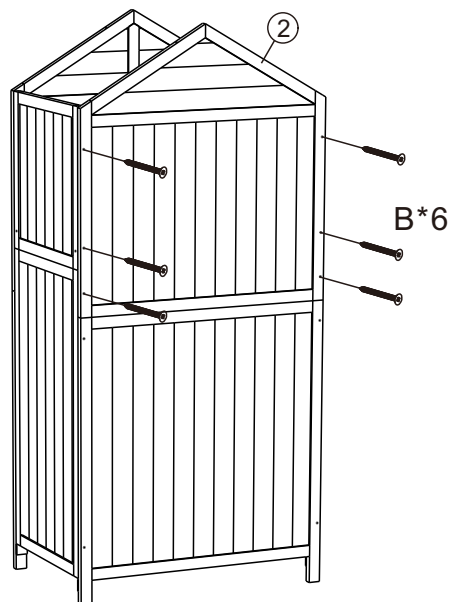


Step 8



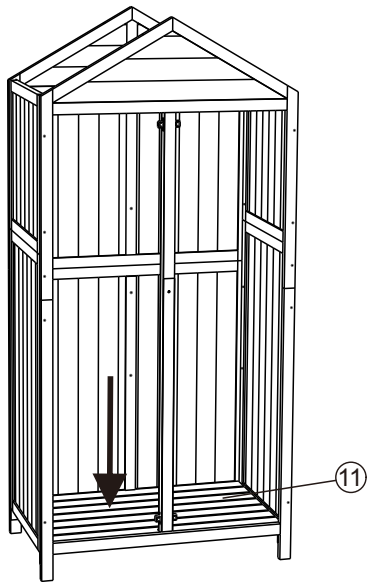


Step 9

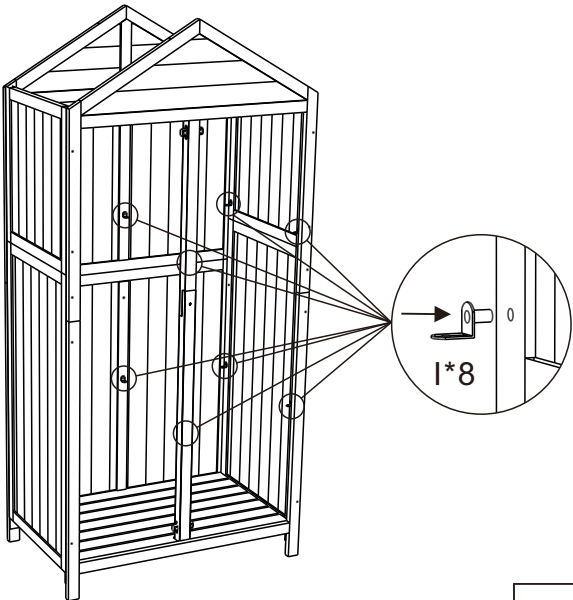


Step 10

I*8

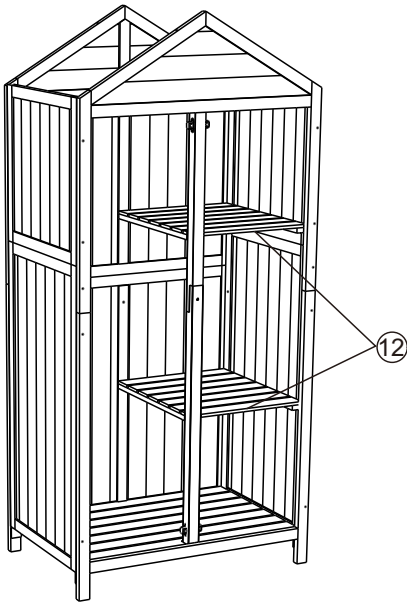


Step 11

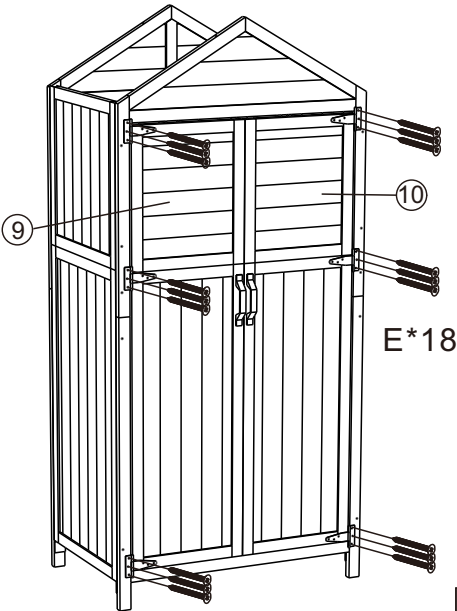


Step 12

E*18

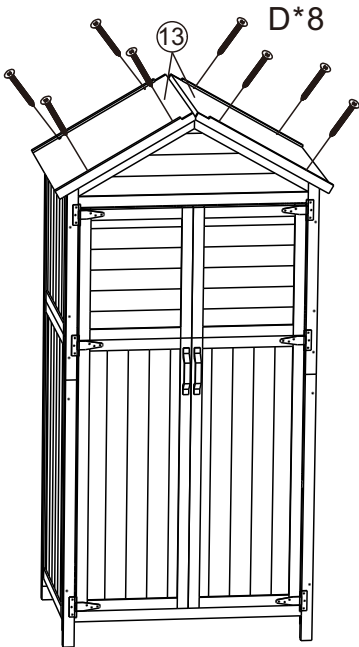


Step 13

D*8

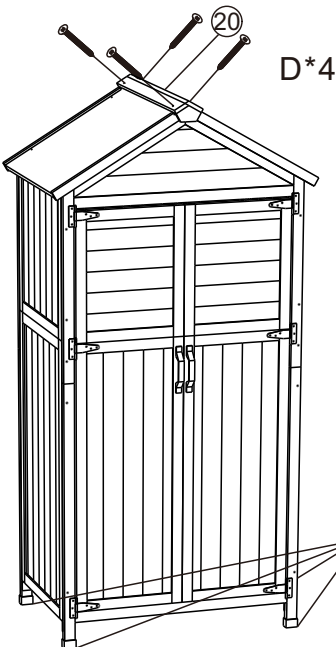


Step 14

D*4

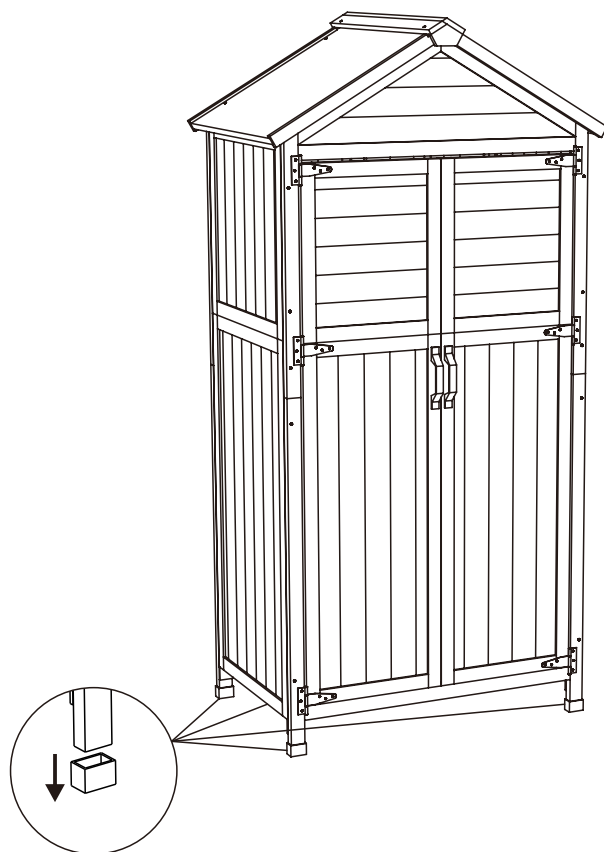

Step 15

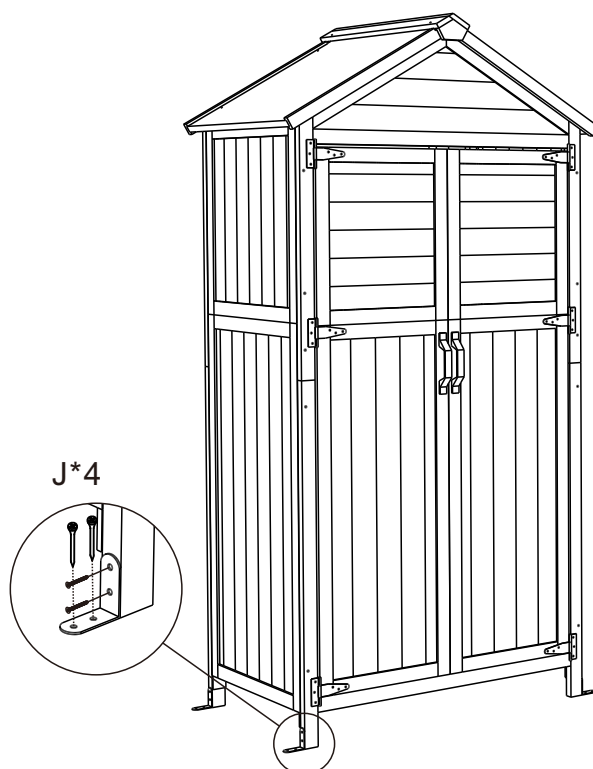

Step 16