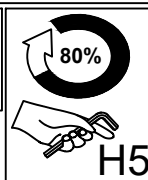
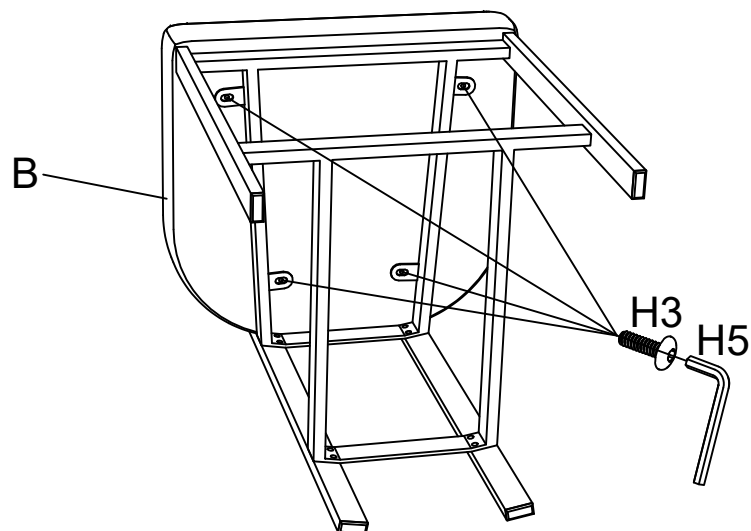


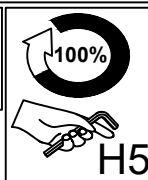
3

H3×4pcs
M6×20mmH5×1pc
M6

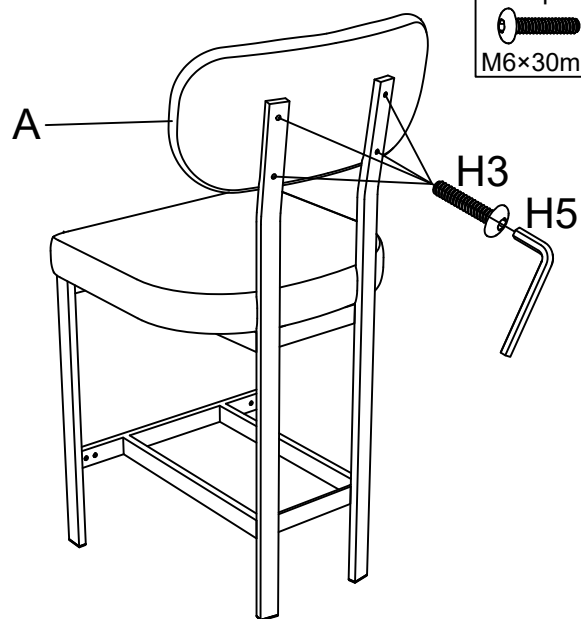
H5



4

H4×4pcs
M6×30mmH5×1pc
M6

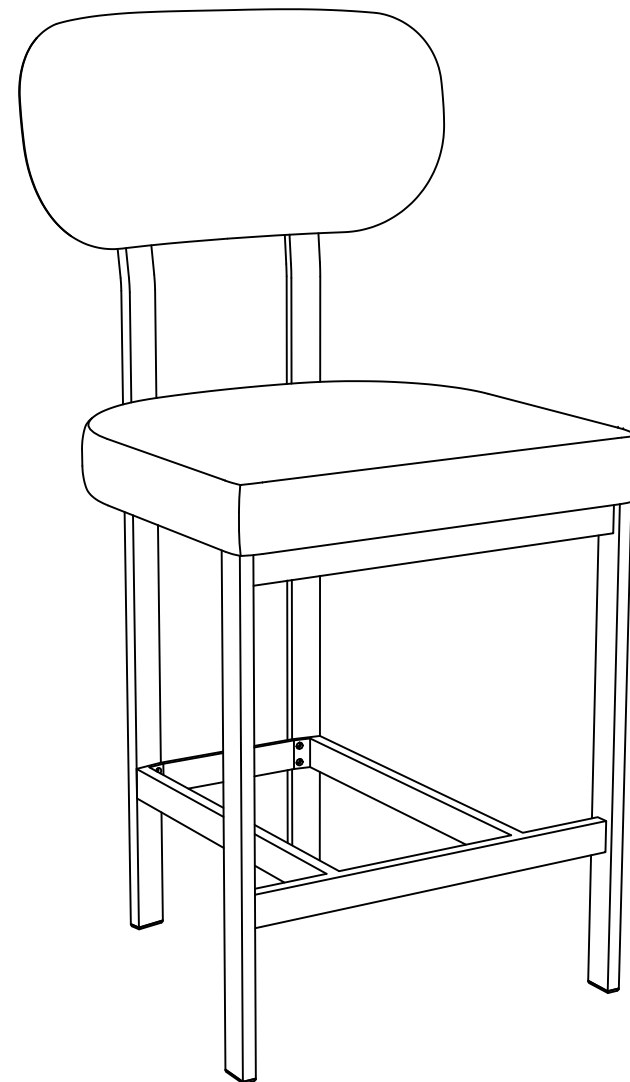
H5



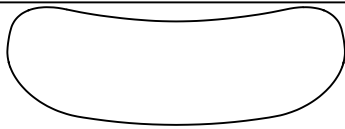
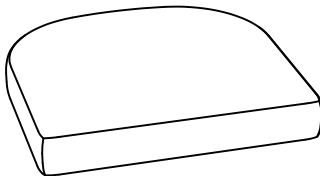
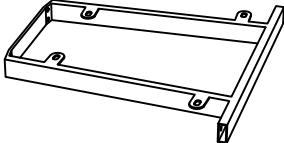




Adjust the chair so that it is leveled, then fully tighten all the bolts.

ASSEMBLY INSTRUCTION


Counter chair
TS-2010



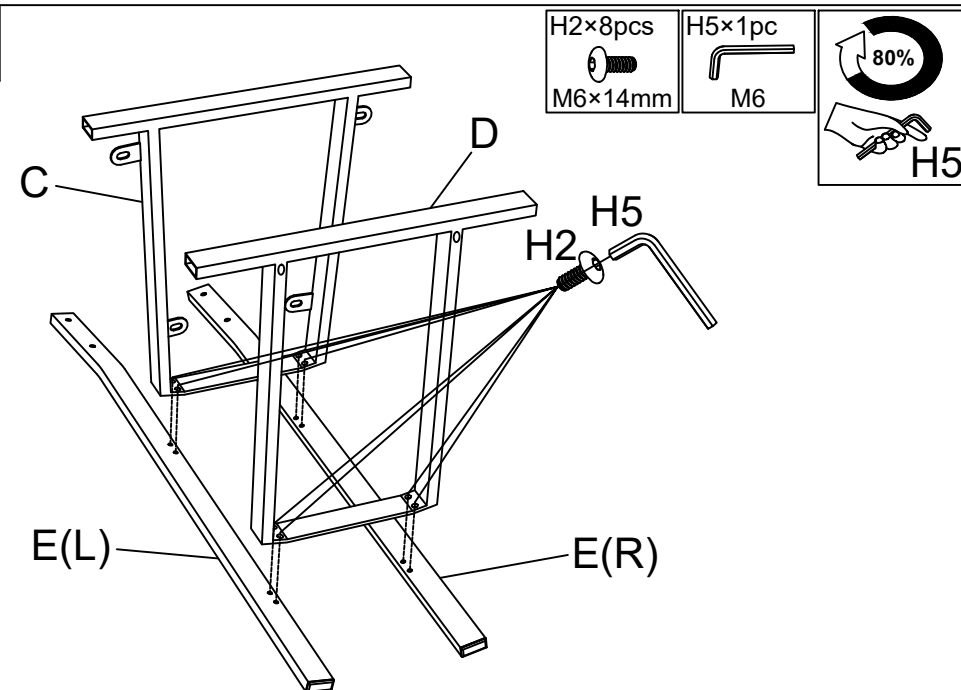
Component List

LABEL		DESCRIPTION	QTY
A		Back	1
B		Seat	1
C		Top frame	1
D		Foot rest	1
D	 D(L)  D(R)	Front leg	2
E	 E(L)  E(R)	Back leg	2

Hardware List

LABEL		DESCRIPTION	QTY
H1		Bolts M6×10mm	8
H2		Bolts M6×14mm	8
H3		Bolts M6×20mm	4
H4		Bolts M6×30mm	4
H5		Allen key M6	1

1



2

