




Assembly Instruction

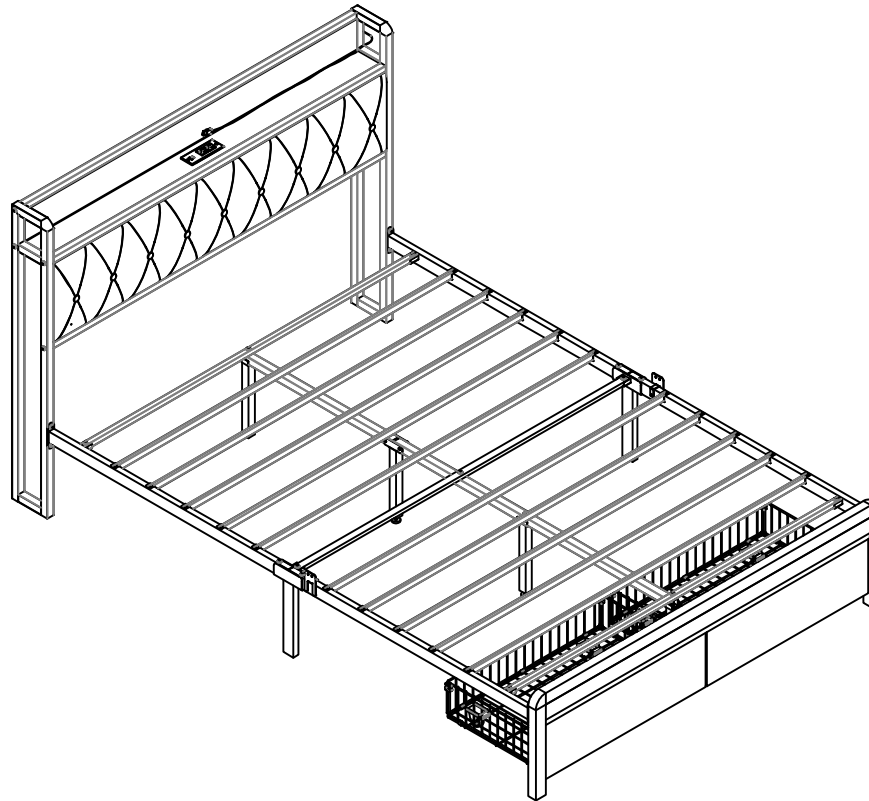


Attention: Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If the screws are tightened initially, subsequent hole positions may be misaligned.

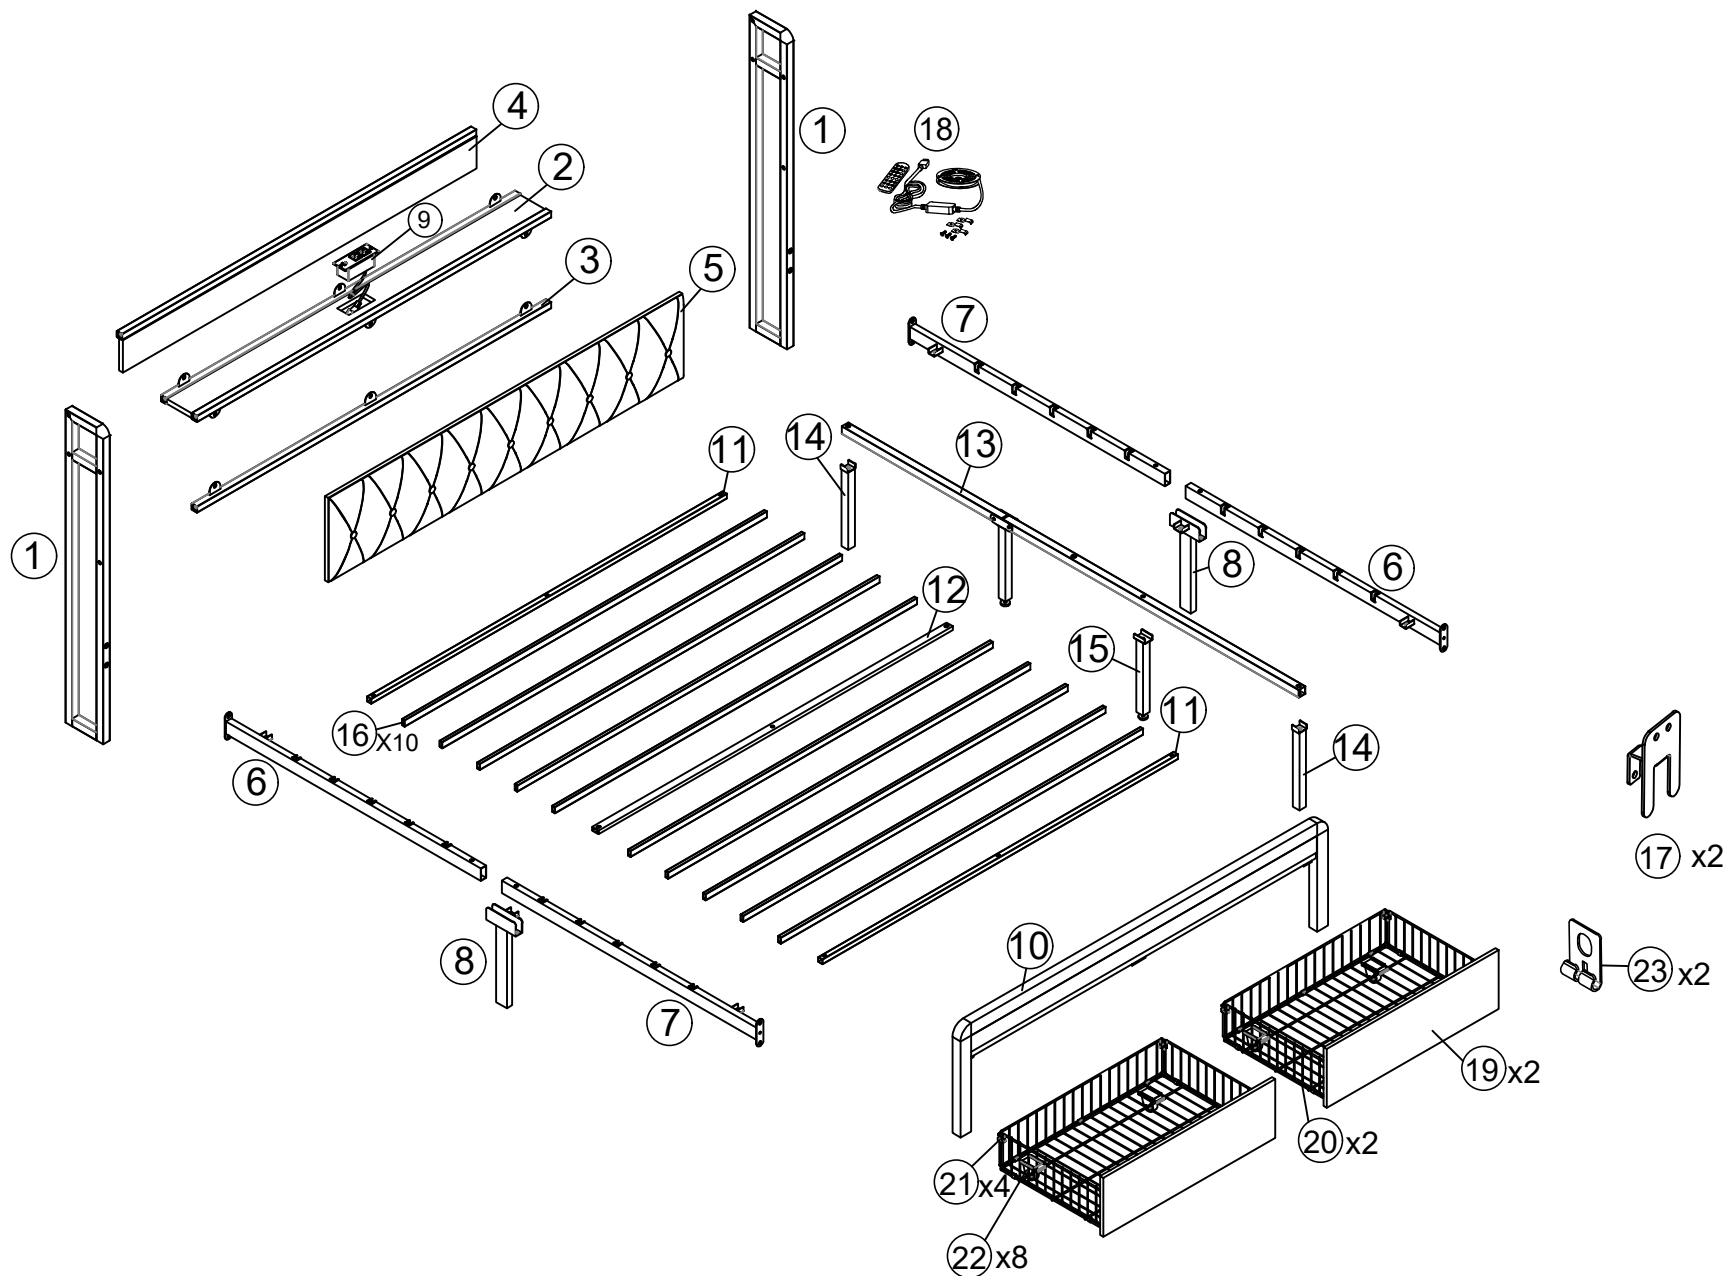

Hardware arts

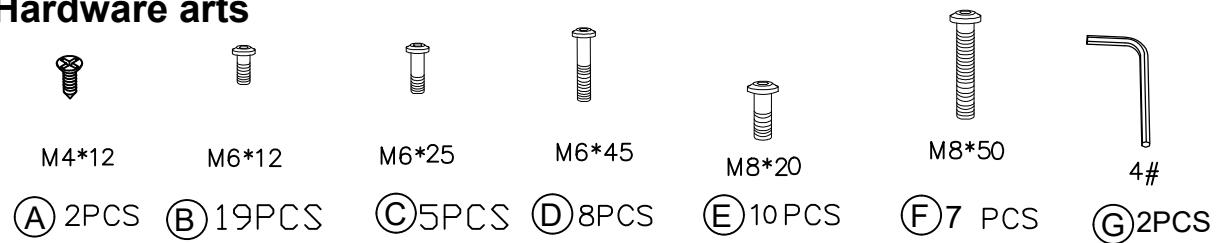


Part list

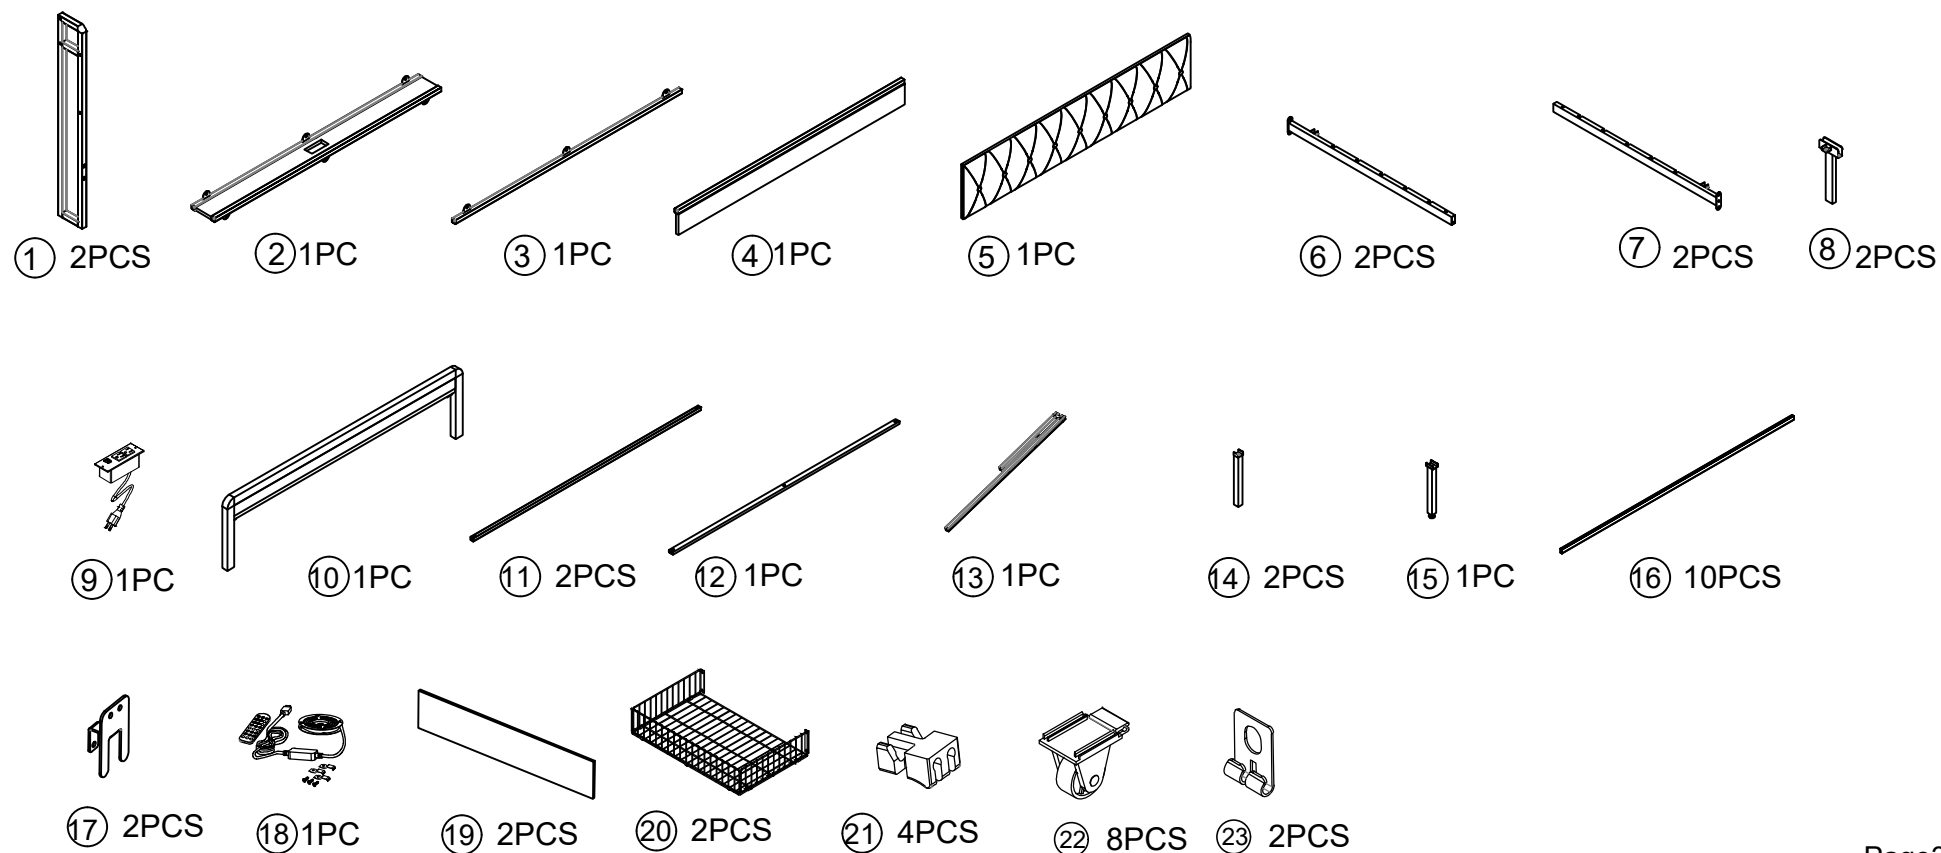


Step:1

- M6*45 D X 6PCS
- 4# G X 1PC

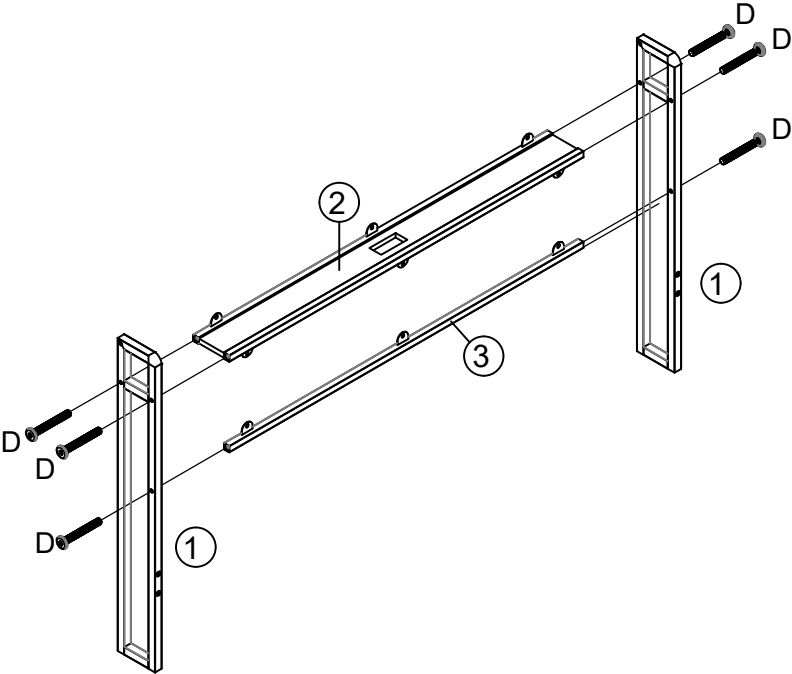


Step:2

- M6*12 B X 9PCS
- M6*45 D X 2PCS
- 4# G X 1PC

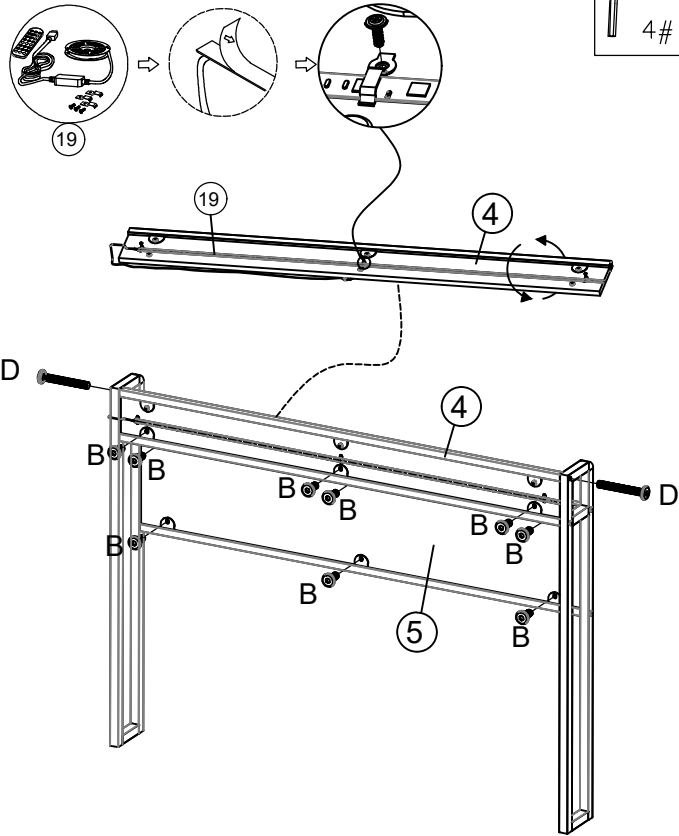


Step:3

	M8*50	F X 4PCS
	4#	G X 1PC




Please pay attention to the direction arrow in the illustration to avoid reverse installation

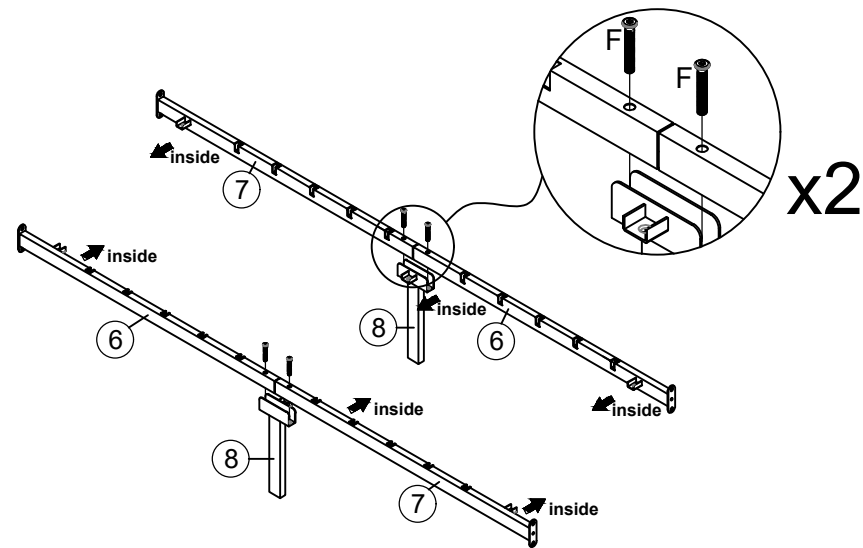

Step:4

	M4*12	A X 2PCS
	M8*20	E X 8PCS
	4#	G X 1PC

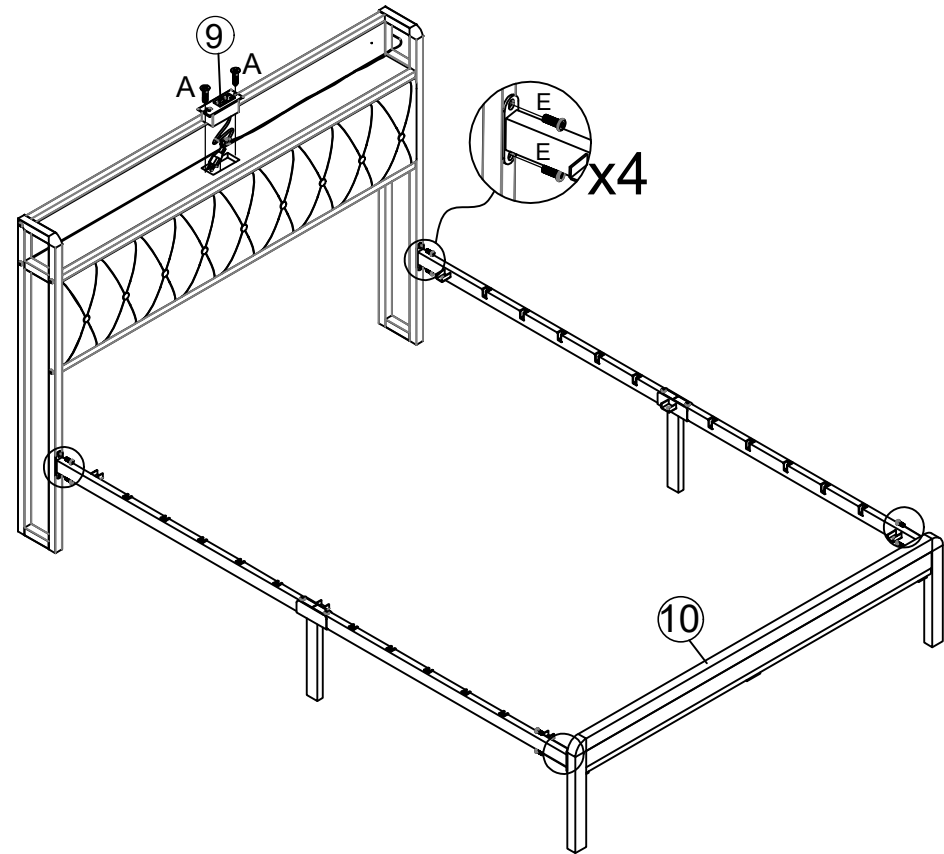


Step:5

4# G X 1PC

M8*20 E X2PCS

M6*25 C X4PCS

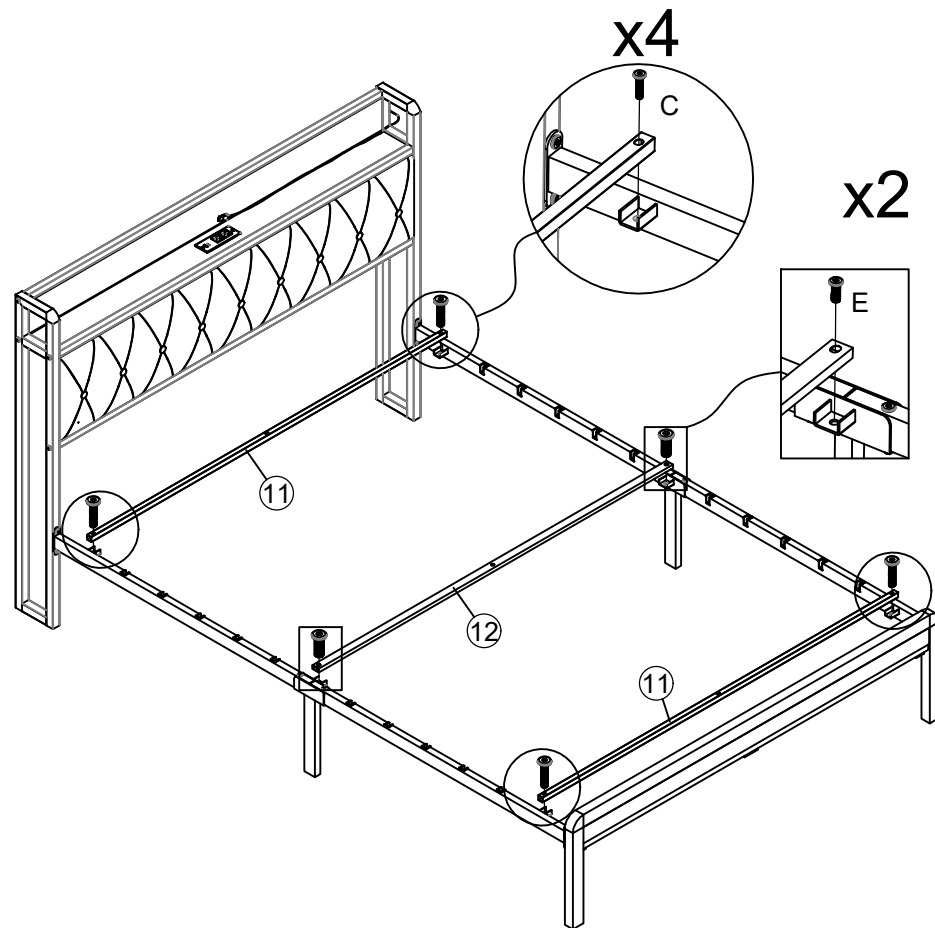


Step:6


M8*50 F X 3 PCS

M6*25 C X 1PC


4# G X 1PC

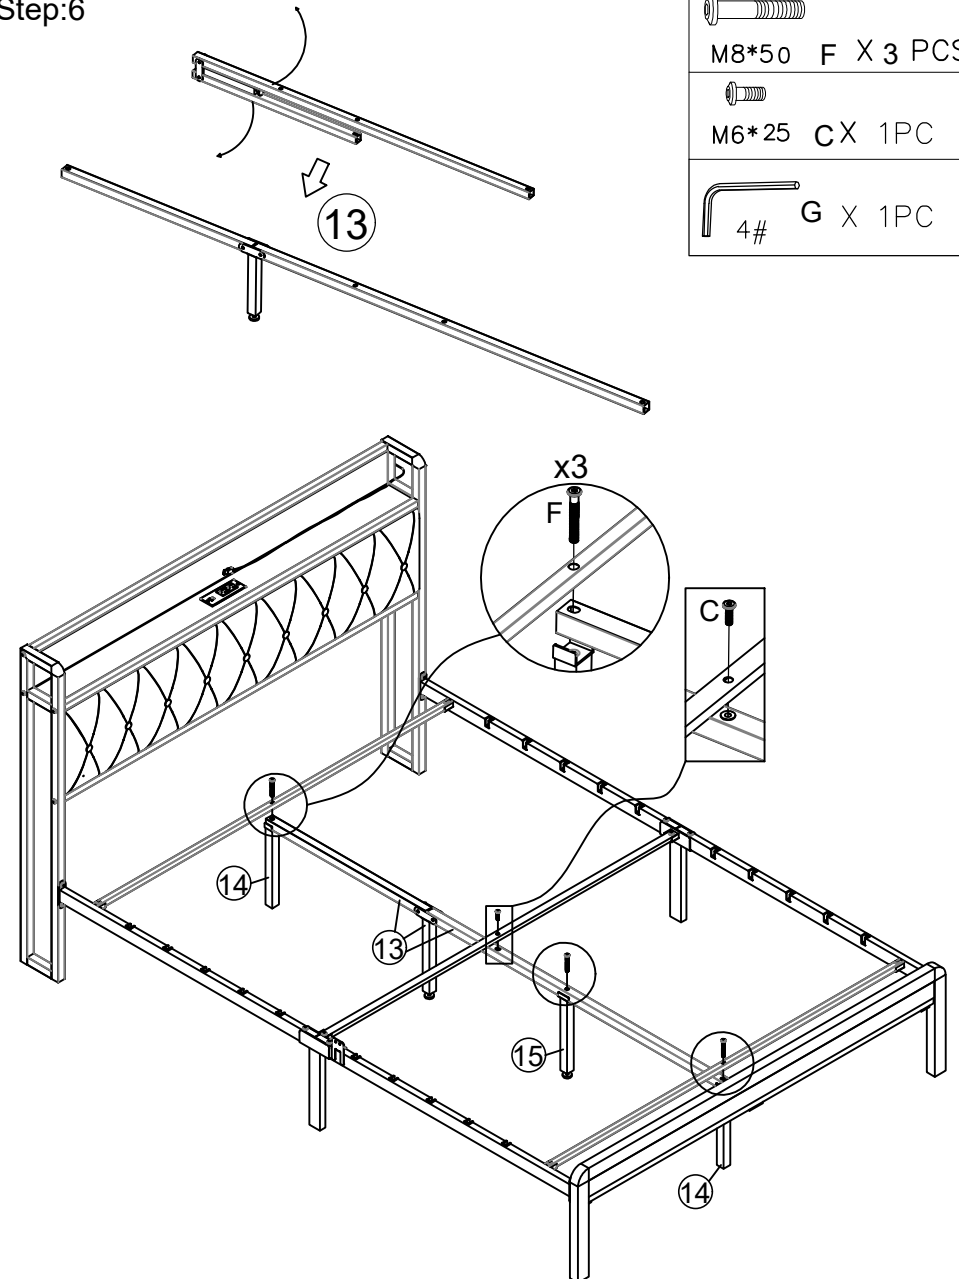


Step:7

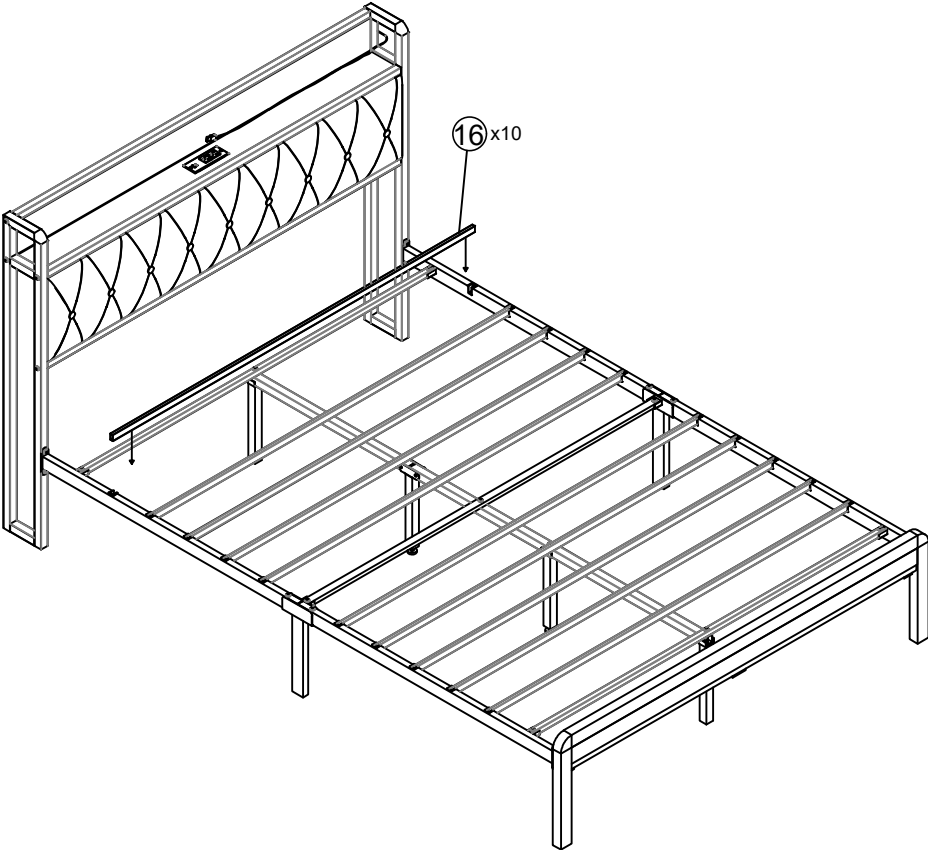

Step:8

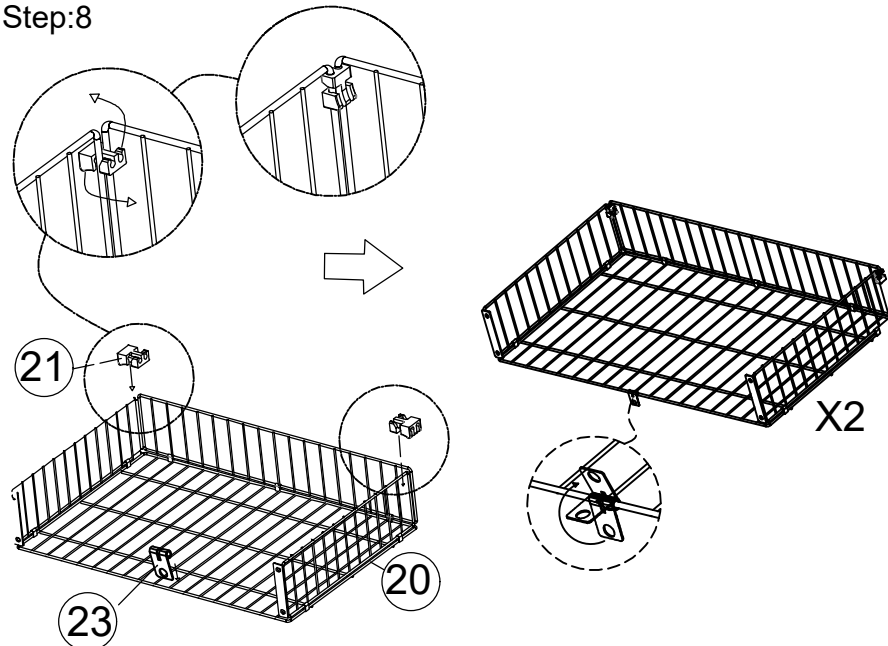

Step:9

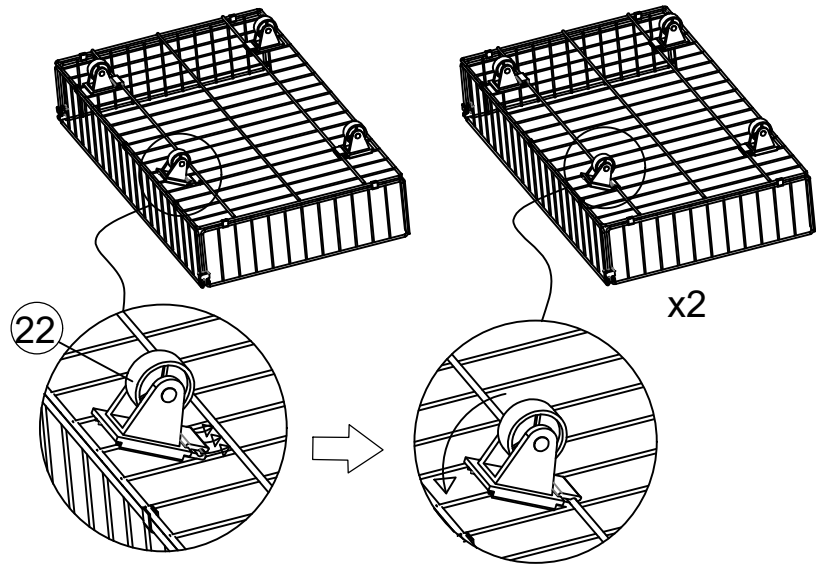

Step:10


19



M6*12 B X 10PCS



4# G X 1PC

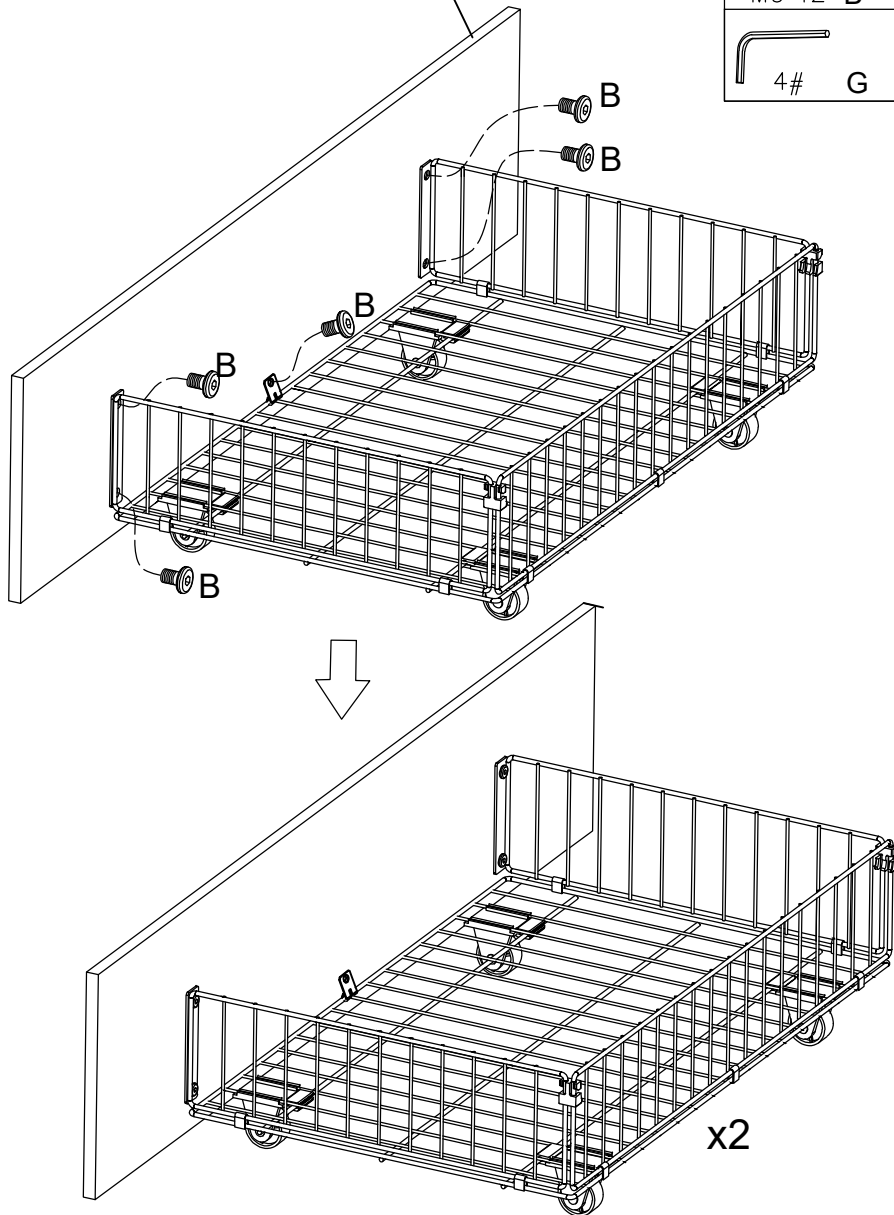

Step:11

