



Assembly Instruction

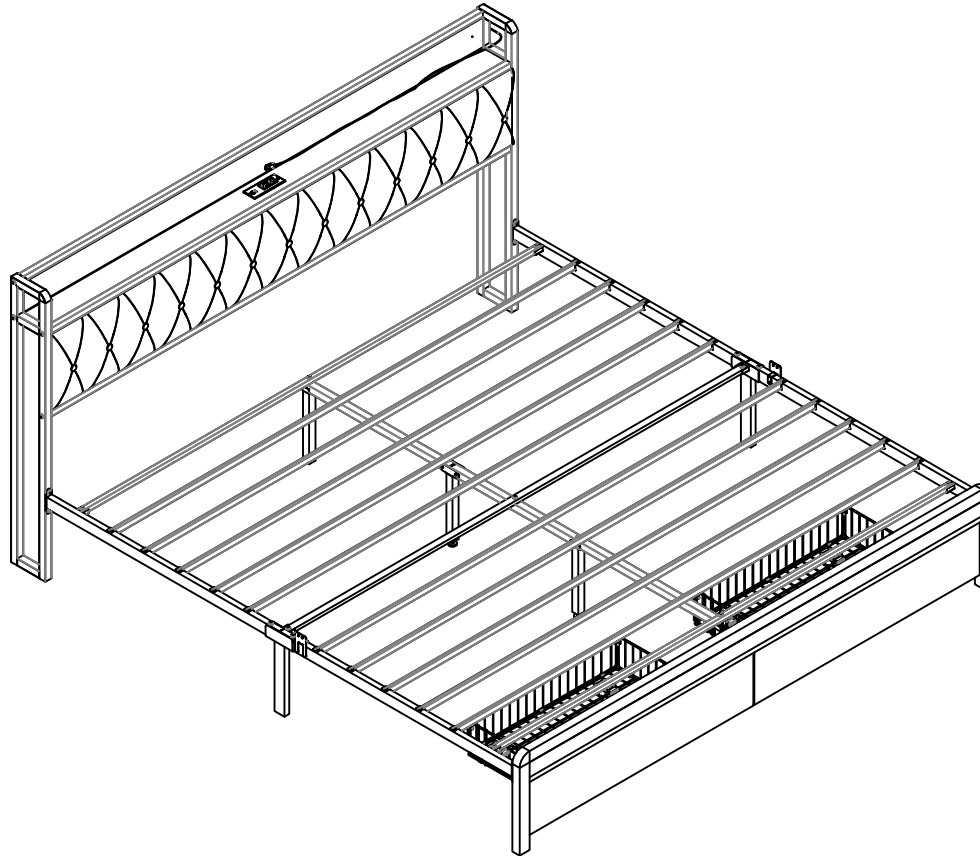

Attention: Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If the screws are tightened initially, subsequent hole positions may be misaligned.

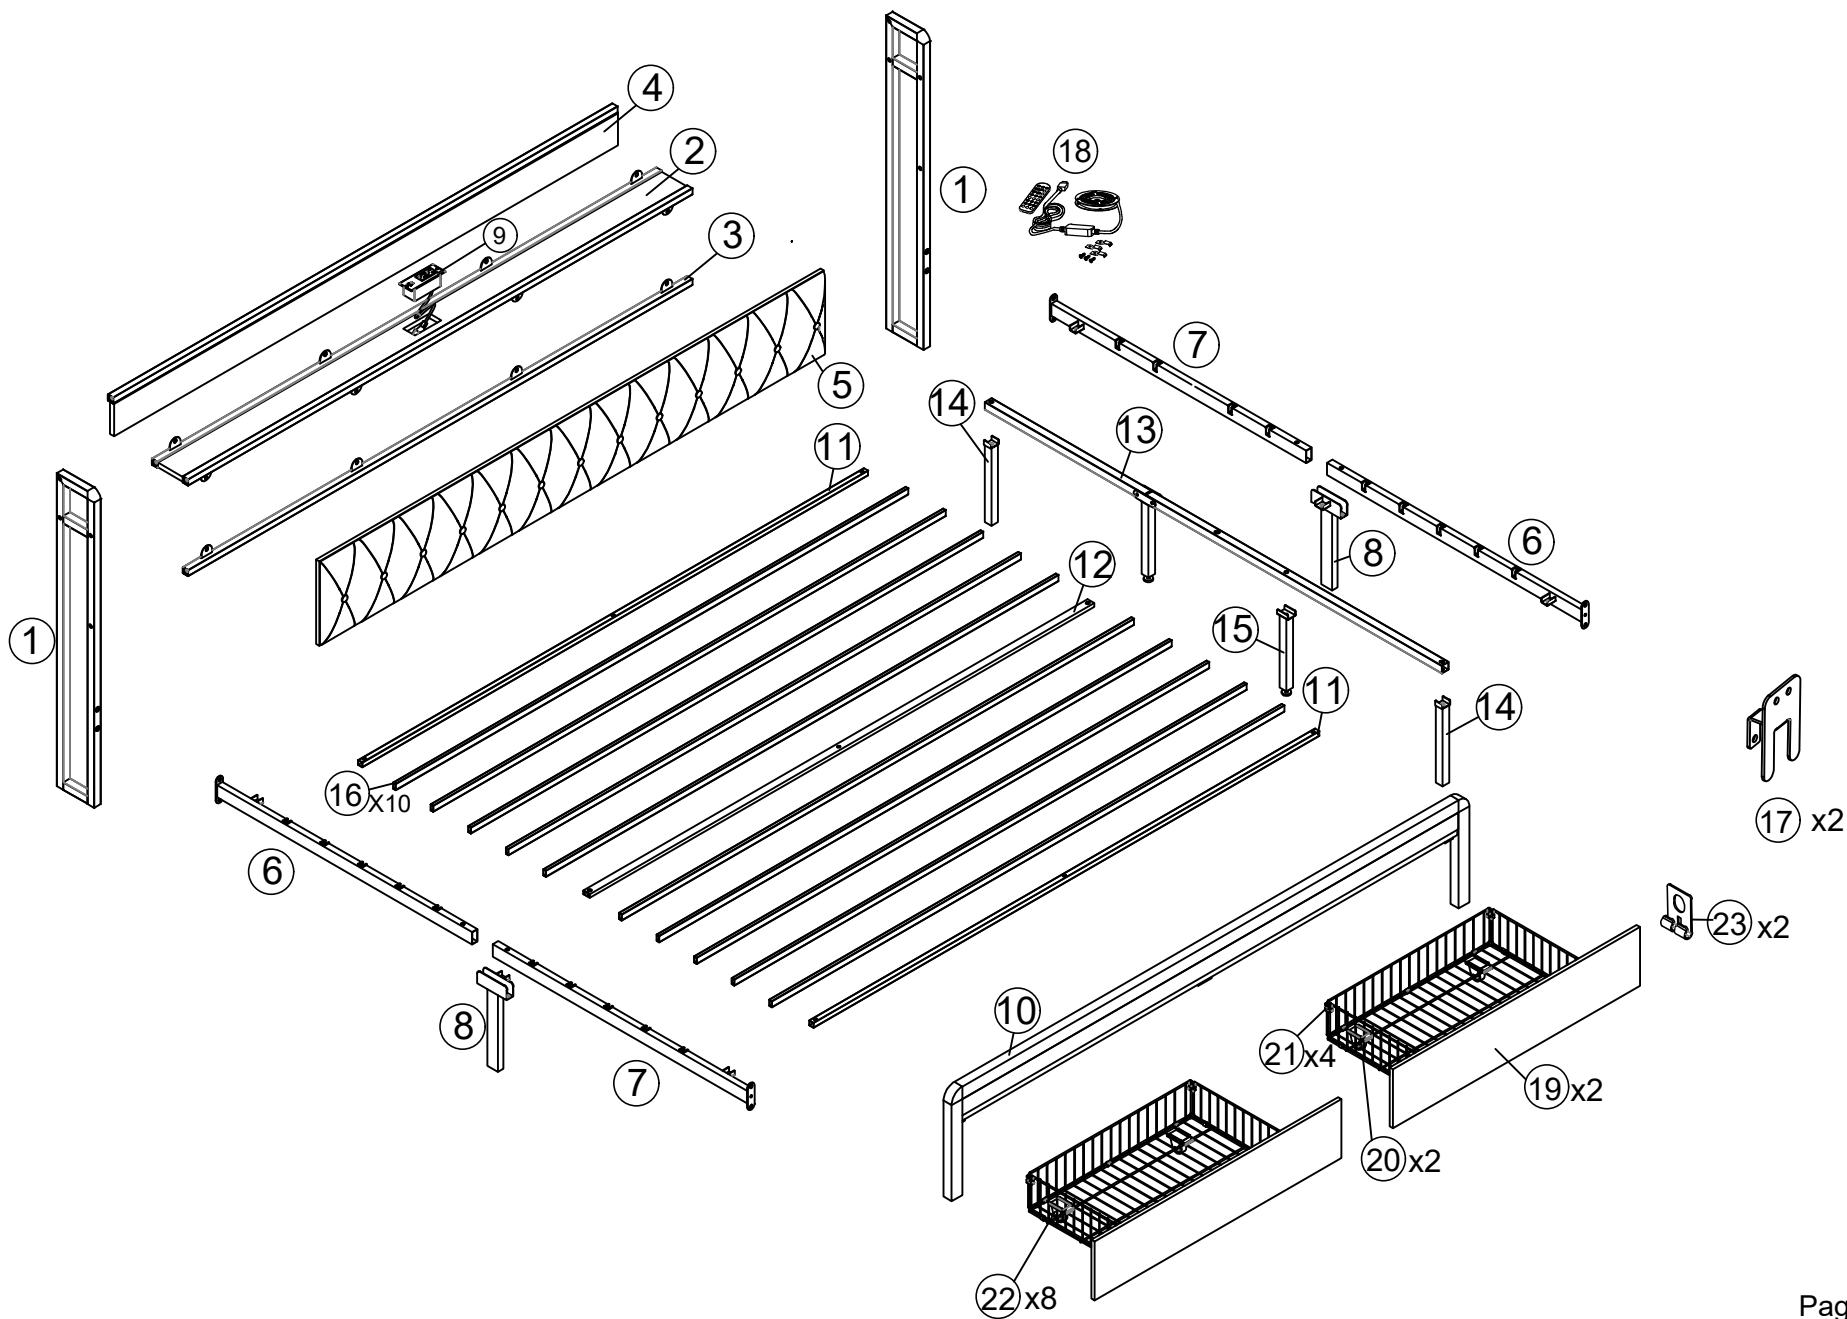

Hardware arts



M4*12

(A) 2PCS



M6*12

(B) 22PCS



M6*25

(C) 5PCS




M6*45

(D) 8PCS



M8*20

(E) 10PCS



M8*50

(F) 7 PCS




4#

(G) 2PCS


Part list




(1) 2PCS

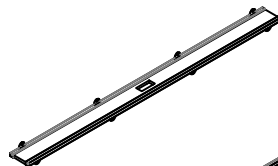


(2) 1PC

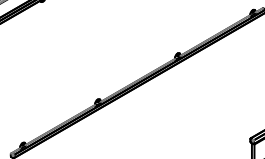


(3) 1PC

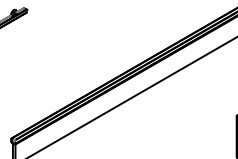


(4) 1PC

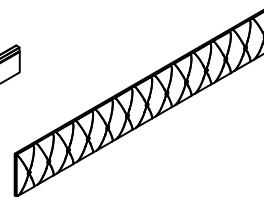

(5) 1PC



(6) 2PCS




(7) 2PCS




(8) 2PCS



(9) 1PC

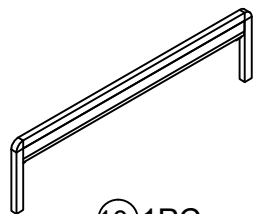

(10) 1PC

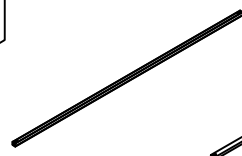

(11) 2PCS



(12) 1PC




(13) 1PC



(14) 2PCS



(15) 1PC

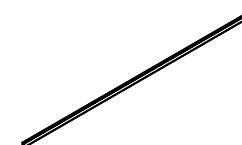


(16) 10PCS




(17) 2PCS



(18) 1PC




(19) 2PCS

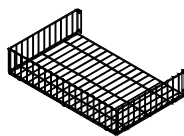


(20) 2PCS



(21) 4PCS




(22) 8PCS



(23) 2PCS


Step:1

- M6*45 D X 6PCS
- 4# G X 1PC

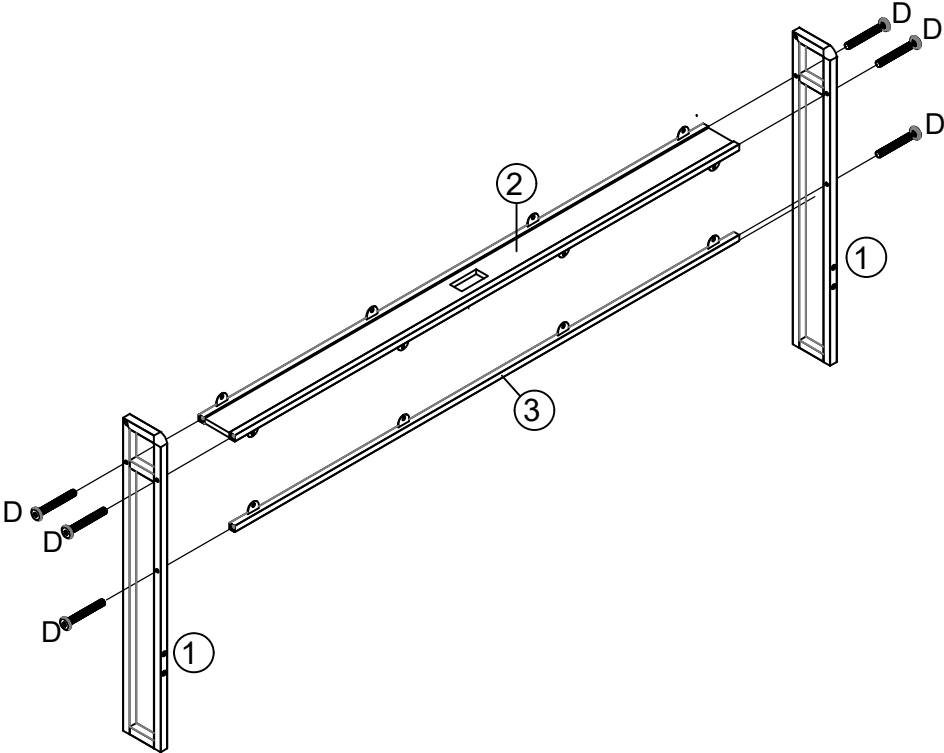


Step:2


- M6*12 B X 12PCS
- M6*45 D X 2PCS
- 4# G X 1PC

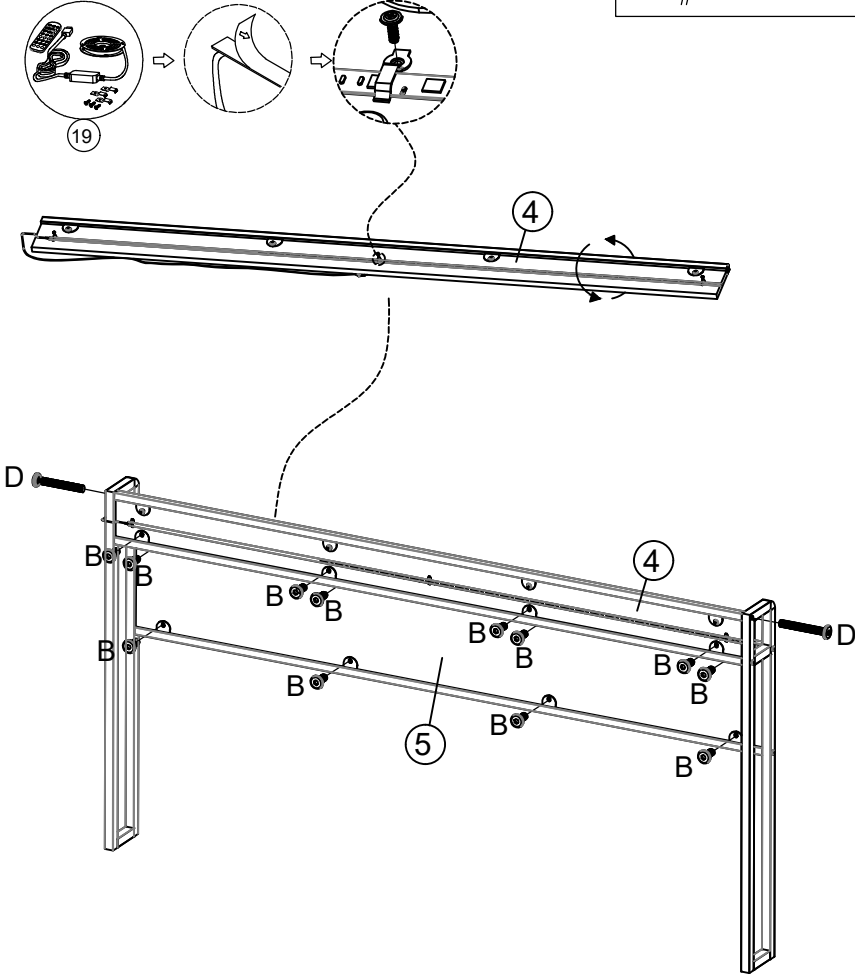



Step:3

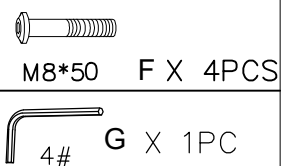

Please pay attention to the direction arrow in the illustration to avoid reverse installation

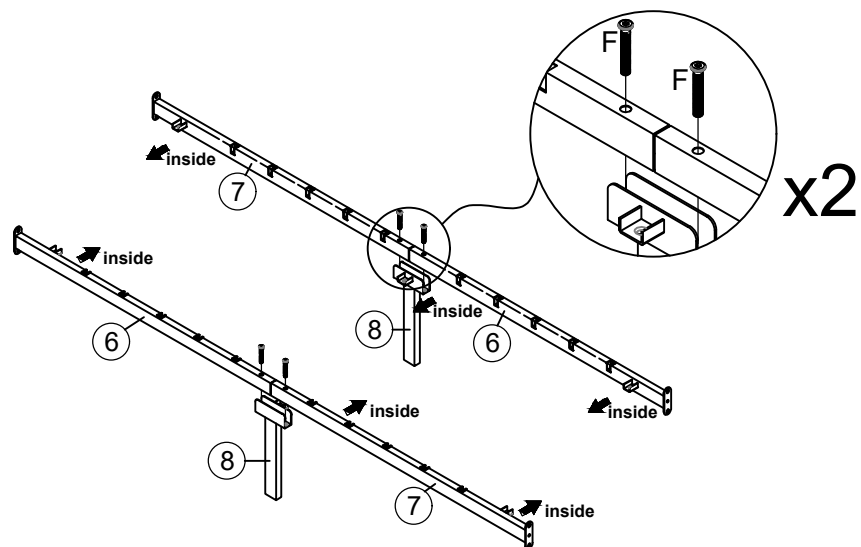

Step:4

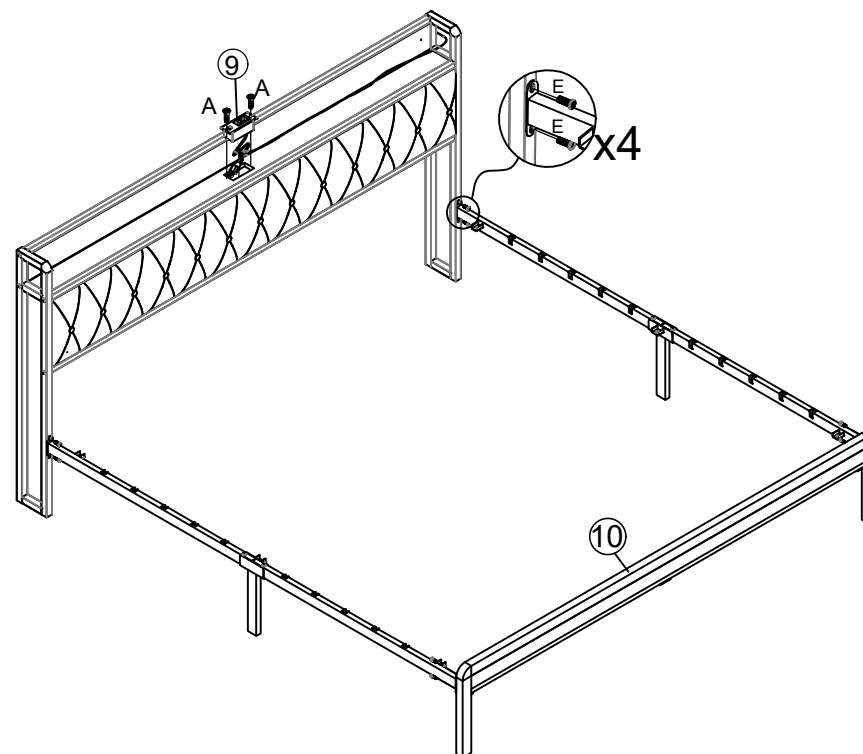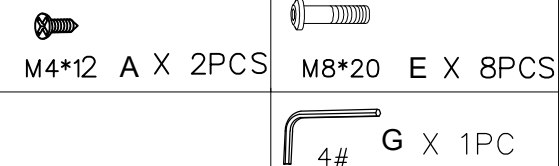


Step:5

4# G X 1PC

M8*20 E X2PCS

M6*25 C X4PCS

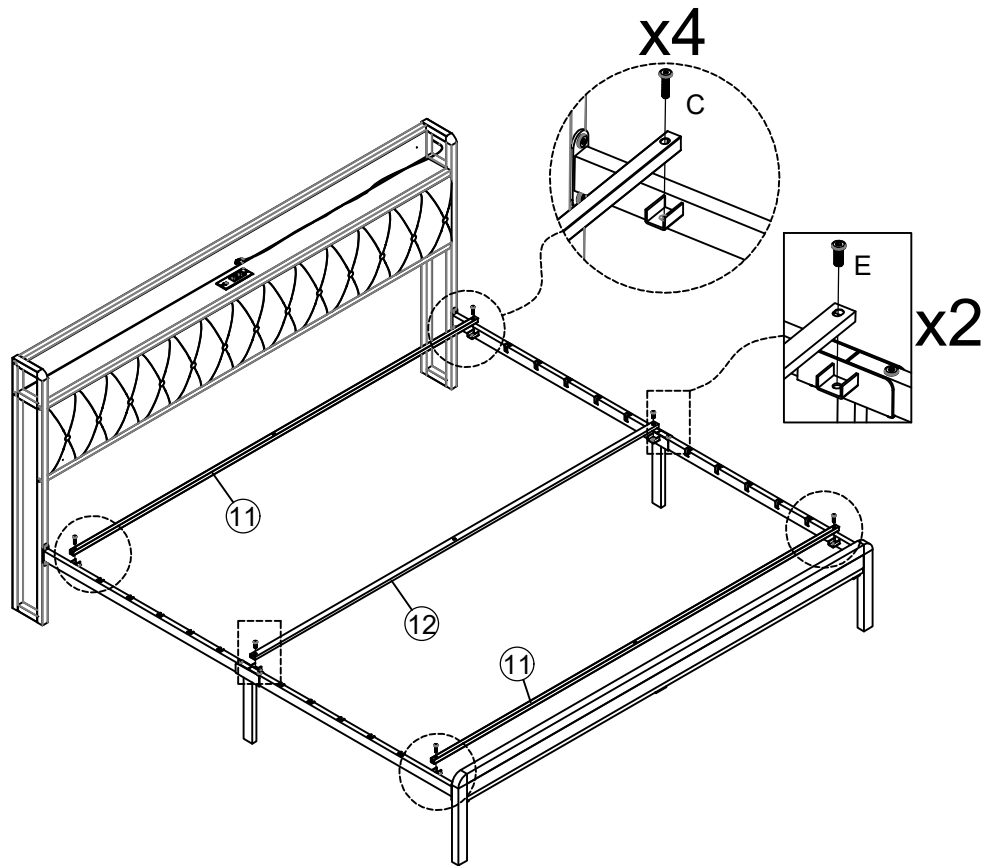


Step:6


M8*50 F X 3 PCS

M6*25 C X 1PC


4# G X 1PC

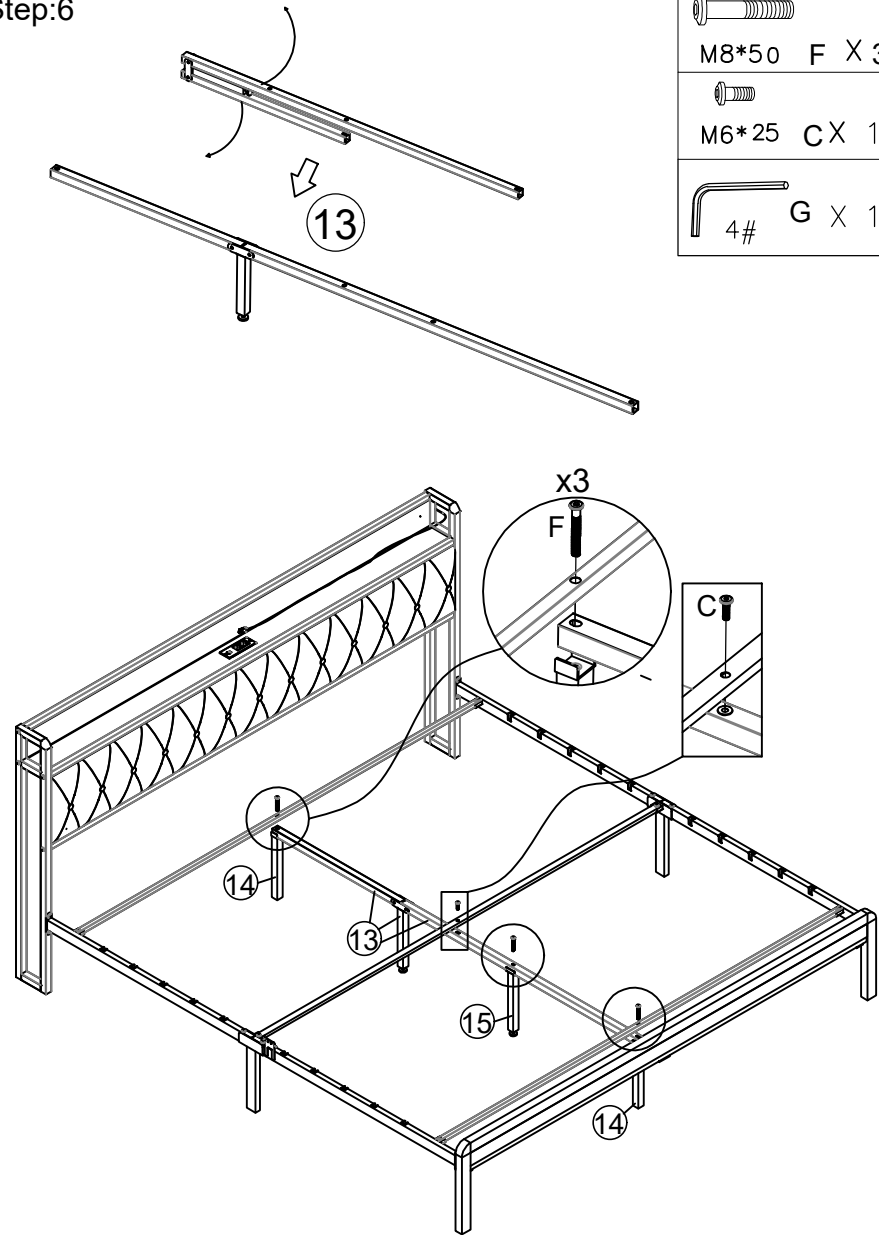


Step:7

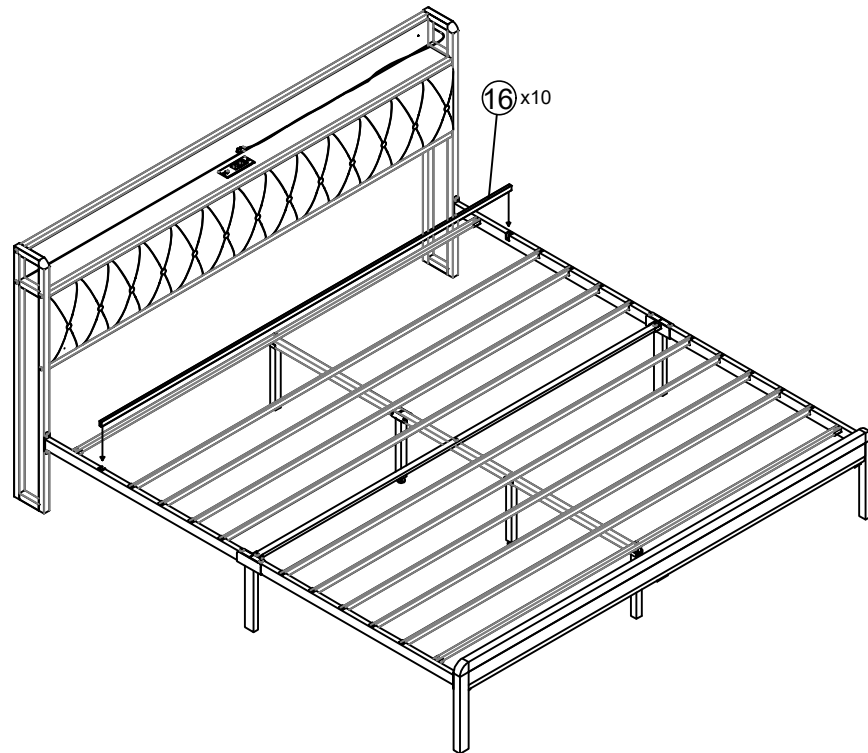


Step:8

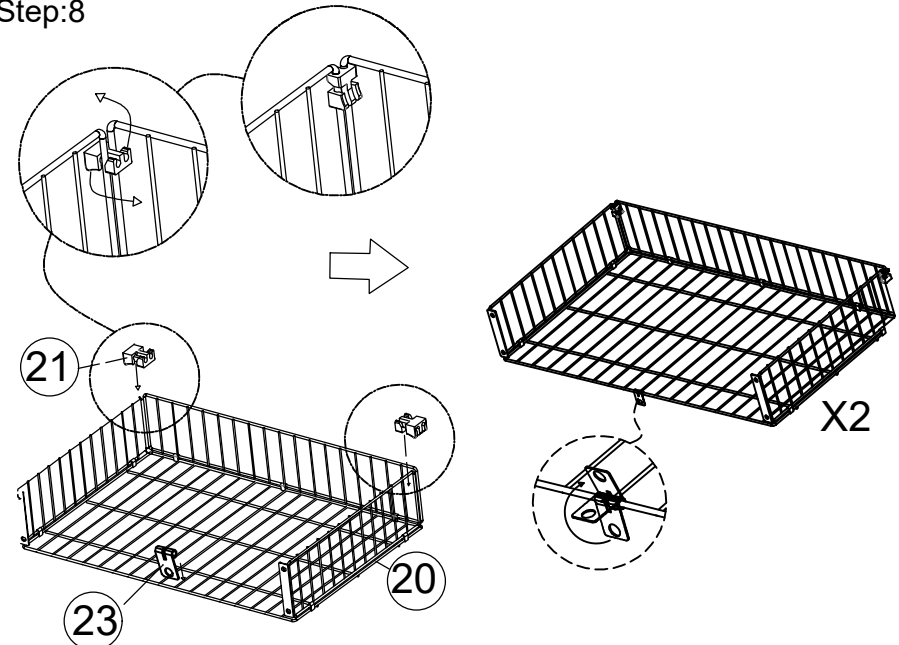

Step:9

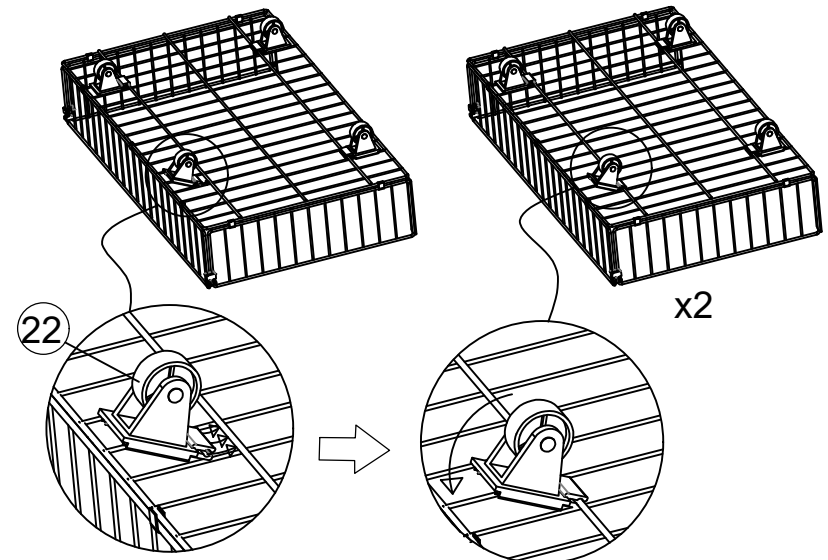

Step:10

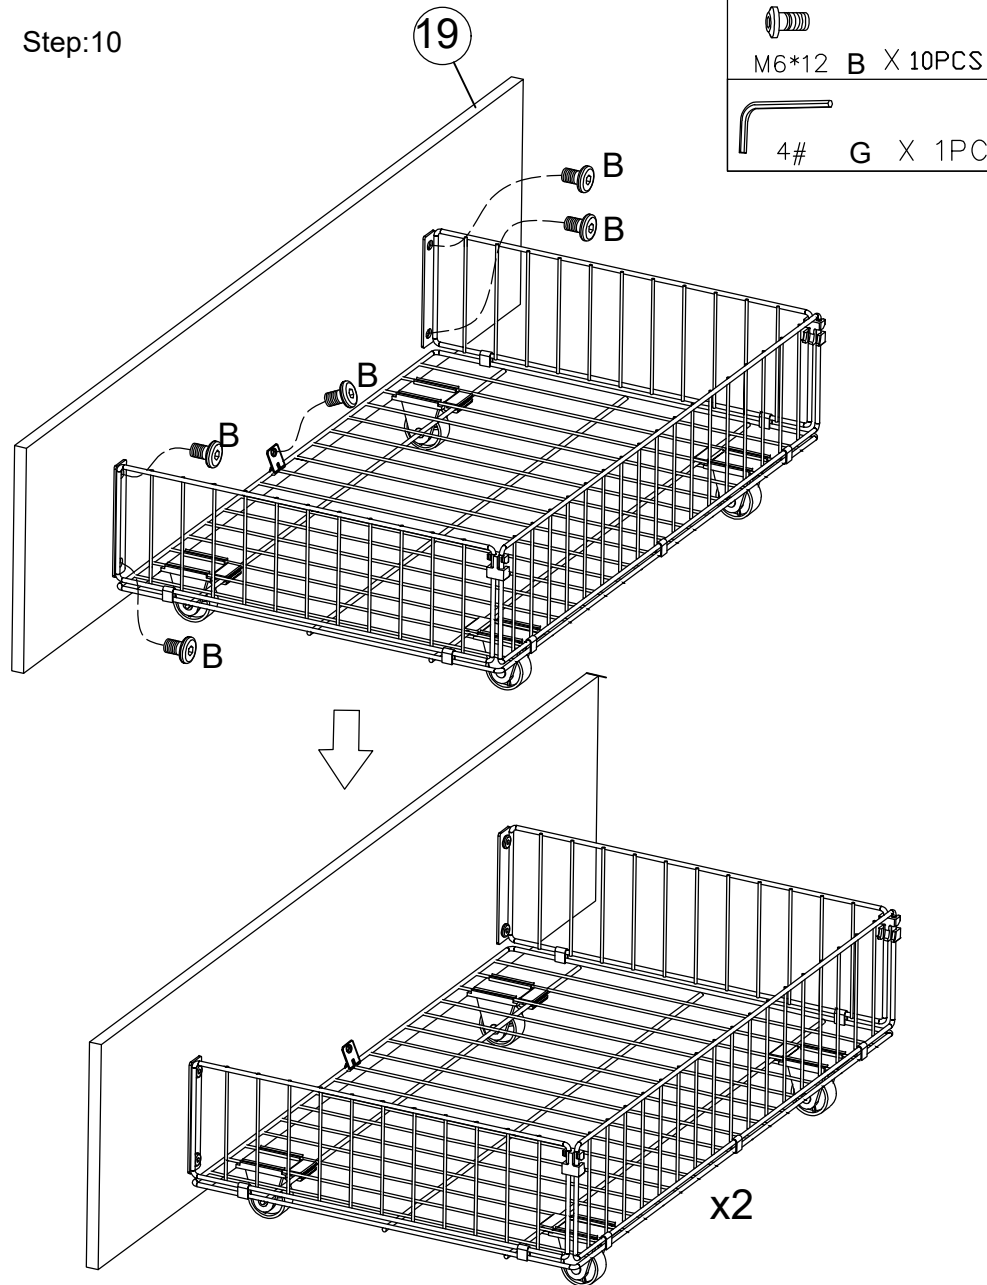

Step:11

