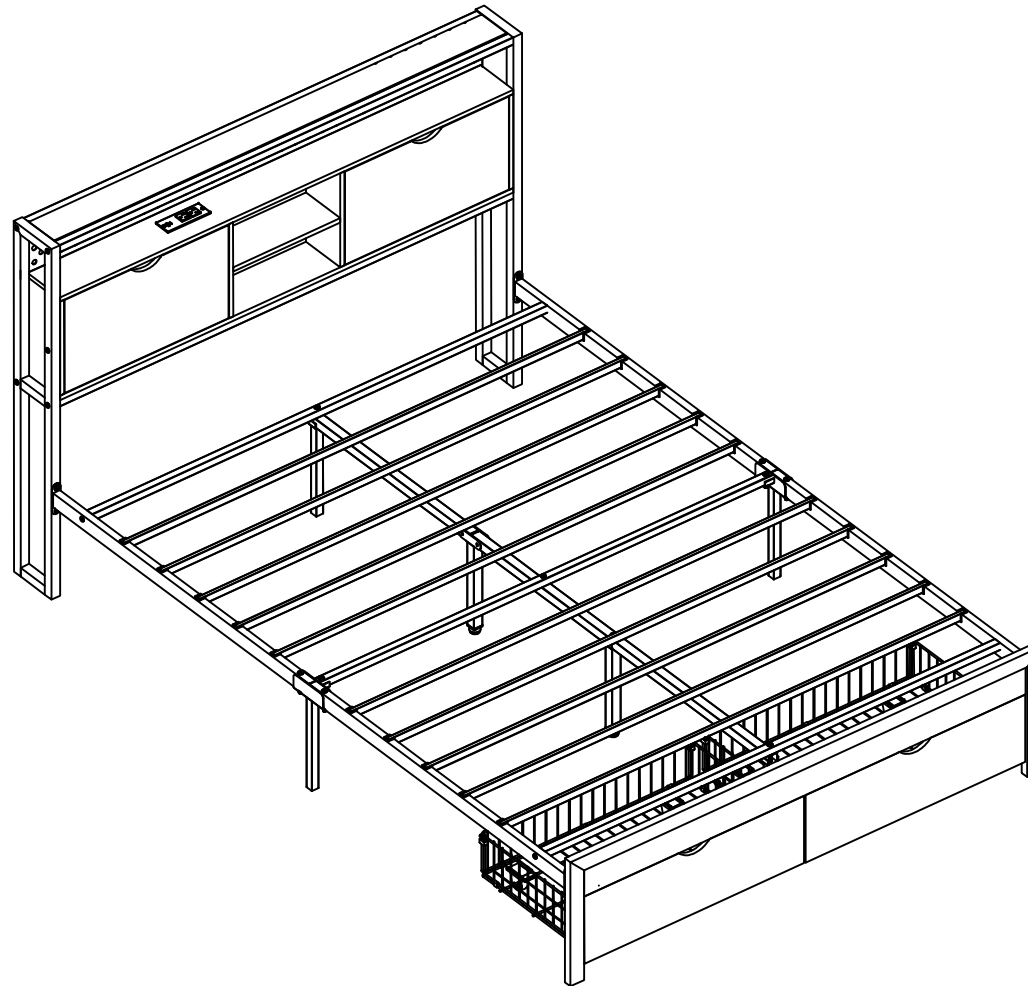
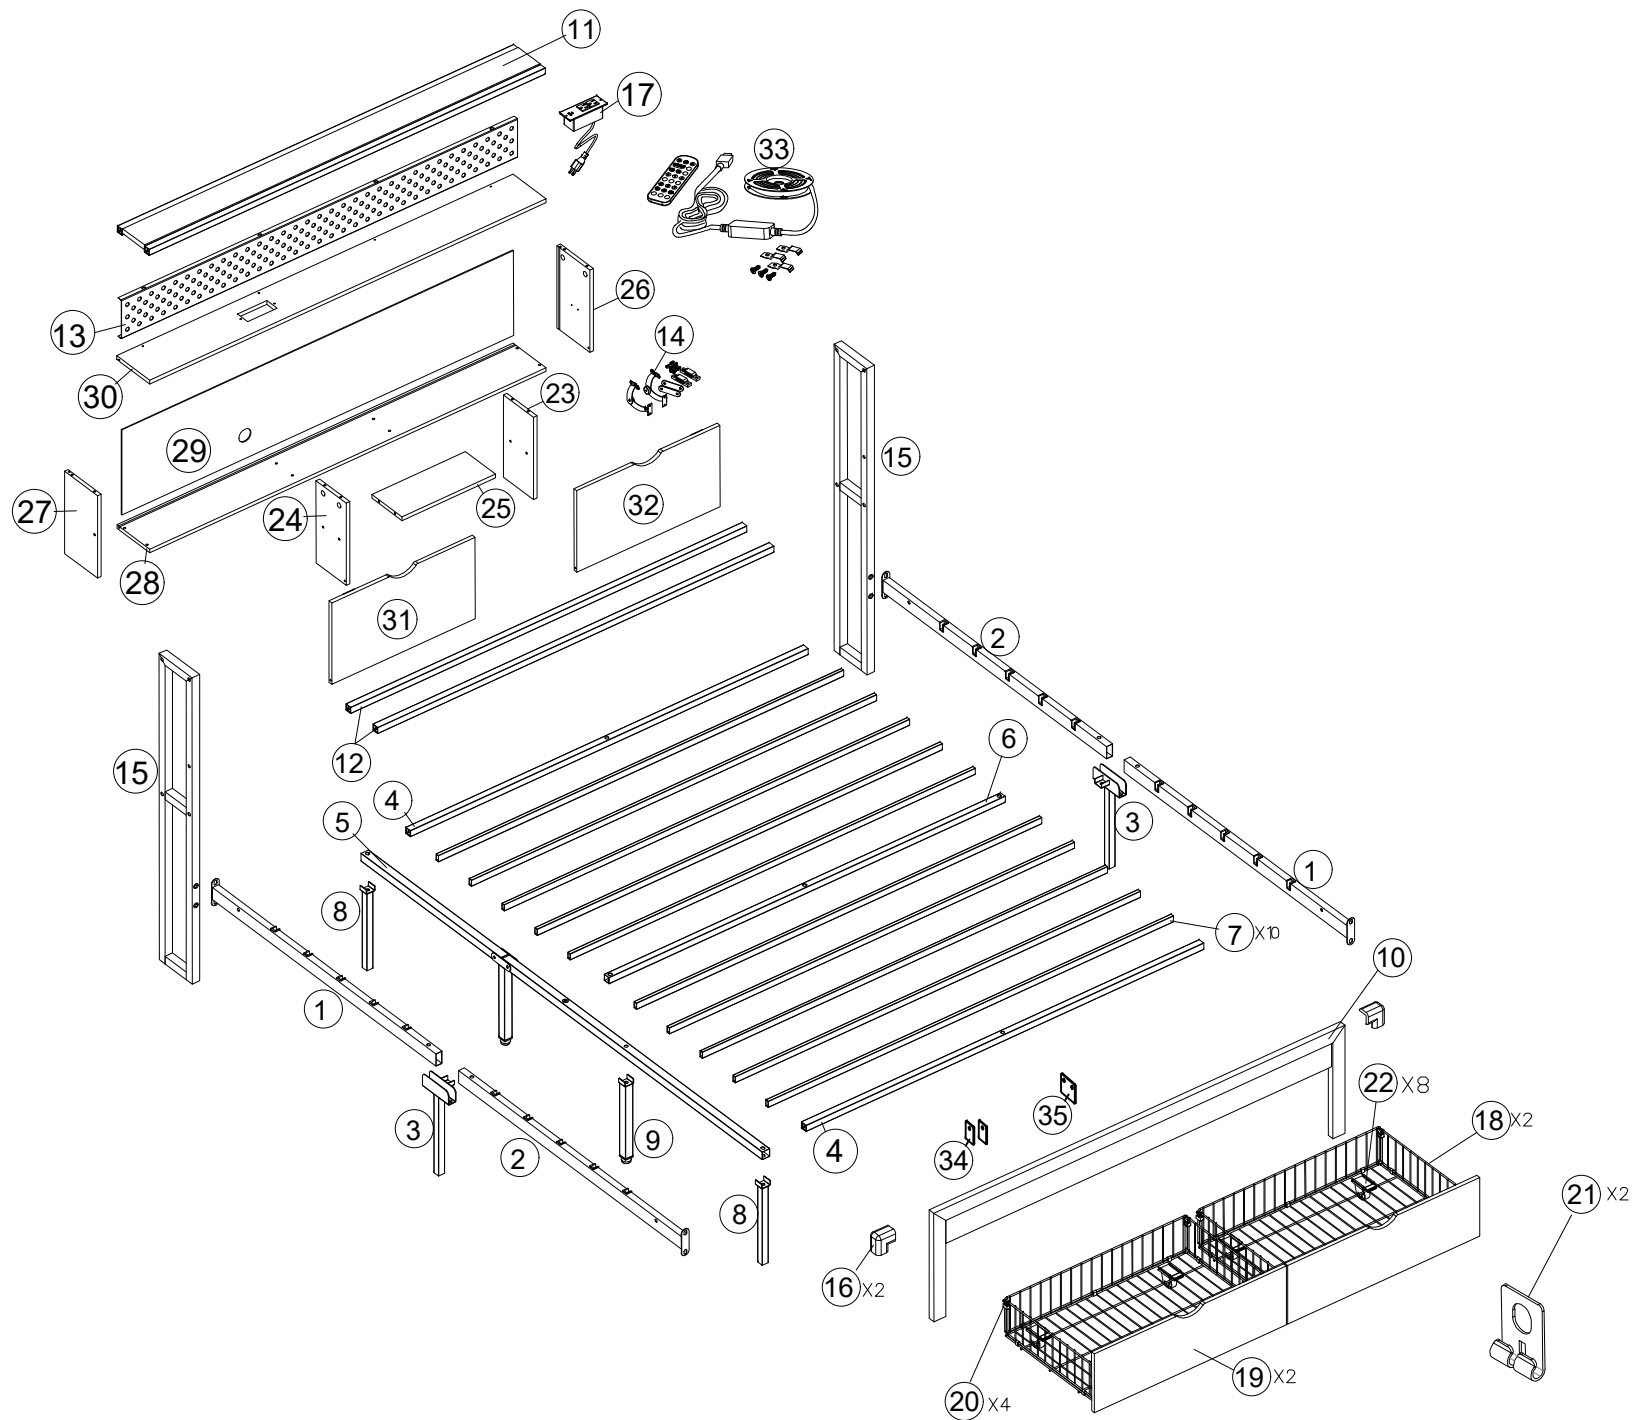


Assembly Instruction

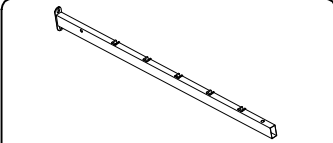
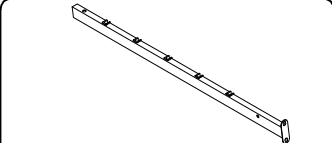
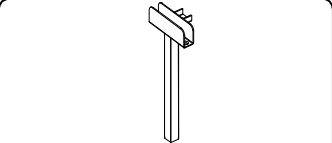
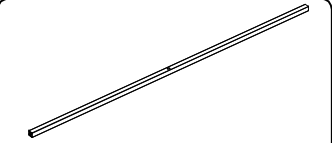
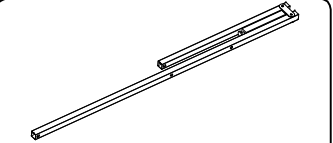
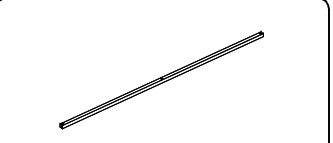
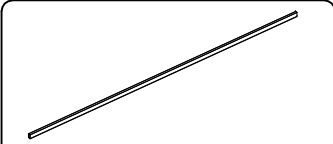
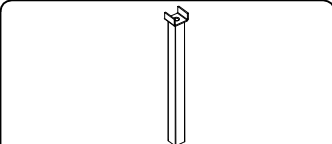
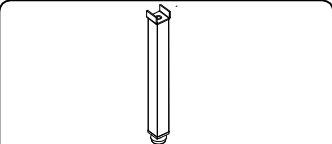
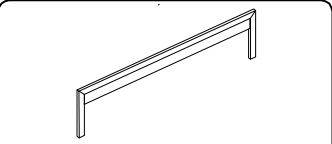
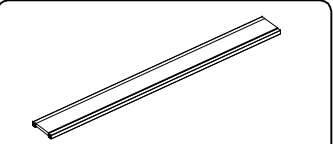
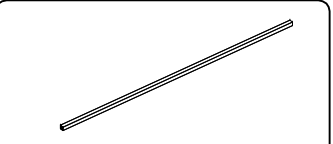
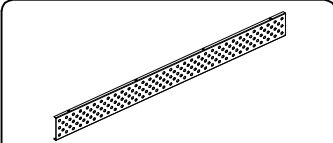
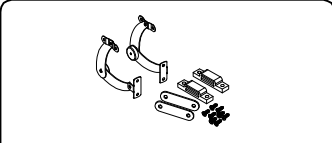
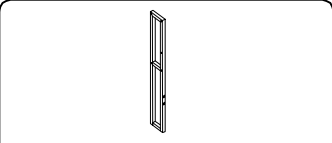
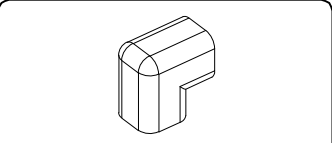
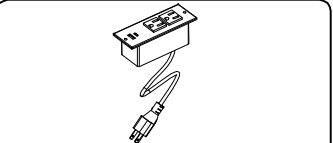
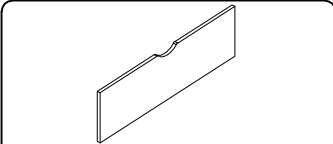
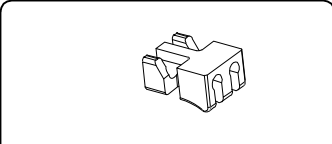
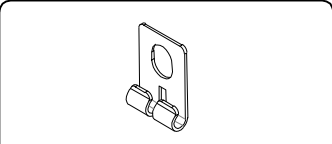
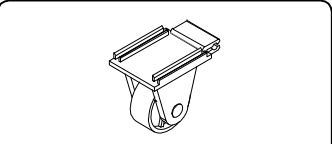
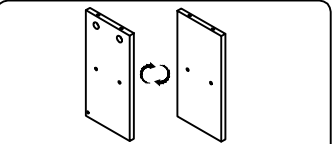
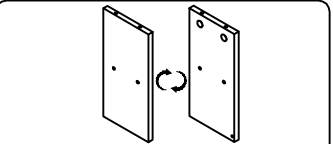
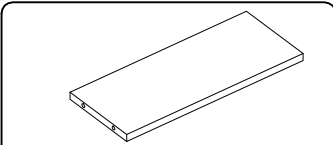
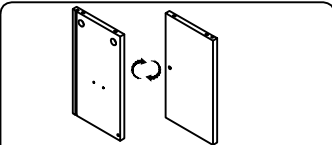
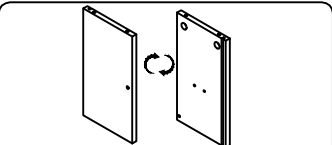
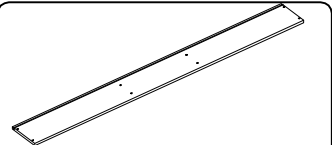
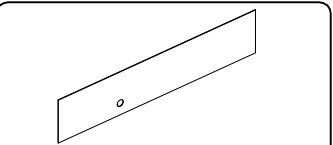
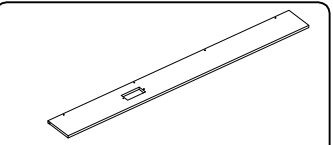
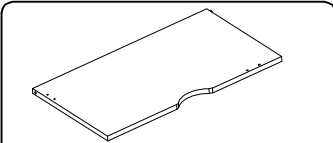
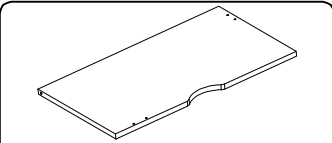
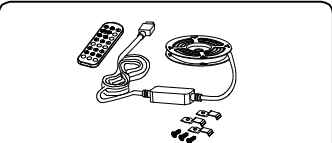
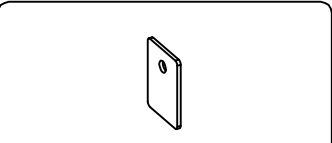
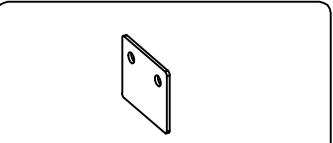
MB2302F/Q-HFLD



Attention: Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If the screws are tightened initially, subsequent hole positions may be misaligned.




Part list

 ① 2pcs	 ② 2pcs	 ③ 2pcs	 ④ 2pcs	 ⑤ 1pc	 ⑥ 1pc
 ⑦ 10pcs	 ⑧ 2pcs	 ⑨ 1pc	 ⑩ 1pc	 ⑪ 1pc	 ⑫ 2pcs
 ⑬ 1pc	 ⑭ 1pc	 ⑮ 2pcs	 ⑯ 2pcs	 ⑰ 1pc	 ⑱ 2pcs
 ⑲ 2pcs	 ⑳ 4pcs	 ㉑ 2pcs	 ㉒ 8pcs	 ㉓ 1pc	 ㉔ 1pc
 ㉕ 1pc	 ㉖ 1pc	 ㉗ 1pc	 ㉘ 1pc	 ㉙ 1pc	 ㉚ 1pc
 ㉛ 1pc	 ㉜ 1pc	 ㉝ 1pc	 ㉞ 2pcs	 ㉟ 1pc	

Hardware arts


A		M6x12mm	18	E		M8x20mm	8	I		5#	1	M		M6x32mm	8	Q		M4	4
B		M6x30mm	3	F		M8x35mm	3	O		4#	1	N		Ø14x9.5mm	8				
C		M6x35mm	4	G		M8x55mm	6	K		M4X12mm	14	J		Ø5x15mm	4				
D		M6x45mm	8	H		4#	1	L		M5X35mm	12	P		M4X14mm	4				

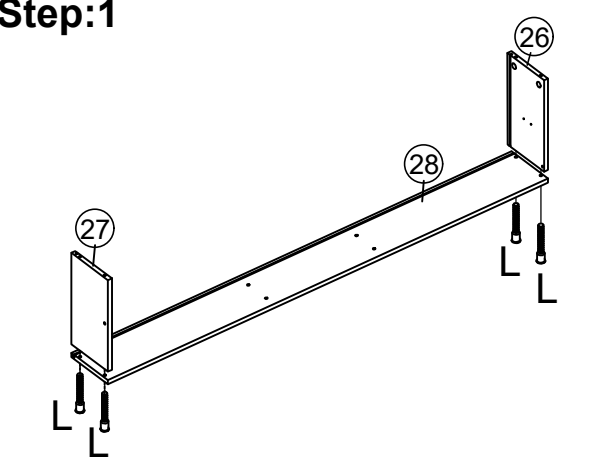Step:1




L		M5X35mm	4
O		4#	1

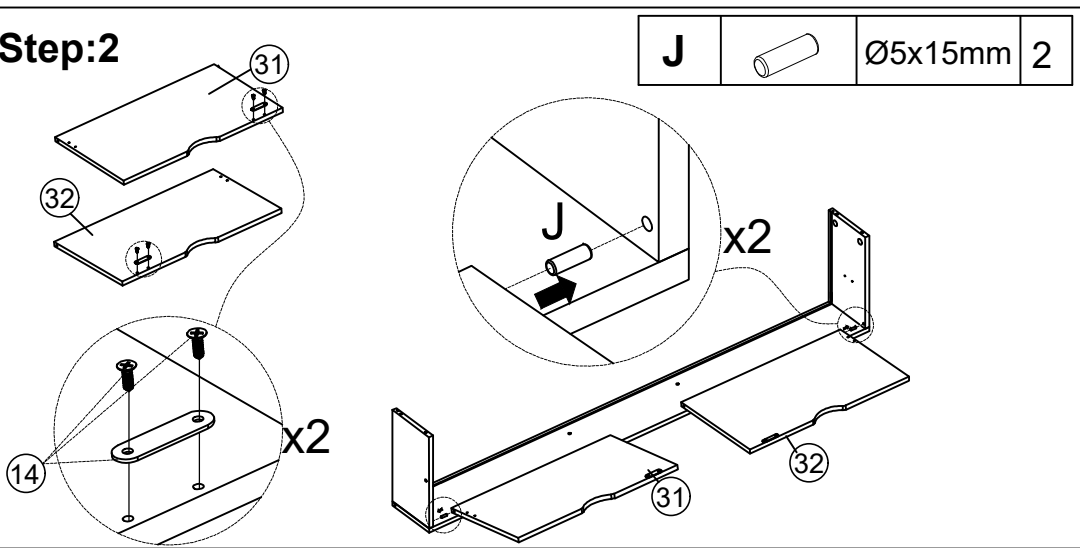Step:2




J		Ø5x15mm	2
---	---	---------	---

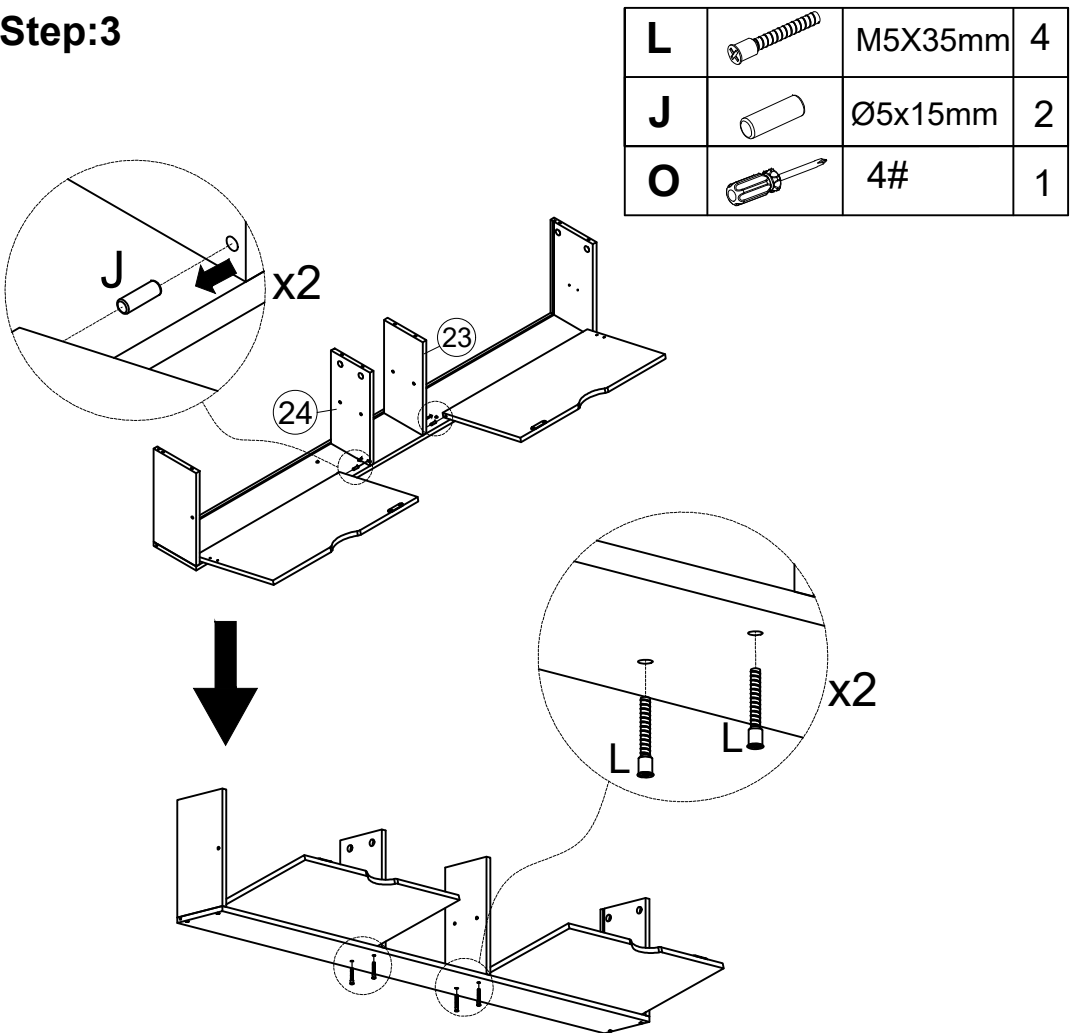
Step:3




L		M5X35mm	4
J		Ø5x15mm	2
O		4#	1

Step:4

K		M4X12mm	8
O		4#	1

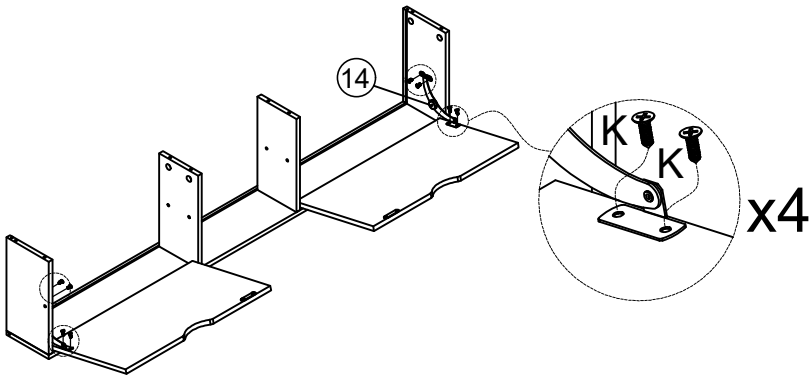


Step:6

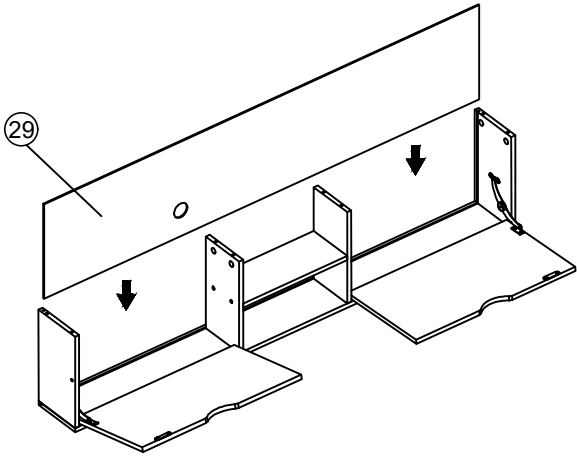


Step:5

L		M5X35mm	4
O		4#	1

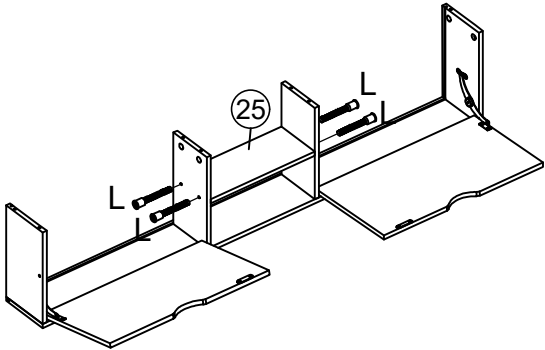


Step:7

K		M4X12mm	2	N		Ø14x9.5mm	8
M		M6x32mm	8	O		4#	1

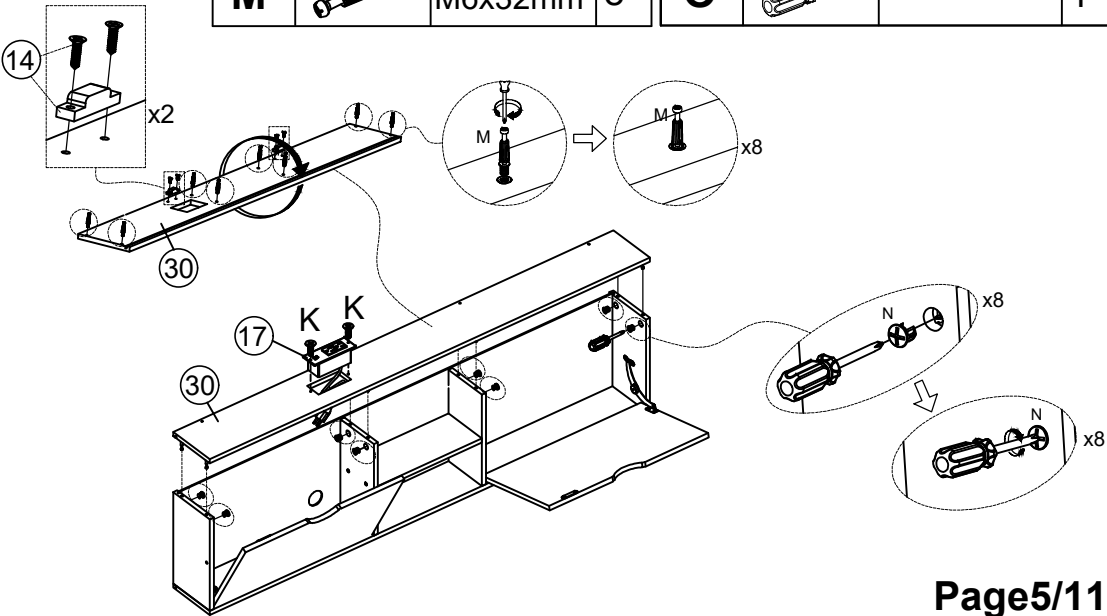


Step:8

D		M6x45mm	4
H		4#	1

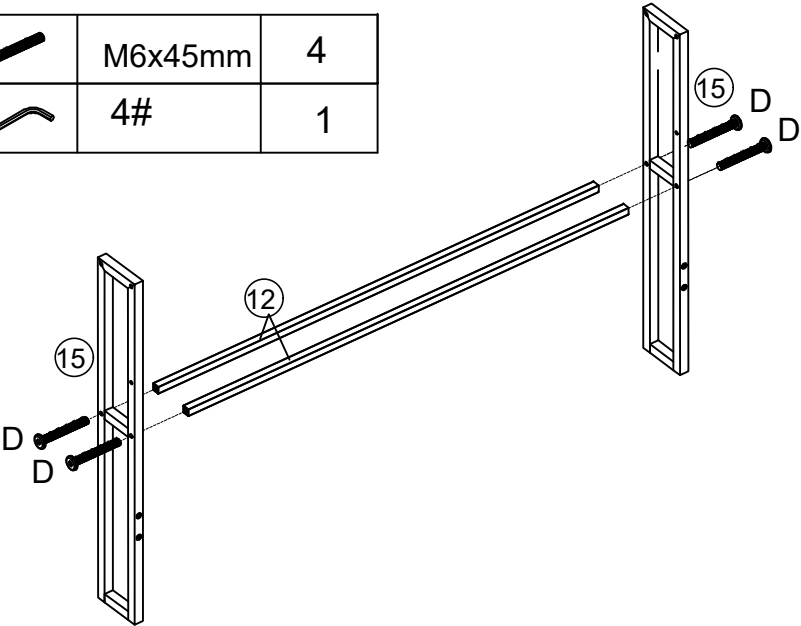


Step:9

B		M6x30mm	2
H		4#	1

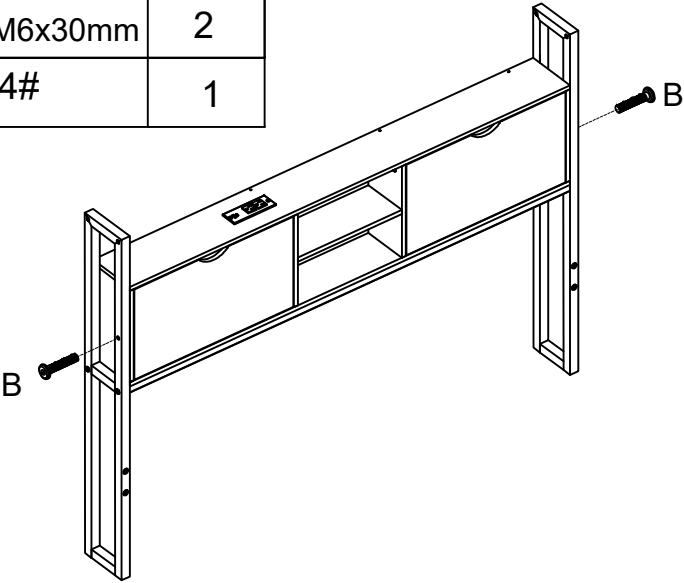


Step:10

D		M6x45mm	4
H		4#	1
O		4#	1

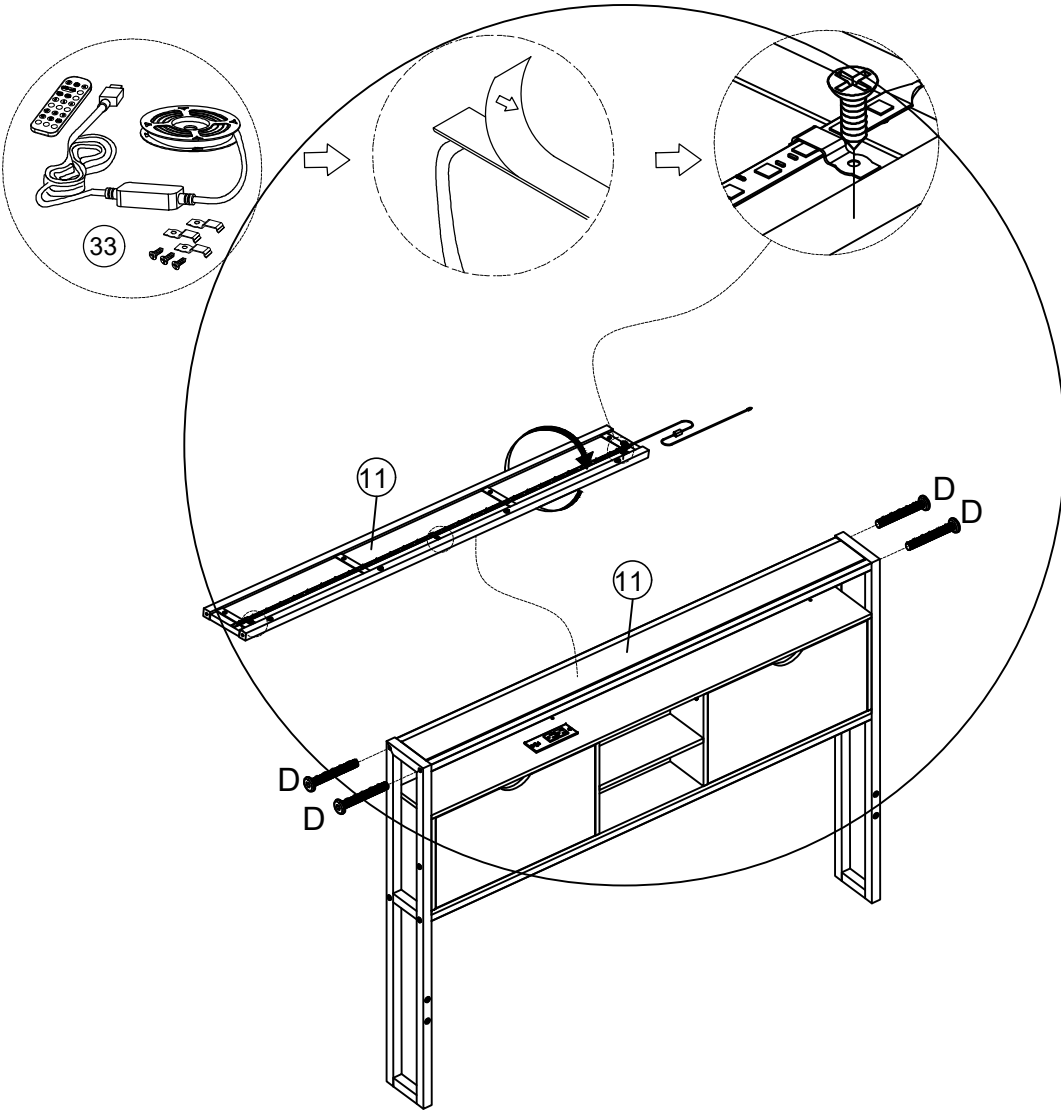


Step:11

A		M6x12mm	4
H		4#	1
P		M4x14mm	4
Q		M4	4

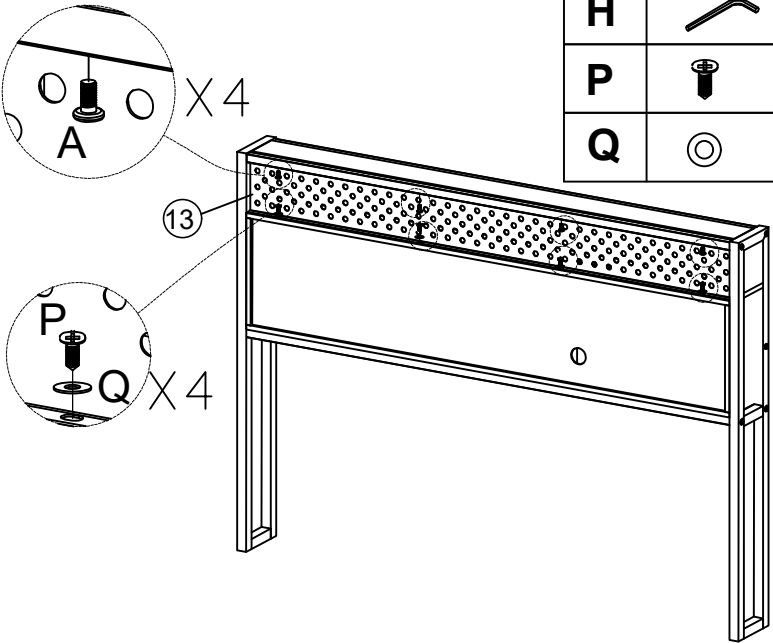


Step:12

G		M8x55mm	4
I		5#	1

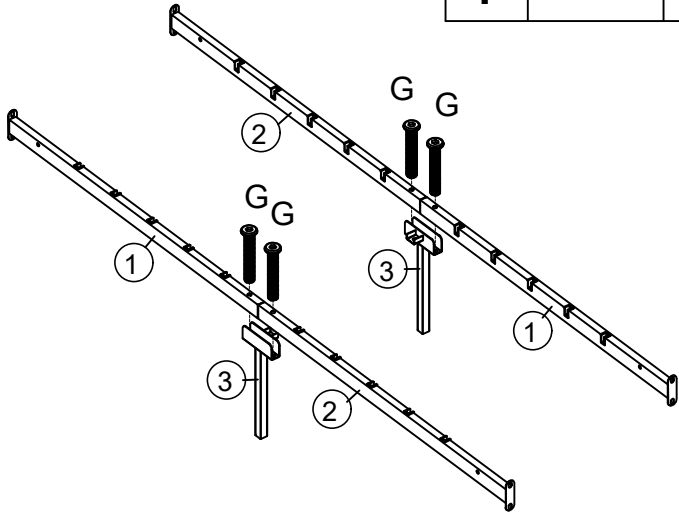


Step:13

K		M4X12mm	4
E		M8x20mm	8
I		5#	1

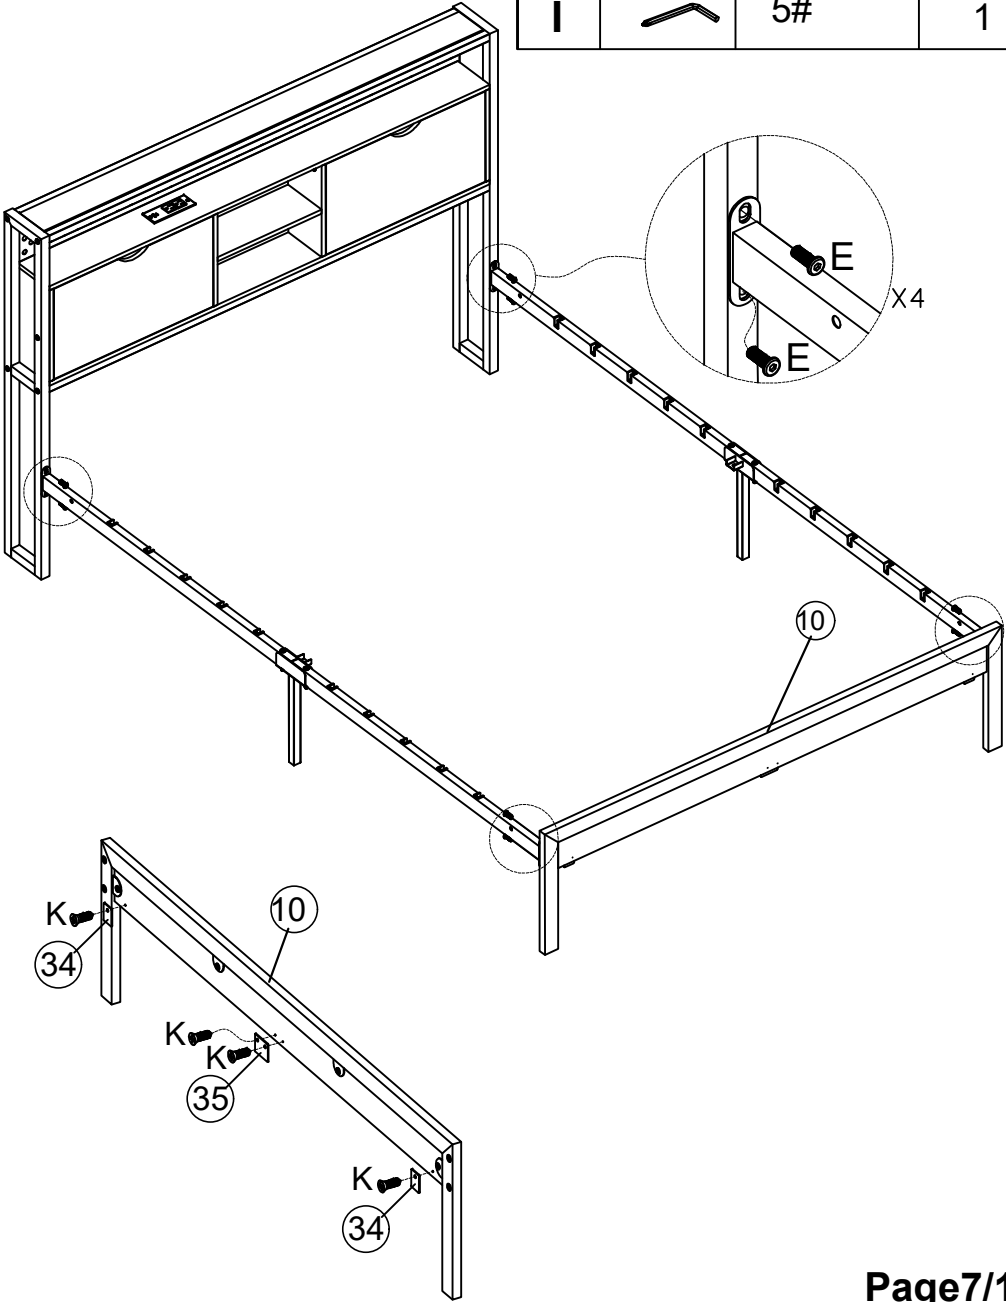


Step:14

C		M6x35mm	4
F		M8x35mm	2
H		4#	1
I		5#	1

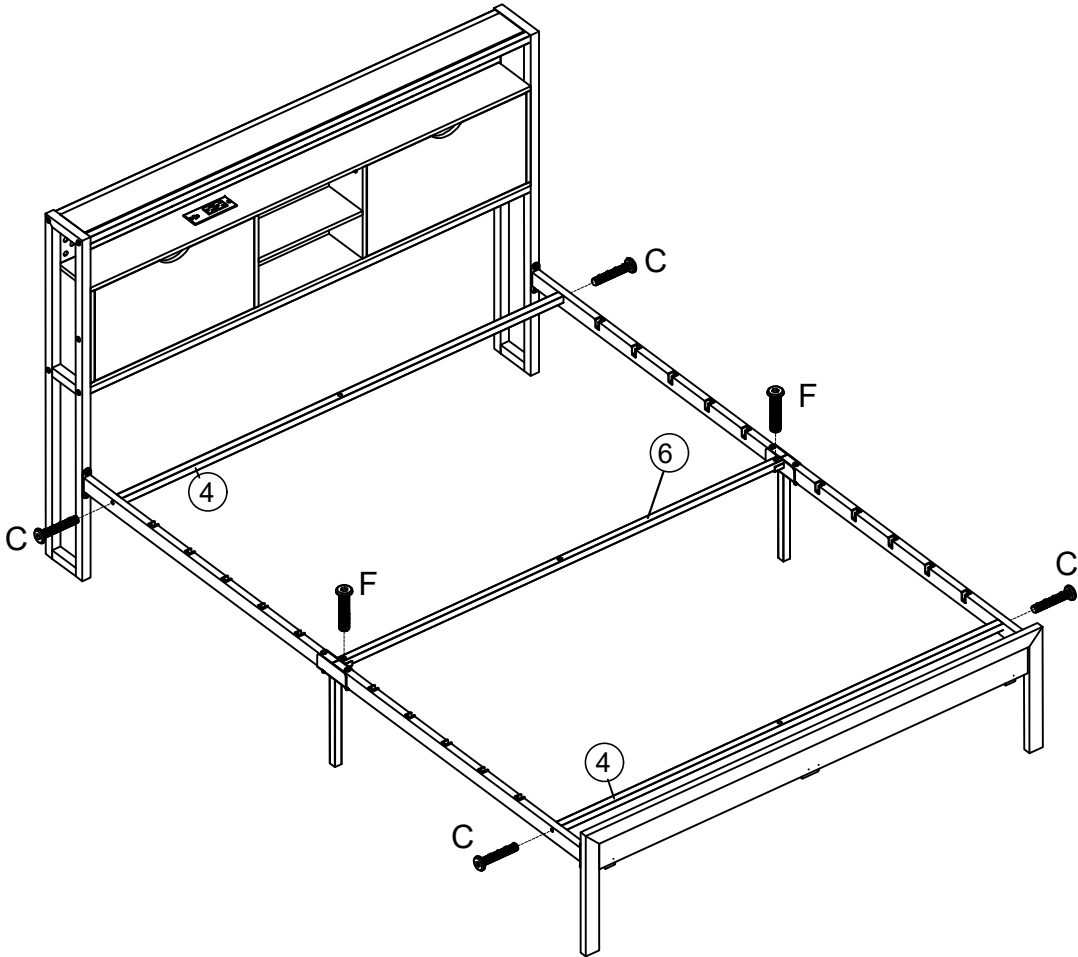


Step:15

B		M6x30mm	1
F		M8x35mm	1
G		M8x55mm	2
H		4#	1
I		5#	1


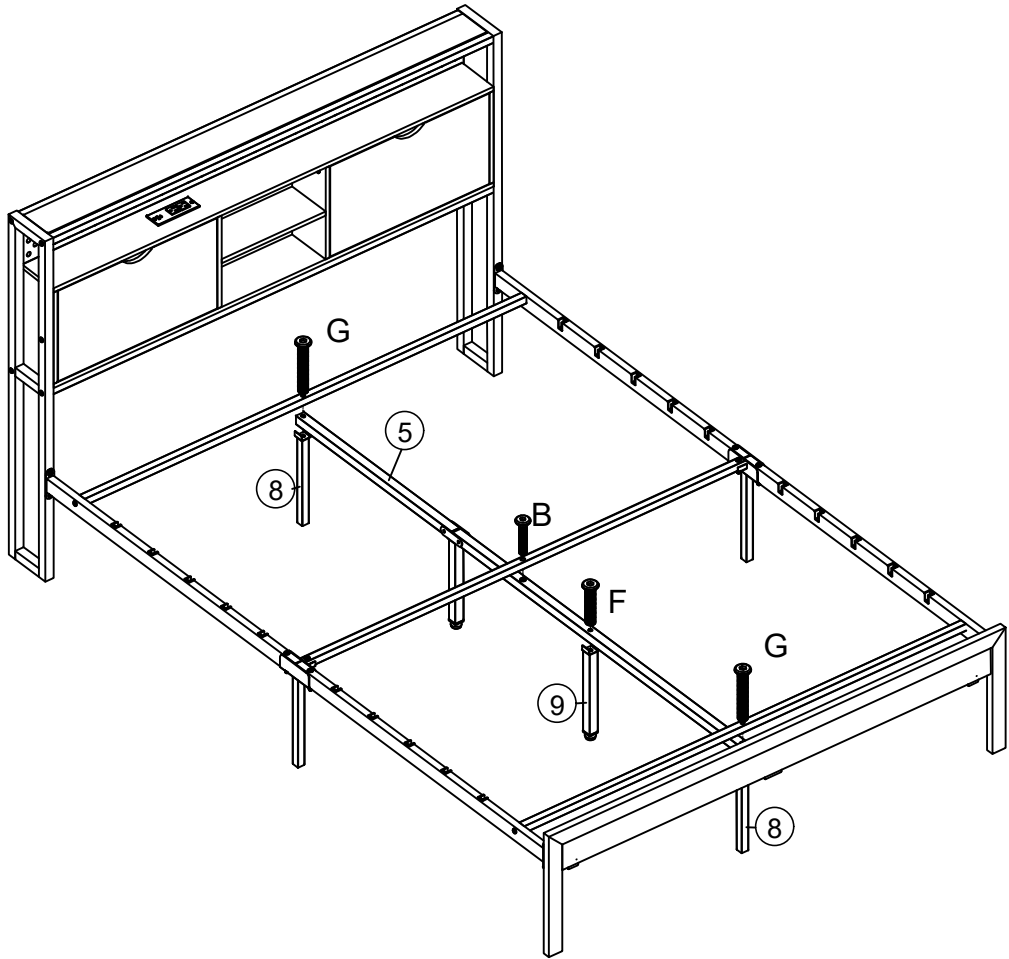


Step:16

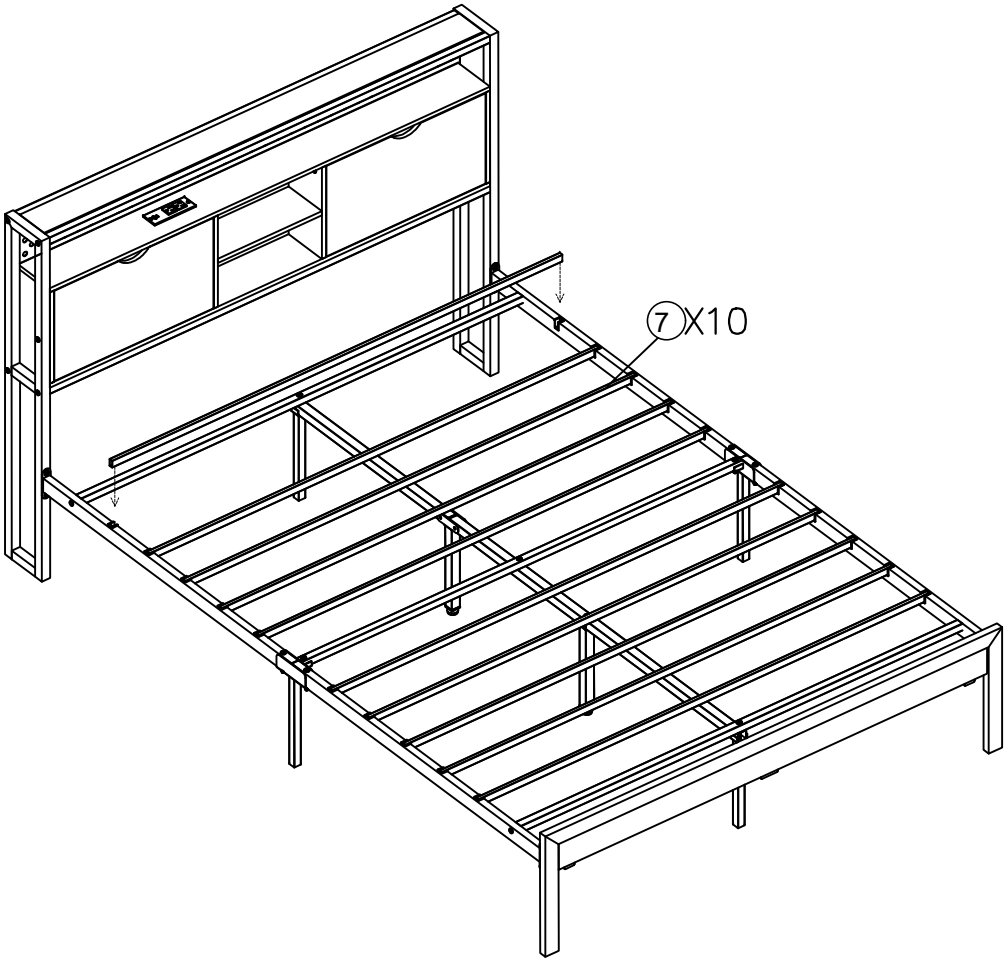


Step:17

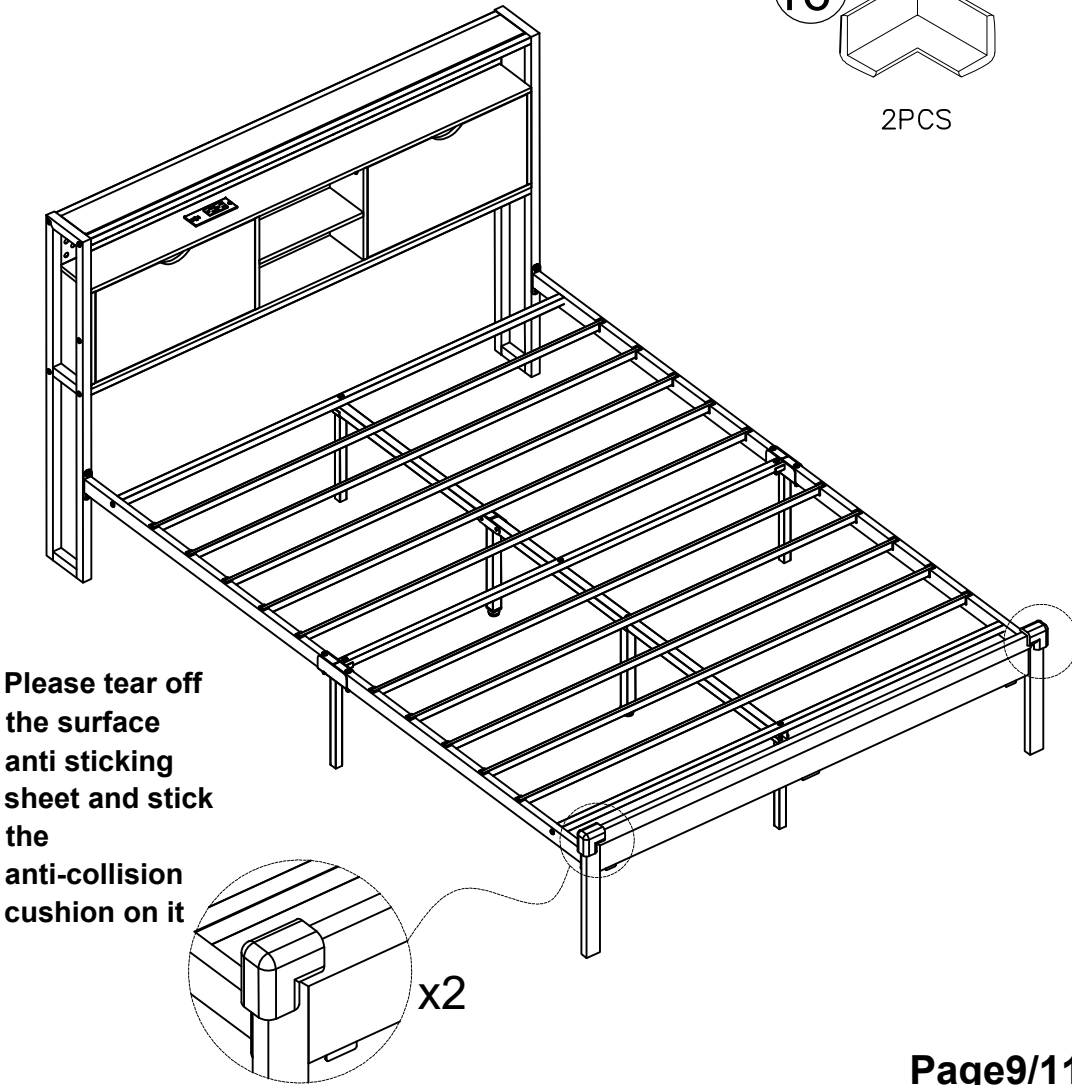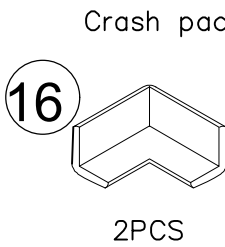
**There is a small sealing pocket in the package.
There are two crash pads in the sealing pocket.
As shown in the figure below.**



Step:18

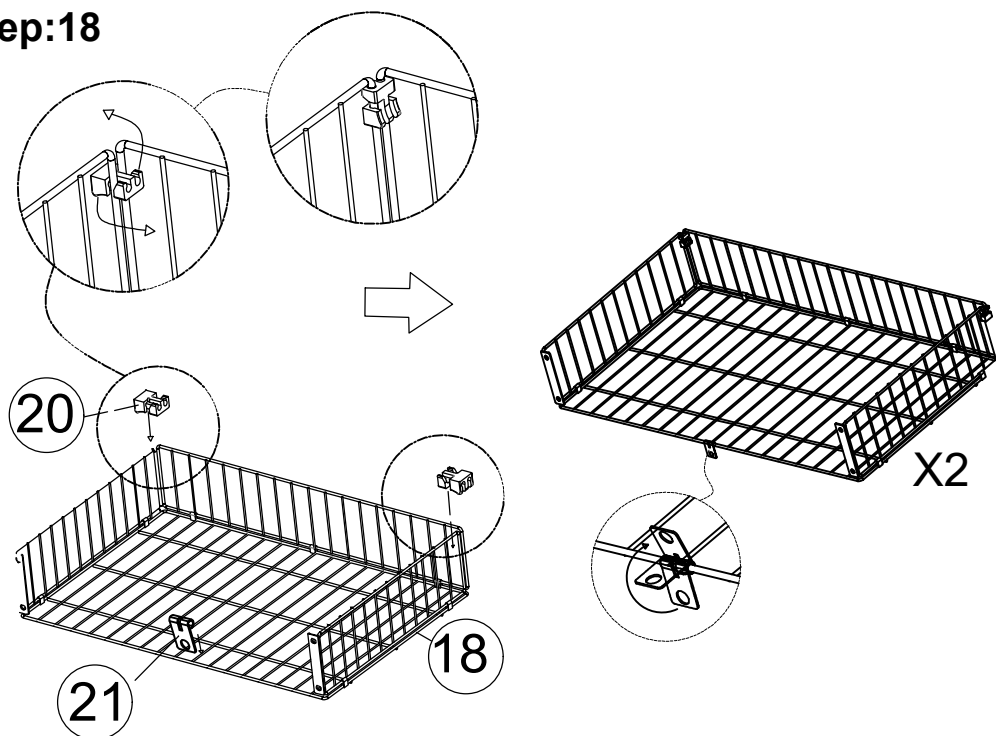

Step:19

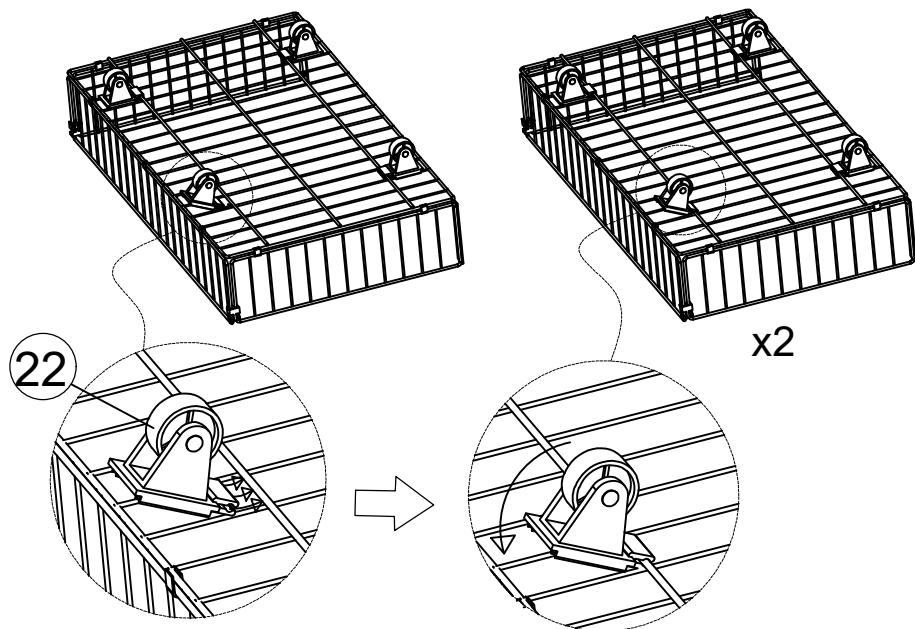

Step:20

A		M6x12mm	10
H		4#	1

