

PLASTIC GARDEN SHED 6x6FT

Instructions for Assembly




WARNING

Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.

SITE PREPARATION | PRÉPARATION DU SITE | PREPARACIÓN DEL LUGAR | VORBEREITUNG DES AUFSTELLUNGORTES | VOORBEREIDING VAN HET TERREIN | PREPARAZIONE DEL LUOGO DI ASSEMBLAGGIO | PREPARAÇÃO DO LOCAL


Level the ground surface | Nivelez la surface du sol | Nivela la superficie del suelo | Ebnen Sie die Bodenoberfläche | Maak de bodem vlak | Livellare la superficie del terreno | Nivela a superfície do solo

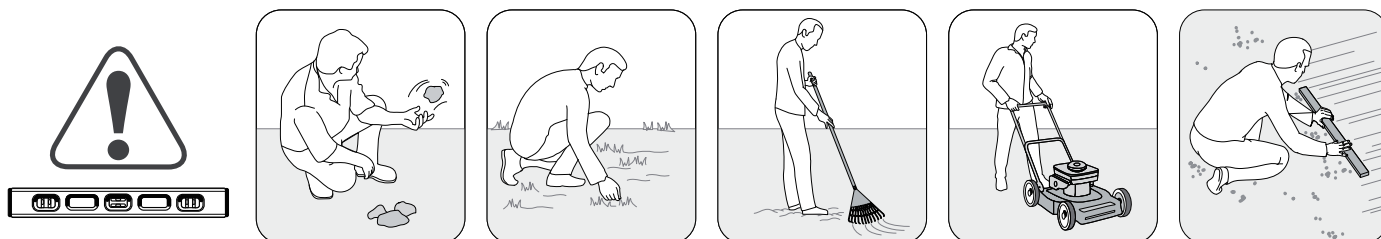

Recommendation: Construct a wooden or concrete base as a foundation | Recommandation: fabriquez une base en bois ou en béton en guise de fondation | Recomendación: construya una base de madera o de cemento a modo de cimiento | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | Aanbeveling: maak een houten of betonnen ondergrond als fundering | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | Recomendação: Construa uma base de madeira ou de cimento como fundação


Option | Opción | optie | opzione | opção

A

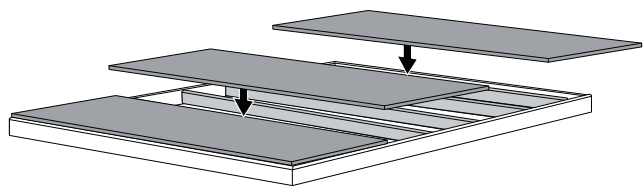


Option | Opción | optie | opzione | opção

B

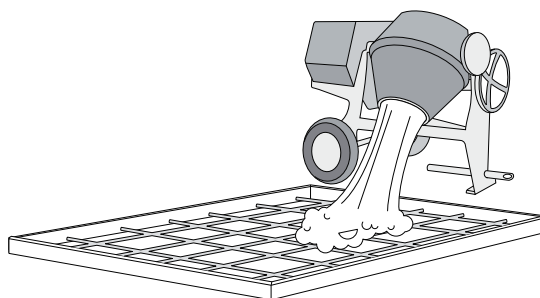

External floor measurements are: | Les mesures externes de la étage sont: | Las medidas del suelo externo son: | Die Außen-Bodenmaße betragen: | De afmetingen van de externe vloer zijn: | Le dimensioni esterne del pavimento sono: | As medidas externas do chão são:

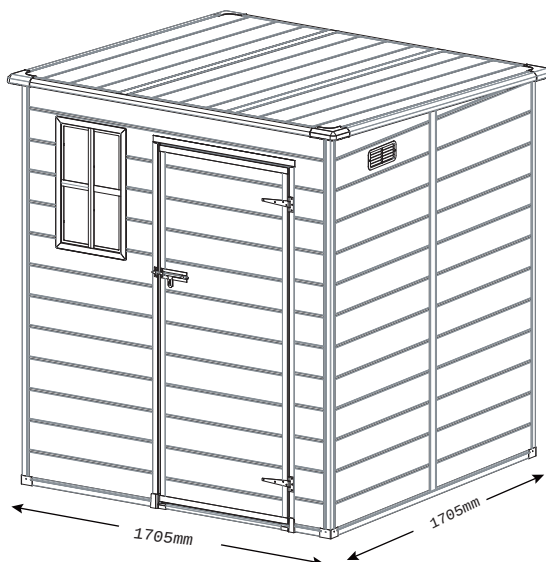

BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | ANTES DE EMPEZAR EL ARMADO | VOR MONTAGEBEGINN | VOORDAT U BEGINT TE MONTEREN | PRIMA DI INIZIARE L'ASSEMBLAGGIO | ANTES DE INICIAR A MONTAGEM

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées AVANT de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas ANTES de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.

Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte VOR dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, VOORDAT u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze opeen schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate PRIMA di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizzarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.


Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas ANTES de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

REQUIRED TOOLS | OUTILS EXIGÉS | HERRAMIENTAS NECESARIAS | BENÖTIGTE WERKZEUGE | BENODIGD GEREEDSCHAP | ATTREZZATURA OCCORRENTE | FERRAMENTAS NECESSÁRIAS



SPATULA | SPATULE | ESPÁTULA | SPACHTEL | SPATEL | SPATOLA | ESPÁTULA

- Use spatula (part “SG8”) for easier insertion of panel into profile.
- Utilisez la spatule (partie “SG8”) pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza “SG8”) para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung “SG8”), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel SG8) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte SG8) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça “SG8”) para facilitar a inserção do painel no perfil.



SG8 x2



ASSEMBLY REQUIRES TWO PEOPLE | LE MONTAGE DOIT ÊTRE EFFECTUÉ PAR DEUX PERSONNES | SE NECESITAN DOS PERSONAS PARA ARMARLO | ZWEI PERSONEN ZUR MONTAGE NOTWENDIG | MONTAGE VEREIST TWEE PERSONEN | L'ASSEMBLAGGIO RICHIEDE DUE PERSONE | A MONTAGEM EXIGE DUAS PESSOAS

PARTS LIST


NO.	PART.	Qty.
VW1-2		1
VD1-1		1
VD1-3		1
VD1-2		1
VW1-3		1
VW1-1		1
XW1-1		1
CW2-1		17
XF1-1		4
XF1-2		2
VW4		1
XW1-2L		1
XW1-2R		1
XW1-3L		1
XW1-3R		1
CW3-1		2
VW2-1		1
XR1-2		3
EA4		1
ES1		1
CP1		3
VP7		1
CP3		1
DP5		2
EP4		1
XP1		2
VP2		2
VP3		2
SG102		1
SG10		1
SG101		1

NO.	PART.	Qty.
CA1R		1
VA1L		1
EA3		1
CA2R		1
CA2		1
XPA2		2
VPA1		1
XPA3		1
XPA1		2
PS1		1
XS2		2
XS3		1
SG14		4
M03-7		1
M04		1
M03-6L		1
M01		2
SG2		4
SG6		4
SG7-2		1
SG7-1		1
SG8		2
SG9		3
BY		1
SG12		2
Drill		1
Z410		70
Z420		102
ZW413		36


- Use spatula  (part"SG8") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing
- Please be mindful of the screw size used during installation; using screws that are too long may damage the shed.




FLOOR ASSEMBLY

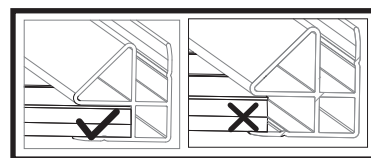




● Fully fit the panel inside the profile

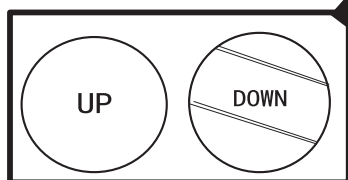

The crease line of the floor must be underneath

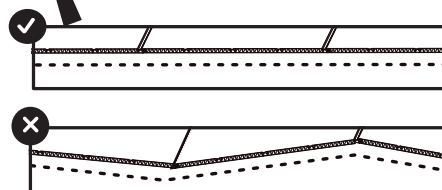

Step 1

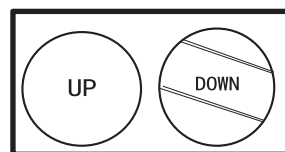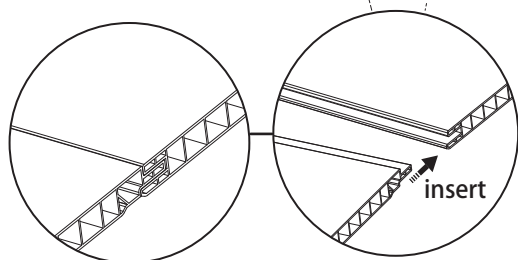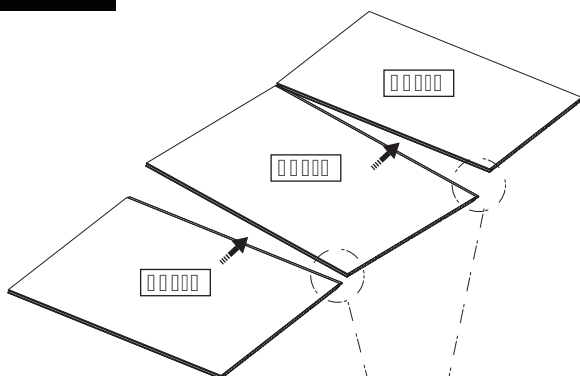


The crease line of the floor must be underneath.

XF1-1






2 PC


XF1-2



1 PC

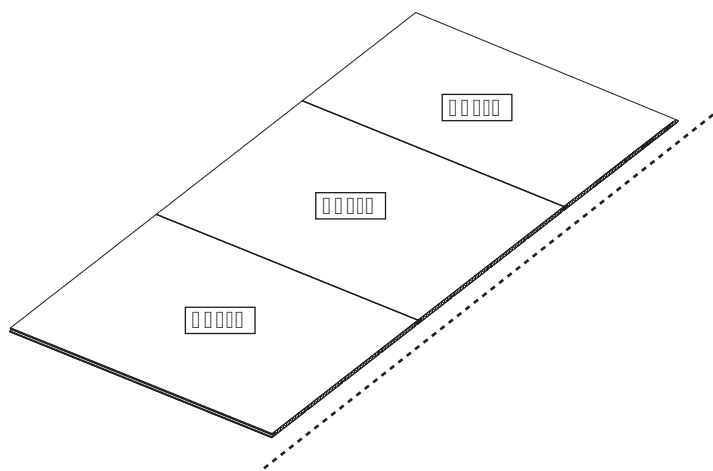

Step 2

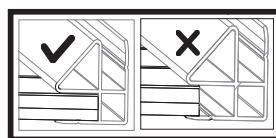

● Fully fit the panel inside the profile

SG8



CP1





2 PC

SG6




1 PC

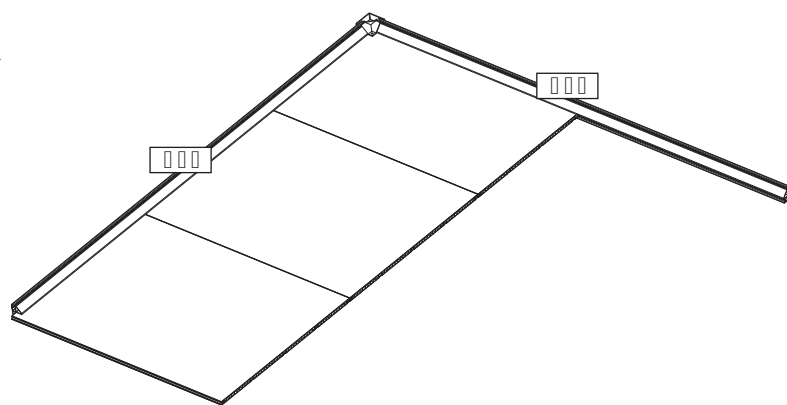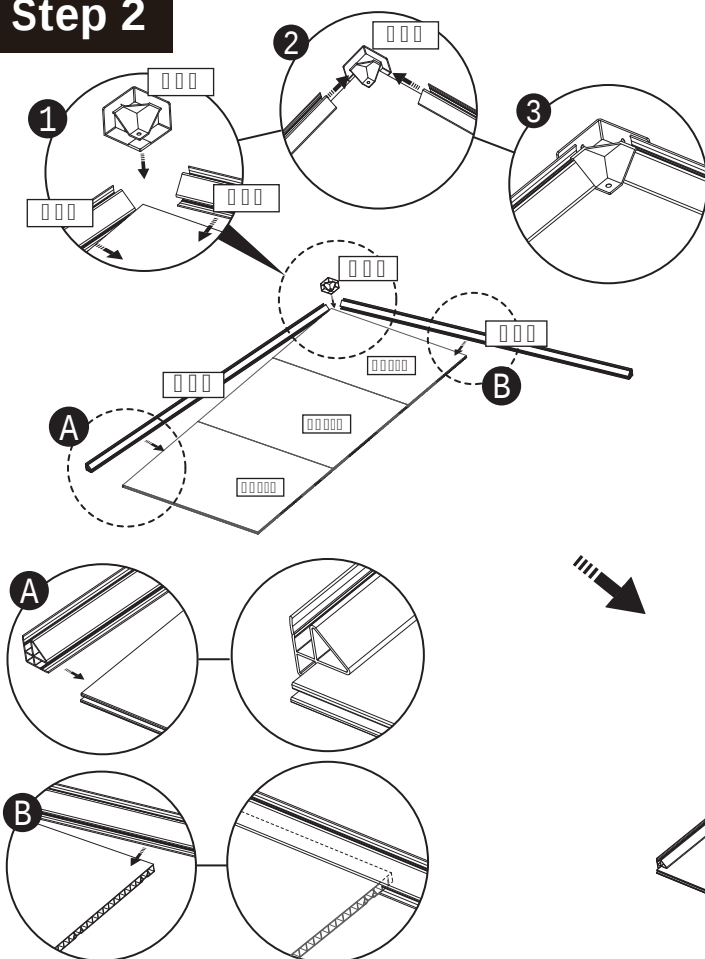



Step 3

XPA3




1 PC


SG8

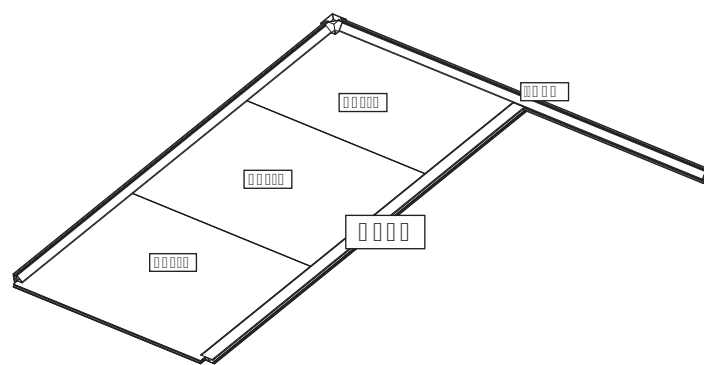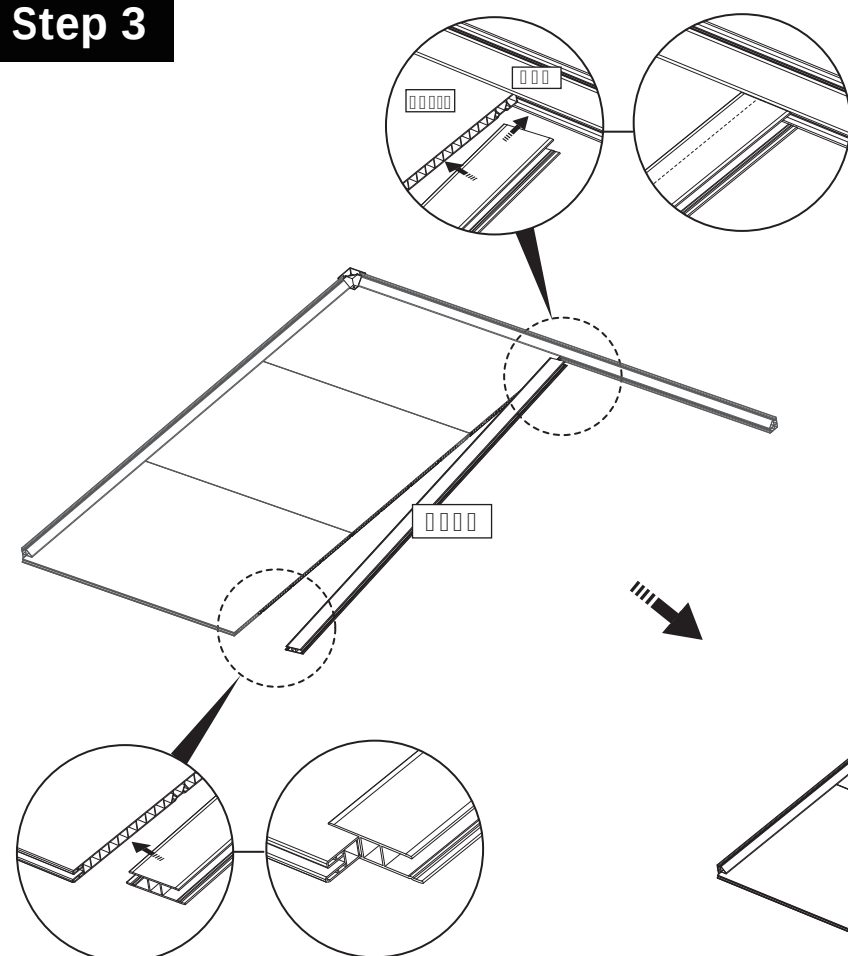


Step 4

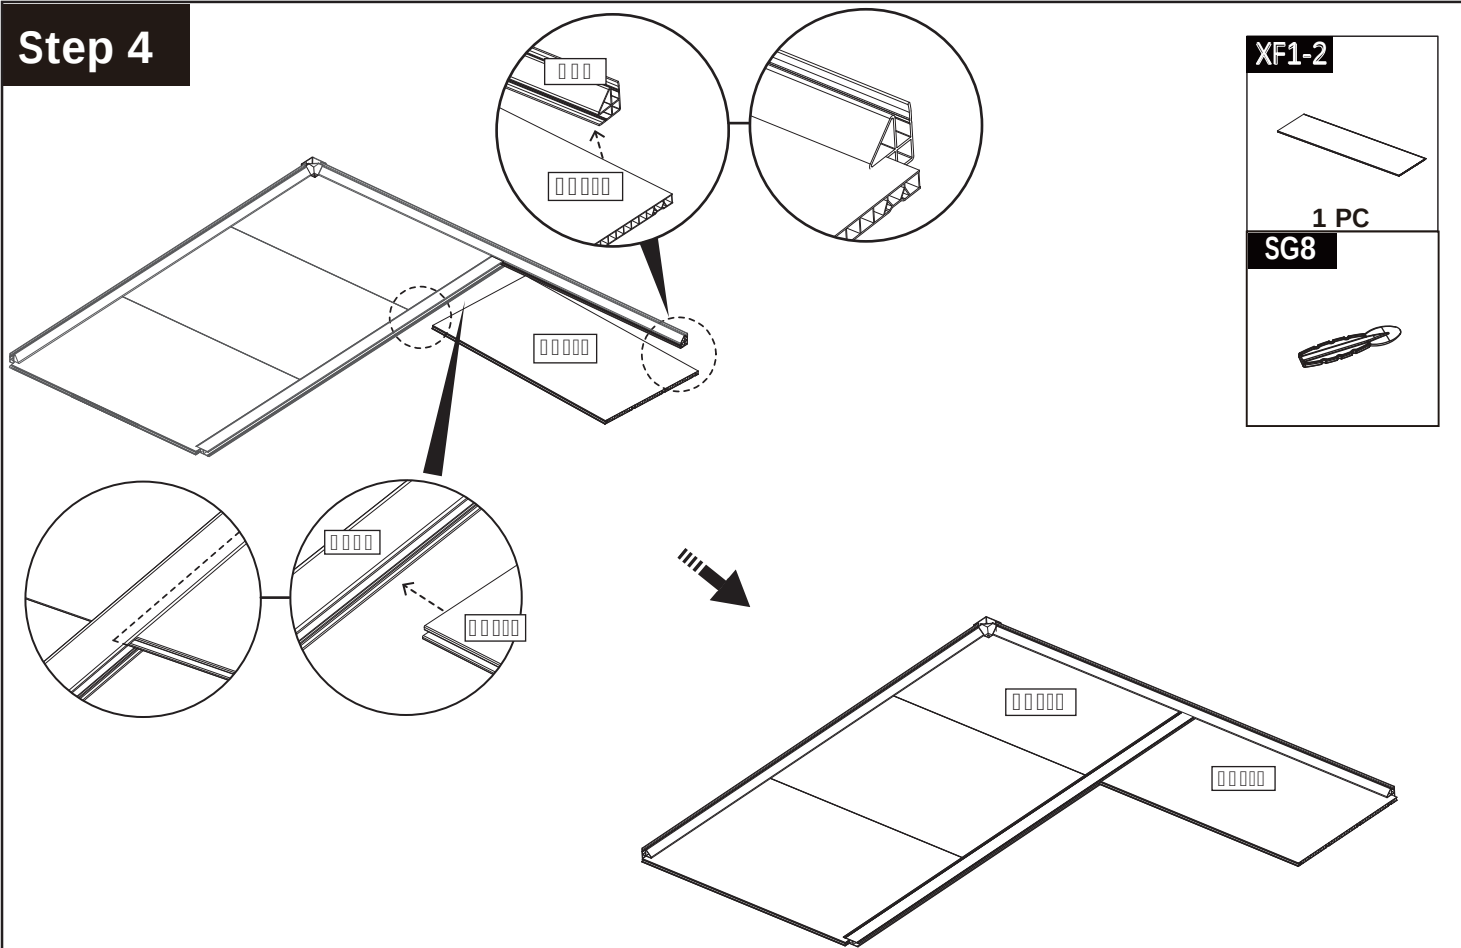


Step 5

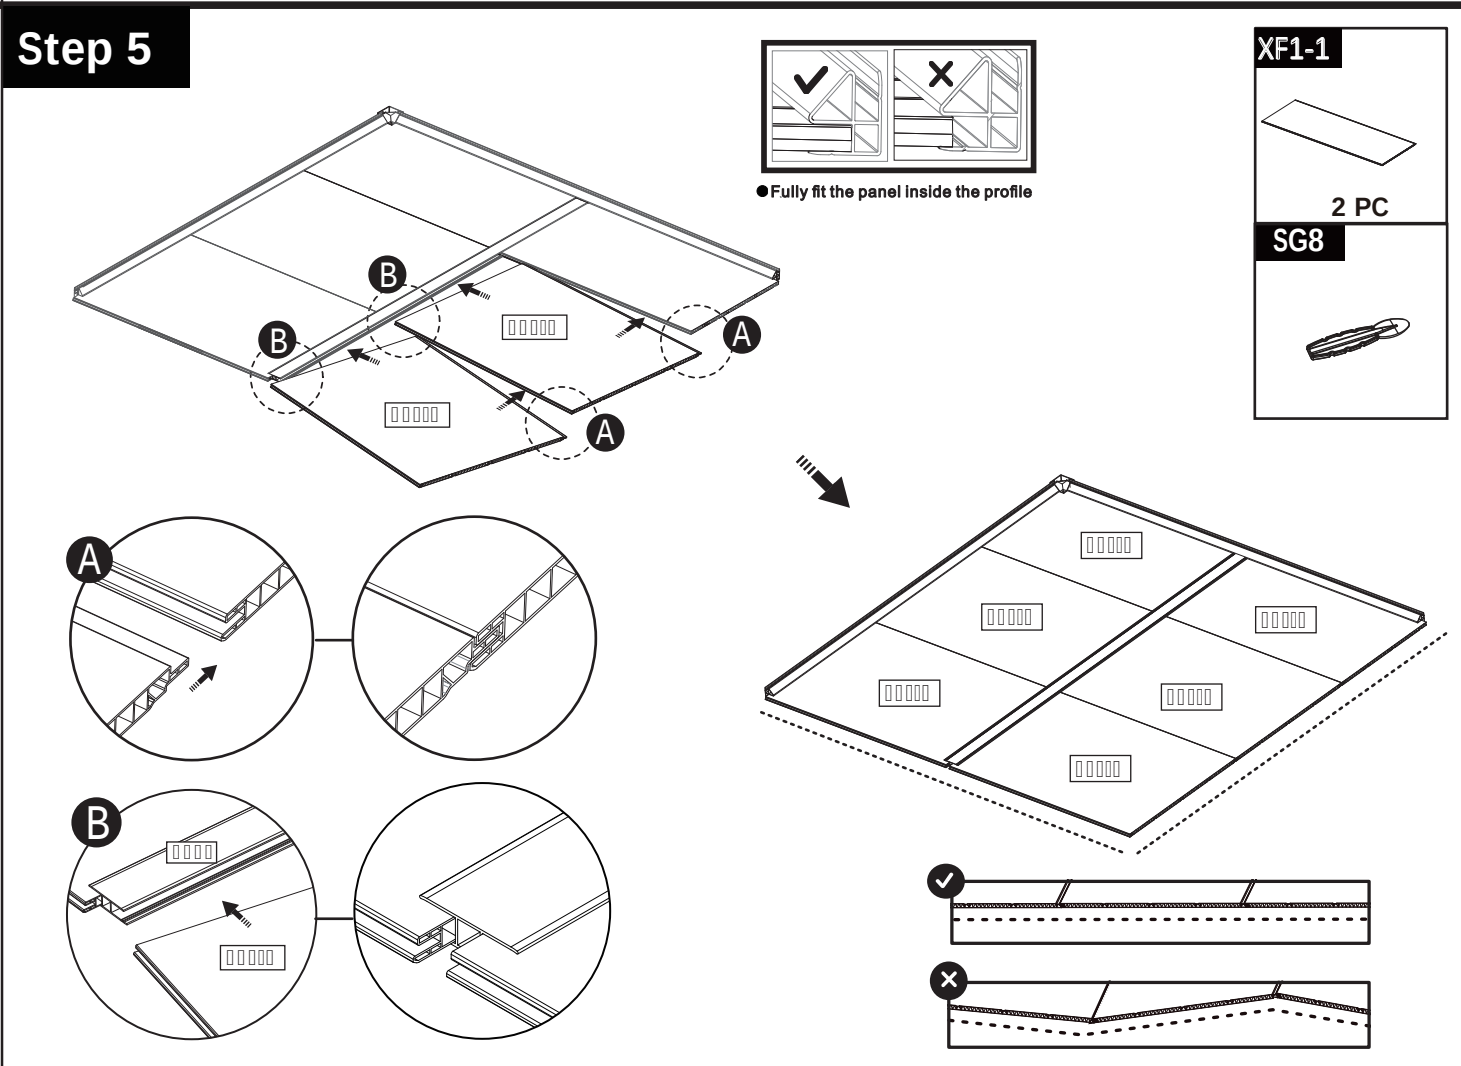





Step 6

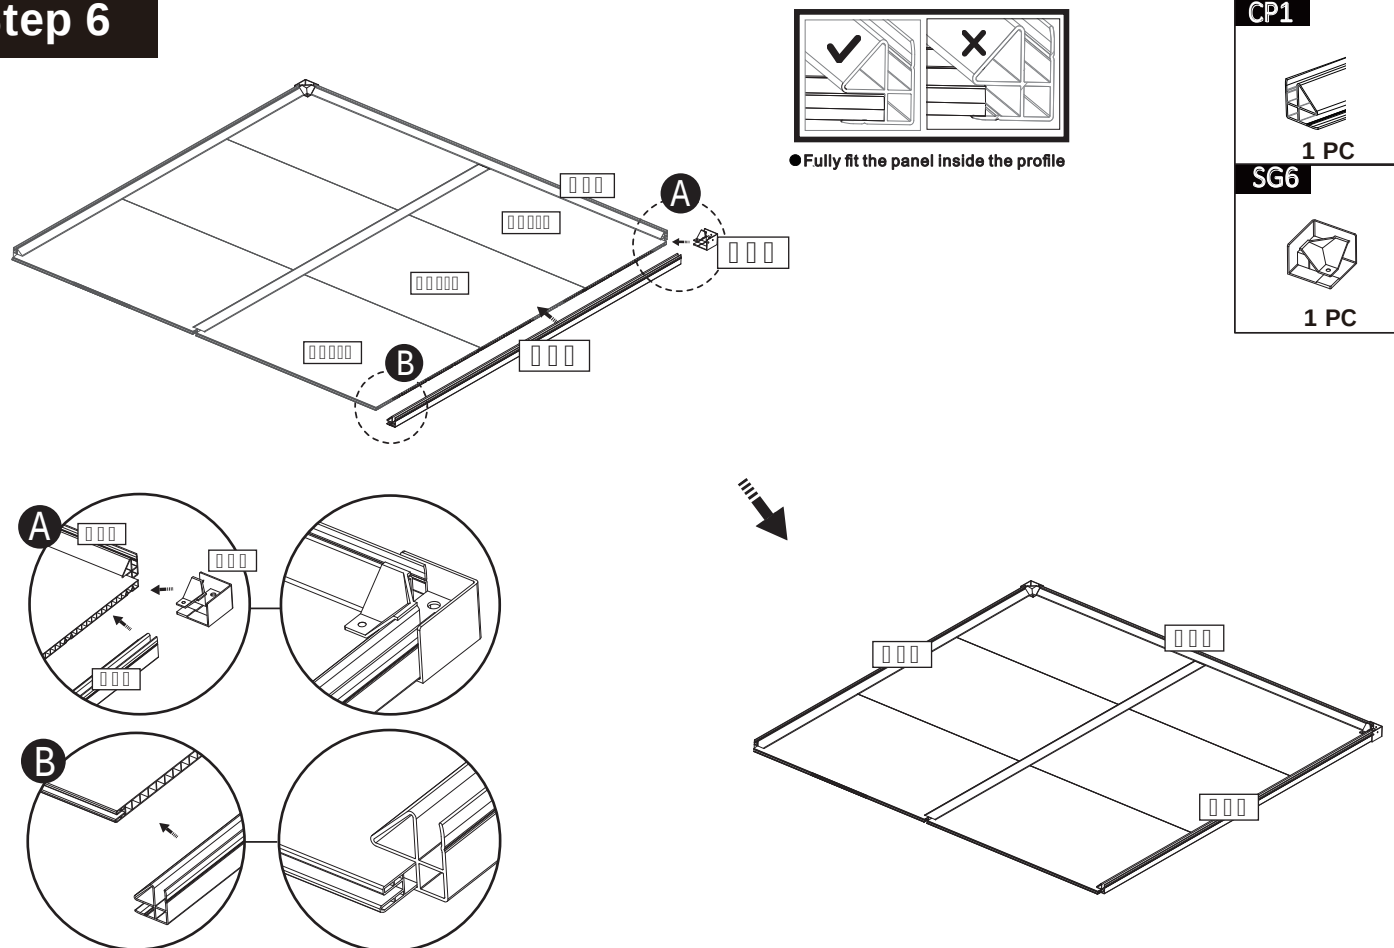



Step 7

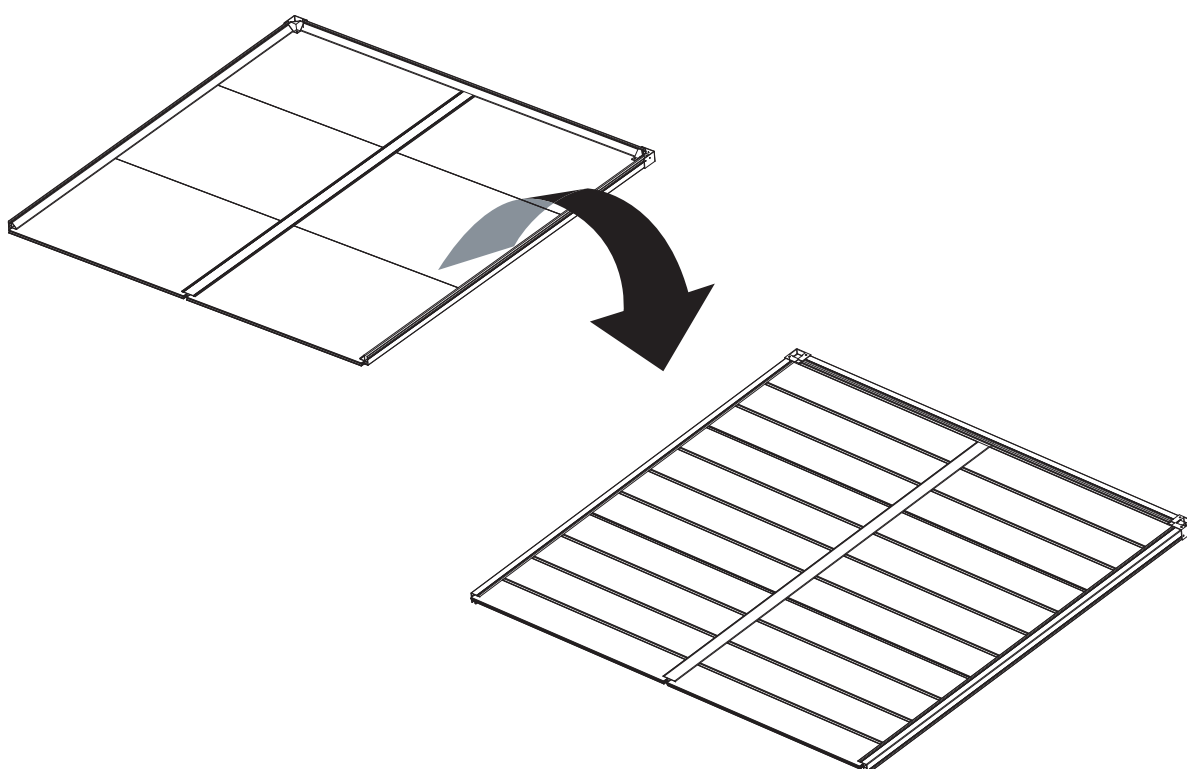

Step 8

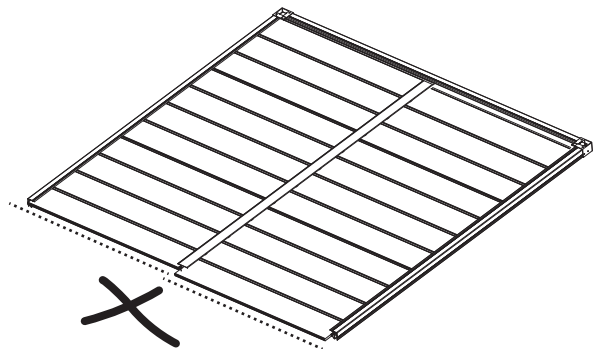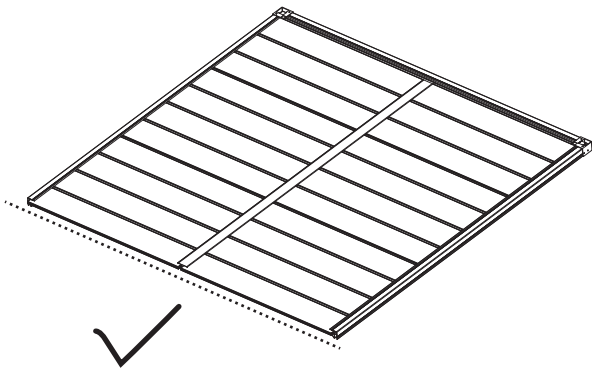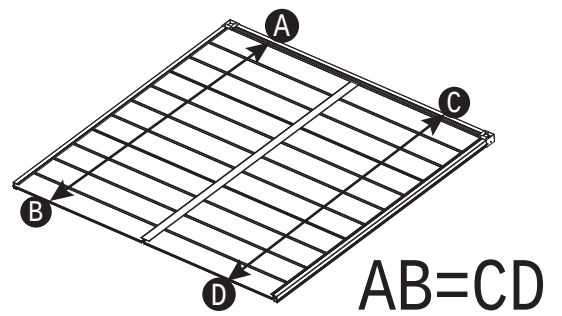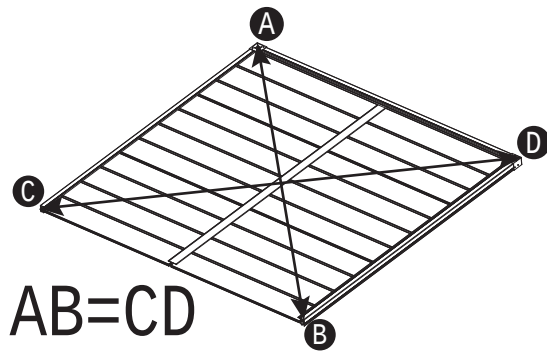

Step 9

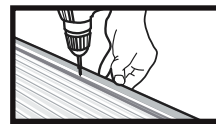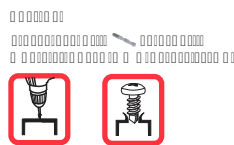

Z410





6 PC


Z420







12 PC

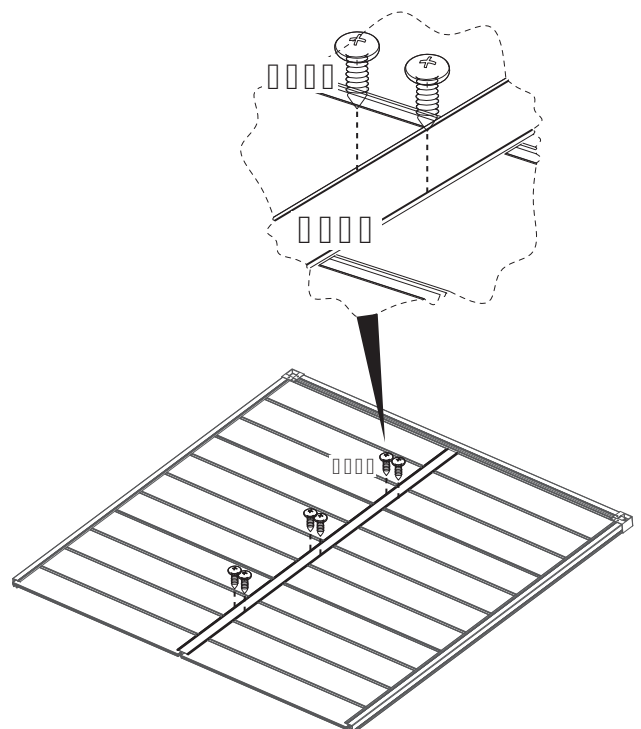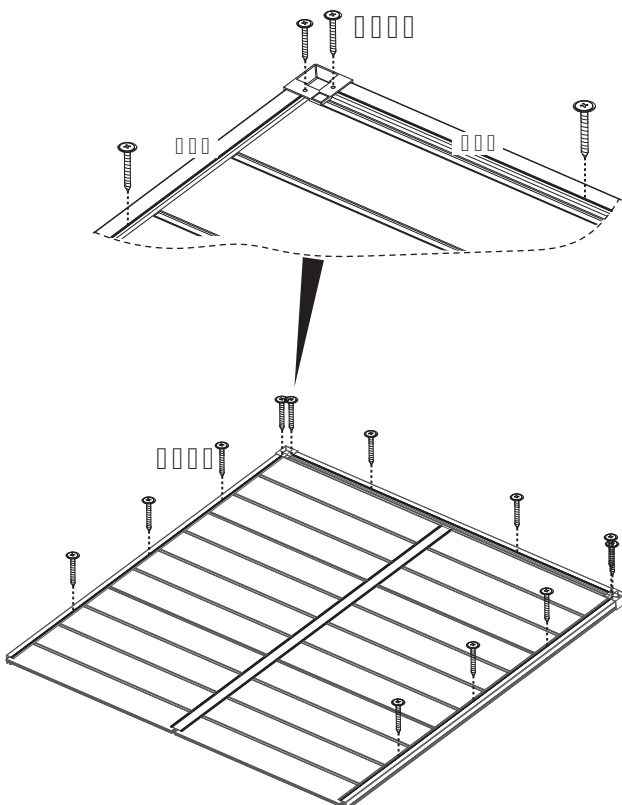

Step 10

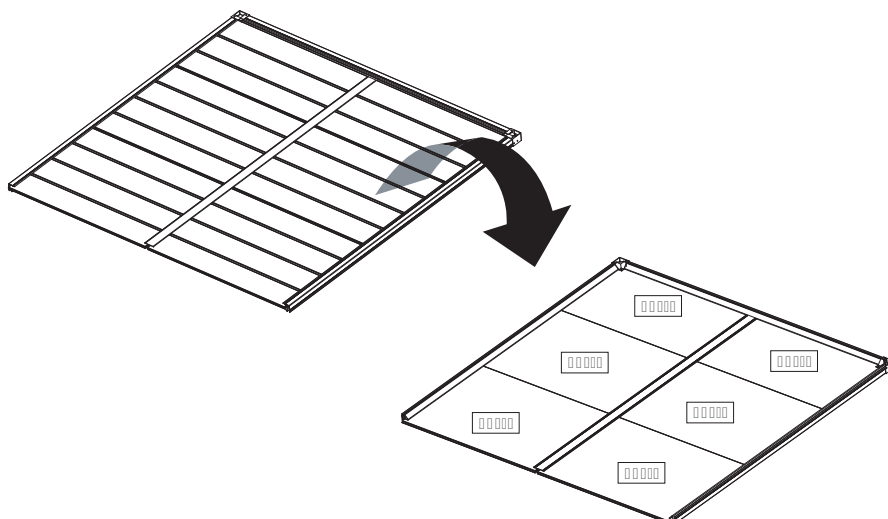


Step 11

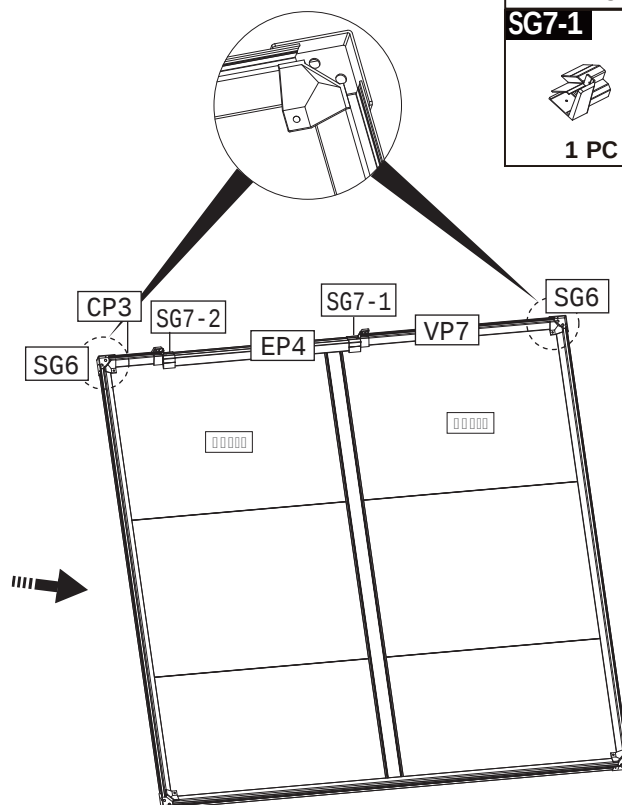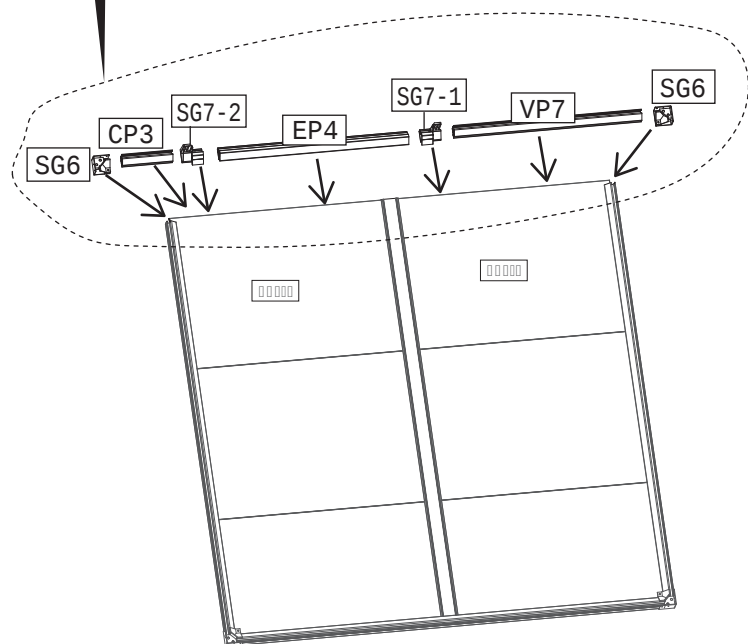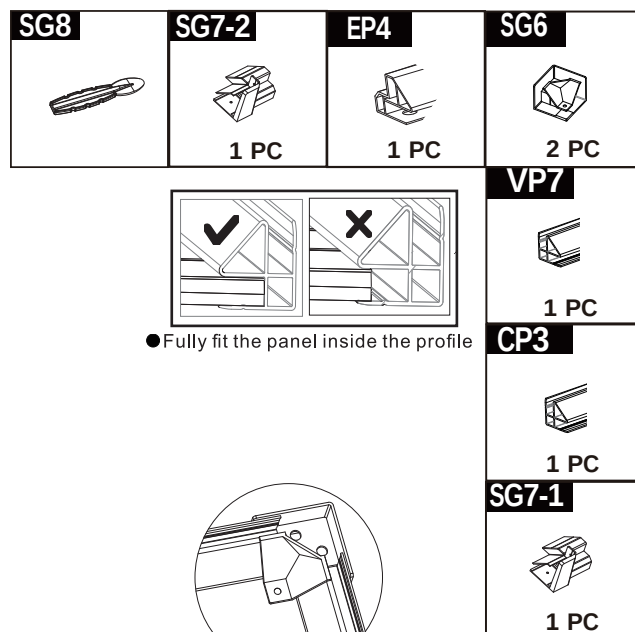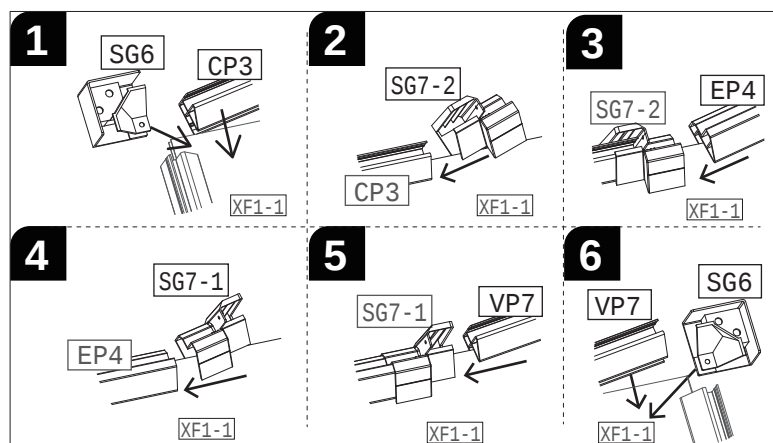

Step 12

1

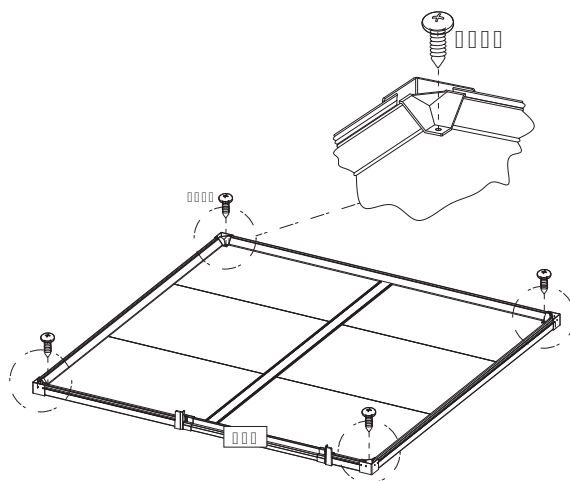

Z410




4 PC

Z420




8 PC


2

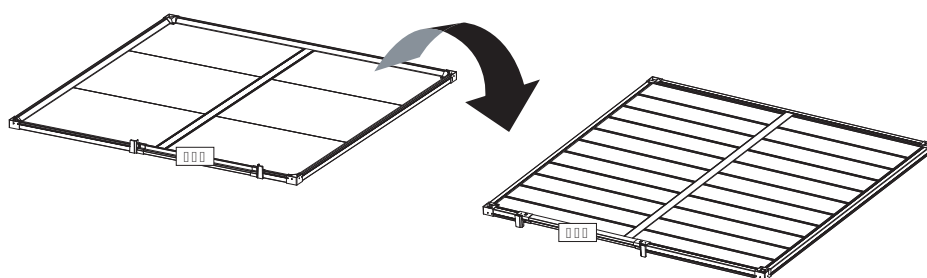


3

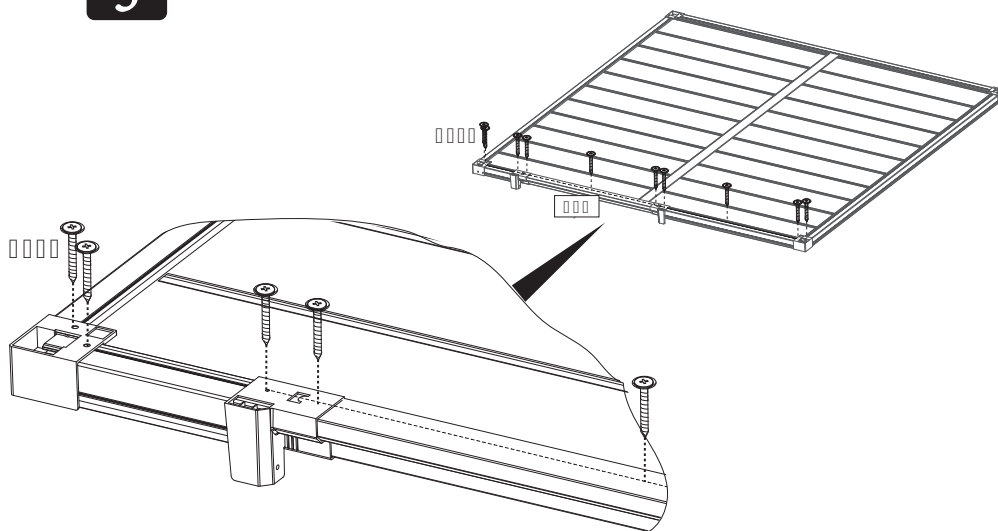

4

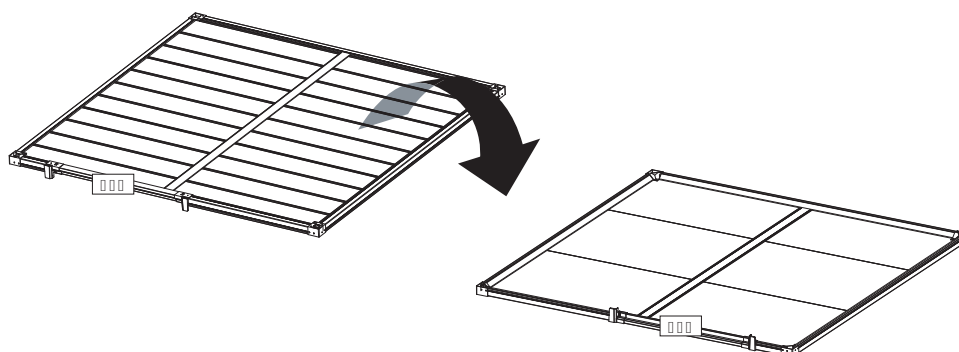


WALL ASSEMBLY

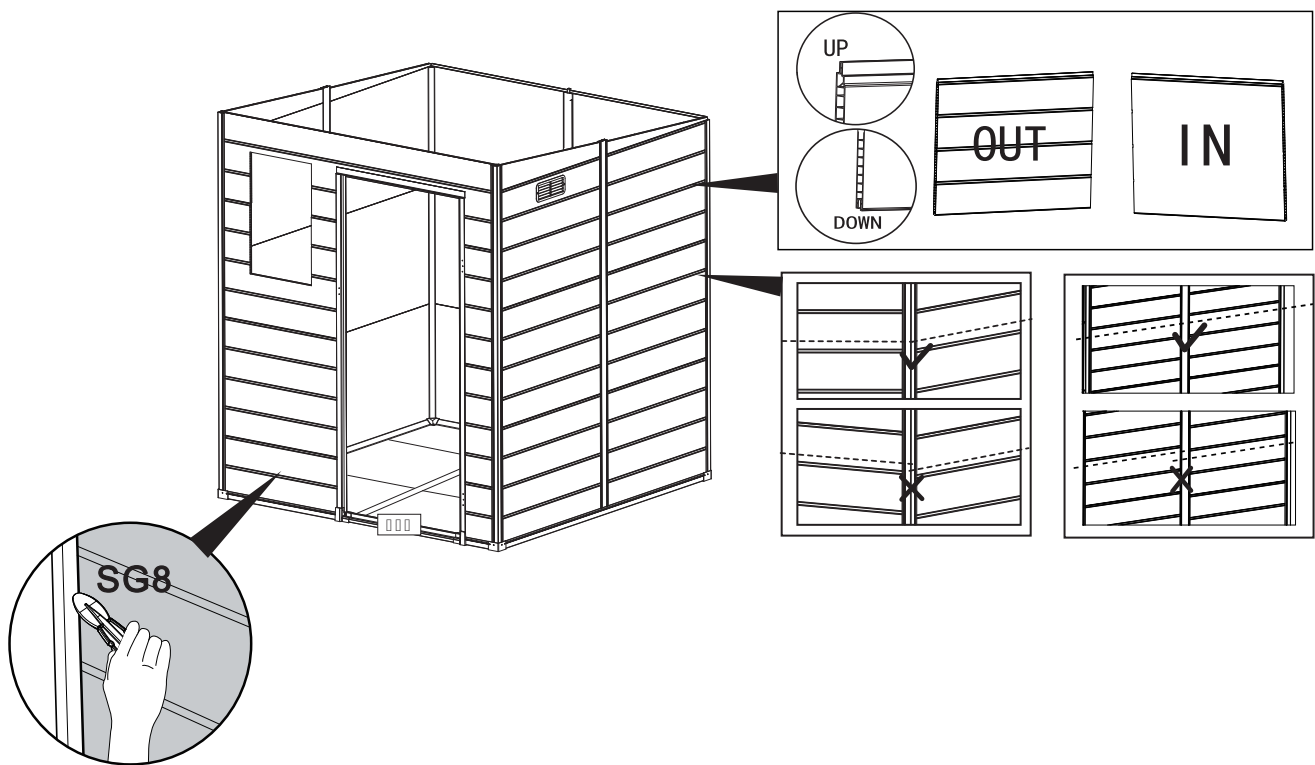


Step 13


DP5

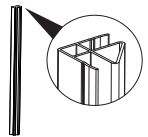




1 PC

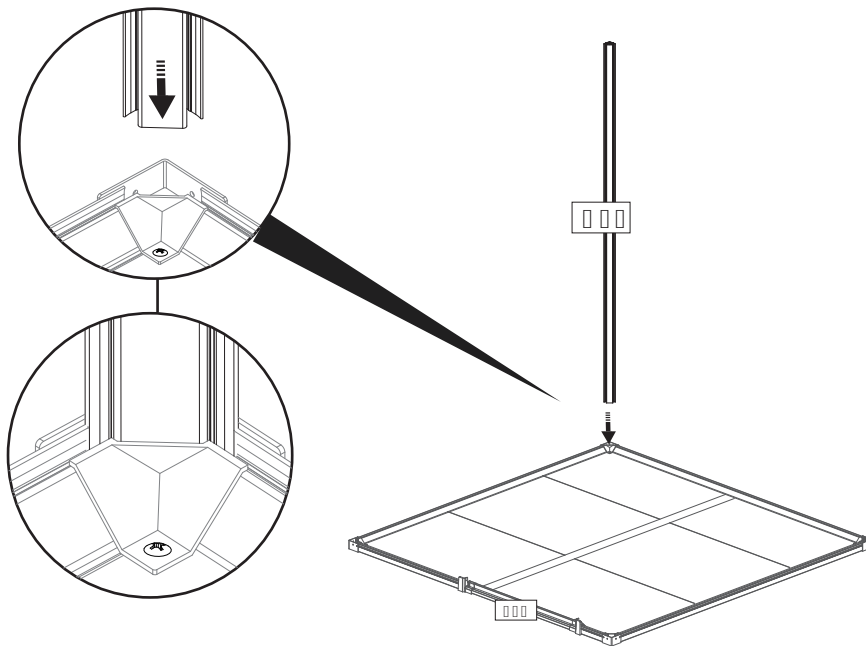





Step14

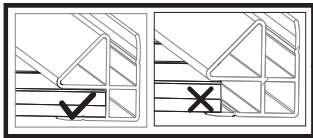






- Fully fit the panel inside the profile

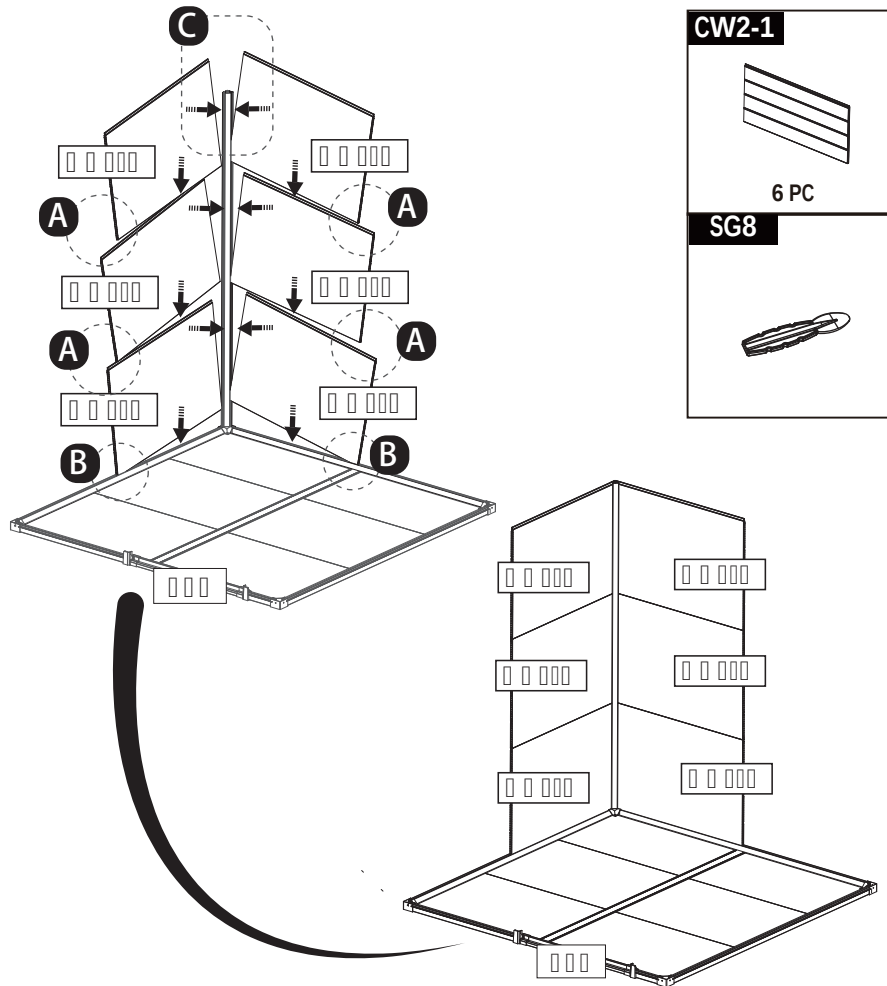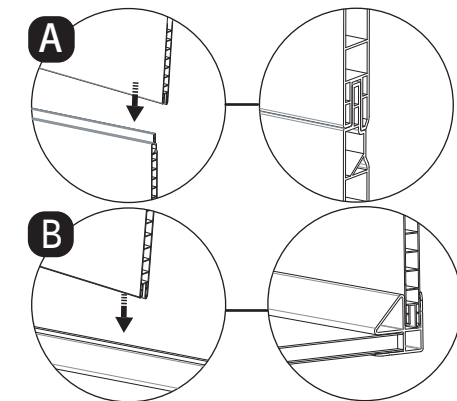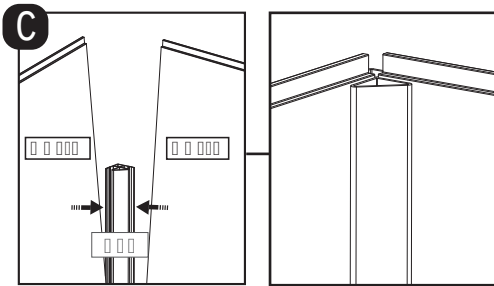


Step 15

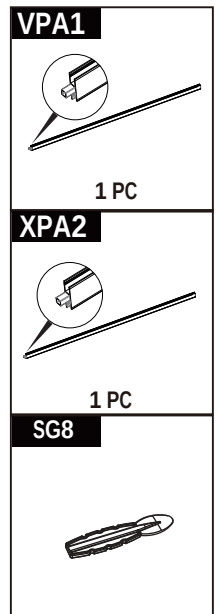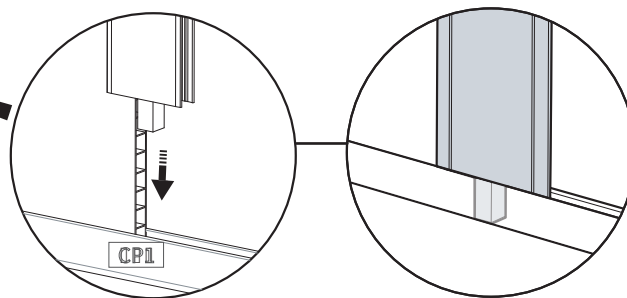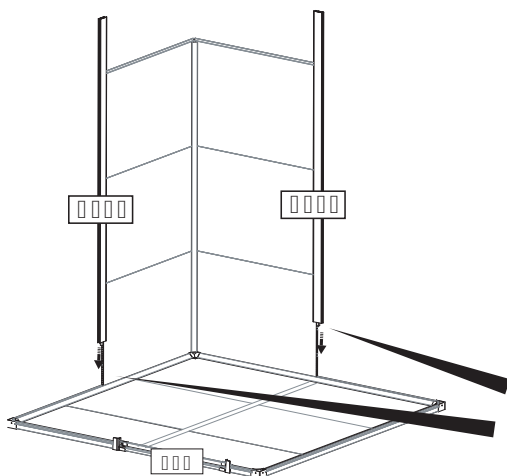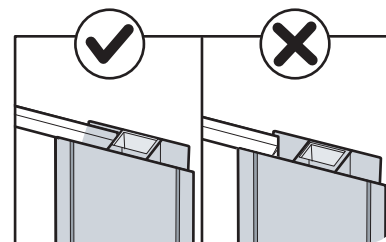




Step 16

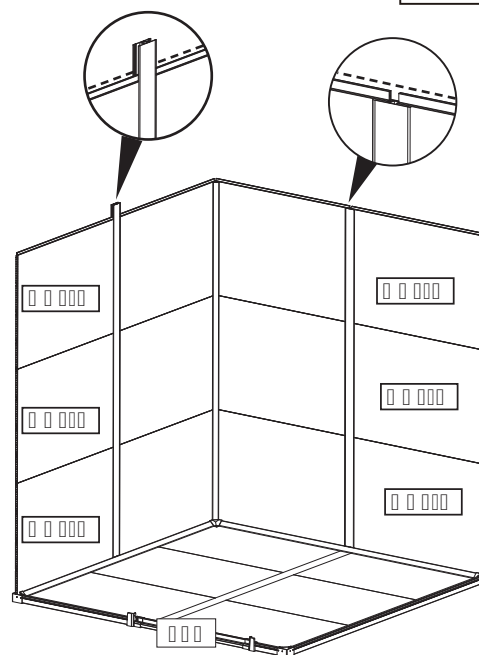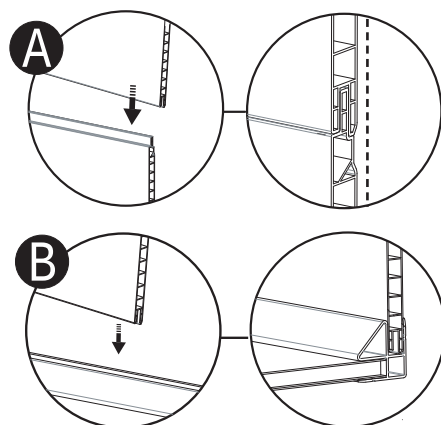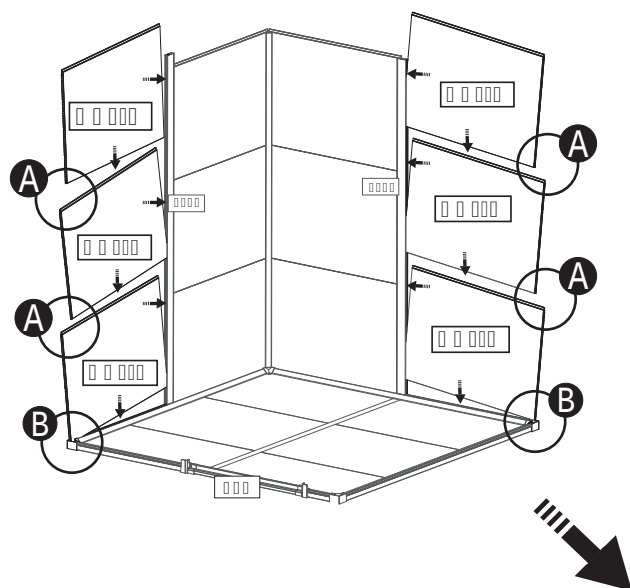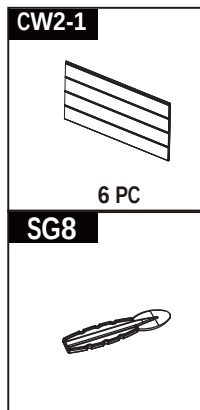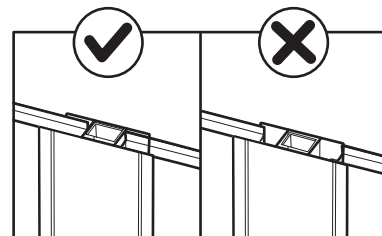



Step 17

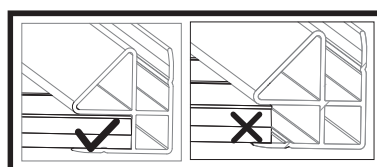


- Fully fit the panel inside the profile

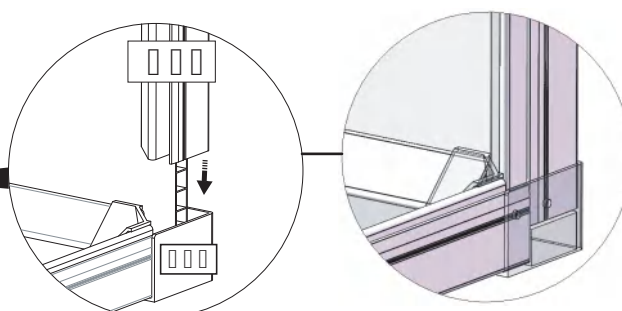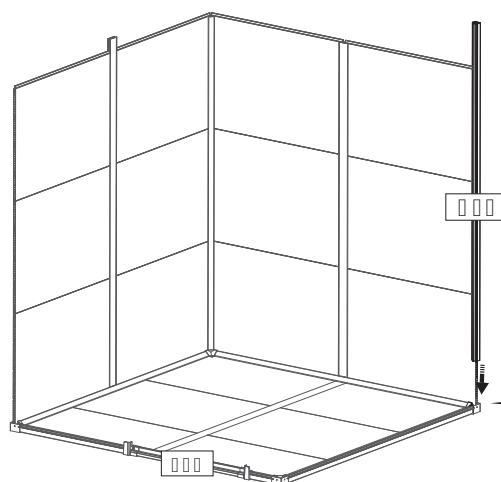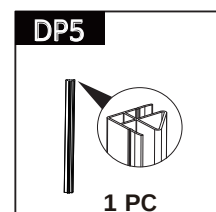

Step 18

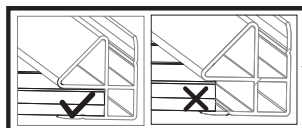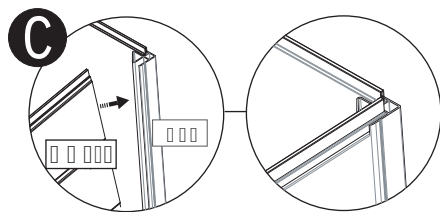

● Fully fit the panel inside the profile

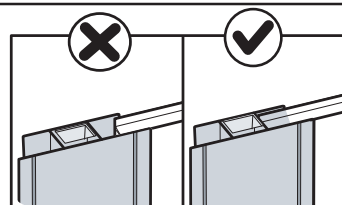


CW2-1




3 PC

XPA2







1 PC




SG8

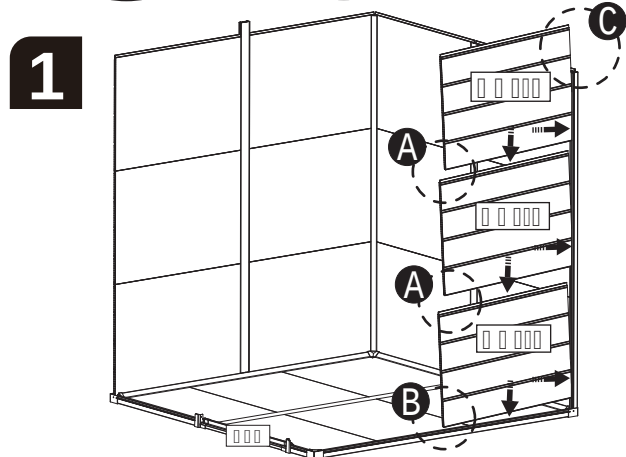


2

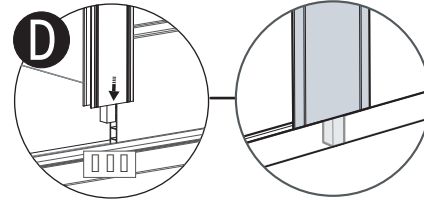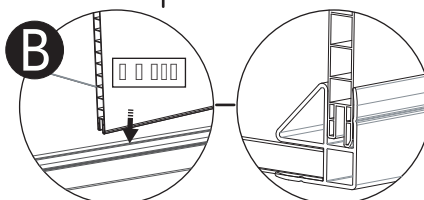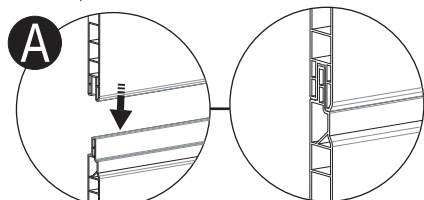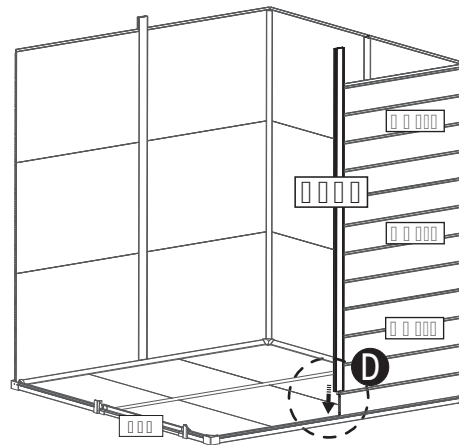

Step 19

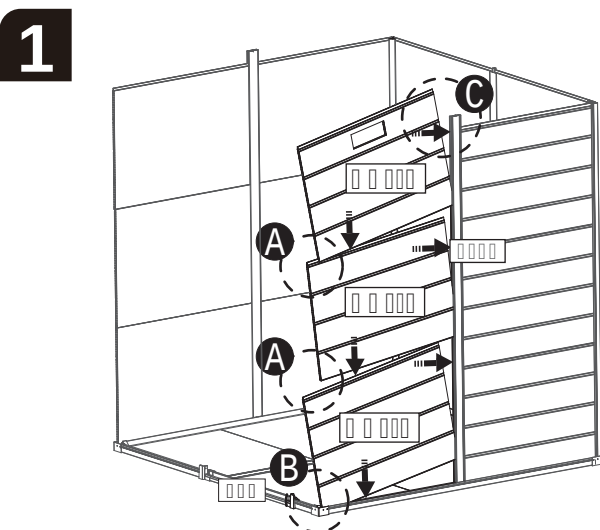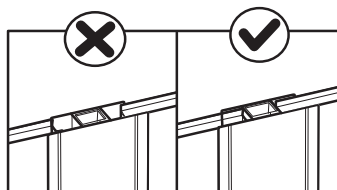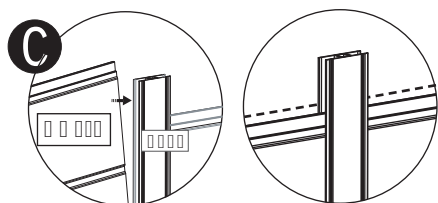

2

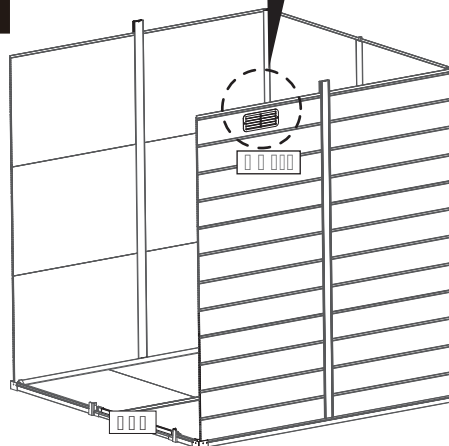

CW2-1



2 PC

XW1-1



1 PC

B Y






1 PC

Z410






2 PC

SG8

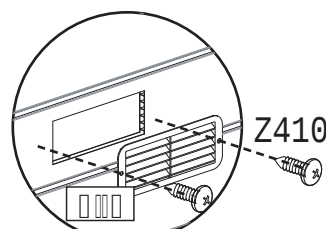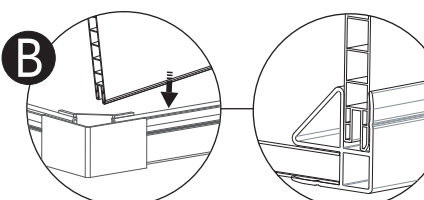
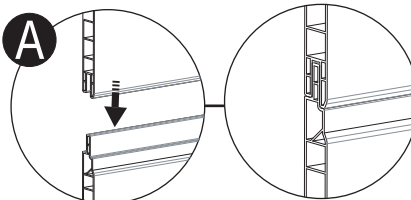


Step 20

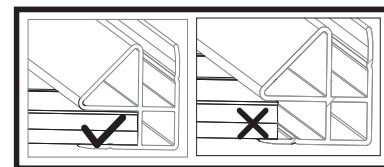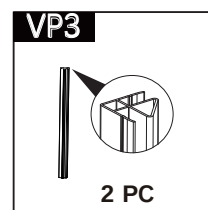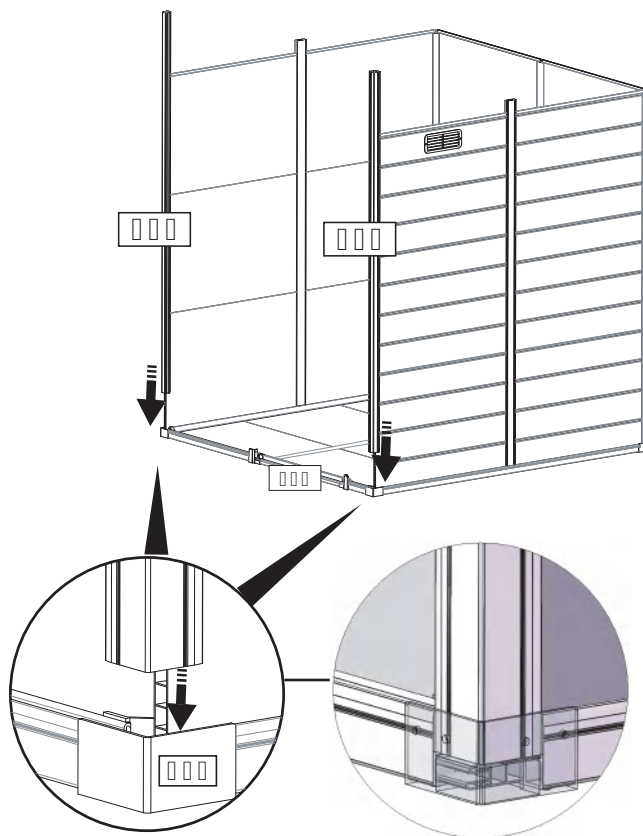

● Fully fit the panel inside the profile

Step 21

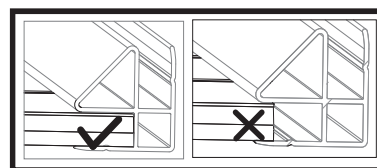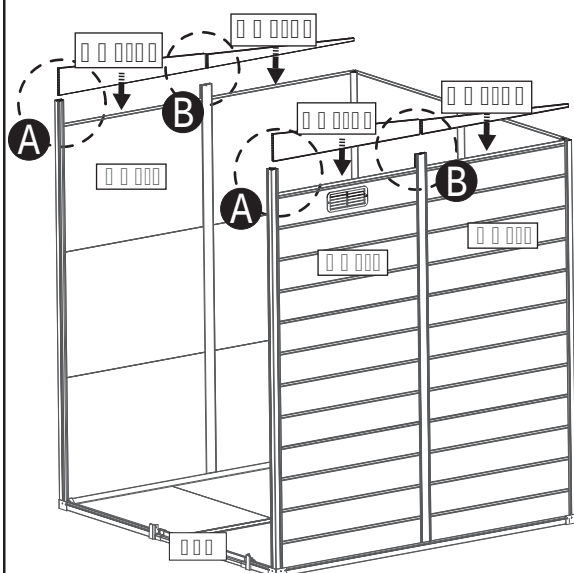

● Fully fit the panel inside the profile

XW1-2L




1 PC

XW1-3L



1 PC

XW1-2R





1 PC

XW1-3R




1 PC

SG8

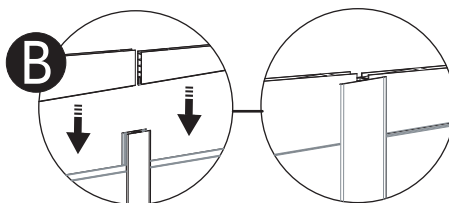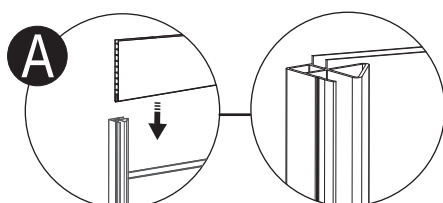


Step 22

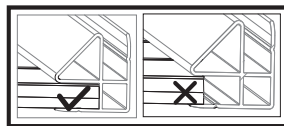

● Fully fit the panel inside the profile

VW2-1



1 PC

CW3-1




2 PC

VW1-1



1 PC

VW1-2




1 PC

VW1-3




1 PC


SG8

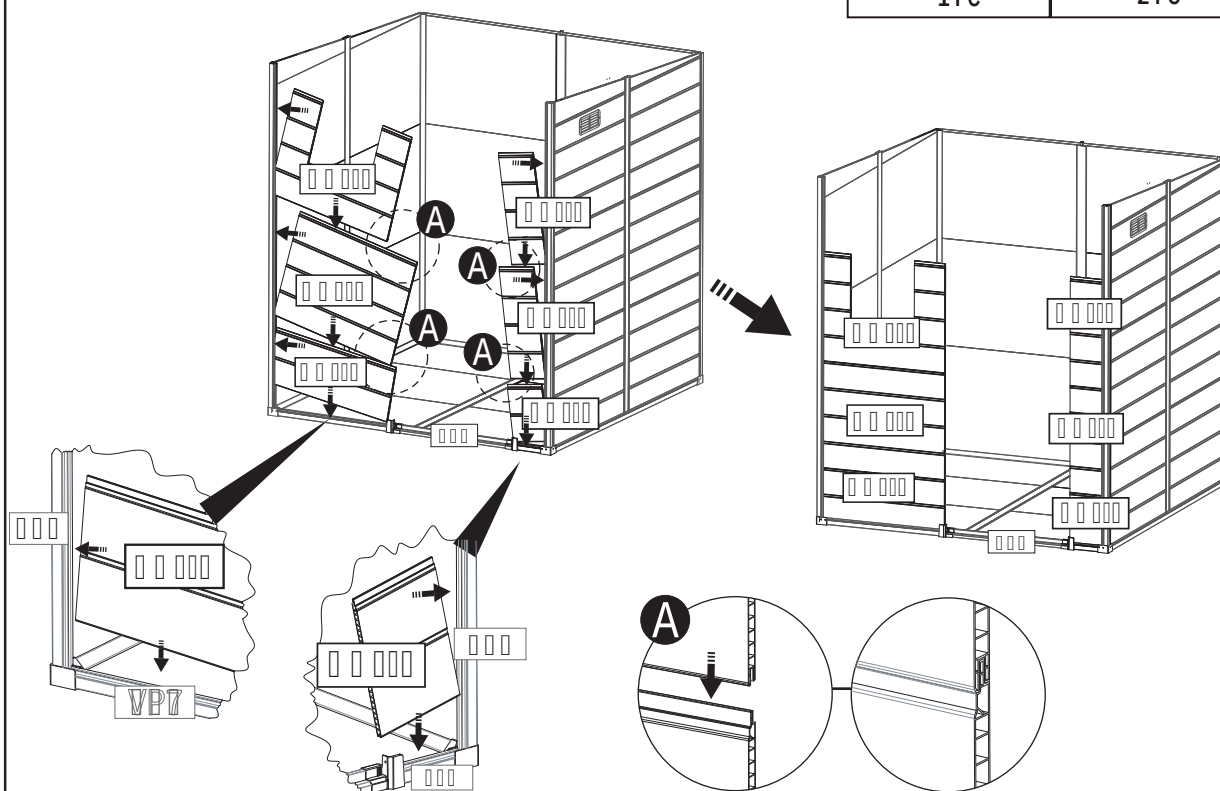

Step 23

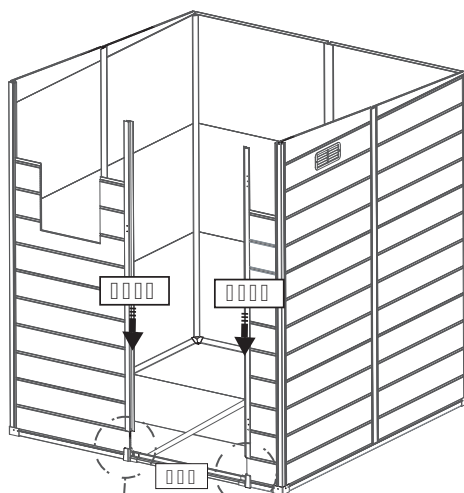


CA1R



1 PC

VA1L




1 PC


Z410




2 PC

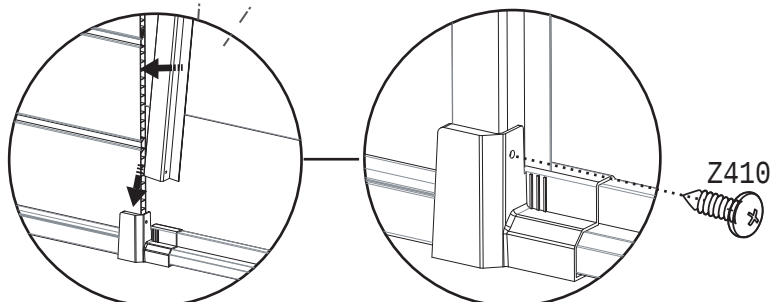

Step 24

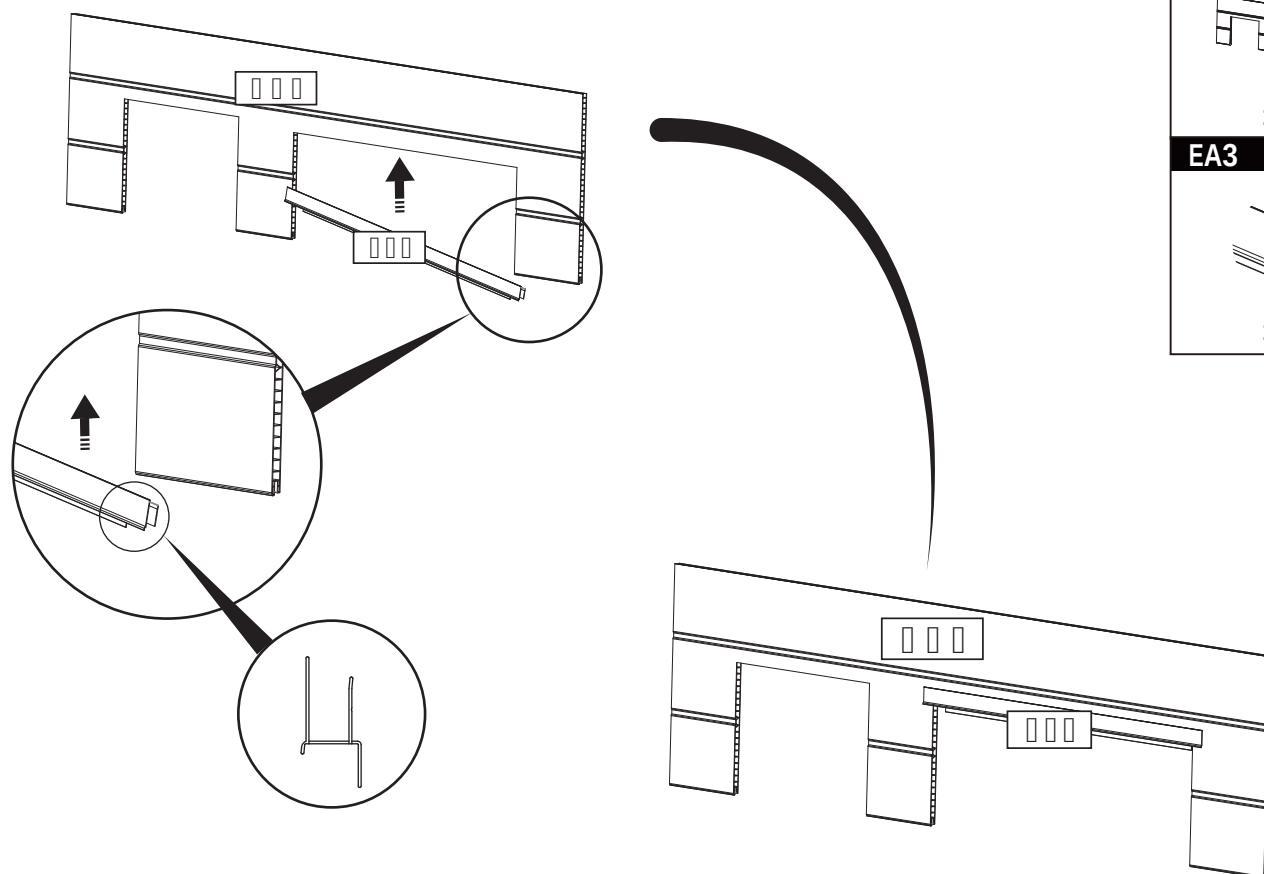

VW4





1 PC

EA3




1 PC


Step 25

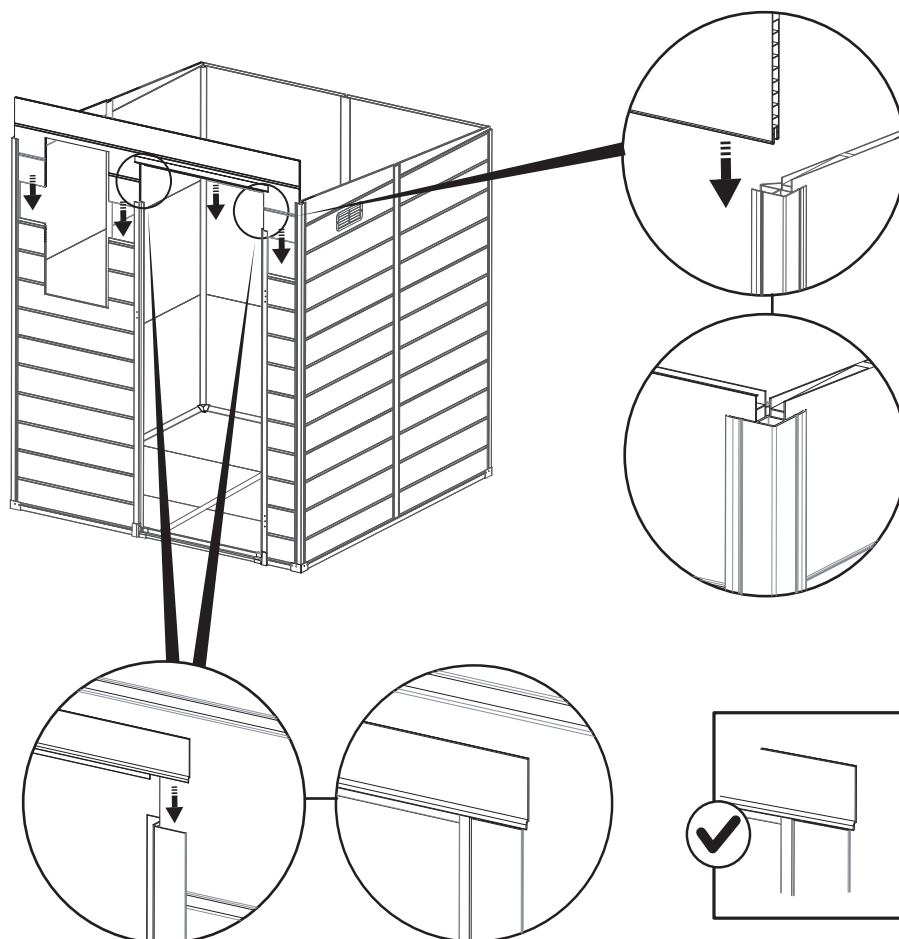


VW4+VA3

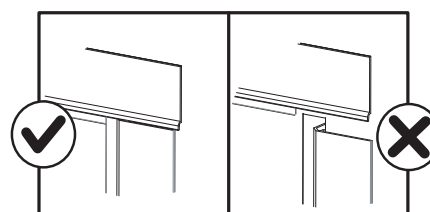

Step 26

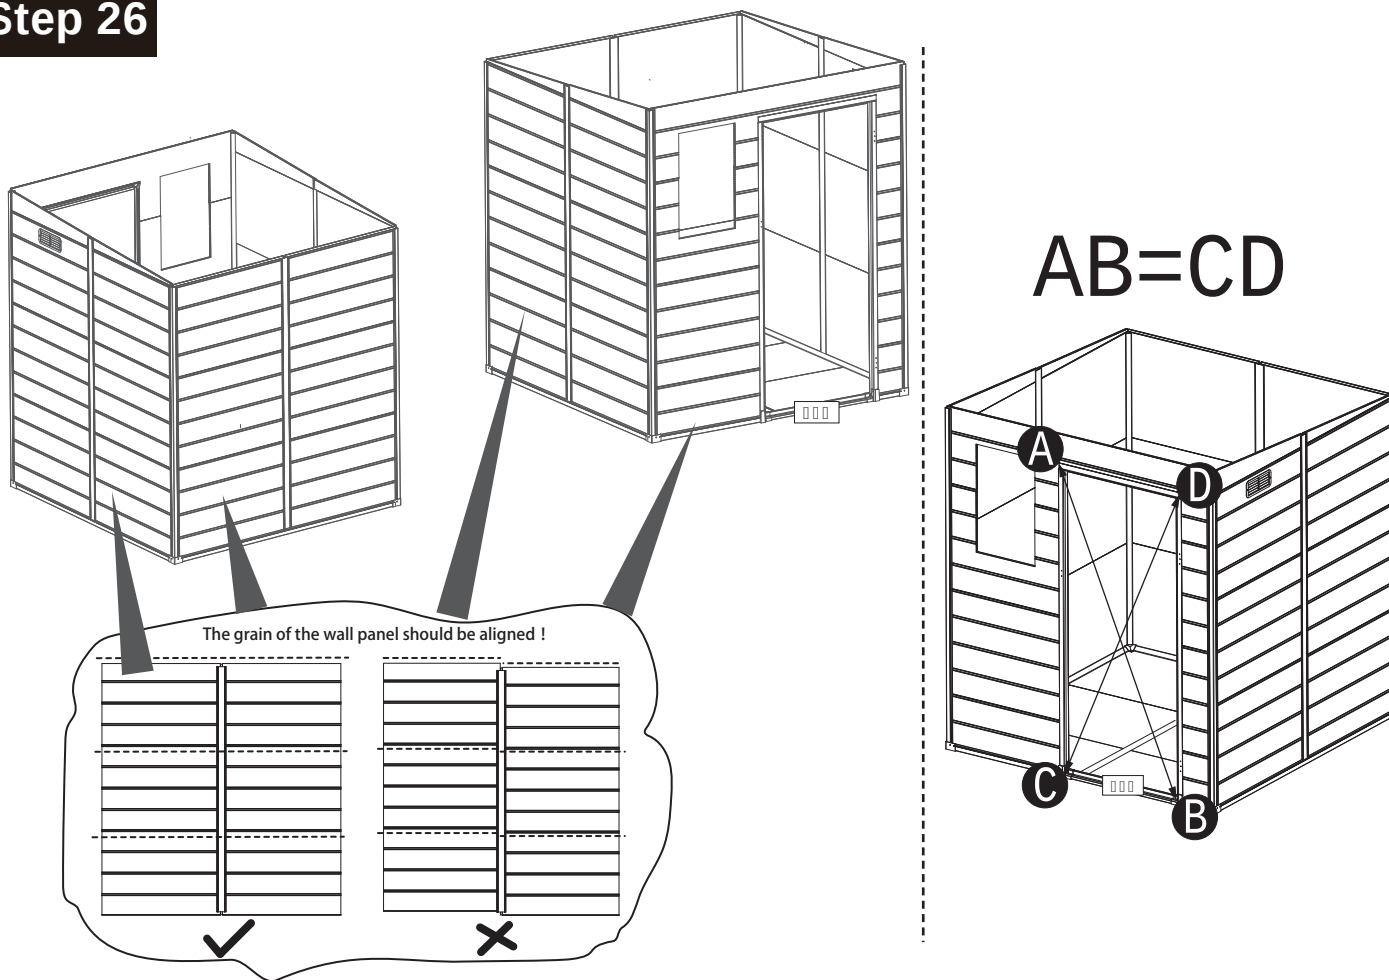

Step 27

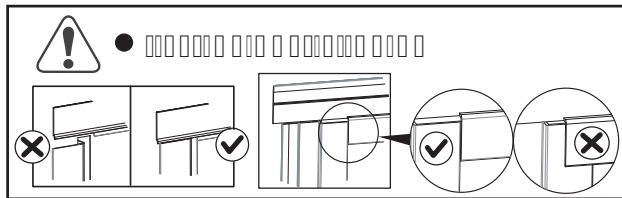


2 PC

ZW413




6 PC

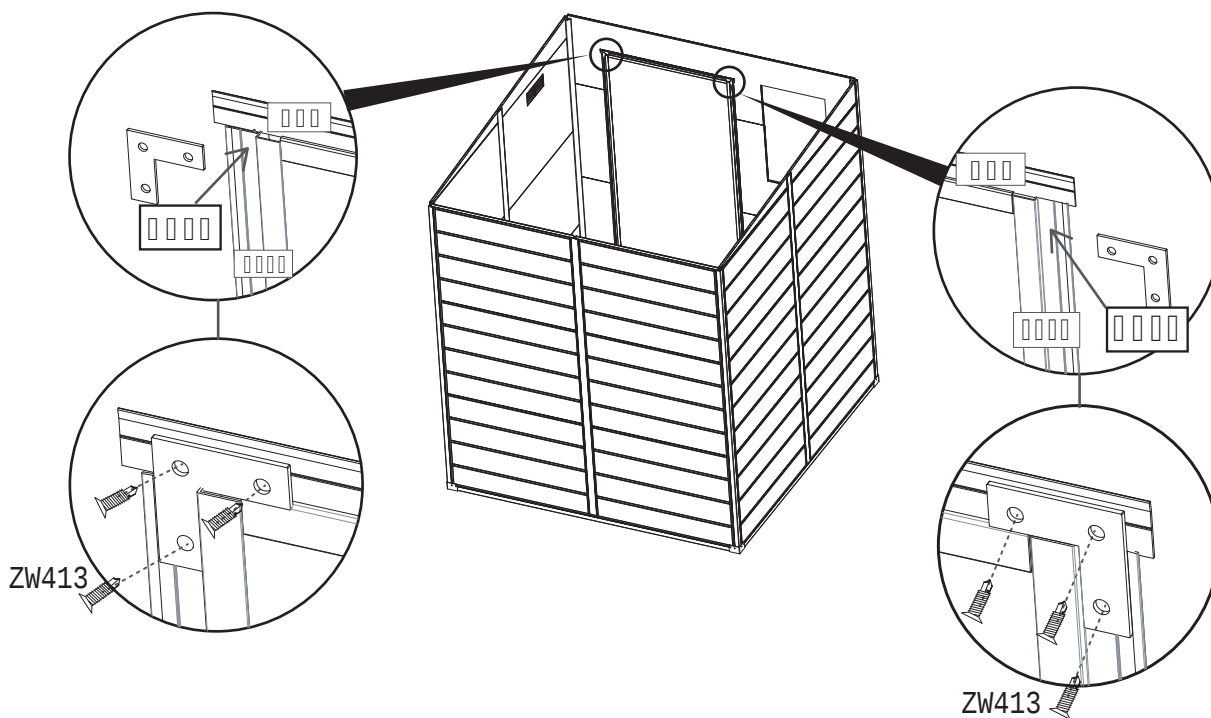





Step 28

Z410

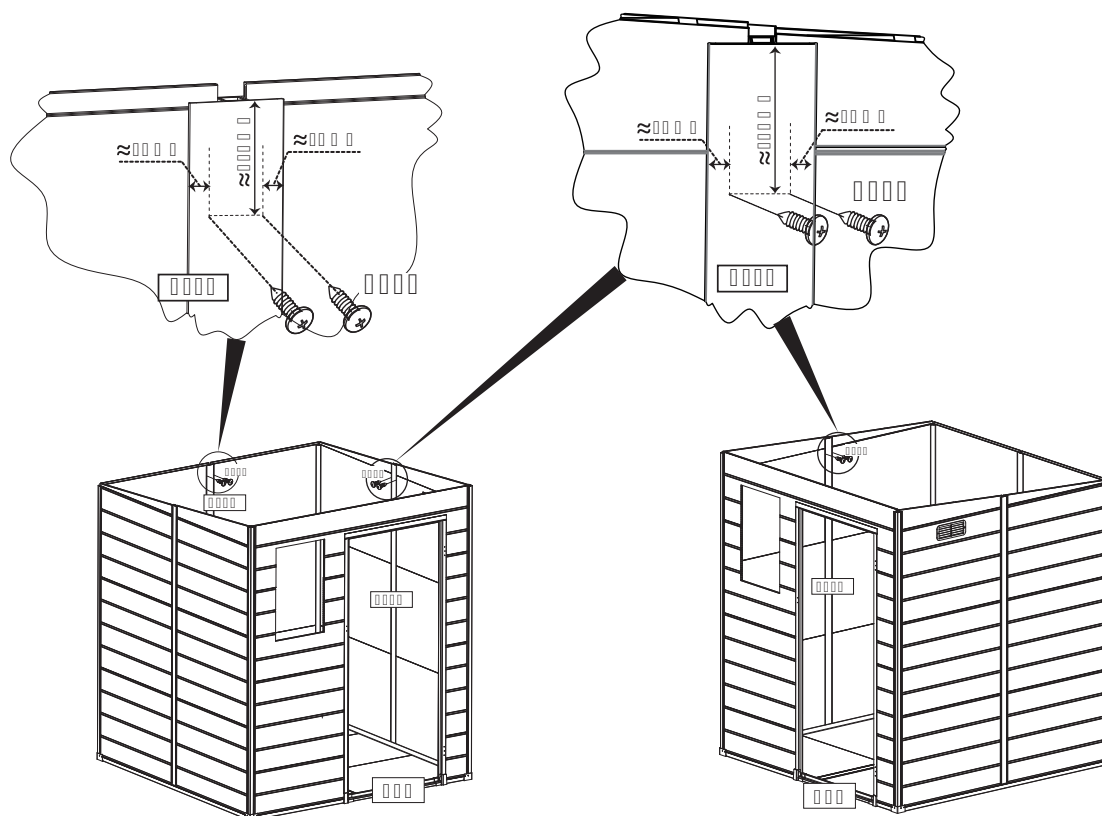

Step 29

Z420

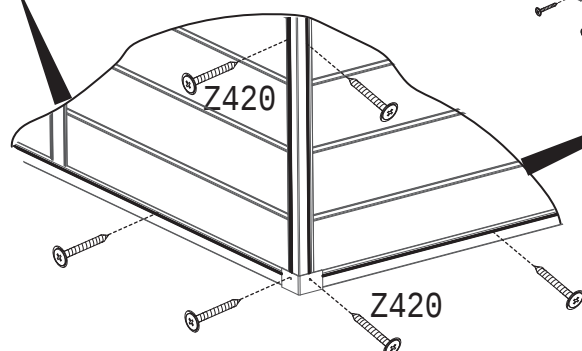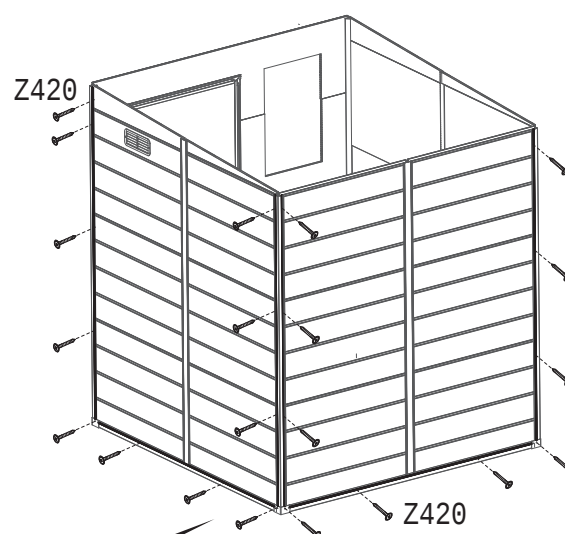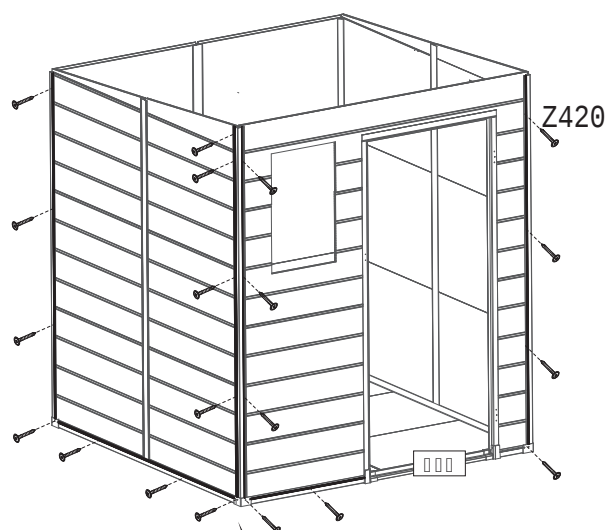


Step 30

ZW413




3 PC

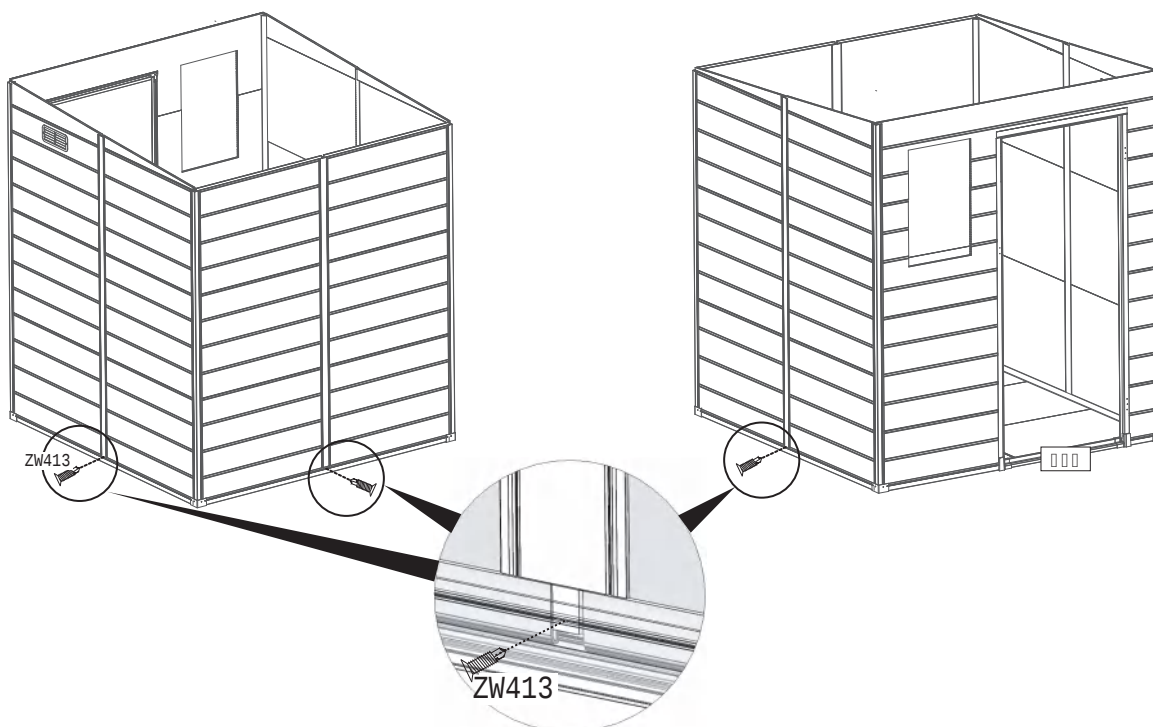

Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.


ROOF PARTS

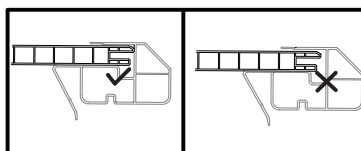



Fully fit the panel inside the profile





SG8

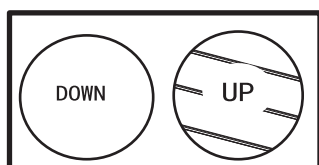

The stripes should be upwards

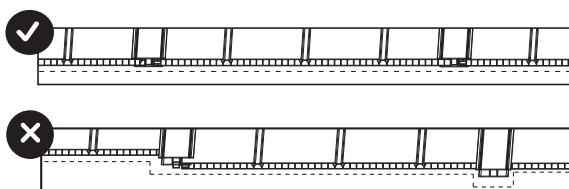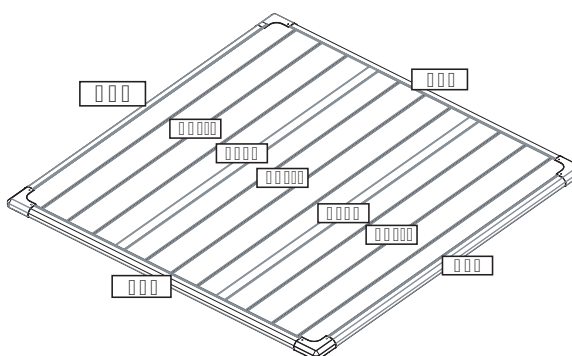


Step 31

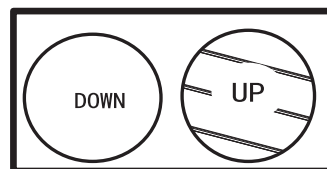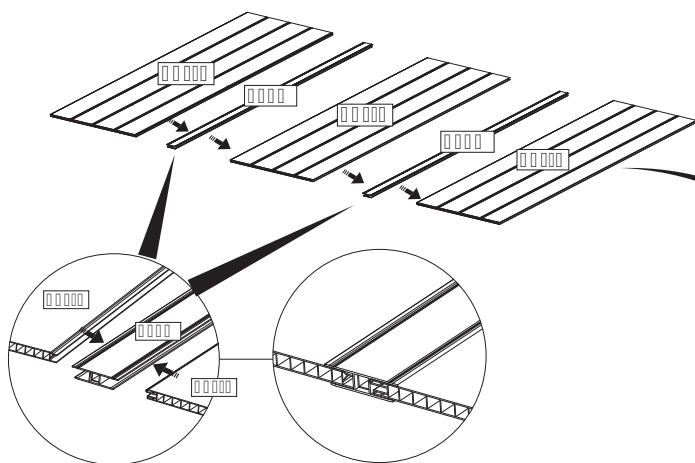


The stripes should be upwards

XR1-2





3 PC

XPA1



2 PC

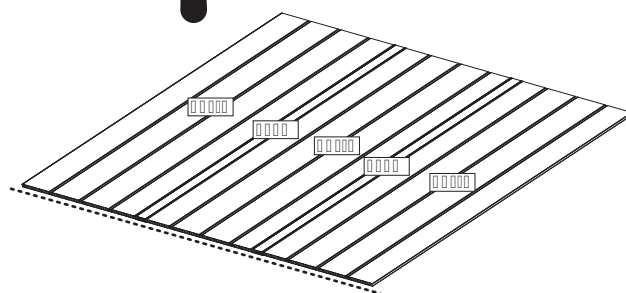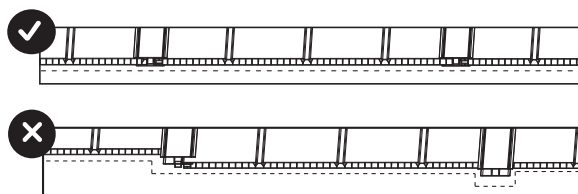


Step 32

Z410




8 PC


1

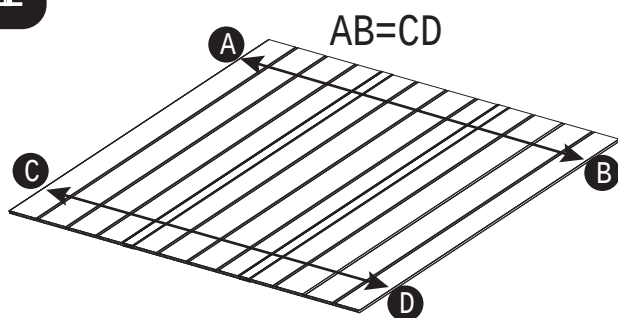

2

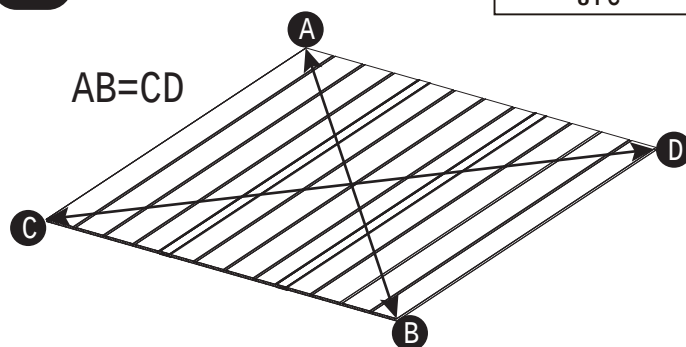


3

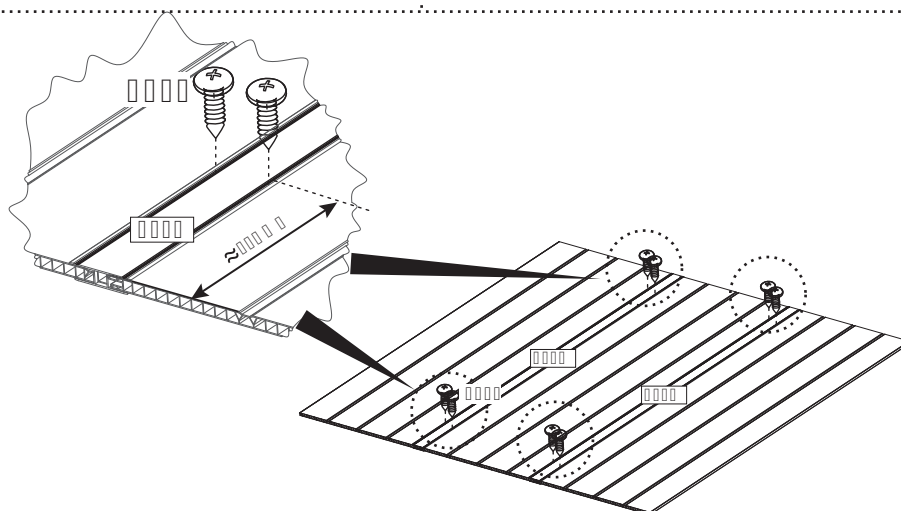

Step 33

1

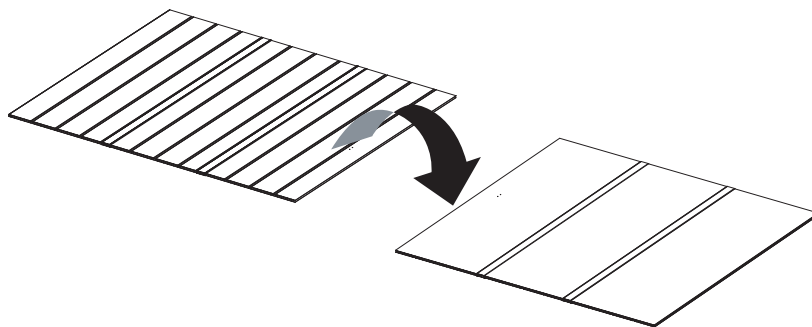

Z410



8 PC

XP1



2 PC

VP2



2 PC

SG2




4 PC


SG8




2

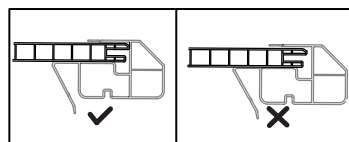


Fully fit the panel inside the profile

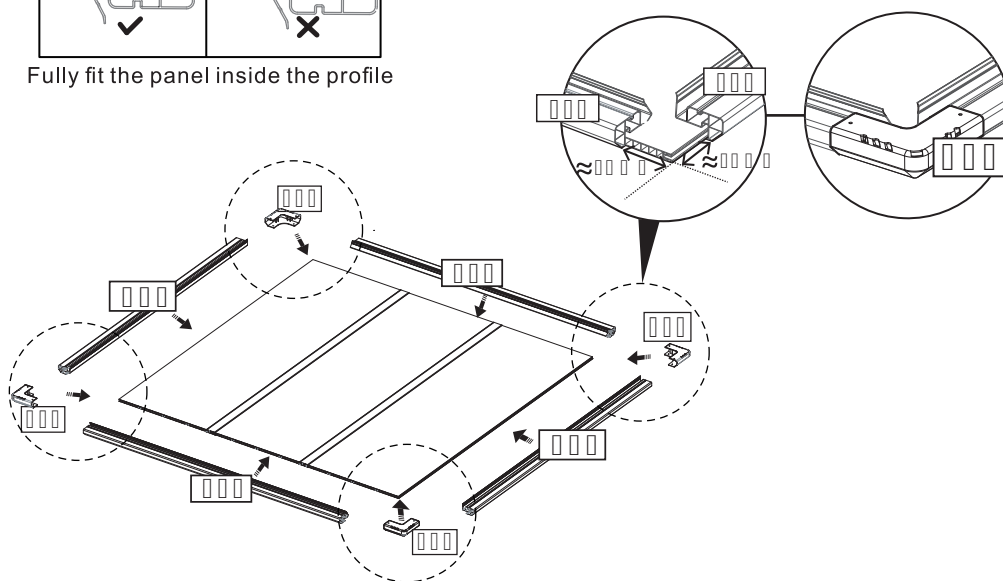


3

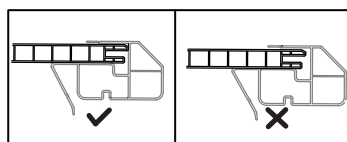

Fully fit the panel inside the profile

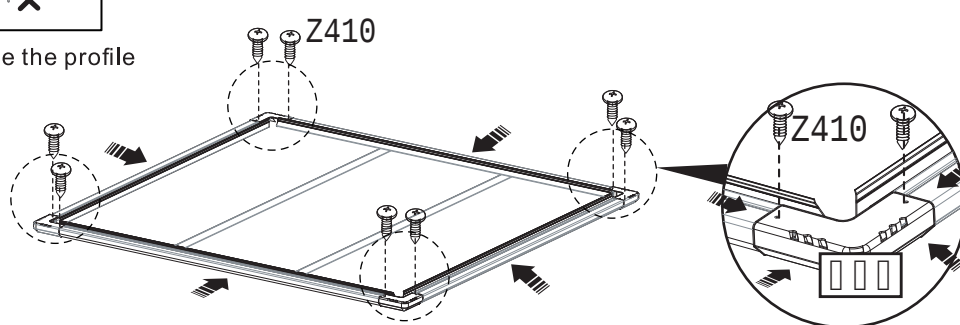

4

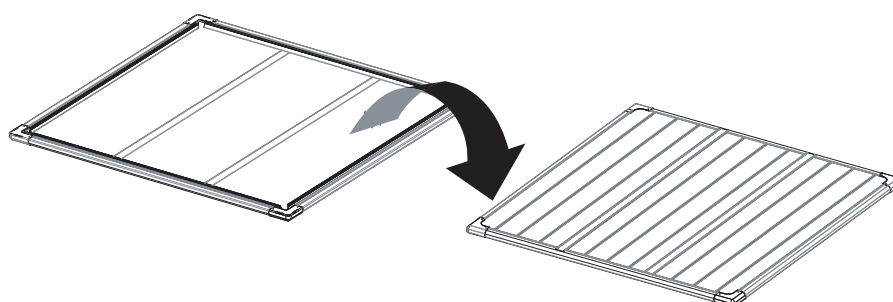

Step 34

11/11/11




Z420




18 PC

Z420

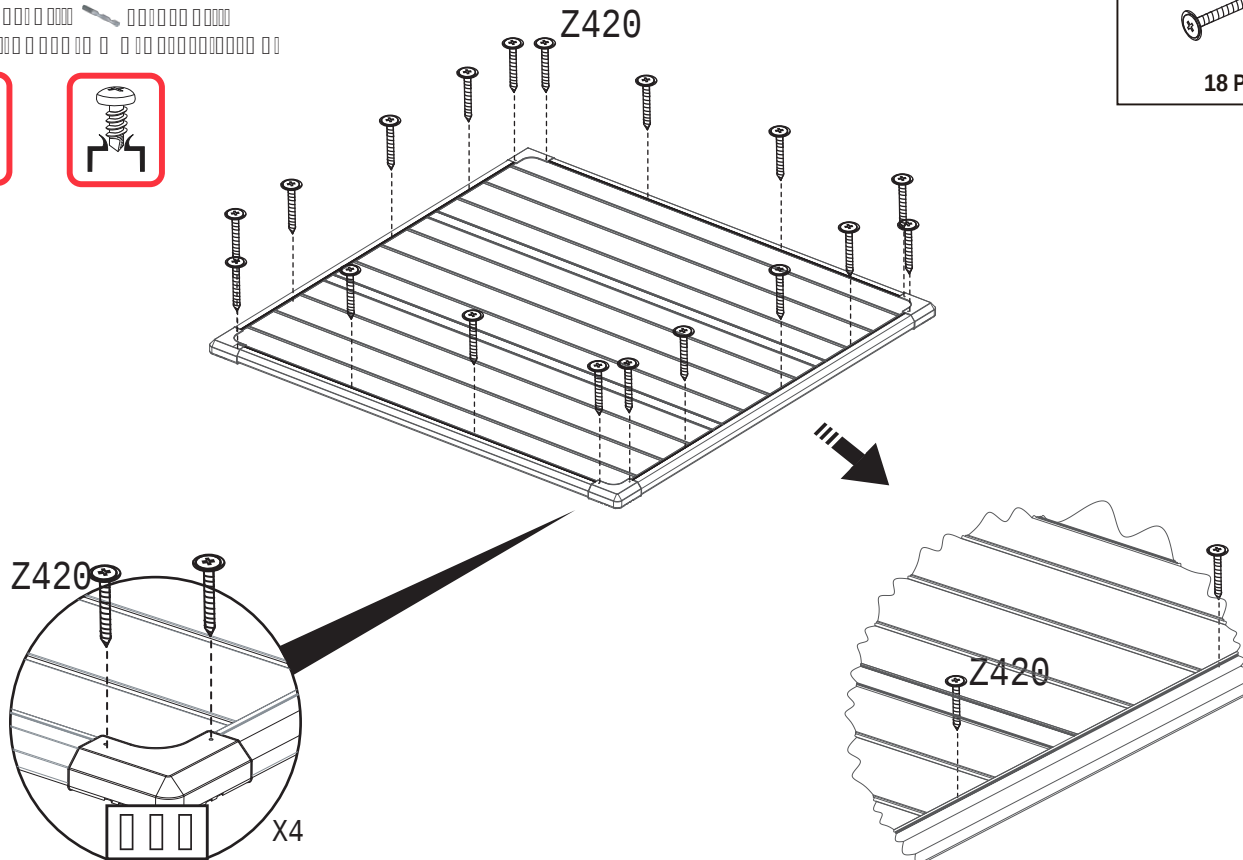





Step 35

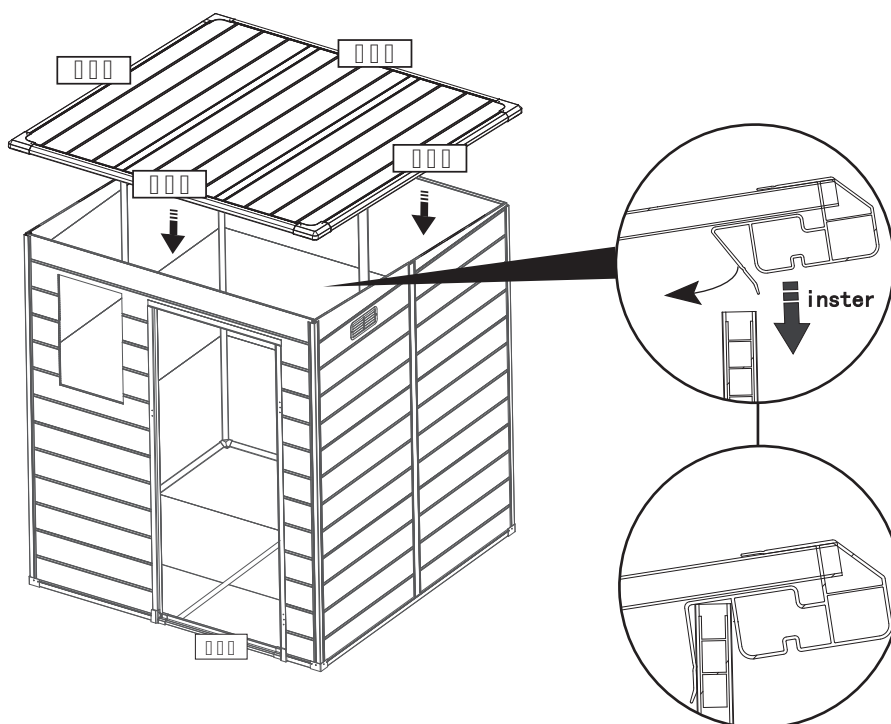





Fully fit the panel inside the profile

Step 36

Fully fit the panels inside the profiles of roof

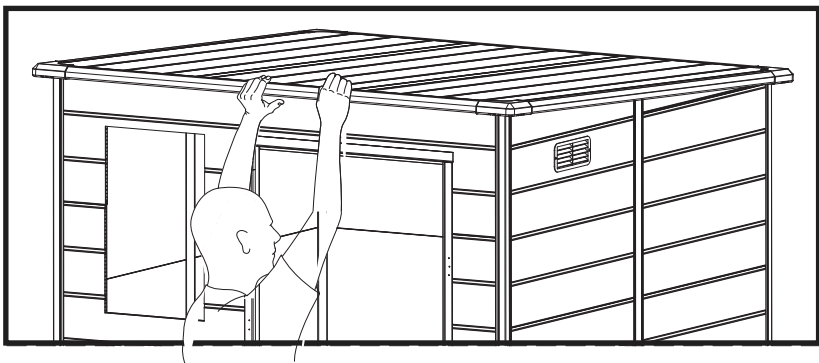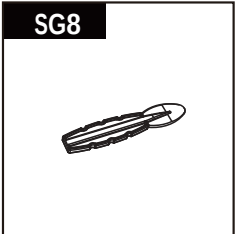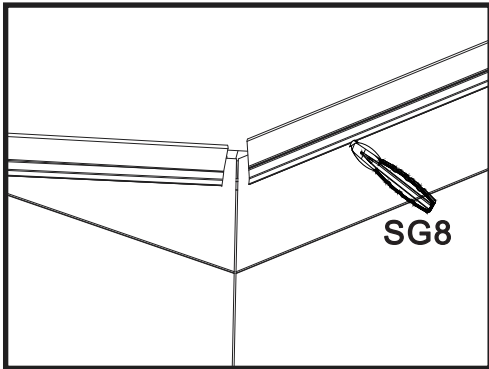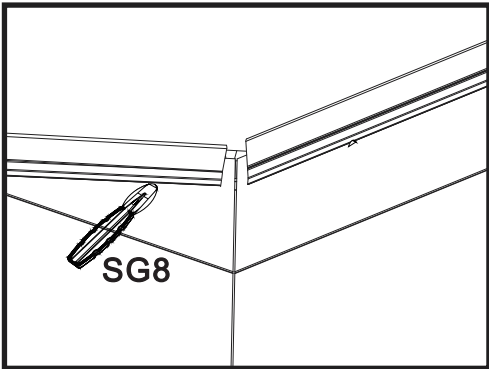


Step 37

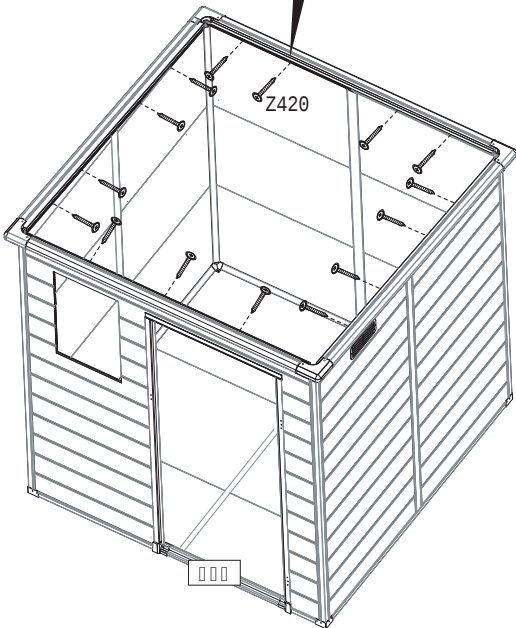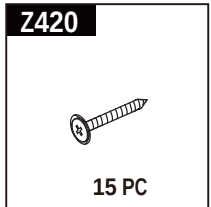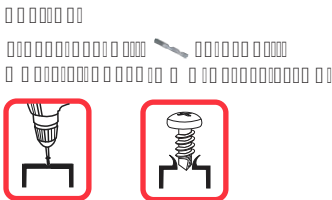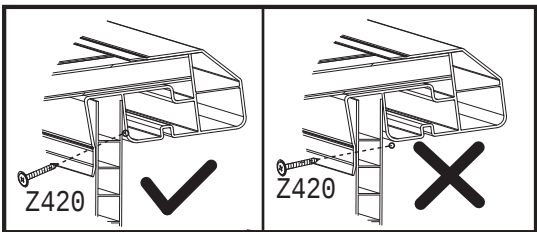

Step 38

Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

XS3



1 PC

ZW413





4 PC






Z420




4 PC

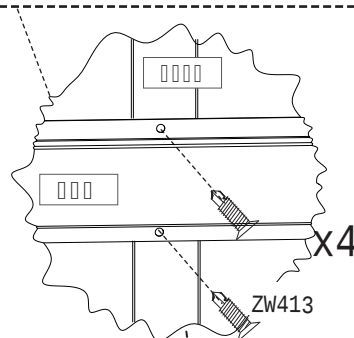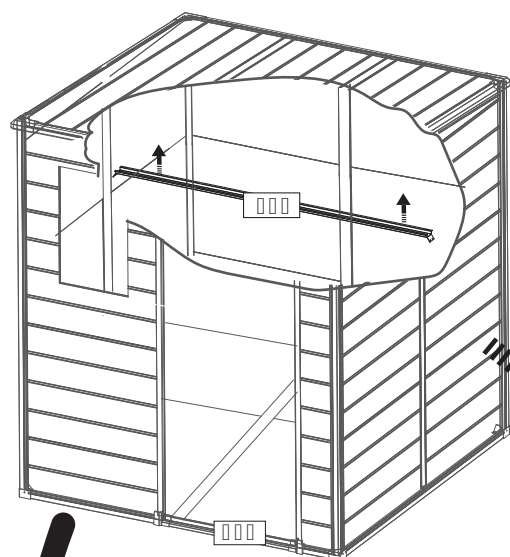

$A=B$

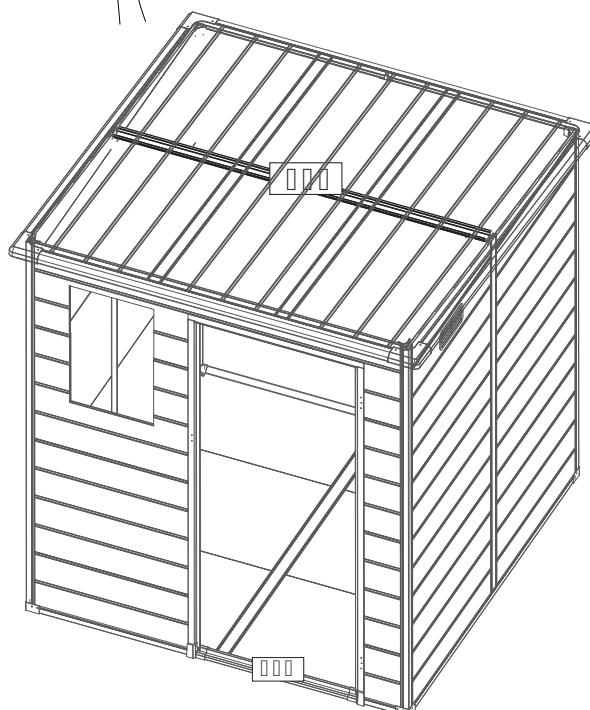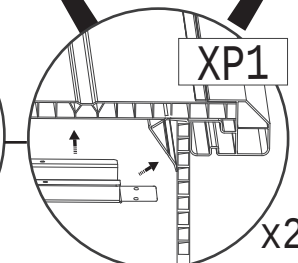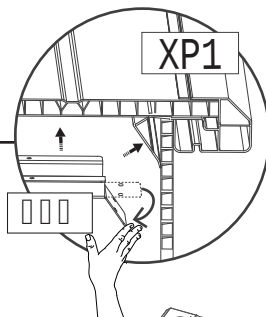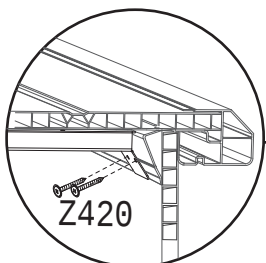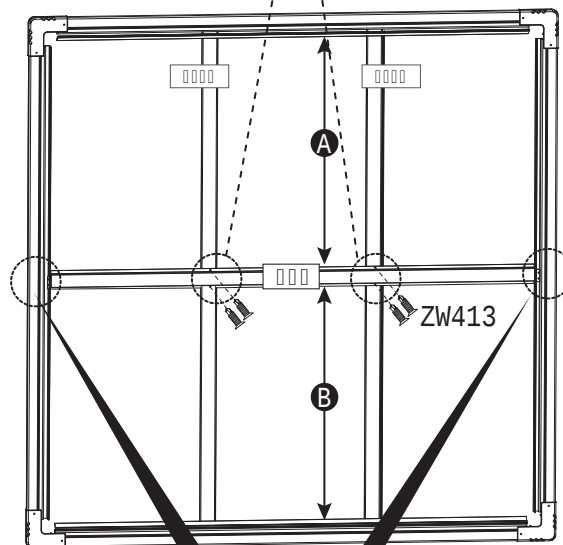

Step 39

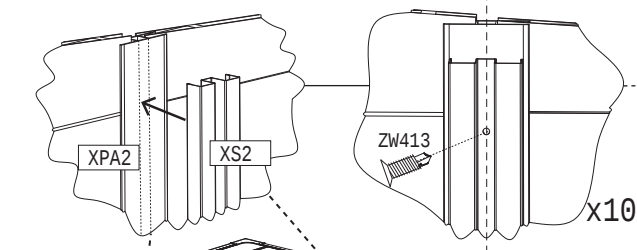

Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

XS2




2 PC


ZW413



10 PC

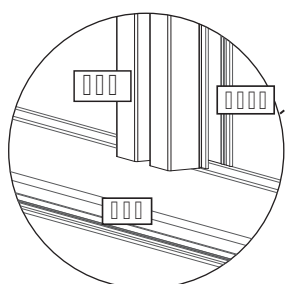

Step 40

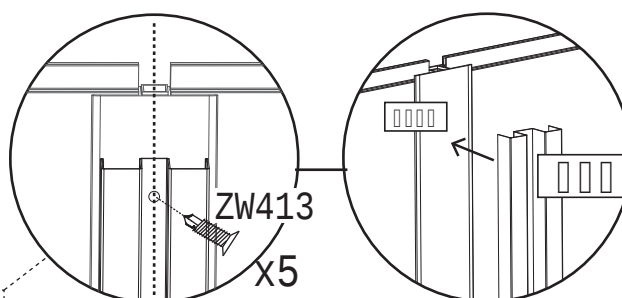

Attention to the location of the screws: they need to be locked on the iron pipe that corresponds to the inside of the plastic profile.

PS1





1 PC


ZW413



5 PC

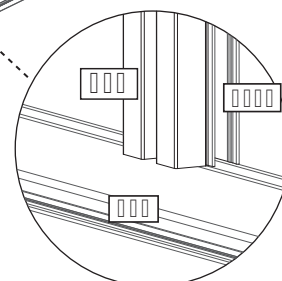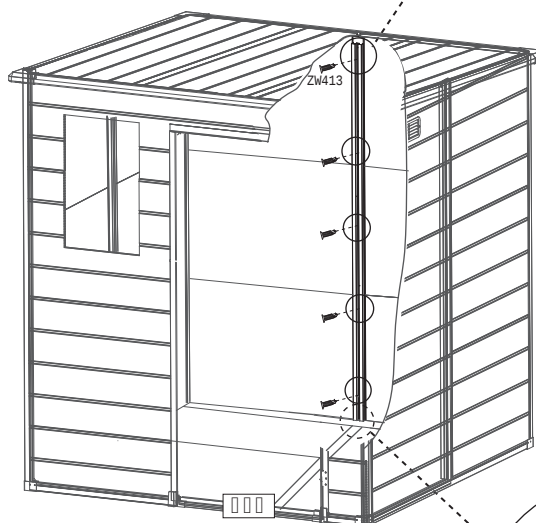


Window section



1 PC





1 PC



1 PC




16 PC

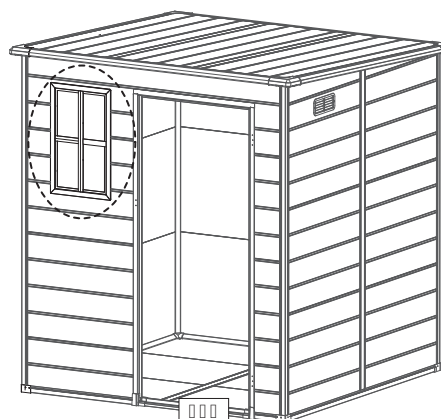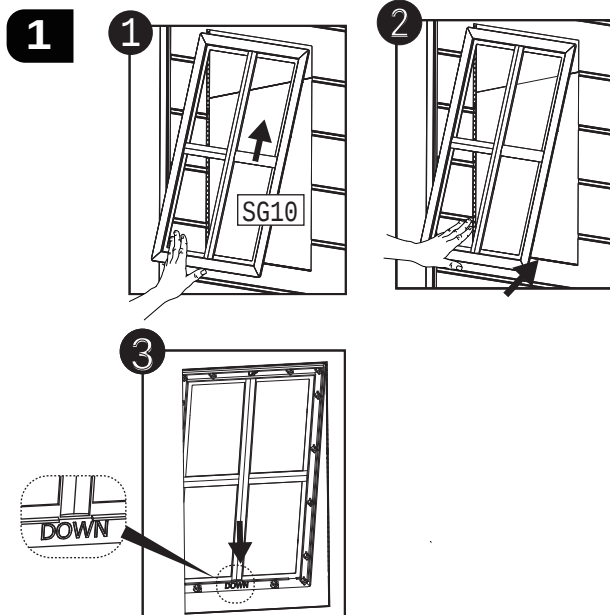


2




- Remove the film before fixing SG101

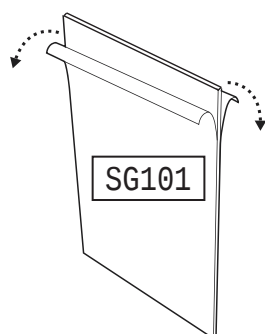

- Two persons are needed for this step, to press SG10 from outside and inside.

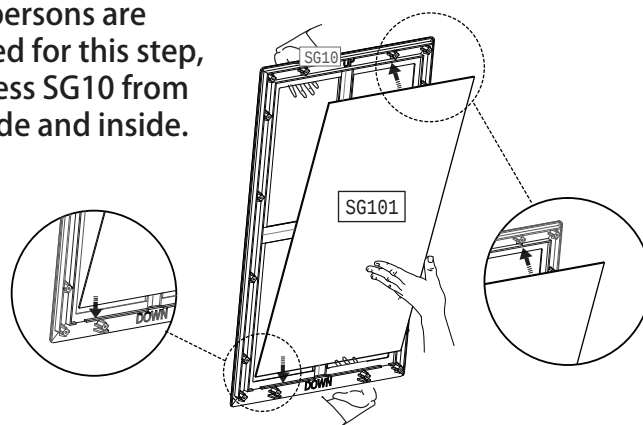

3

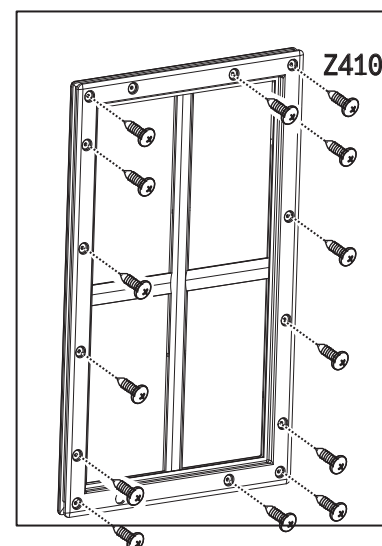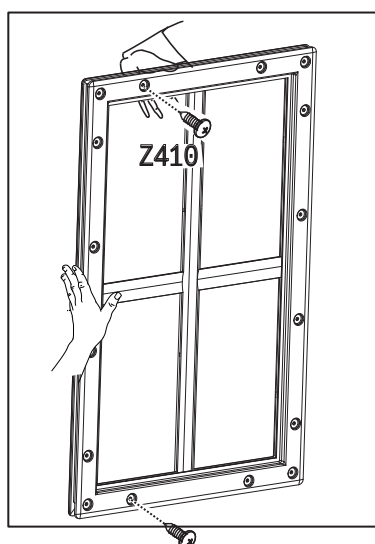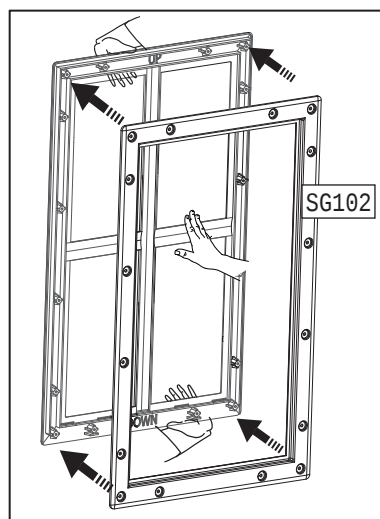

DOOR SECTION




Door mount this is above

UP


VD1-1

VD1-2

VD1-3

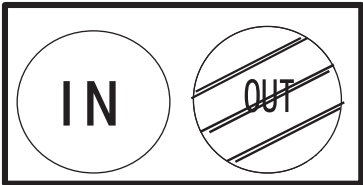


The stripes should be outside




The boards must be straight

Step 42

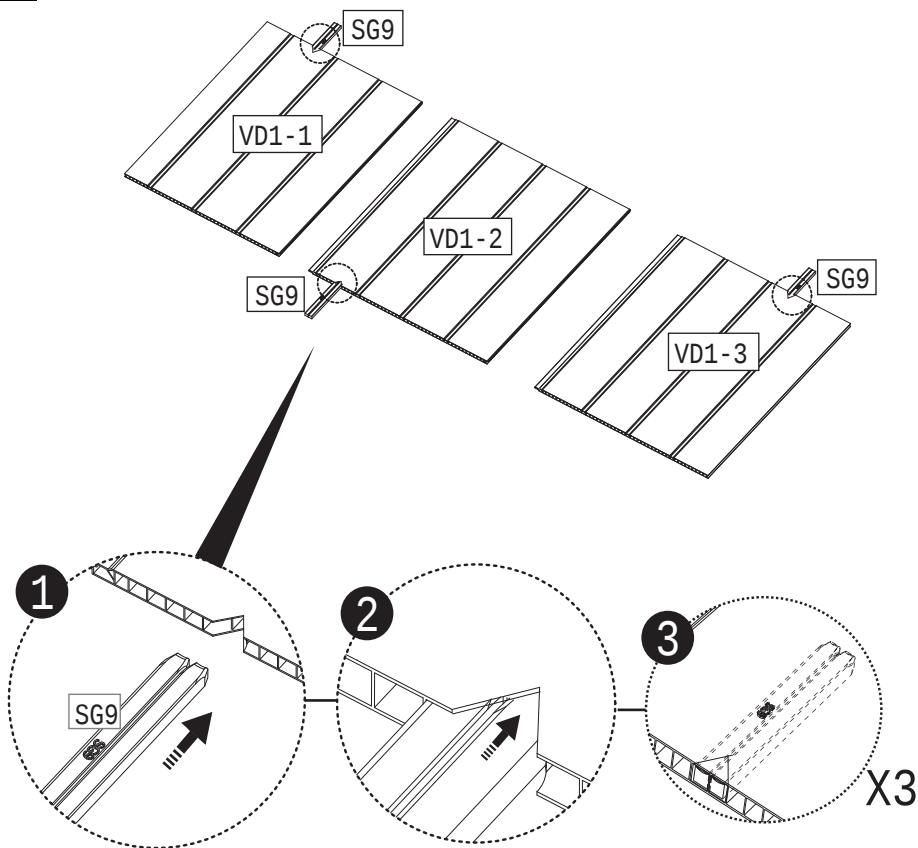


VD1-2



1 PC

VD1-1



1 PC

VD1-3







1 PC

SG9




3 PC


Step 43

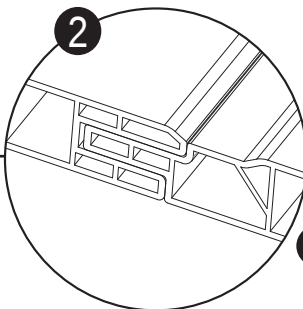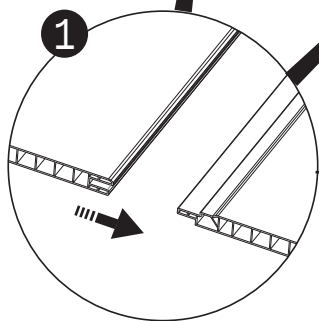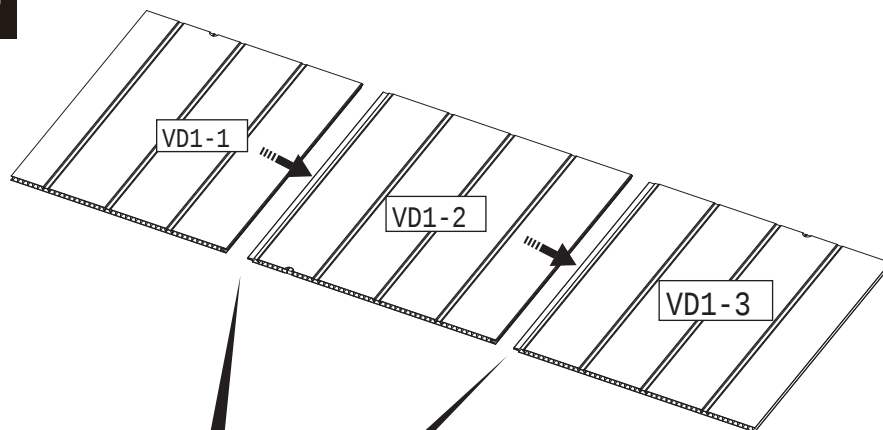



VD1-2 + SG9




VD1-1 + SG9



VD1-3 + SG9



Step 44

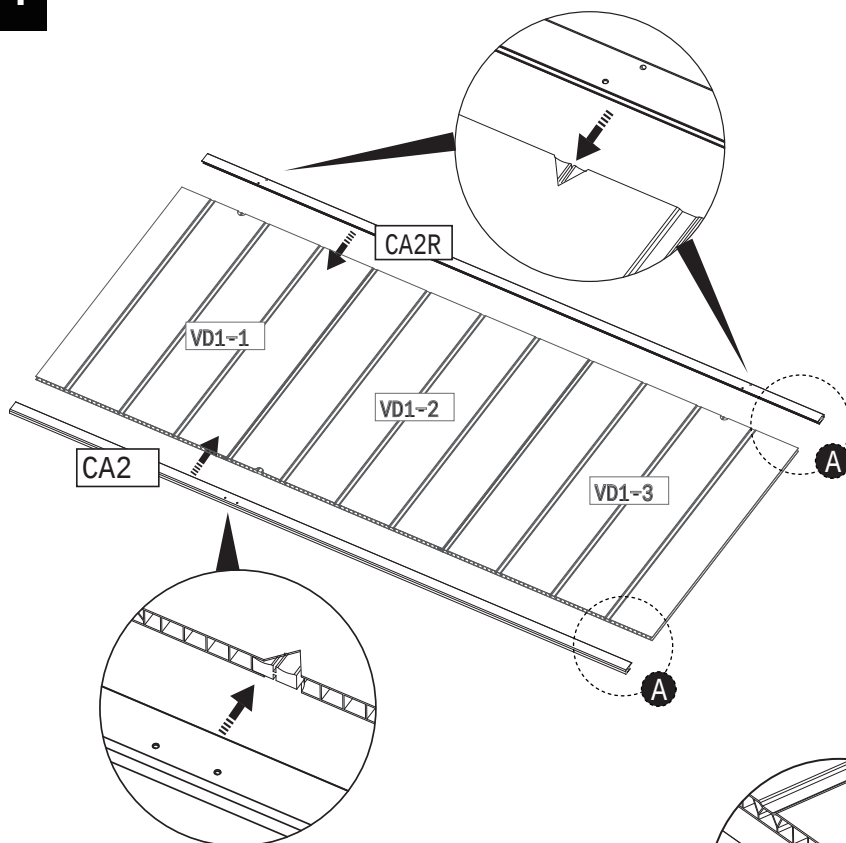

CA2





1 PC


CA2R




1 PC

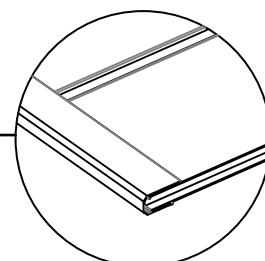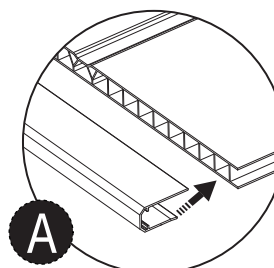

Step 45

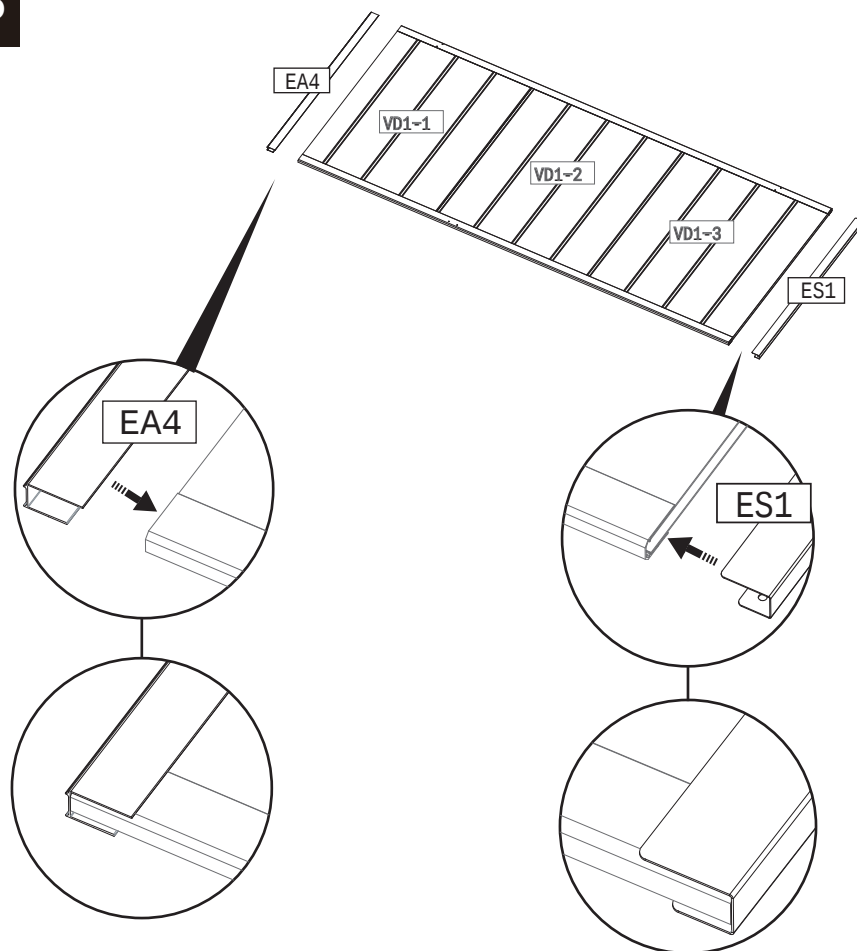


EA4


1 PC
ES1

1 PC

Step 46

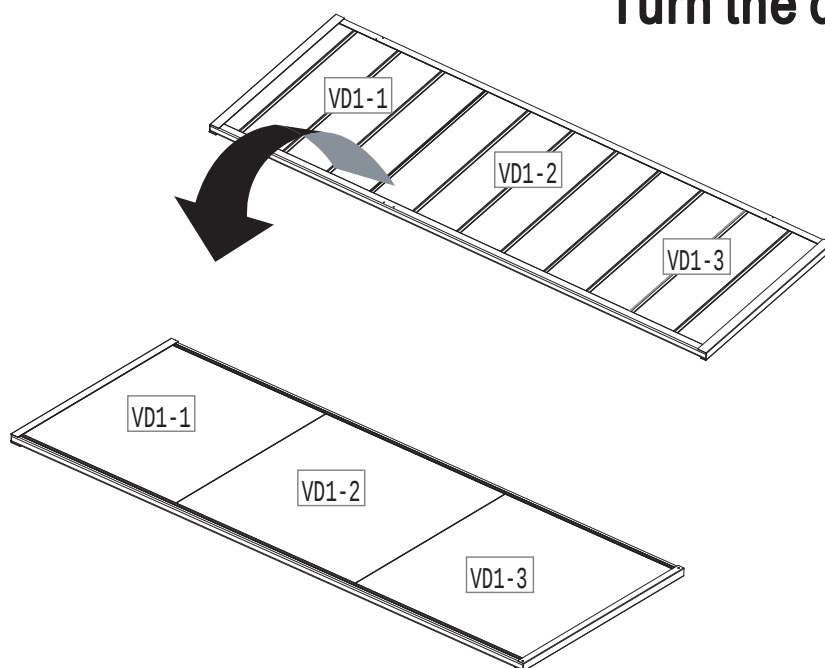Turn the doors over

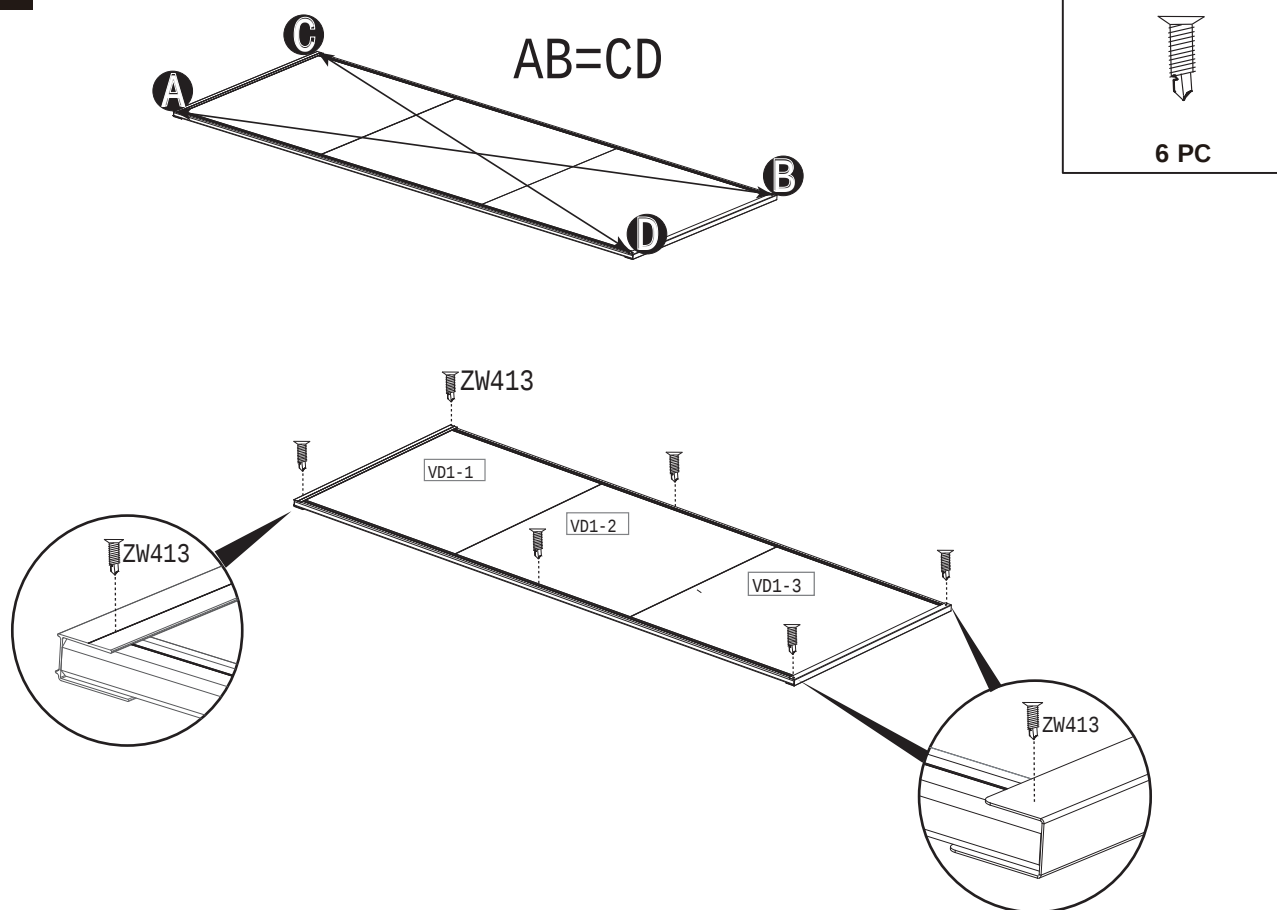


Step 47




Step 48

Turn the doors over

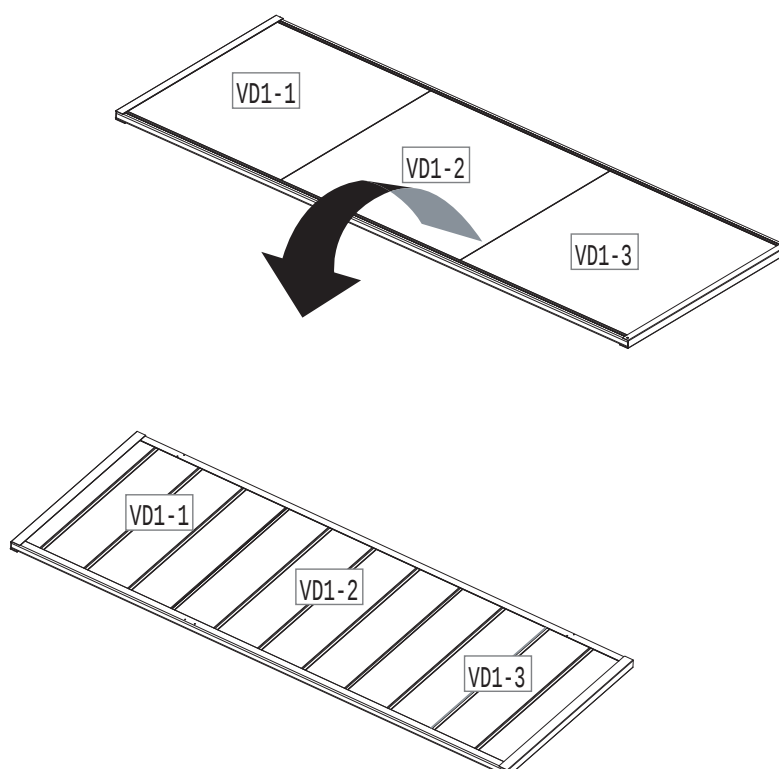

Step 49

Don't fasten the screws in this step, to adjust the positions of doors

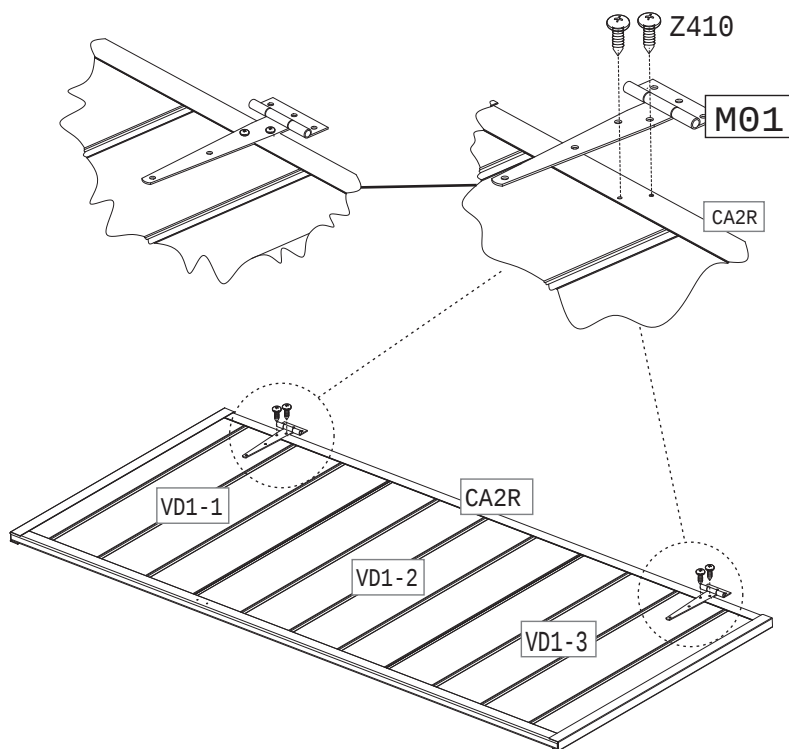


Z410







4 PC

M01




2 PC

Step 50

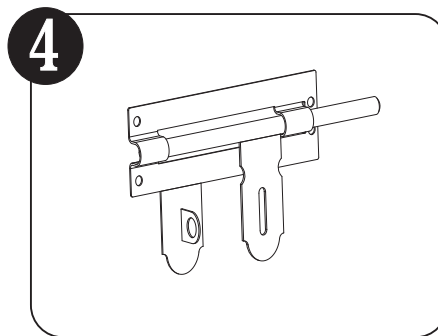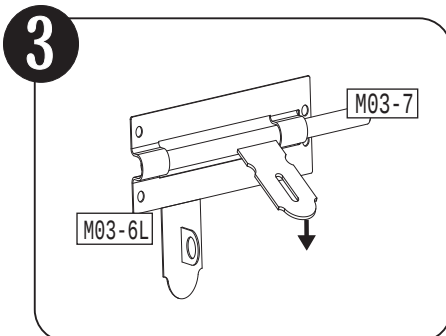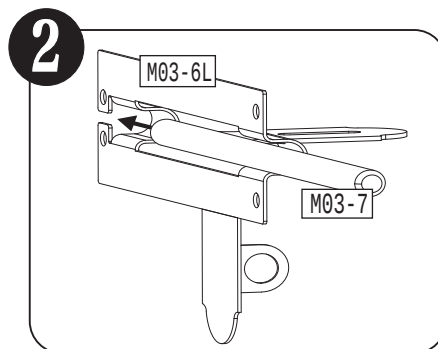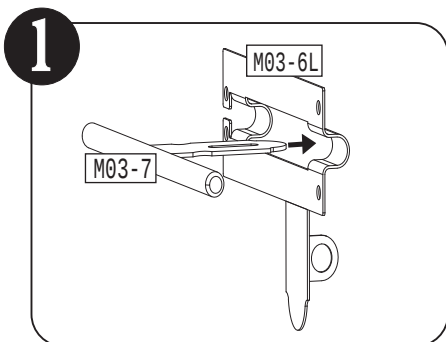


M03-6L





1 PC

M03-7



1 PC

Step 51

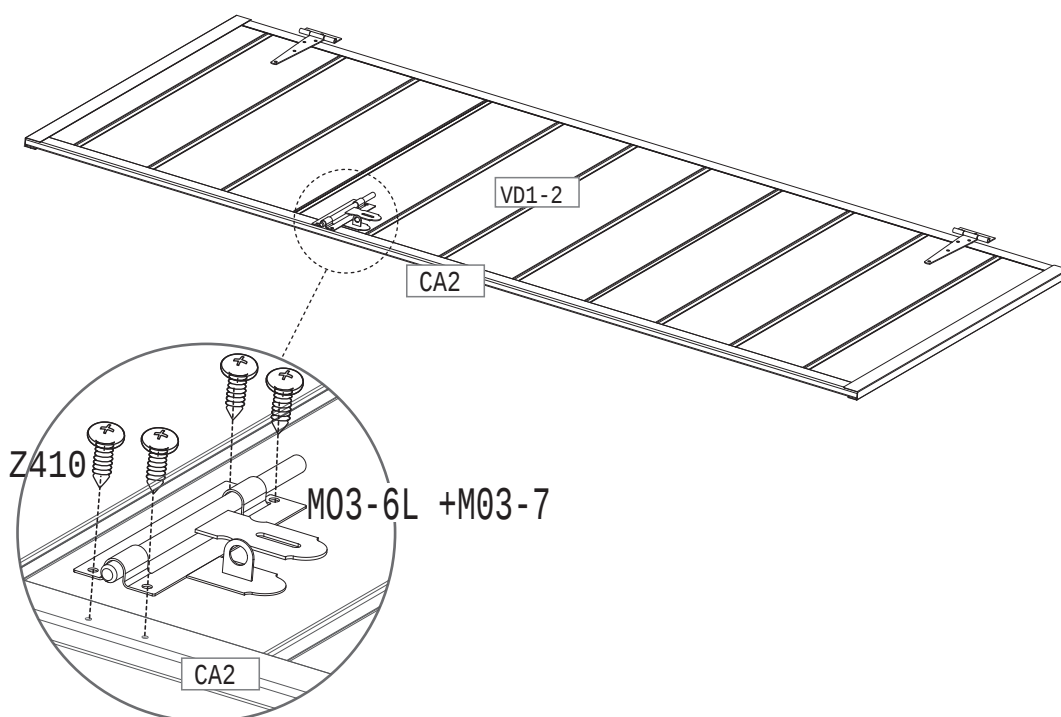


M03-6L + M03-7

Z410



4 PC


Step 52

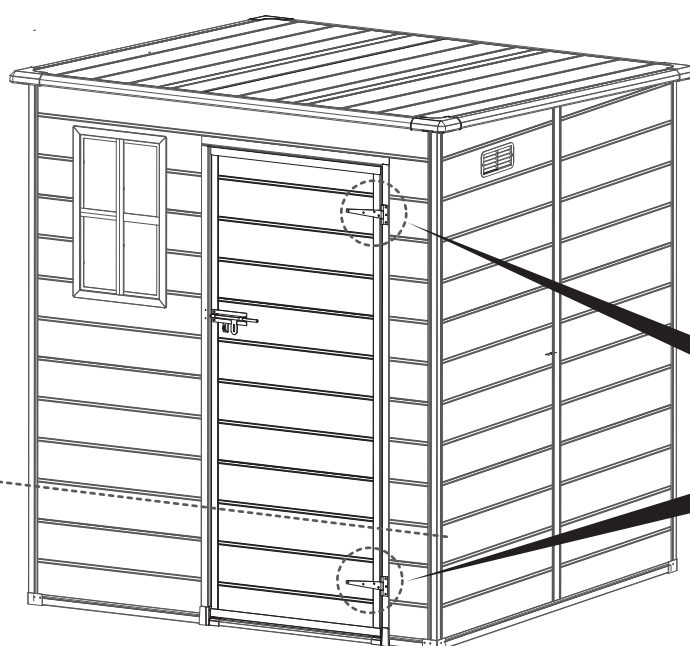


Z410



10 PC

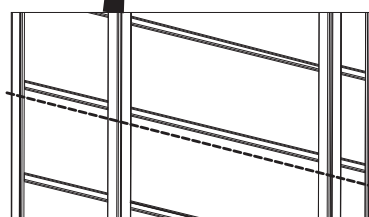

Grain of the door panels should align with that of the wall panels.

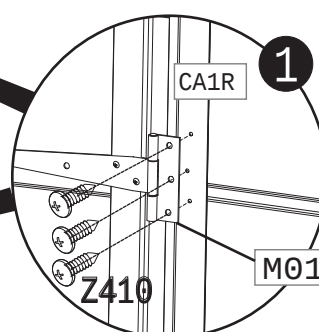


1

CA1R

Z410

M01

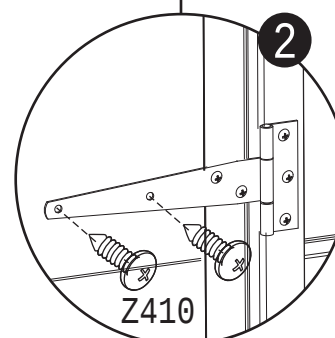


2

Z410

Nail the door after place adjustment and fasten all the screws.

Step 53

- Make sure the door is properly installed before locking the M04.

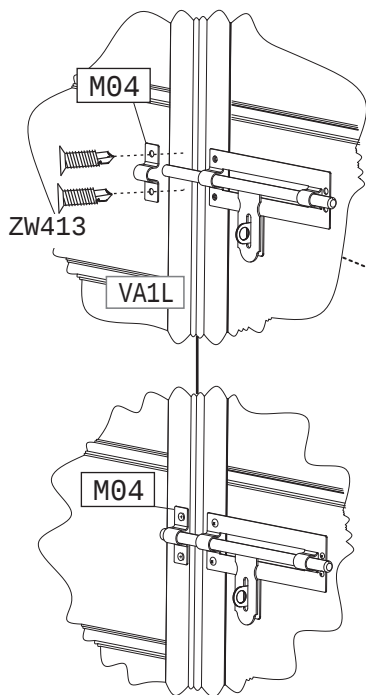

M04




1 PC

ZW413



2 PC

Step 54

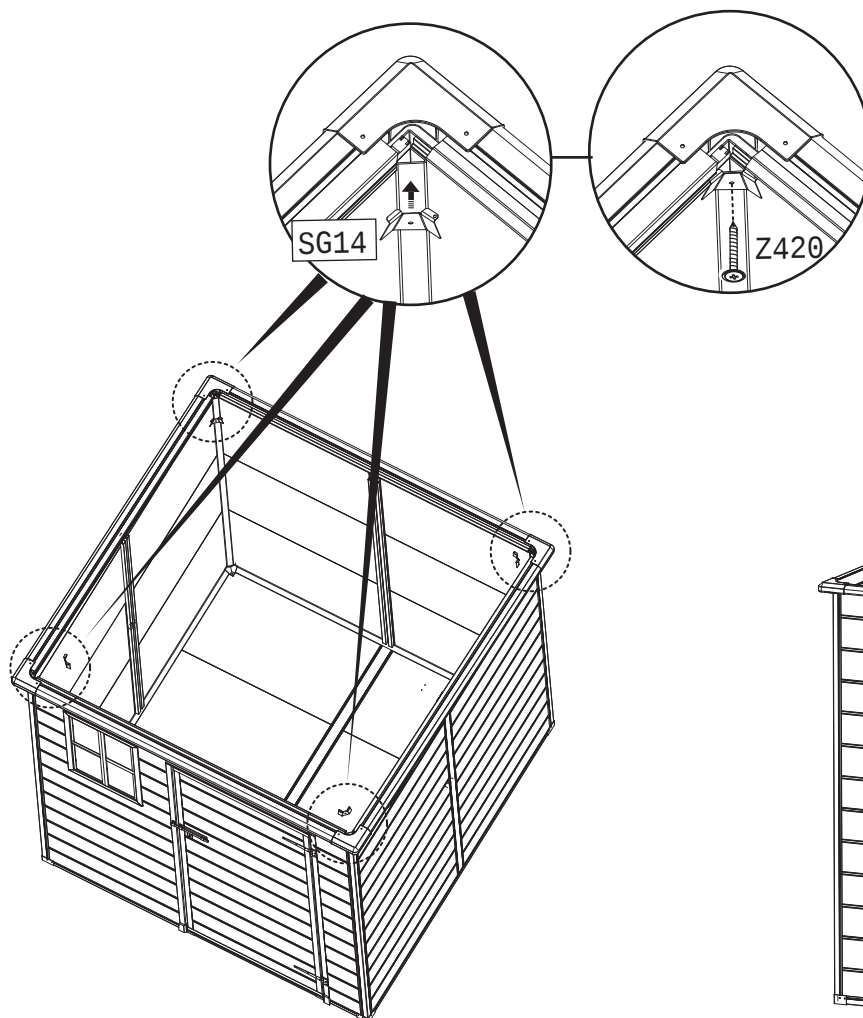

SG14



4 PC

Z420






4 PC





PARTS SCHEMATIC

ROOF PARTS

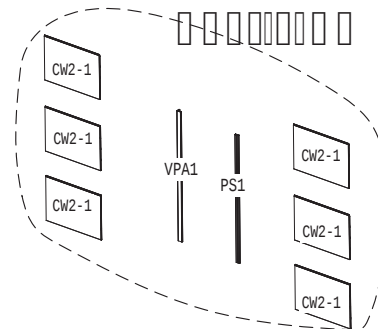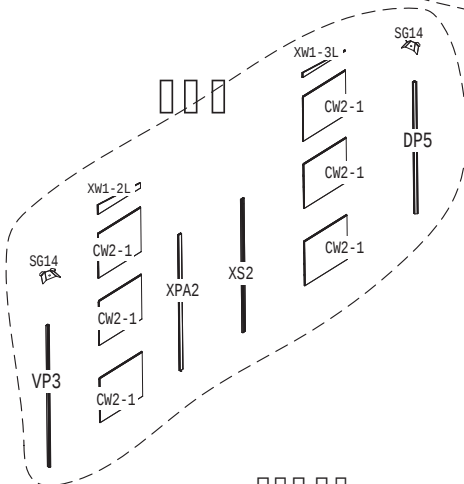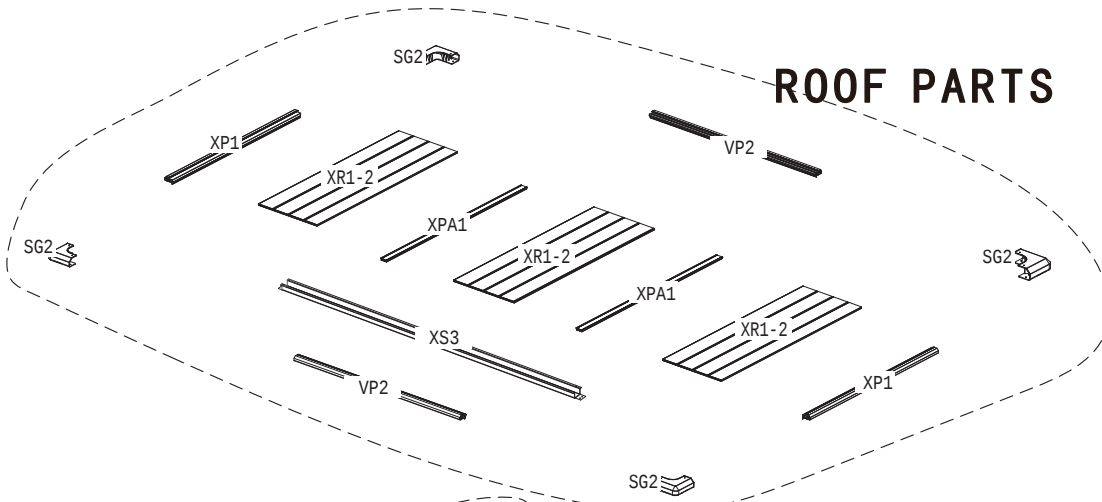

AND DOOR PARTS

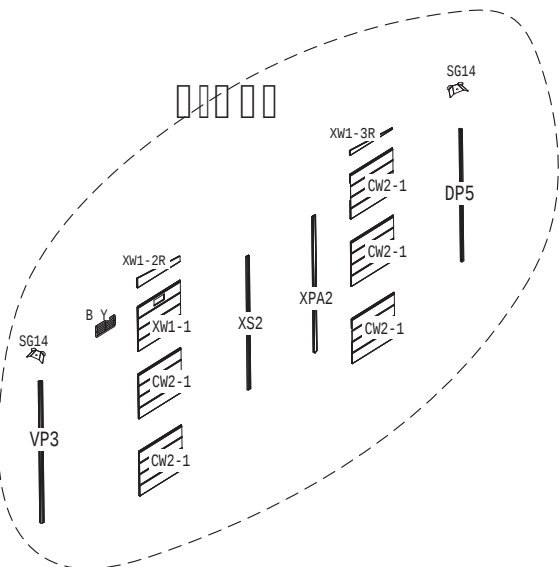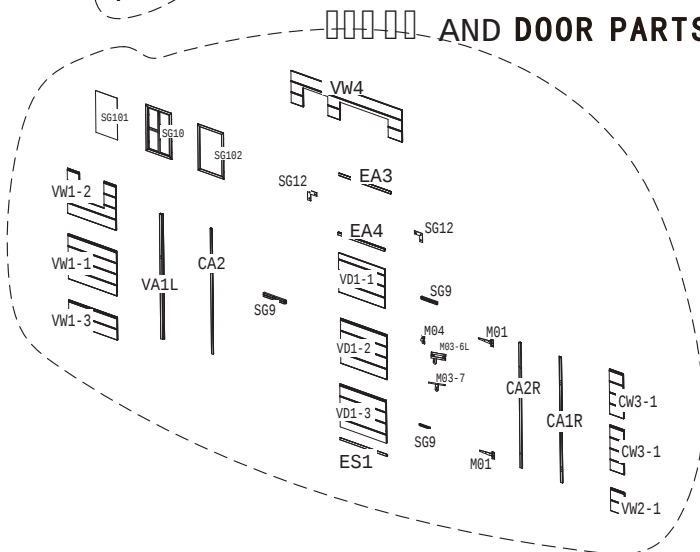

FLOOR PARTS

