


TV Cabinet

Assembly Instructions - Please keep for future reference

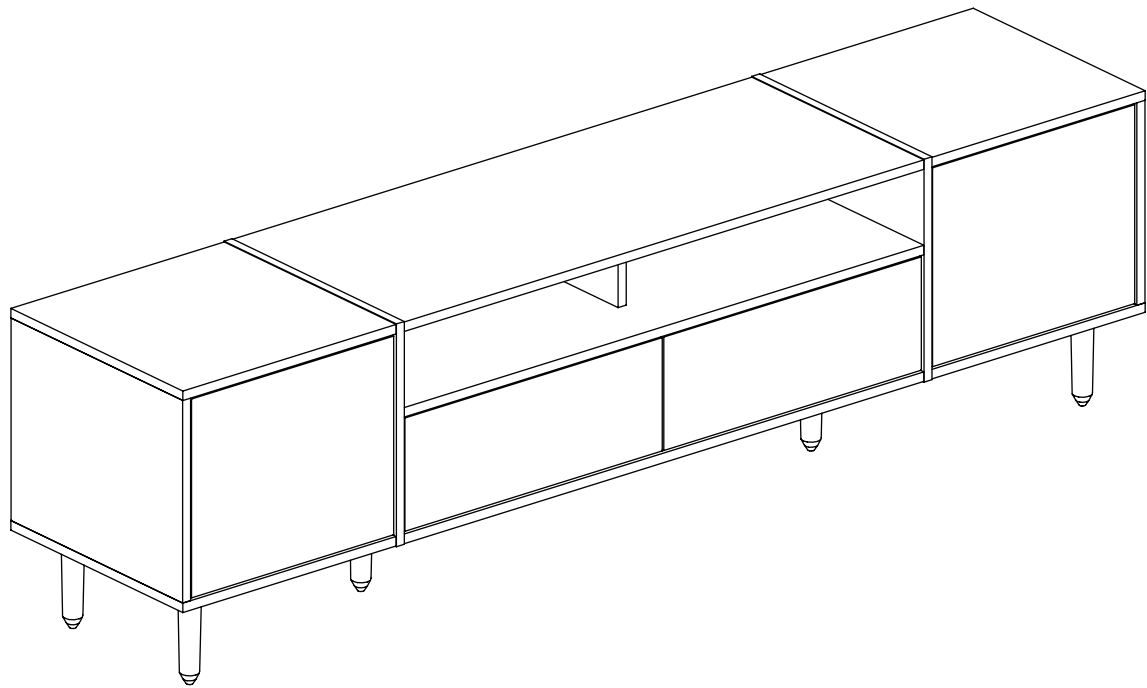

Dimensions

Width-70.85inch

Depth-15.74inch

Height-17.71inch

Important – Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

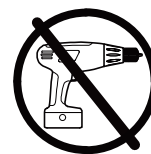

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

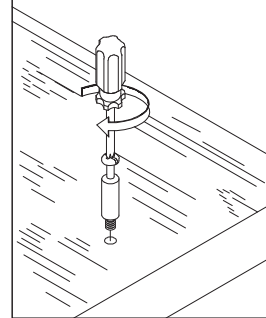

Step 2

Push the male camlock into the entry hole.

2

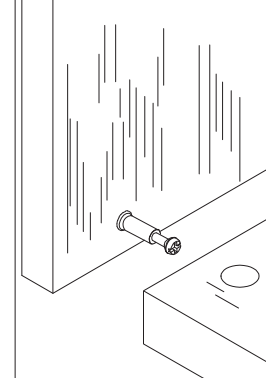


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

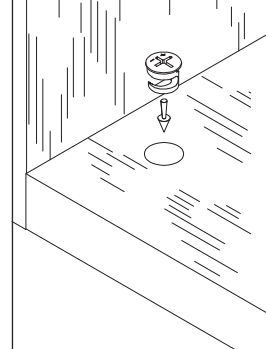


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

4
















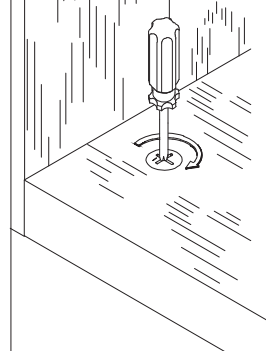


Assembly Instructions








There is a protective film, please tear it off.

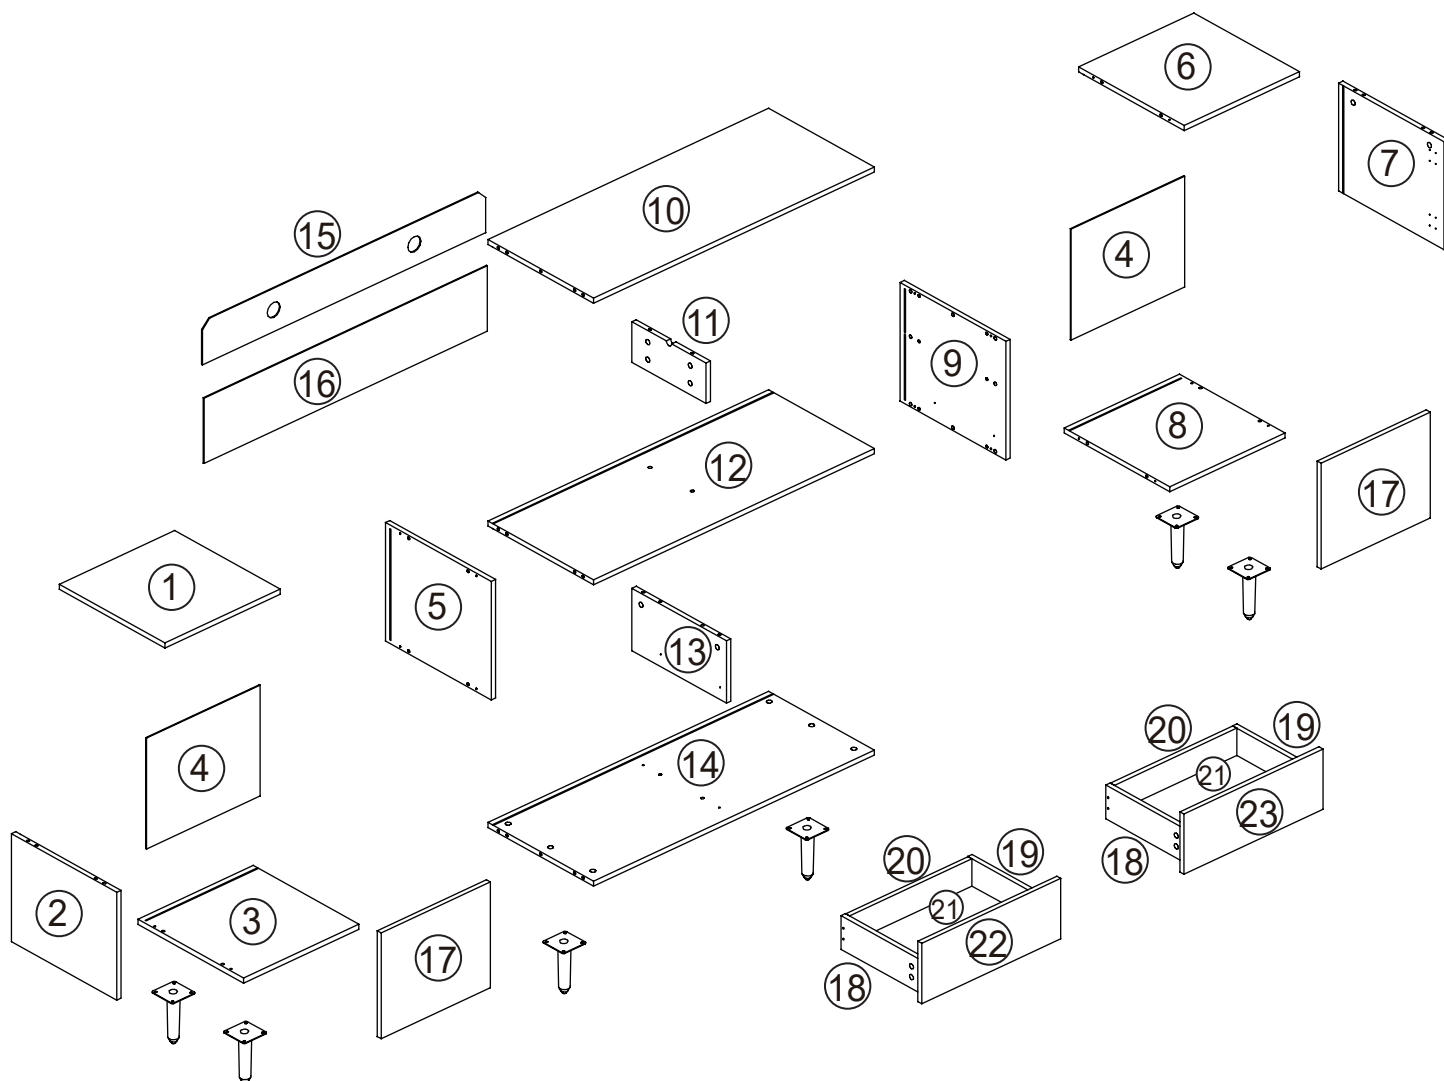

Assembly Instructions

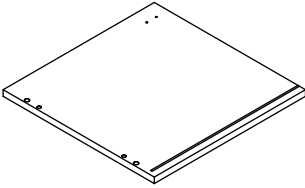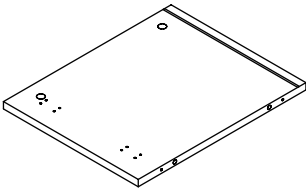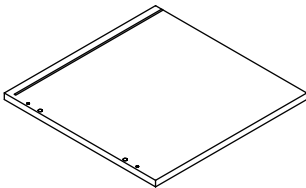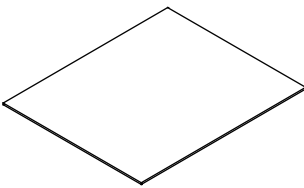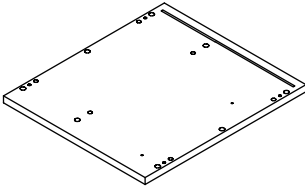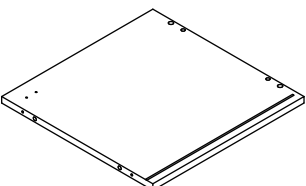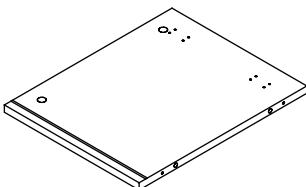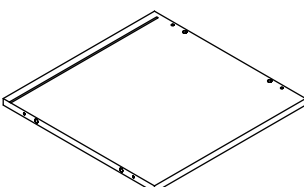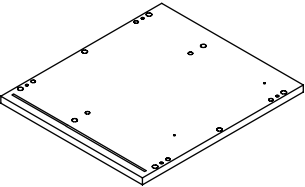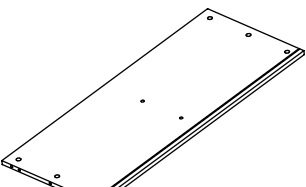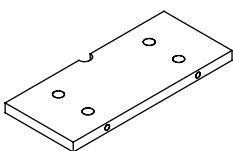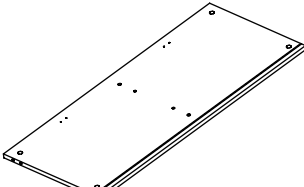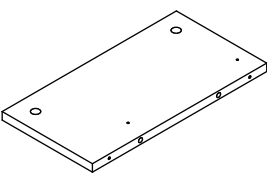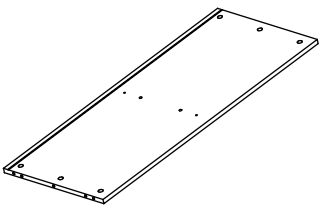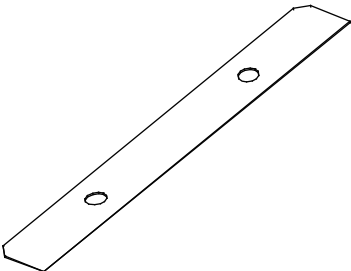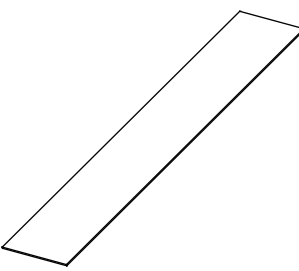			
398x399x15mm	320x398x15mm	398x399x15mm	391x329x3mm
① x 1	② x 1	③ x 1	④ x 2
			
352x400x15mm	398x399x15mm	320x398x15mm	398x399x15mm
⑤ x 1	⑥ x 1	⑦ x 1	⑧ x 1
			
352x400x15mm	972x399x15mm	120x280x15mm	972x399x15mm
⑨ x 1	⑩ x 1	⑪ x 1	⑫ x 1
			
185x357x15mm	972x399x15mm	981x129x3mm	981x194x3mm
⑬ x 1	⑭ x 1	⑮ x 1	⑯ x 1





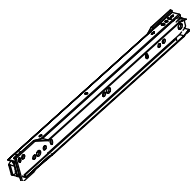
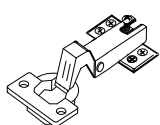


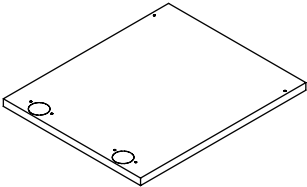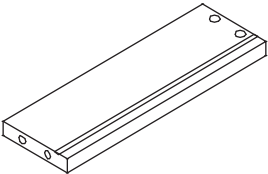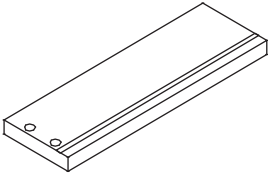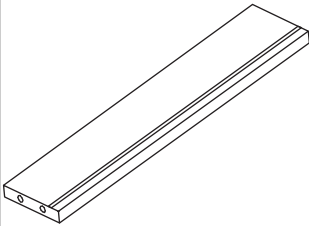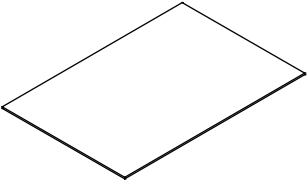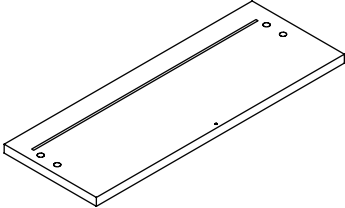
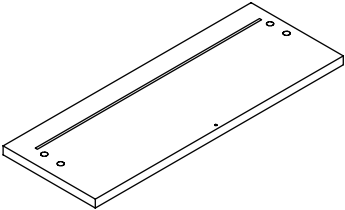


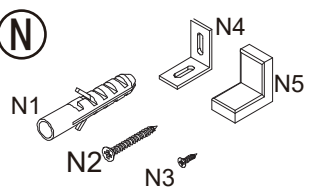

Assembly Instructions


			
376x314x15mm	300x100x15mm	300x100x15mm	423.5x100x15mm
⑪ x 2	⑫ x 2	⑬ x 2	⑭ x 2
			
434.5x295x3mm	481.5x179x15mm	481.5x179x15mm	
⑮ x 2	⑯ x 1	⑰ x 1	

Components-Fittings



Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A)  Cam Bolt x 34+2	(B)  Cam Lock x 34+2	(C)  8*30mm Dowel x 32+2	(D)  5*40mm Screw x 22+2
(E)  300mm Drawer slide x 2	(F)  Hinge x 4	(G)  Perfect Fit x 4+1	(H)  Back panel buckle x 26+2
(J)  Foot x 6	(K)  Rebound device x 4	(L)  3.5*14mm Screw x 98+4	(M)  Light strip x 1
(N)  Anti-dumping x 2	(O)  Screwdriver x 1		

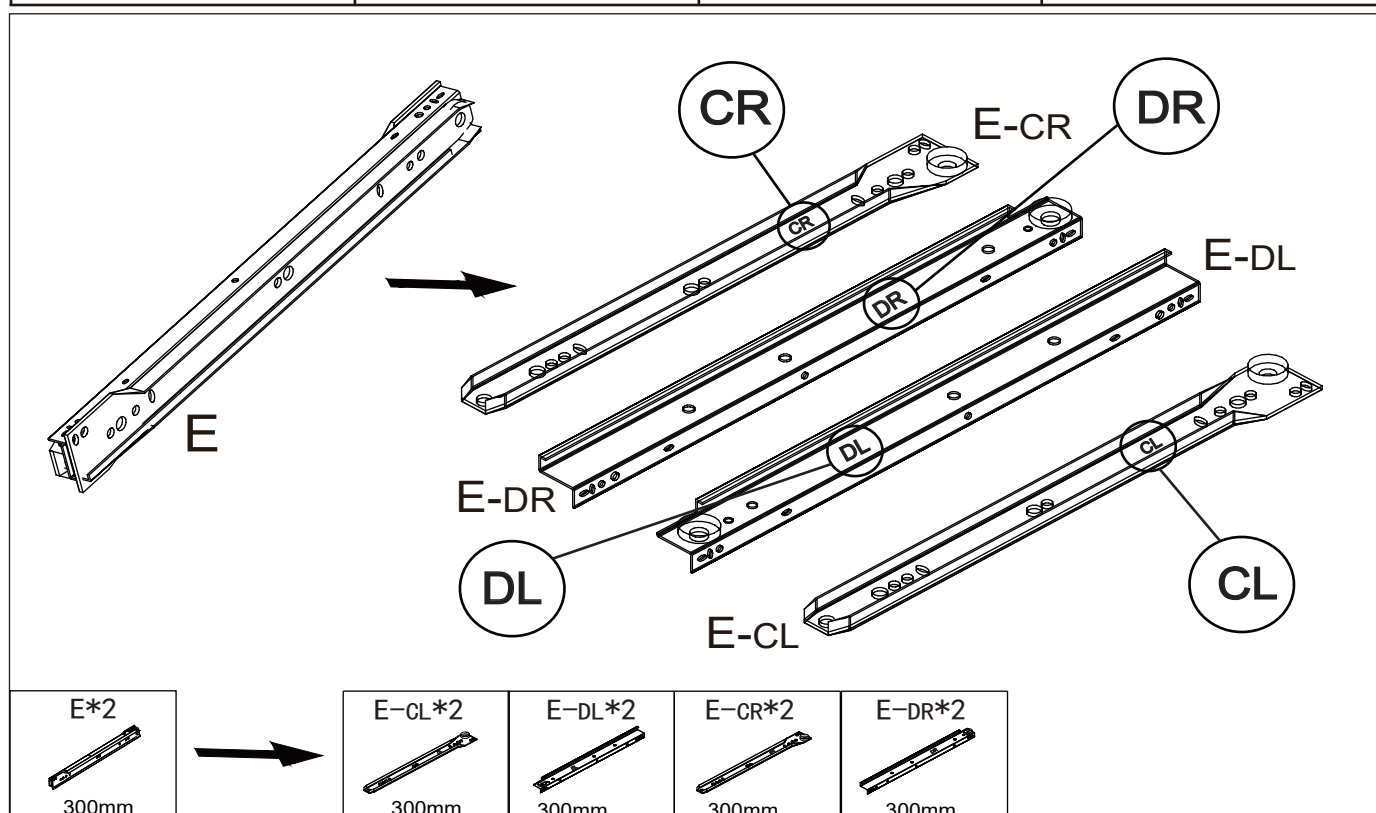


1.

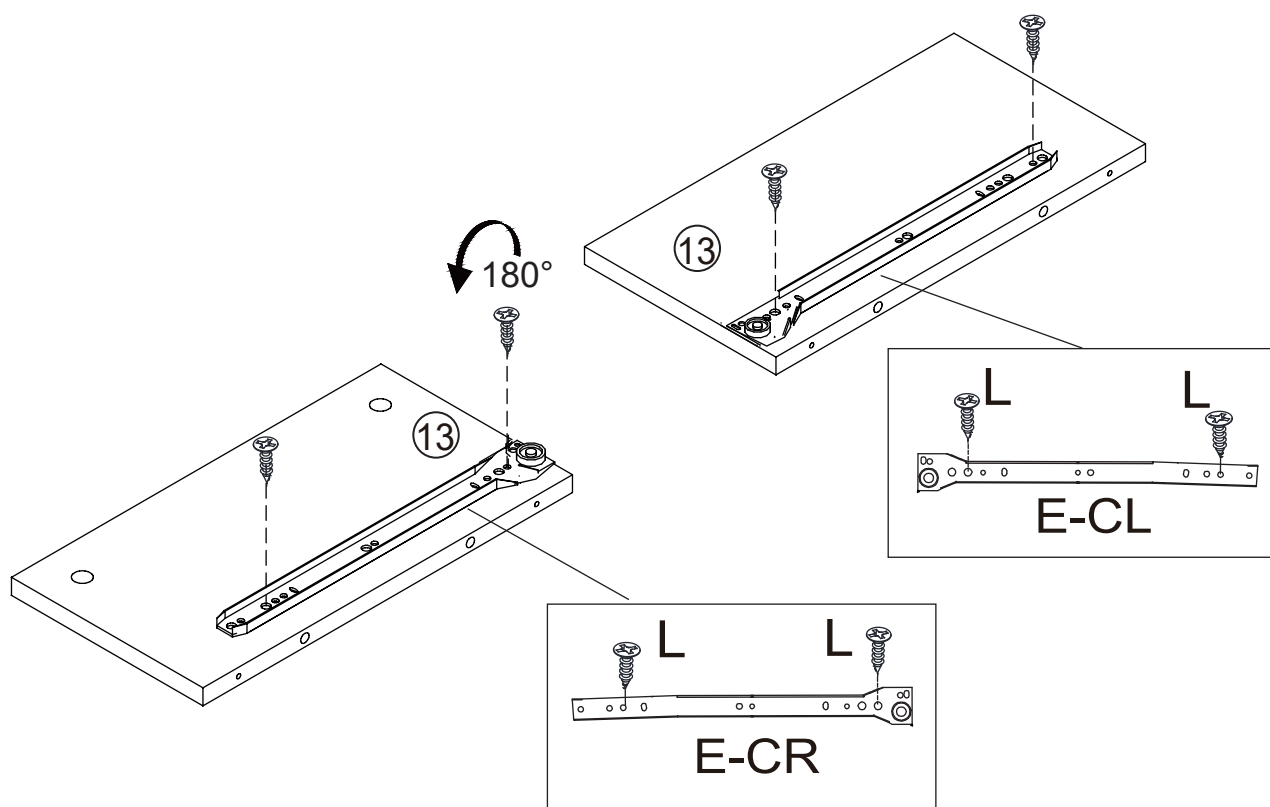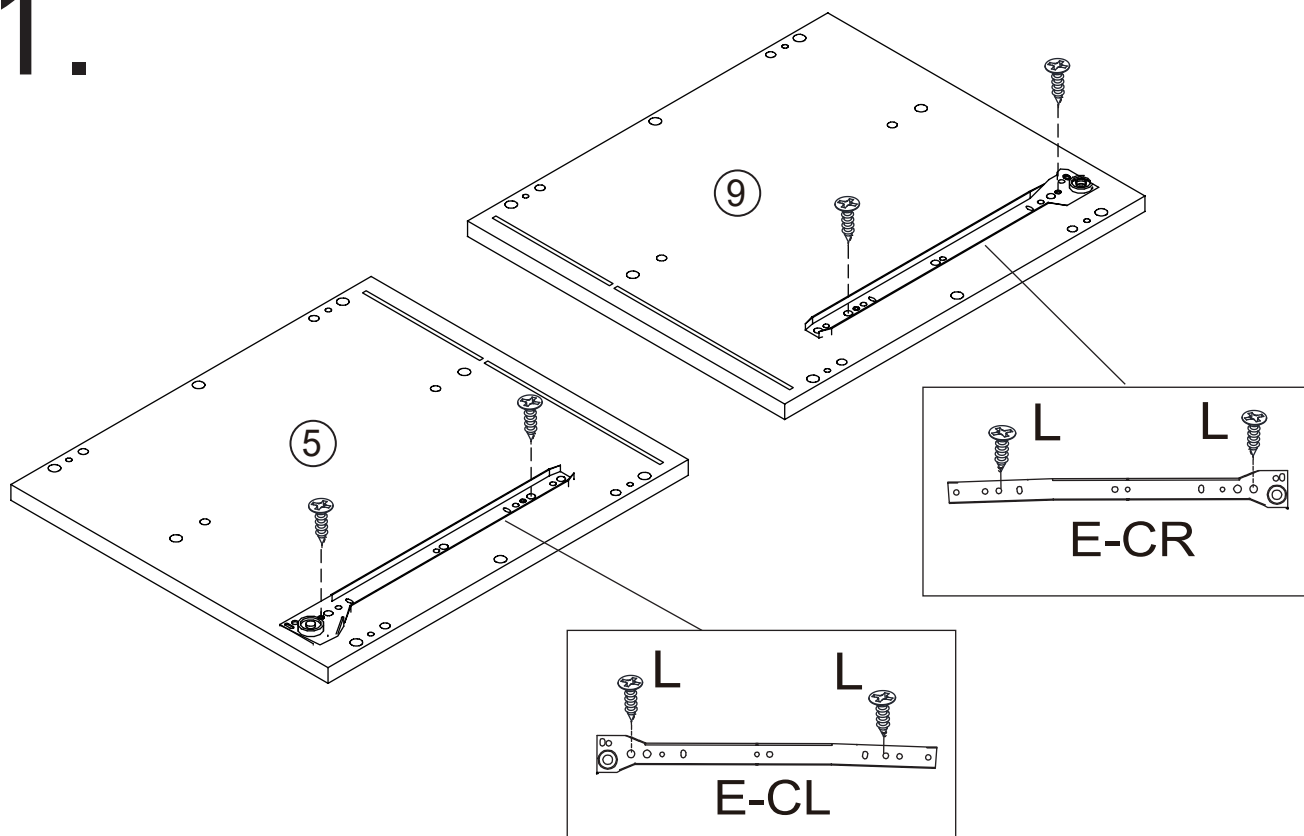


L*8





E-CL*2



E-CR*2



2.

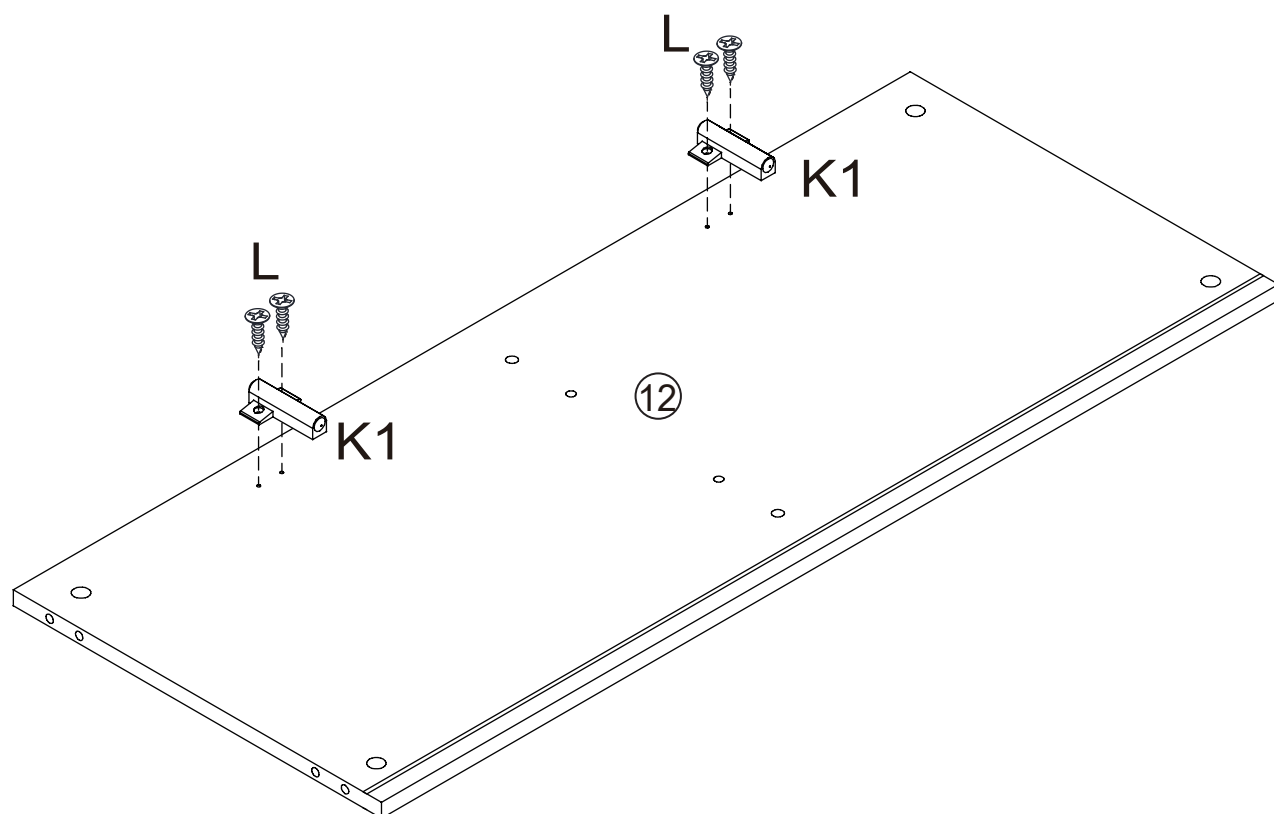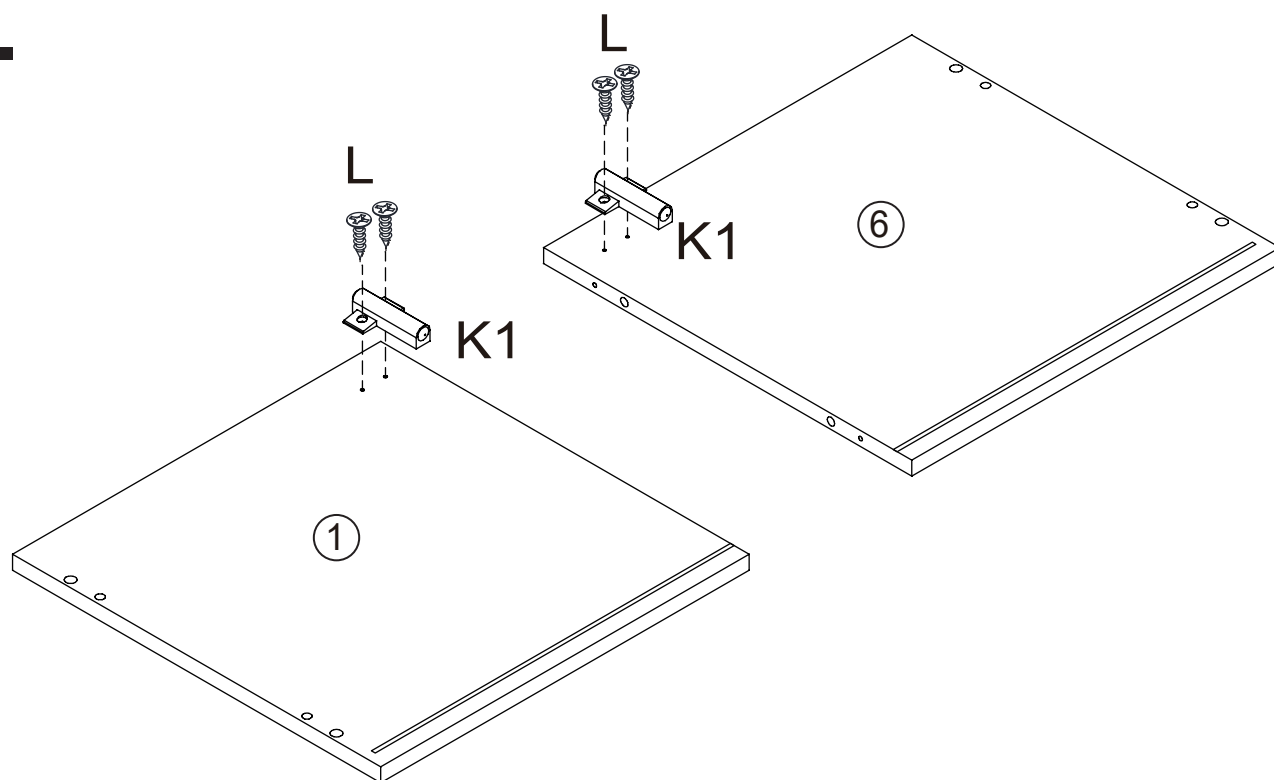

L*8



K*4




K2
K1


K-K1*4




3.

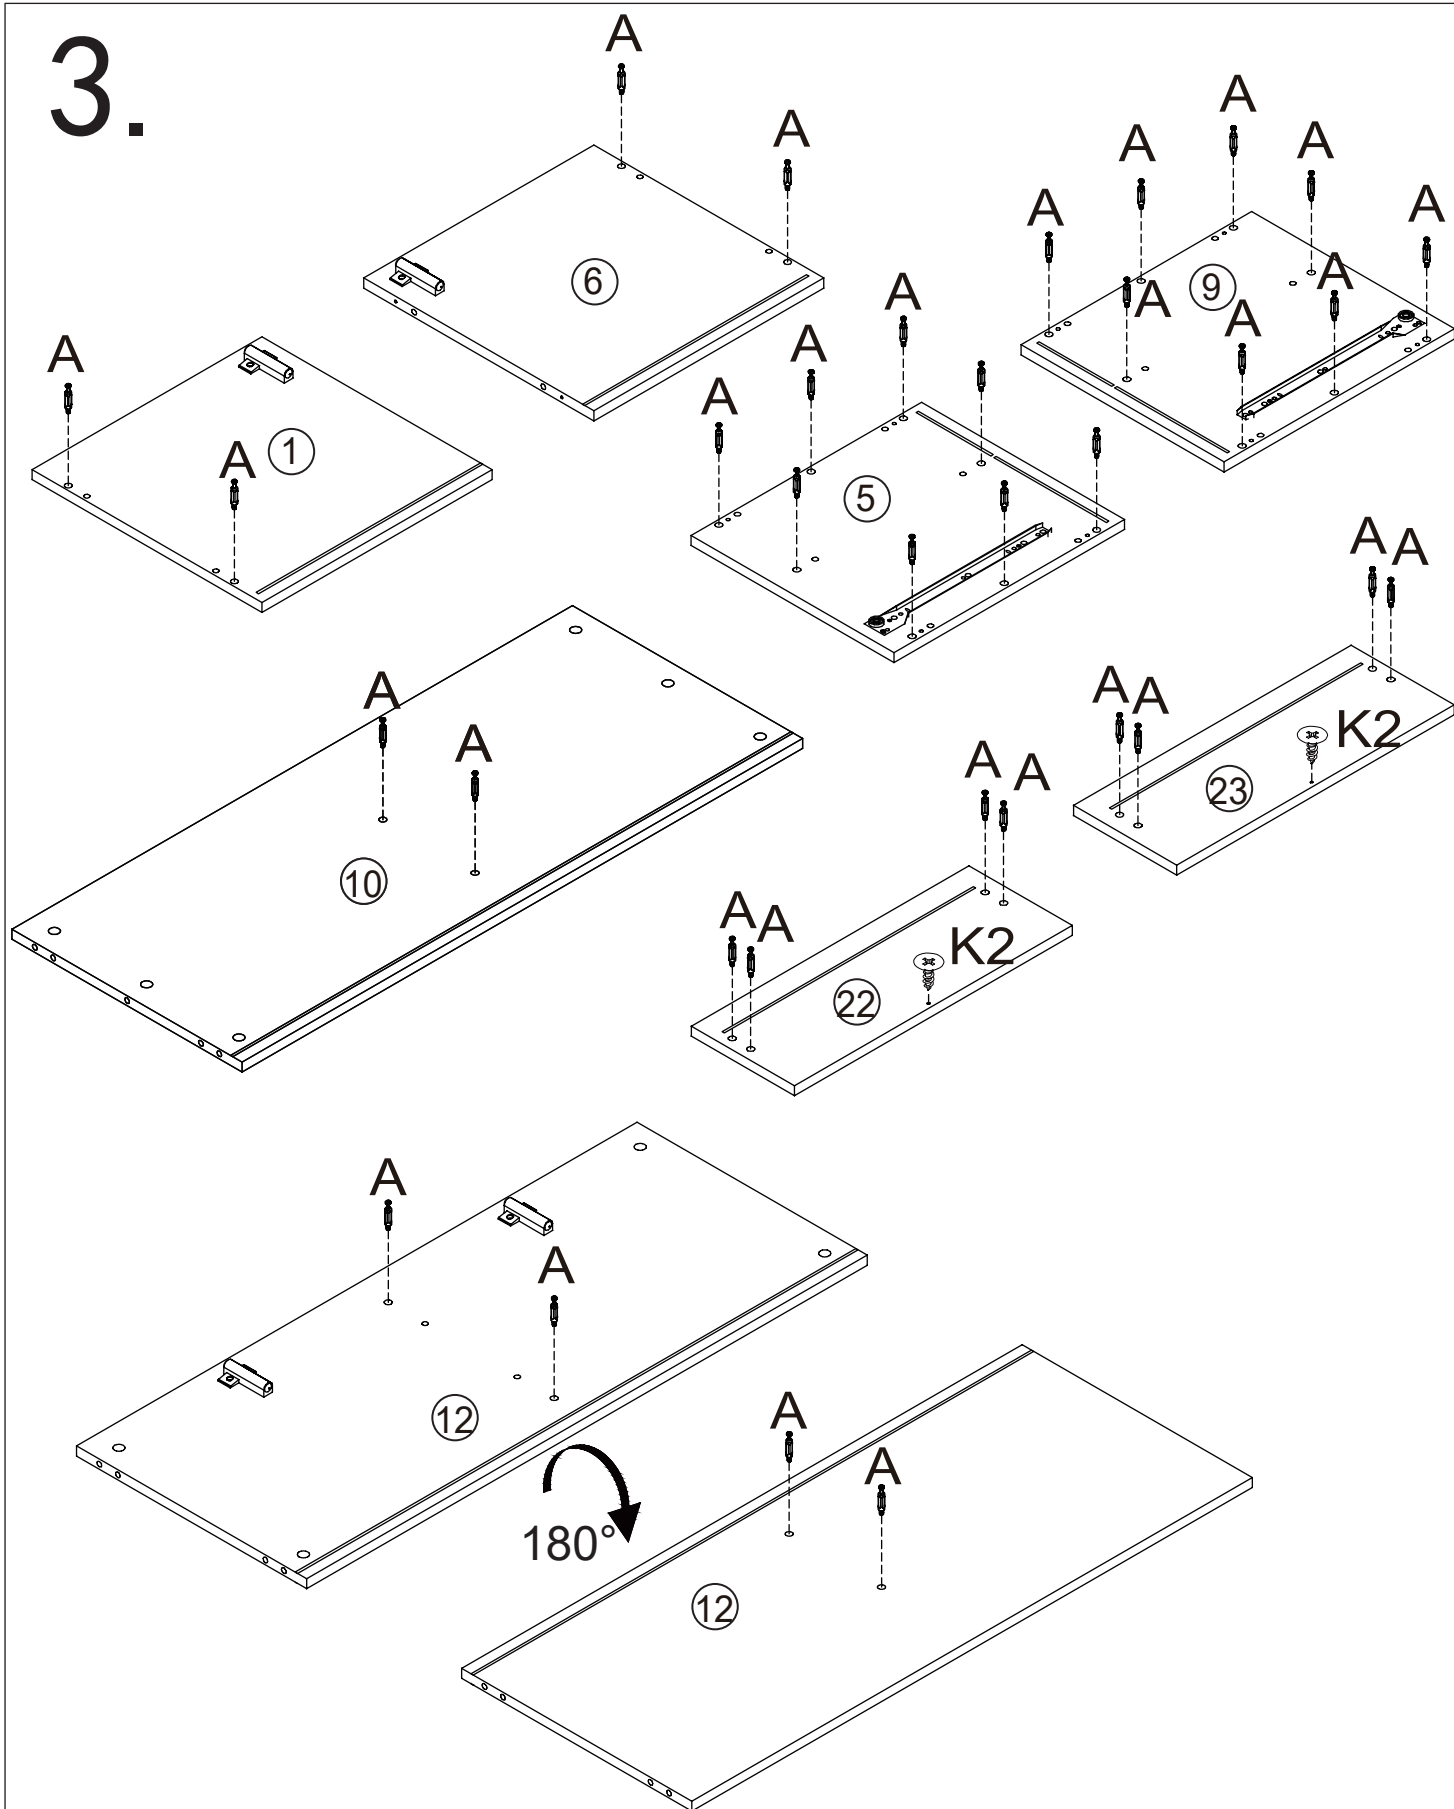

A*34





K*2



K-K2*2




4.

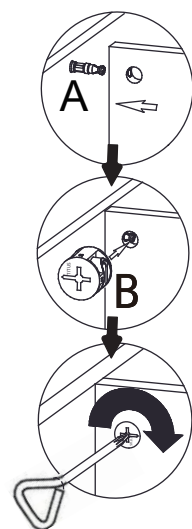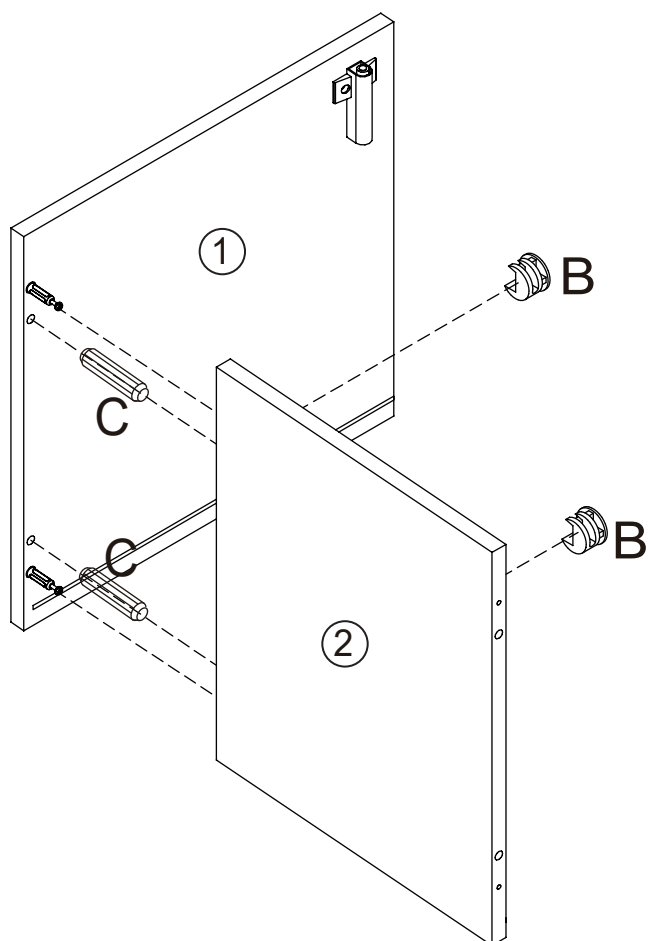


B*2




C*2



5.

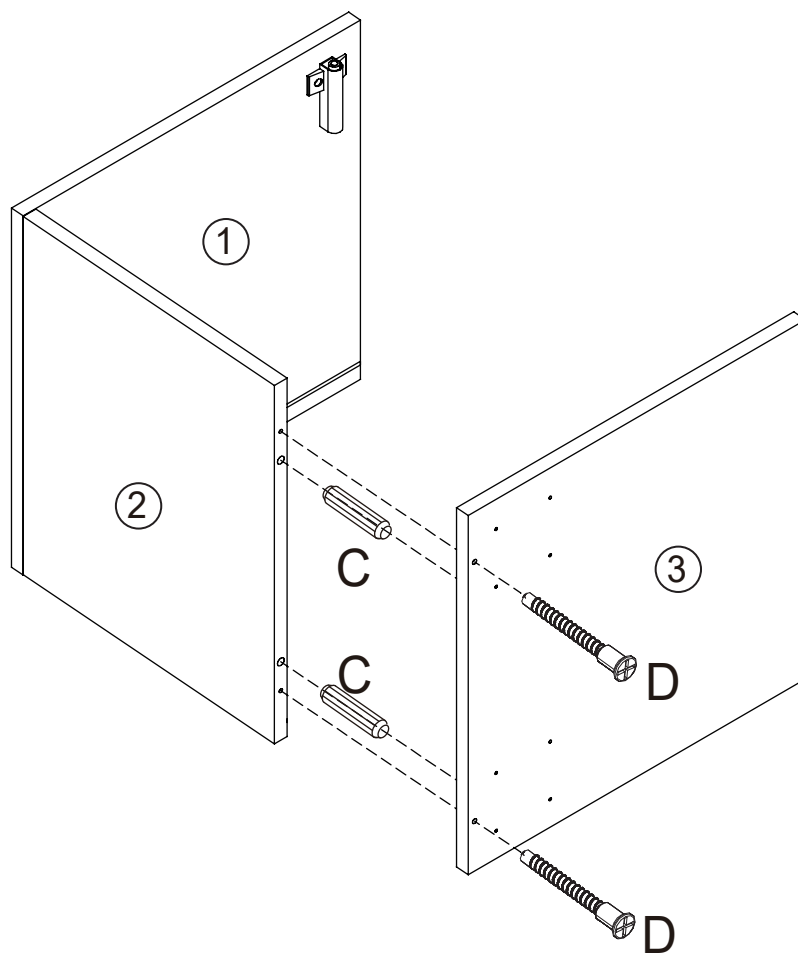


C*2




D*2




6.

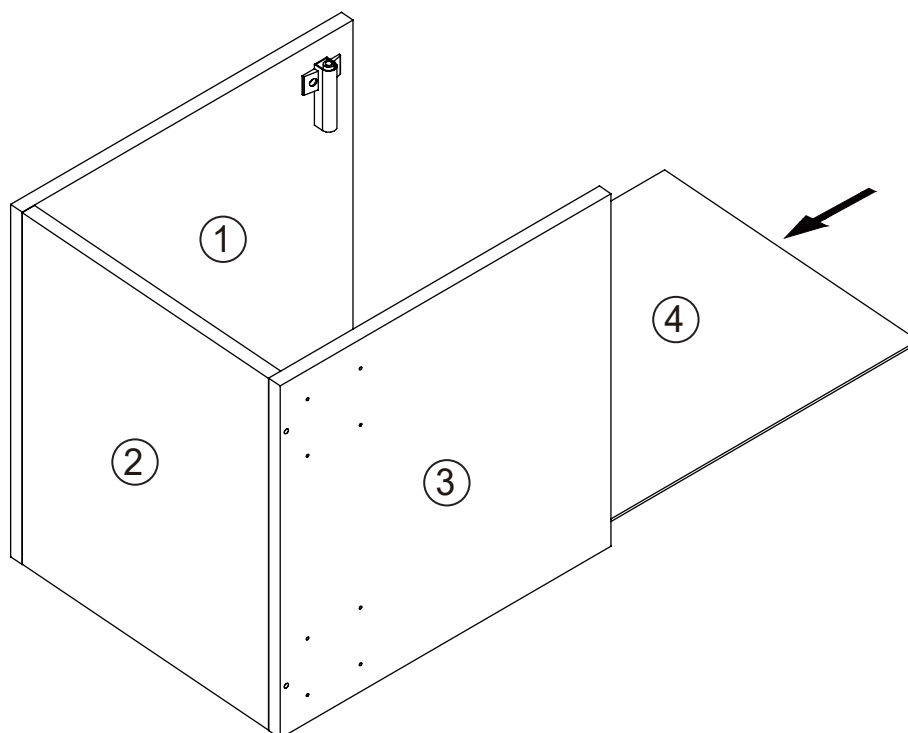


7.

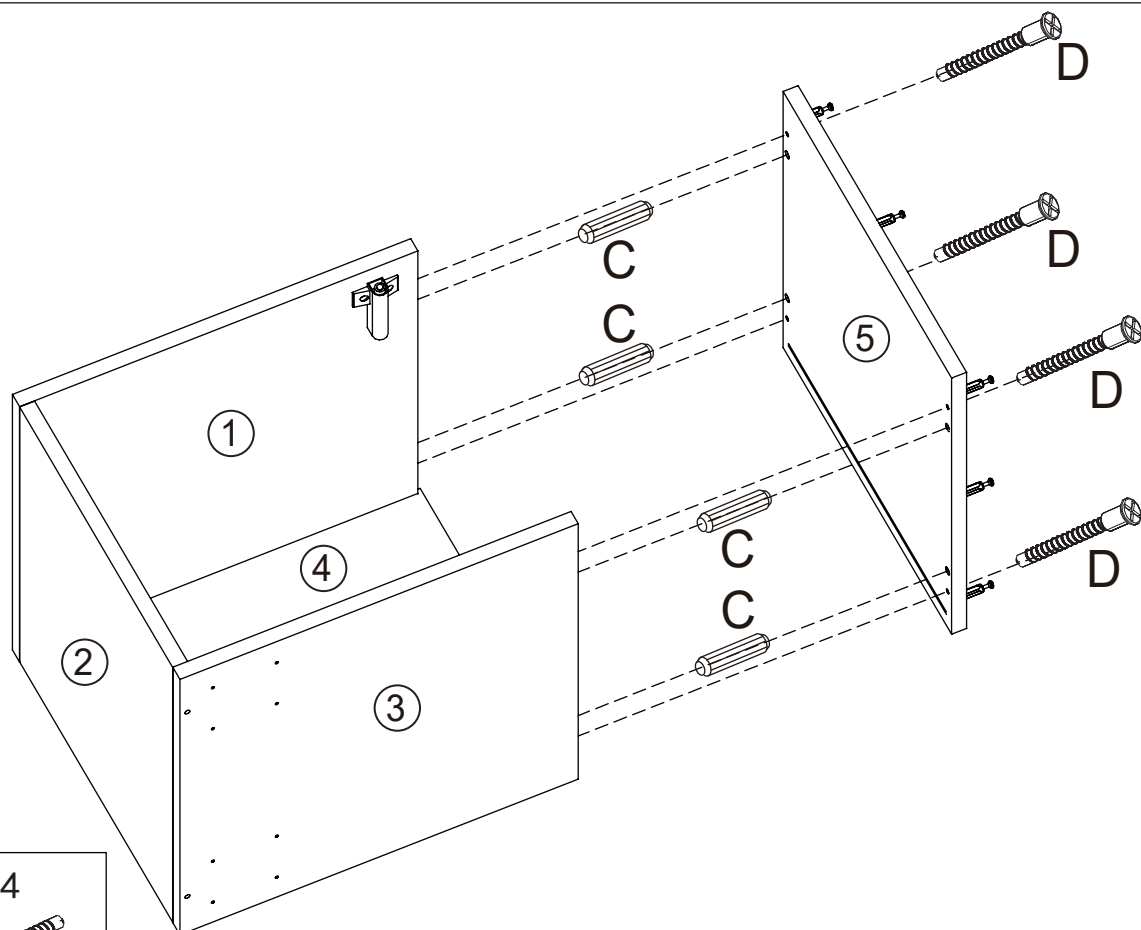



C*4



D*4




8.

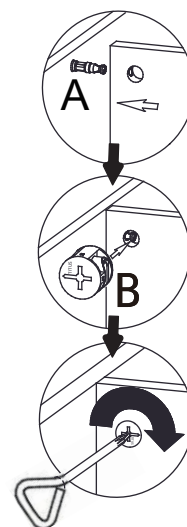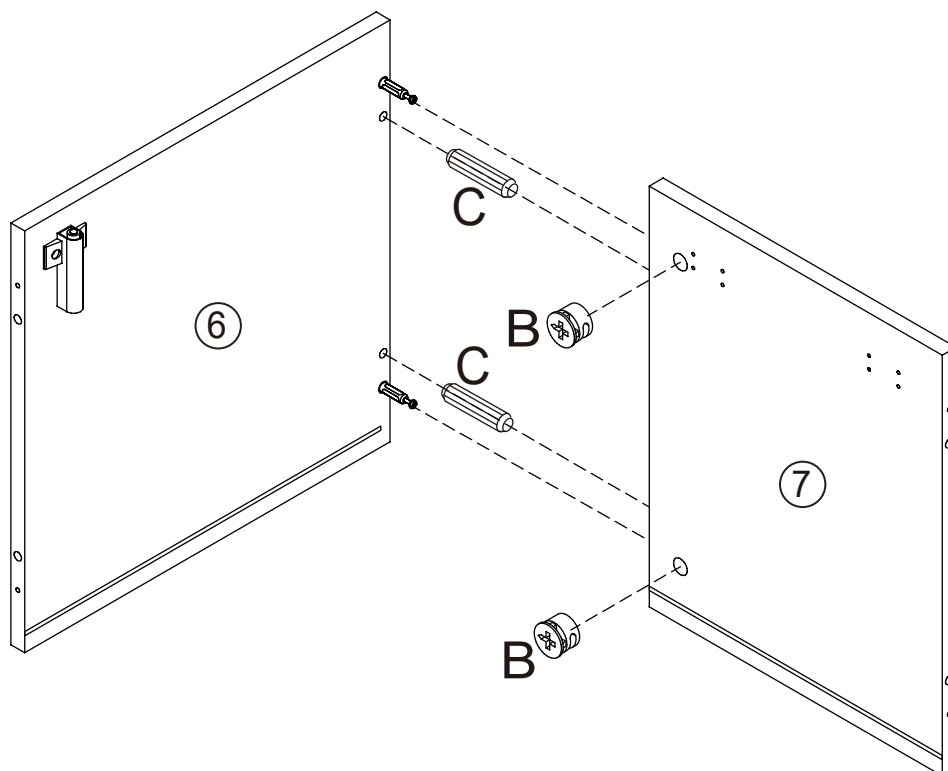


B*2



C*2



9.

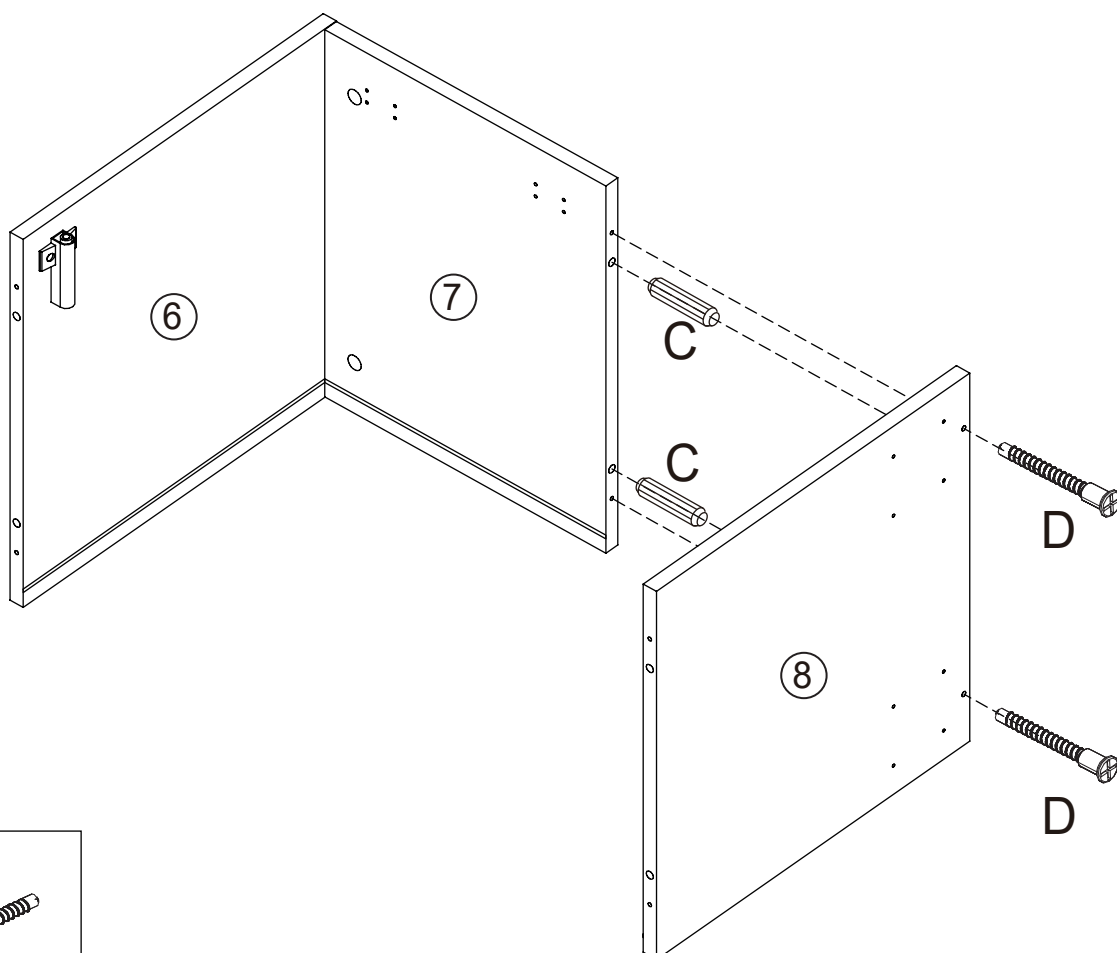


C*2




D*2




10.

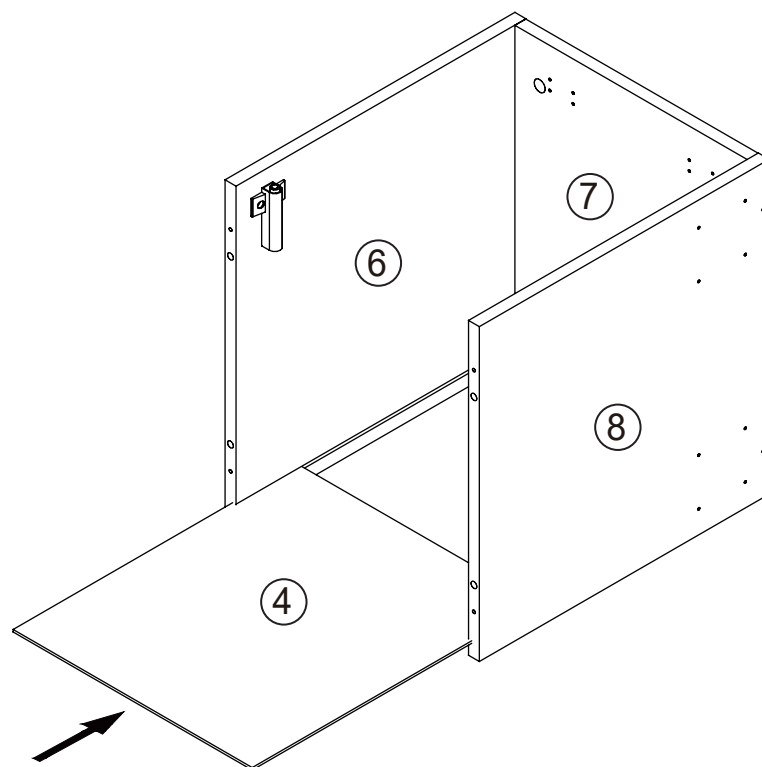

11.

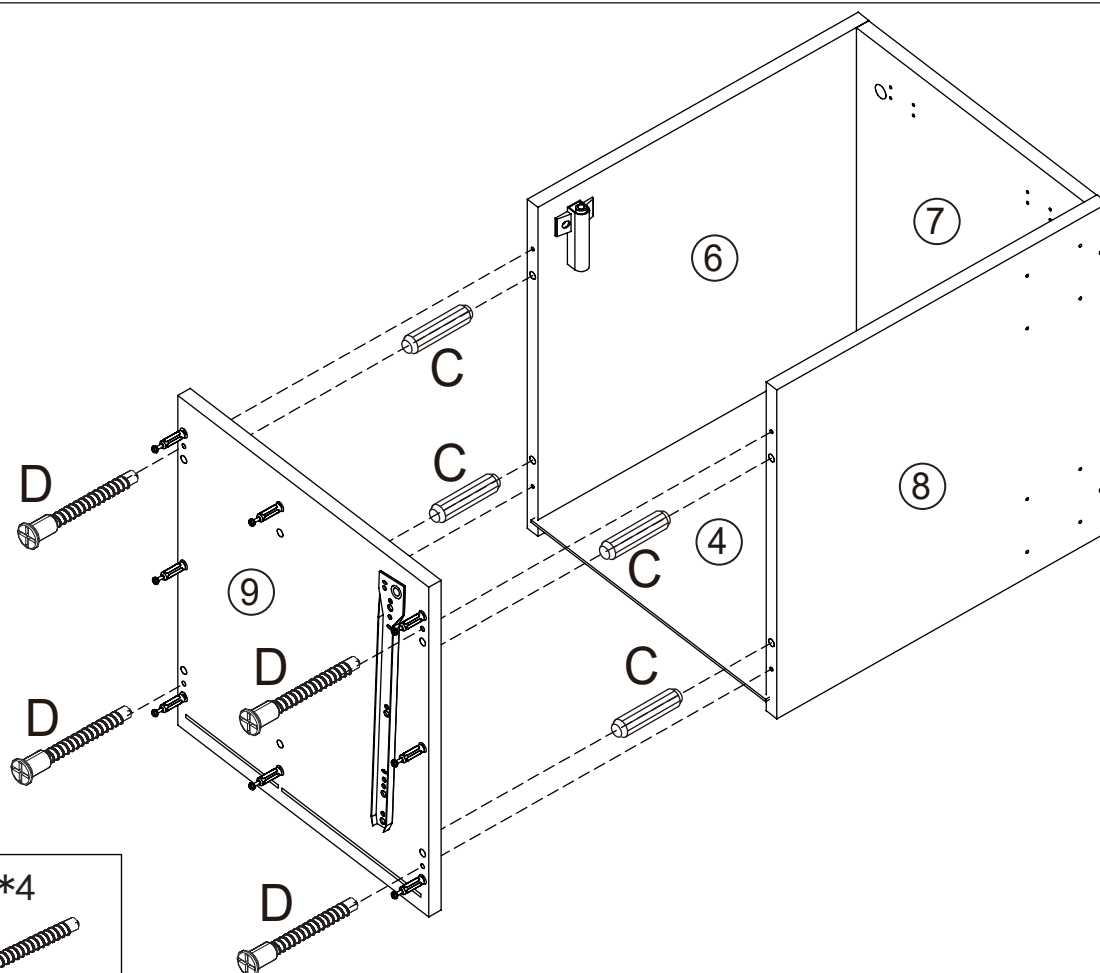



C*4



D*4





12.

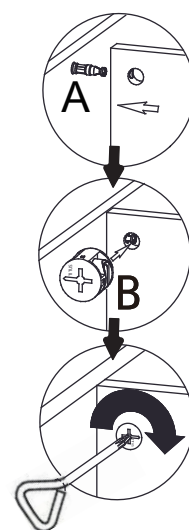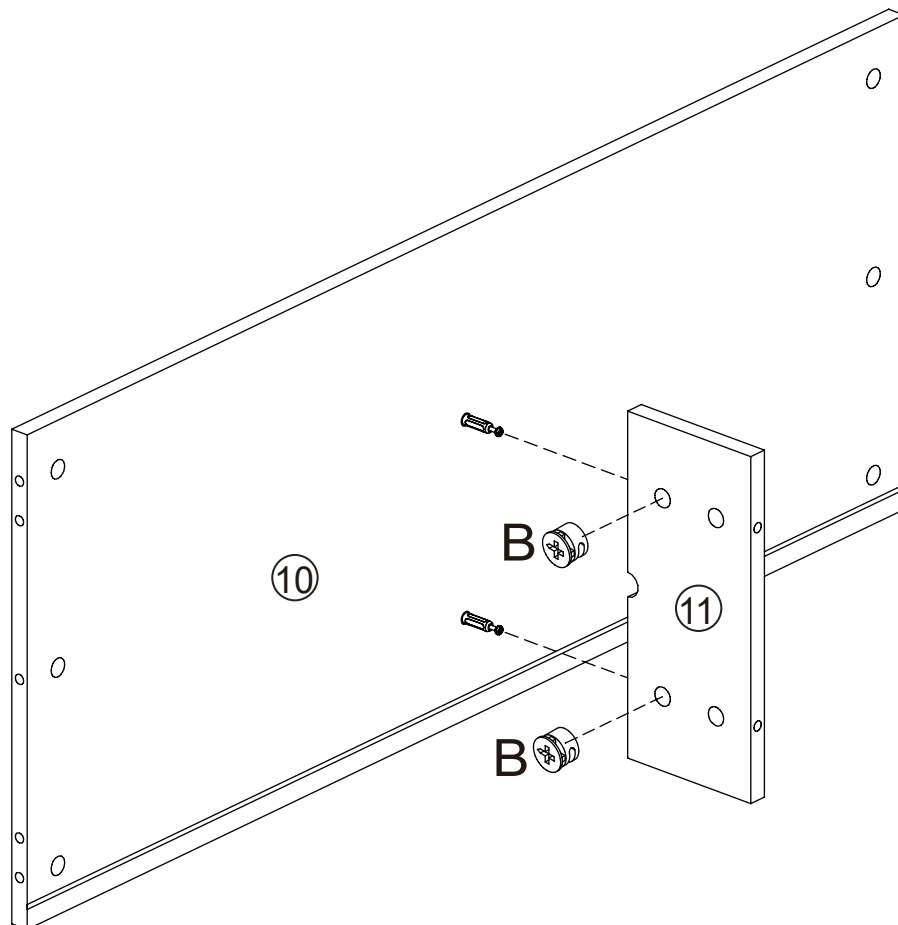

B*2





13.

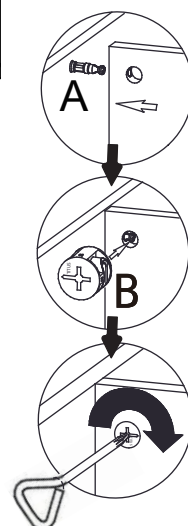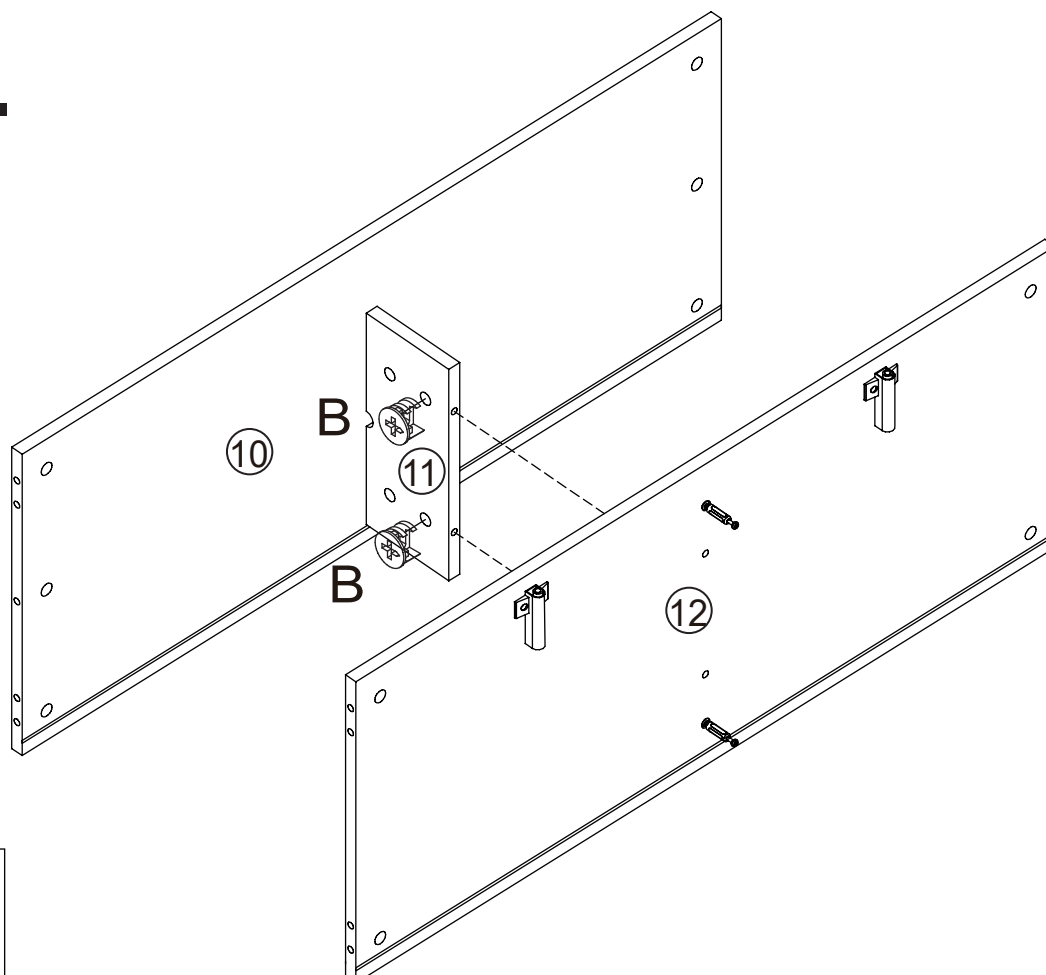

B*2




14.

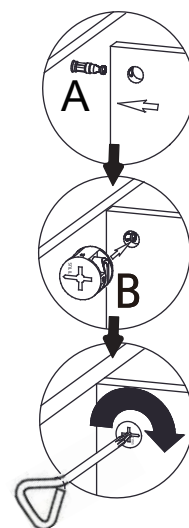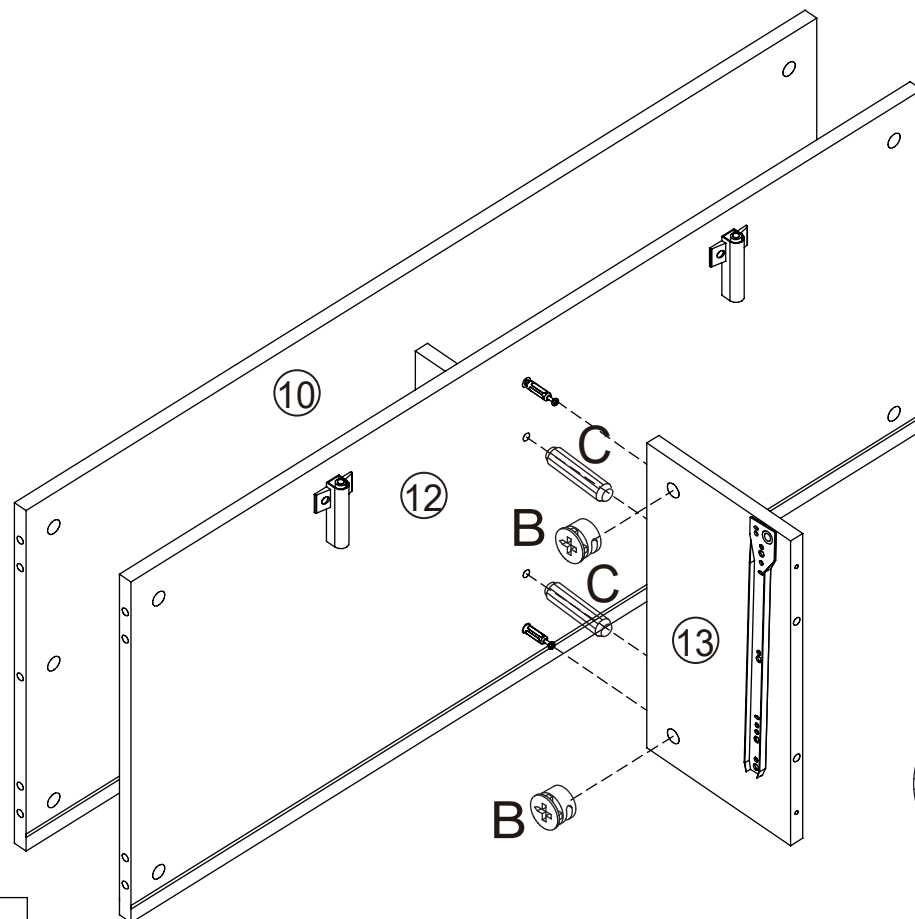


B*2



C*2




15.

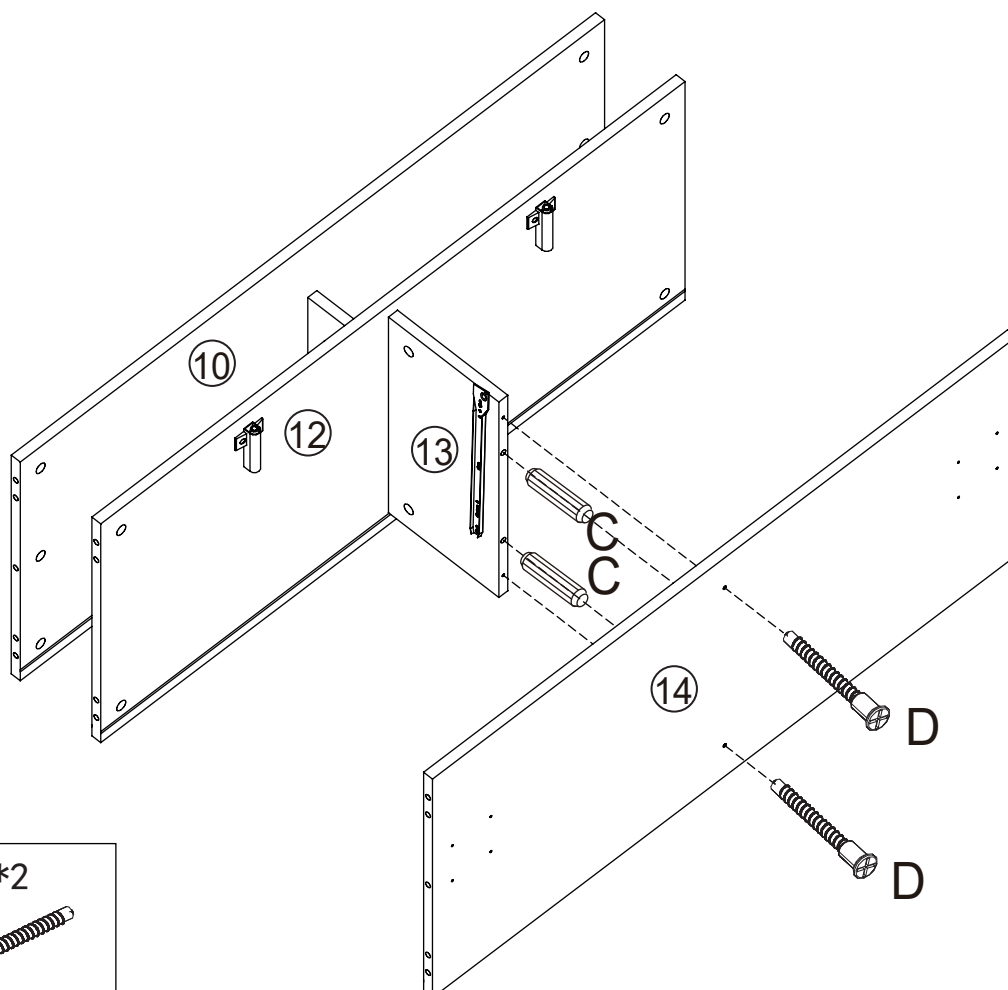


C*2



D*2




16.

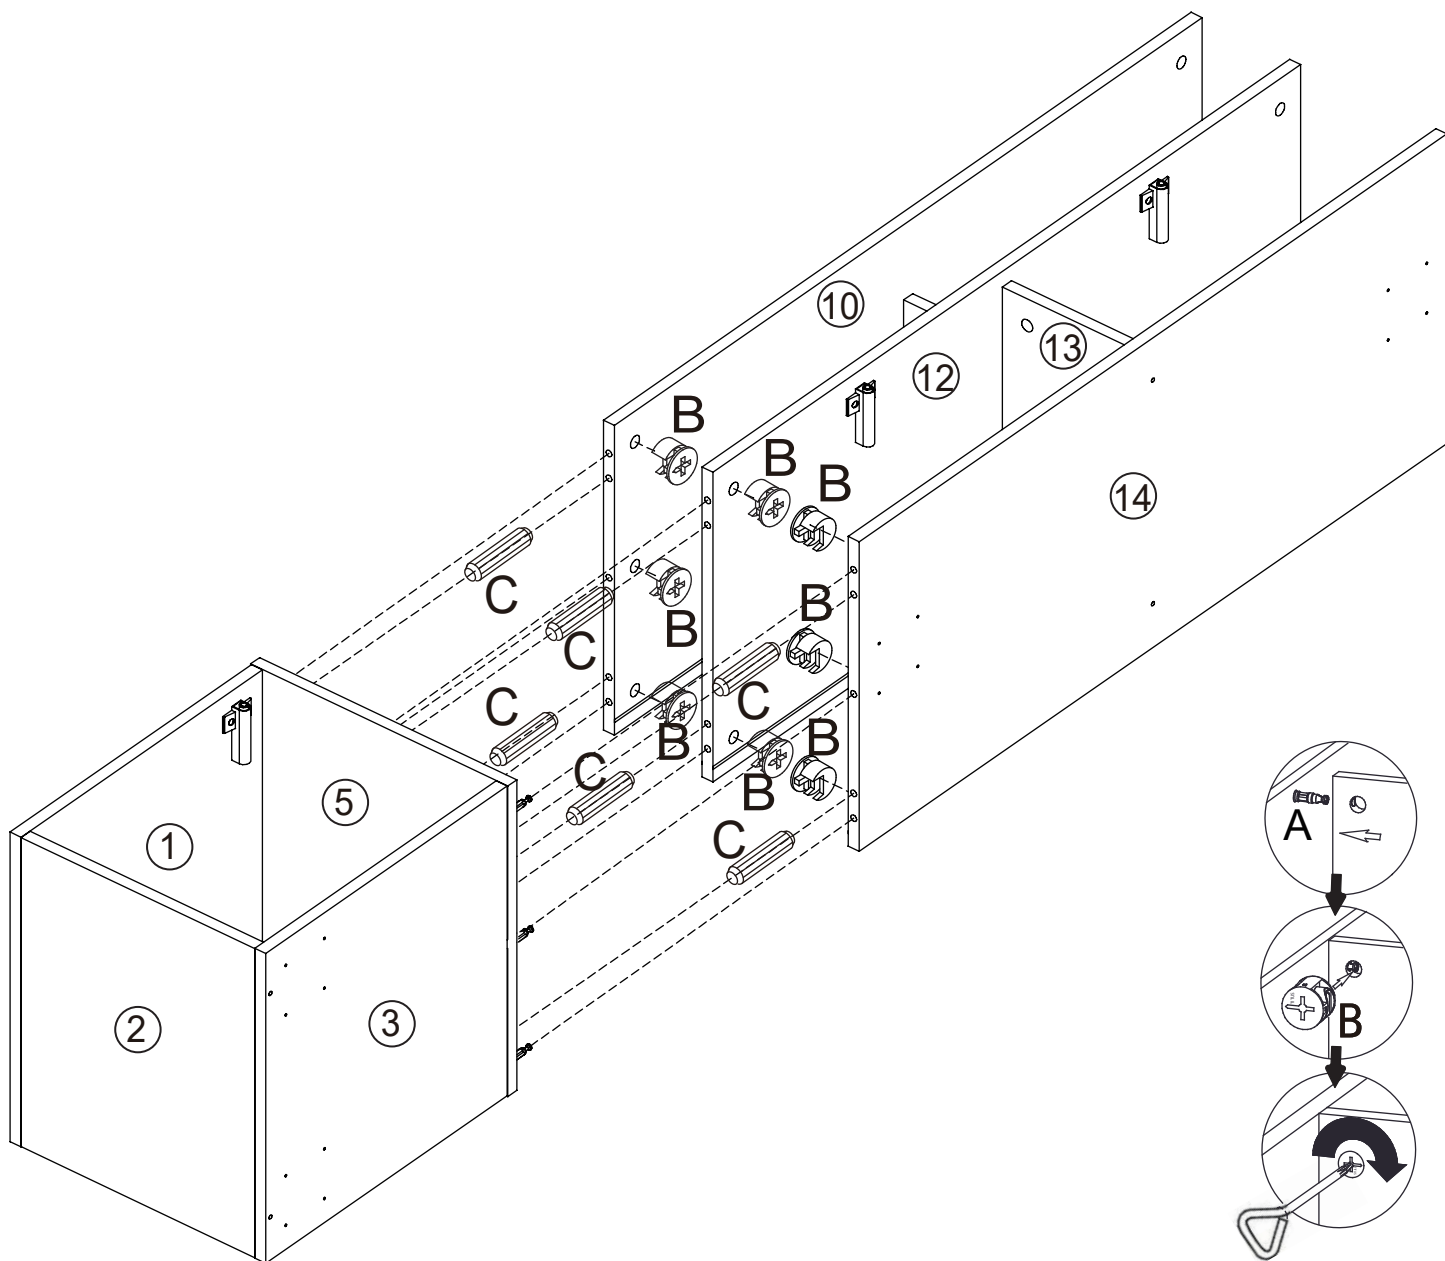


B*8




C*6



17.

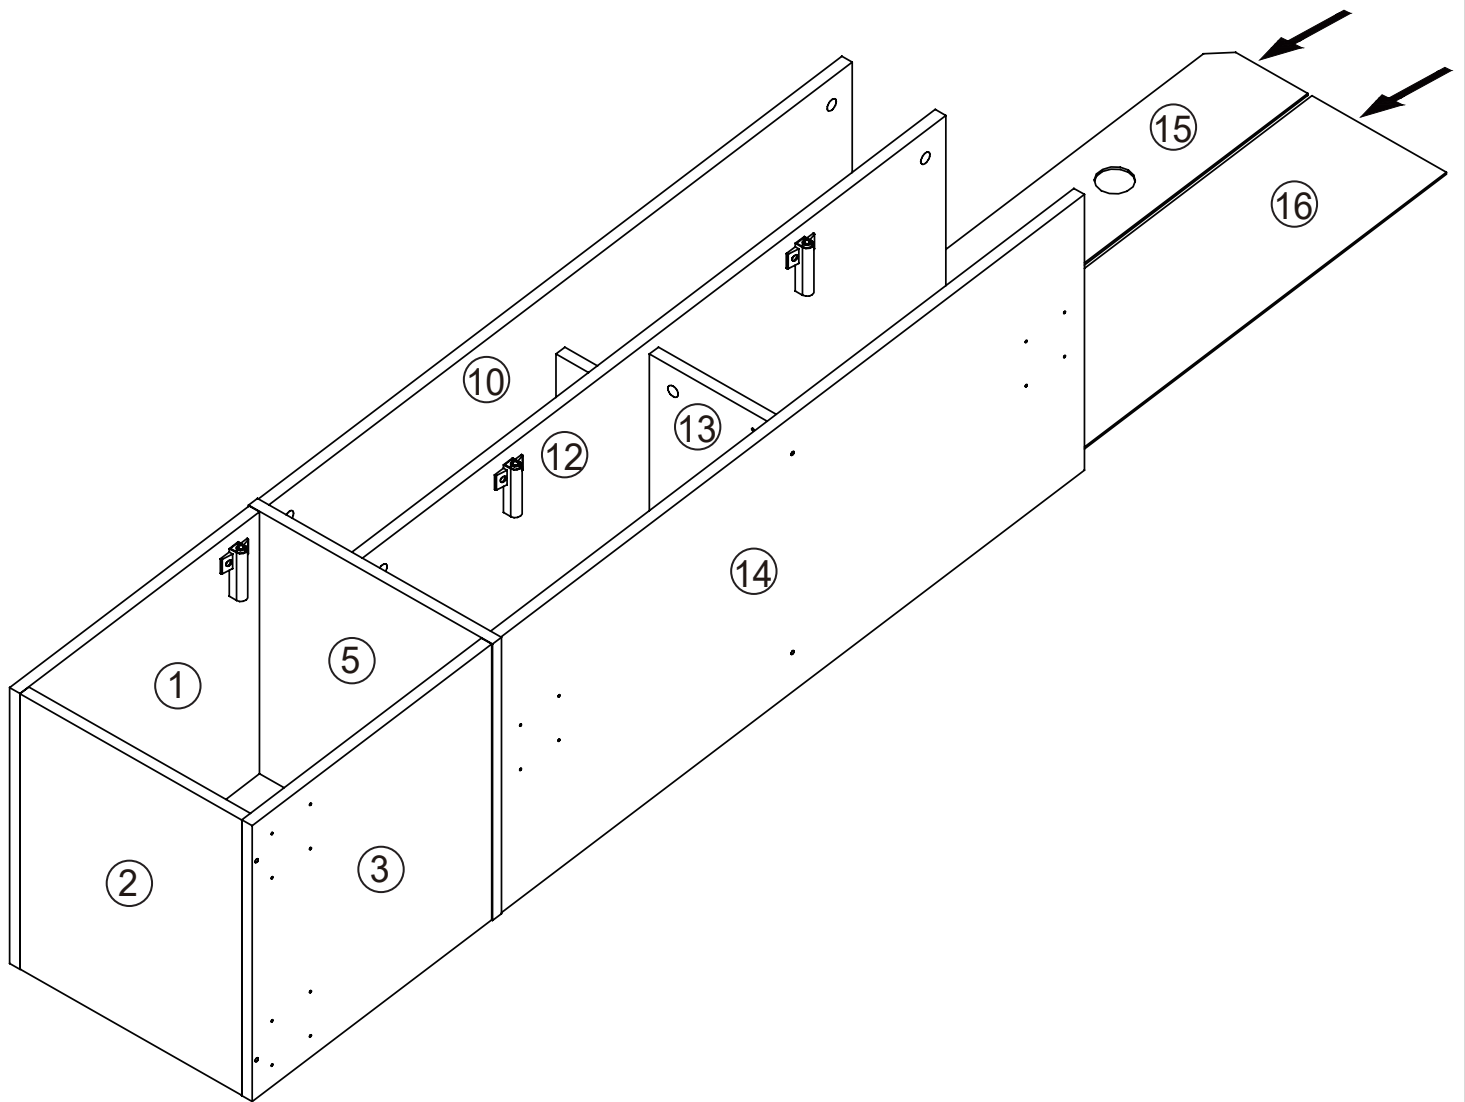

18.

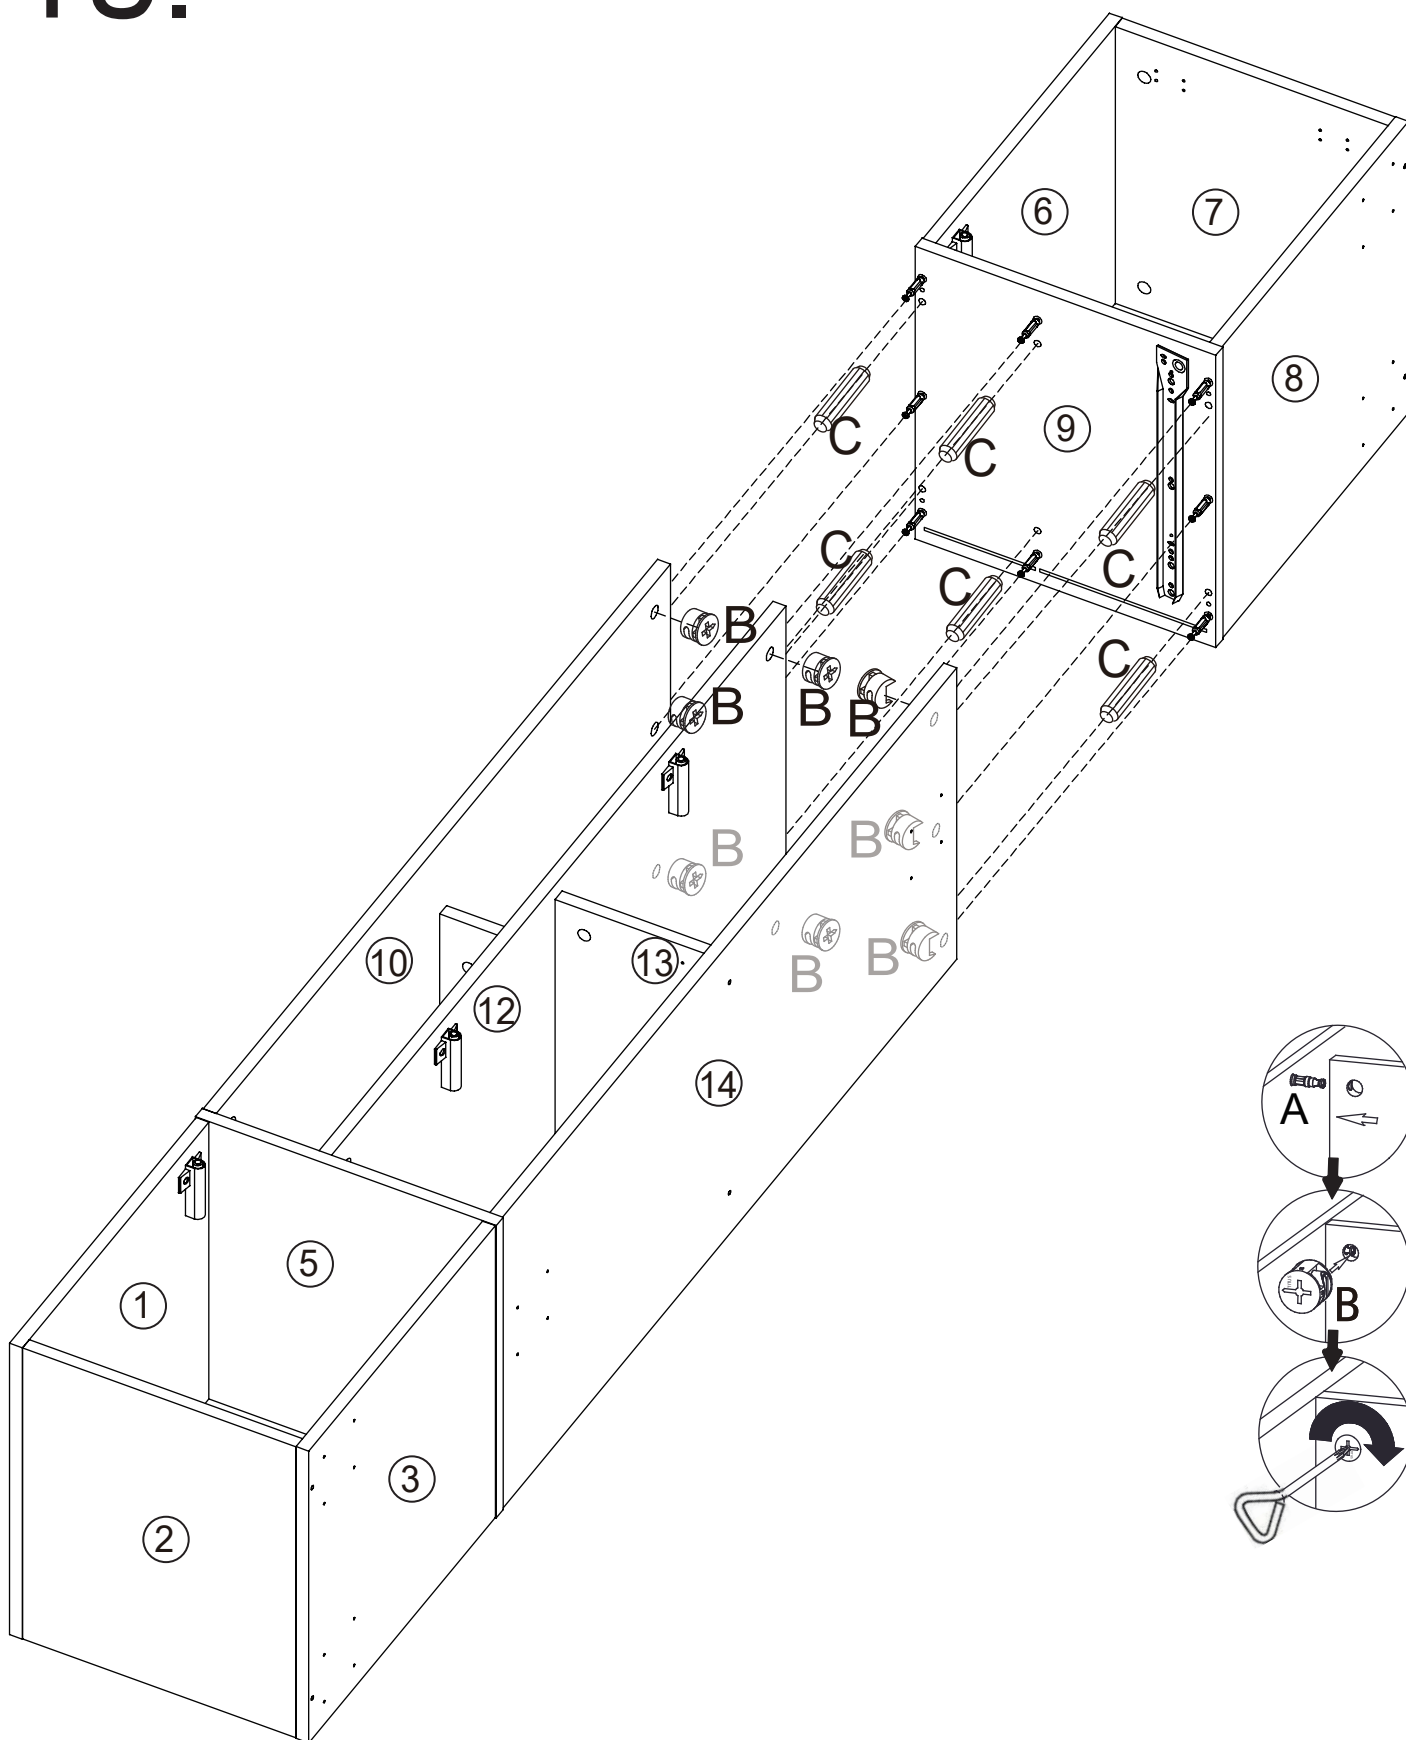


B*8



C*6



19.

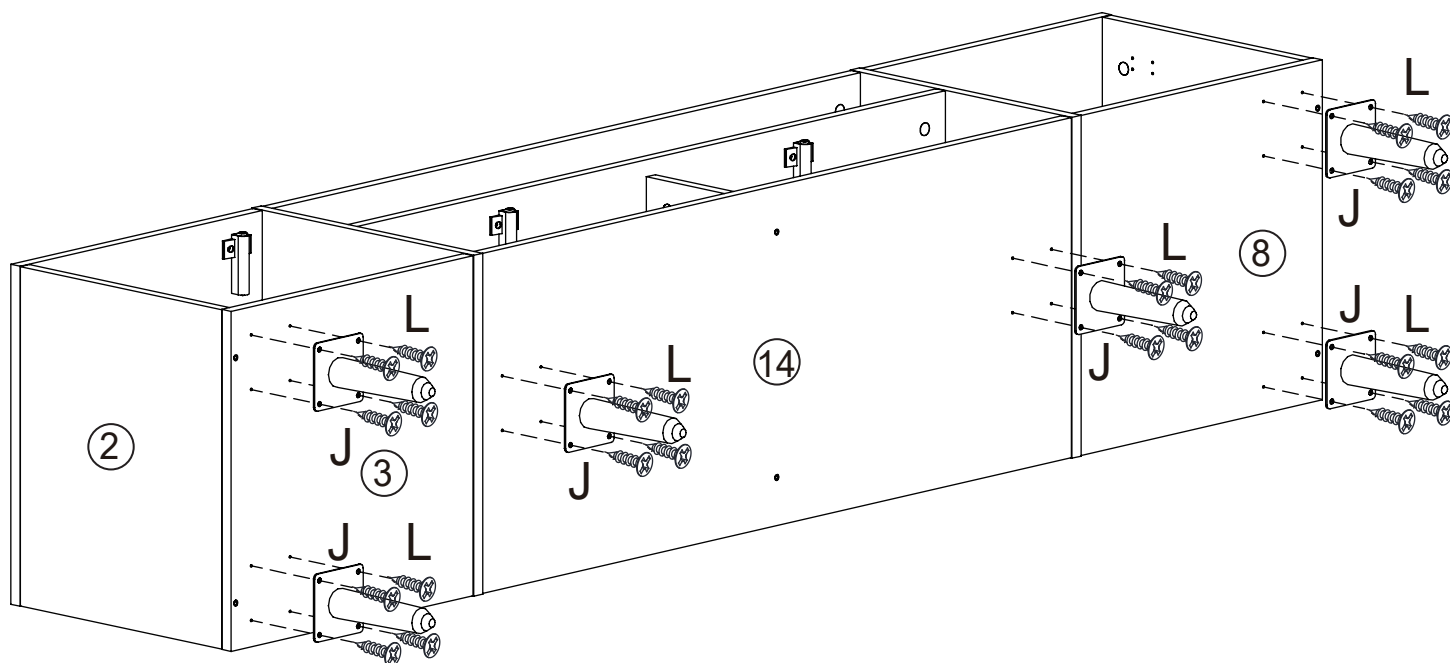


J*6



L*24






20.

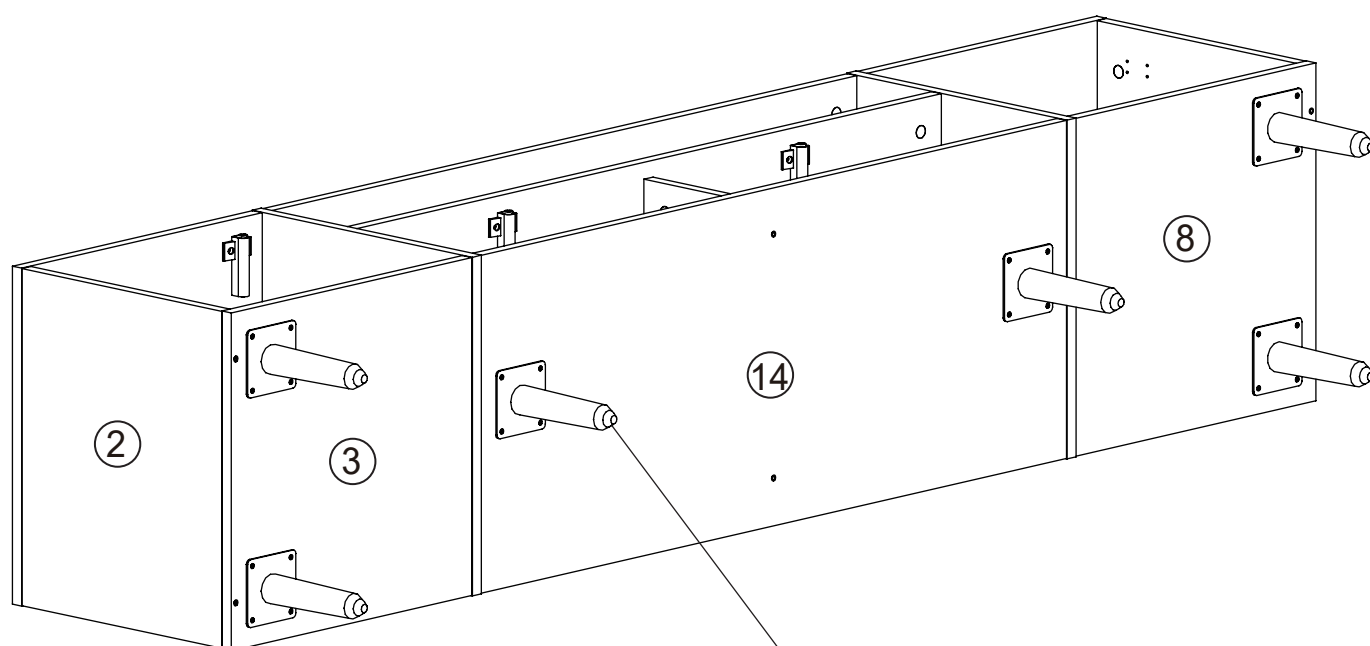


Adjust the height of the footing by rotating it.

21.

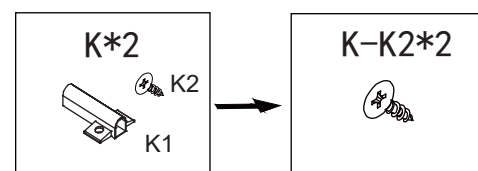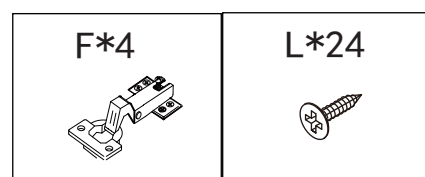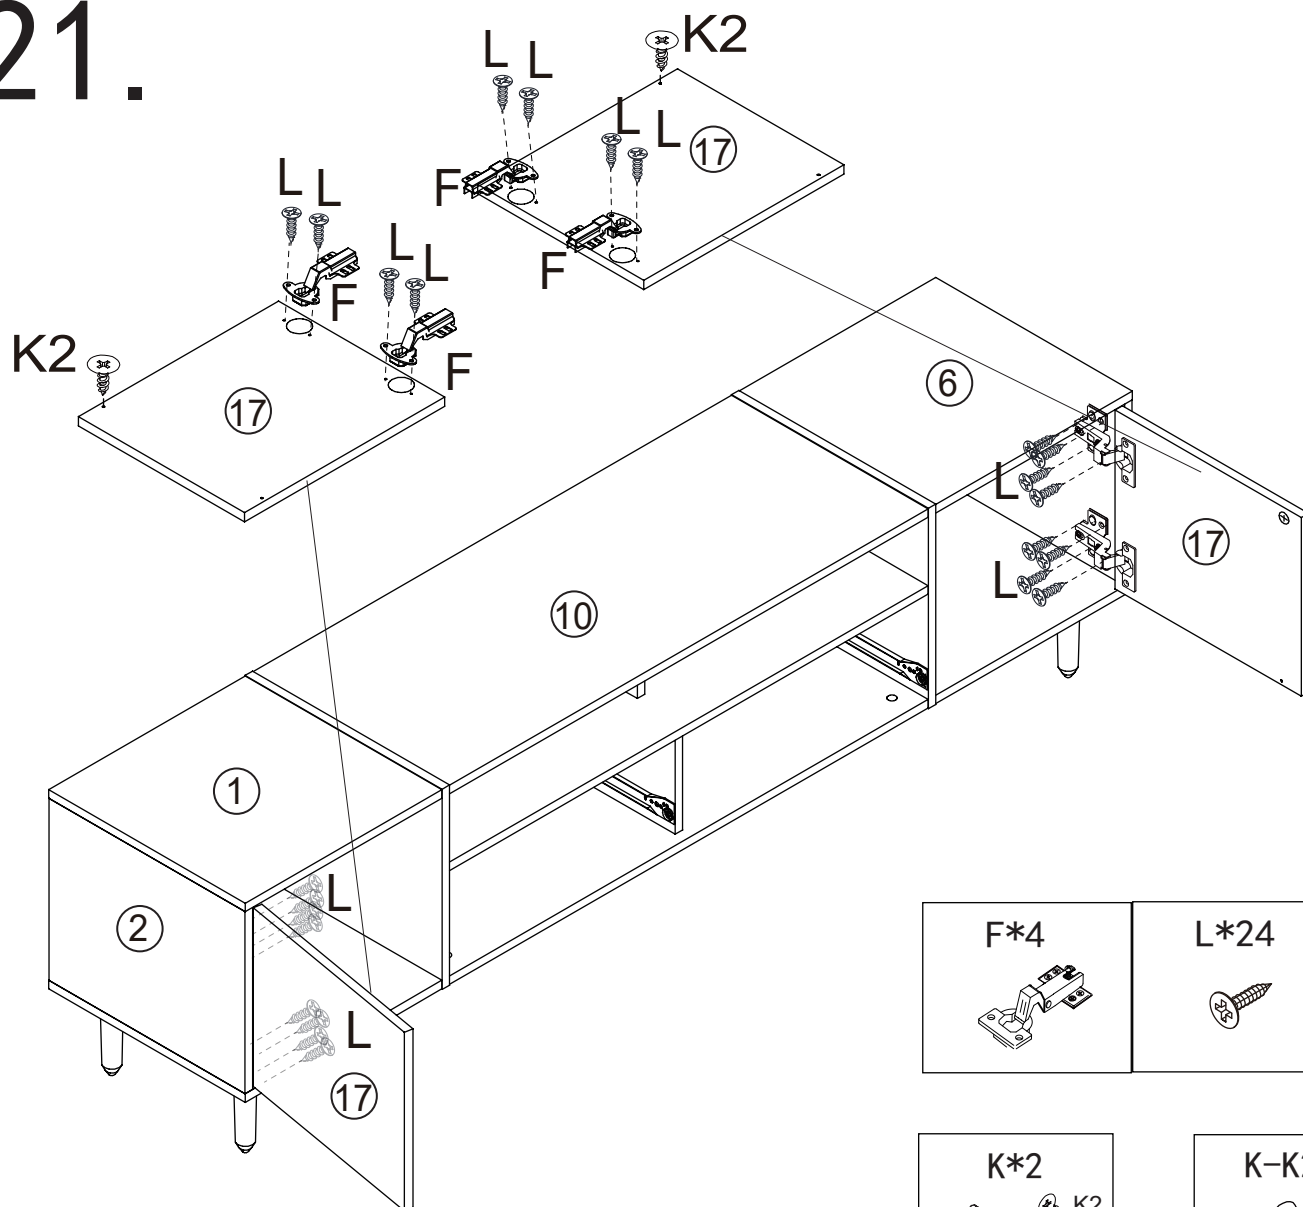


When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect:

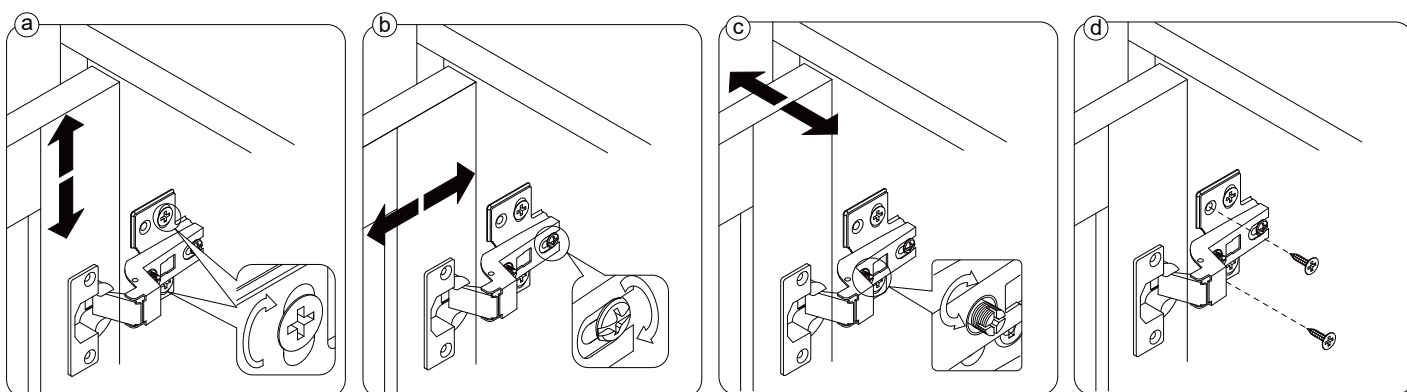


1. To adjust the doors up and down, please refer to step (a)
2. To adjust the distance between the doors and side panels, please refer to step(b)
3. To adjust the gap between two doors, please refer to step (c)
4. After the adjustment finished, please tight the screws, refer to step (d)


22. Step X2

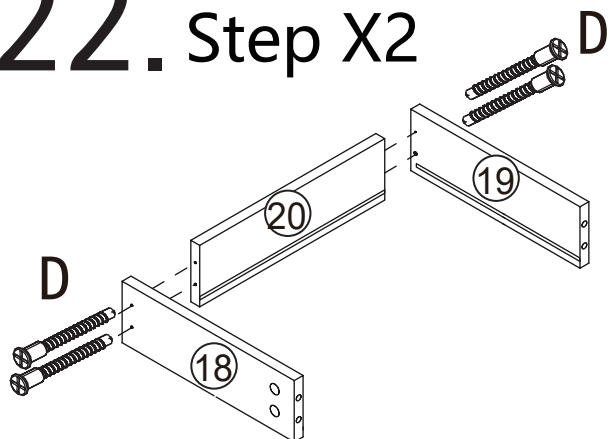


1. Connect part 18 & 19 to 20

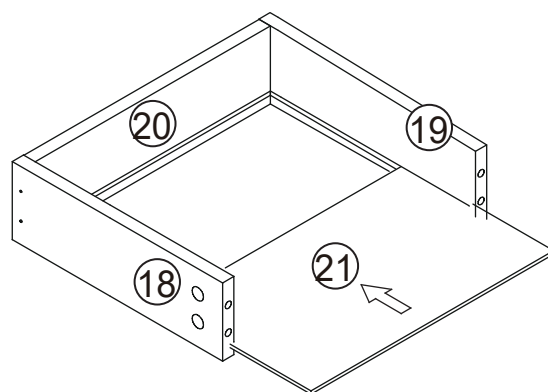



2. Insert part 21

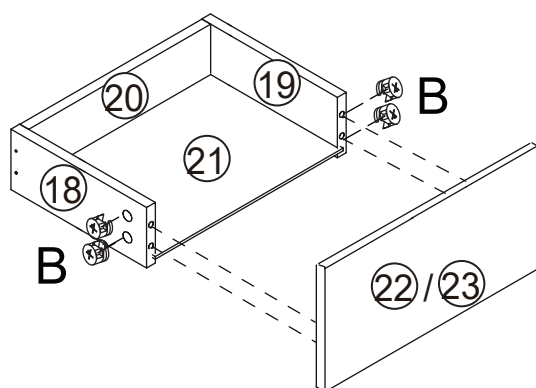

3. Connect Part 22 / 23

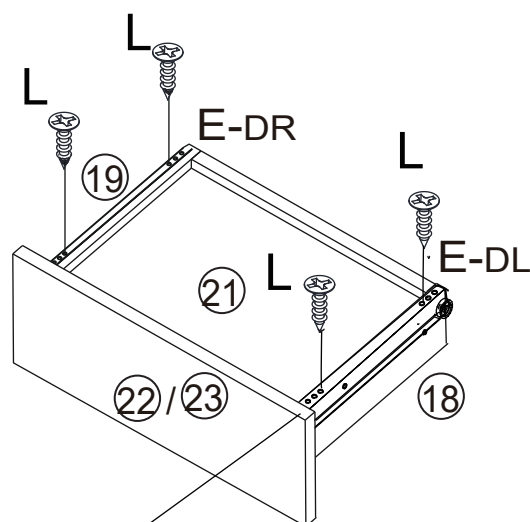


4. Install hardware "E" to part 18 & 19 according to the pre-drilled holes

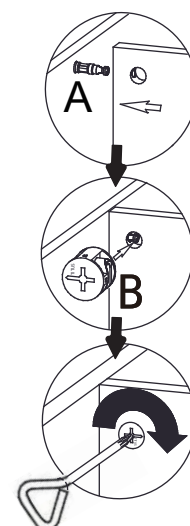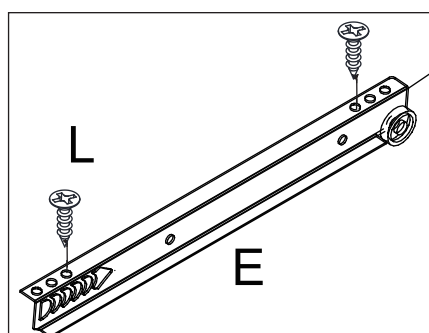


B*8	D*8	E-DL*2	EQ -DR*2	L*8

23.

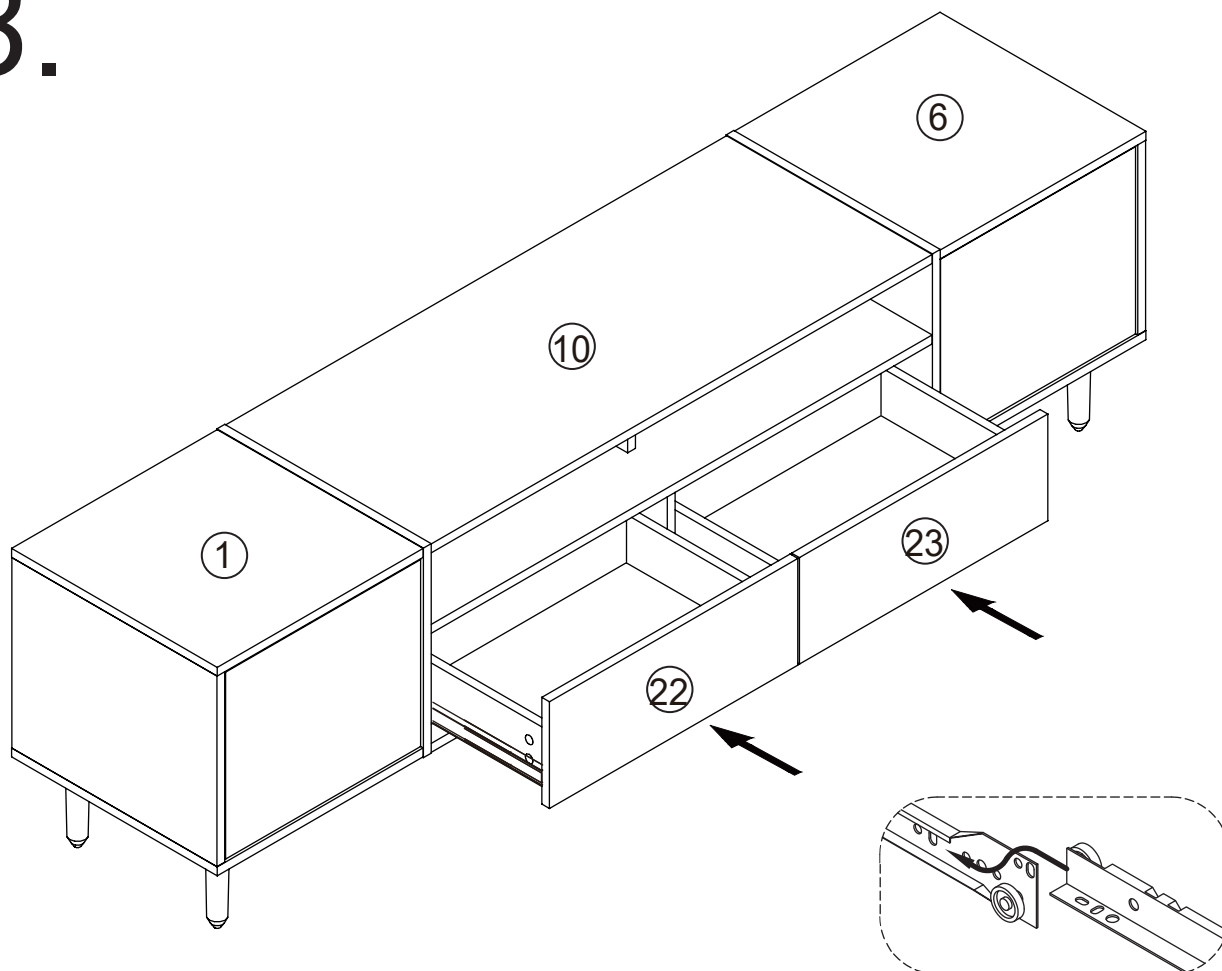

24.

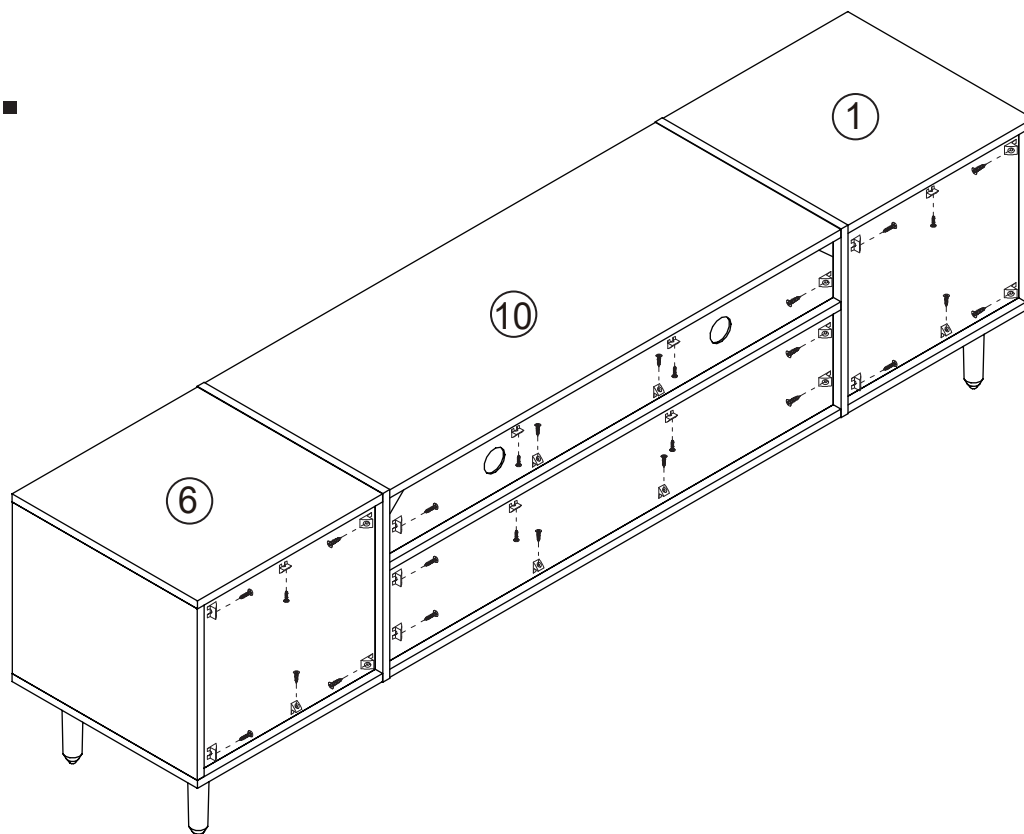

H*26



L*26





25.

- A. The light strip need to be pasted on (10)
- B. The light strip passes through the small holes on the (11)
- C. The USB cable extends from the hole on board (15)




Please use the light strip according to the light strip manual

Please stick the hardware "G" on the exposed cam lock hole that makes your product more beautiful.

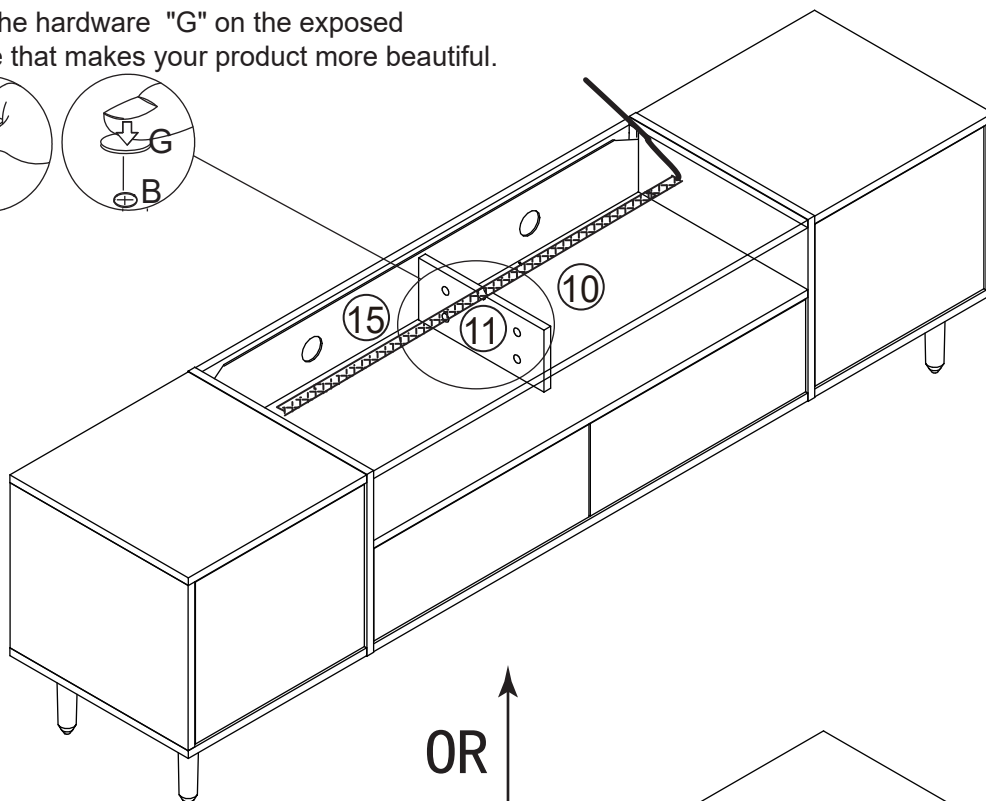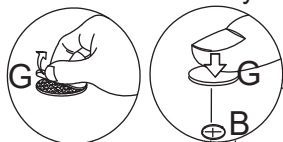

OR

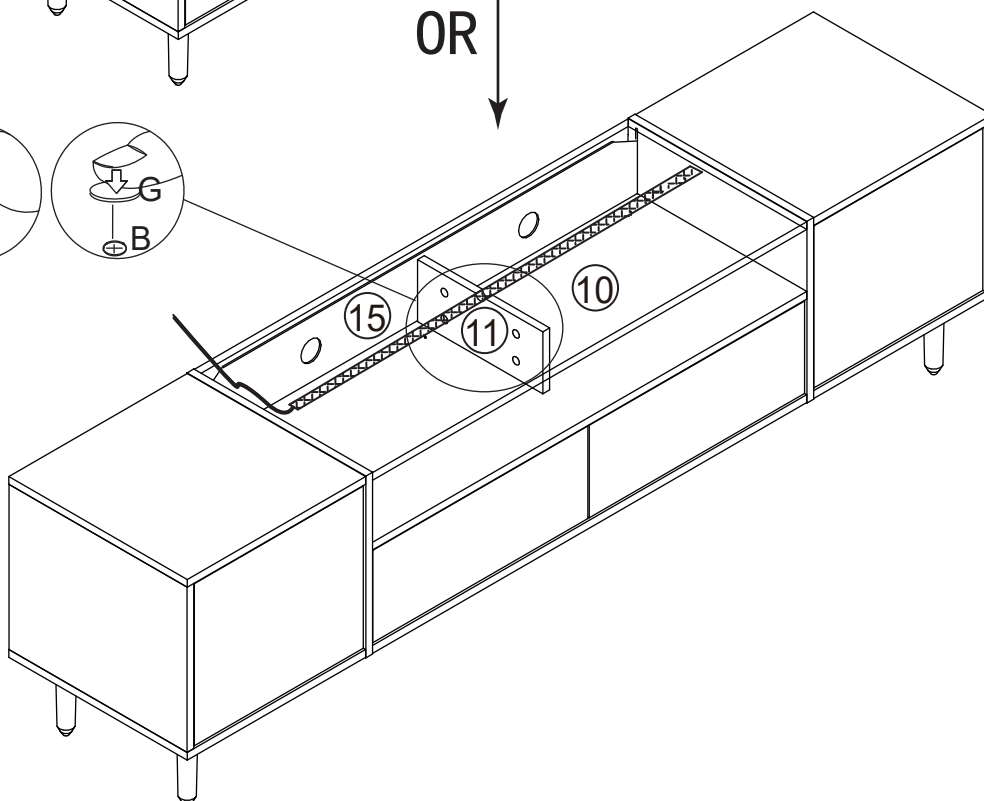


G*4



M*1






26.

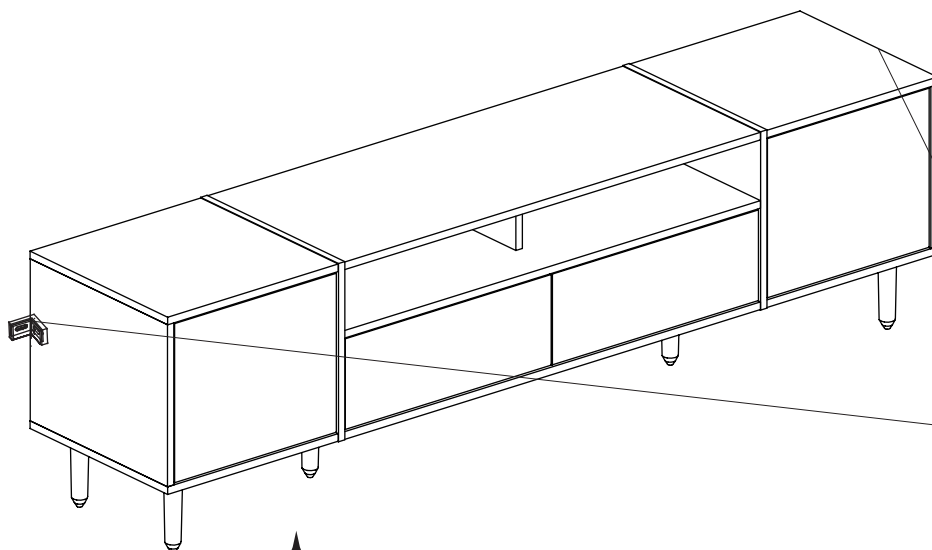

OR

This is anti-dumping L-type iron sheet, fixed to the wall of the product, can be required to change the installation location

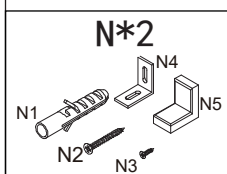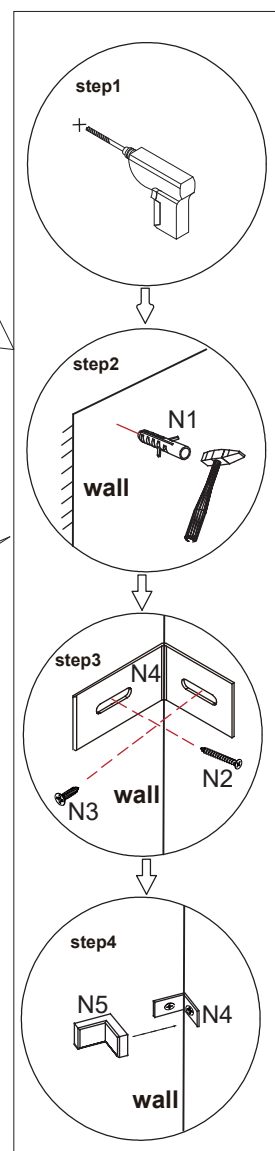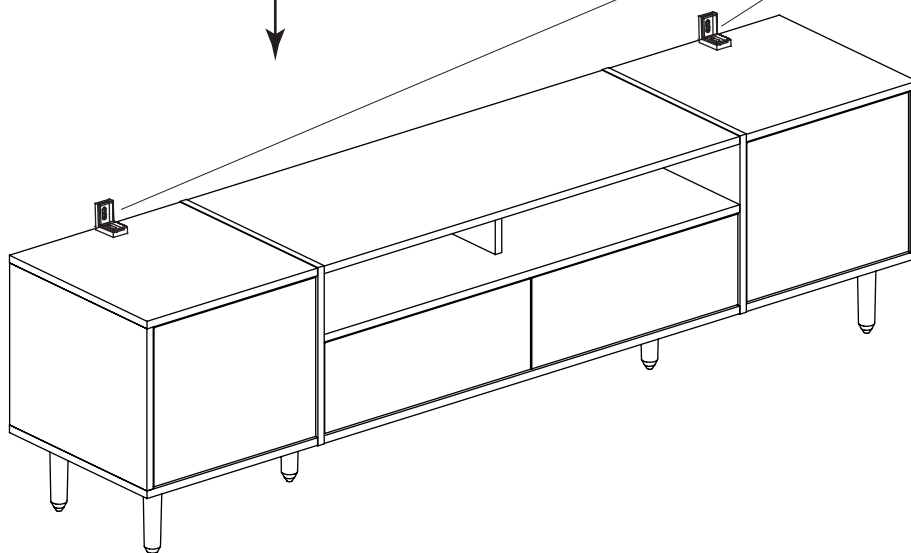

27.

