


INSTALLATION INSTRUCTIONS

Confidential : A

SKU:

PROHIBIT COPY

- Prior to installation please check received items against the Packing List .If any part is missing or damaged, please do not return the product to the store and contact us;
Call: (302)336-8180
Email: vanityinservice@gmail.com
- Protect all surfaces from sharp objects , high heat sources,direct prolonged sunlight and chemical hazards .
- Professional installation is recommended !

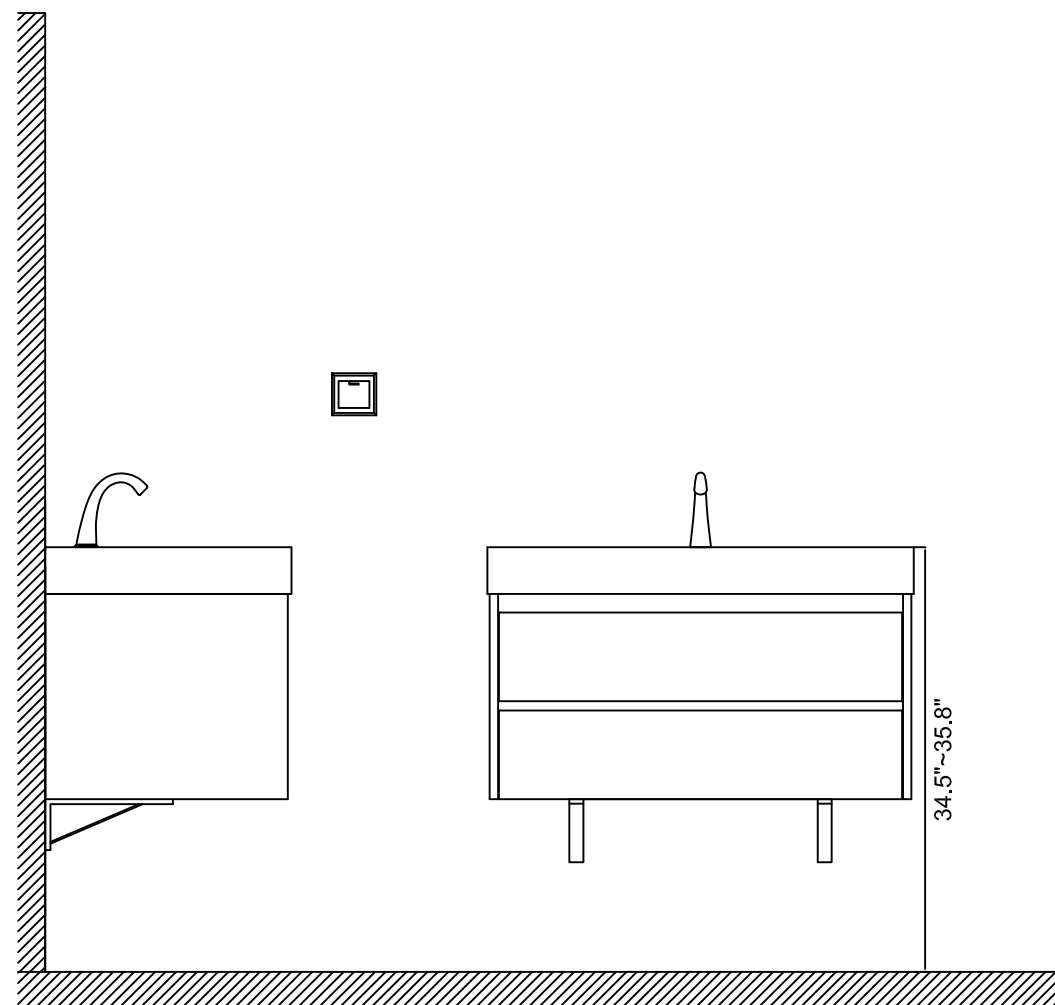

INSTALLATION INSTRUCTIONS


Confidentialal : A

SKU:

PROHIBIT COPY

NOTE

1. Ceramic sink: cUPC certified.



2. LED light :

a. The LED light is replaceable, if it is damaged, please contact us ;

Call: (302)336-8180


Email: vanityinservice@gmail.com

b. LED light should be connected to the wall switch for turning on/off.



c. UL certified & IP67 for water proof.



Marble top with ceramic sink

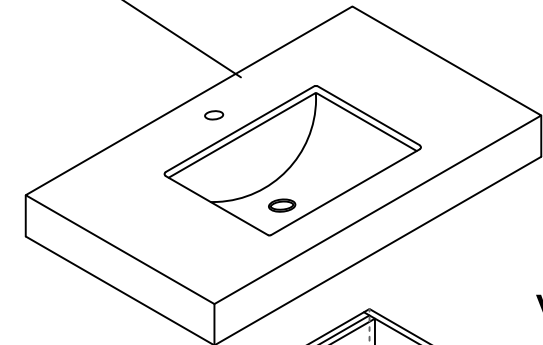


Vanity

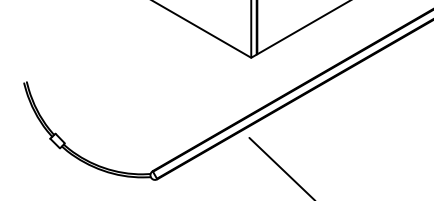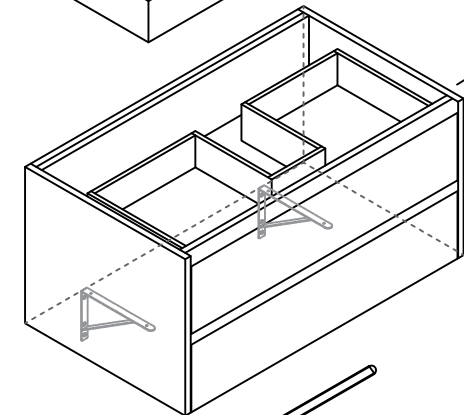

LED light

(pre-assembled on the bottom of the vanity)

wall switch

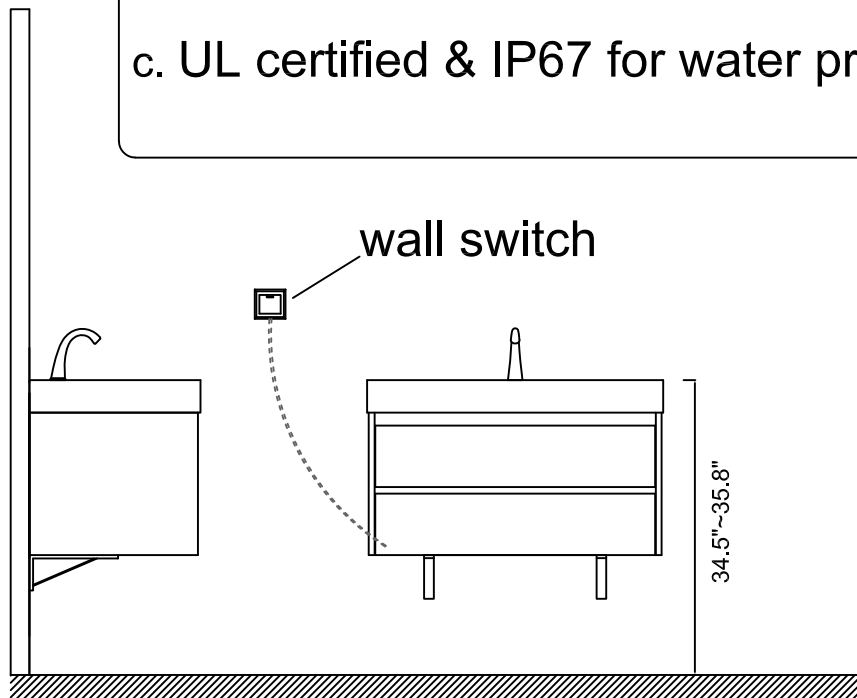

INSTALLATION INSTRUCTIONS


Confidentialal : A

SKU:


PROHIBIT COPY

PACKING LIST


A Main Vanity
1 PC

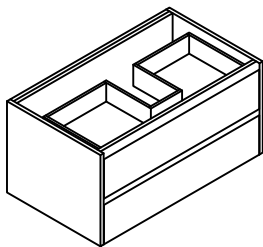


B Wood Cleat
1 PC

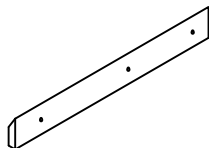


C Metal Bracket
2 PCS

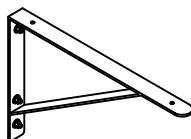

D TOP
1 PC

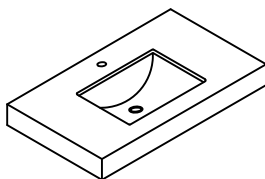


E Wood Screw
4 PCS

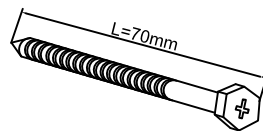


M6 x 70

F Wood Screw
8 PCS

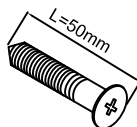


M5 x 50

G Wood Screw
4 PCS




M4 x 15

H Wall Anchor
12 PCS



I Metal Washers
4 PCS



TOOLS REQUIRED


Drill Bits




Ø3/8" (8mm)dia.

HSS


Screw Driver




Drill



Level



Knife

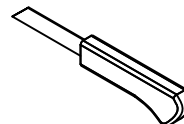

Glove




MASONRY DRILL BIT FOR
TILE Ø3/8" (8mm)



Safety Glasses



Silicone



Measuring Tape



Soft Head
Hammer



Pencil



Wood stud finder



INSTALLATION INSTRUCTIONS

SKU:

Confidentialal : A


PROHIBIT COPY

- STEP 1:
- Use a wood stud finder to locate the wood studs behind the walls.
 - Use a pencil to mark the installation location for the **Wood Cleat (B)**.
 - Use a level to ensure the **Wood Cleat (B)** will be level before installing to the wall.


NOTE

Make sure the screw holes must be on the wood studs otherwise the vanity will fall out because the dry wall cannot hold the cabinet.

vanity	hole	a	b	c
36"	3	12"	12"	-
48"	4	12"	12"	12"
60"	4	12"	24"	12"

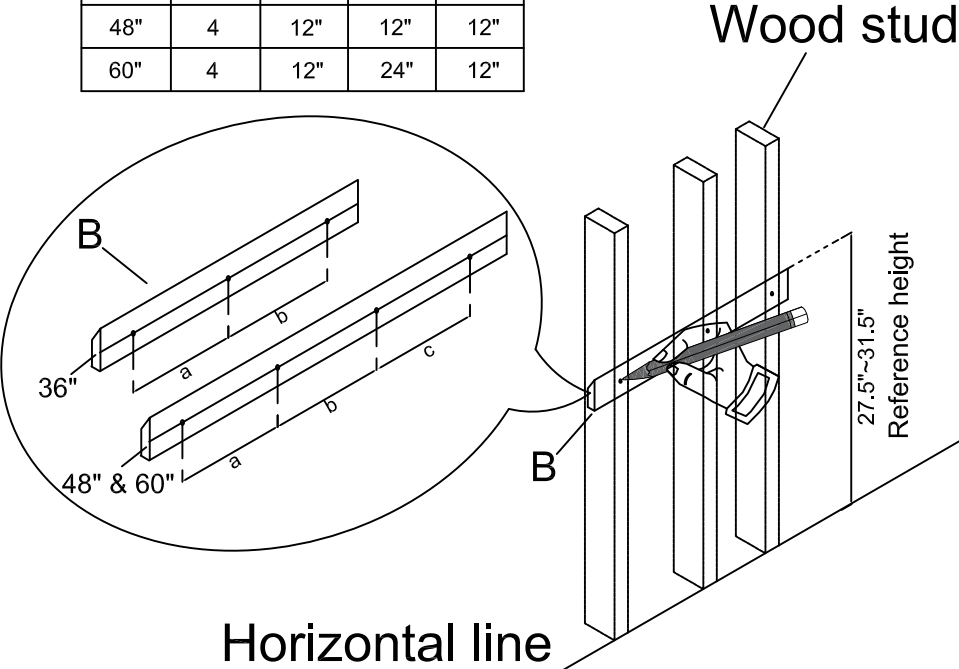


- STEP 2:
- Drill the anchor holes according to the marks using a drill.

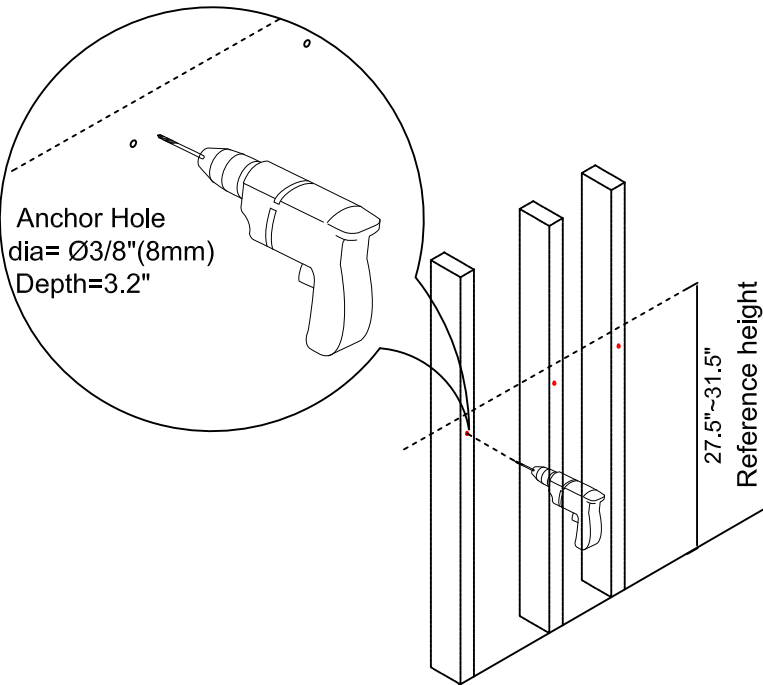


INSTALLATION INSTRUCTIONS

SKU:

STEP 3: Install the **Wall Anchors (H)** provided into the wall with hammer.

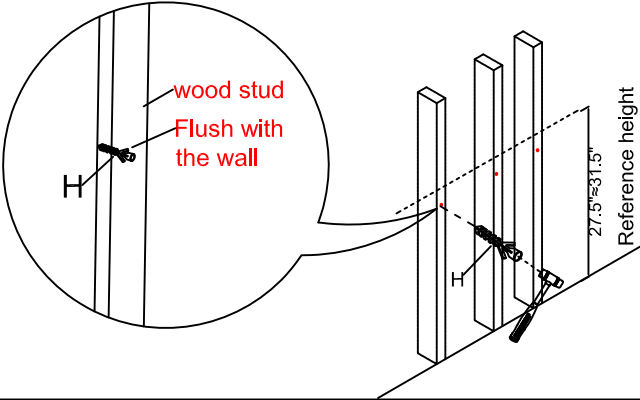


STEP 4: Install the **Wood cleat (B)** to the wood studs by screw driver.

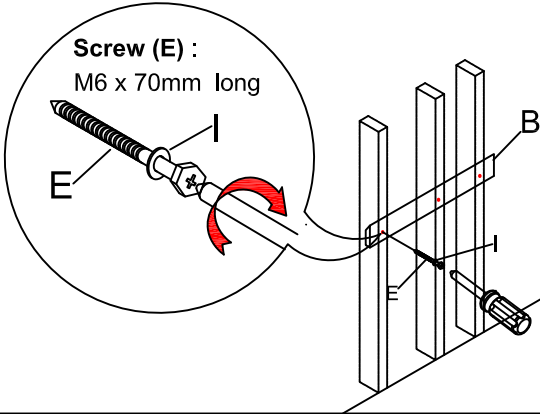


STEP 5: With help from another person, carefully hang the **Vanity (A)** onto the **Wood Cleat (B)**.

NOTE When installing the **Wood Cleat (B)** make sure the angle cut is facing the wall.

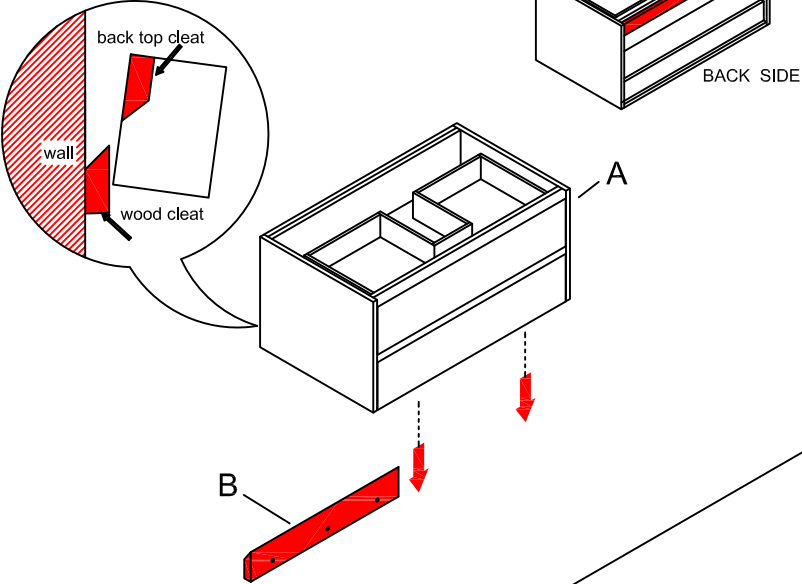

STEP 6: Using a pencil to mark the installation location for the **Metal Brackets (C)**.

NOTE Make sure the **Metal Brackets (C)** are installed on the wood studs.

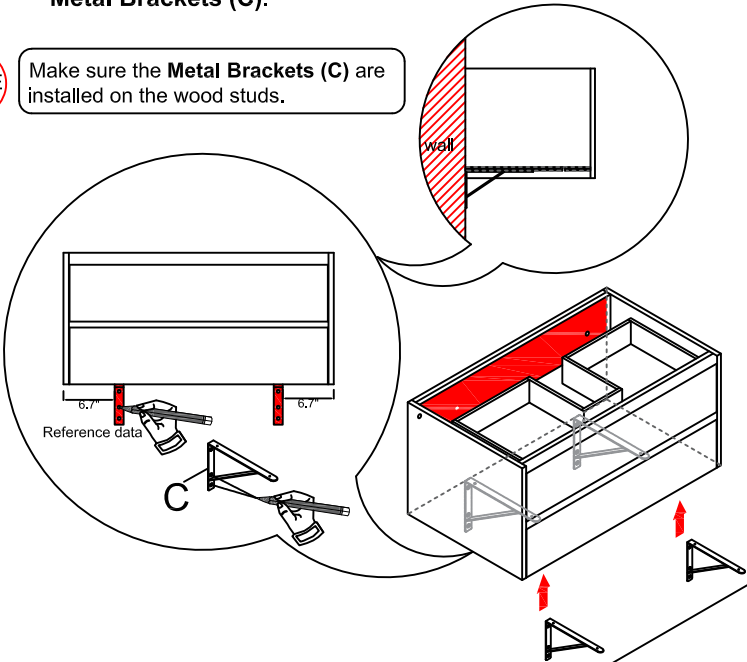


INSTALLATION INSTRUCTIONS

SKU:

STEP 7: Carefully remove the **Vanity (A)** with the help from another person, and then drill the anchor holes according to the marks using a drill.


Anchor Hole
dia= $\varnothing 3/8"$ (8mm)
Depth=3.2"

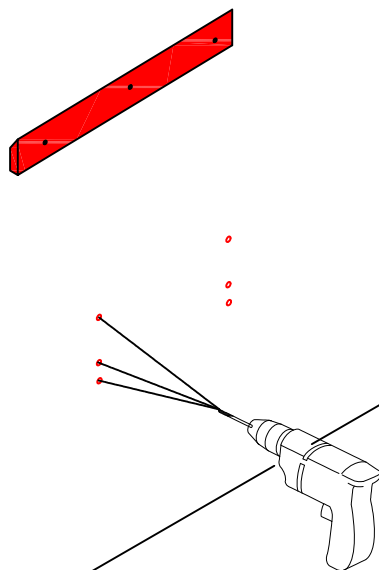

Confidentialal : A


PROHIBIT COPY

STEP 8: Install the **Wall Anchors (H)** provided into the wall with hammer.

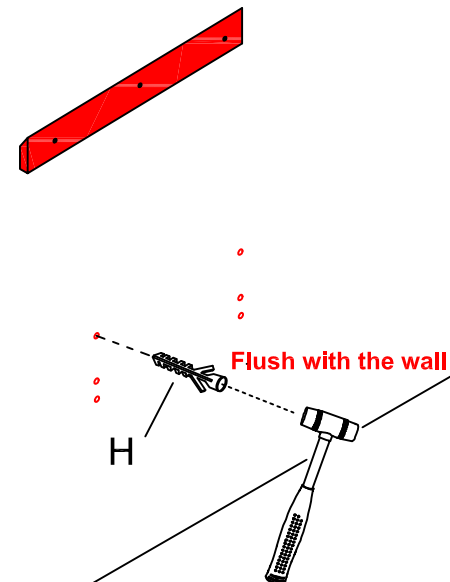


STEP 9: Install the **Metal Brackets (C)** to the wood studs by screw driver.

Screw (F):
M5 x 50mm long
6pcs

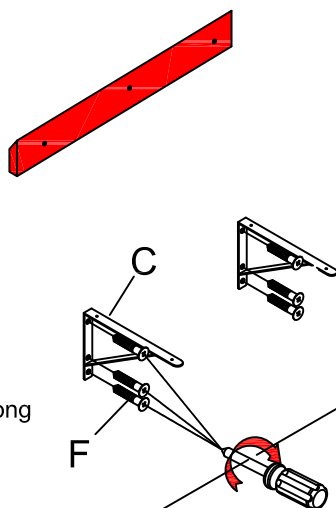


STEP 10: Hang the **Vanity (A)** to the wall and then connect the **Vanity (A)** to the **Wood Cleat (B)** with the 2 **Screws (F)** provided.

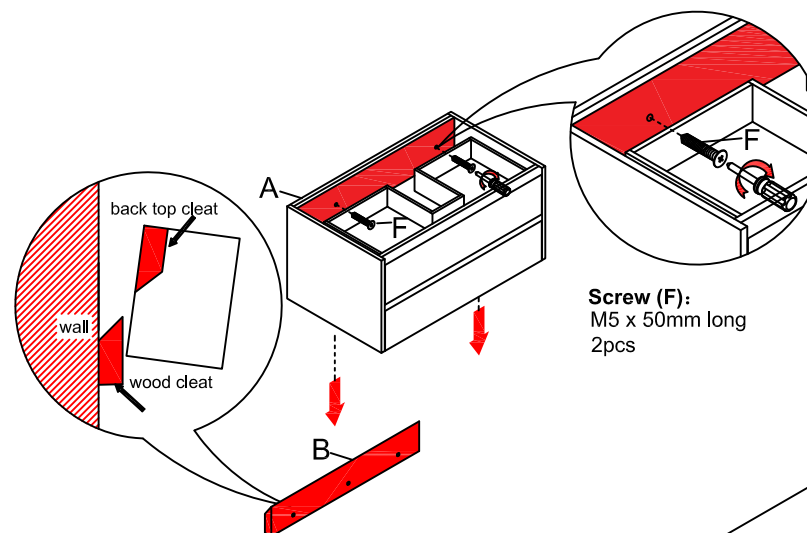

INSTALLATION INSTRUCTIONS

SKU:


STEP 11: Connect the **Metal Brackets (C)** to the **Vanity (A)** with **Screws (G)**.

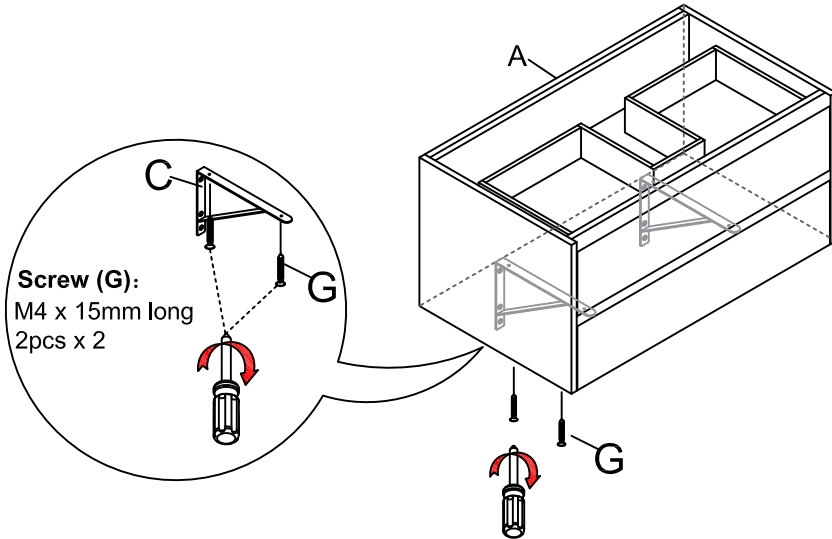


Confidentialal : A

PROHIBIT COPY

STEP 12: Connect the electrical wire to the wall switch for turning on/off.

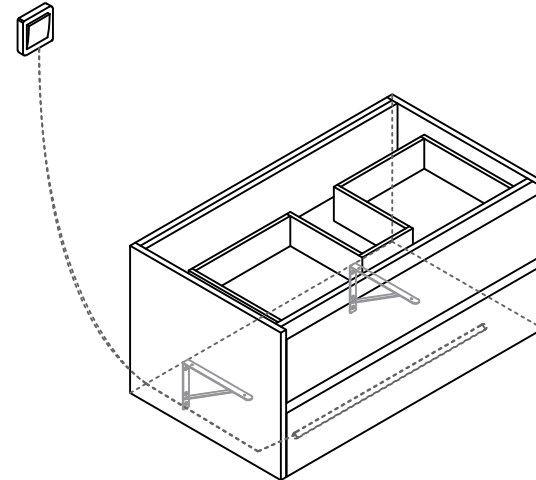

STEP 13: Apply the silicone to the top of the **Vanity (A)** and then install the **Top (D)** onto the **Vanity (A)** with the help from another person.

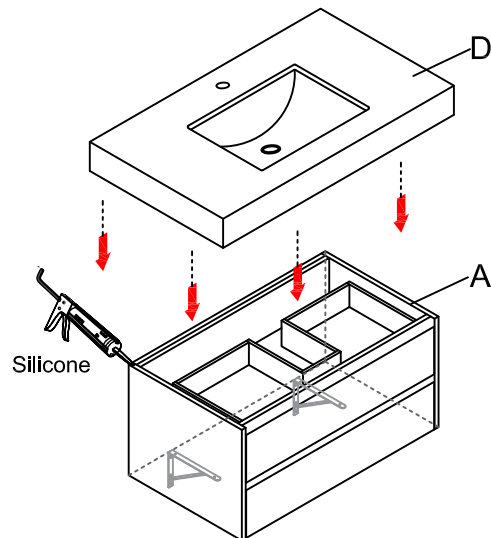

STEP 14: Let the vanity sit for 24 hours before use.

