


ASSEMBLY INSTRUCTIONS

30 INCH BATH VANITY-CABINET



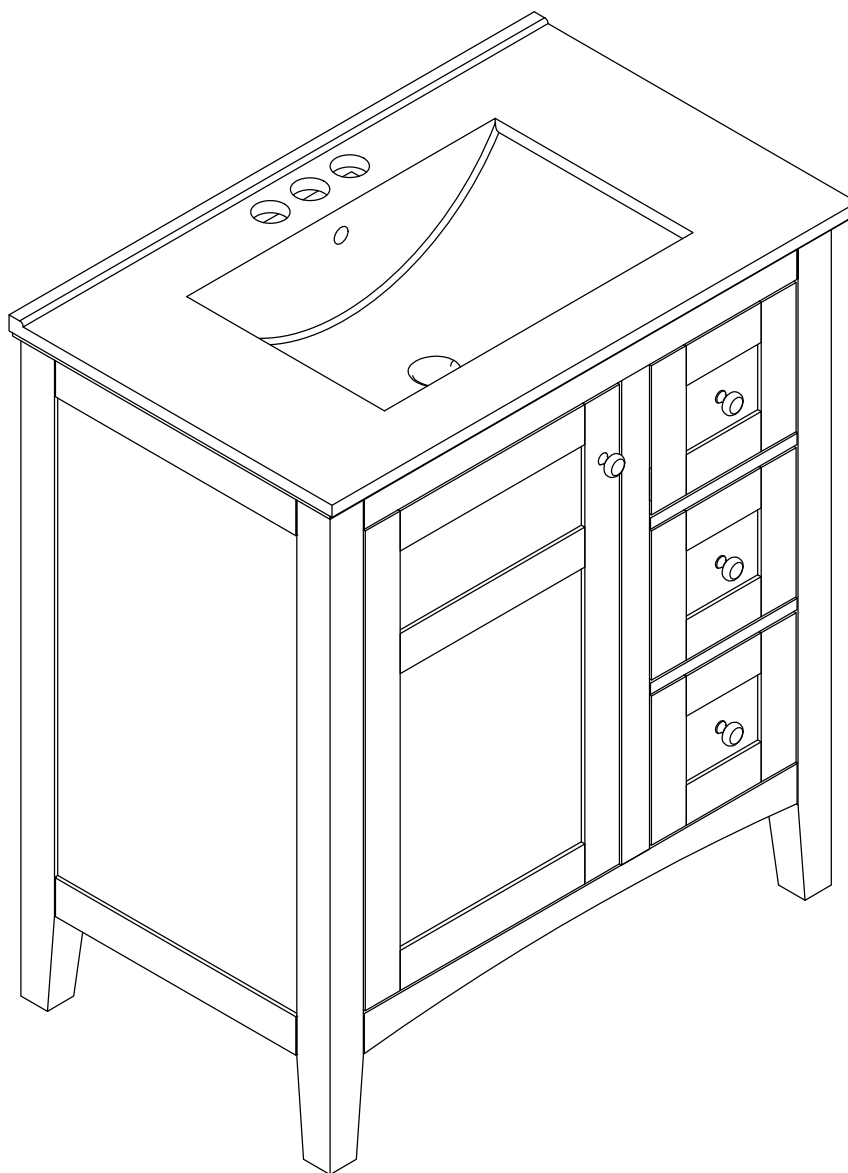


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

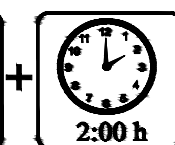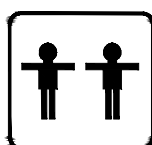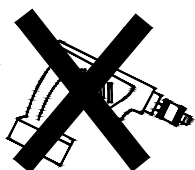

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions









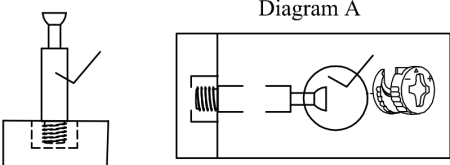
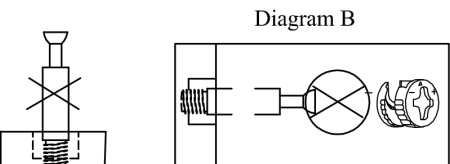
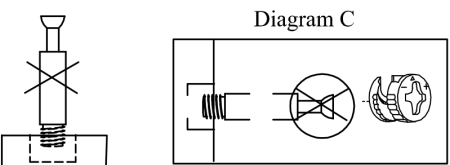
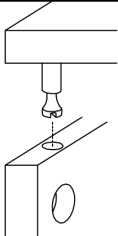
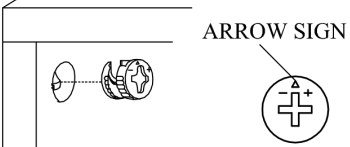
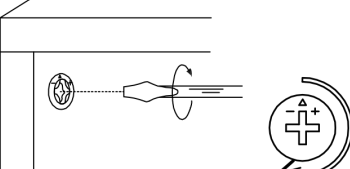
	<p>Diagram A</p> <p>Insert Cam Bolt into hole as shown in diagram A.</p>
	<p>Diagram B</p> <p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
	<p>Diagram C</p> <p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
	<p>Connect the panels together.</p>
	<p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>
	<p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>

Detail View - CABINET








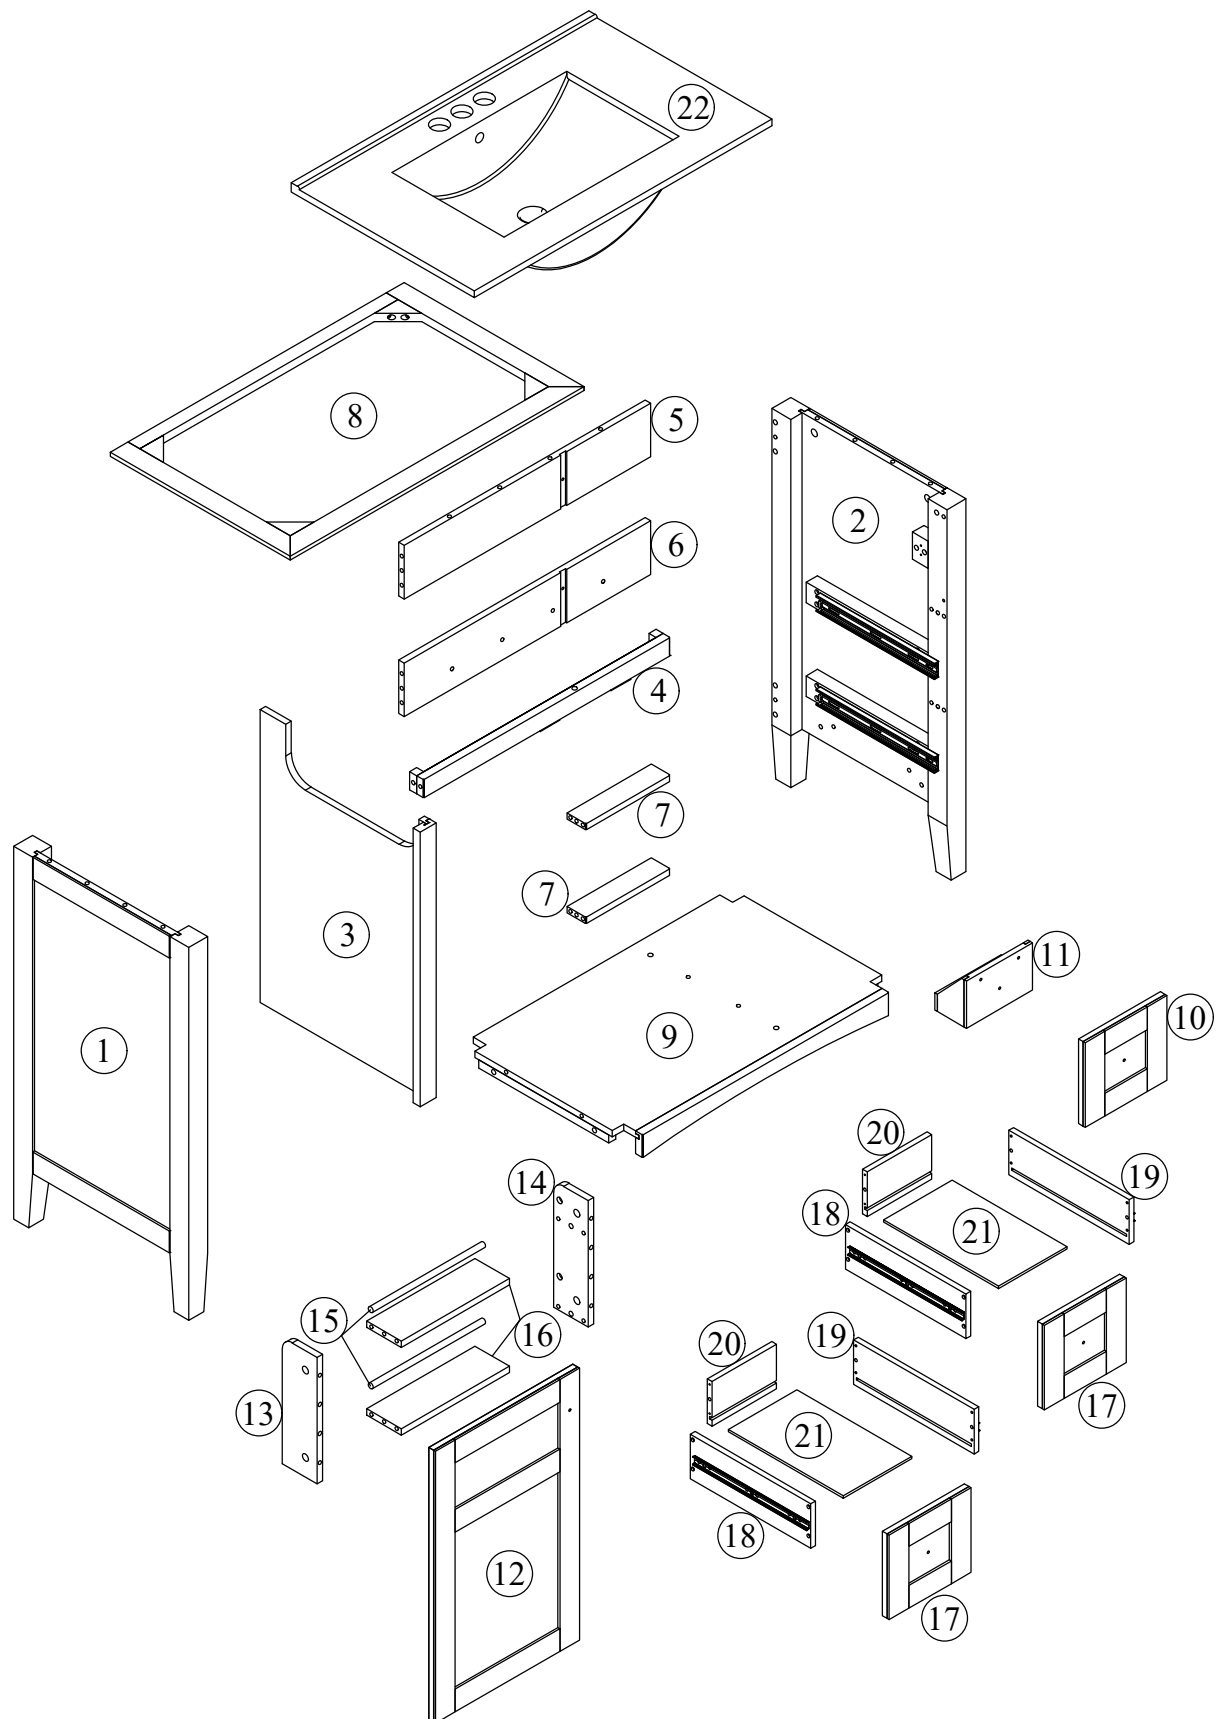


Identifying the Hardware—Identify the hardware using the illustrations below.






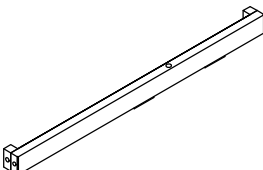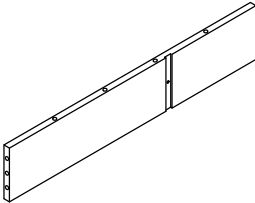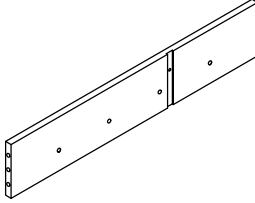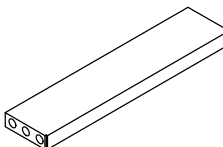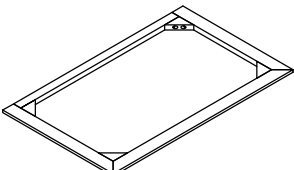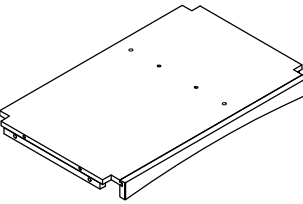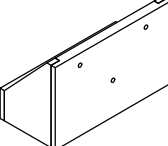





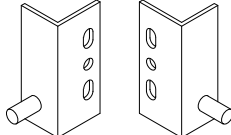




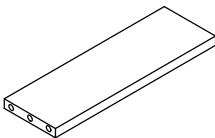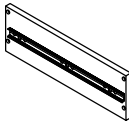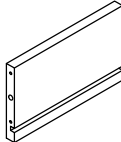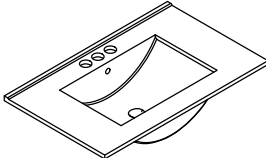


Part List - N710P252105

1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Mid Panel - 1pc		Top Crossbar Front - 1pc
5		6	
	Top Panel Rear - 1pc		Bottom Panel Rear - 1pc
7		8	
	Mid Crossbar Front - 2pcs		Top Frame - 1pc
9		10	
	Bottom Frame - 1pc		Flip Drawer Face - 1pc
11		12	
	Flip Drawer - 1pc		Cabinet Door - 1pc
13		14	
	Door Side Panel (L) - 1pc		Door Side Panel (R) - 1pc

Part List - N710P252105


15	 Round Bar - 2pcs	16	 Door Mid Panel - 2pcs
17	 Bottom Drawer Face Right - 2pcs	18	 Bottom Drawer Side Right (L) - 2pcs
19	 Bottom Drawer Side Right (R) - 2pcs	20	 Bottom Drawer Panel Rear Right - 2pcs
21	 Bottom Drawer Panel Right - 2pcs	22	 Sink - 1pc

Hardware List - N710P252105


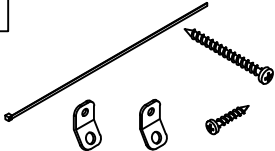
A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts(30pcs)	Three in one lock(30pcs)	Wood dowel(40pcs)
D  ø13x1/4"x28mm	E  ø1/4"x16x1mm	F  Damping hinge (2pcs)
Hex-Head bolts(6pcs)	Washer(6pcs)	Damping hinge (2pcs)
G  ø7xø3.5x15mm	H  Handle (4pcs)	I  ø5/32"x25mm
Flat head screw (12pcs)	Handle (4pcs)	Handle screw (1pc)
J  ø5/32"x30mm	K  Duo Forte (1pc)	L  Rotary Hinge(2pcs)
Handle screw (3pcs)	Duo Forte (1pc)	Rotary Hinge(2pcs)
M  ø6xø3x12mm	N  ø8xø4x15mm	O  ø8xø4x25mm
Round head screw(8pcs)	Round head screw(2pcs)	Round head screw(2pcs)
P  ø8xø4x32mm	Q  ø6x30mm	R  4mm
Round head screw(17pcs)	Wood dowel(8pcs)	Allen key(1pc)
S  Anti fall hardware(1set)		

STEP: 1



A

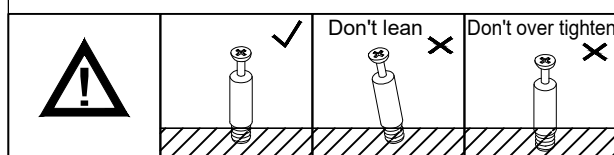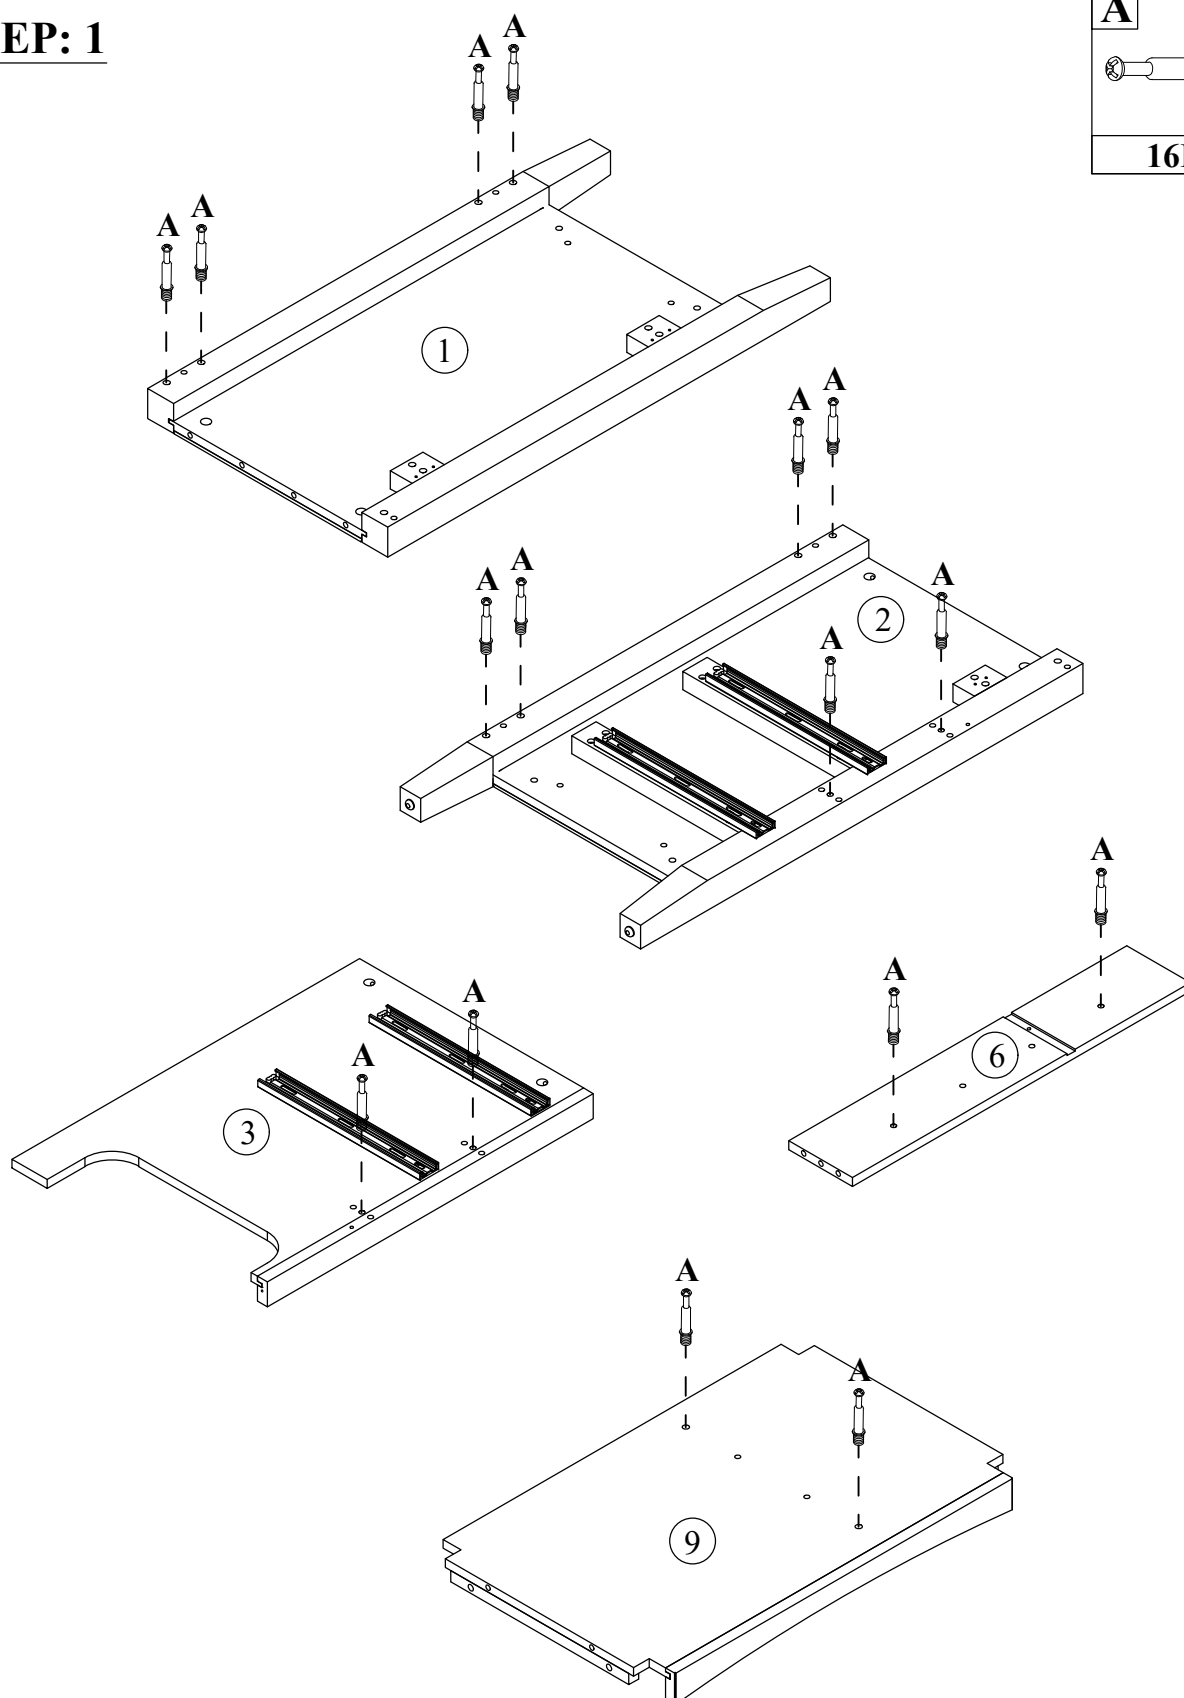


16PCS






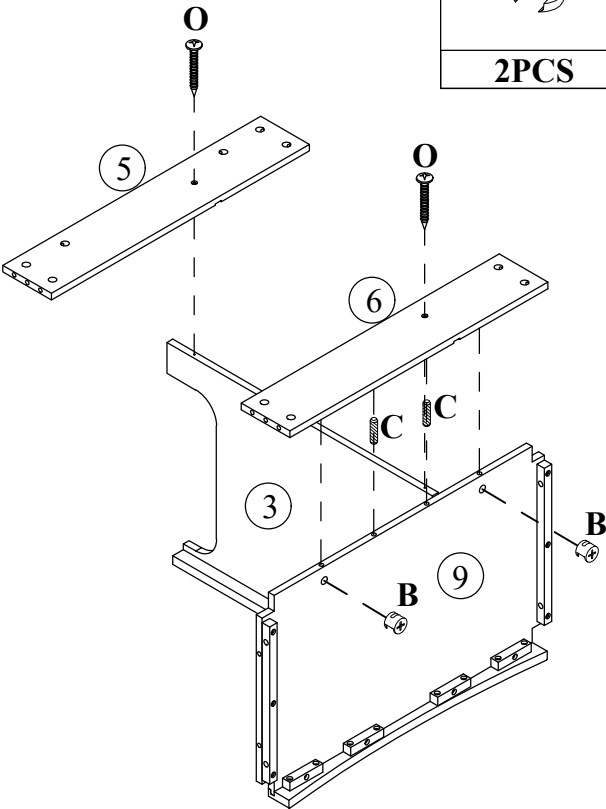
STEP: 2

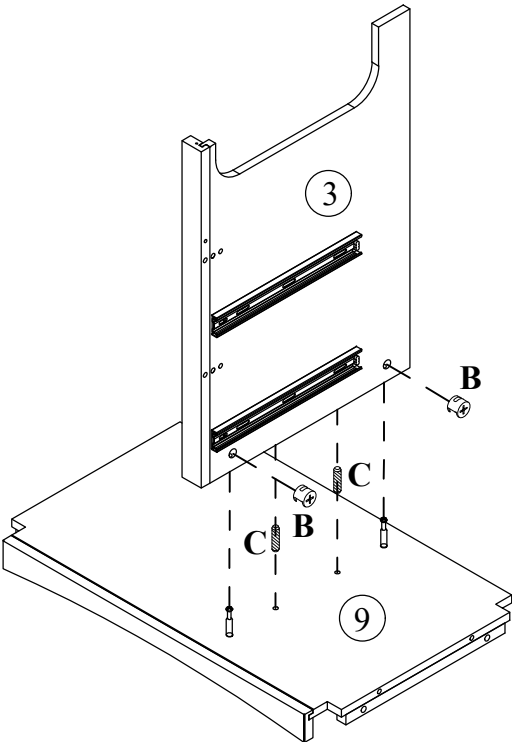B	C
	
2PCS	2PCS








STEP: 3

B	C	O
		
2PCS	2PCS	2PCS




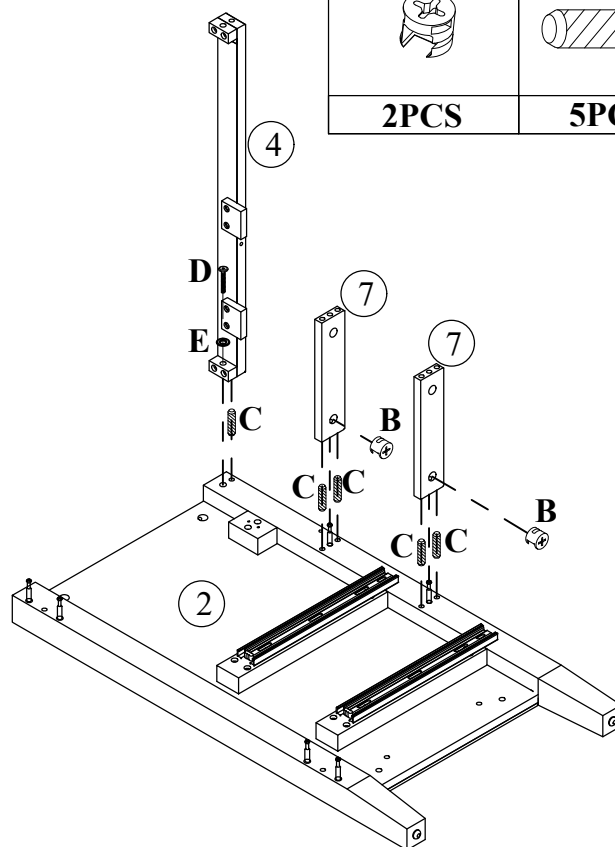



STEP: 4

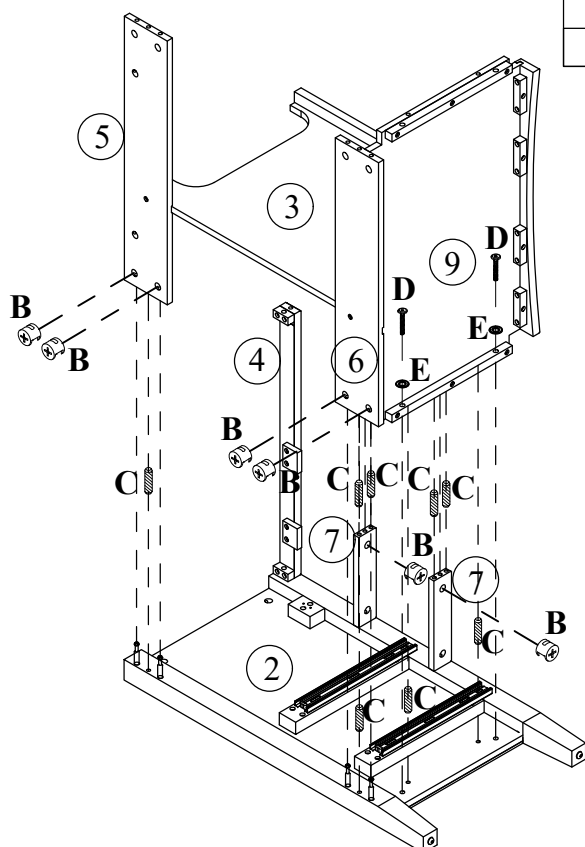


B	C	D	E
			
2PCS	5PCS	1PC	1PC





STEP: 5

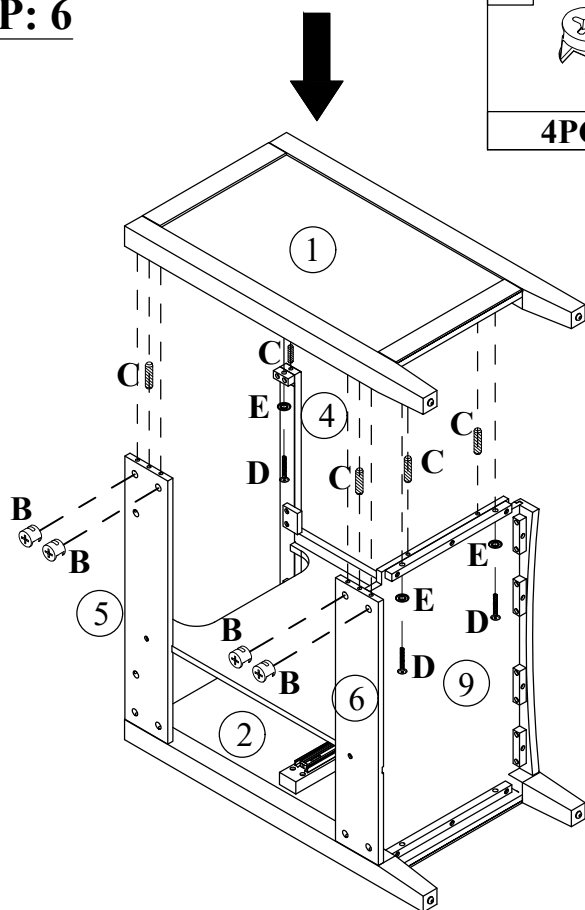


B	C	D	E
			
6PCS	8PCS	2PCS	2PCS


STEP: 6




B	C	D	E
			
4PCS	5PCS	3PCS	3PCS

STEP: 7

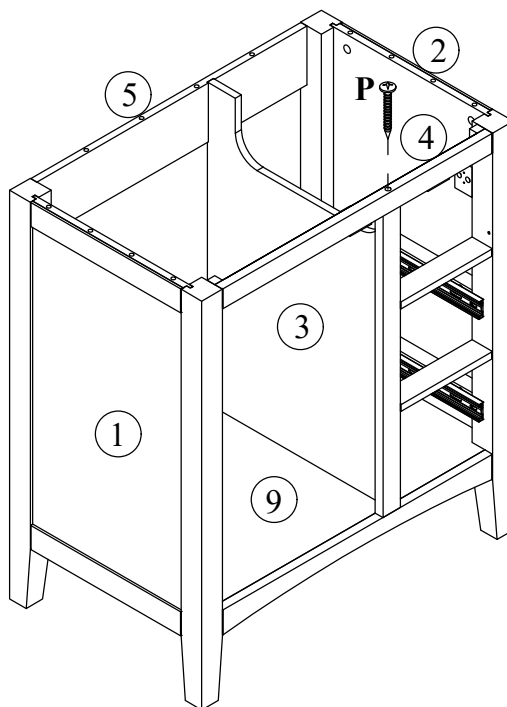


P	
	
	1PC



STEP: 8

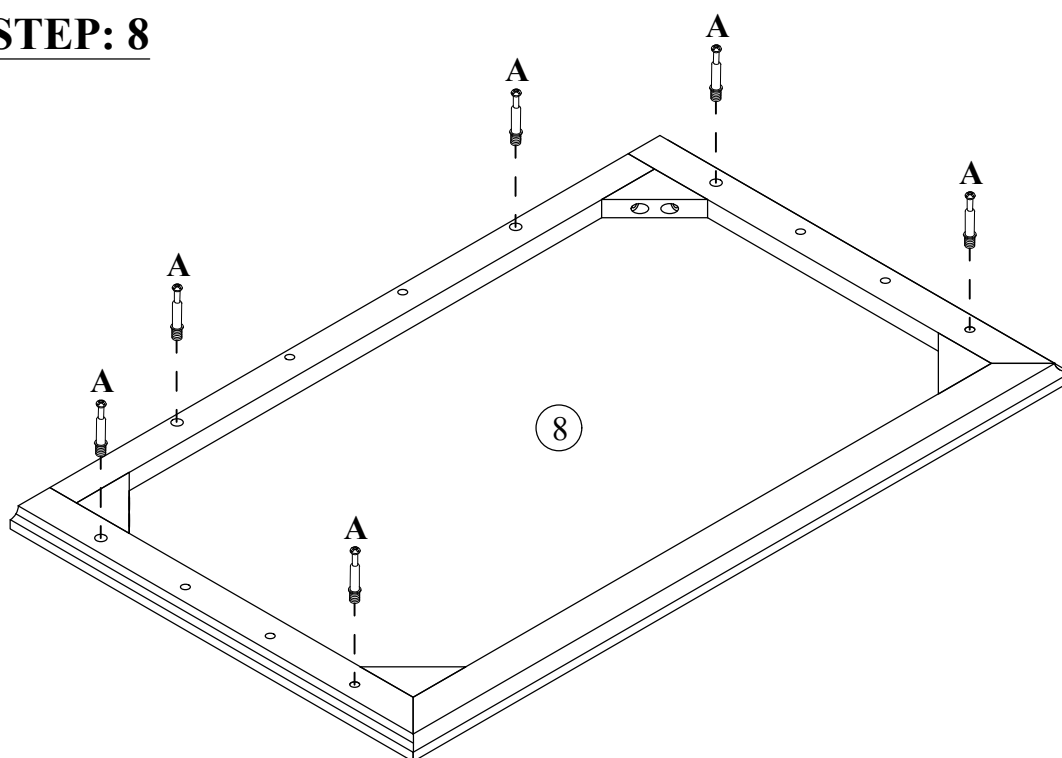


A



6PCS

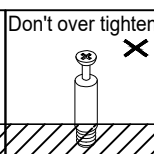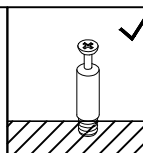

STEP: 9

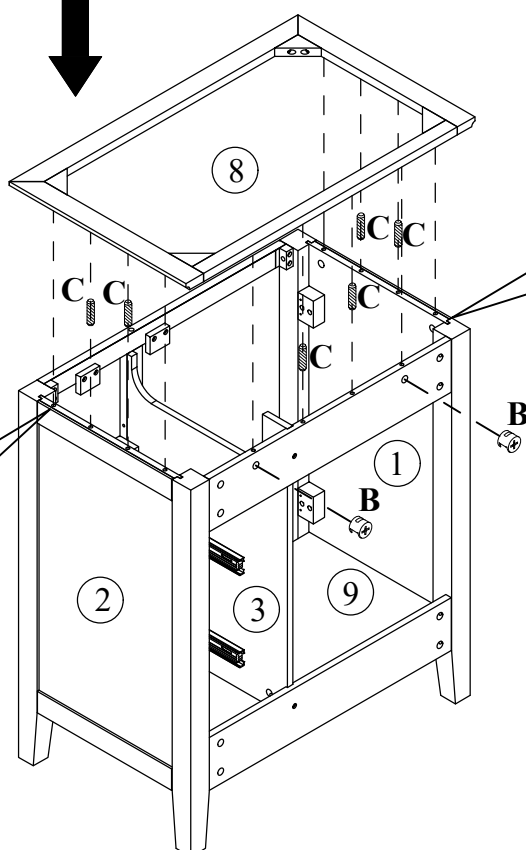

B





6PCS






C

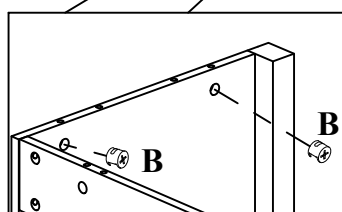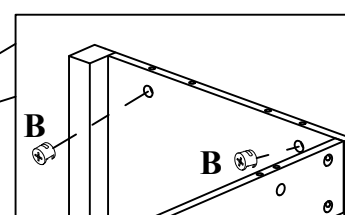


6PCS





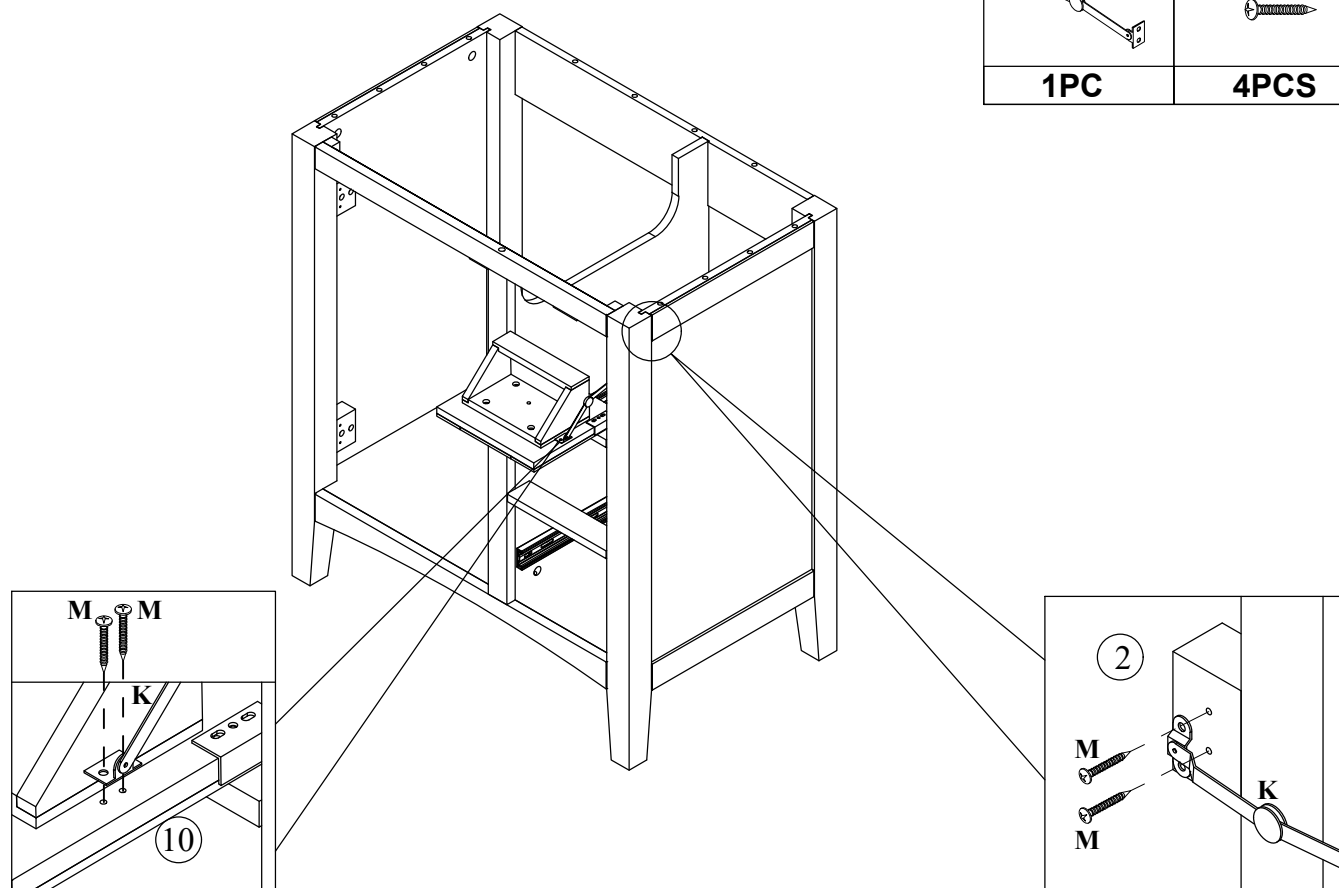
STEP: 10

H	J	L	M	N
				
1PC	1PC	2PCS	4PCS	2PCS

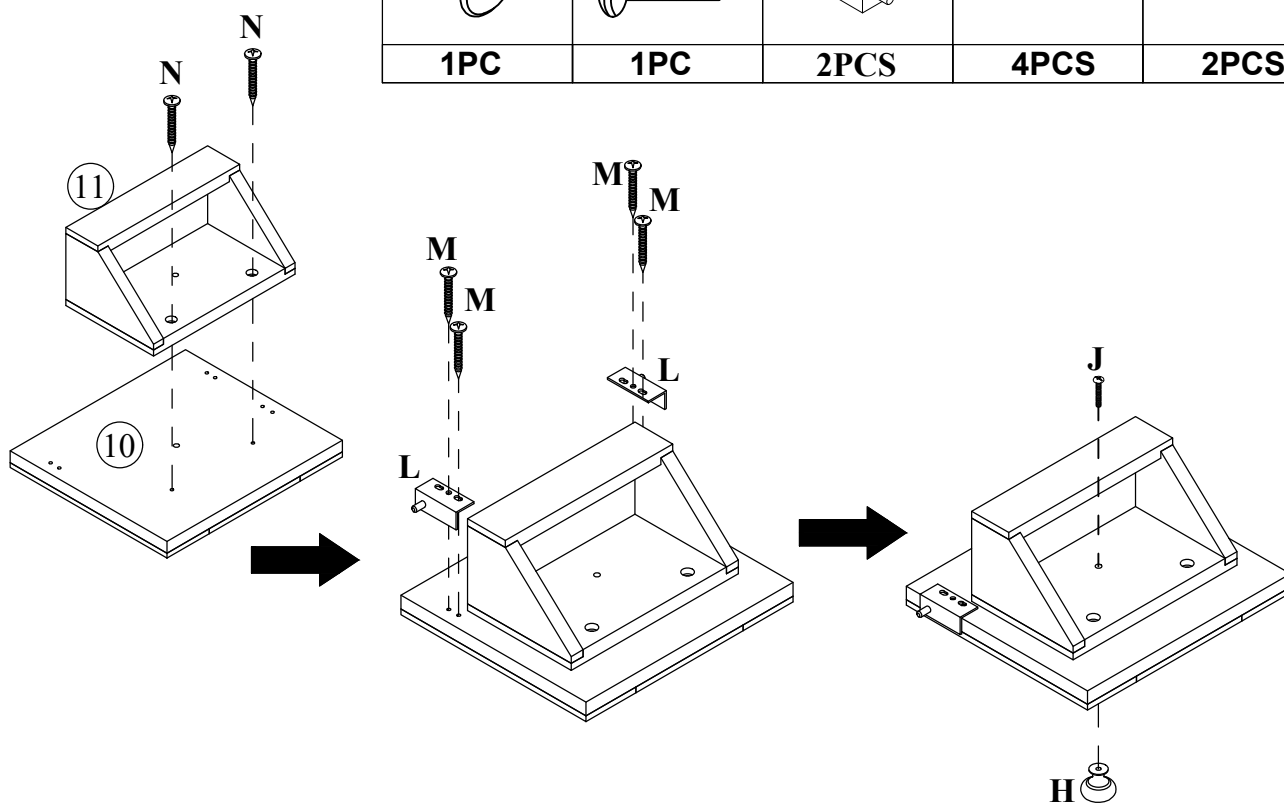



STEP: 11

K	M
	
1PC	4PCS






STEP: 12

A

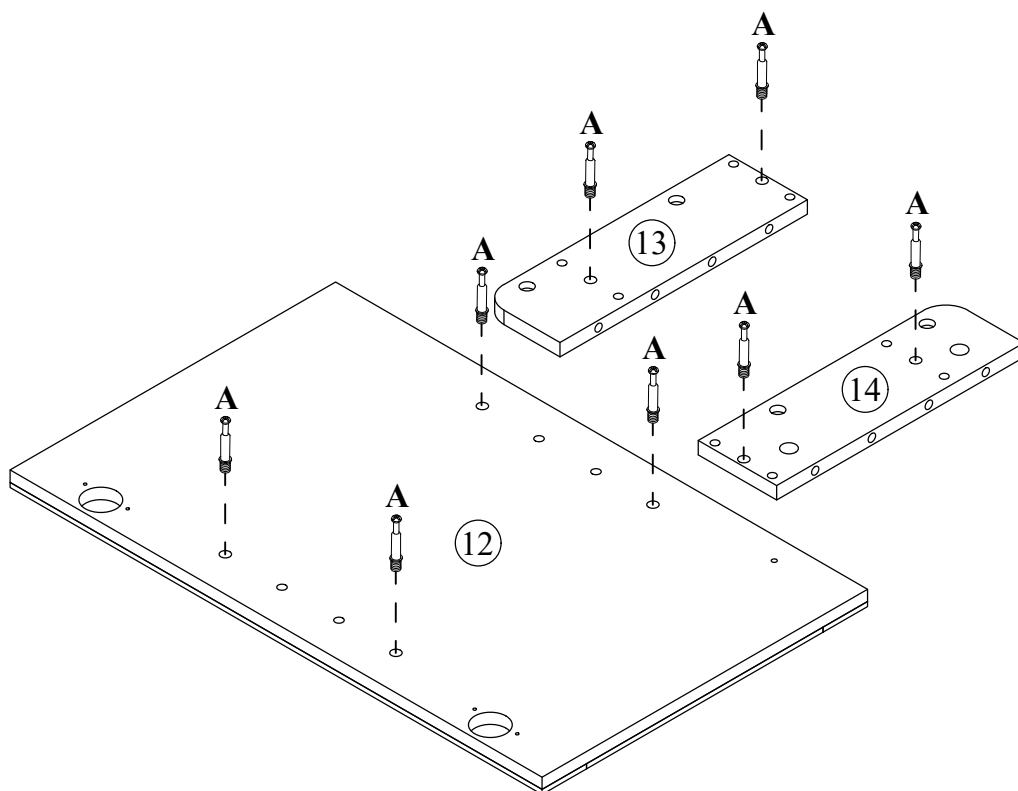8PCS




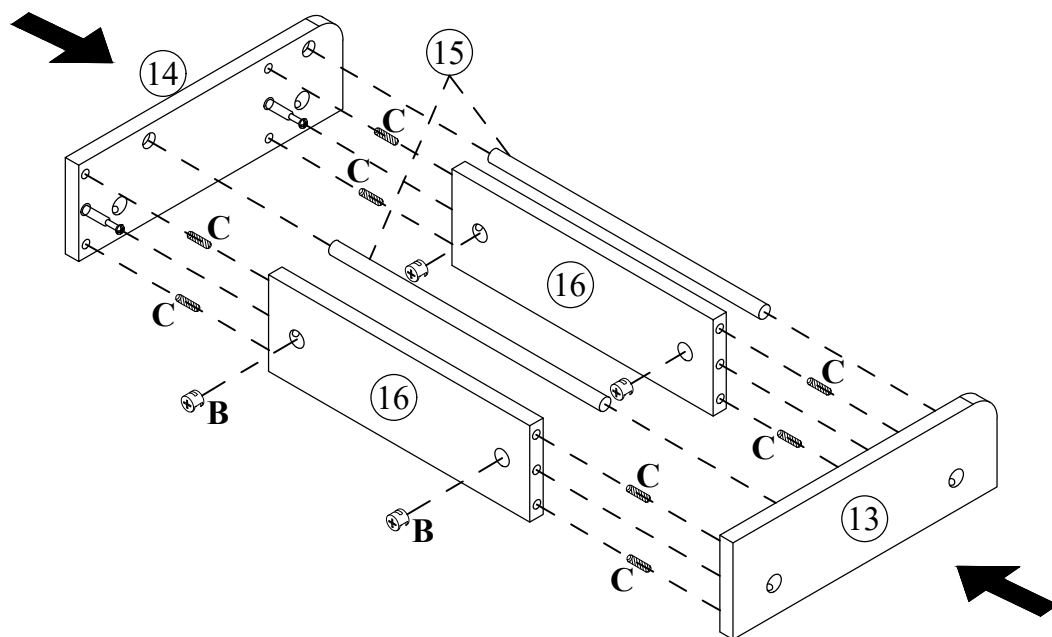

STEP: 13

B	C
	
4PCS	8PCS

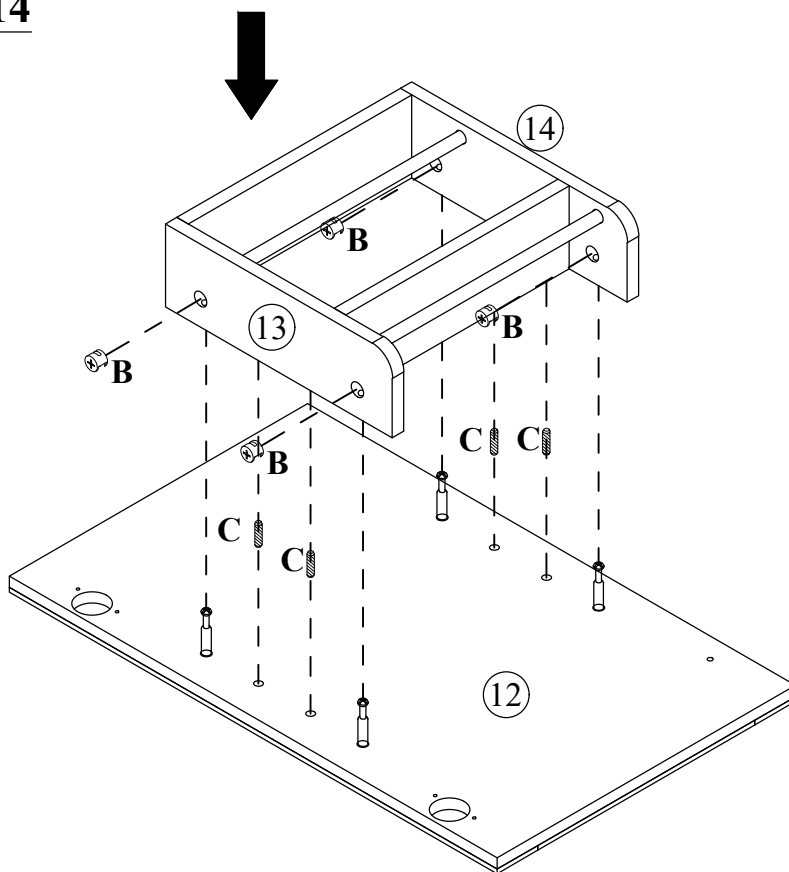




STEP: 14




B		C	
4PCS		4PCS	

STEP: 15

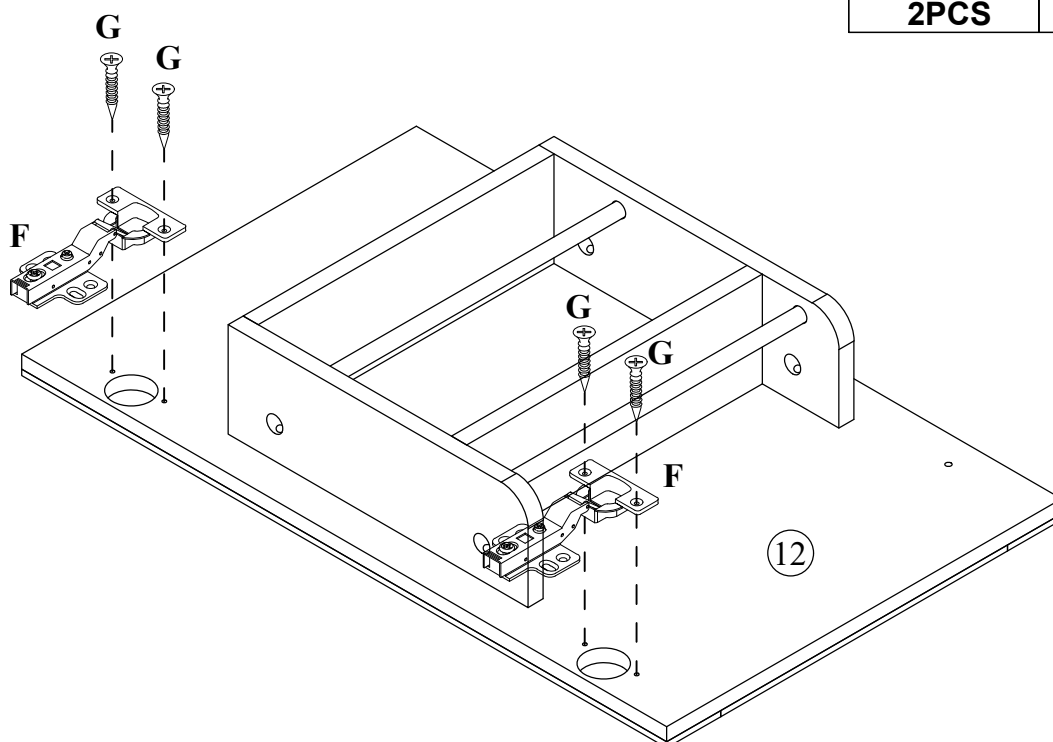


F		G	
2PCS		4PCS	


STEP: 16

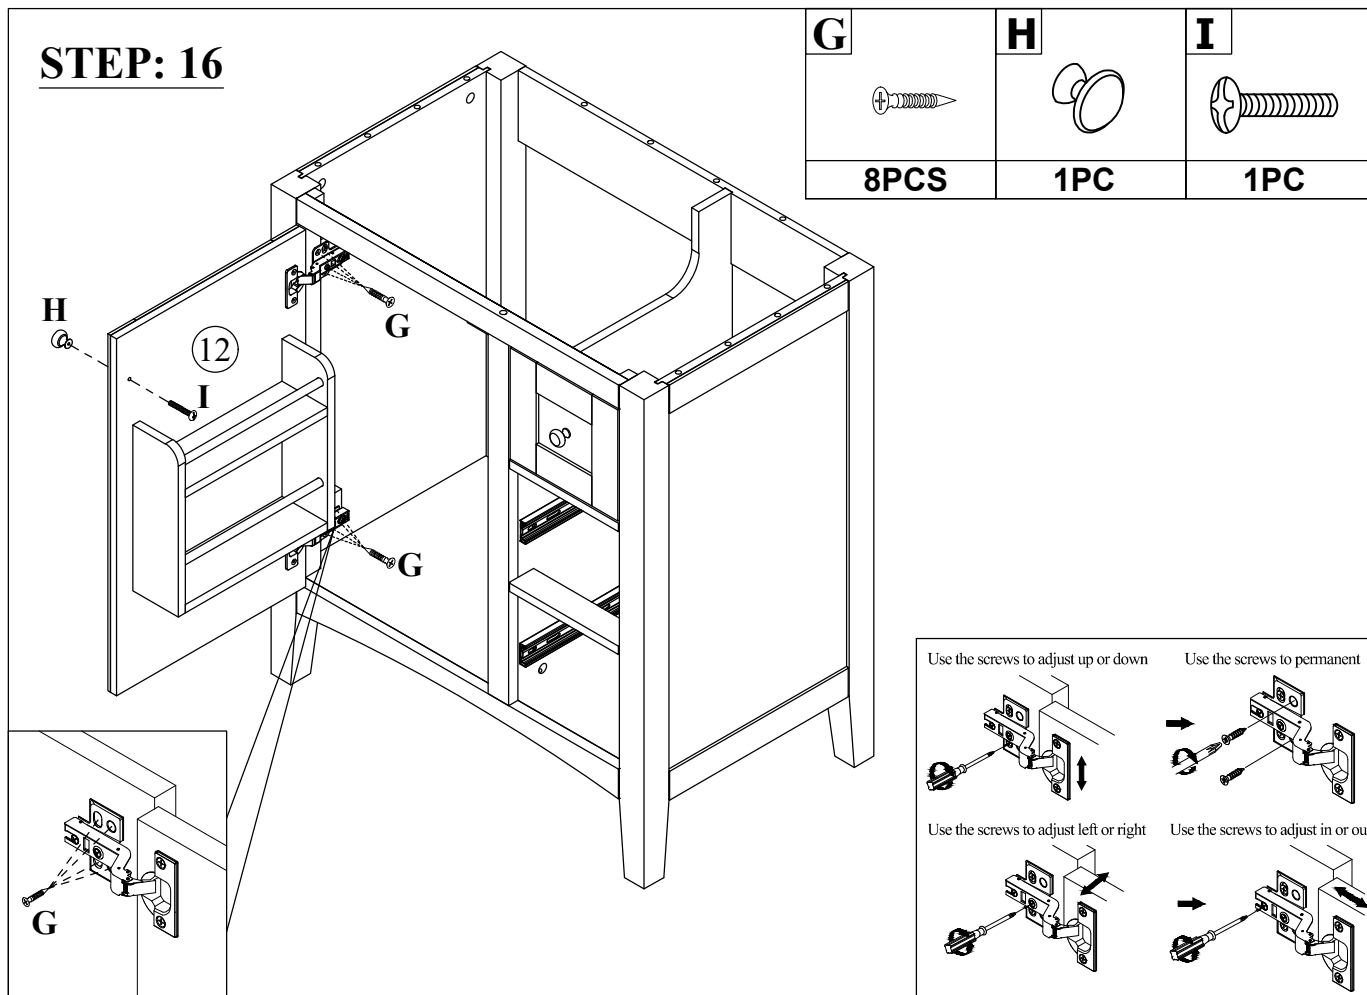



STEP: 17

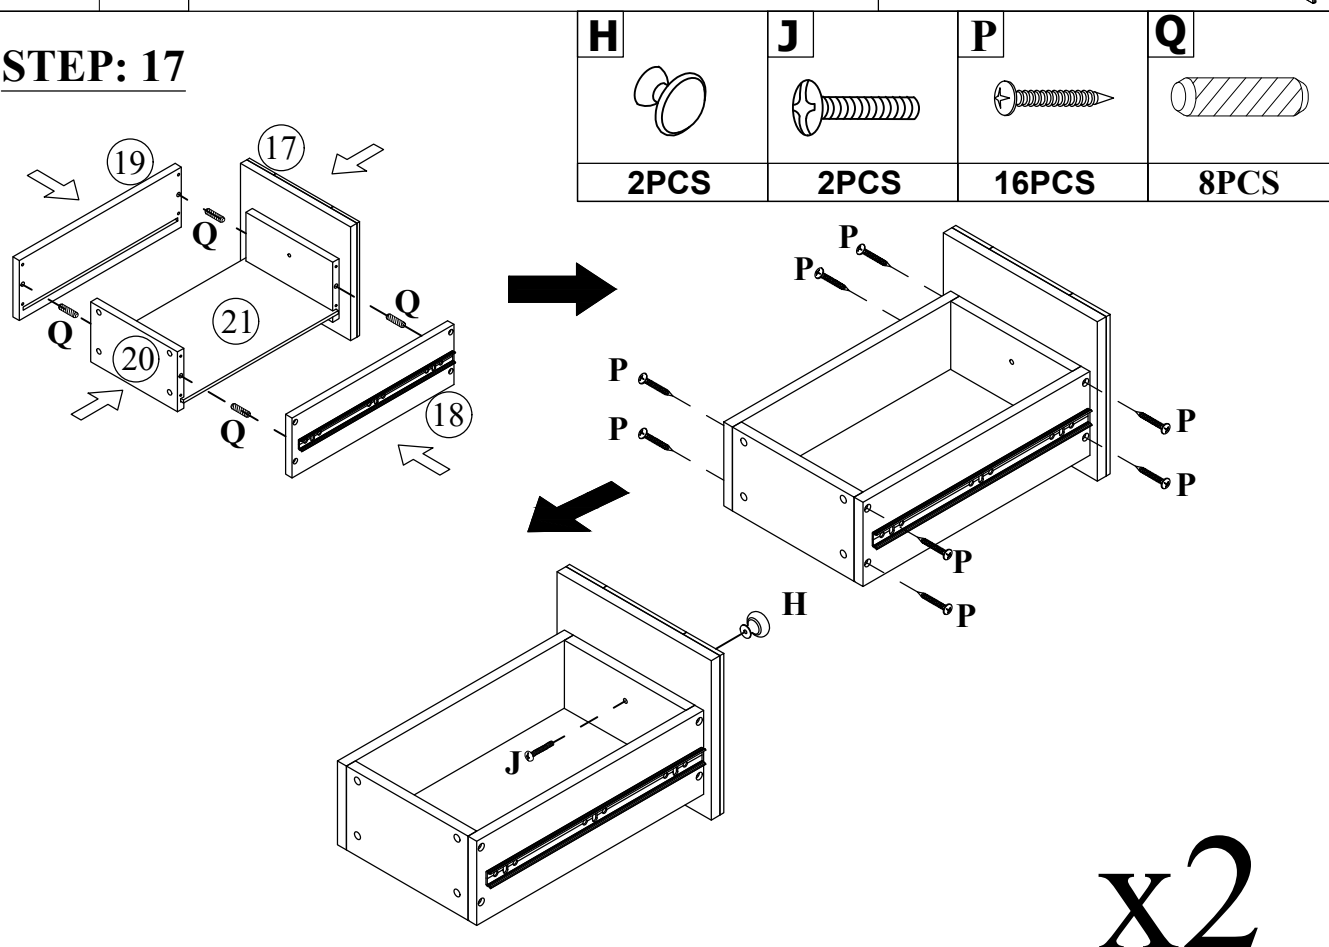

STEP: 18

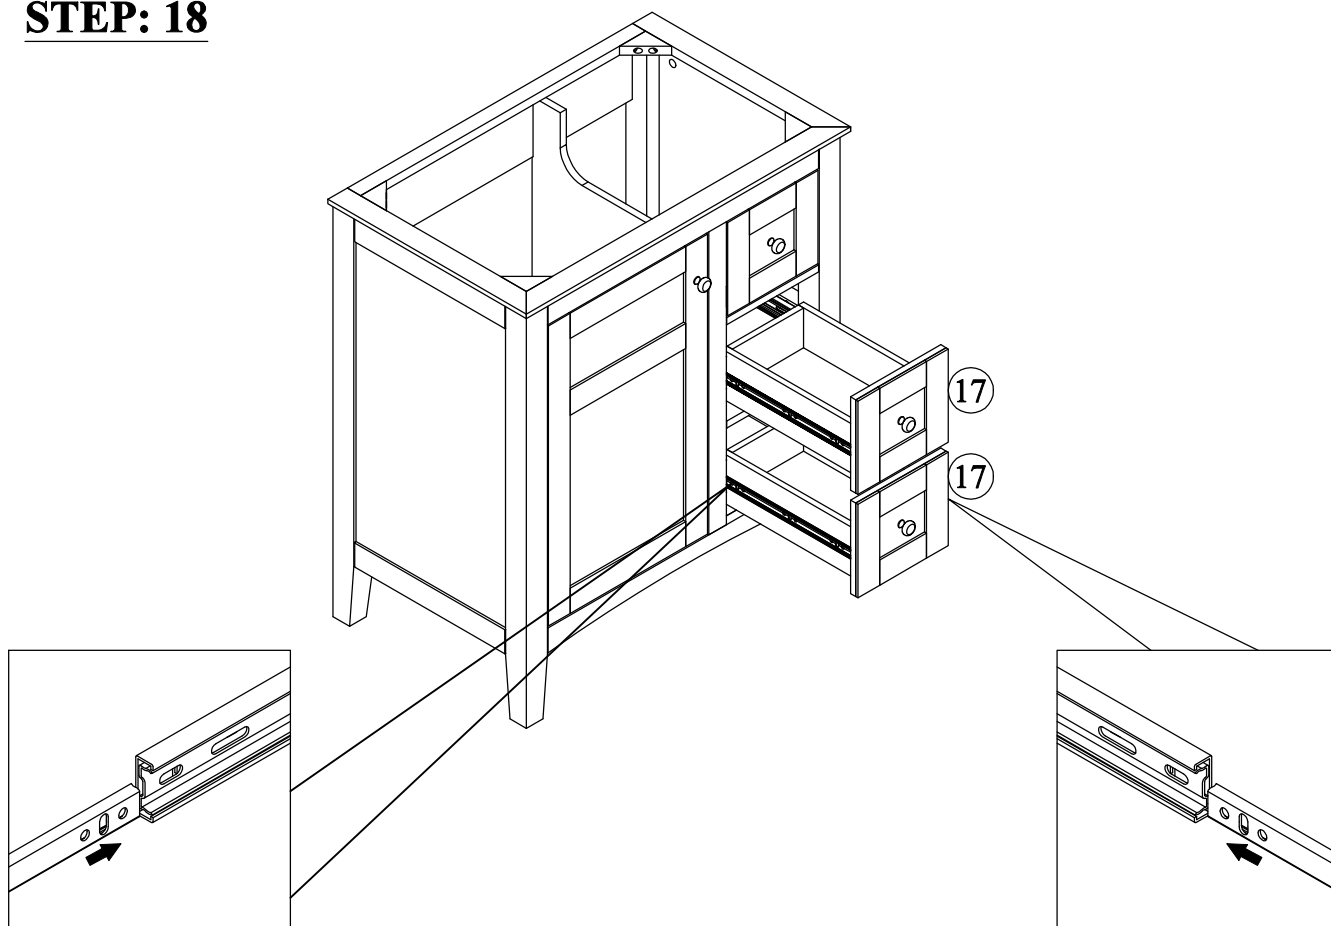


STEP: 19

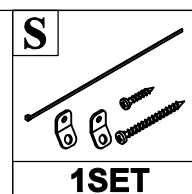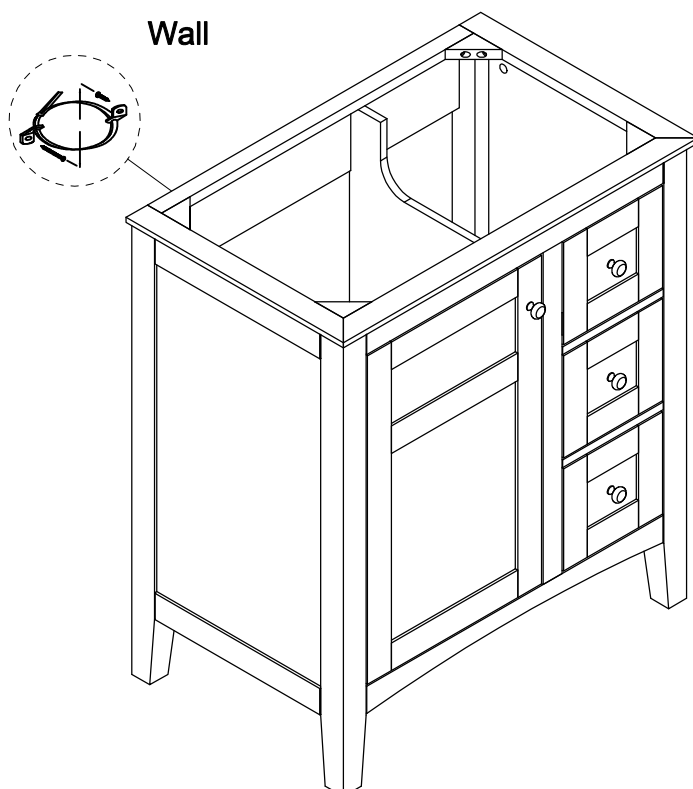


STEP: 20

Install the sink on the cabinet with glue.
Let stand for 24 hours

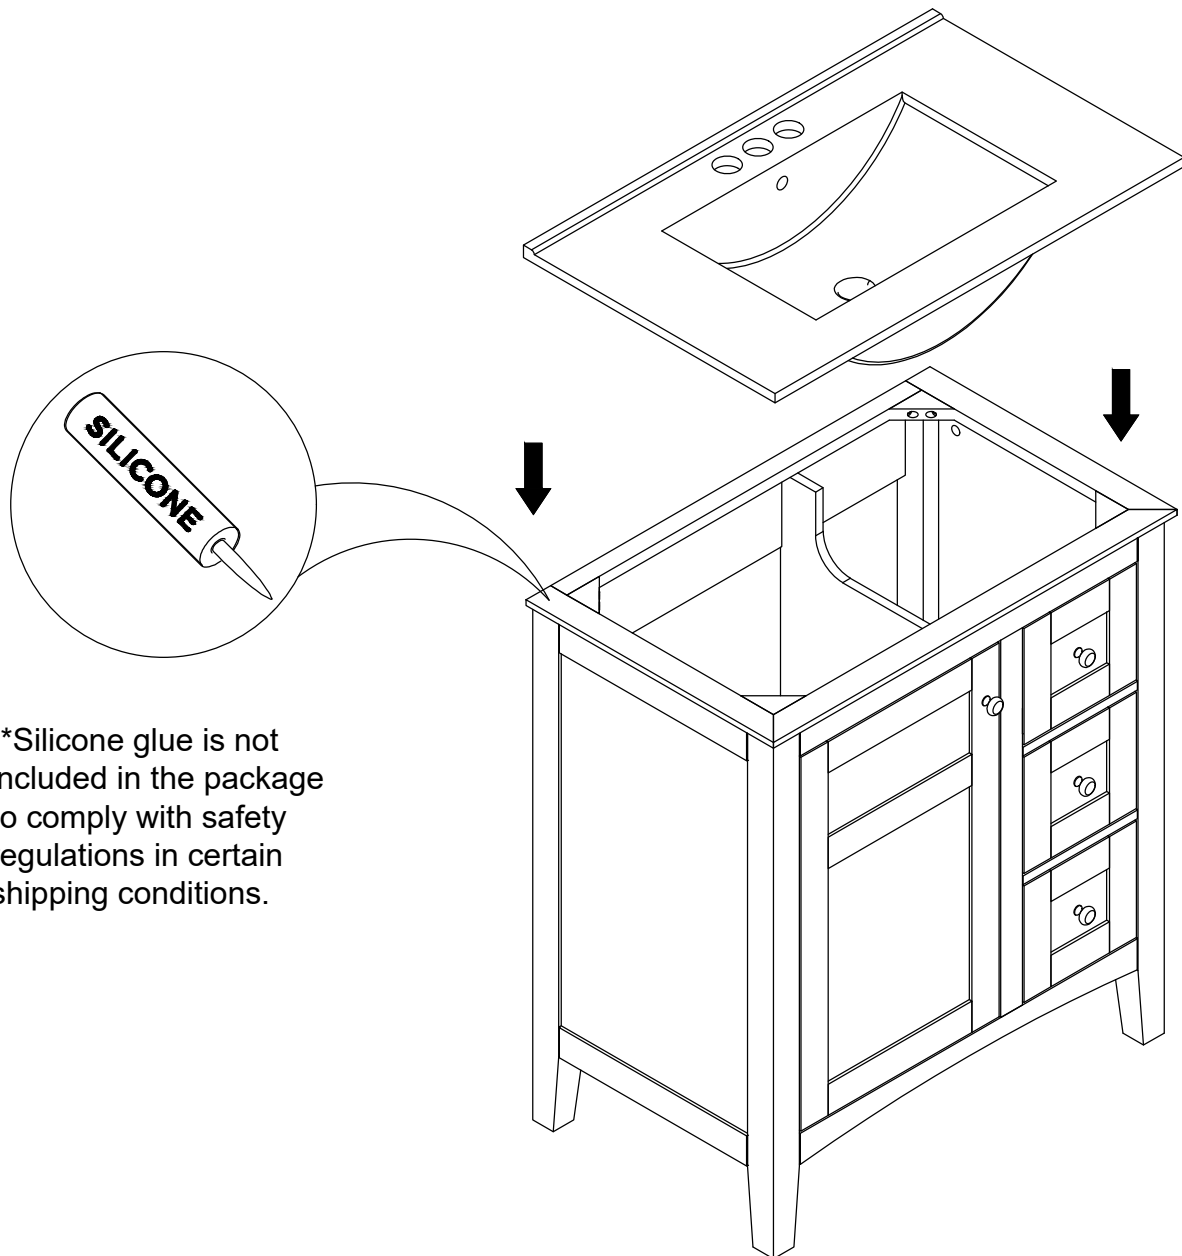


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 21

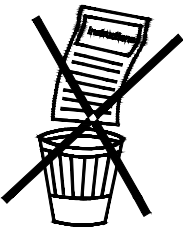

HINGE ADJUSTMENTS

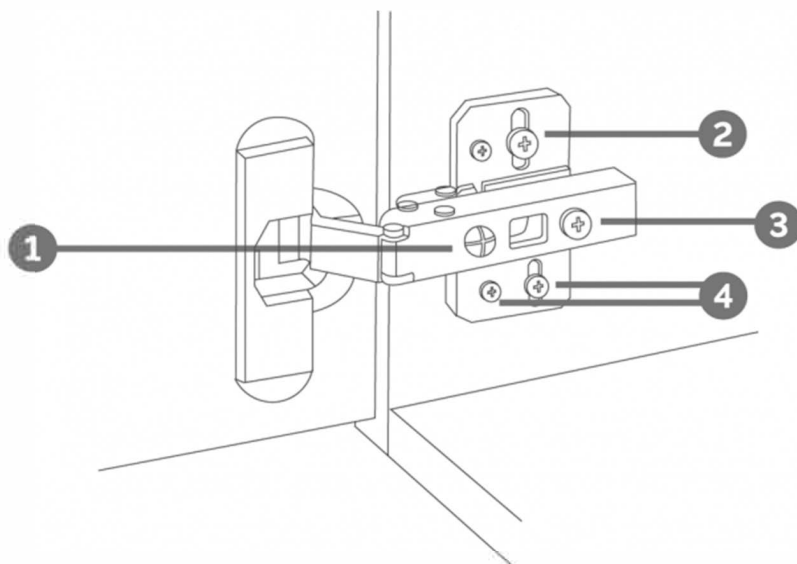


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

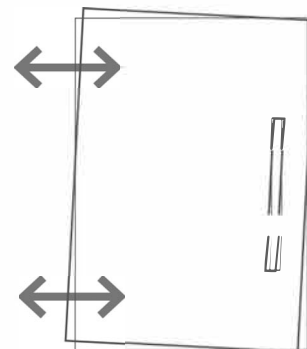


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

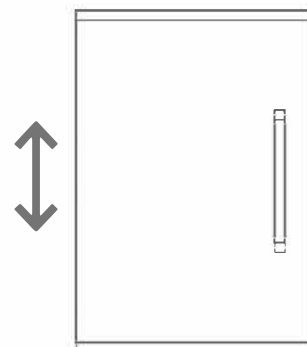

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

