


# ASSEMBLY INSTRUCTIONS




## 24 INCH BATH VANITY (COMBO)

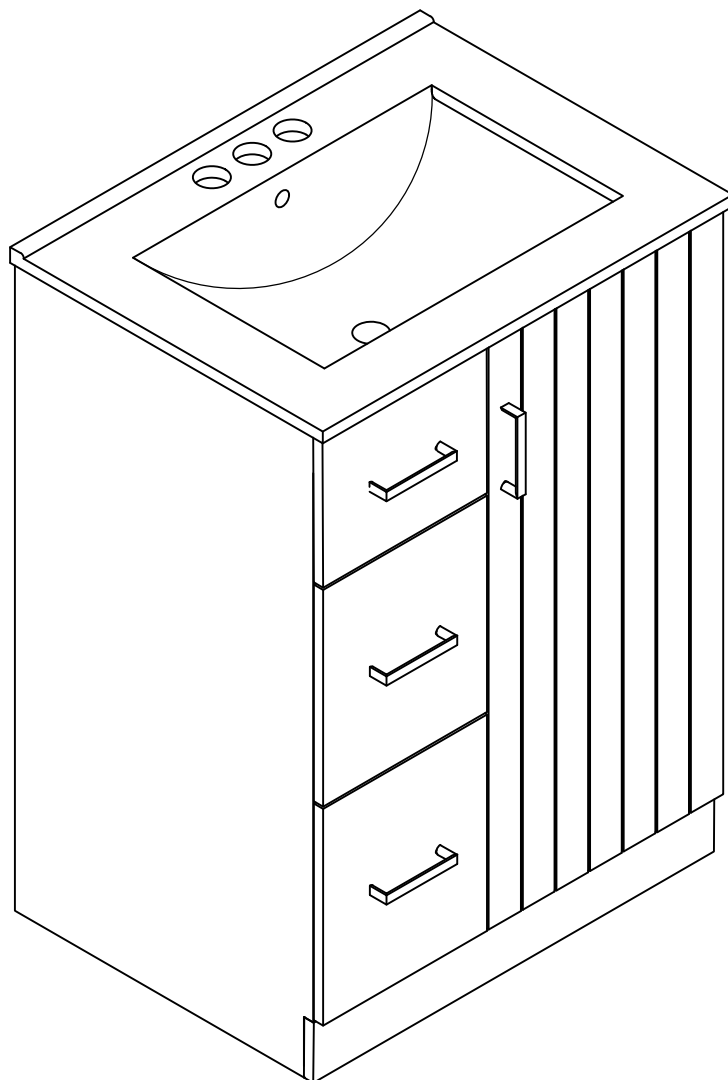


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**


**\* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**  
**\* Please assemble on a clean soft surface to avoid damage.**

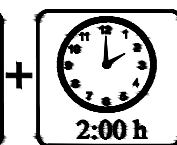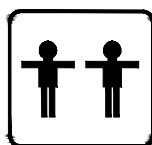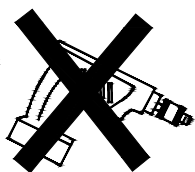

### Tools Required



(Not included)



(Not included)

### IMPORTANT:

**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

**PLEASE DO NOT RETURN TO STORE**



**Please do not return this product to the retailer!!  
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







# Before Installation

**Important – Please read these instructions fully before starting assembly**


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## Cam Lock Assembly Instructions

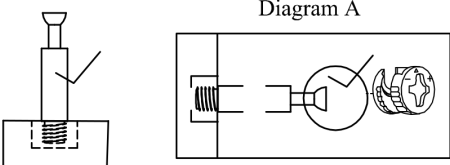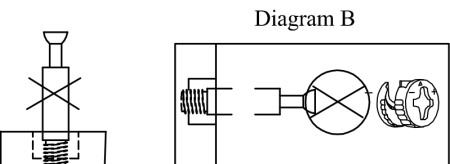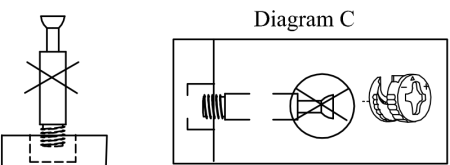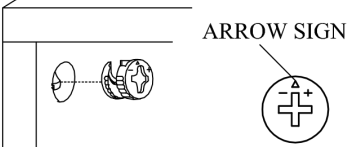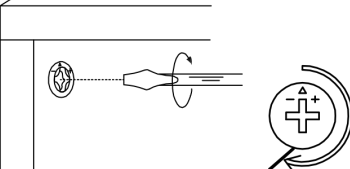




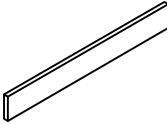
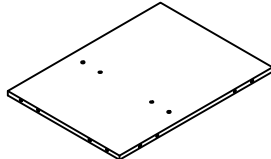

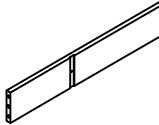
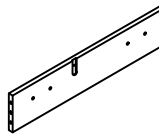






	<p>Diagram A</p> <p>Insert Cam Bolt into hole as shown in diagram A.</p>
	<p>Diagram B</p> <p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
	<p>Diagram C</p> <p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
	<p>Connect the panels together.</p>
	<p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>
	<p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>
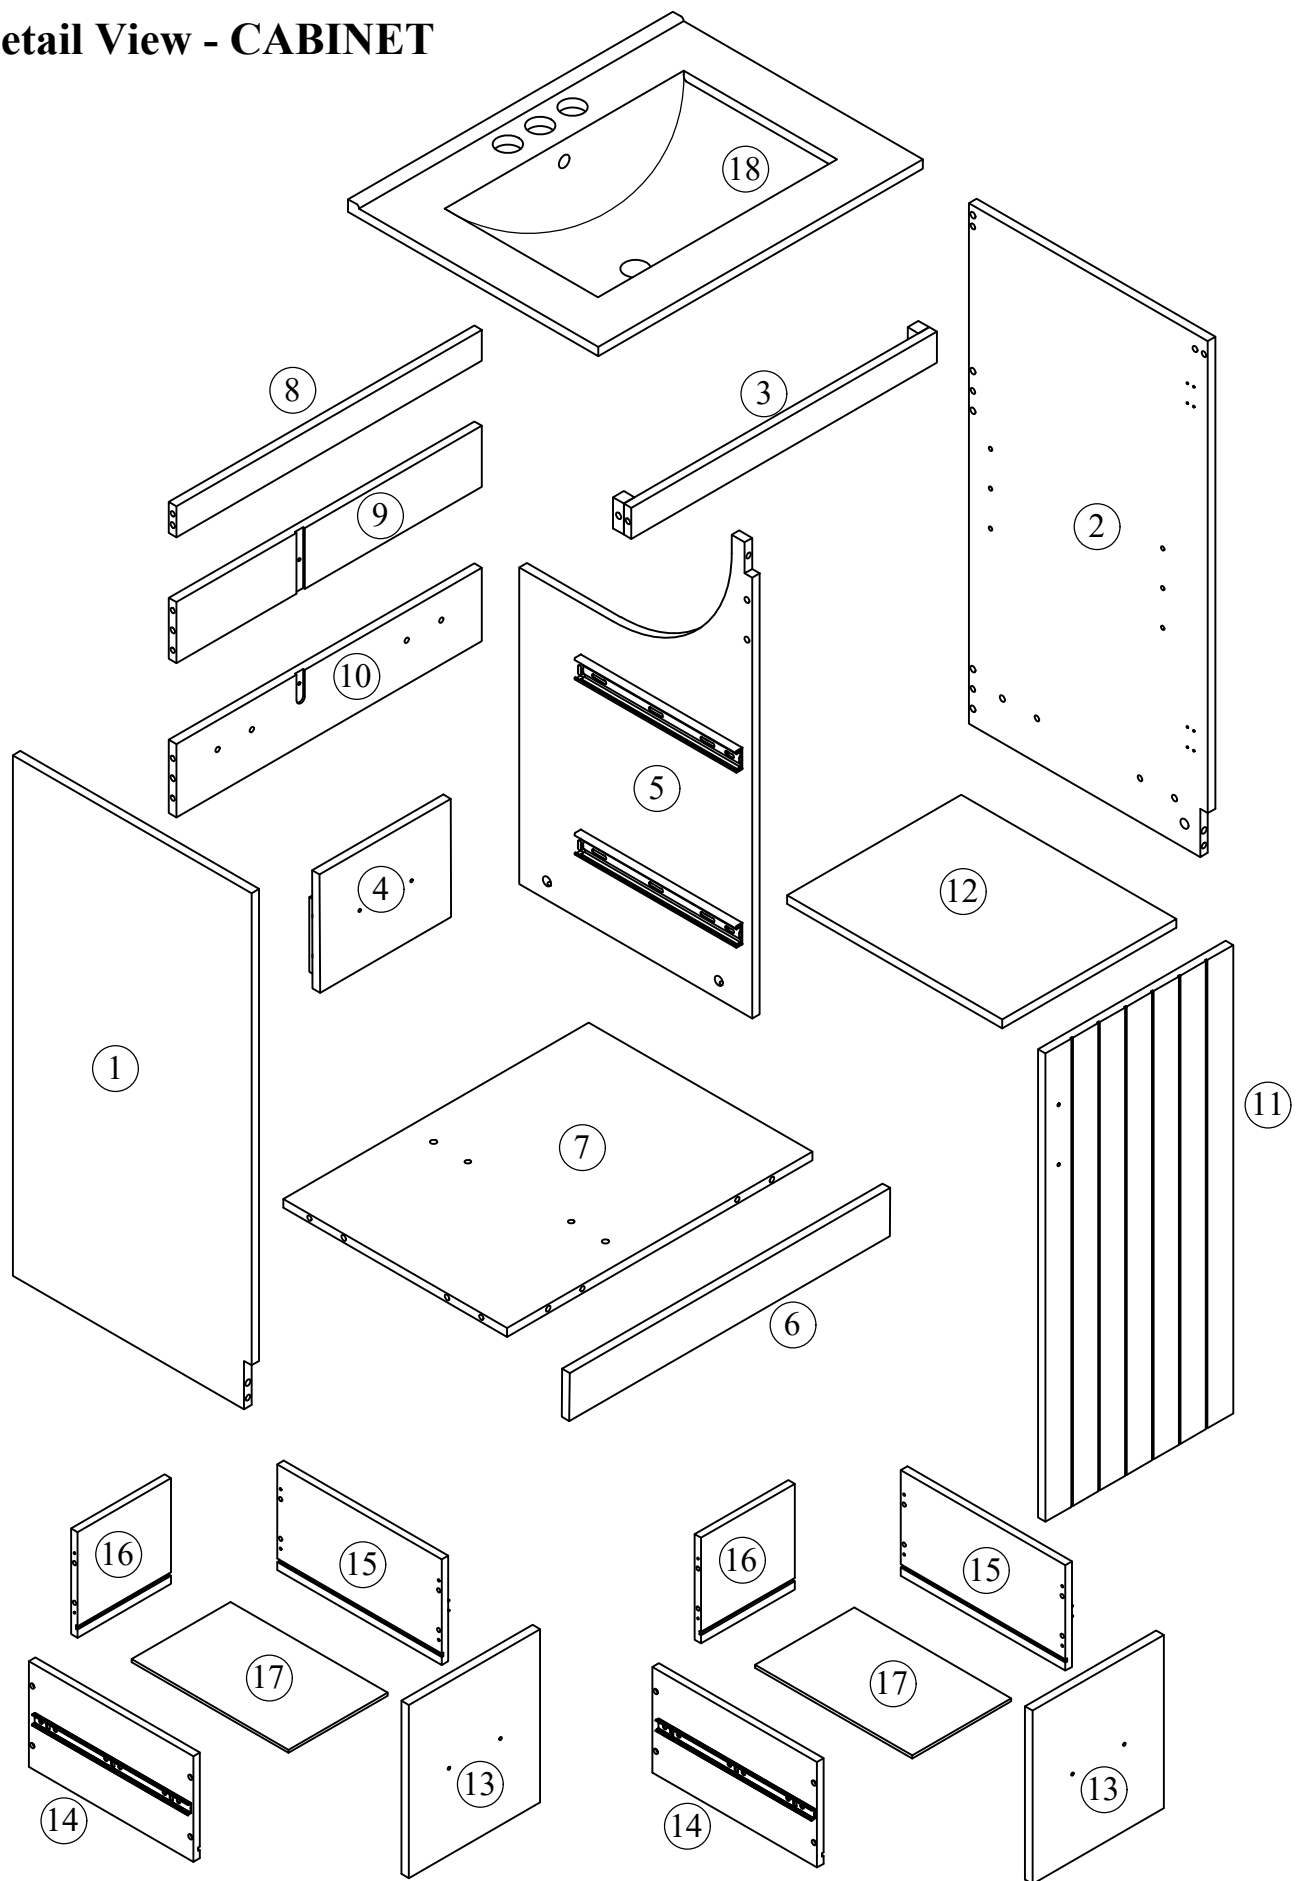
## Detail View - CABINET





**Identifying the Hardware**—Identify the hardware using the illustrations below.




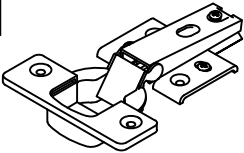



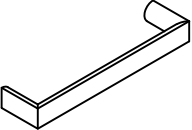







## Part List - N710P288936

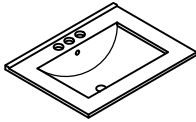1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Top Front Bar - 1pc		Drawer Fake - 1pc
5		6	
	Mid Panel - 1pc		Bottom Front Bar - 1pc
7		8	
	Bottom Panel - 1pc		Top Rear Bar - 1pc
9		10	
	Mid Rear Bar - 1pc		Bottom Rear Bar - 1pc
11		12	
	Door - 1pc		Adjustable Shelf - 1pc
13		14	
	Drawer Face - 2pcs		Drawer Side Panel (L) - 2pcs
15		16	
	Drawer Side Panel (R) - 2pcs		Drawer Back Panel - 2pcs

Part List - N710P288936


17	 <p>Drawer Bottom Panel - 2pcs</p>	18	 <p>Sink - 1pc</p>
----	---	----	---

# Hardware List - N710P288936



<div>A</div>  <p>ø6x35mm</p>	<div>B</div>  <p>ø14.5x12mm</p>	<div>C</div>  <p>ø8xø4x32mm</p>
<p>Three in one bolts (22pcs)</p>	<p>Three in one lock (22pcs)</p>	<p>Round head screw (18pcs)</p>
<div>D</div> 	<div>E</div>  <p>ø7xø3.5x12mm</p>	<div>F</div>  <p>ø8x30mm</p>
<p>Damping hinge (2pcs)</p>	<p>Flat head screw (12pcs)</p>	<p>Wood dowel (21pcs)</p>
<div>G</div>  <p>ø6x30mm</p>	<div>H</div> 	<div>I</div>  <p>ø5/32"x19mm</p>
<p>Wood dowel (16pcs)</p>	<p>Handle (4pcs)</p>	<p>Handle screw (4pcs)</p>
<div>J</div>  <p>ø5/32"x32mm</p>	<div>K</div> 	<div>L</div>  <p>ø13x1/4"x28mm</p>
<p>Handle screw (4pcs)</p>	<p>Laminate pad (4pcs)</p>	<p>Hex-Head bolts (6pcs)</p>
<div>M</div>  <p>ø1/4"x16x1mm</p>	<div>N</div>  <p>4mm</p>	<div>O</div> 
<p>Washer (6pcs)</p>	<p>Allen key(1pc)</p>	<p>Anti fall hardware (2sets)</p>

# STEP: 1


A




22PCS

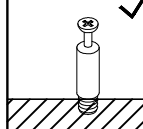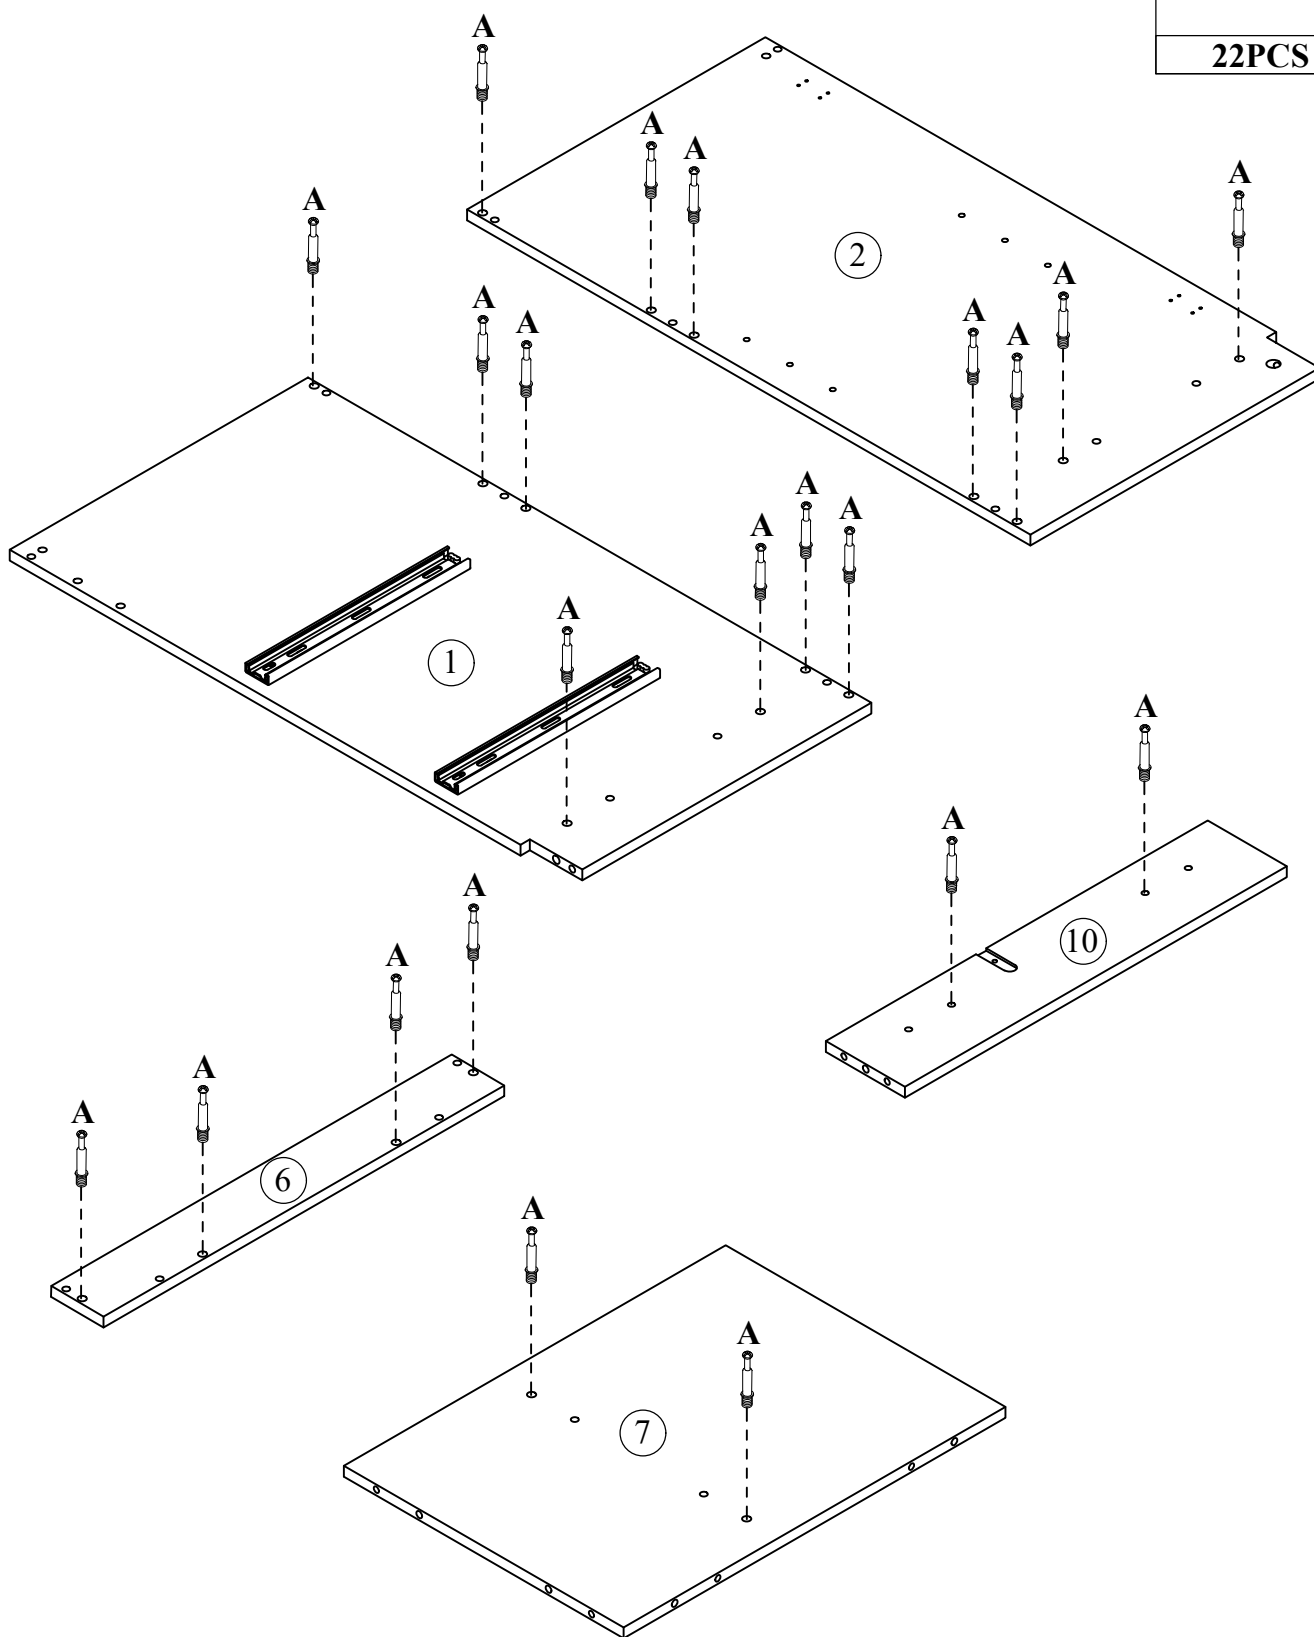


Don't lean






Don't over tighten

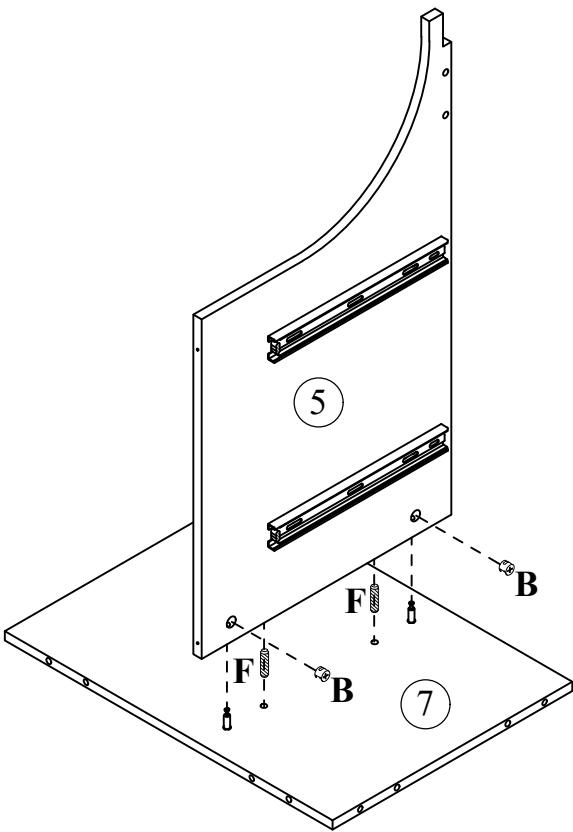


**STEP: 2**



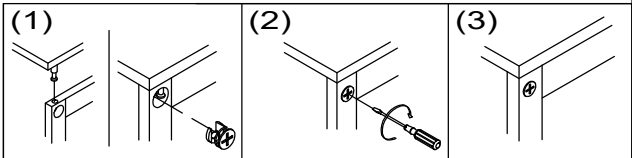


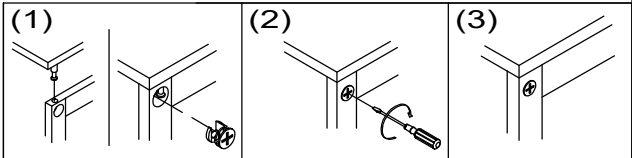
B	F
	
2PCS	2PCS



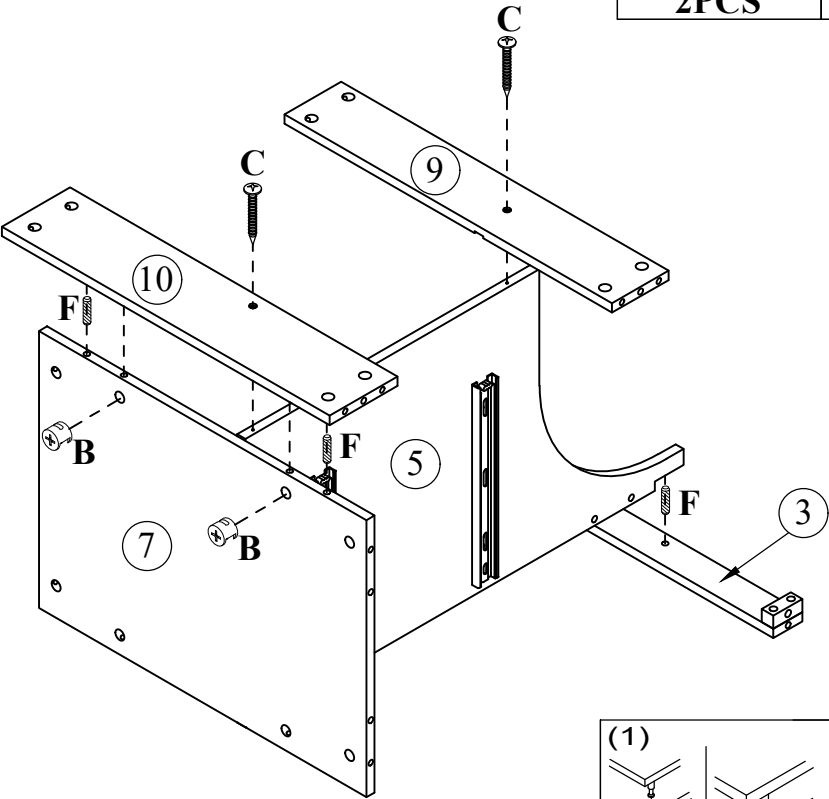



**STEP: 3**








B	C	F
		
2PCS	2PCS	3PCS






# STEP: 4

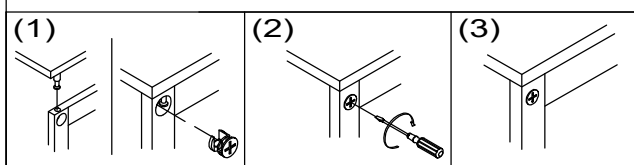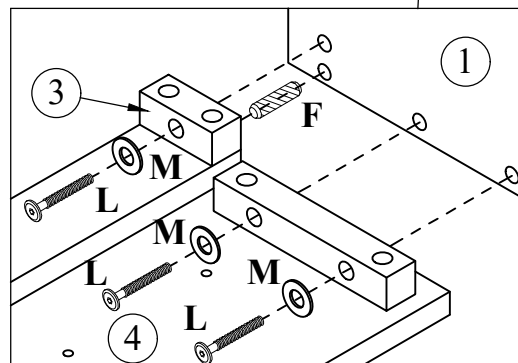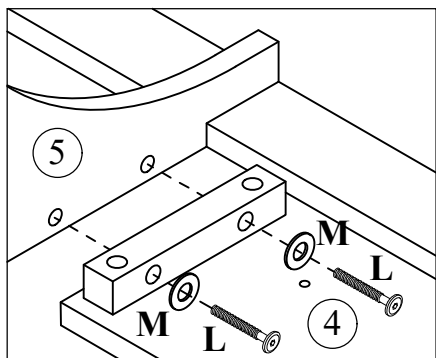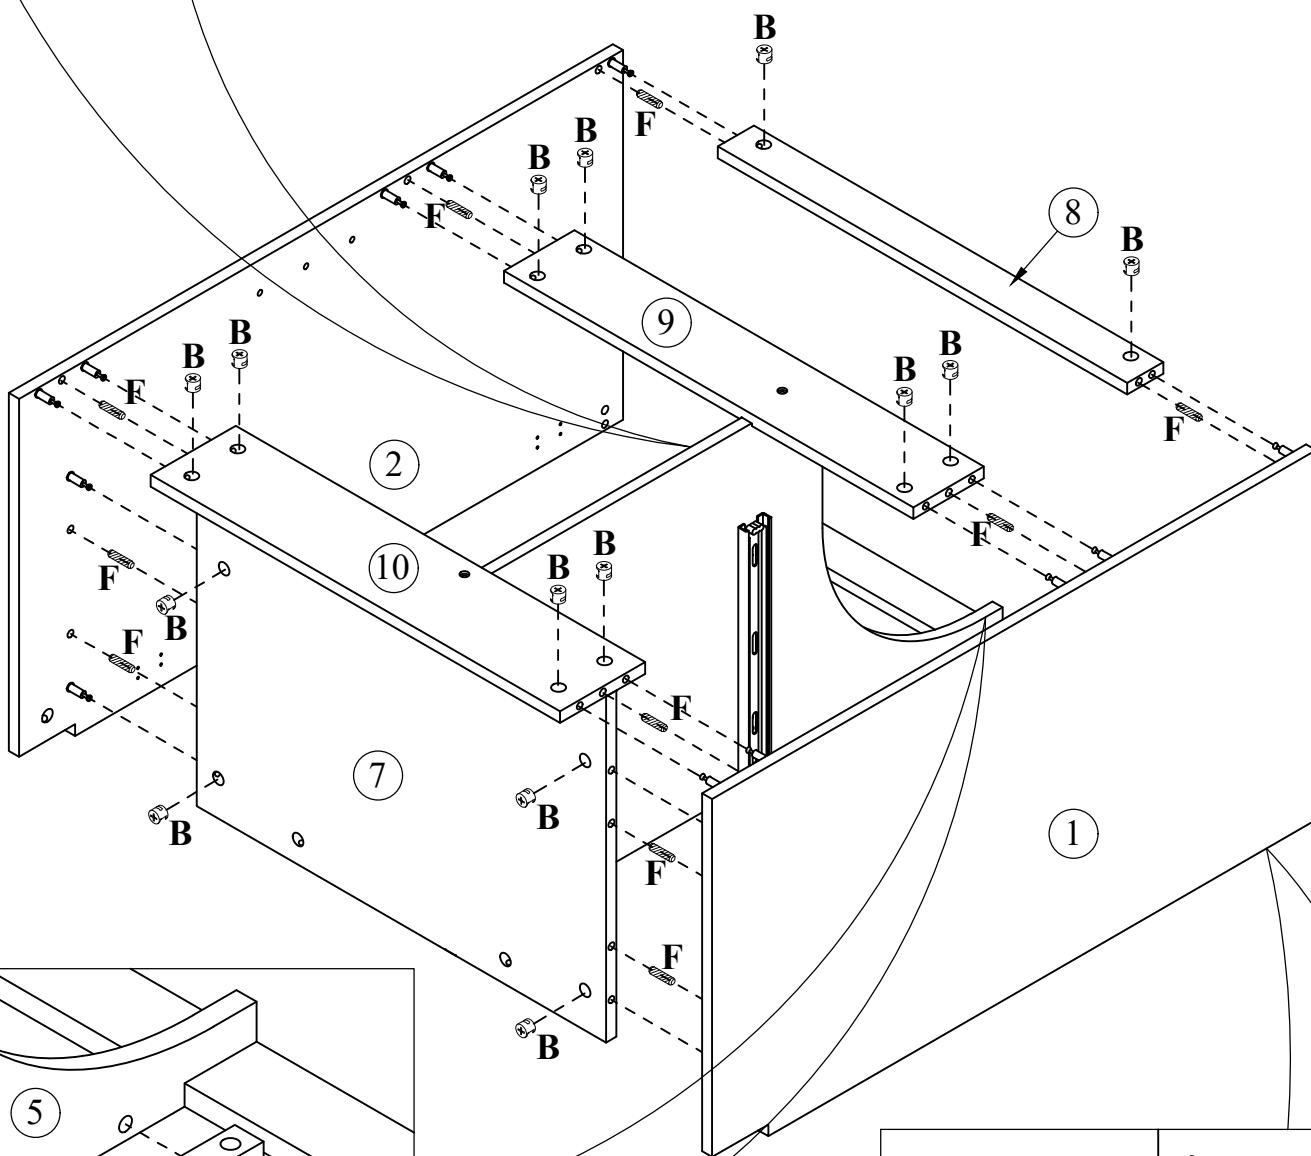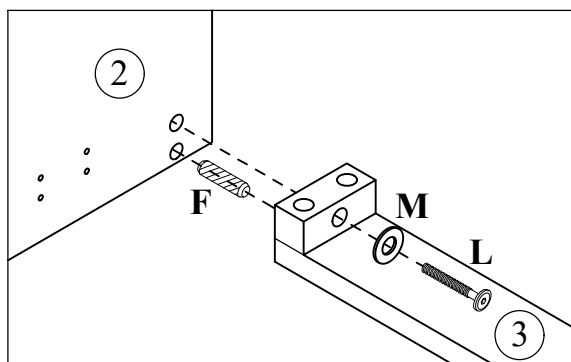
B	F	L	M
			
14PCS	12PCS	6PCS	6PCS

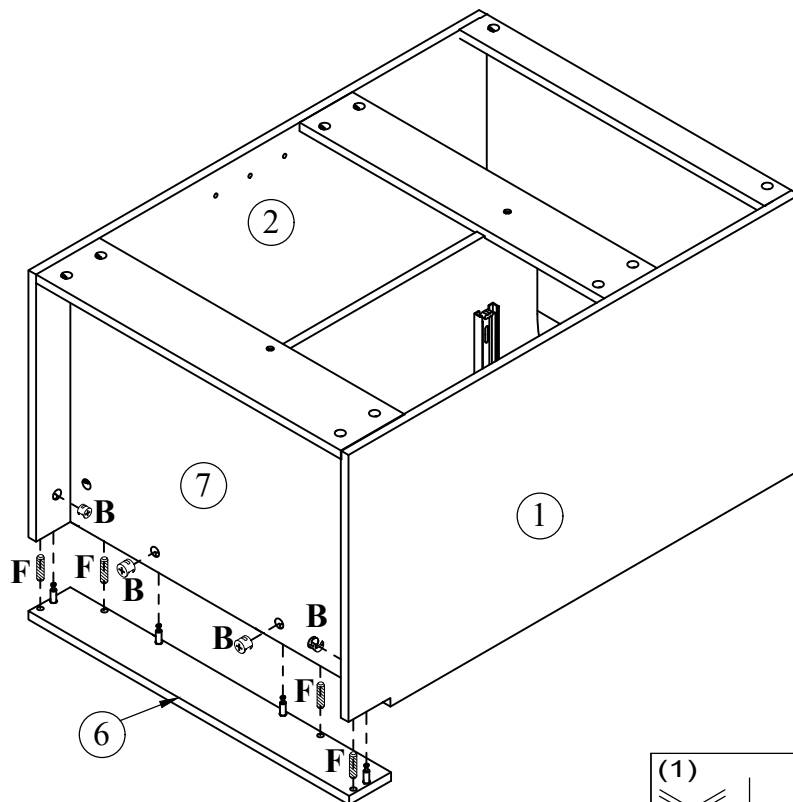


## STEP: 5





<b>B</b>		<b>F</b>	
<b>4PCS</b>		<b>4PCS</b>	

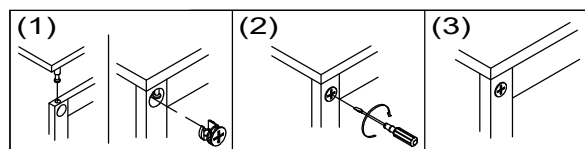




## STEP: 6

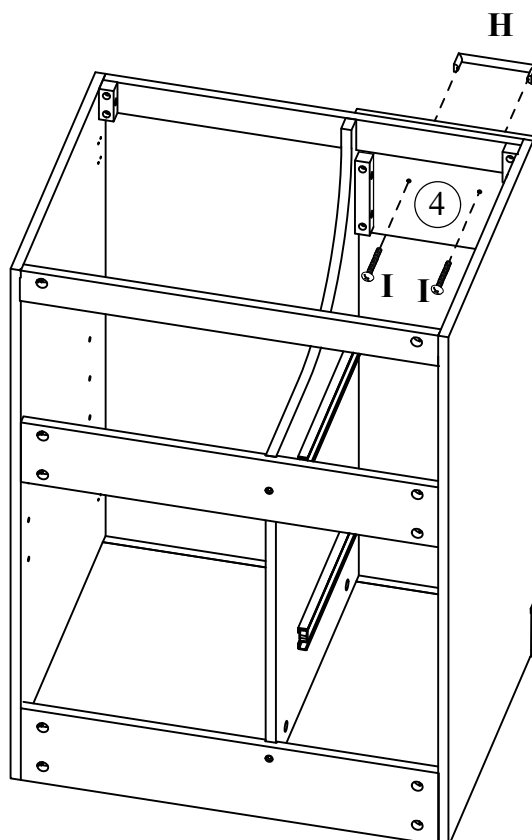

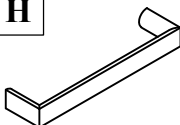
<b>H</b>		<b>I</b>	
<b>1PC</b>		<b>2PCS</b>	




## STEP: 7

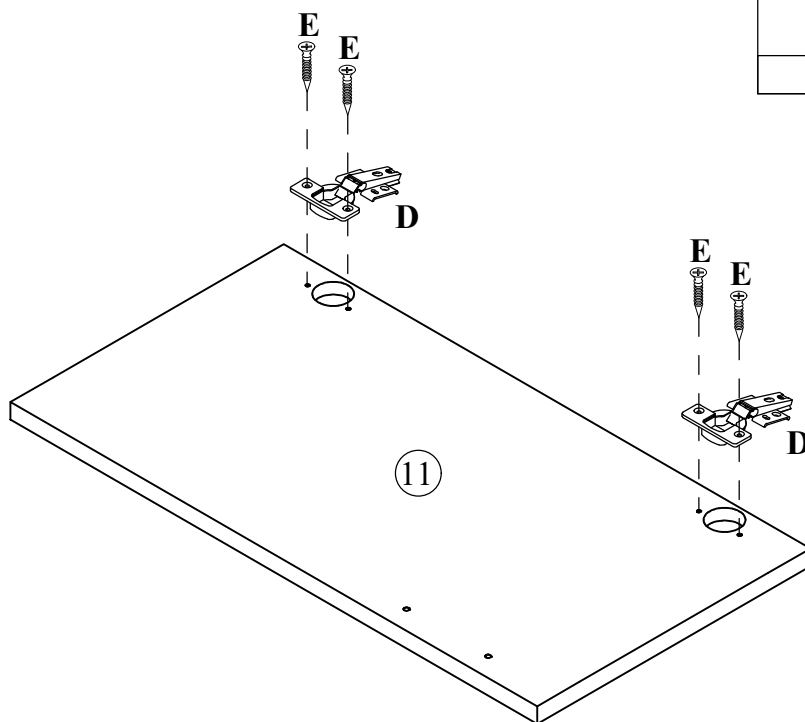


<b>D</b>	<b>E</b>
	
<b>2PCS</b>	<b>4PCS</b>

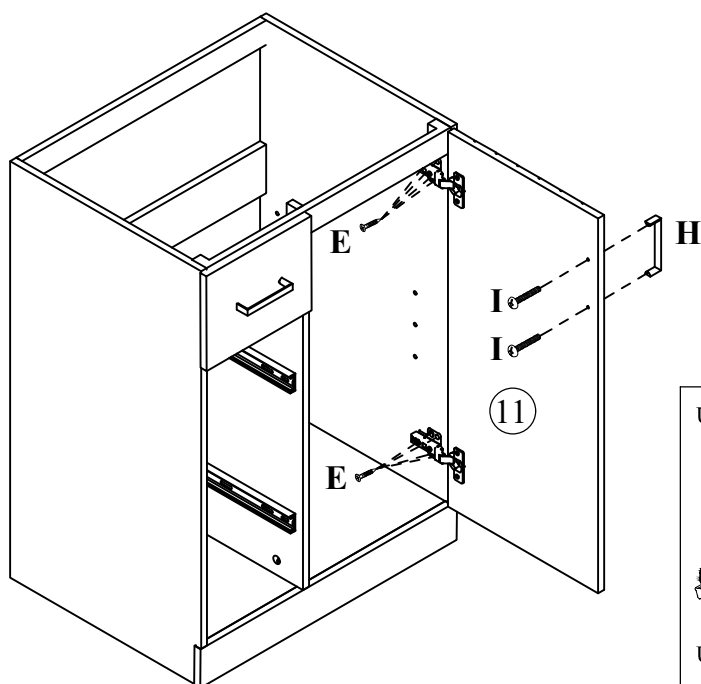



## STEP: 8

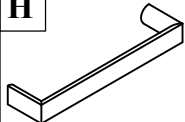

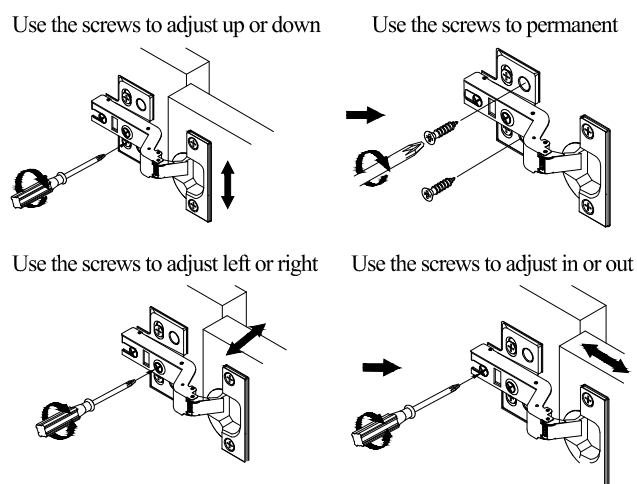
<b>E</b>	<b>H</b>	<b>I</b>
		
<b>8PCS</b>	<b>1PC</b>	<b>2PCS</b>




## STEP: 9

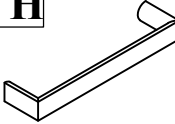
C	G	H	J
			
16PCS	16PCS	2PCS	4PCS


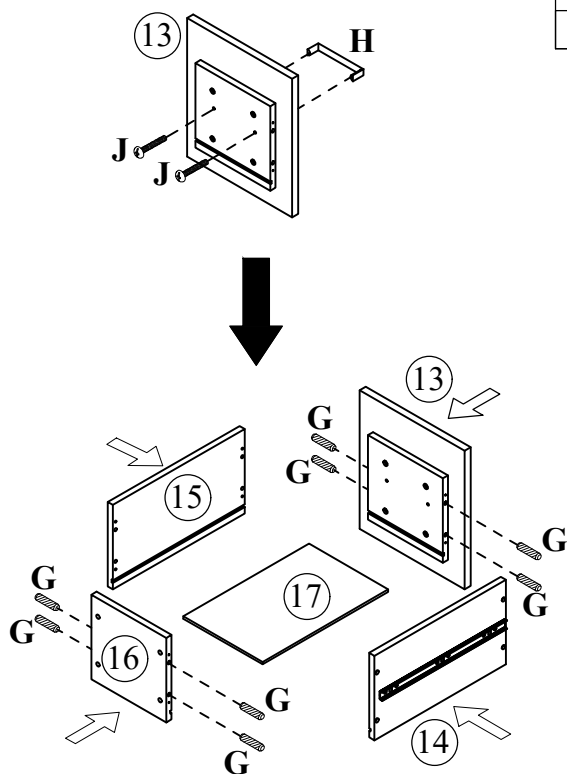


x2

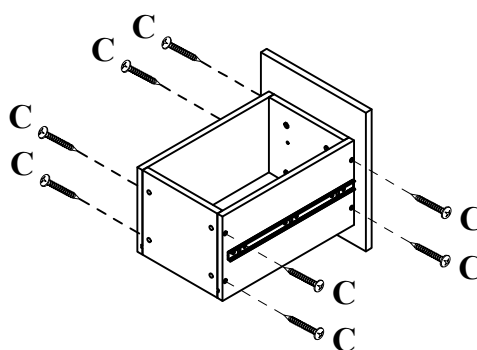


## STEP: 10



K

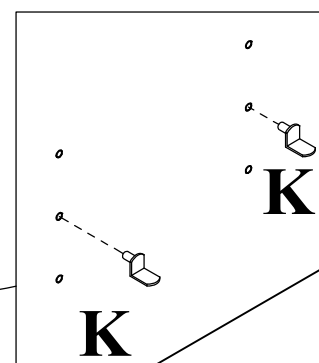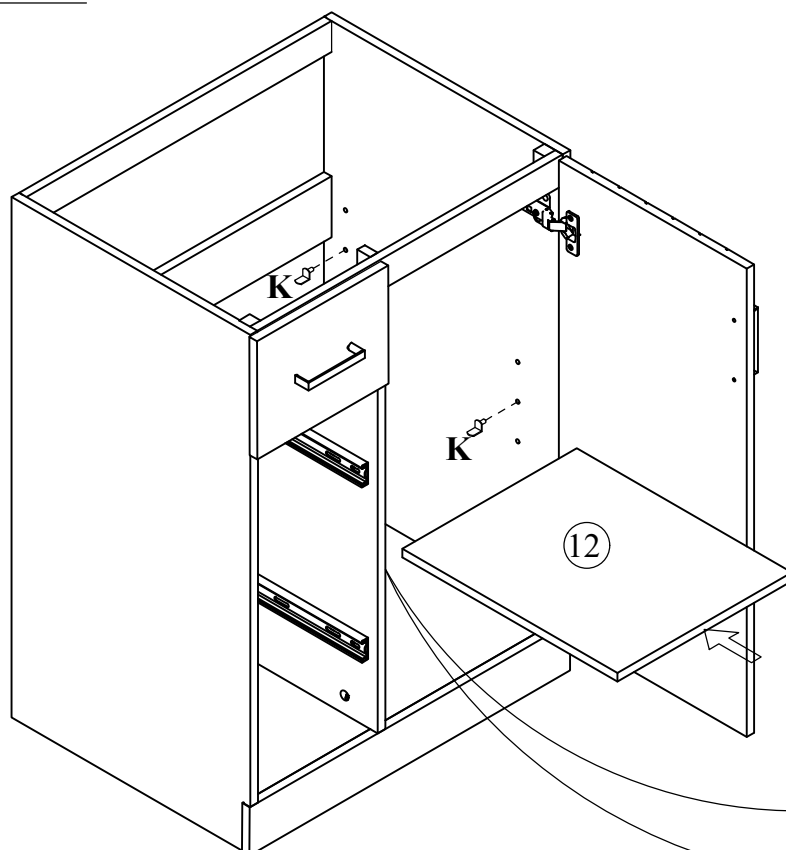4PCS

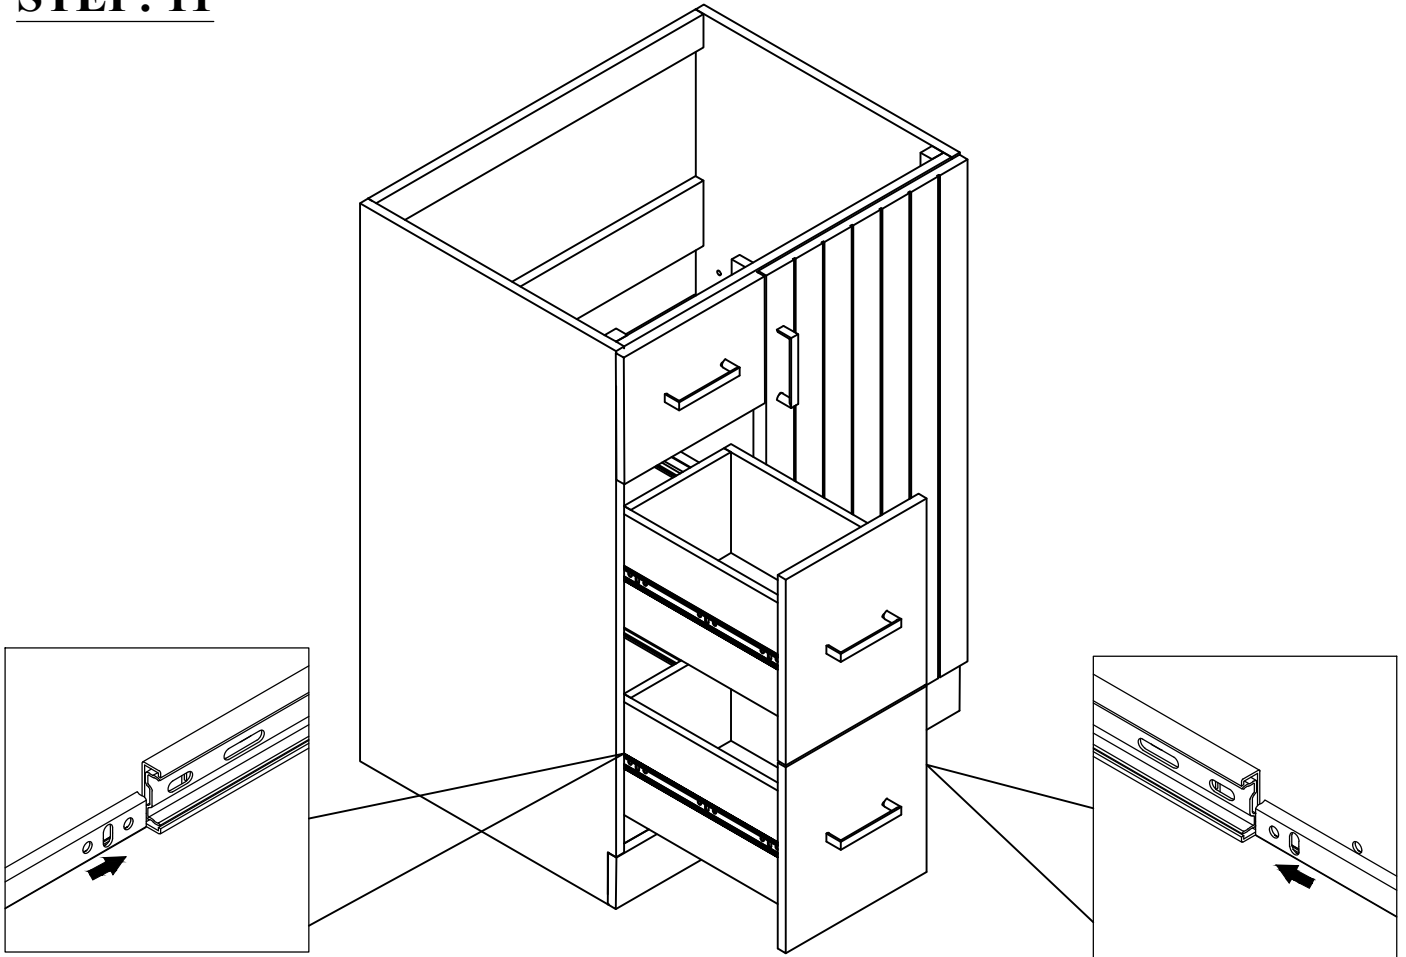

## **STEP: 11**

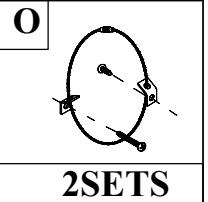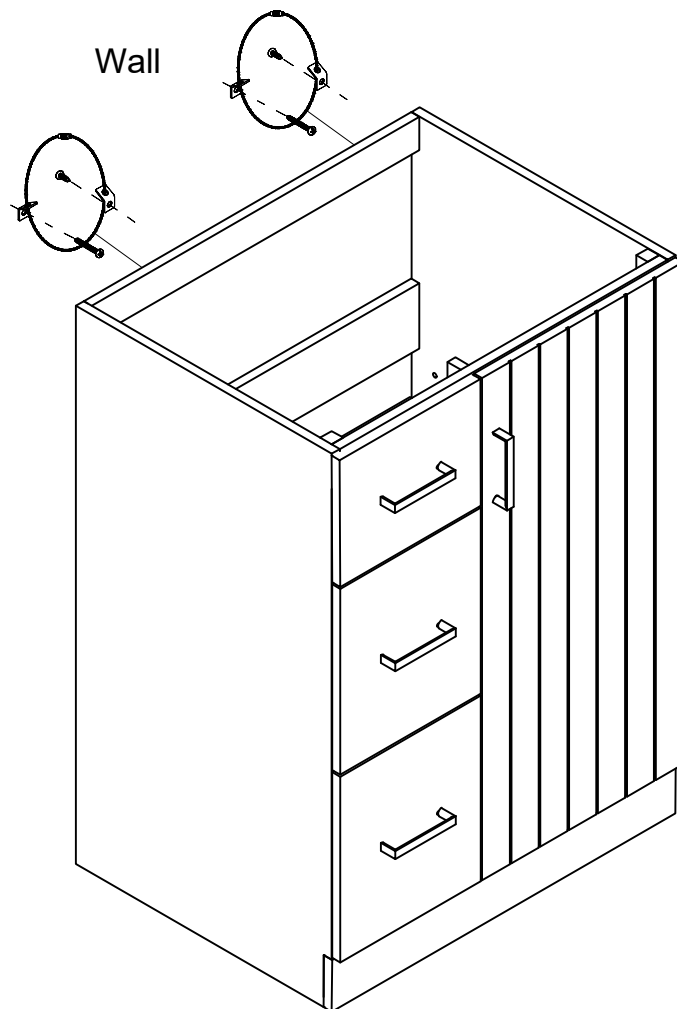


## **STEP: 12**




## **STEP: 13**

Install the sink on the cabinet with glue.  
Let stand for 24 hours

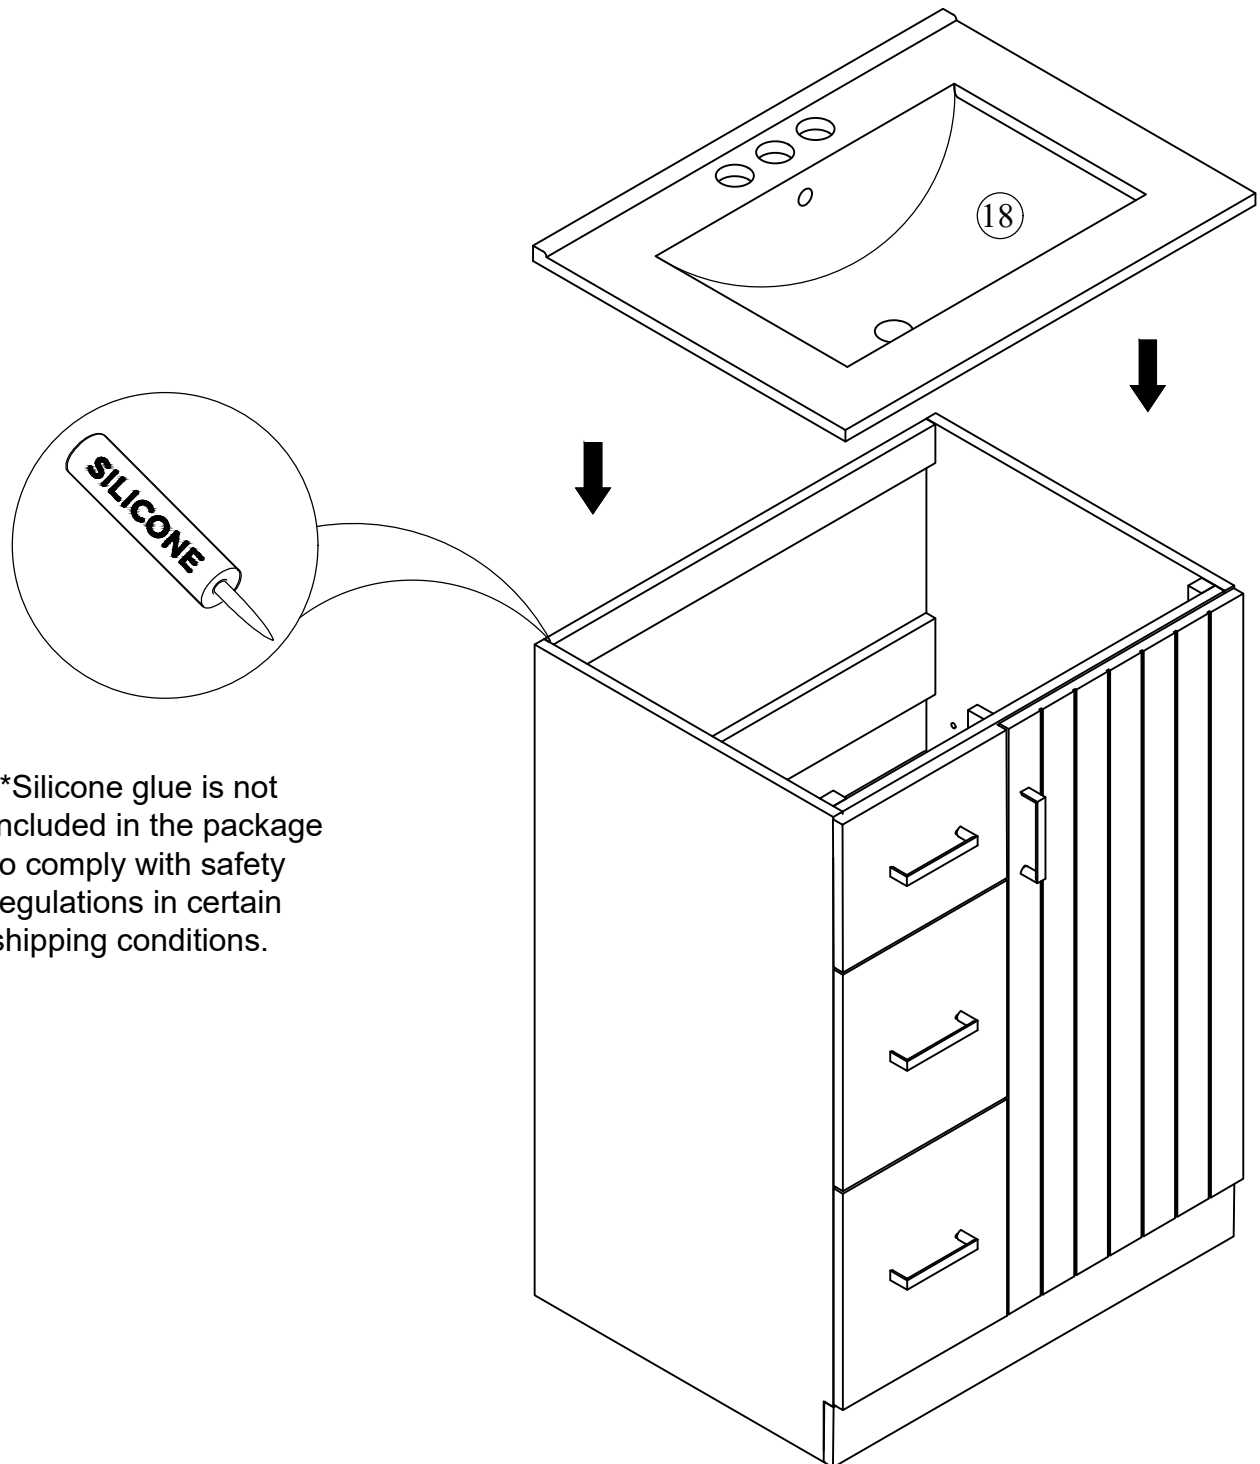


\*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

**STEP: 14**

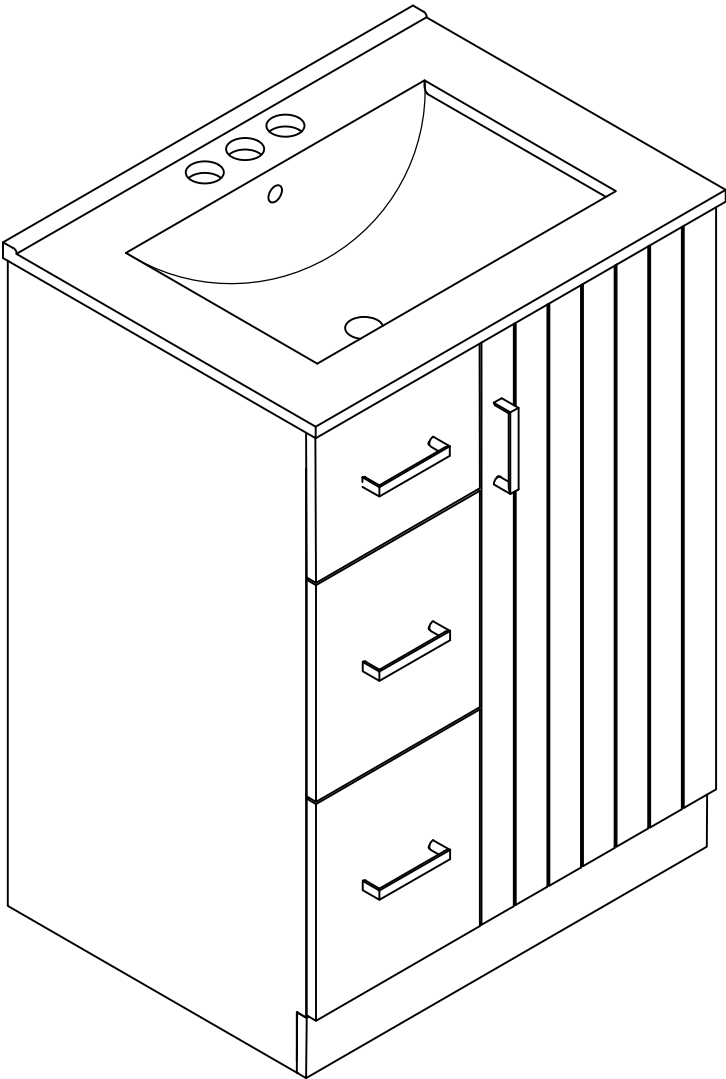

# HINGE ADJUSTMENTS

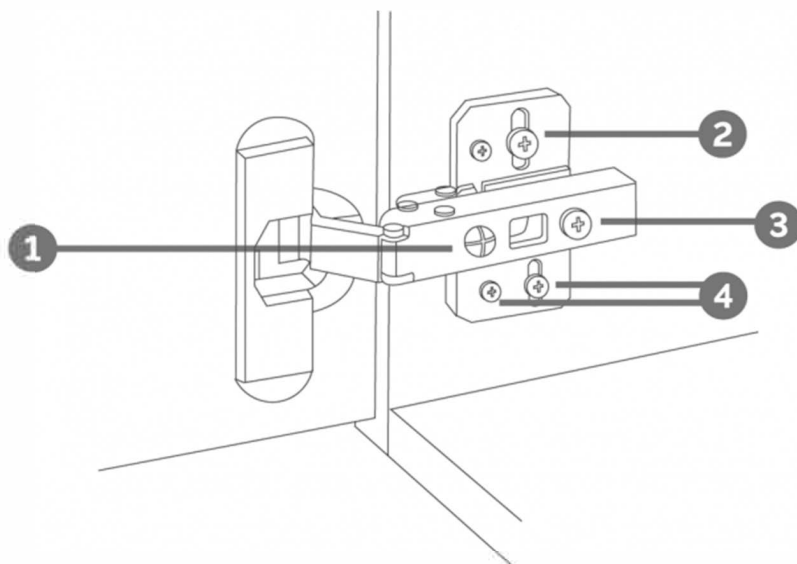


## ① Sideways / Tilt adjustment

Turn the screw

**clockwise** to move the door further away from the side of the cabinet

**anticlockwise** to move the door closer to the side of the cabinet

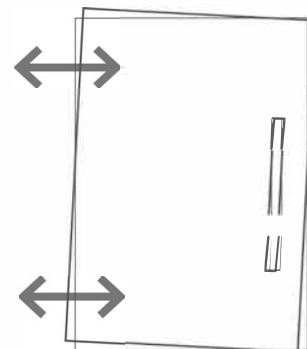


## ② ④ Height adjustment

While supporting the weight of the door, turn the screws

**clockwise** to move the door up

**anticlockwise** to move the door down

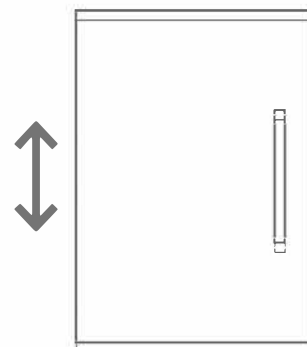

## ③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

**clockwise** to decrease the gap between the door and the cabinet

**anticlockwise** to increase the gap between the door and the cabinet

