


Ax1	Bx2(Lx1 Rx1)	Cx1
Dx4	Ex2 Big	Fx2 Small
Gx8	Hx7	lx7
M6X20mm	M6X30mm	
Jx1	Kx4	

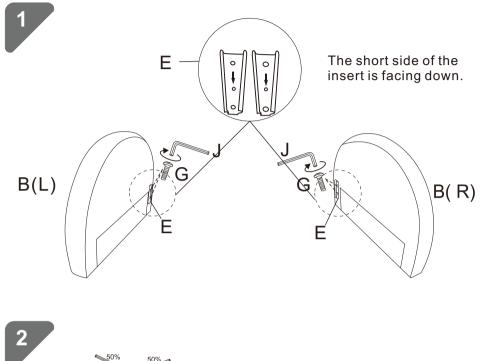

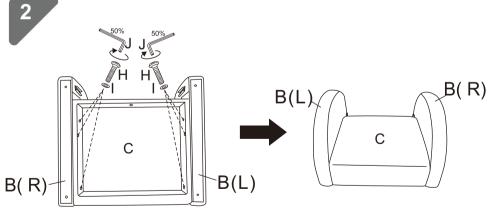

- 1. Screws should be only 50% tight.
- 2. First adjust the balance of the chair, then lock it 100%.

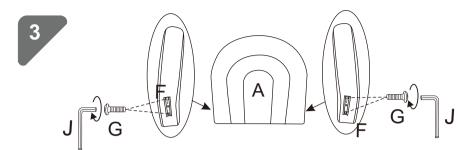

The short side of the insert is facing down.

