











Assembly Instructions

Caution : You must read this before you proceed


Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
 - ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊘  • Do not put hot items directly on furniture surface.
 - ⊘  • Do not clean furniture with harsh cleansers or polish.
 - ⊘  • Do not place furniture under direct sunlight.
 - ⊘  • Do not place furniture near heating or cooling vents.
 - ⊘  • Do not write on furniture without a padded barrier to protect the surface.
 - ⊘  • Do not place furniture outside . For indoor use only.
 - ⊘  • Stains may be removed with mild soap solution and damp cloth.
 - ⊘  • Children should not climb or jump on the furniture.
-
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.



Upholstered Bed

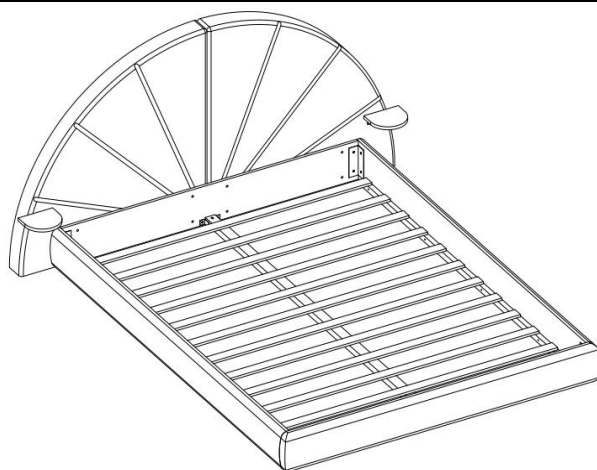N769P264907/N769P264908







Parts List








N769P264907

Label	Picture	Description	QTY
A		Headboard A	1
B		Headboard B	1

Parts List











N769P264908

C		Bed Foreboard	1
D		Bedside-D	1
E		Bedside-E	1
F		Bed End	1

G		Middle Pallet	1
H		Bed Slat	1
I		Shelves-I	1
J		Shelves-J	1
K		L-Shaped Iron	4
L		Iron Bracket	2
M		Small L-shaped iron	2


Hardware

N769P264908

Label	Picture	Description	QTY
①		Bolt Ø1/4" x 2"	8+1
②		Bolt Ø1/4" x 3/4"	20+1
③		Bolt Ø1/4" x 1-1/2"	2+1
④		Screw #8x1"	6+1
⑤		Bolt Ø1/4" x 1/2"	4+1
⑥		Spring Washer Ø1/4"	32+1
⑦		Flat Washer Ø1/4"	34+1
⑧		Allen Wrench 4.0x21x57	1
⑨		Bolt Ø1/4" x 2-1/2"	8+1
⑩		Screwdriver (Not provided)	1

Assembly Preparation

Before
Beginnin
g
Assembly
:

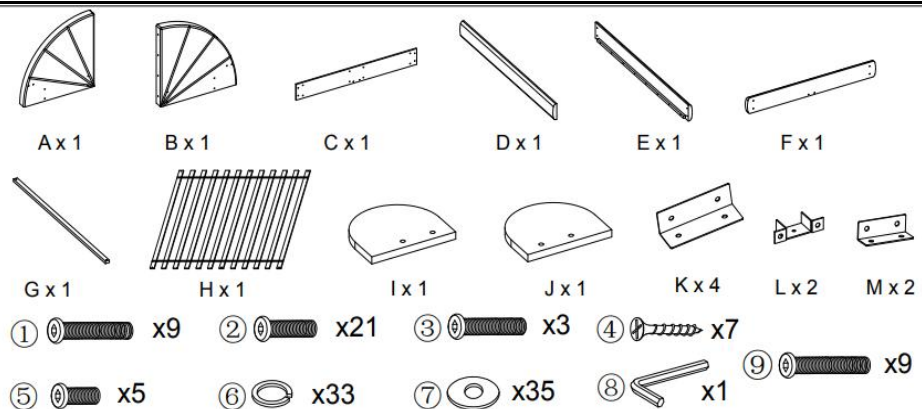

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

Assembly Steps

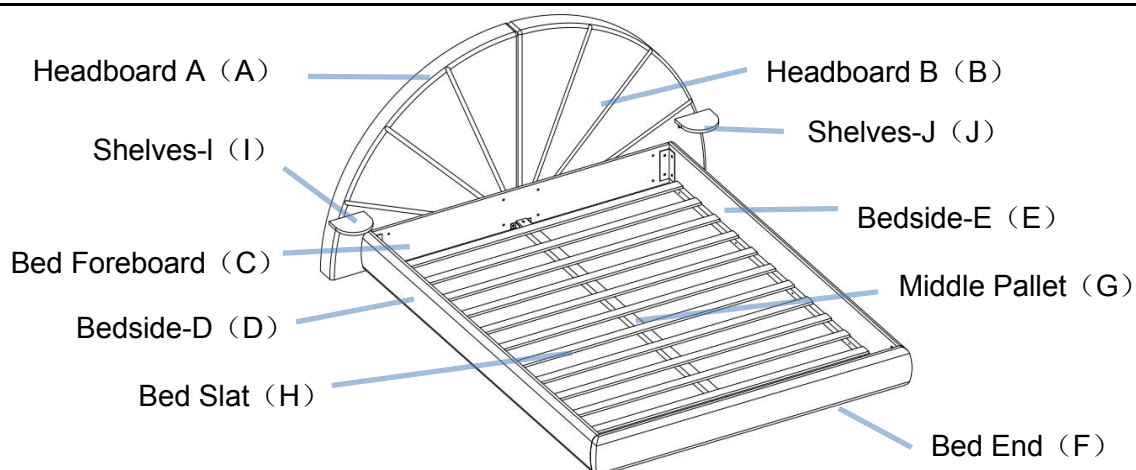


This Upholstered Bed has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Upholstered Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

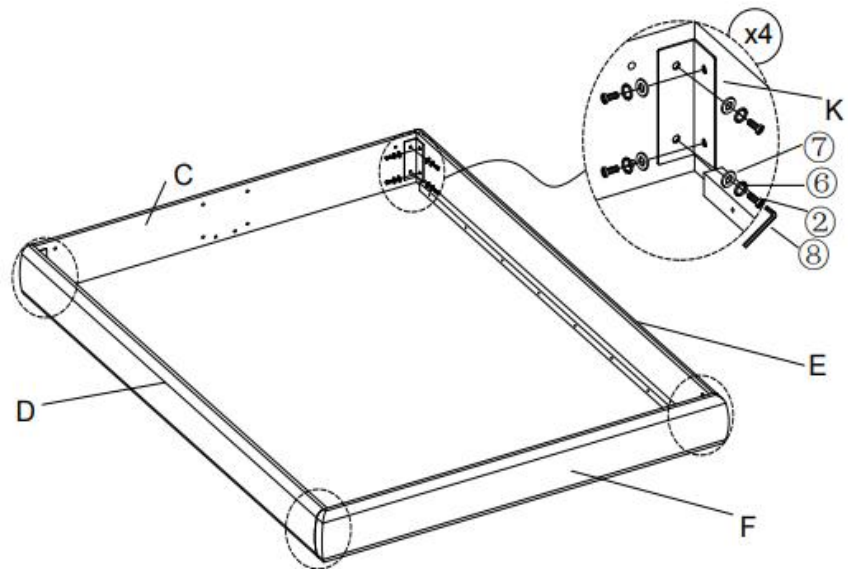


Attached L-Shaped Iron (K) to BedSide-D (D) ,BedSide-E (E) ,Bed End (F) and Bed Foreboard (C) by using Bolts (2) 、 Spring Washers (6) 、 Flat Washers (7) and Allen Wrench (8) .

Step 2

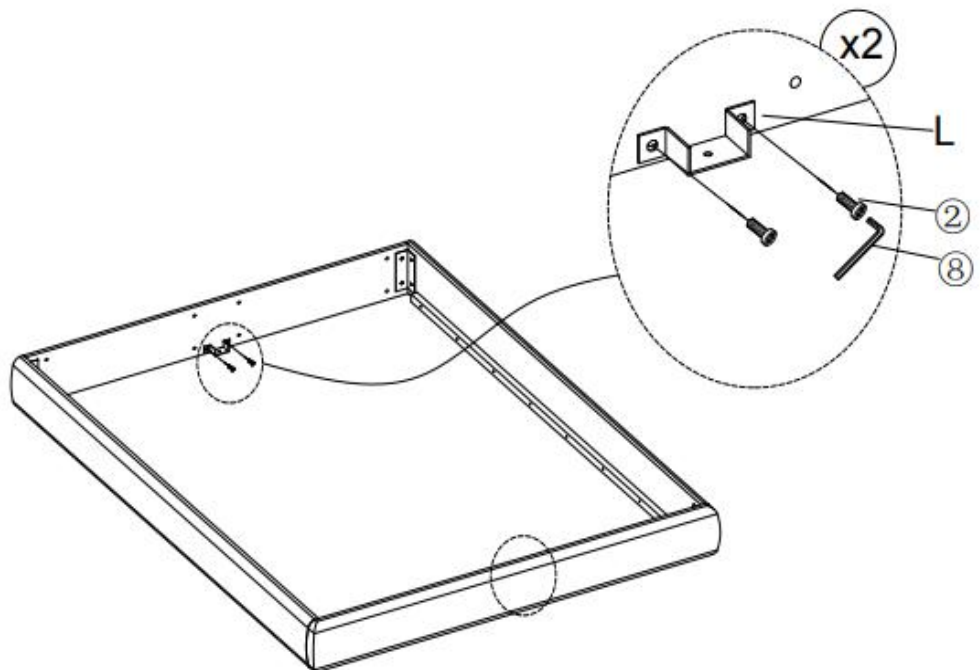


Attached Iron Bracket (L) to Bed End (F) and Bed Foreboard (C) by using Bolts (2) and Allen Wrench (8) .

Step 3

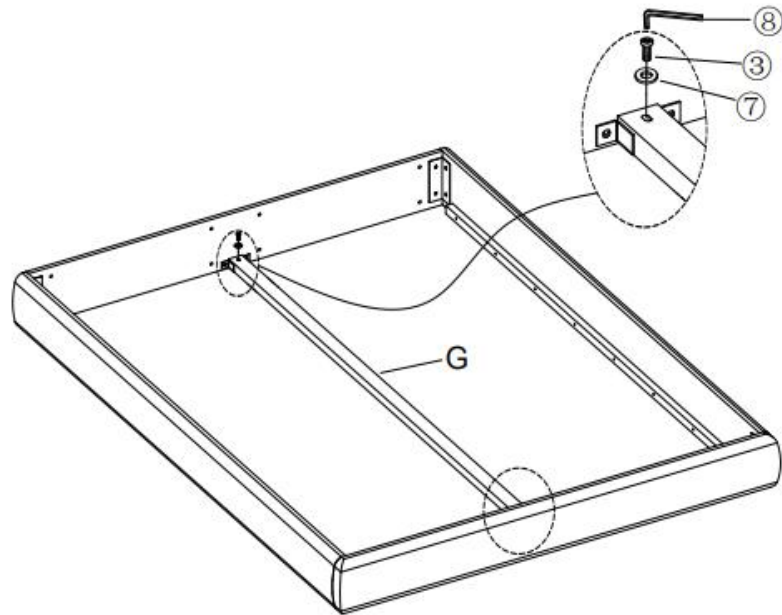


Attached Middle Pallet (G) to Iron Bracket (L) by using Bolts (③) 、 Flat Washers (⑦) and Allen Wrench (⑧) .

Step 4

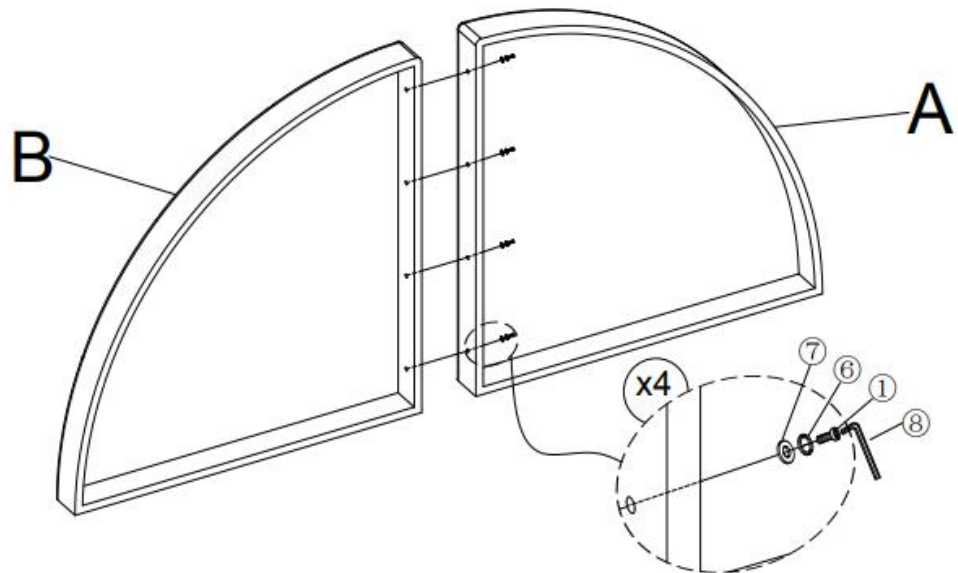


Attached Headboard A (A) to Headboard B (B) by using Bolts (①) 、 Spring Washers (⑥) 、 Flat Washers (⑦) and Allen Wrench (⑧) .

Step 5

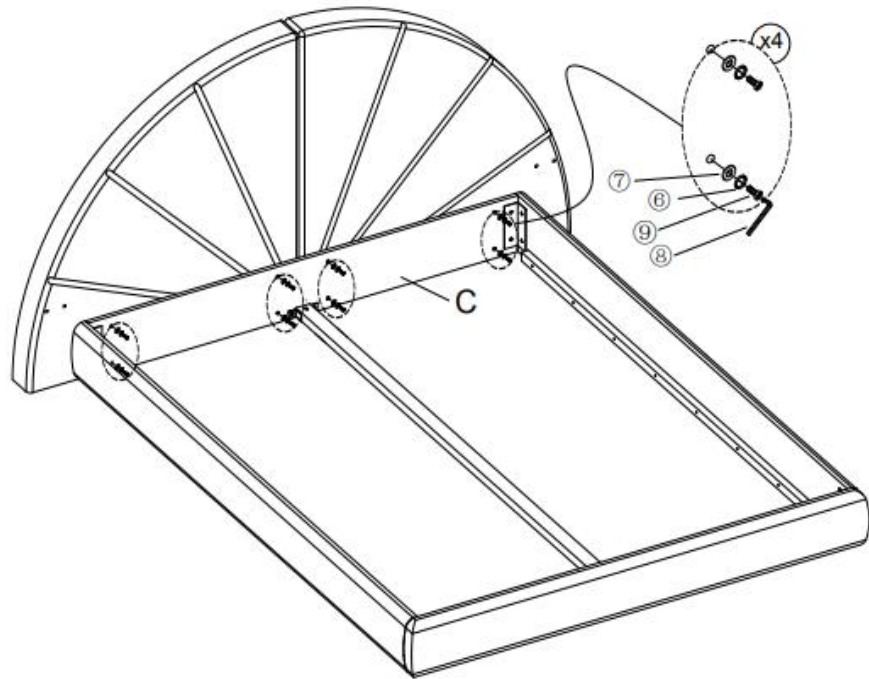


Attached Bed Foreboard (C) to Headboard by using Bolts (9) , Spring Washers (6) , Flat Washers (7) and Allen Wrench (8) .

Step 6

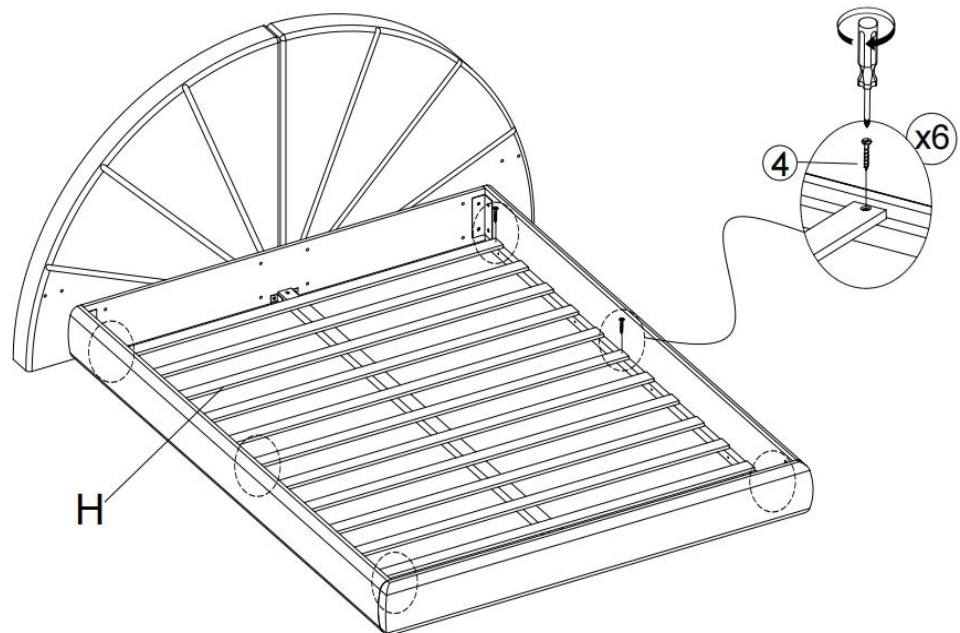


Attached Bed Slat (H) to BedSide-D (D) and BedSide-E (E) by using Screw (4) ,as pictured above.

Step 7

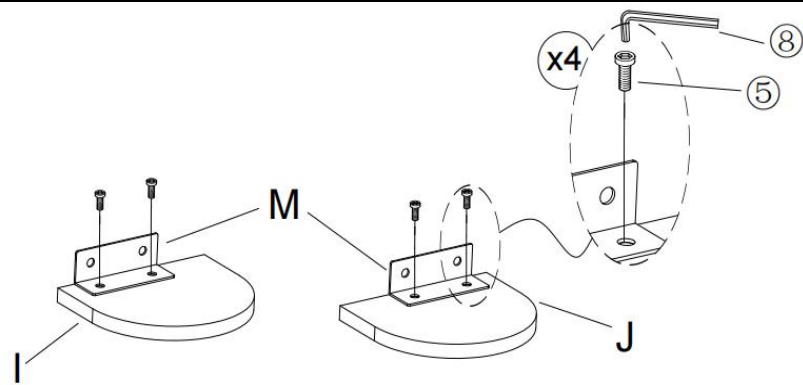


Attached Small L-shaped Iron (M) to Shelves-I(I) and Shelves-J(J) by using Bolt (⑤) and Allen Wrench (⑧), as pictured above.

Step 8

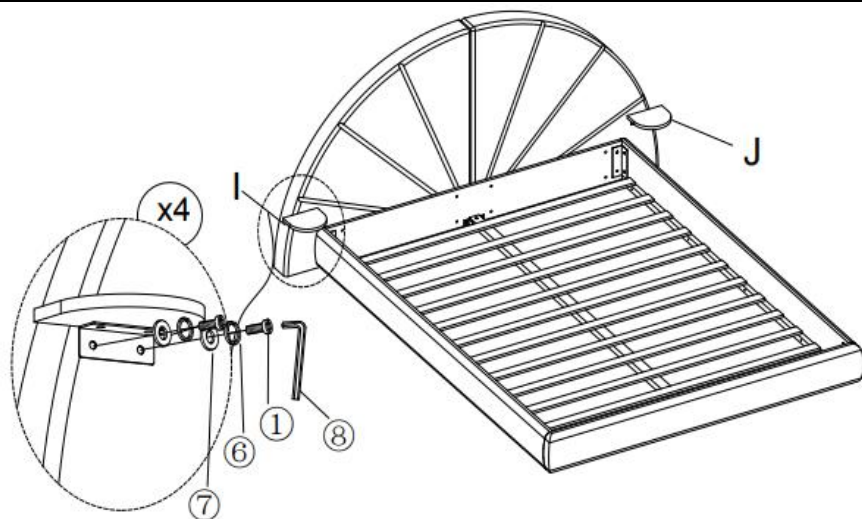

Attached Shelves-I(I) and Shelves-J(J) to Headboard (A&B) by using Bolt (①), Spring Washers(⑥)、Flat Washers (⑦) and Allen Wrench (⑧), as pictured above.

Step 9

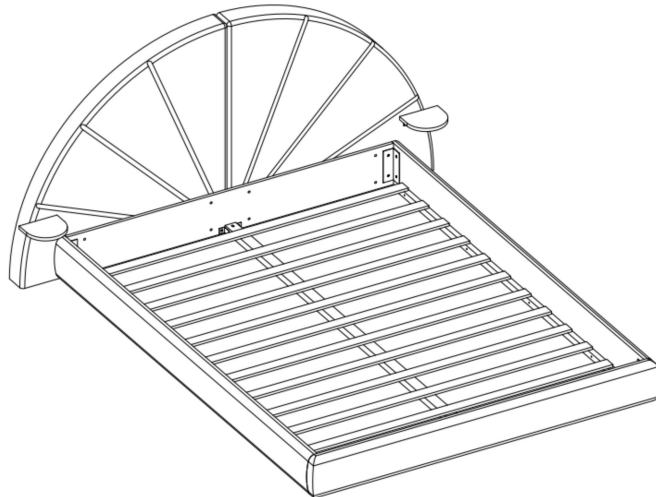

Your Upholstered Bed is ready for use.
This Upholstered Bed can only be used on a flat, level surface.