Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



Not for commercial use. For residential use only.



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



• Do not place furniture near heating or cooling vents.



• Do not write on furniture without a padded barrier to protect the surface.



• Do not place furniture outside . For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



• Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.


Please look in carton for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.

Ottoman N769P294937 Parts List Label Description QTY **Picture** Α 4 Leg Armrest 2 В C **Seat Frame** 1 D Cushion 1 Hardware Description QTY Label **Picture** Bolt 16+1 1 (ϕ) Ø1/4"×1-3/4" Spring Washer 16+1 2 Ø1/4" Flat Washer (3) 16+1 Ø1/4"x 16mmx 1.5 Allen Wrench 4 1 4.0×21×57

Assembly Preparation

Before Beginnin g Assembly

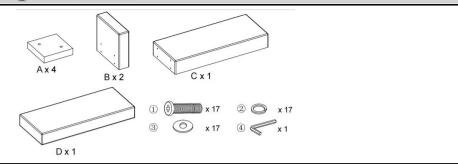



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


Assembly Steps

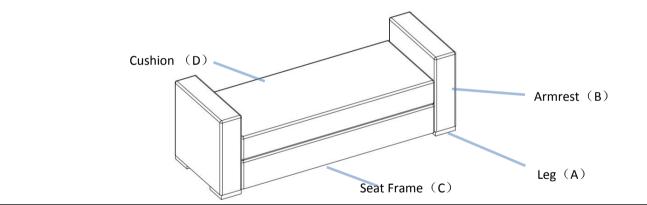


This ottoman has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the ottoman parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1 Ax 4 Bx 2


Attach the Leg (A) to Armrest(B) by using Bolts(1), Spring Washer (2), Flat Washers(3) with Allen Wrench(4).

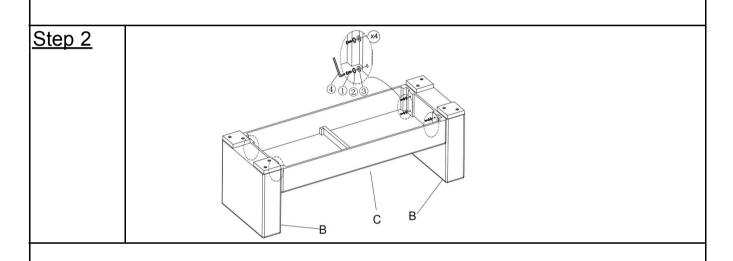


Attach the Armrest(B) to Seat Frame(C) by using Bolts(1),Spring Washer(2),Flat Washers(3) with Allen Wrench(4).

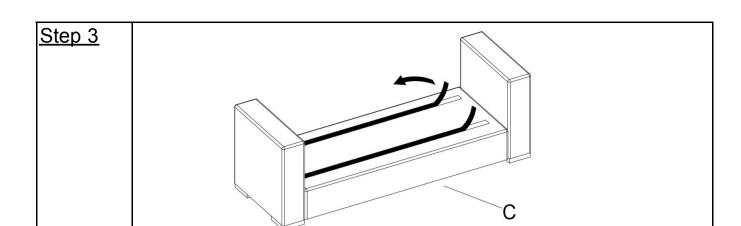

Tear off the tape from the Seat Frame(C).

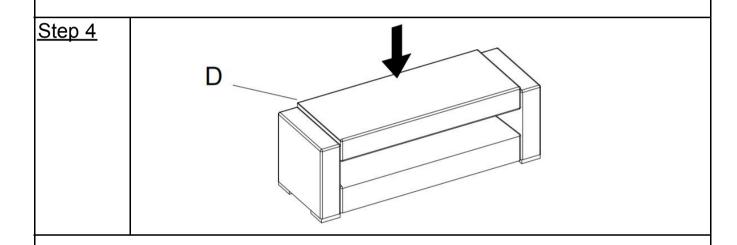

Install Cushion(D) on Seat Frame(C).

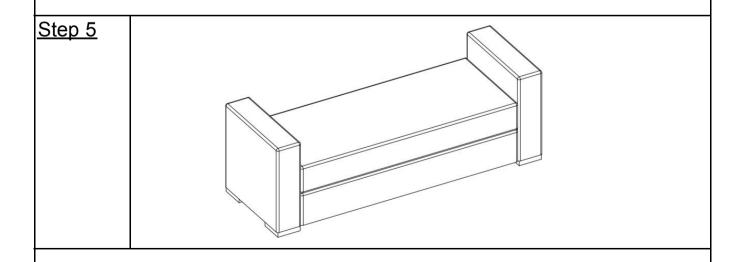

Your ottoman is ready for use.

This ottoman can only be used on a flat, level surface.