


ZT-DINA-MW-48
ZT-DINA-WH-48

ASSEMBLY INSTRUCTIONS

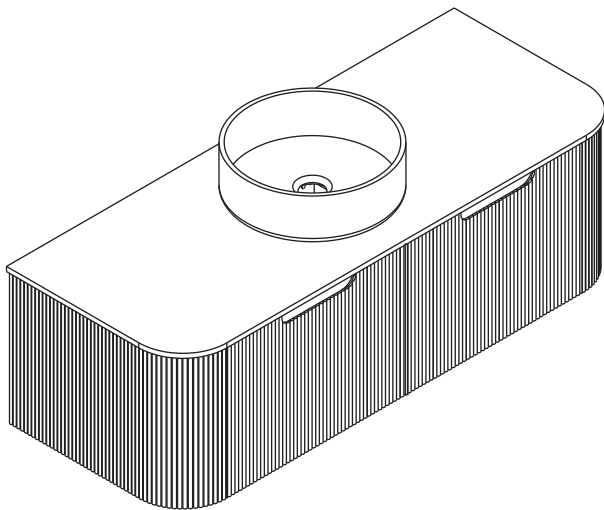


Bathroom Vanity

Notice:


- 1. Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, please contact our customer service.
- 4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.



Recommended installers : 2

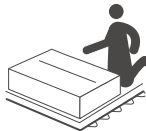

Put a carpet on the floor before unpacking


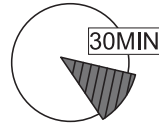


Estimate installation time:
30 minutes


| Item no. | Reference Image | Qty |
|----------|-----------------|-----|
| A | | x1 |
| B | | x1 |
| C | | x1 |
| 1 | | x4 |

| Item no. | Reference Image | Qty |
|----------|-----------------|-----|
| 2 | | x4 |
| 3 | | x4 |
| 4 | | x6 |
| | | |


1

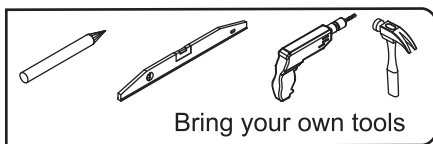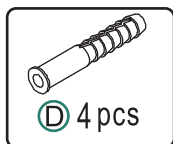

Solid color cabinet hanging
hole size

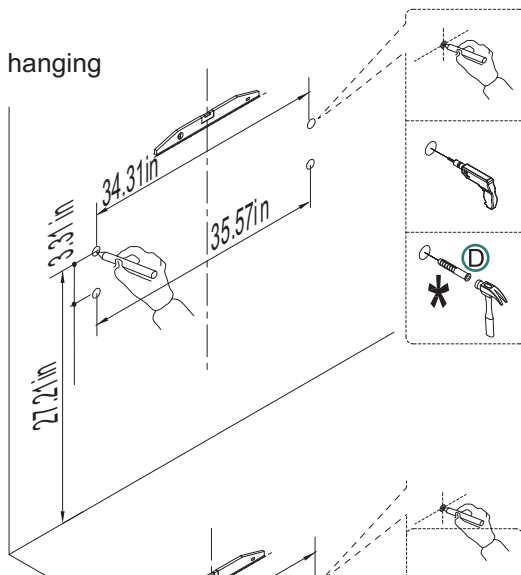


Wood grain cabinet hanging
wall hole size

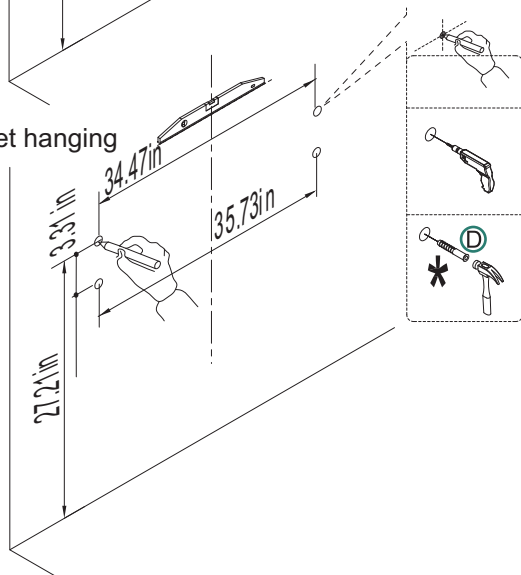

WARNING: To prevent tipping over, this product must be used with the included wall mounting device.

WARNING: Evaluate the suitability of the wall to ensure that the fixtures can withstand the forces that occur.


2

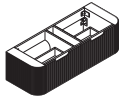




① 1pc



② 4pcs

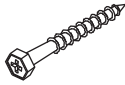


③ 4pcs

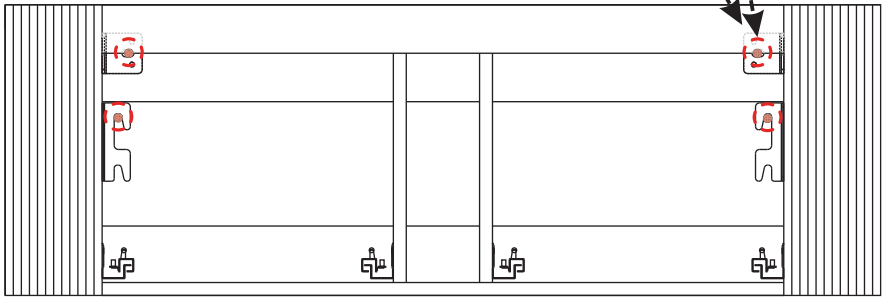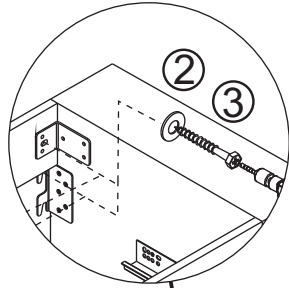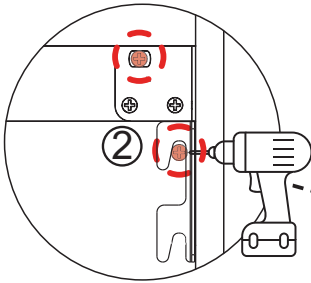


3



Ⓐ 1pc

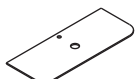

Ⓑ 1pc

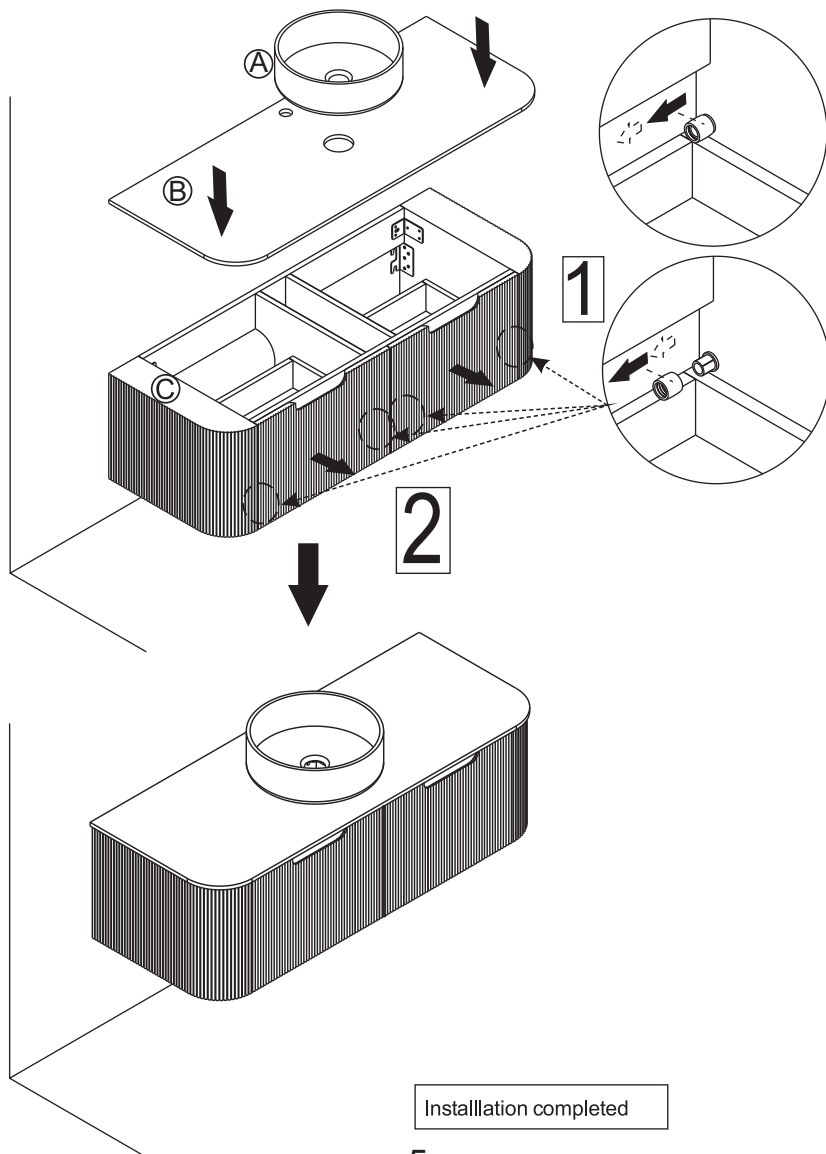


Installation completed


4

Installation of drain assembly

Turn the screw at the bottom of the guide rail counterclockwise!





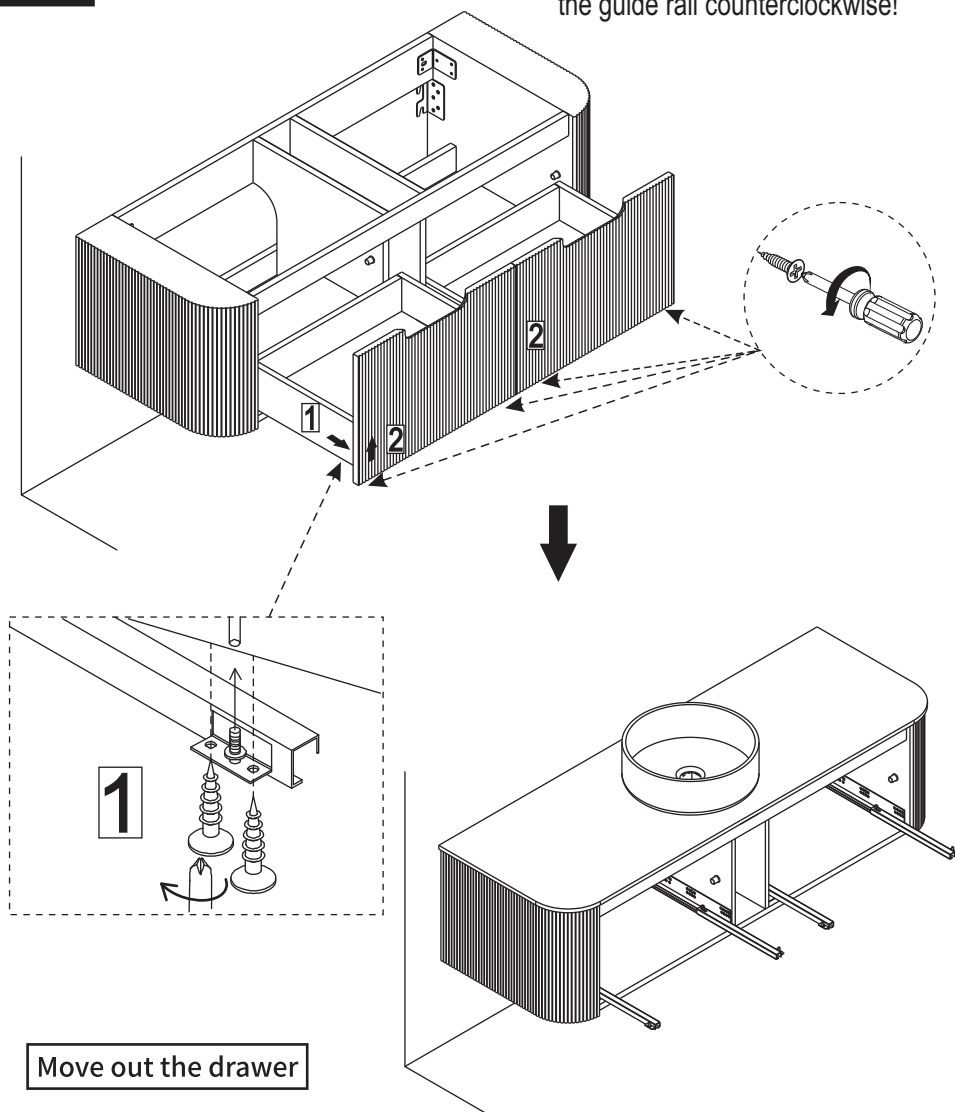


Move out the drawer

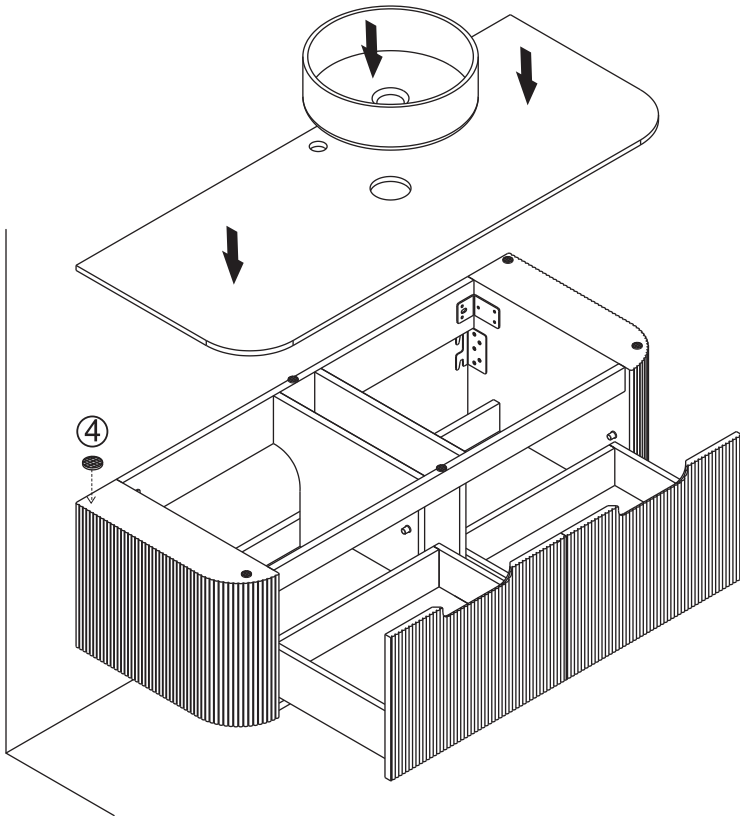

Installation of drain assembly

6

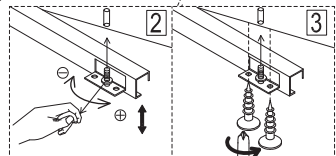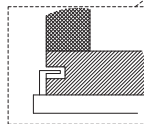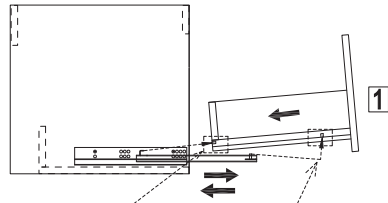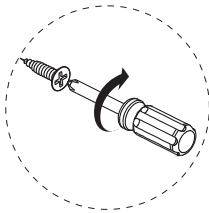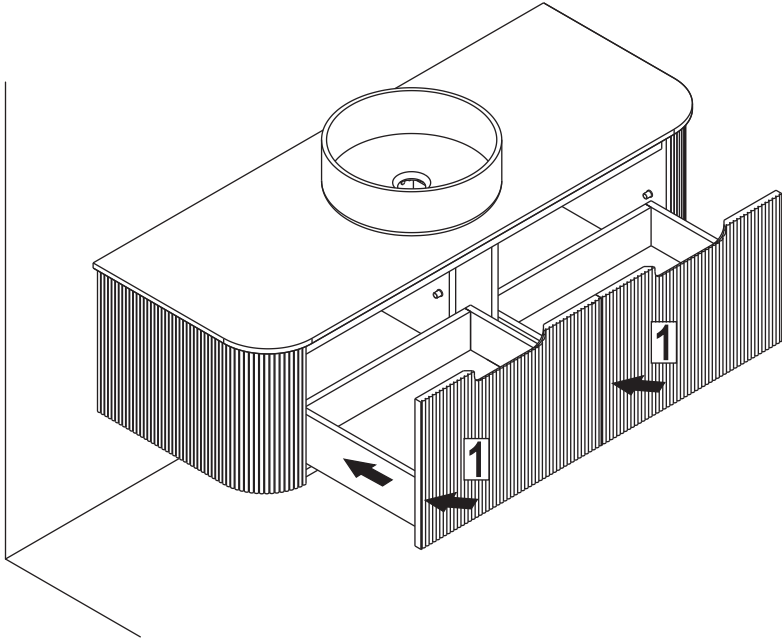

Installation completed