


COFFEE TABLE

Assembly Instructions - Please keep for future reference

N724P290058

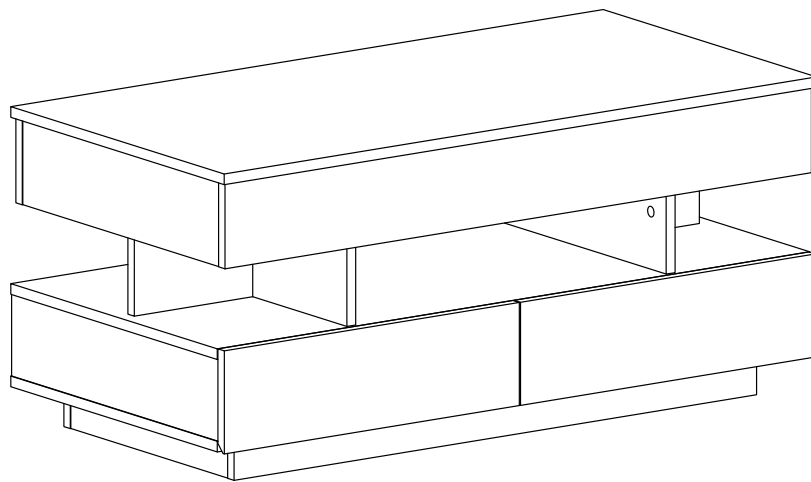

Dimensions

Width-39.37inch

Depth-19.69inch

Height-17.72inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions






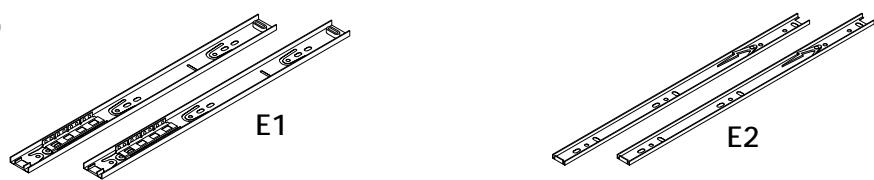


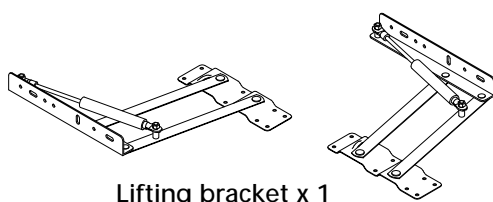
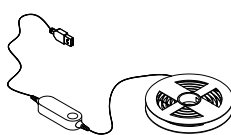

To help prevent product toppling over please follow the below steps:-


Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A1  Cam Bolt x (61+2)	A2  Cam Lock x (61+2)	B  8*40mm Dowel x (42+2)	C  3.5*14mm Screw x (44+2)
D  3.5*35mm Screw x 8	E  400mm Runner x 2		
F  7*50mm Dowel x (17+1)	G  Ground nail x 8	H  Lifting bracket x 1	
J  LED x 1	K  Hole to stick x 40		

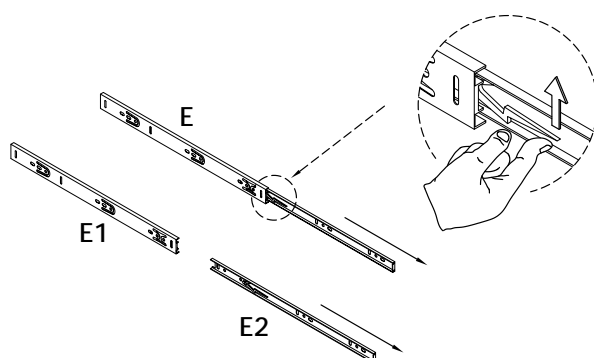

Tools required

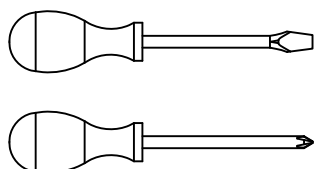

Phillips screwdriver
(medium & large)


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

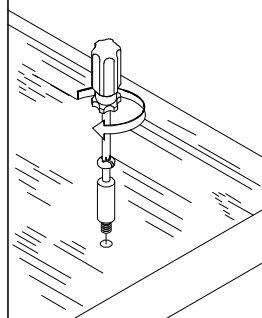

Step 2

Push the male camlock into the entry hole.

2

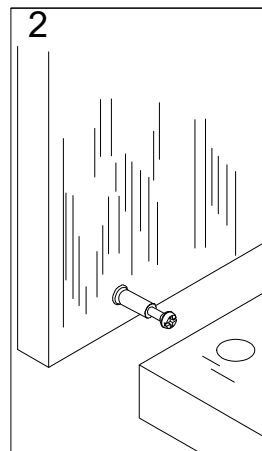


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

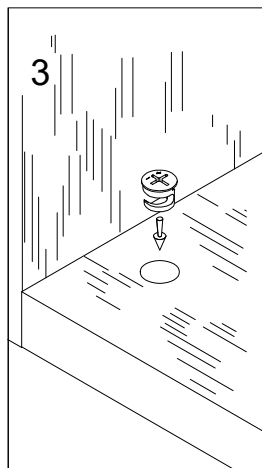


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.





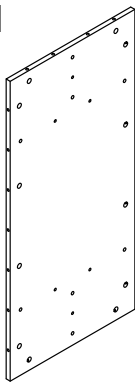


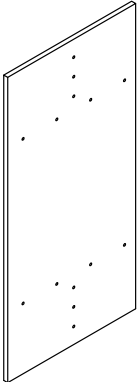





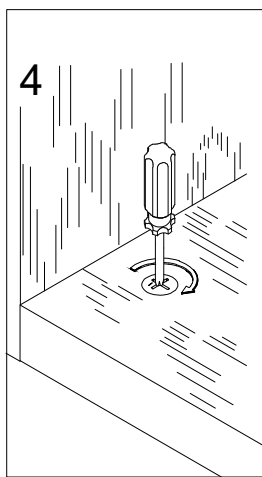


4

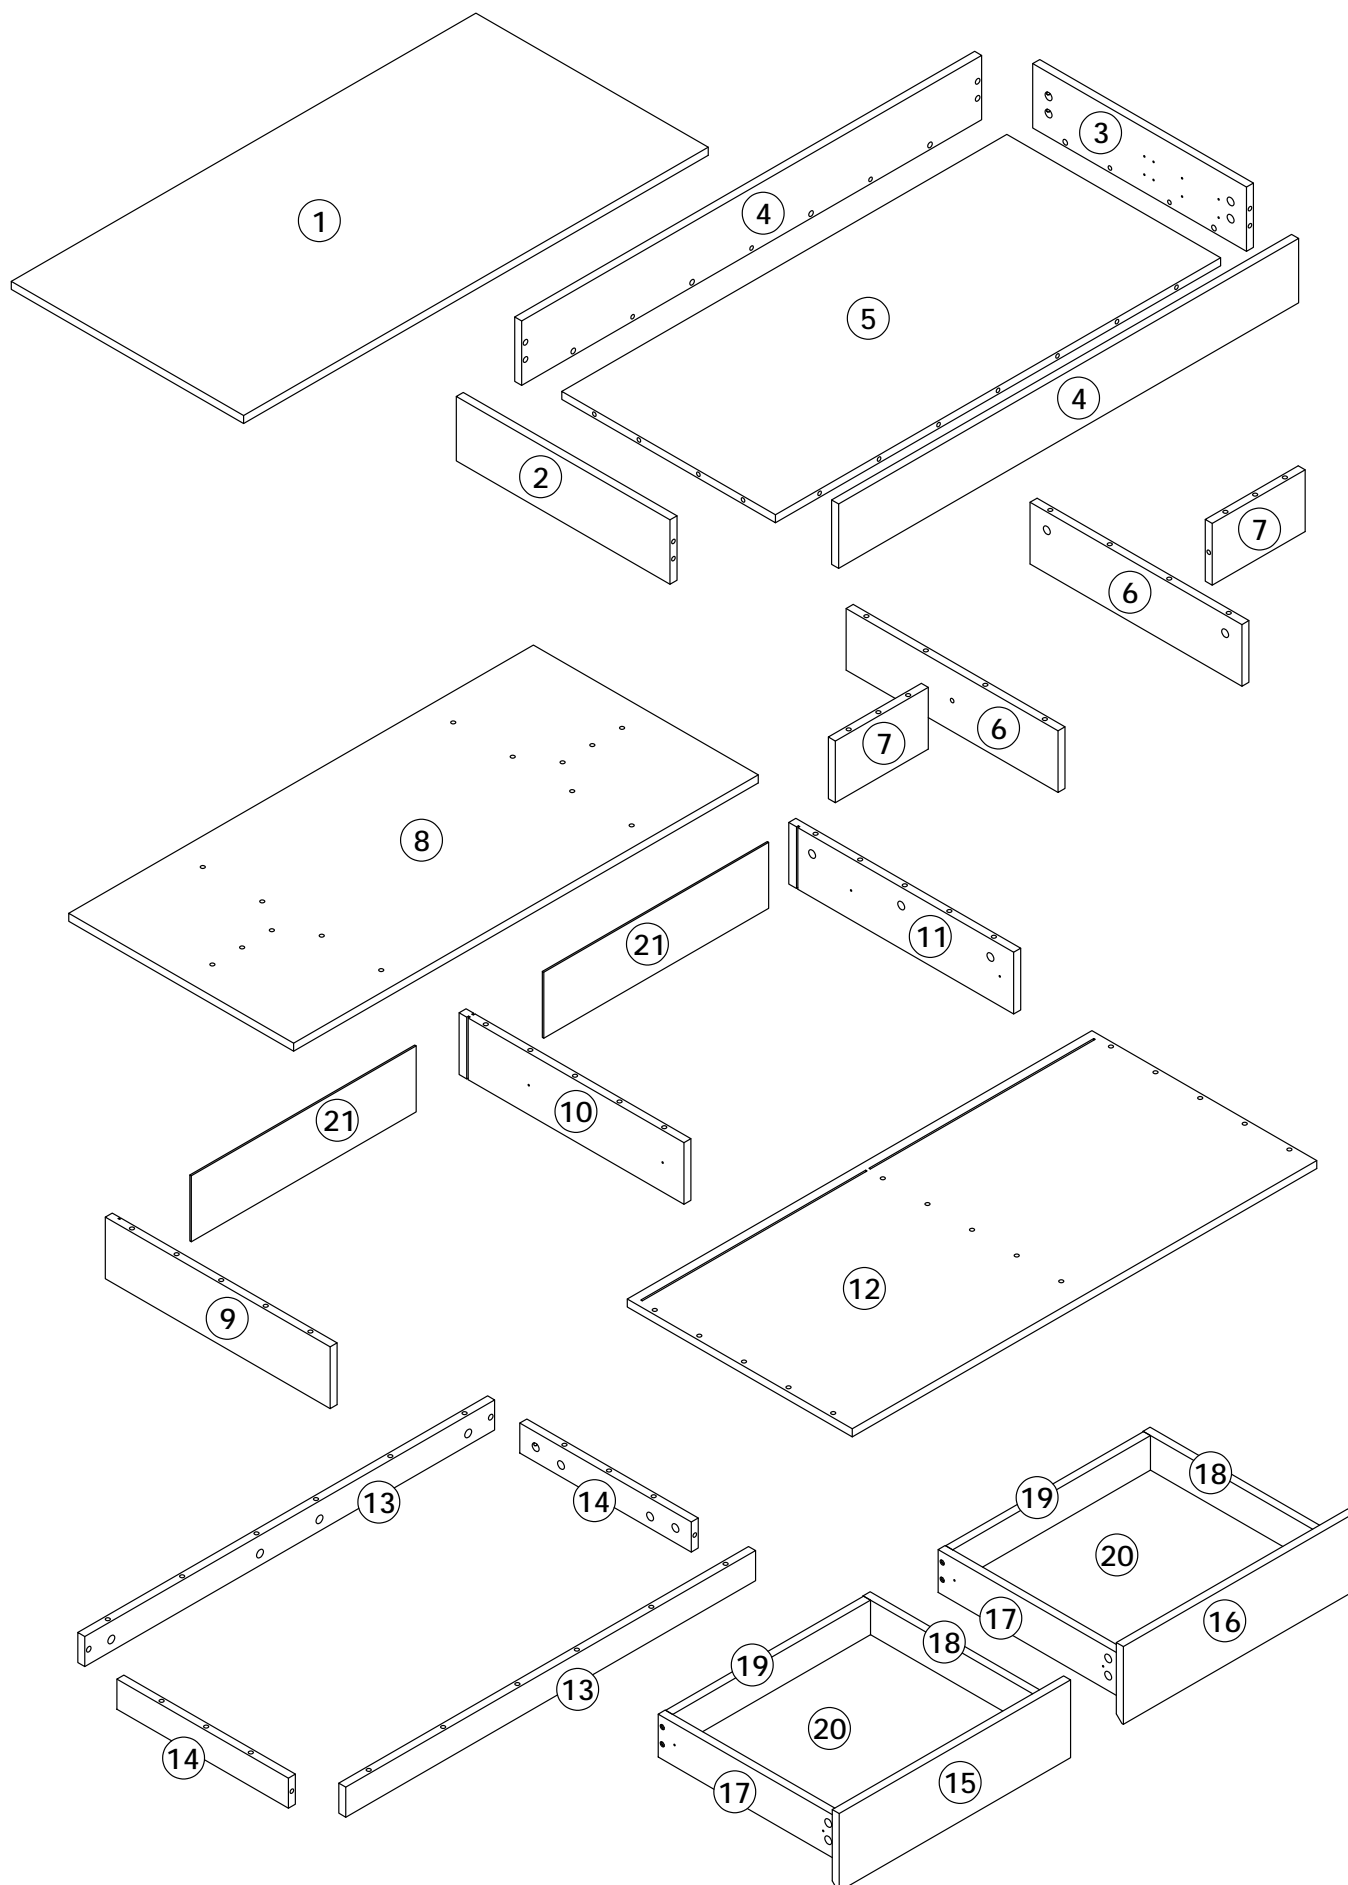

Assembly Instructions

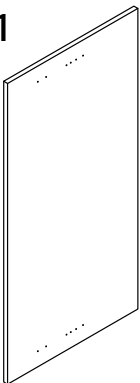

Assembly Instructions

<p>① x 1</p>  <p>1000x500x15mm</p>	<p>② x 1</p>  <p>460x120x15mm</p>	<p>③ x 1</p>  <p>460x120x15mm</p>	<p>④ x 2</p>  <p>990x120x15mm</p>
<p>⑤ x 1</p>  <p>958x460x15mm</p>	<p>⑥ x 2</p>  <p>456x115x15mm</p>	<p>⑦ x 2</p>  <p>200x115x15mm</p>	<p>⑧ x 1</p>  <p>1000x484x15mm</p>
<p>⑨ x 1</p>  <p>484x115x15mm</p>	<p>⑩ x 1</p>  <p>484x115x15mm</p>	<p>⑪ x 1</p>  <p>484x115x15mm</p>	<p>⑫ x 1</p>  <p>1000x484x15mm</p>
<p>⑬ x 2</p>  <p>882x56x15mm</p>	<p>⑭ x 2</p>  <p>369x56x15mm</p>	<p>⑮ x 1</p>  <p>498x145x15mm</p>	<p>⑯ x 1</p>  <p>498x145x15mm</p>


Assembly Instructions

17 x 2




400x80x15mm

18 x 2




400x80x15mm

19 x 2



426x80x15mm

20 x 2

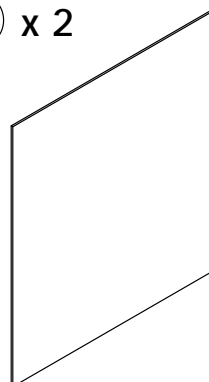

436x394x3mm


21 x 2



484x123x3mm


Assembly Instructions



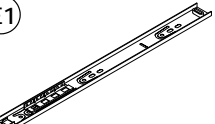
Step 1

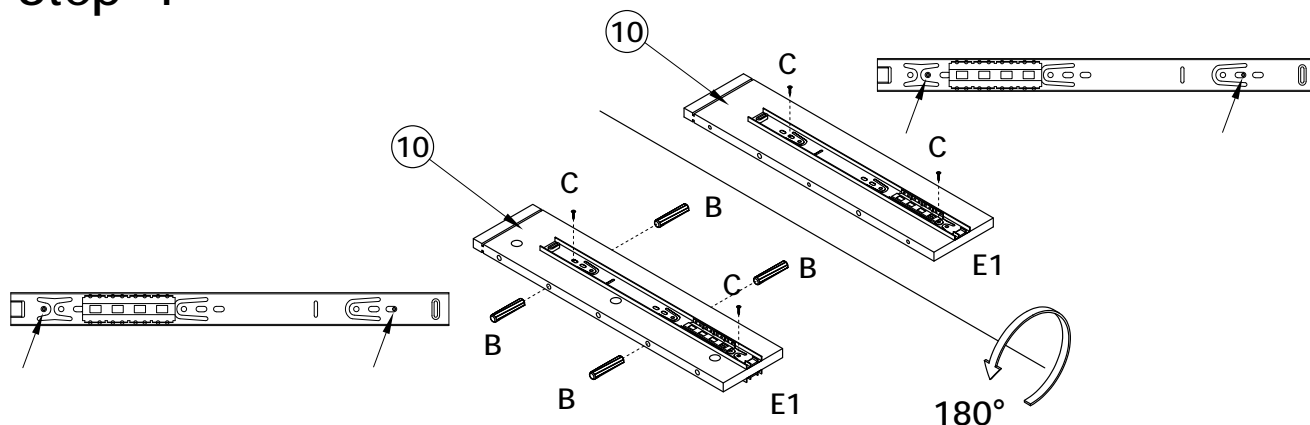

REMARK:


When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

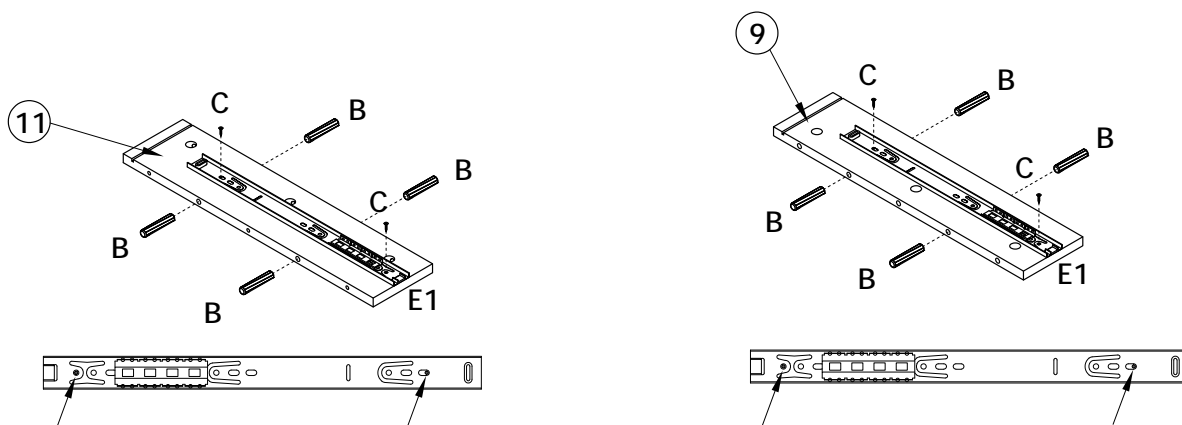


<p>(B)</p>  <p>8*40mm Dowel x 12</p>	<p>(C)</p>  <p>3.5*14mm Screw x 8</p>	<p>(E1)</p>  <p>400mm Runner x 4</p>
---	--	---

Step 2


x 2

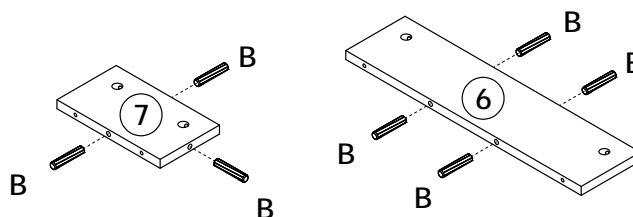

<p>(B)</p>  <p>8*40mm Dowel x 14</p>



Assembly Instructions

Step 3

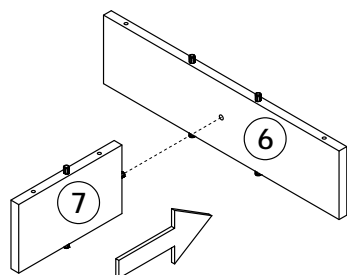


x 2

Step 4

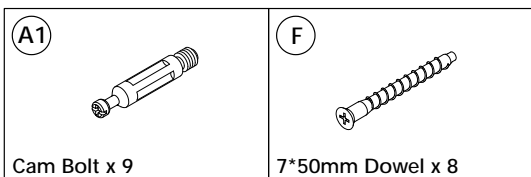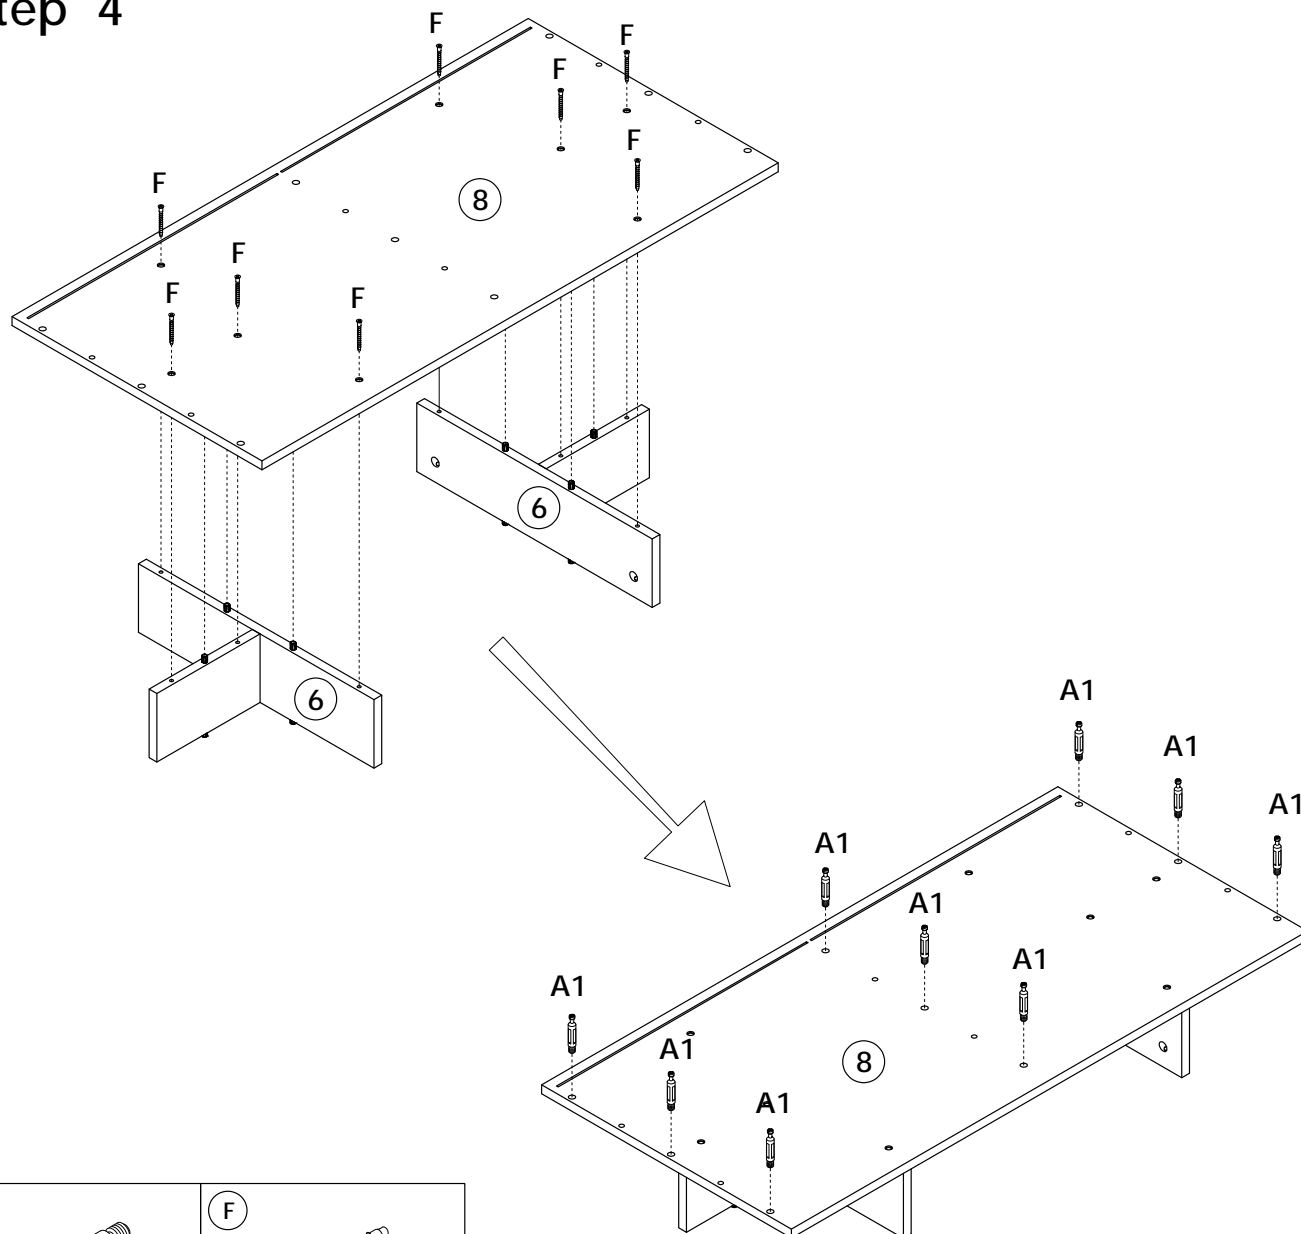



Assembly Instructions

Step 5

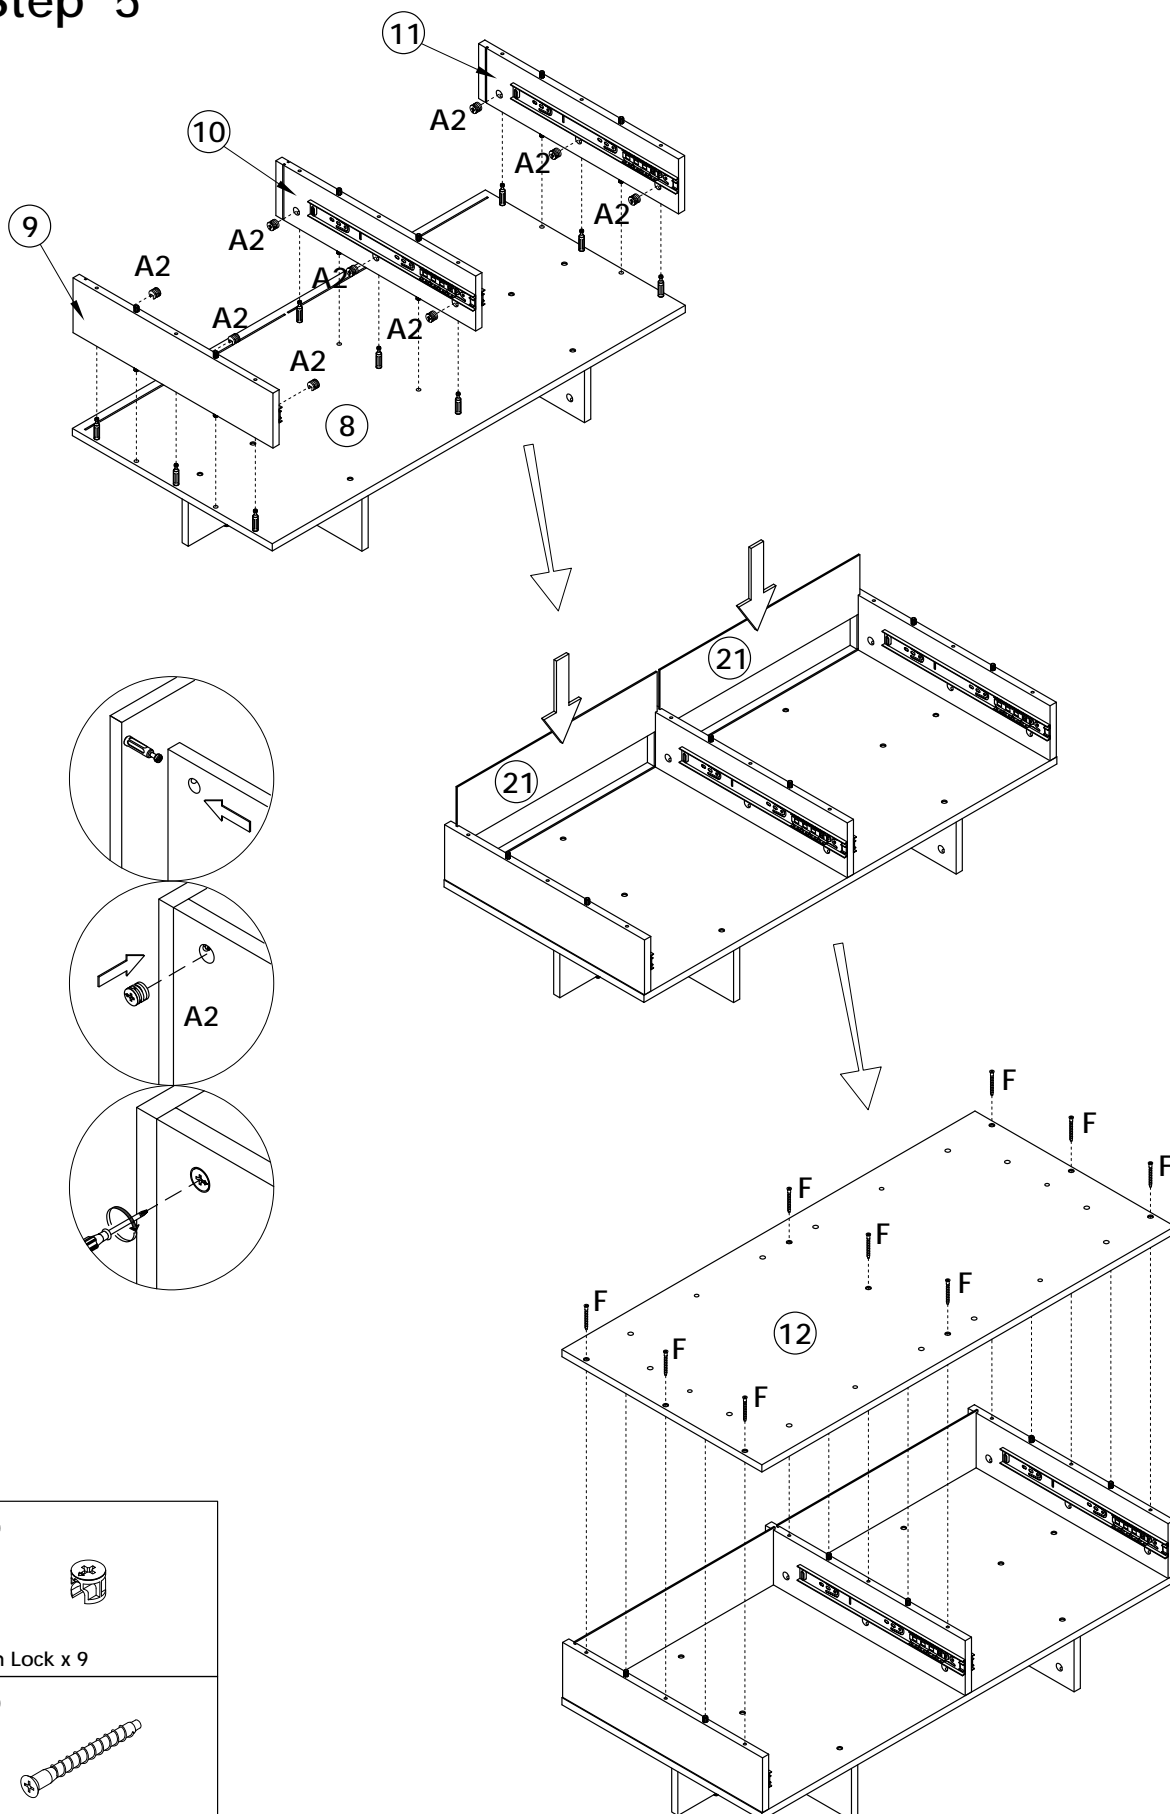



Assembly Instructions

Step 6

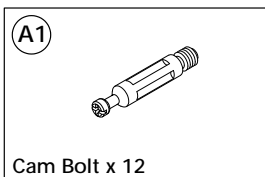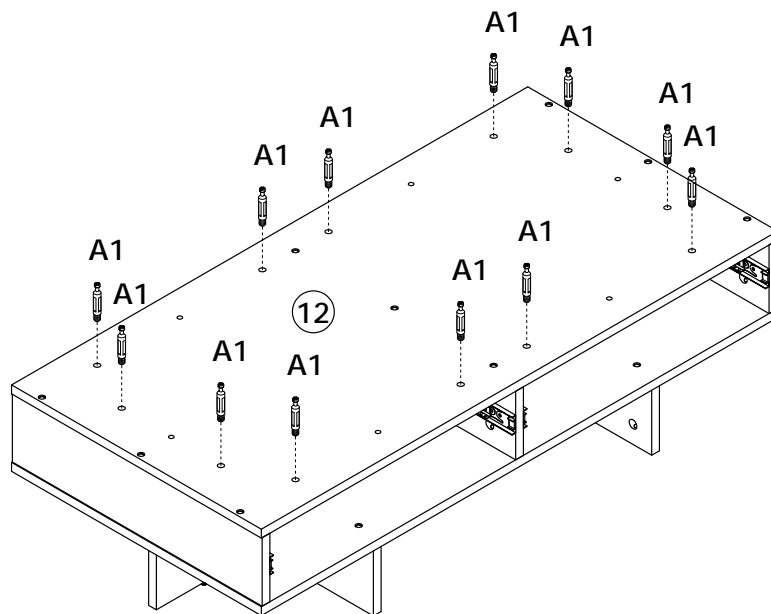






Step 7

x 2

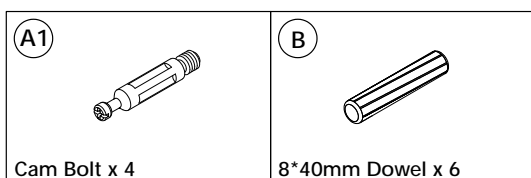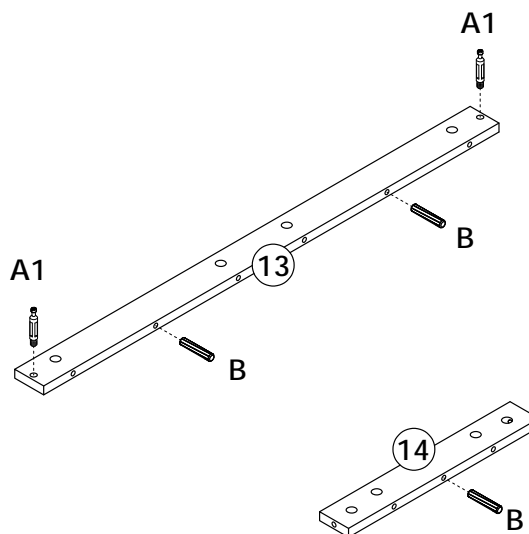



Assembly Instructions

Step 8

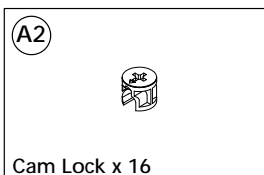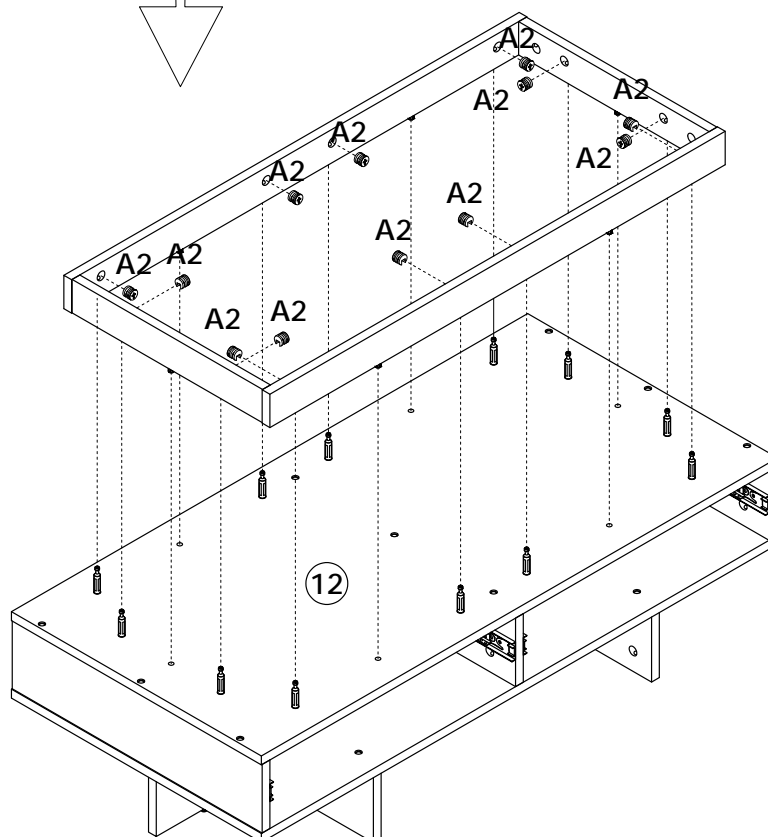
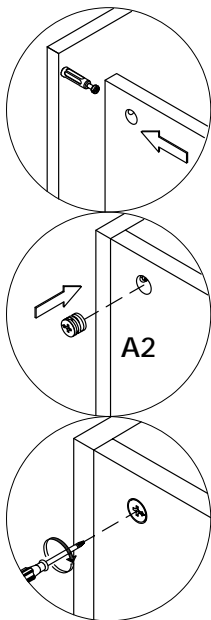
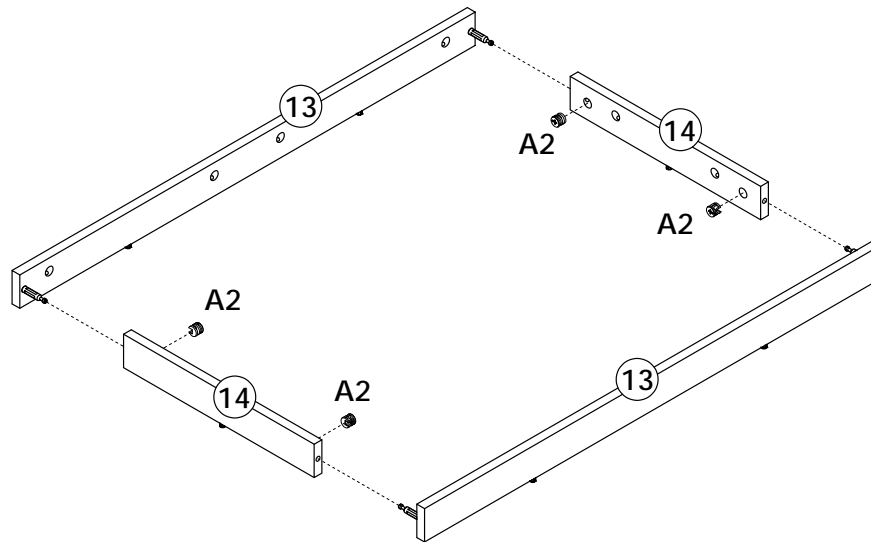


Assembly Instructions

Step 9

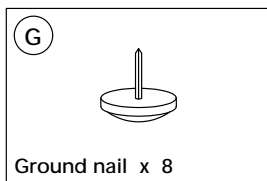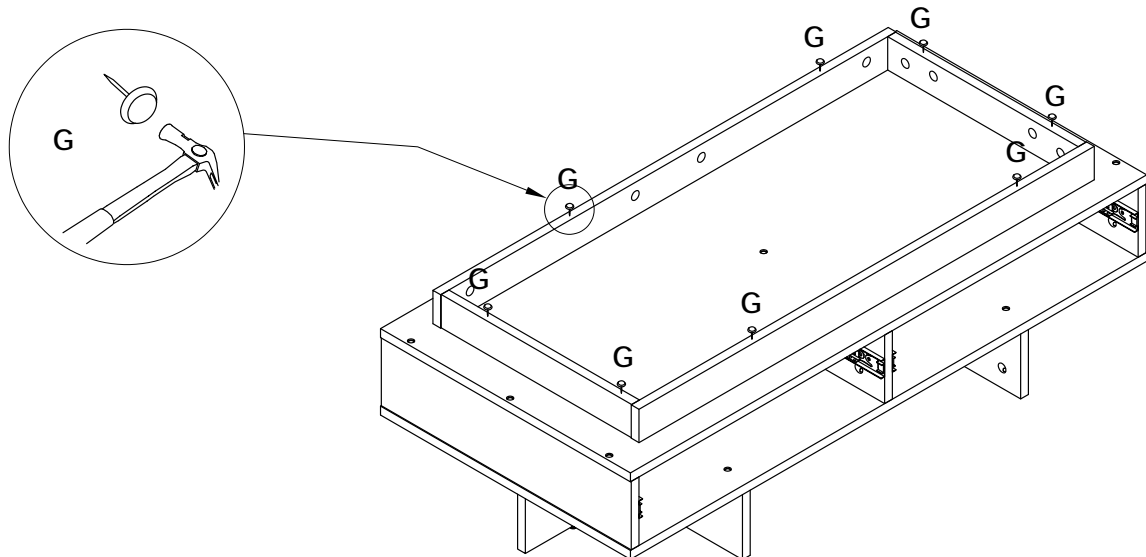



Step 10

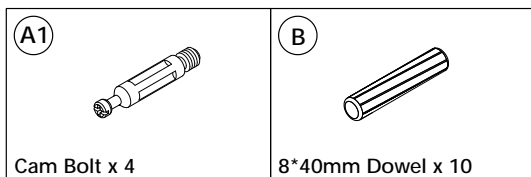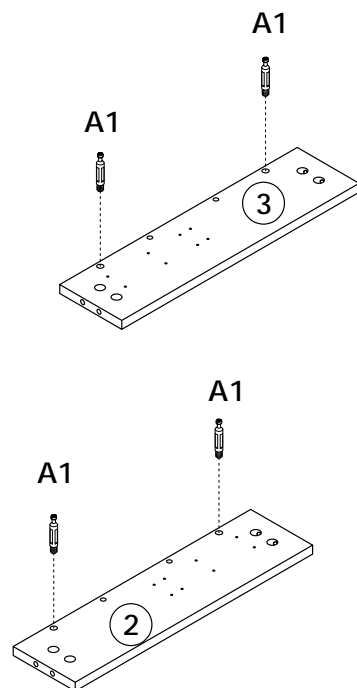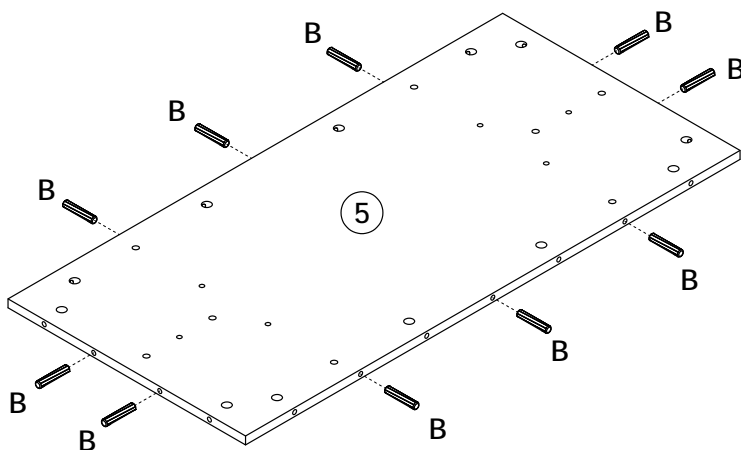



Assembly Instructions

Step 11

x 2

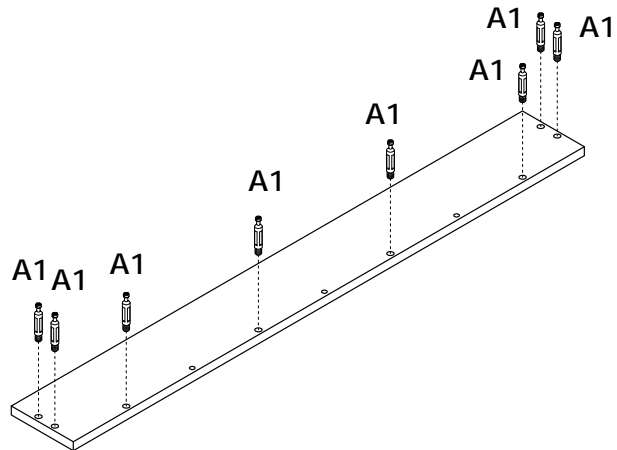
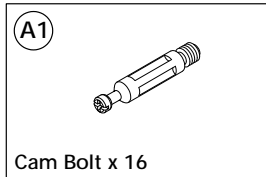


Step 12

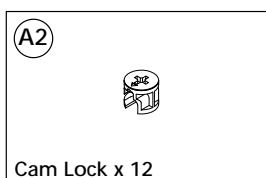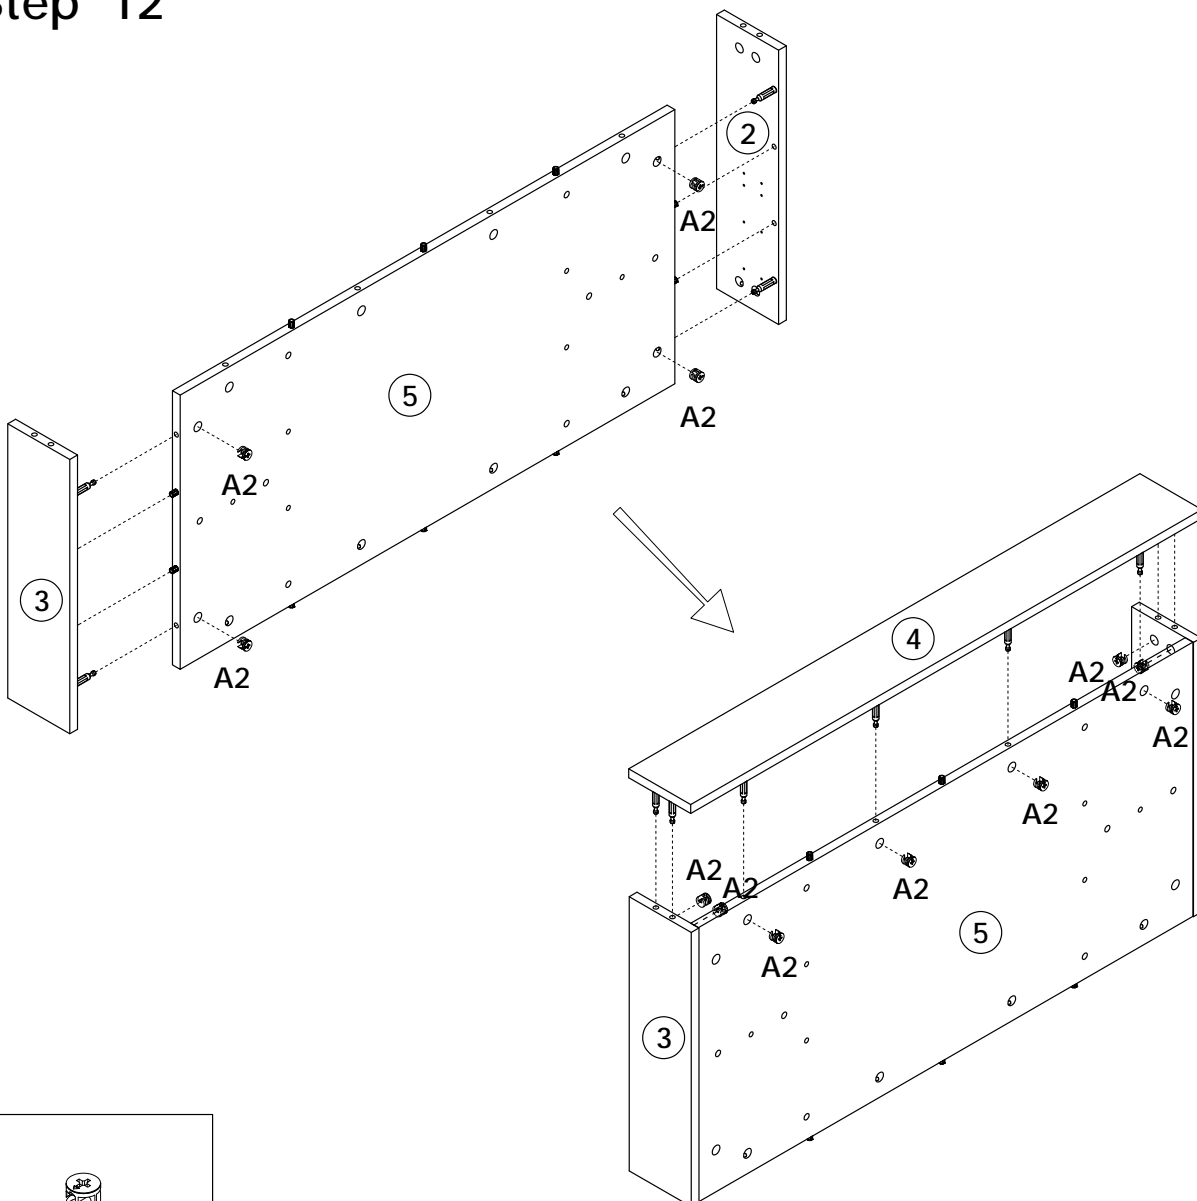



Assembly Instructions

Step 13

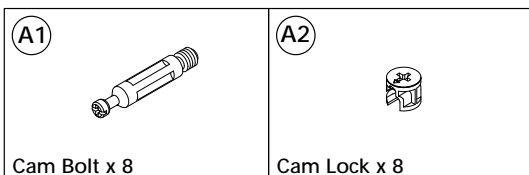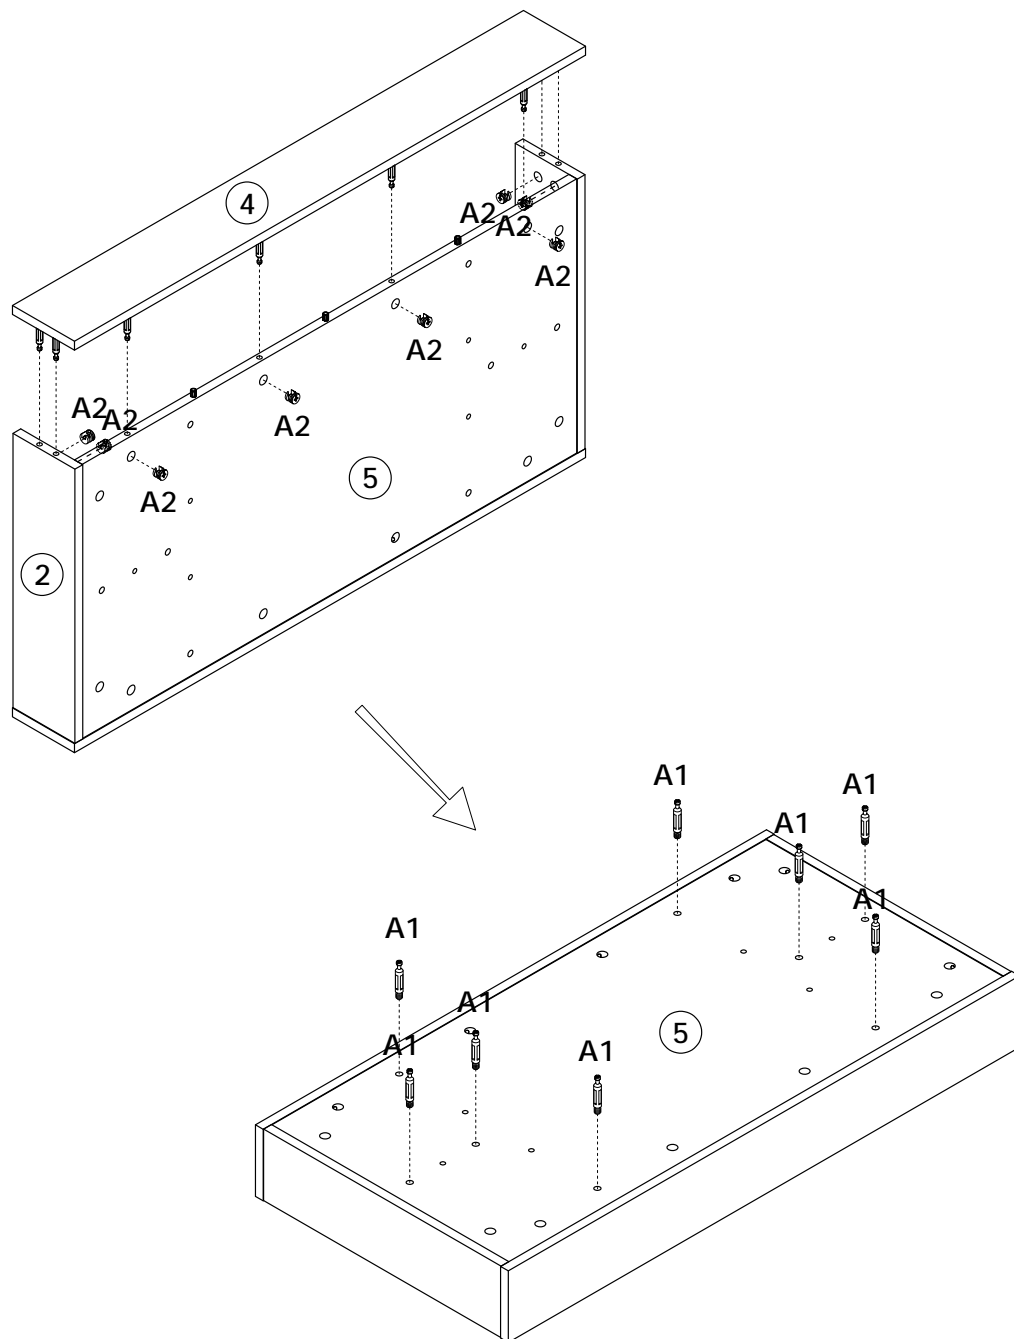

Assembly Instructions




Step 14

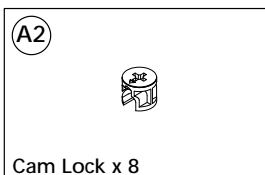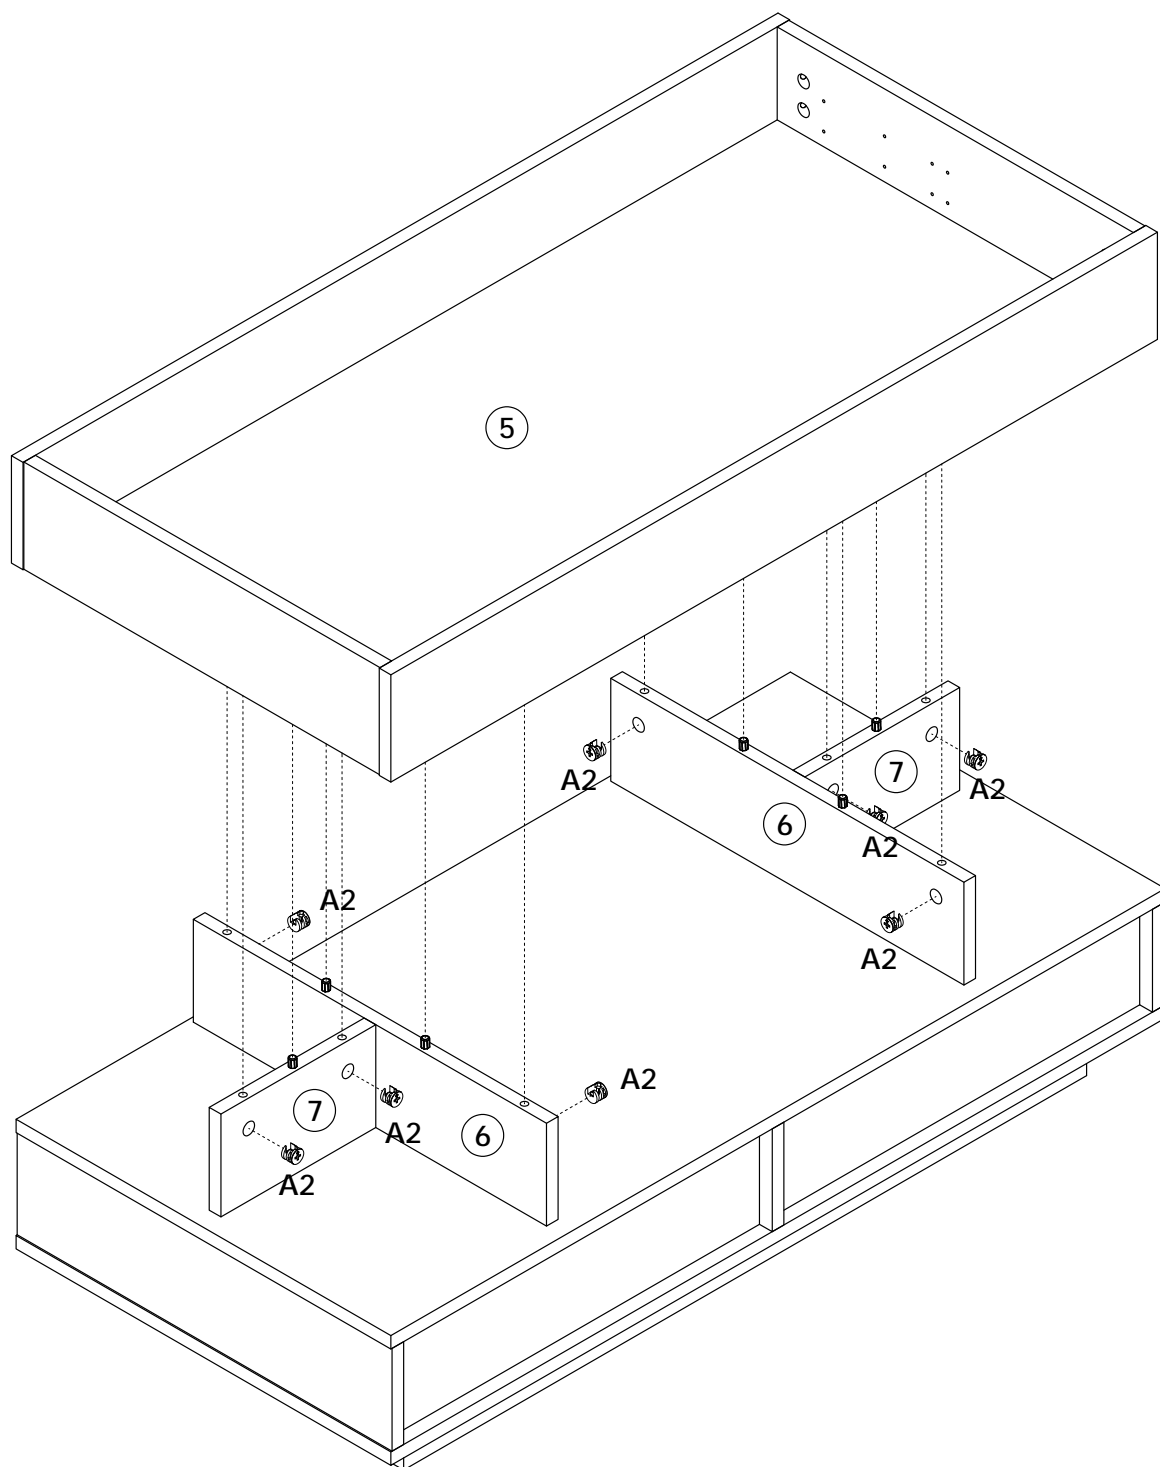

Assembly Instructions

Step 15


In order to make the product more beautiful, please paste hardware K on the exposed holes

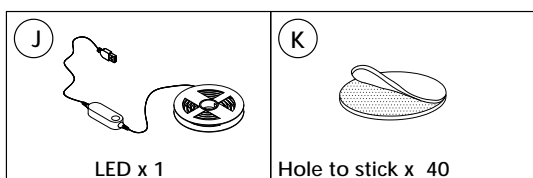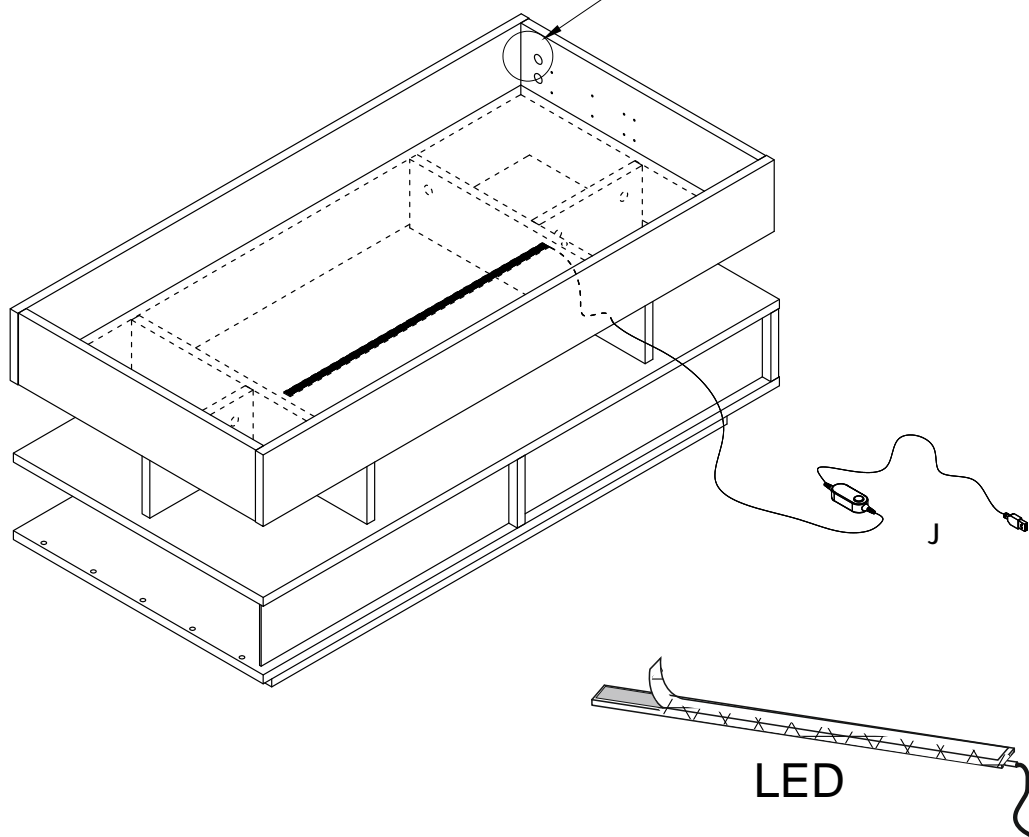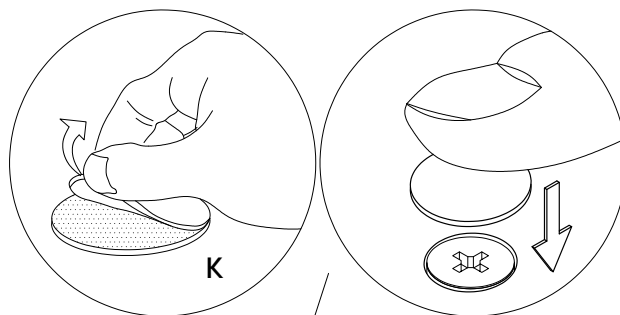


Assembly Instructions

Step 16


H

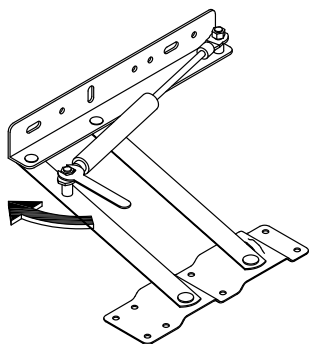


Loosen the screws here, as shown.

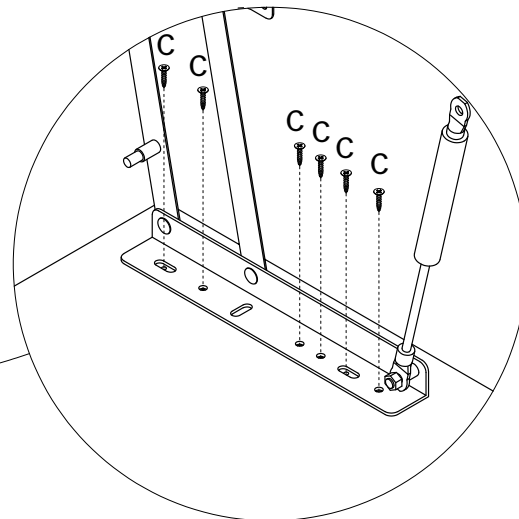

Fix the hardware H firmly on the plate 1 with the self-tapping thread C

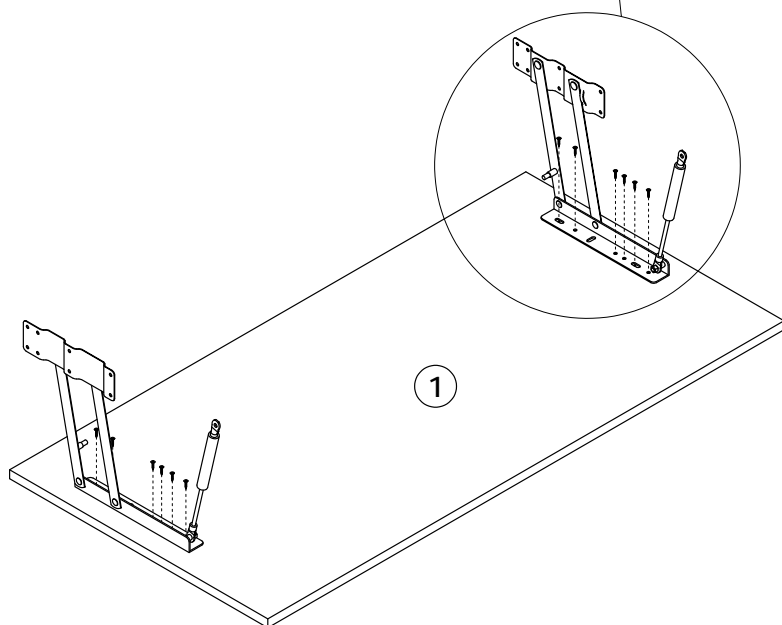

H

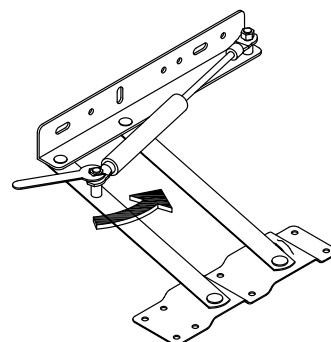


Tighten the screws on hardware H here.

(C)



3.5*14mm Screw x 12



(H)

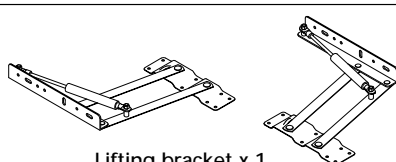



Lifting bracket x 1

Assembly Instructions

Step 17

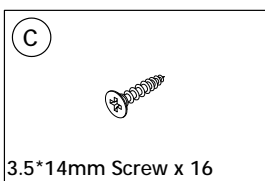
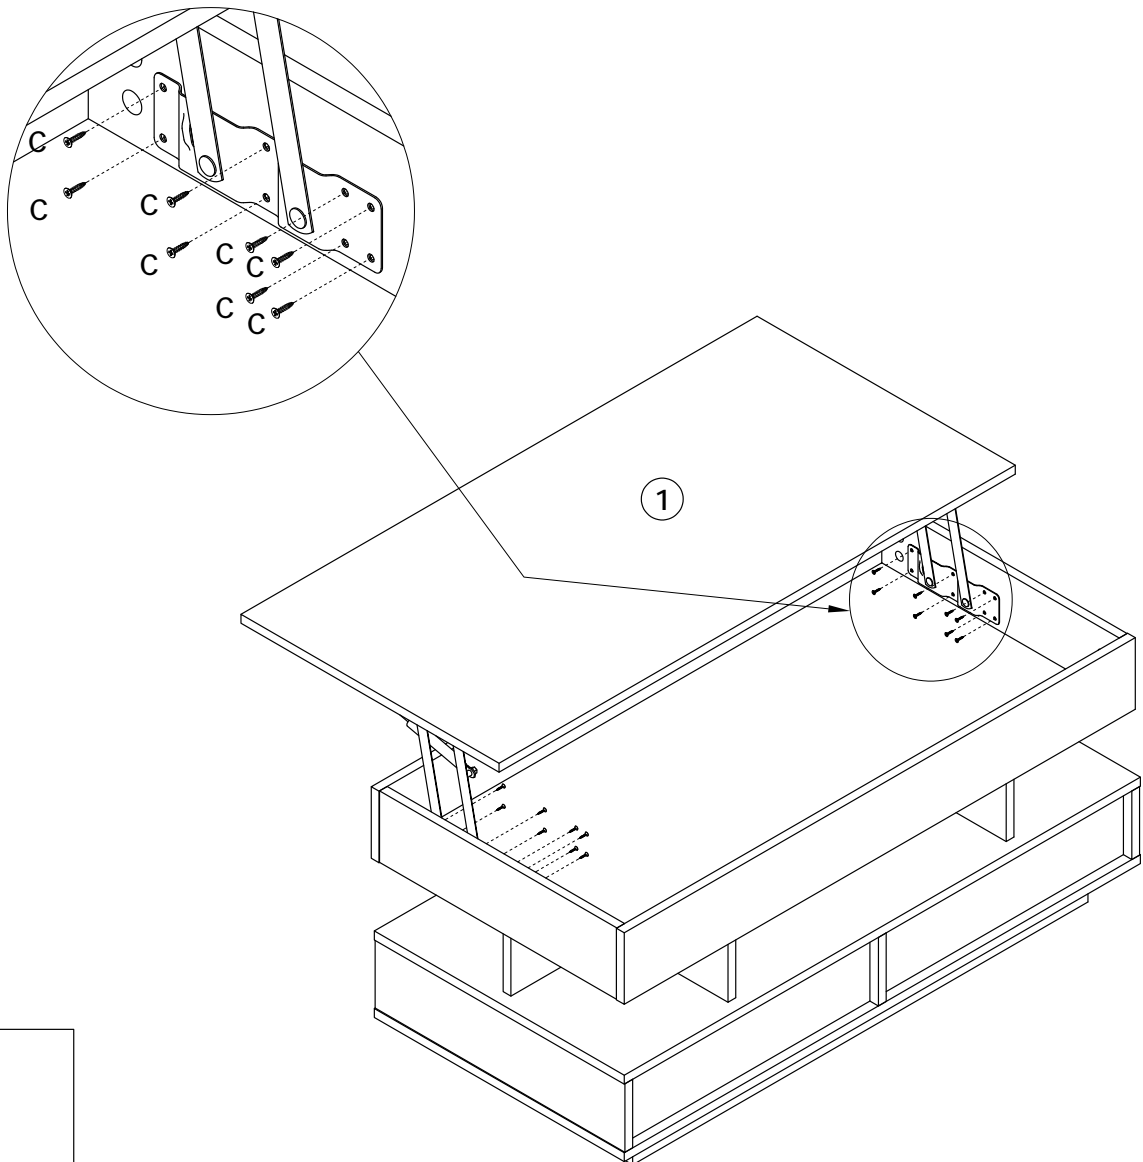


Step 18

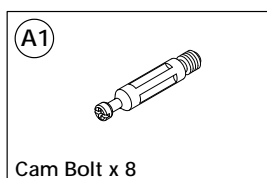
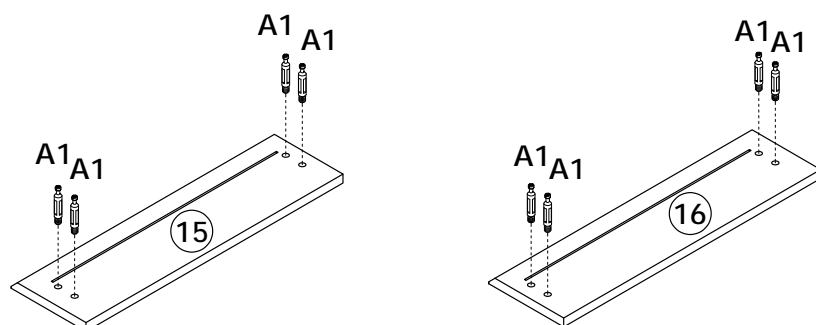


Assembly Instructions


Step 19

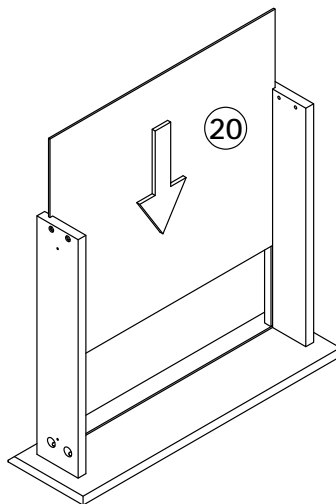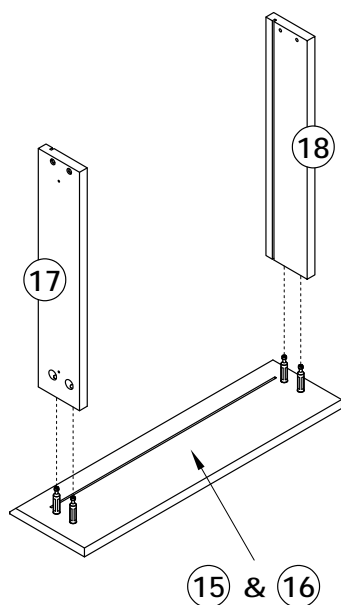


x 2

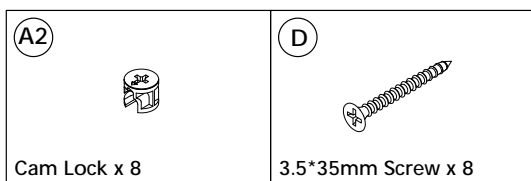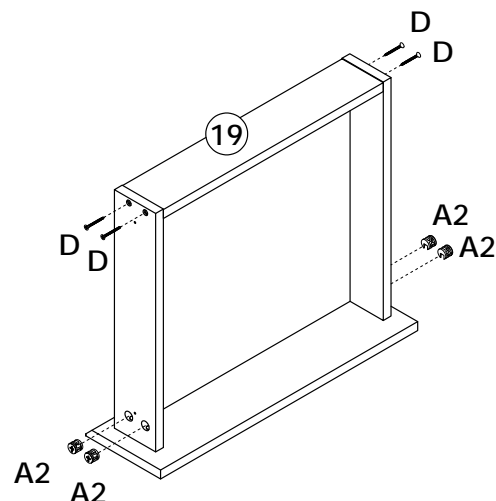

Step 20

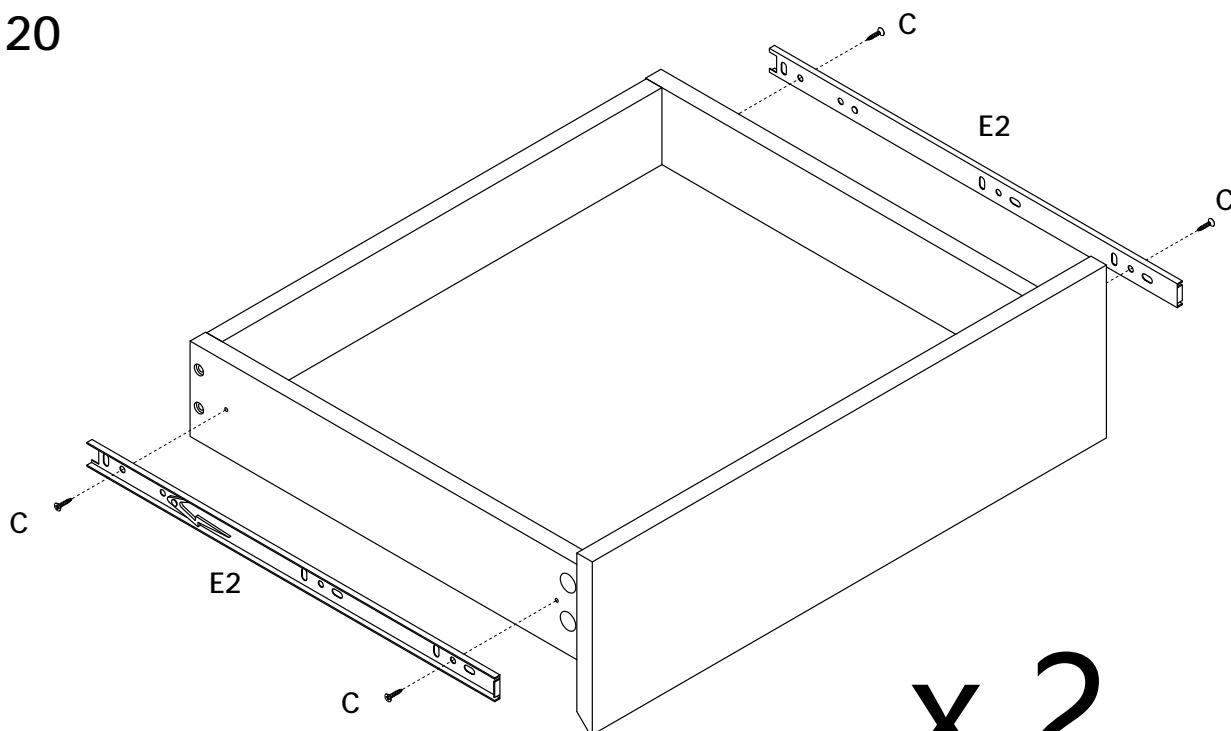


x 2

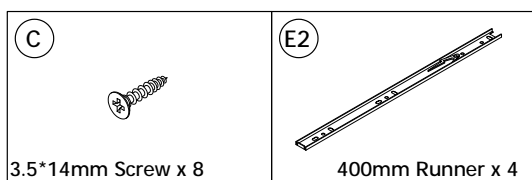

Assembly Instructions

Step 21

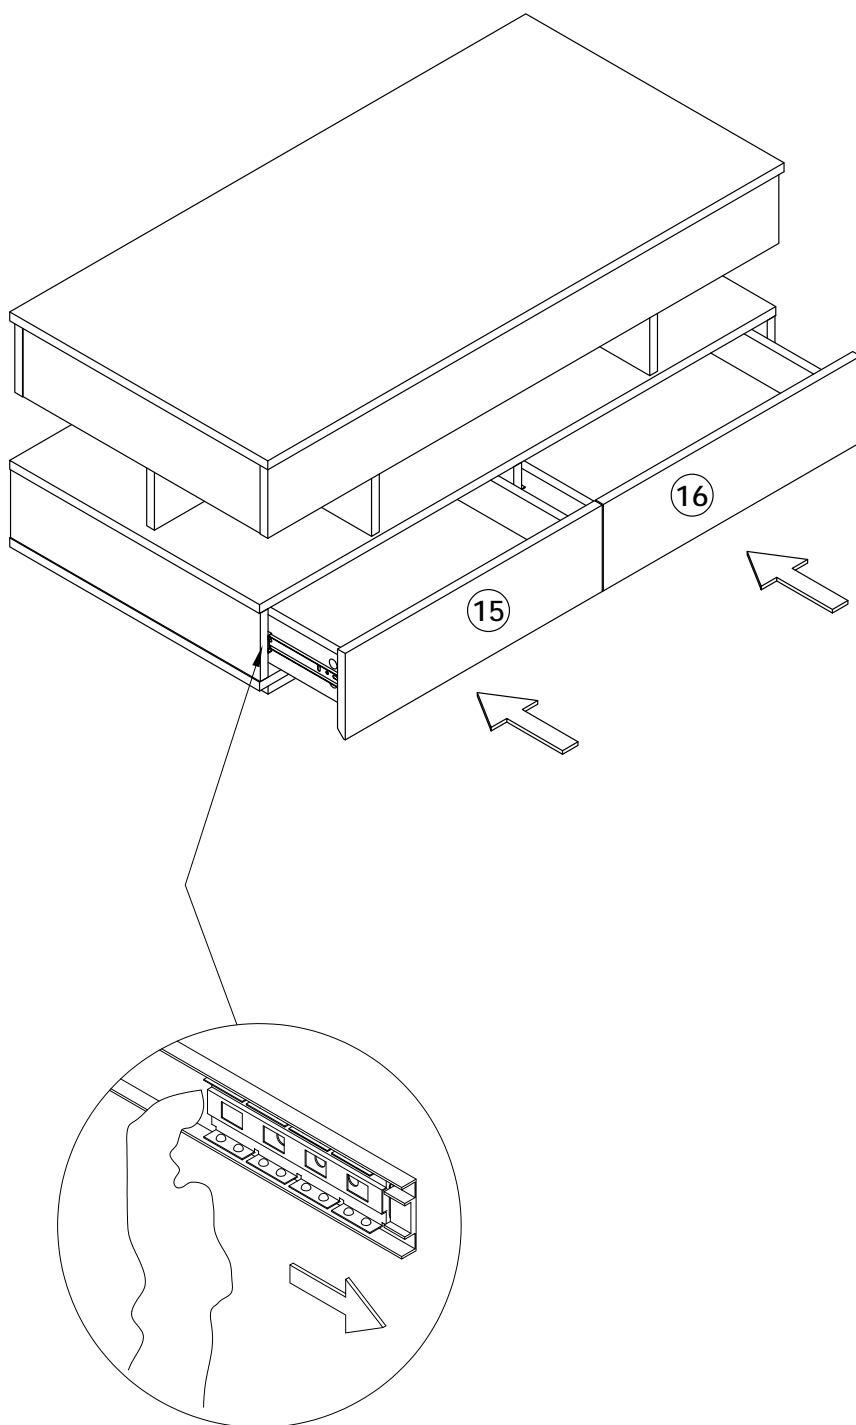

Assembly Instructions

Step 22

