


# COFFEE TABLE

**Assembly Instructions - Please keep for future reference**

## N724P290056

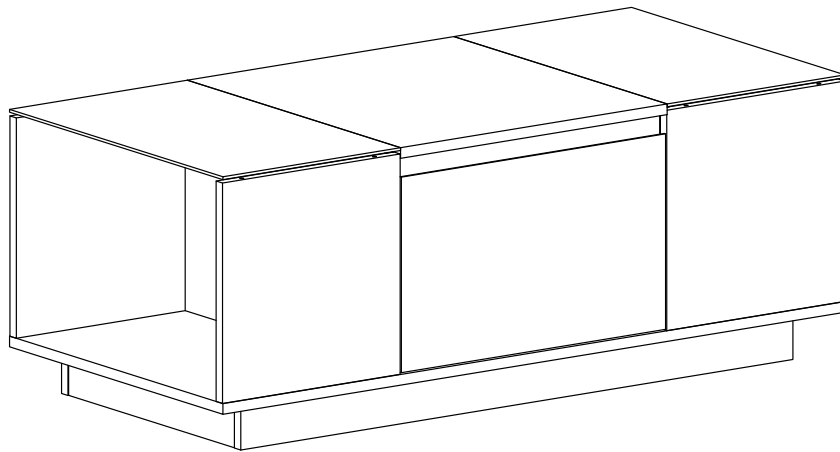

### Dimensions

Width-41.34inch

Depth-19.69inch

Height-15.75inch

**Important – Please read these instructions fully before starting assembly**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

**WARNING**  
**In order to help prevent overturning –**  
**please follow these instructions**






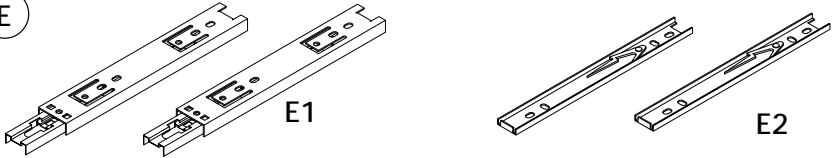





To help prevent product toppling over please follow the below steps:-


Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

# Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
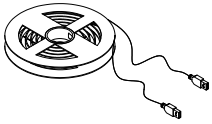
<p><b>A1</b></p>  <p>Cam Bolt x (38+2)</p>	<p><b>A2</b></p>  <p>Cam Lock x (38+2)</p>	<p><b>B</b></p>  <p>8*40mm Dowel x (34+2)</p>	<p><b>C</b></p>  <p>3.5*14mm Screw x (16+1)</p>
<p><b>D</b></p>  <p>3.5*35mm Screw x 8</p>	<p><b>E</b></p>  <p>200mm Runner x 2</p>		
<p><b>F</b></p>  <p>7*50mm Dowel x (12+1)</p>	<p><b>G</b></p>  <p>Ground nail x 8</p>	<p><b>H</b></p>  <p>sucking disc x 12</p>	<p><b>J</b></p>  <p>Hole to stick x 10</p>
<p><b>K</b></p>  <p>LED x 1</p>			

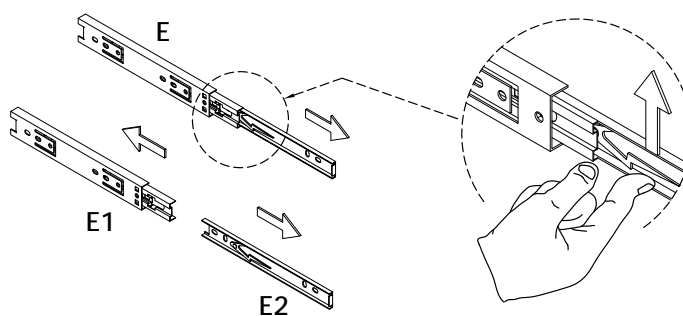

## Tools required

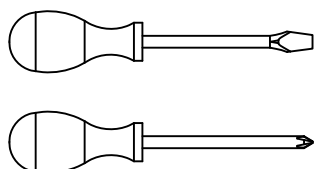

Phillips screwdriver  
(medium & large)


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

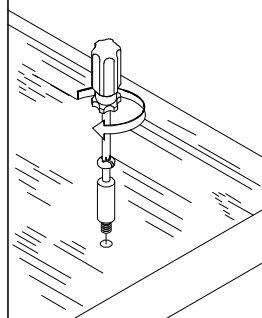

## Step 2

Push the male camlock into the entry hole.

2

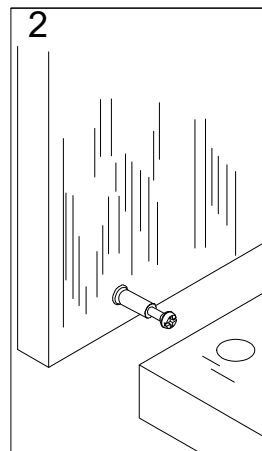


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

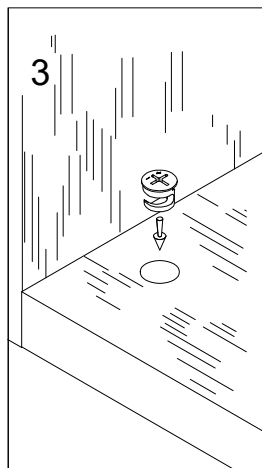


## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.





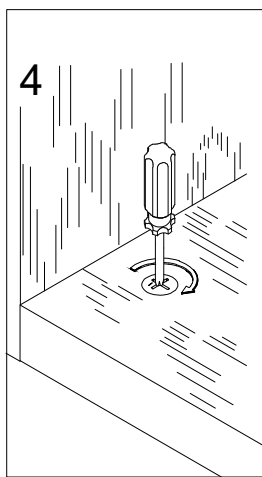



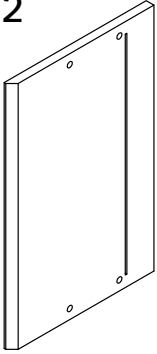




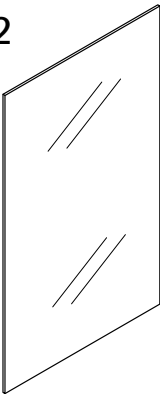
4

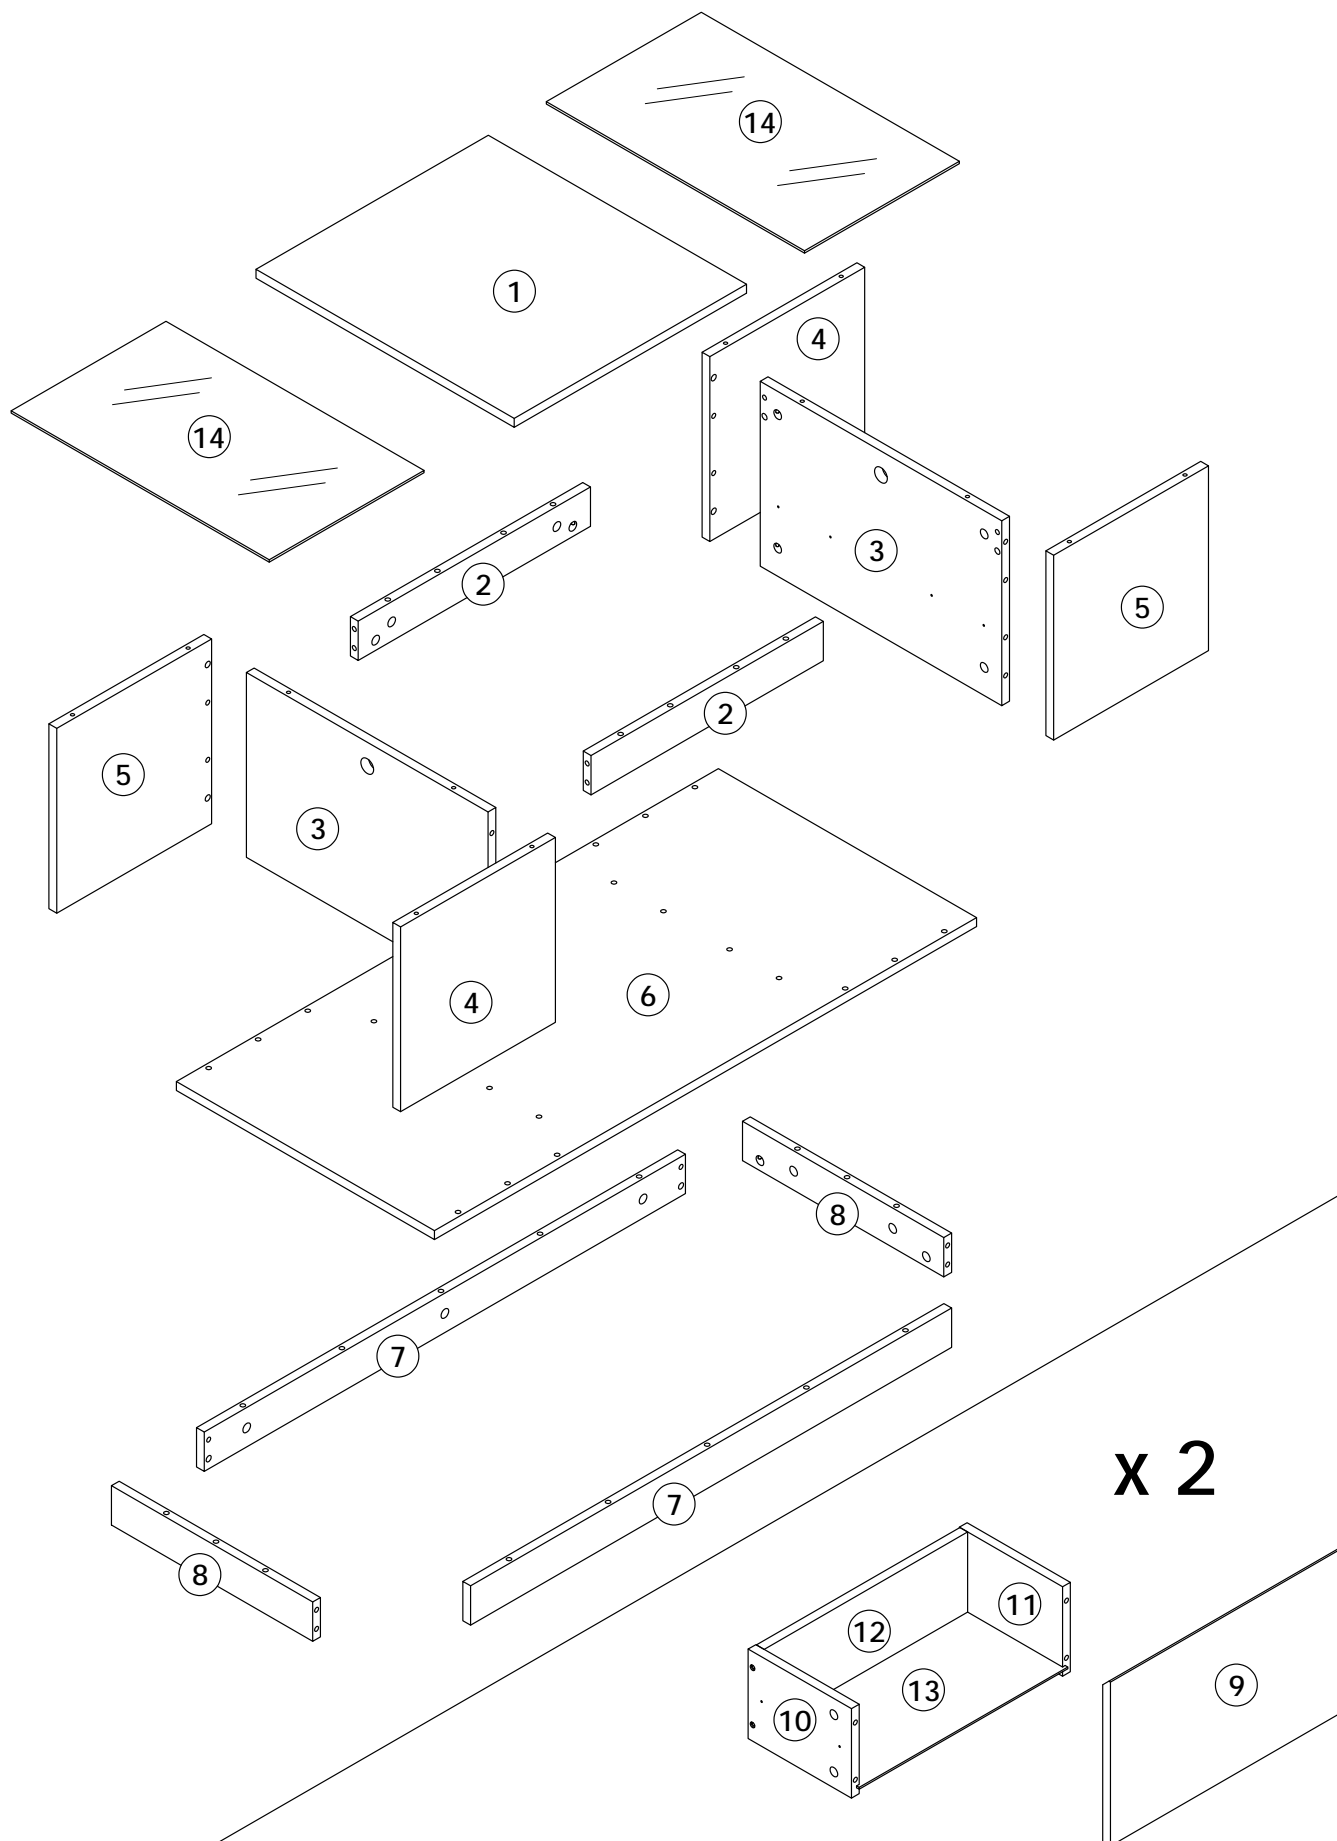

# Assembly Instructions

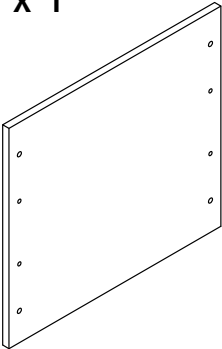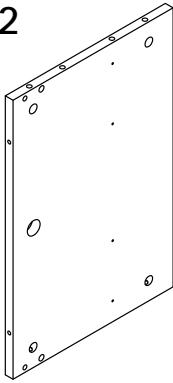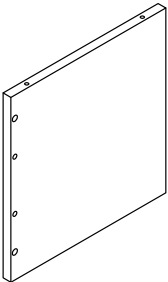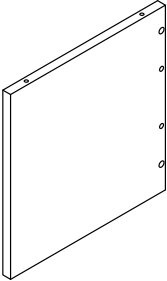



# Assembly Instructions

<p>① x 1</p>  <p>500x450x15mm</p>	<p>② x 2</p>  <p>450x66x15mm</p>	<p>③ x 2</p>  <p>468x310x15mm</p>	<p>④ x 2</p>  <p>310x300x15mm</p>
<p>⑤ x 2</p>  <p>310x300x15mm</p>	<p>⑥ x 1</p>  <p>1050x500x15mm</p>	<p>⑦ x 2</p>  <p>932x66x15mm</p>	<p>⑧ x 2</p>  <p>390x66x15mm</p>
<p>⑨ x 2</p>  <p>446x275x15mm</p>	<p>⑩ x 2</p>  <p>200x150x15mm</p>	<p>⑪ x 2</p>  <p>200x150x15mm</p>	<p>⑫ x 2</p>  <p>394x150x15mm</p>
<p>⑬ x 2</p>  <p>404x194x3mm</p>	<p>⑭ x 2</p>  <p>500x300x4mm</p>		

# Assembly Instructions


## Step 1




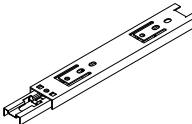
x 2

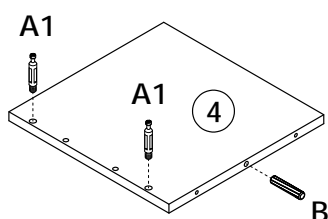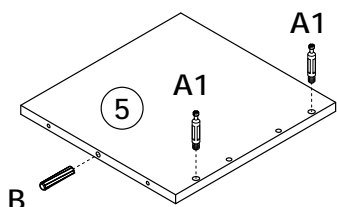

### REMARK:




When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

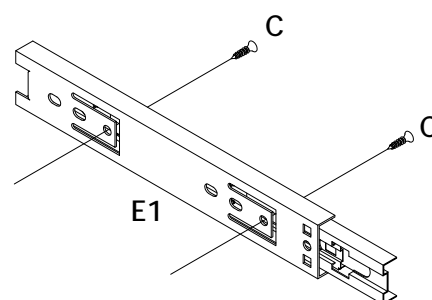

 <p>Cam Bolt x 12</p>	 <p>8*40mm Dowel x 16</p>	 <p>3.5*14mm Screw x 8</p>	 <p>200mm Runner x 4</p>
--	--	---	--



## Step 2

x 2

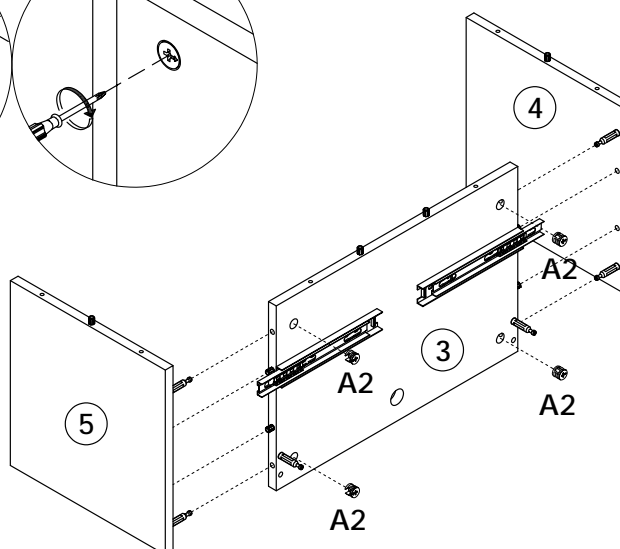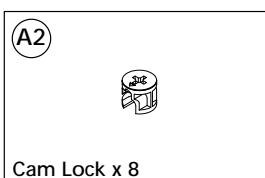
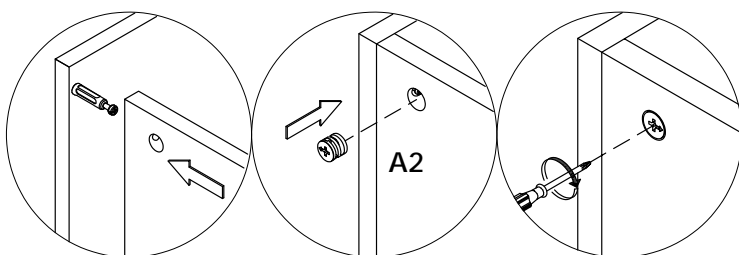


# Assembly Instructions

## Step 3

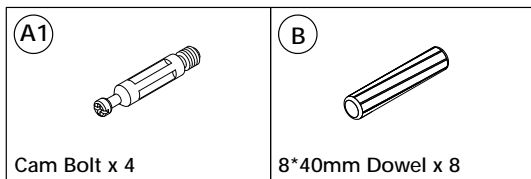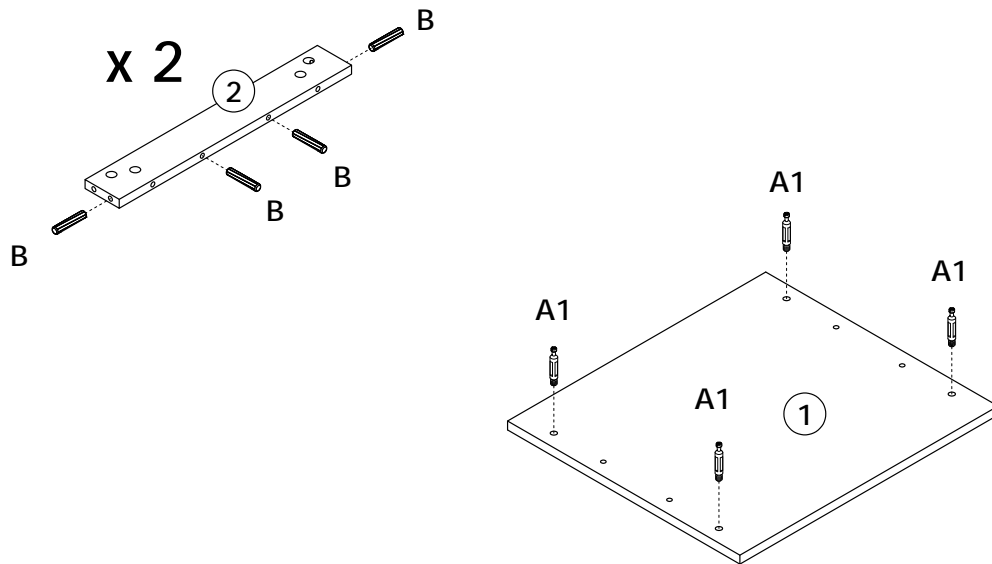



## Step 4

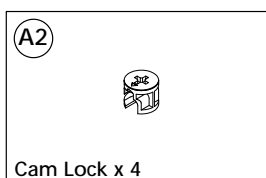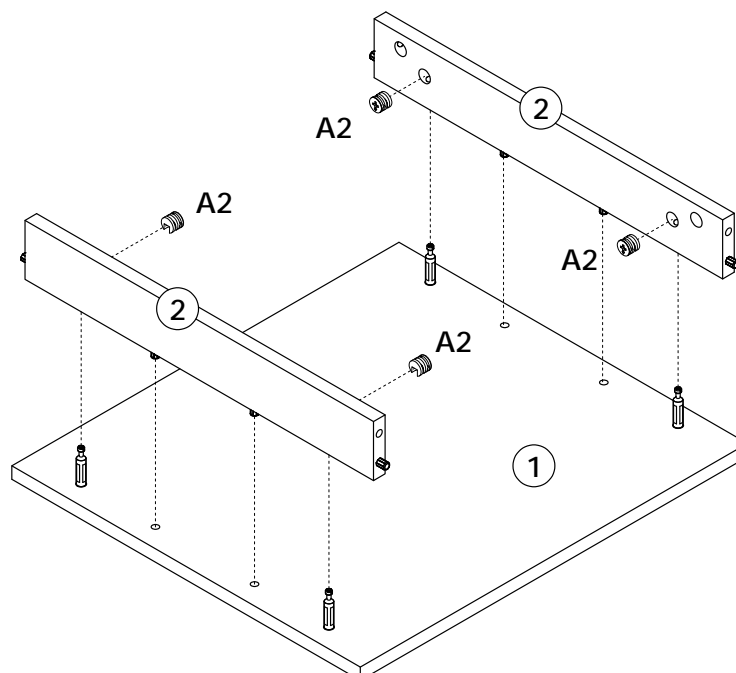






# Assembly Instructions

## Step 5

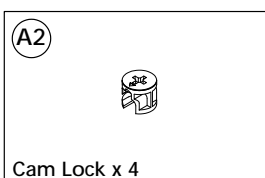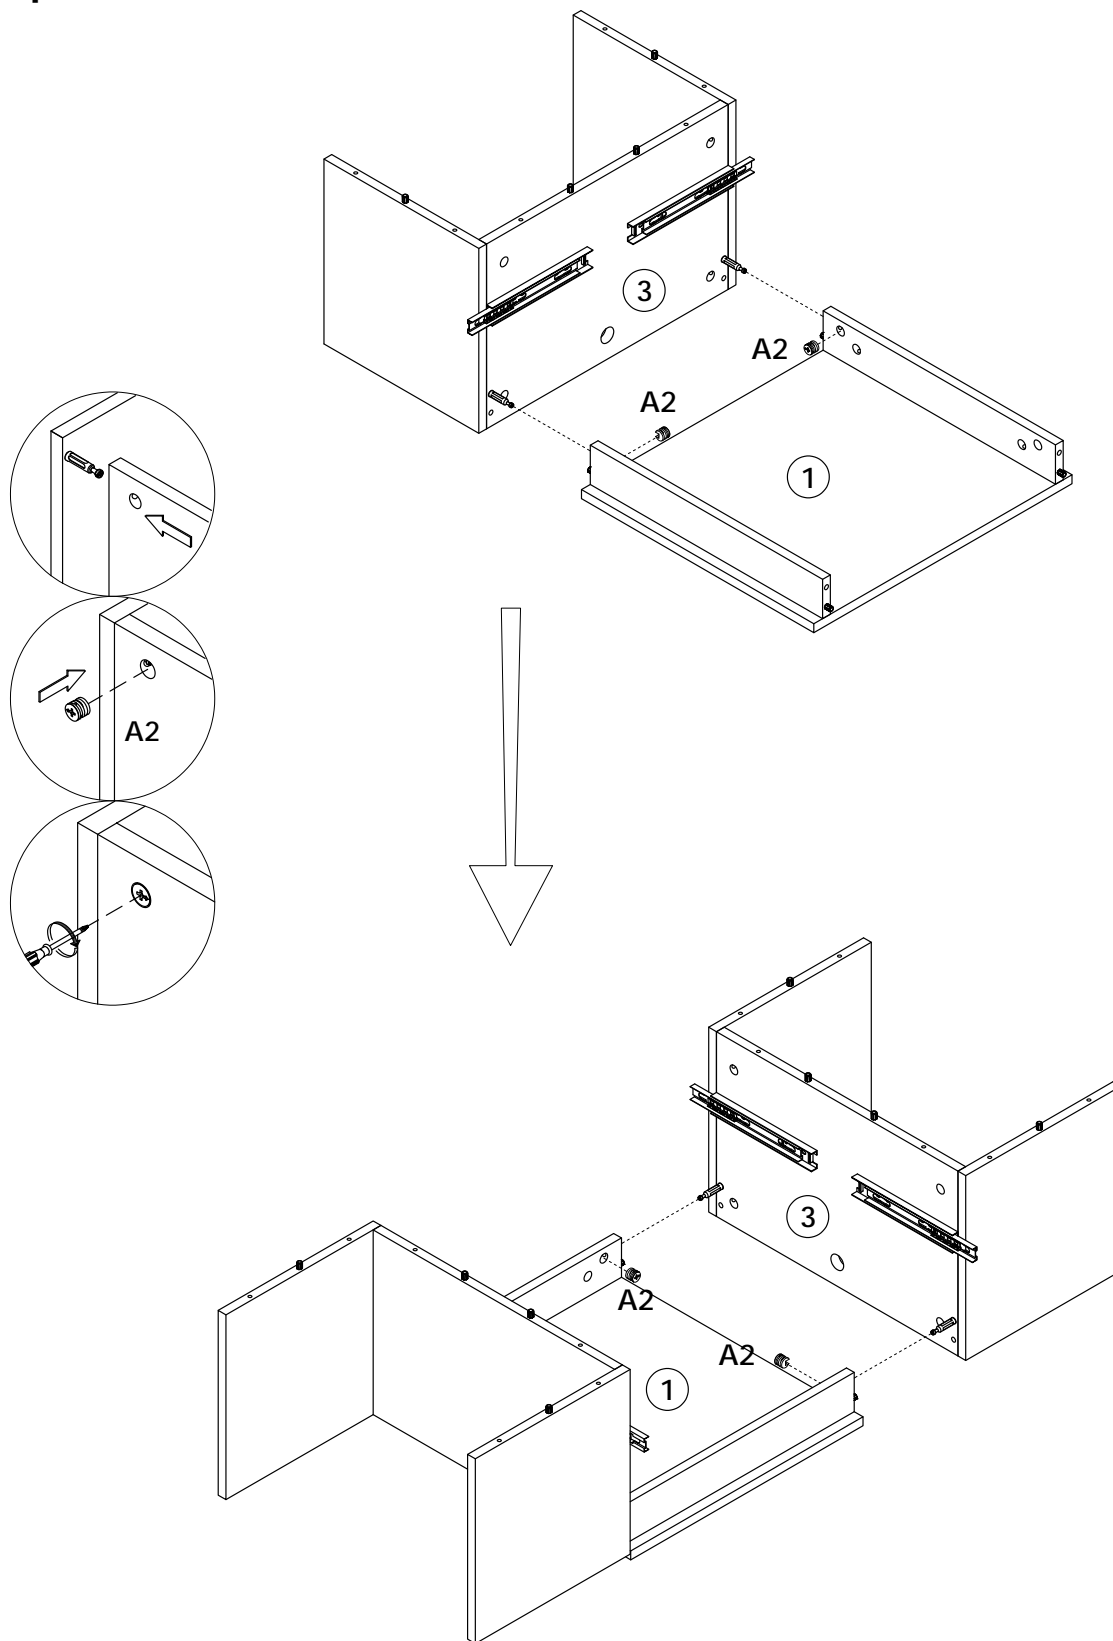

# Assembly Instructions



## Step 6

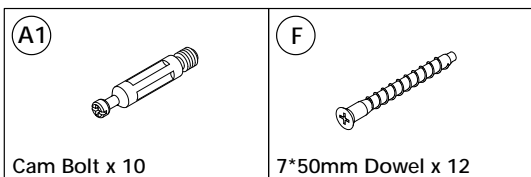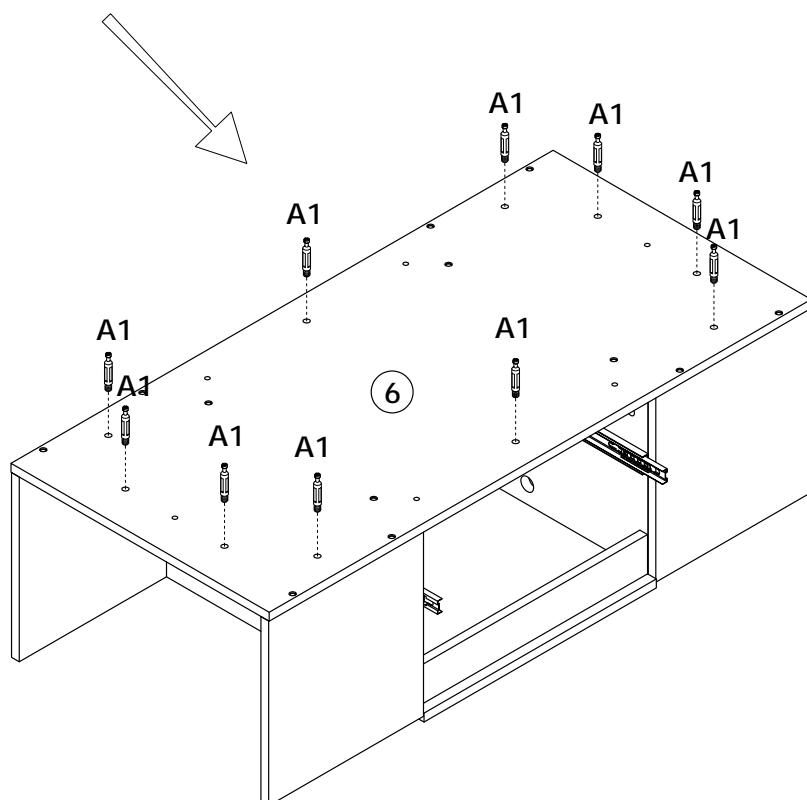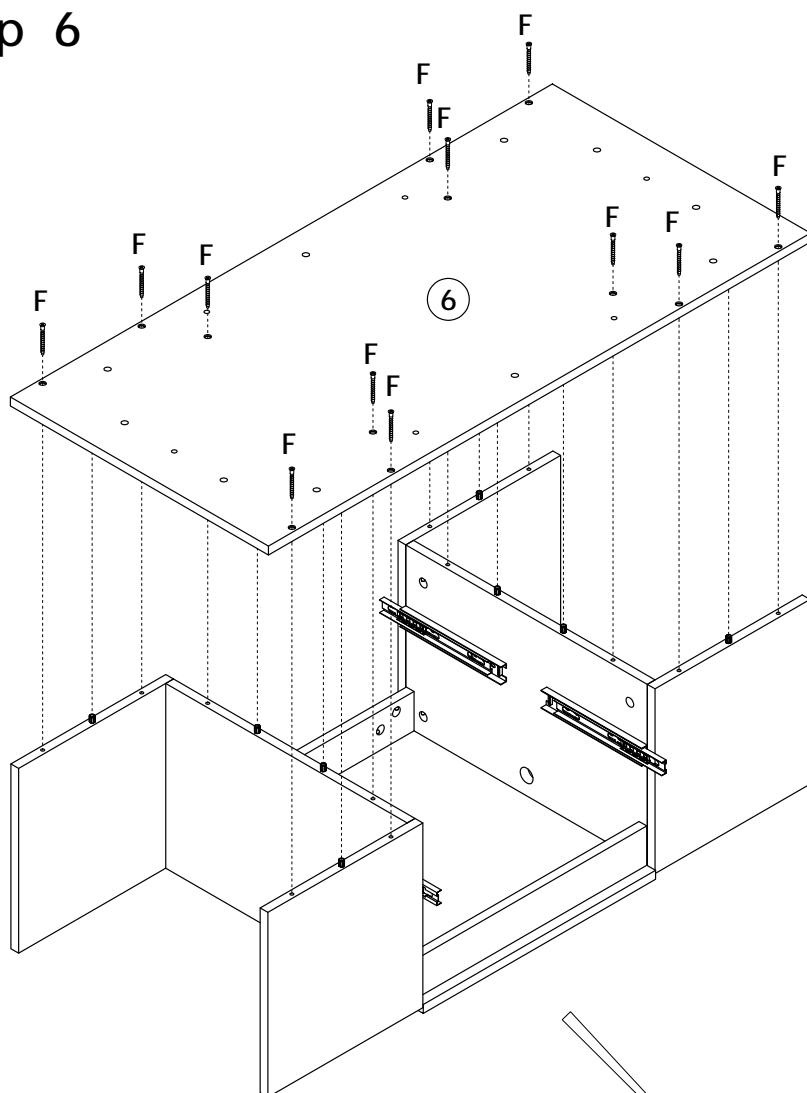



# Assembly Instructions

## Step 7

x 2

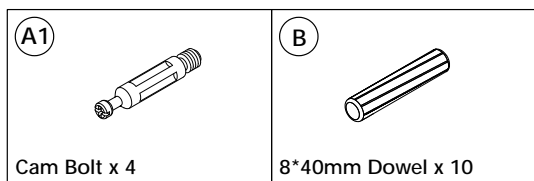
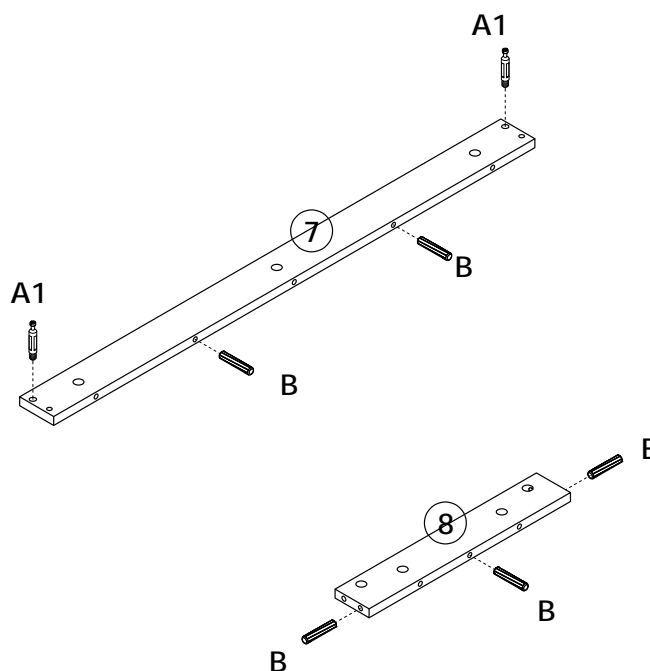


## Step 8



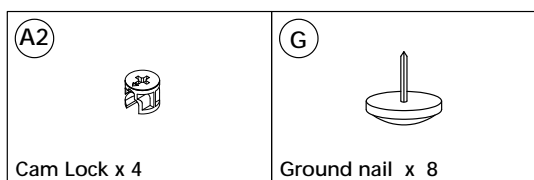
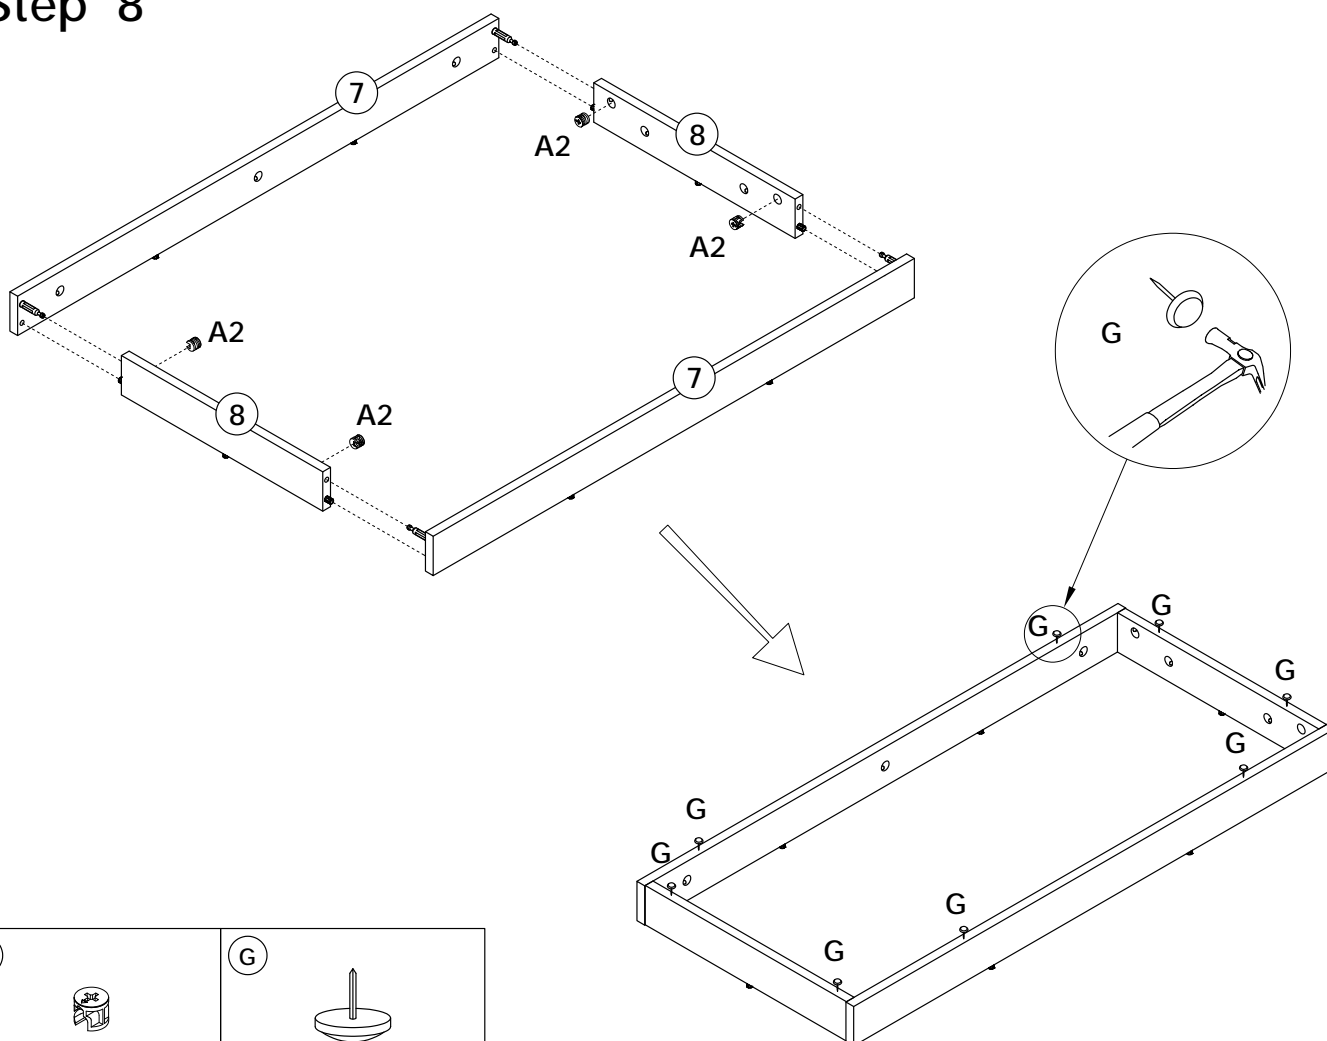


# Assembly Instructions

## Step 9



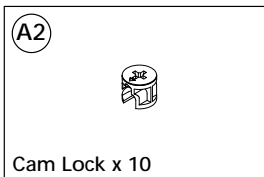
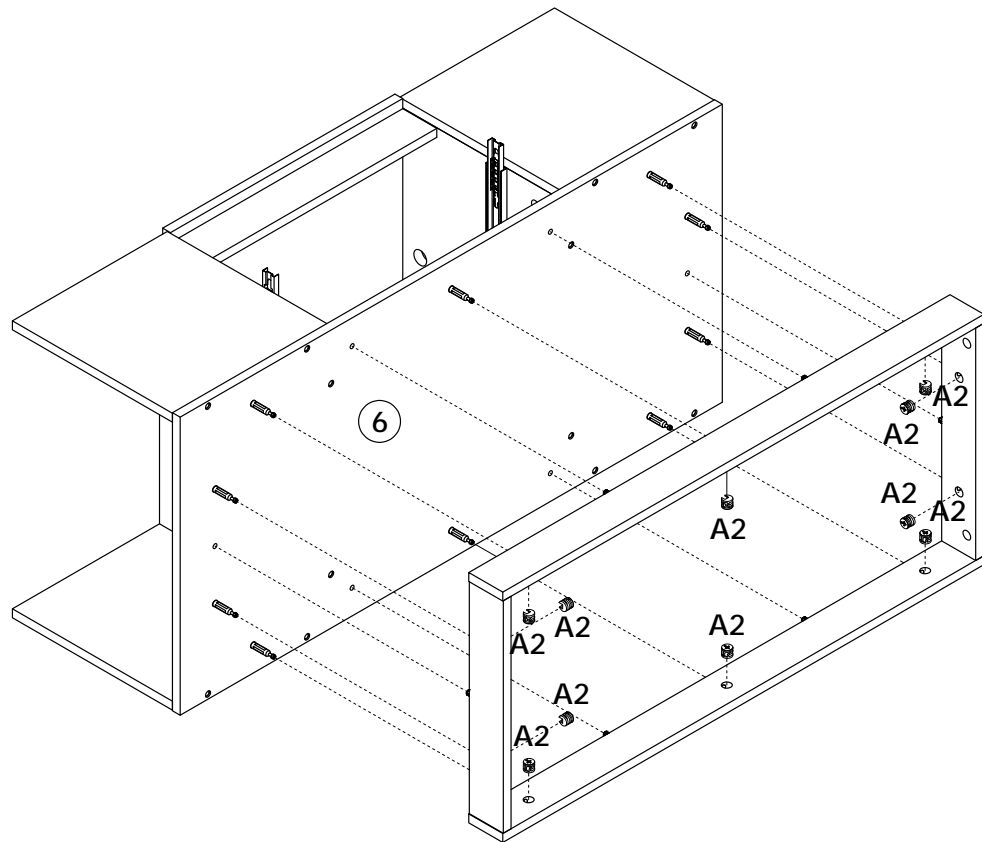


## Step 10

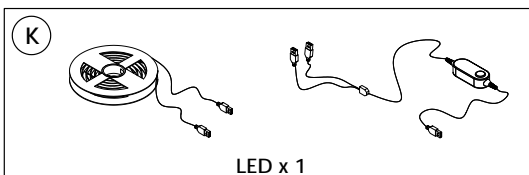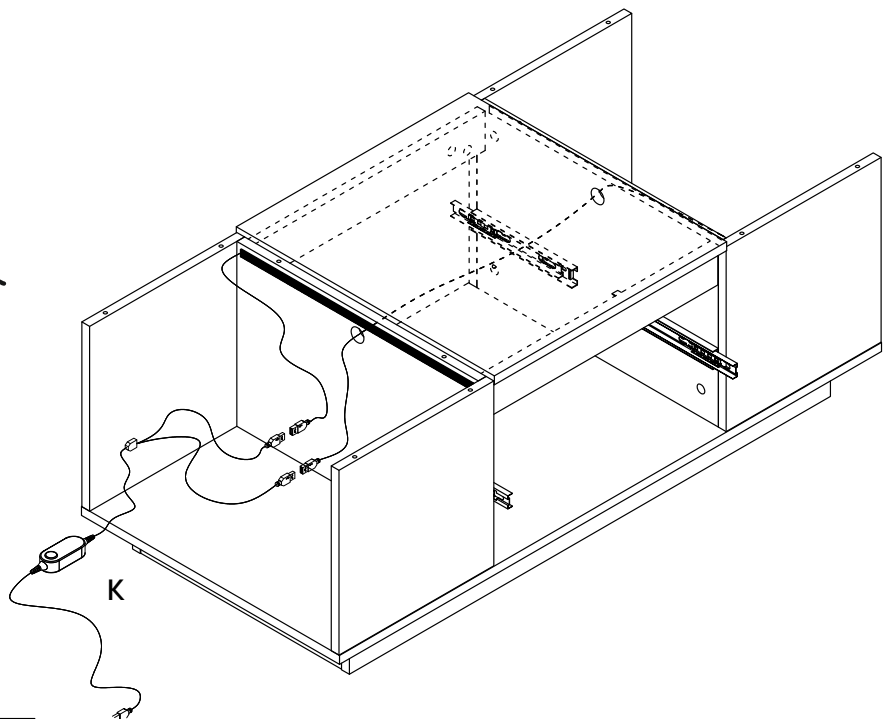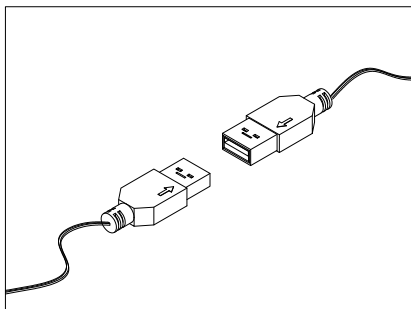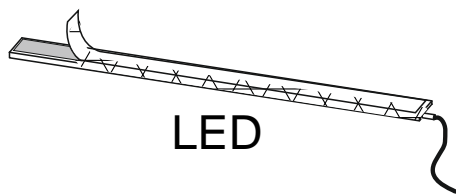

# Assembly Instructions




## Step 11

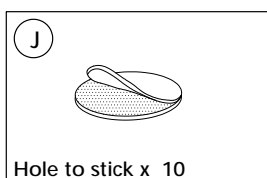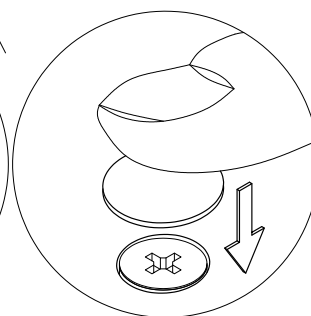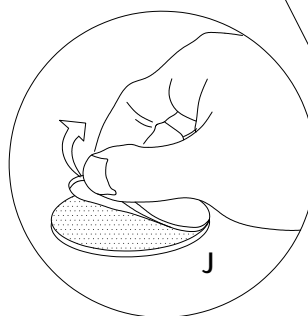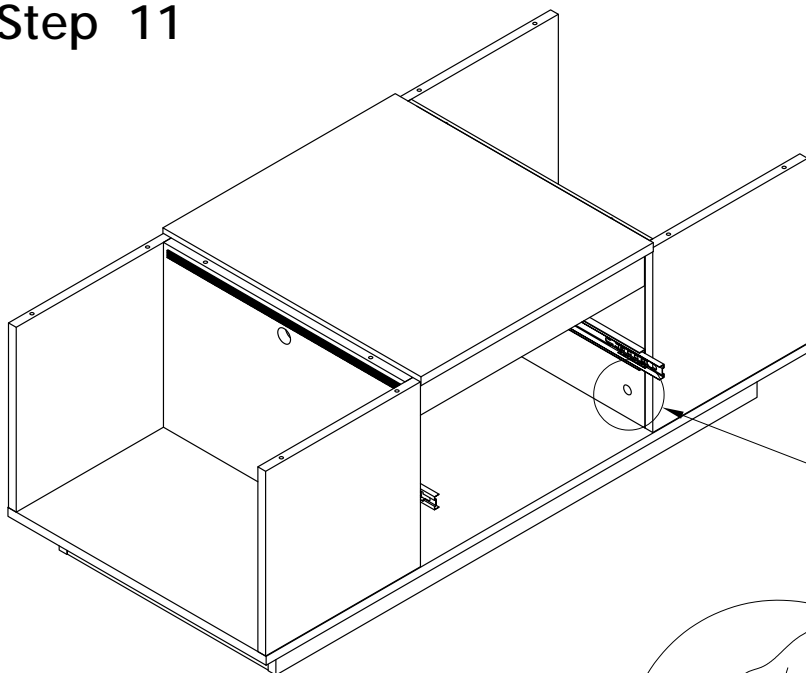


Hole to stick x 10

In order to make the product more beautiful, please paste hardware J on the exposed holes

## Step 12

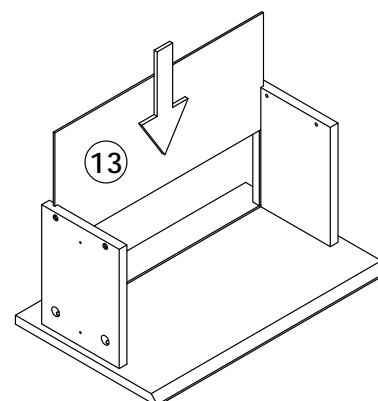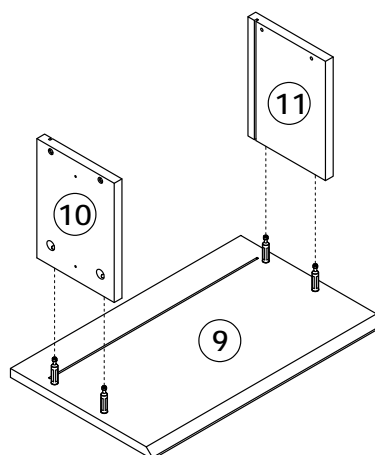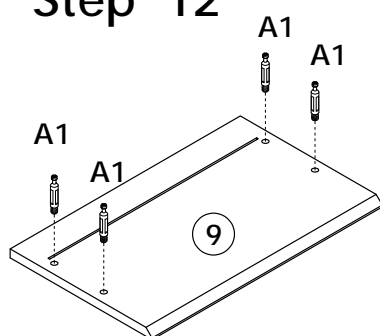




x 2

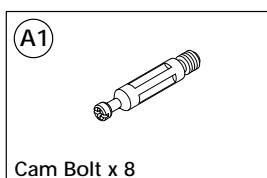

Cam Bolt x 8

# Assembly Instructions



## Step 13

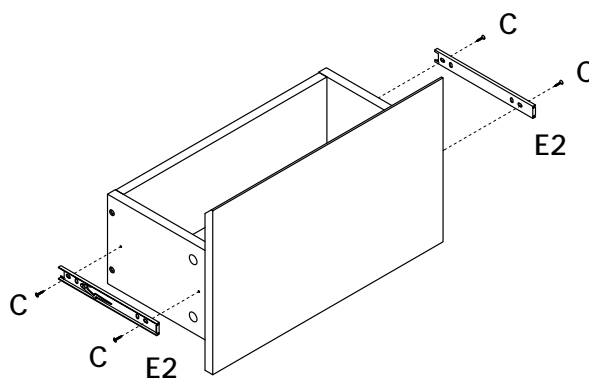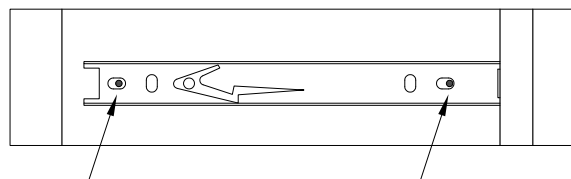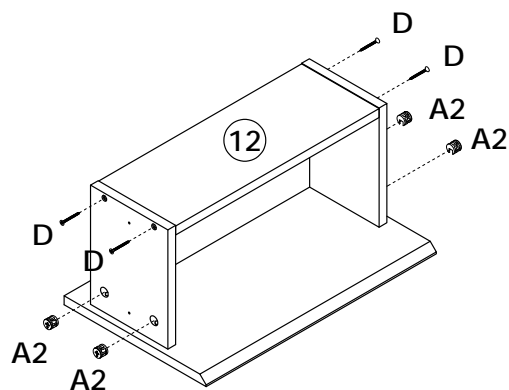

x 2




 Cam Lock x 8	 3.5*14mm Screw x 8	 3.5*35mm Screw x 8	 200mm Runner x 4
------------------	------------------------	------------------------	----------------------

## Step 14

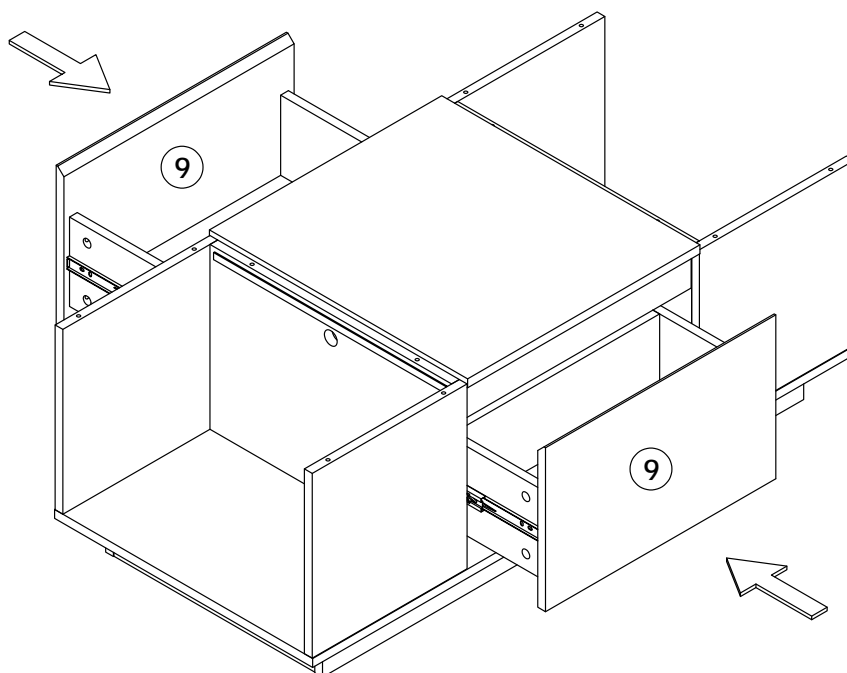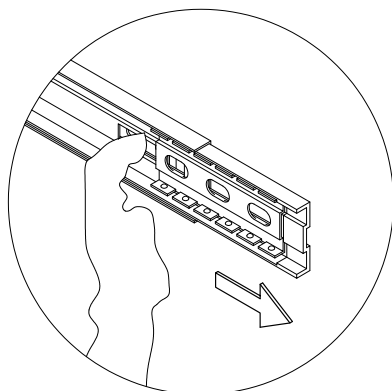

# Assembly Instructions

## Step 15

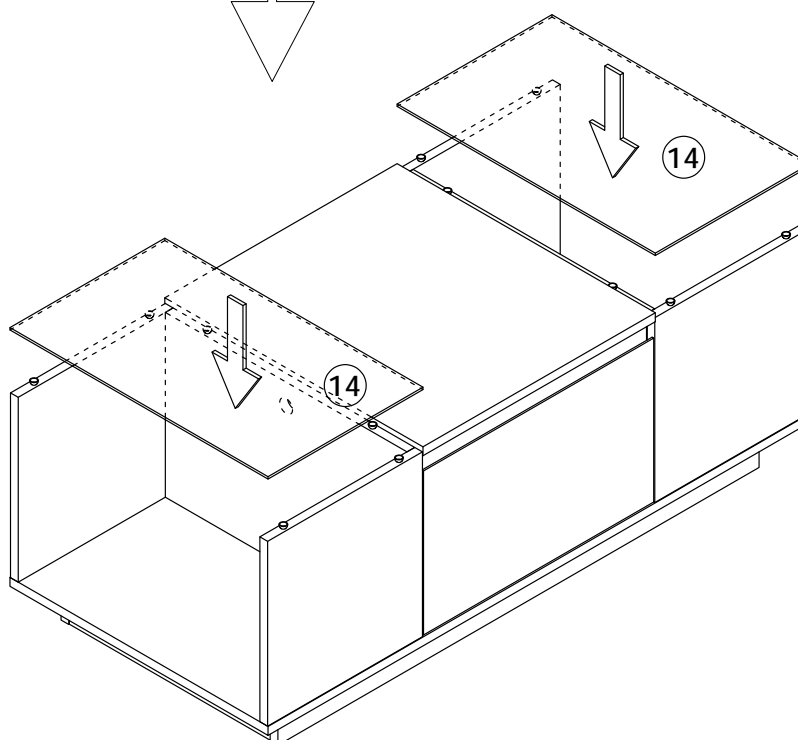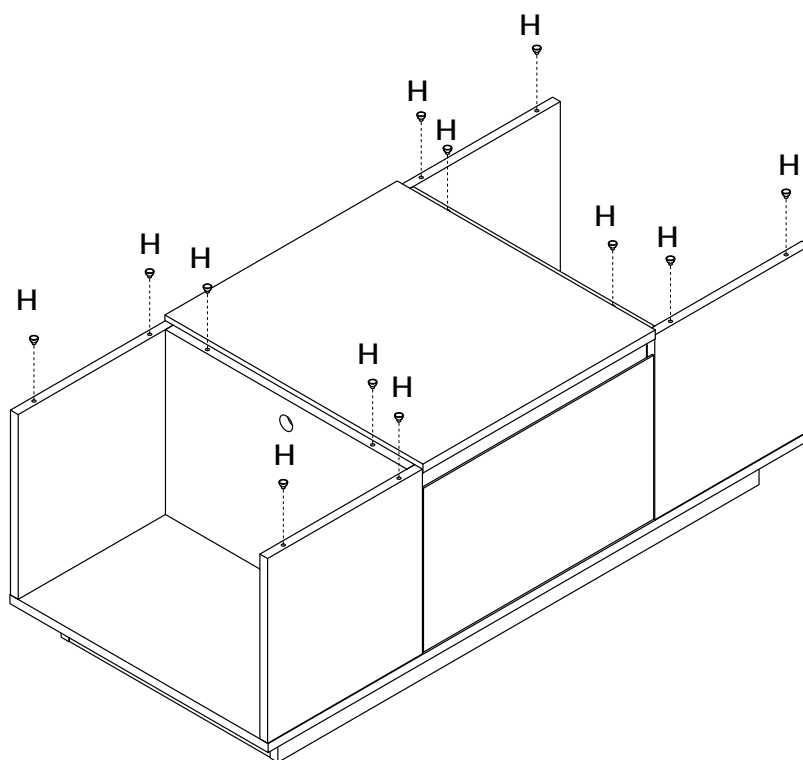

# Assembly Instructions

## Step 16

