


COFFEE TABLE

Assembly Instructions - Please keep for future reference

N724P290043

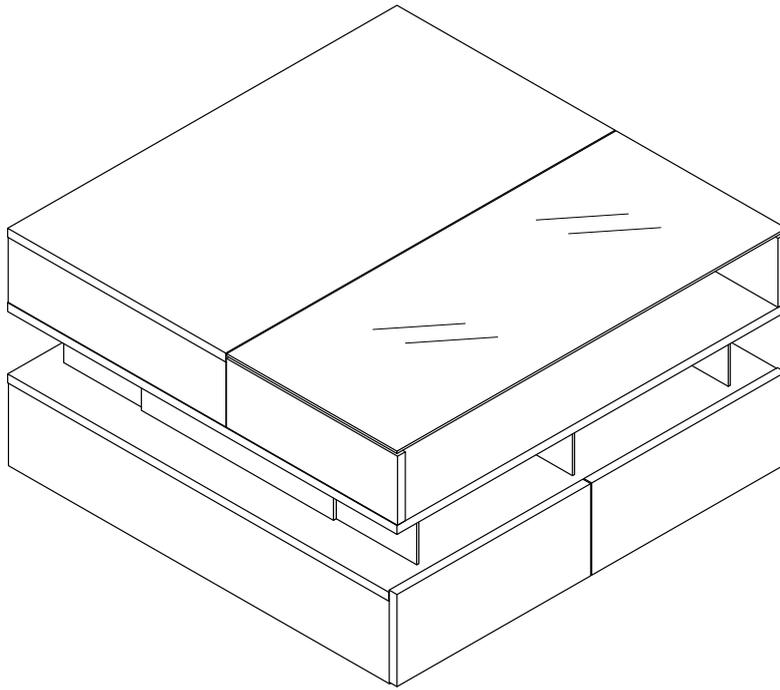

Dimensions

Width-29.53inch

Depth-29.53inch

Height-15.75inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning – please follow these instructions




To help prevent product toppling over please follow the below steps:-


- Use the anti tip stap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
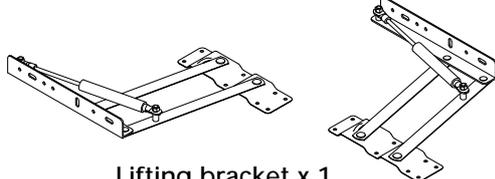
<p>A1</p>  <p>Cam Bolt x (51+2)</p>	<p>A2</p>  <p>Cam Lock x (51+2)</p>	<p>B</p>  <p>8*40mm Dowel x (42+2)</p>	<p>C</p>  <p>3.5*14mm Screw x (44+2)</p>
<p>D</p>  <p>3.5*35mm Screw x 8</p>	<p>E</p>  <p>400mm Runner x 2</p>		
<p>F</p>  <p>7*50mm Dowel x (17+1)</p>	<p>G</p>  <p>Ground nail x 8</p>	<p>H</p>  <p>sucking disc x 9</p>	<p>J</p>  <p>Hole to stick x 30</p>
<p>K</p>  <p>LED x 1</p>		<p>L</p>  <p>Lifting bracket x 1</p>	

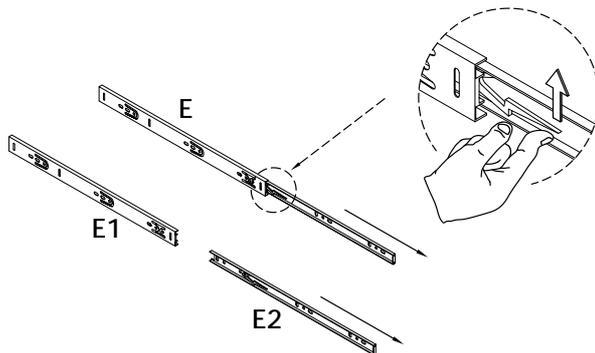

Tools required

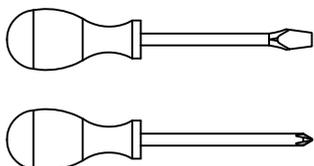


Phillips screwdriver
(medium & large)

Using Camlocks


Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

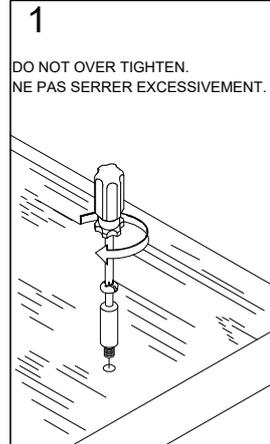

Step 2


Push the male camlock into the entry hole.

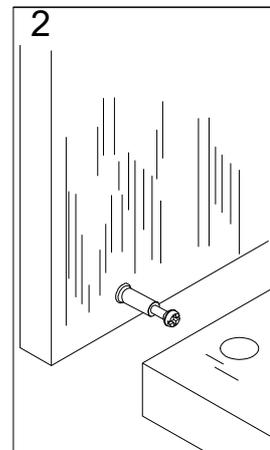

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

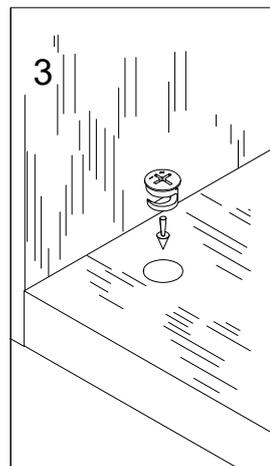


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.









The joint is now secure.

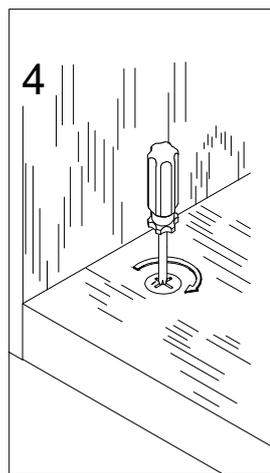

Assembly Instructions

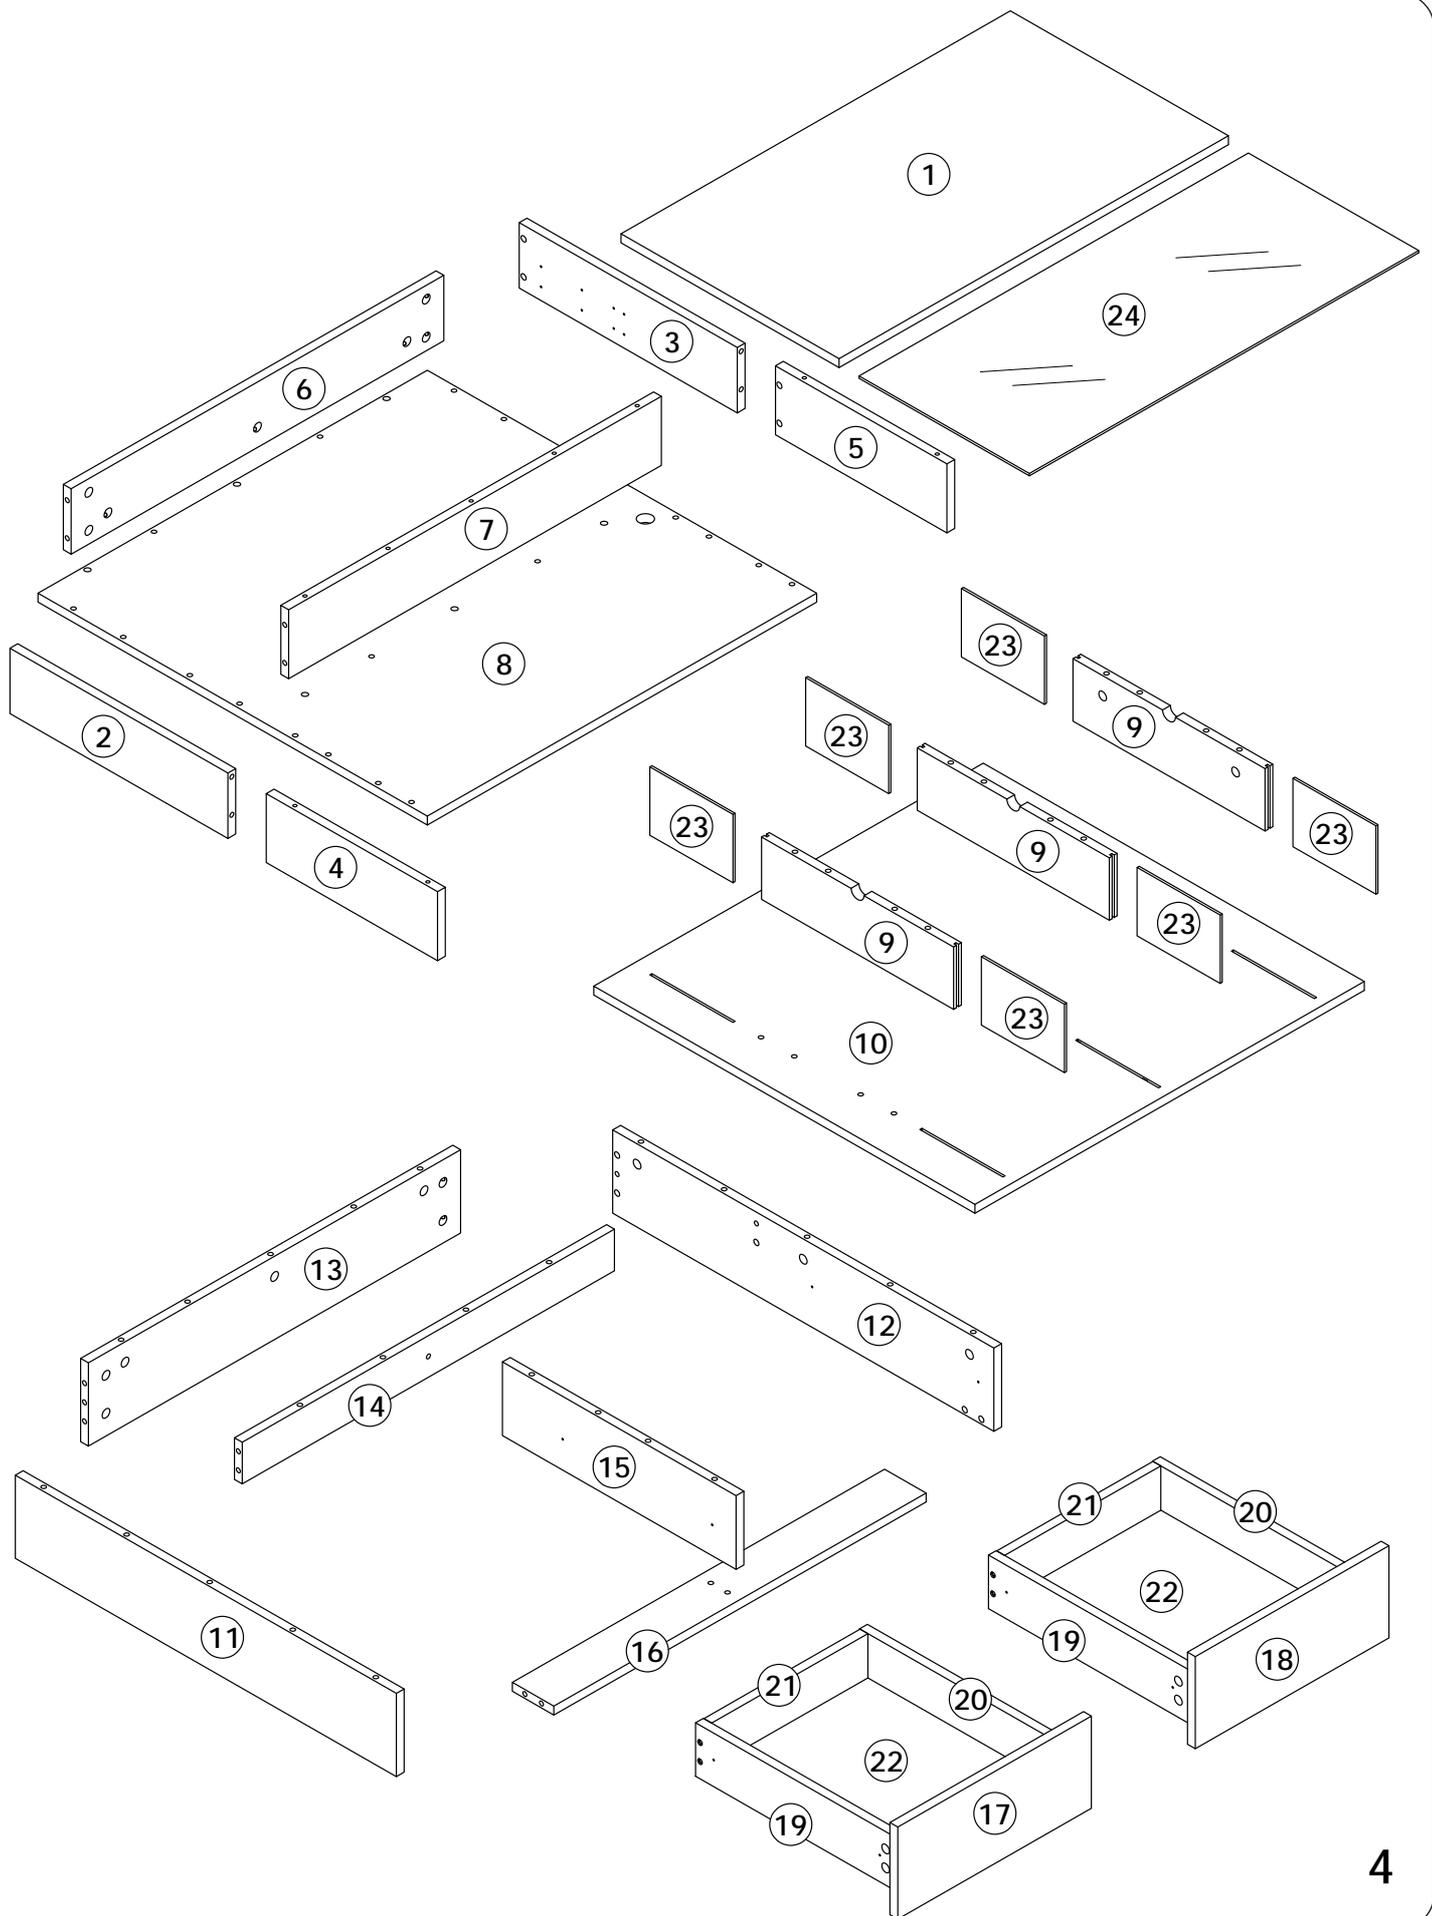


Assembly Instructions
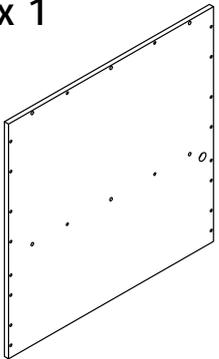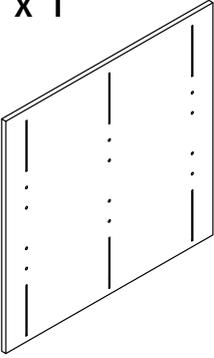
<p>① x 1</p>  <p>750x420x15mm</p>	<p>② x 1</p>  <p>420x110x15mm</p>	<p>③ x 1</p>  <p>420x110x15mm</p>	<p>④ x 1</p>  <p>330x116x15mm</p>
<p>⑤ x 1</p>  <p>330x116x15mm</p>	<p>⑥ x 1</p>  <p>718x110x15mm</p>	<p>⑦ x 1</p>  <p>718x116x15mm</p>	<p>⑧ x 1</p>  <p>750x750x15mm</p>
<p>⑨ x 3</p>  <p>370x105x15mm</p>	<p>⑩ x 1</p>  <p>750x734x15mm</p>	<p>⑪ x 1</p>  <p>734x140x15mm</p>	<p>⑫ x 1</p>  <p>734x140x15mm</p>
<p>⑬ x 1</p>  <p>717x140x15mm</p>	<p>⑭ x 1</p>  <p>717x70x15mm</p>	<p>⑮ x 1</p>  <p>450x124x15mm</p>	<p>⑯ x 1</p>  <p>717x80x15mm</p>

Assembly Instructions

17 x 1




373x155x15mm

18 x 1



373x155x15mm

19 x 2




400x90x15mm

20 x 2




400x90x15mm

21 x 2




301x90x15mm

22 x 2

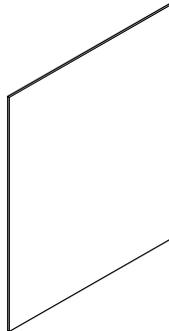


394x311x3mm

23 x 6



160x115x4mm


24 x 1

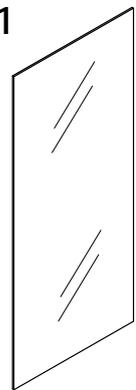

750x328x4mm





Assembly Instructions



Step 1

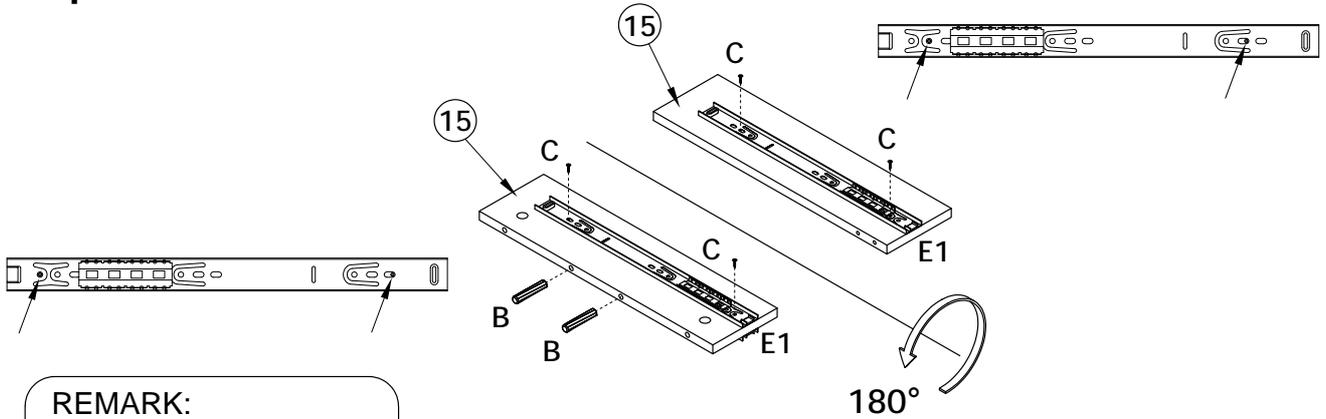

REMARK:




When installing, please make sure the screws are flattened, Not crooked; Otherwise the drawers will not be installed perfectly.

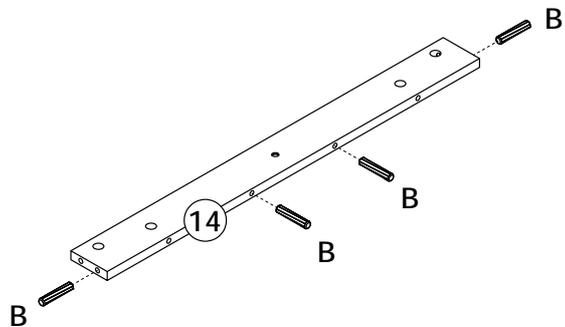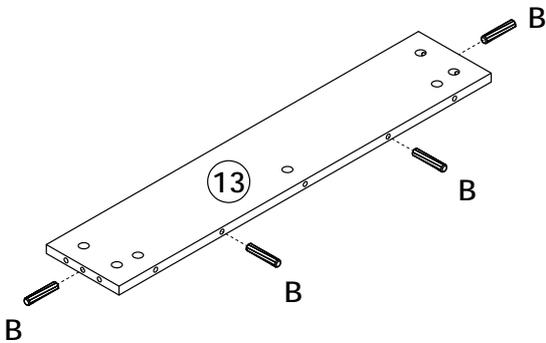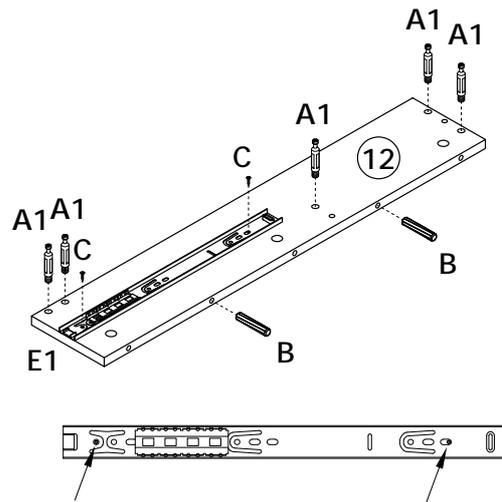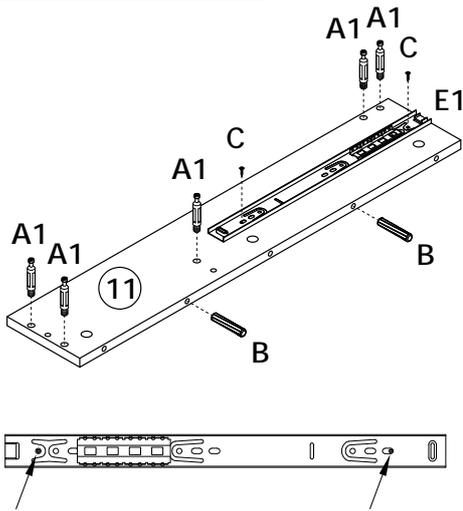
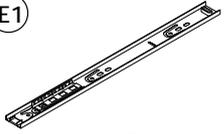
<p>(A1)</p>  <p>Cam Bolt x 10</p>	<p>(B)</p>  <p>8*40mm Dowel x 14</p>	<p>(C)</p>  <p>3.5*14mm Screw x 8</p>	<p>(E1)</p>  <p>400mm Runner x 4</p>
--	---	--	--

Assembly Instructions



Step 2

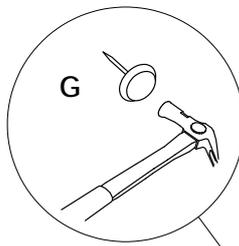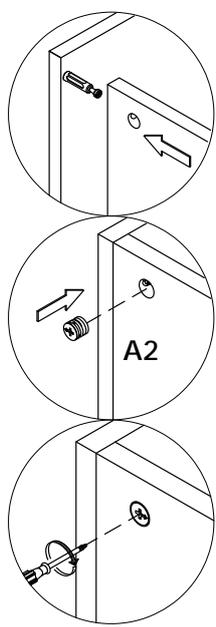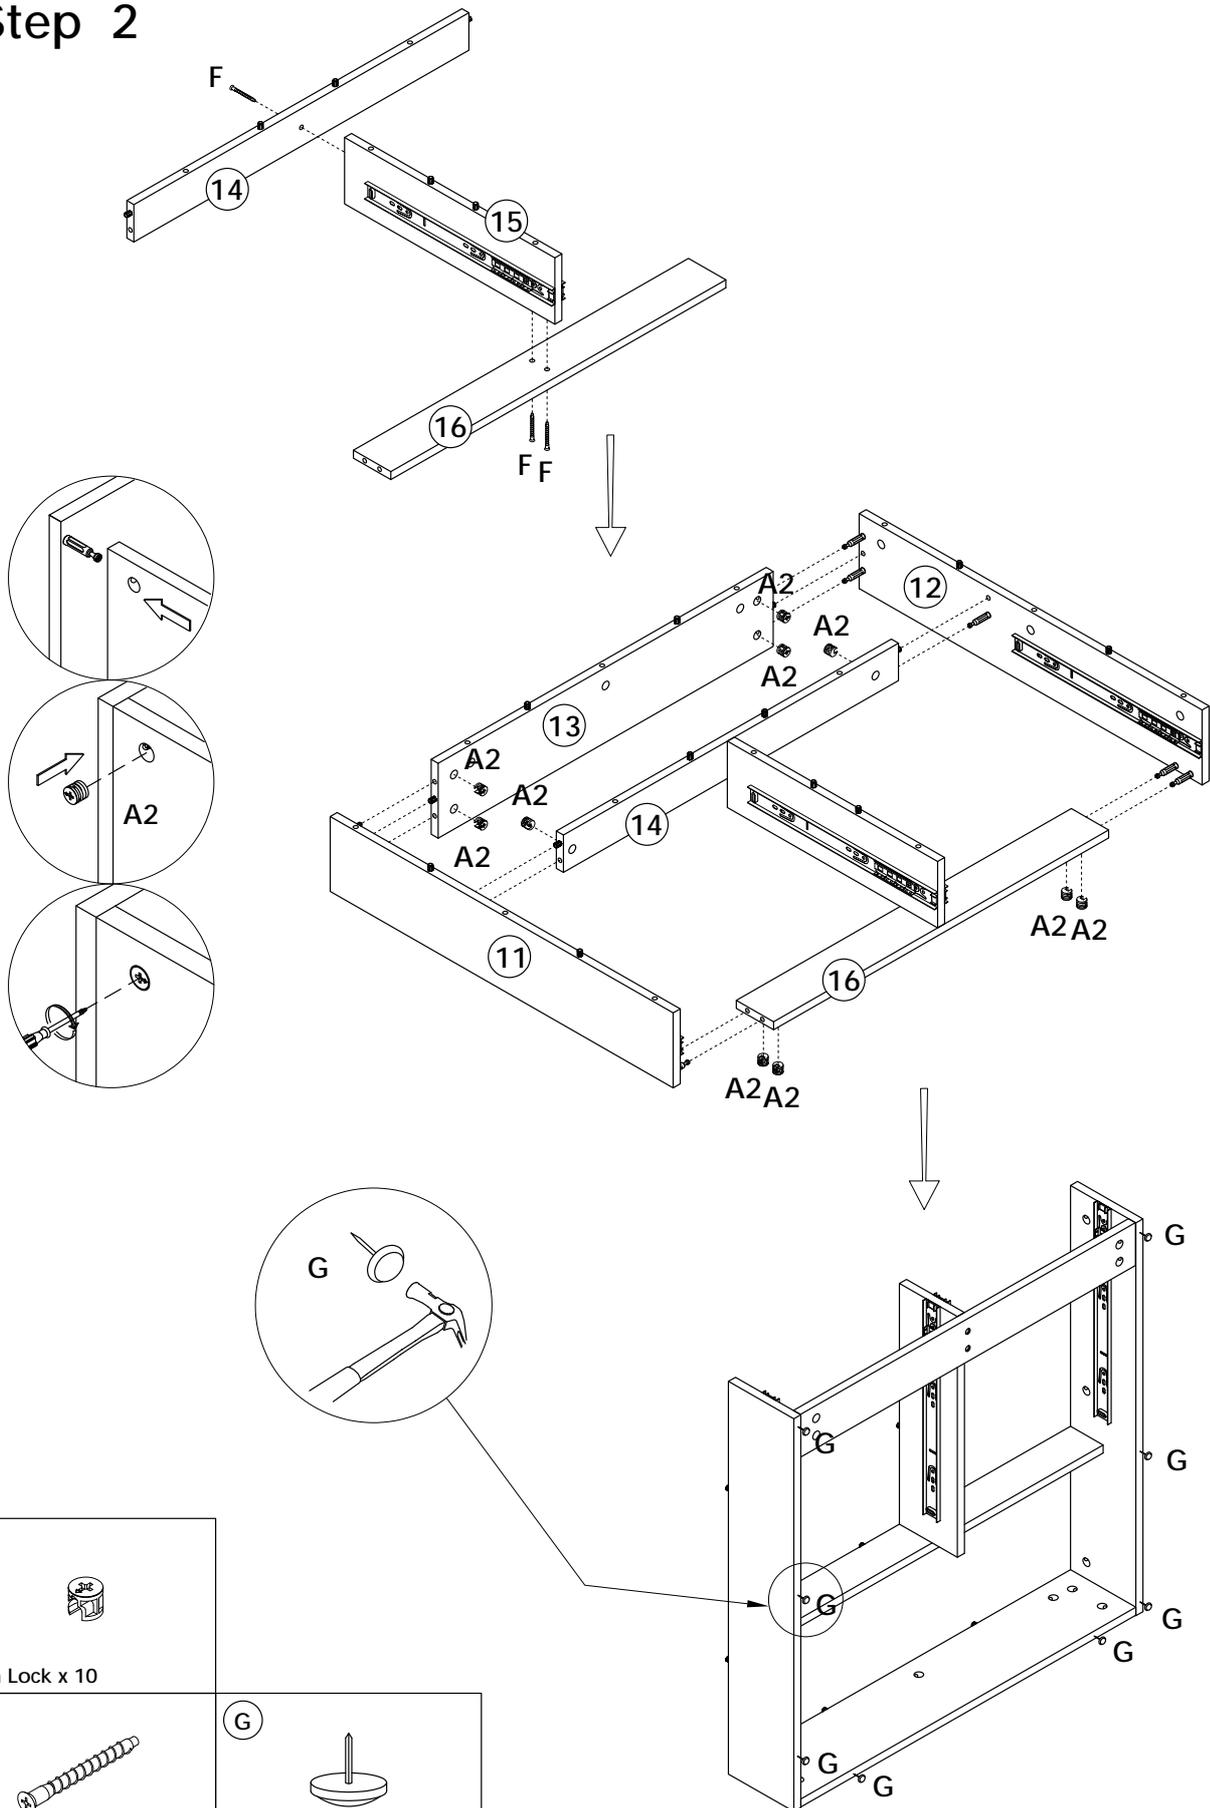

(A2) Cam Lock x 10	(G) Ground nail x 8
(F) 7*50mm Dowel x 3	




Assembly Instructions

Step 3

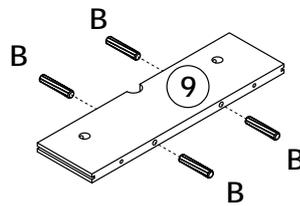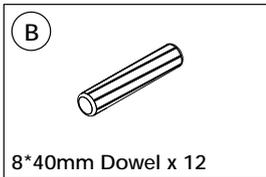





x 3

Step 4

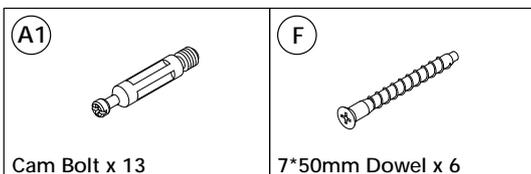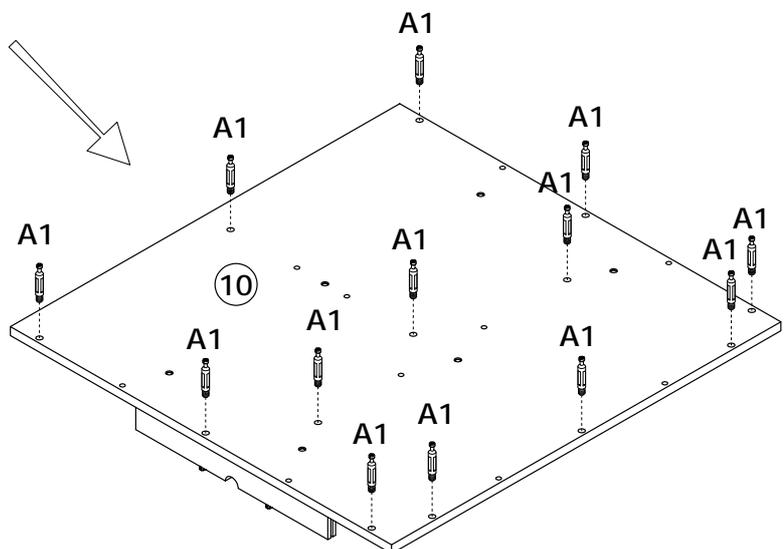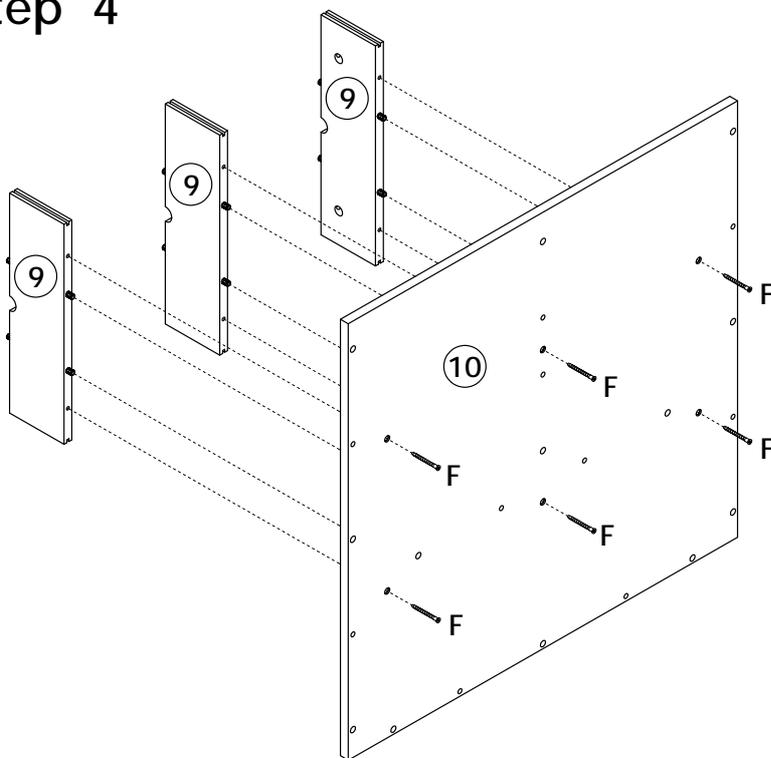

Assembly Instructions

Step 5

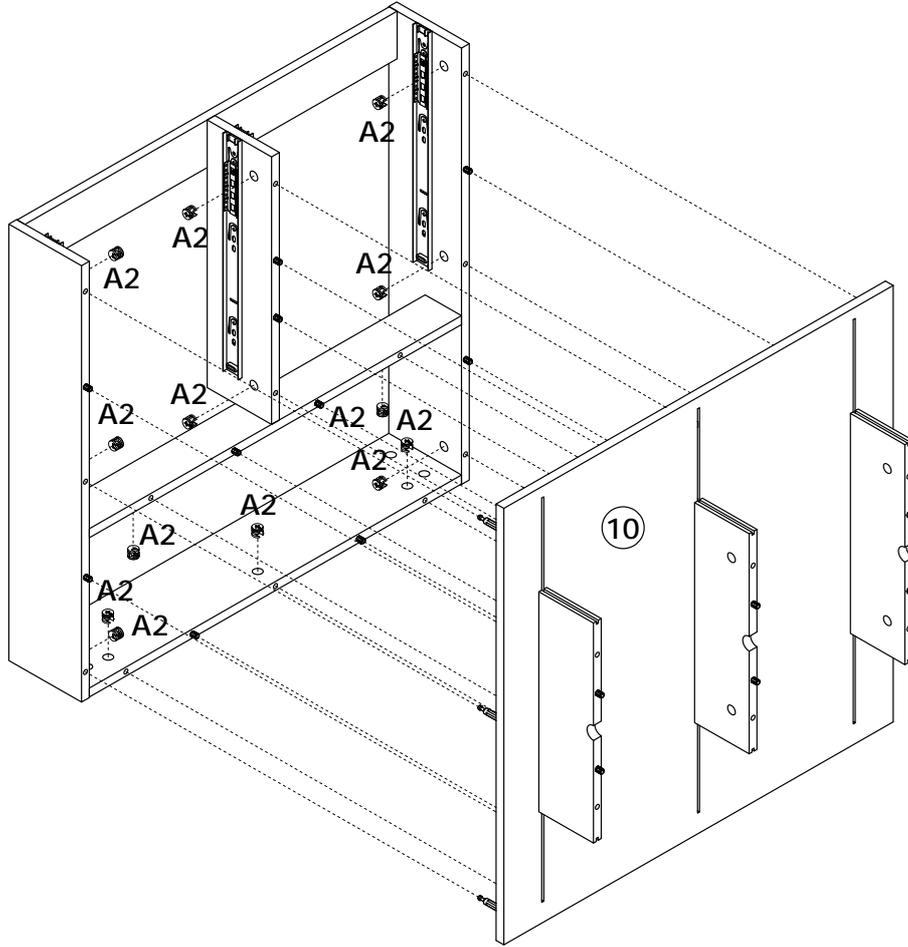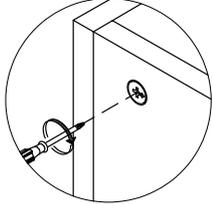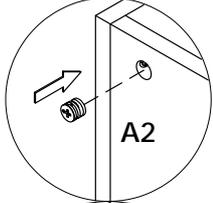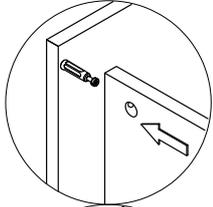


A2











Cam Lock x 13

Step 6

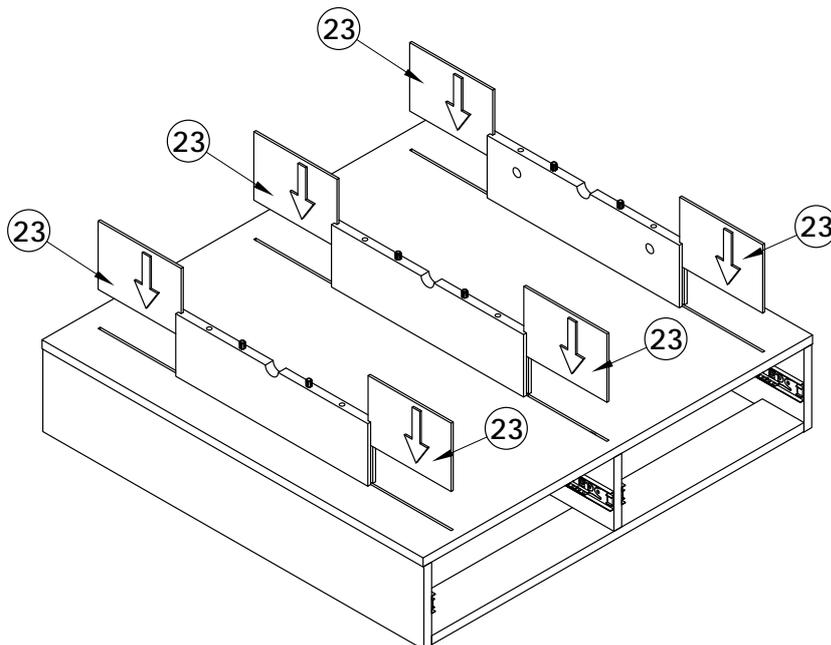



Assembly Instructions

Step 7

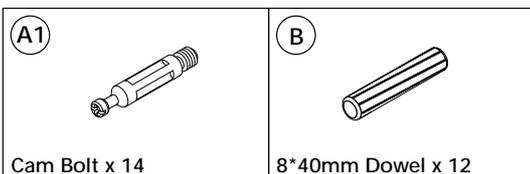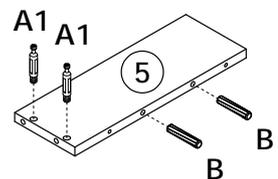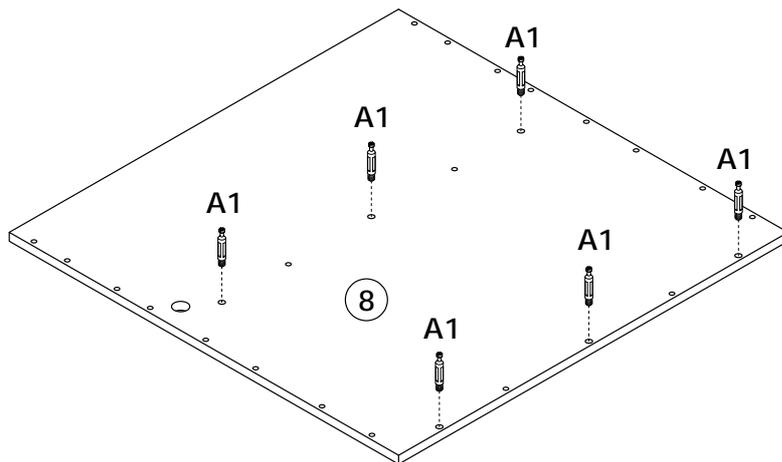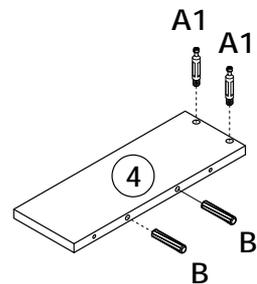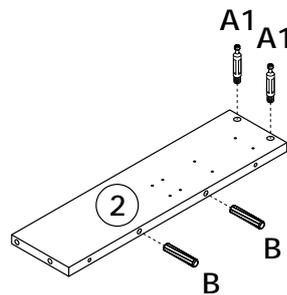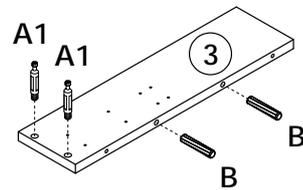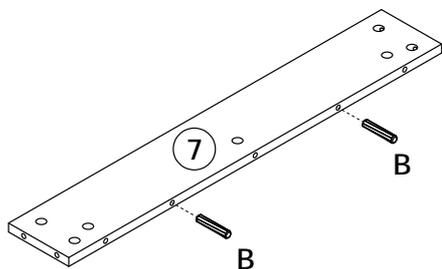
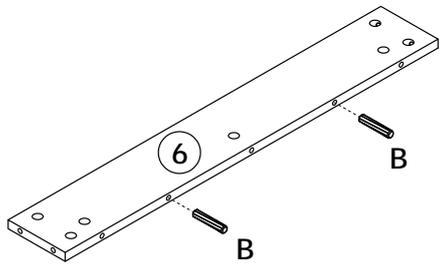


Assembly Instructions

Step 8

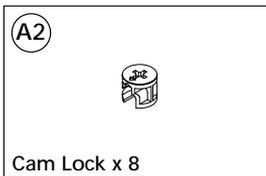
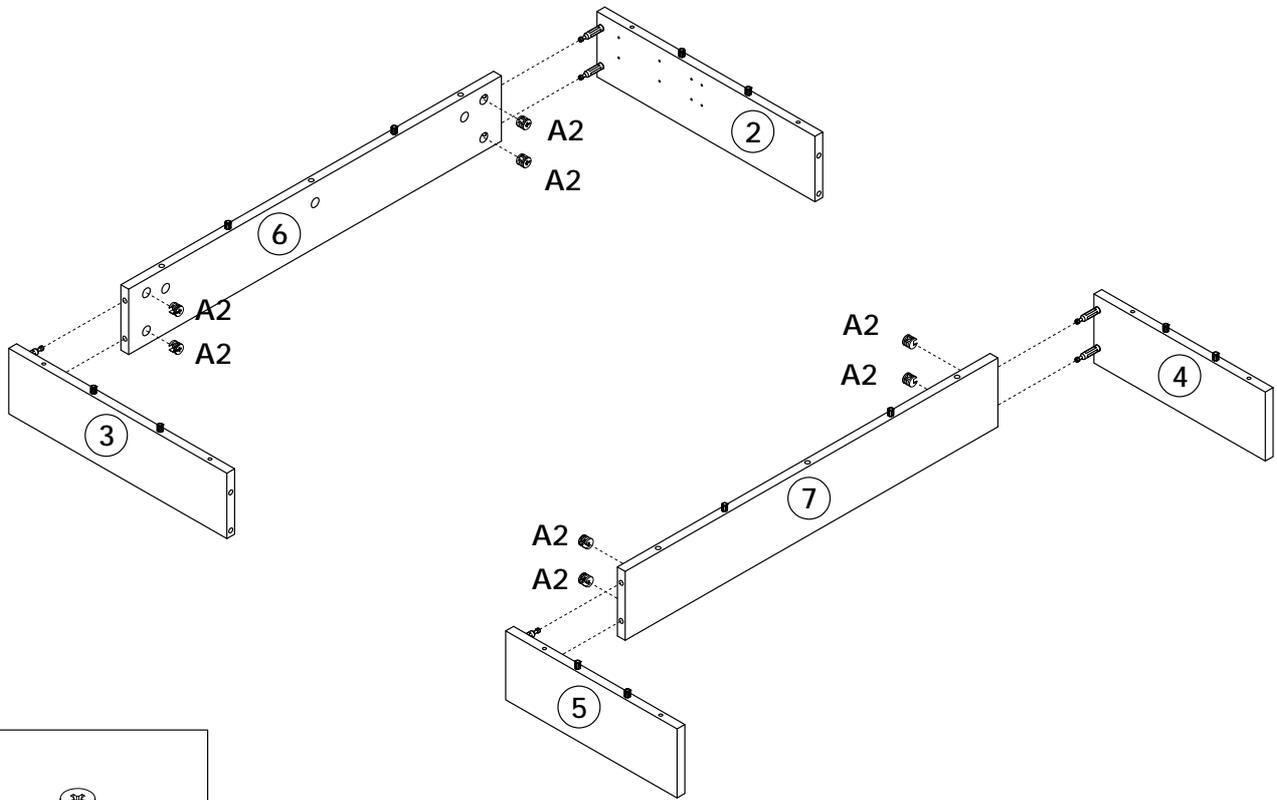


Step 9

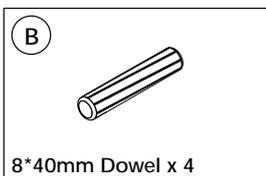
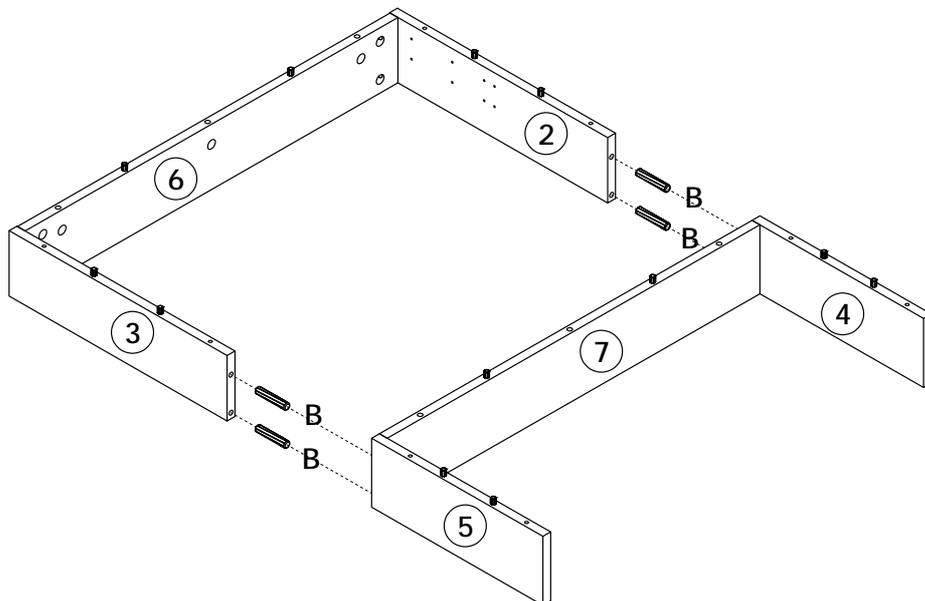


Assembly Instructions

Step 10

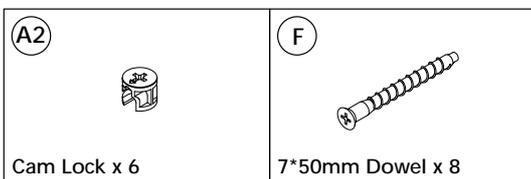
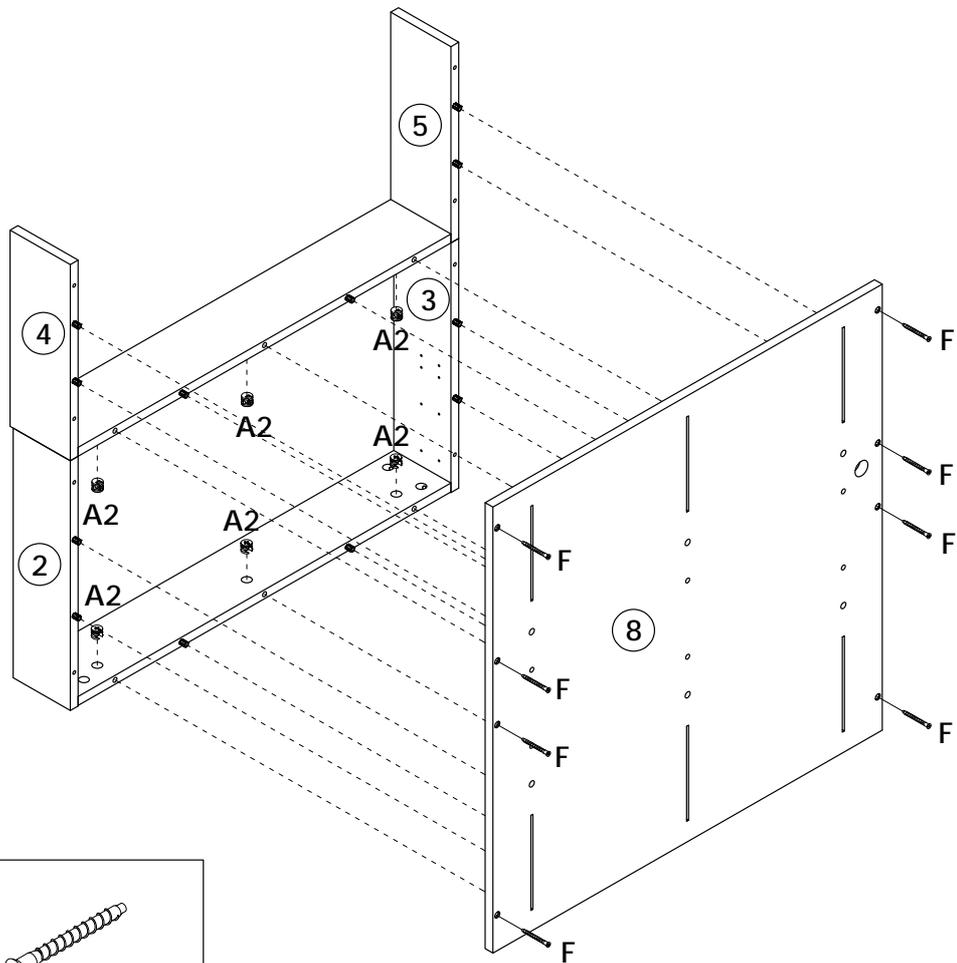


Step 11

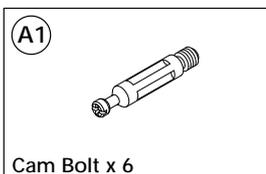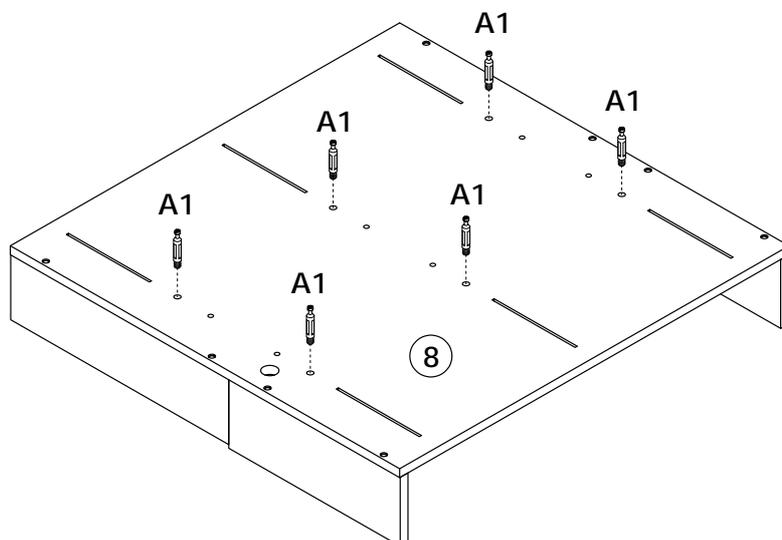






Assembly Instructions

Step 12

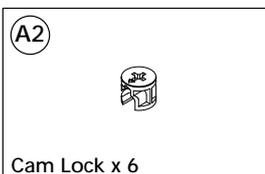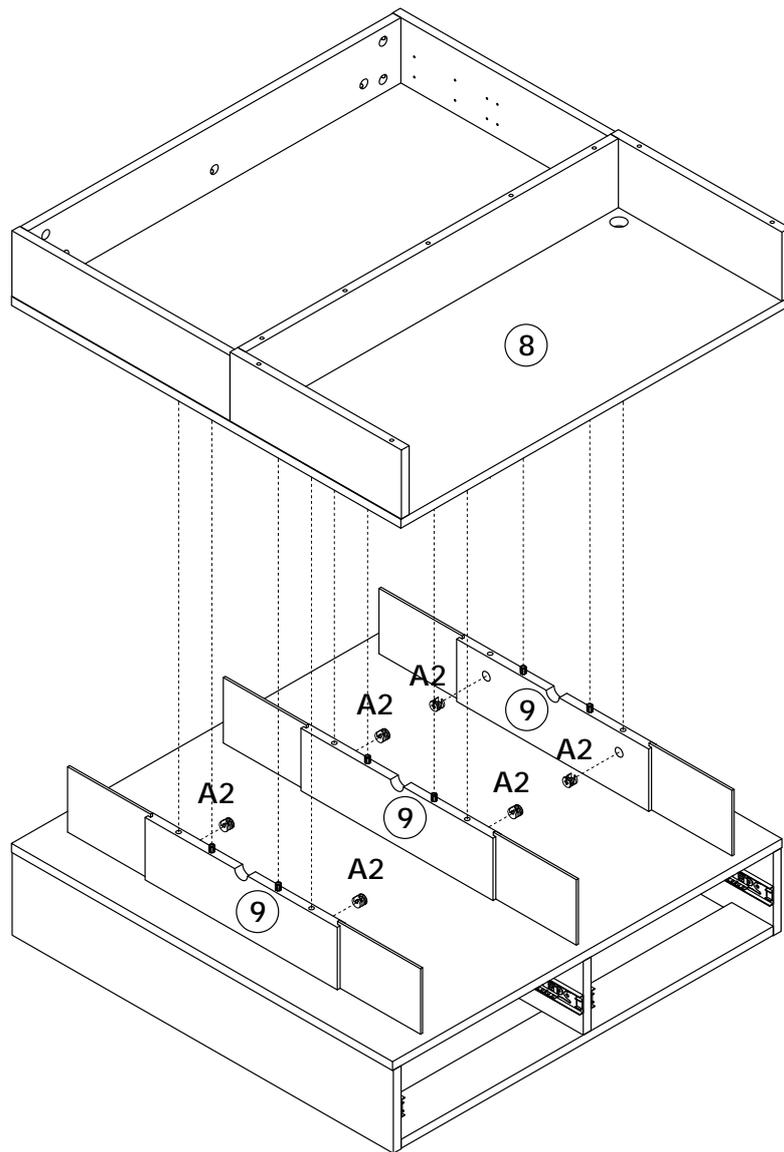




Assembly Instructions

Step 13

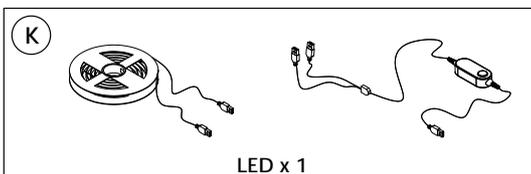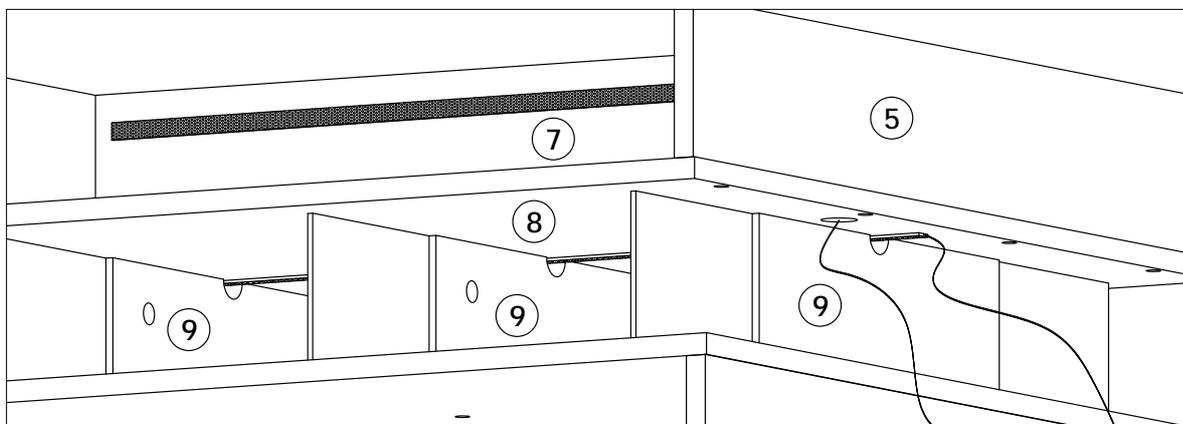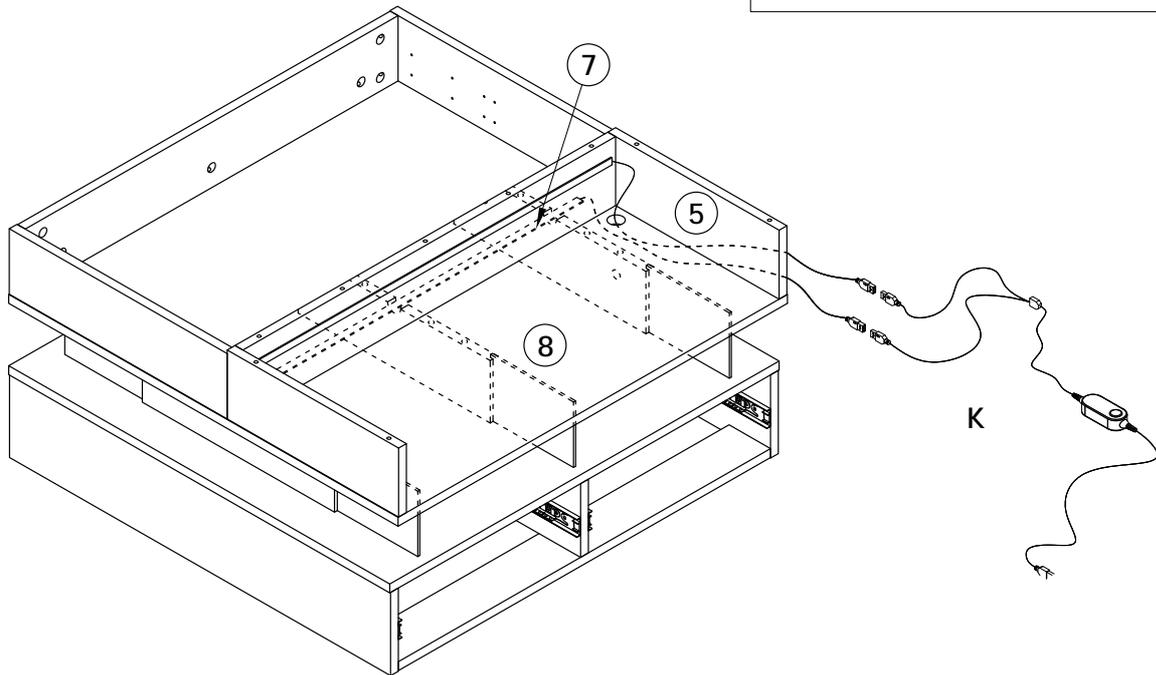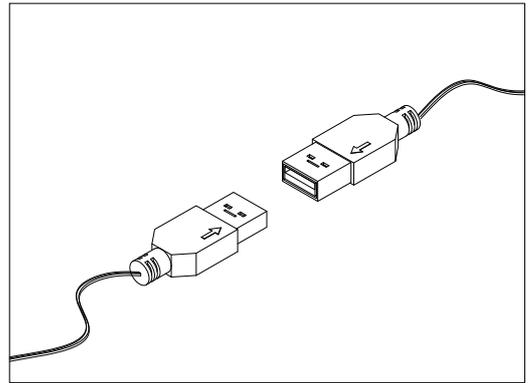
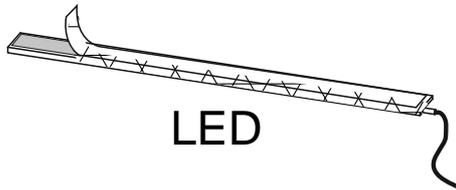


Assembly Instructions



Step 14

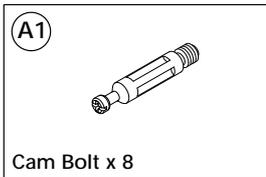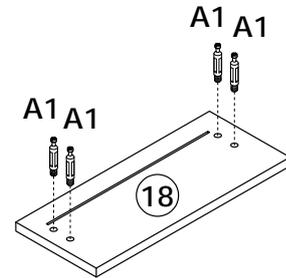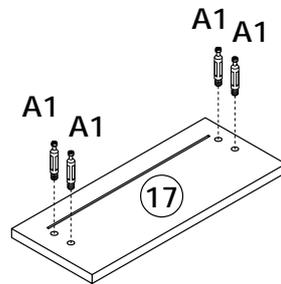

Step 15

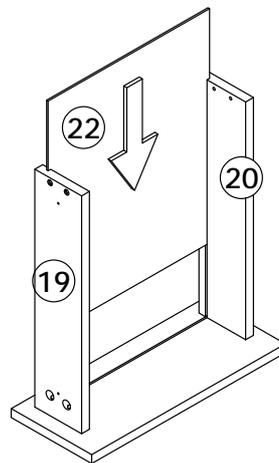
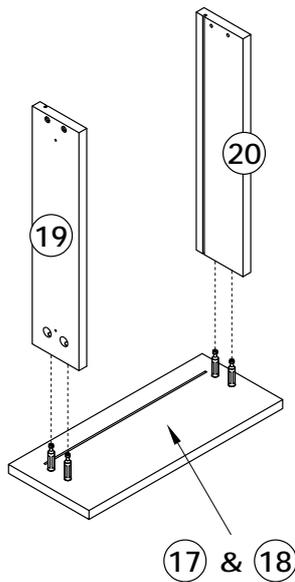


x 2

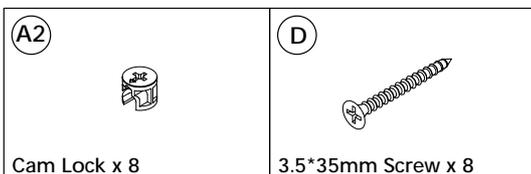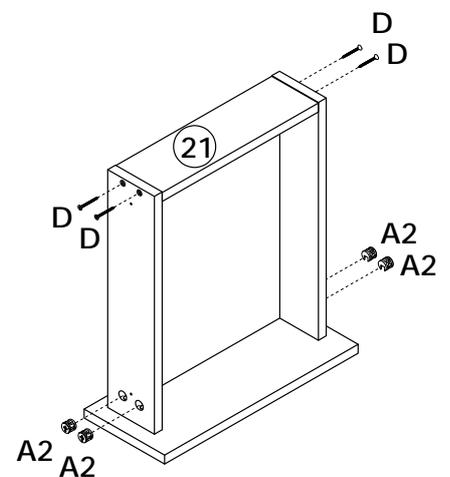


Assembly Instructions

Step 16

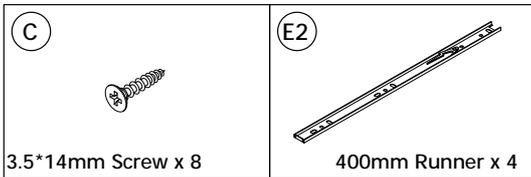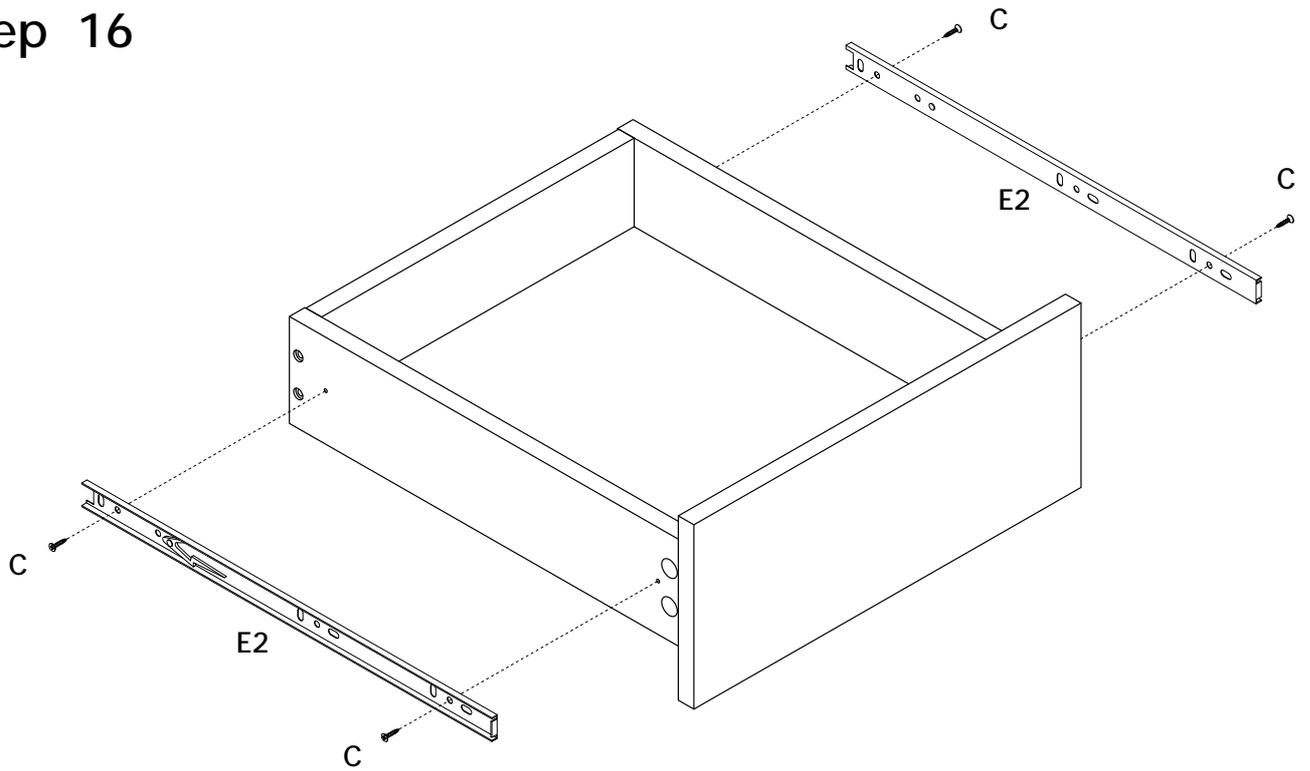


x 2

Step 17

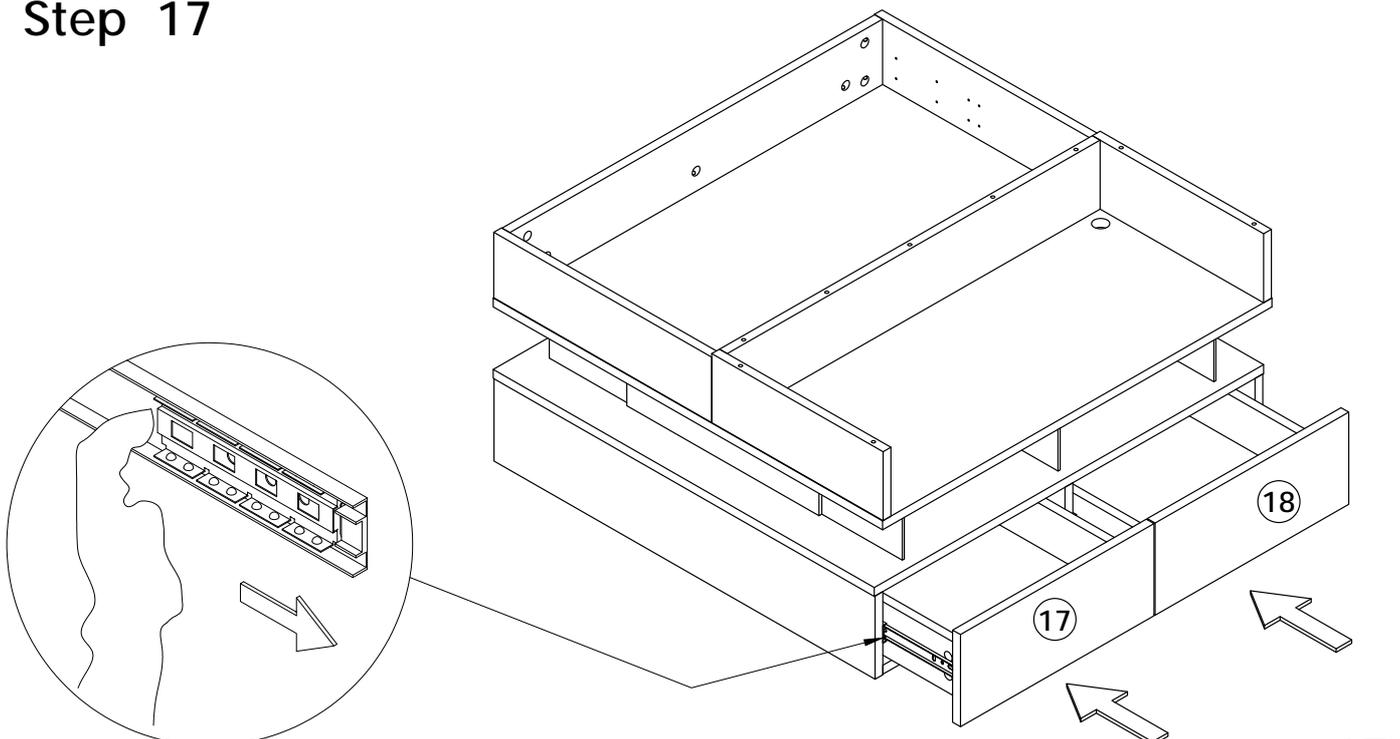


Assembly Instructions



Step 18

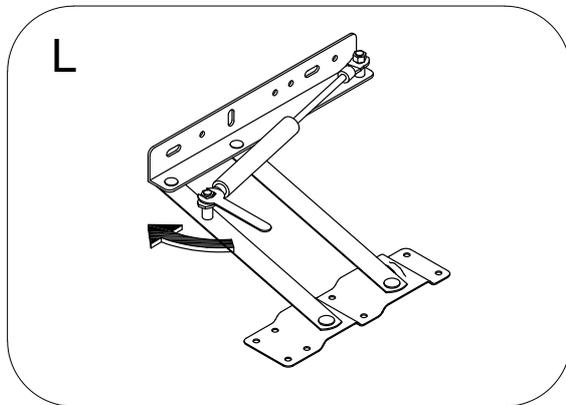


Loosen the screws here, as shown.

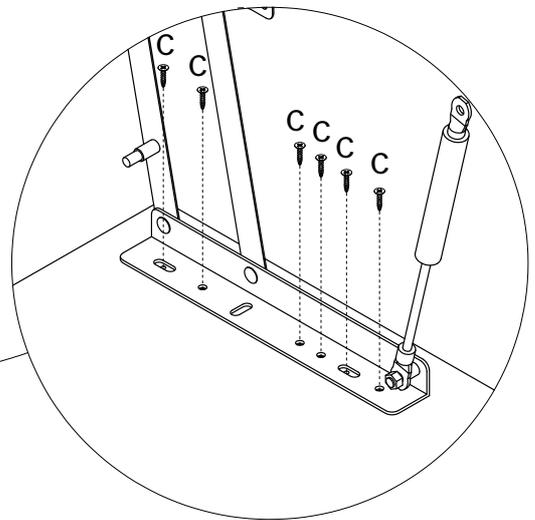

Fix the hardware L firmly on the plate 1 with the self-tapping thread C

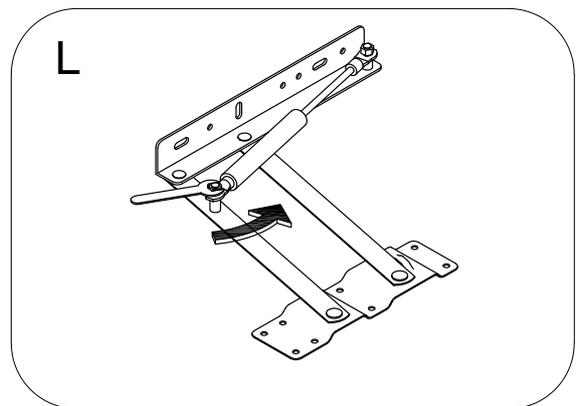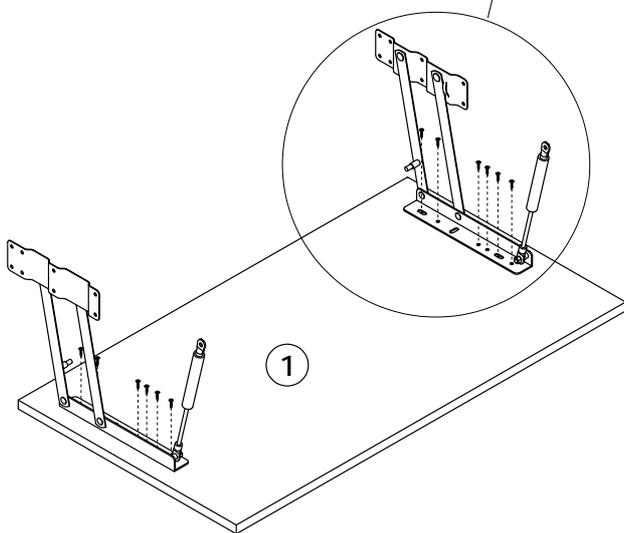


Tighten the screws on hardware L here.

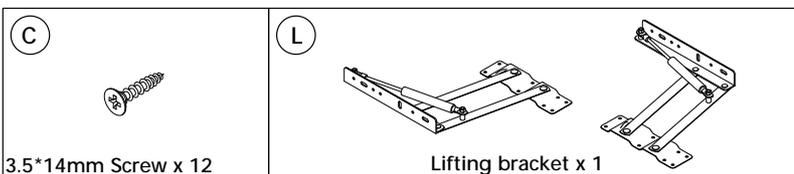


Assembly Instructions

Step 19

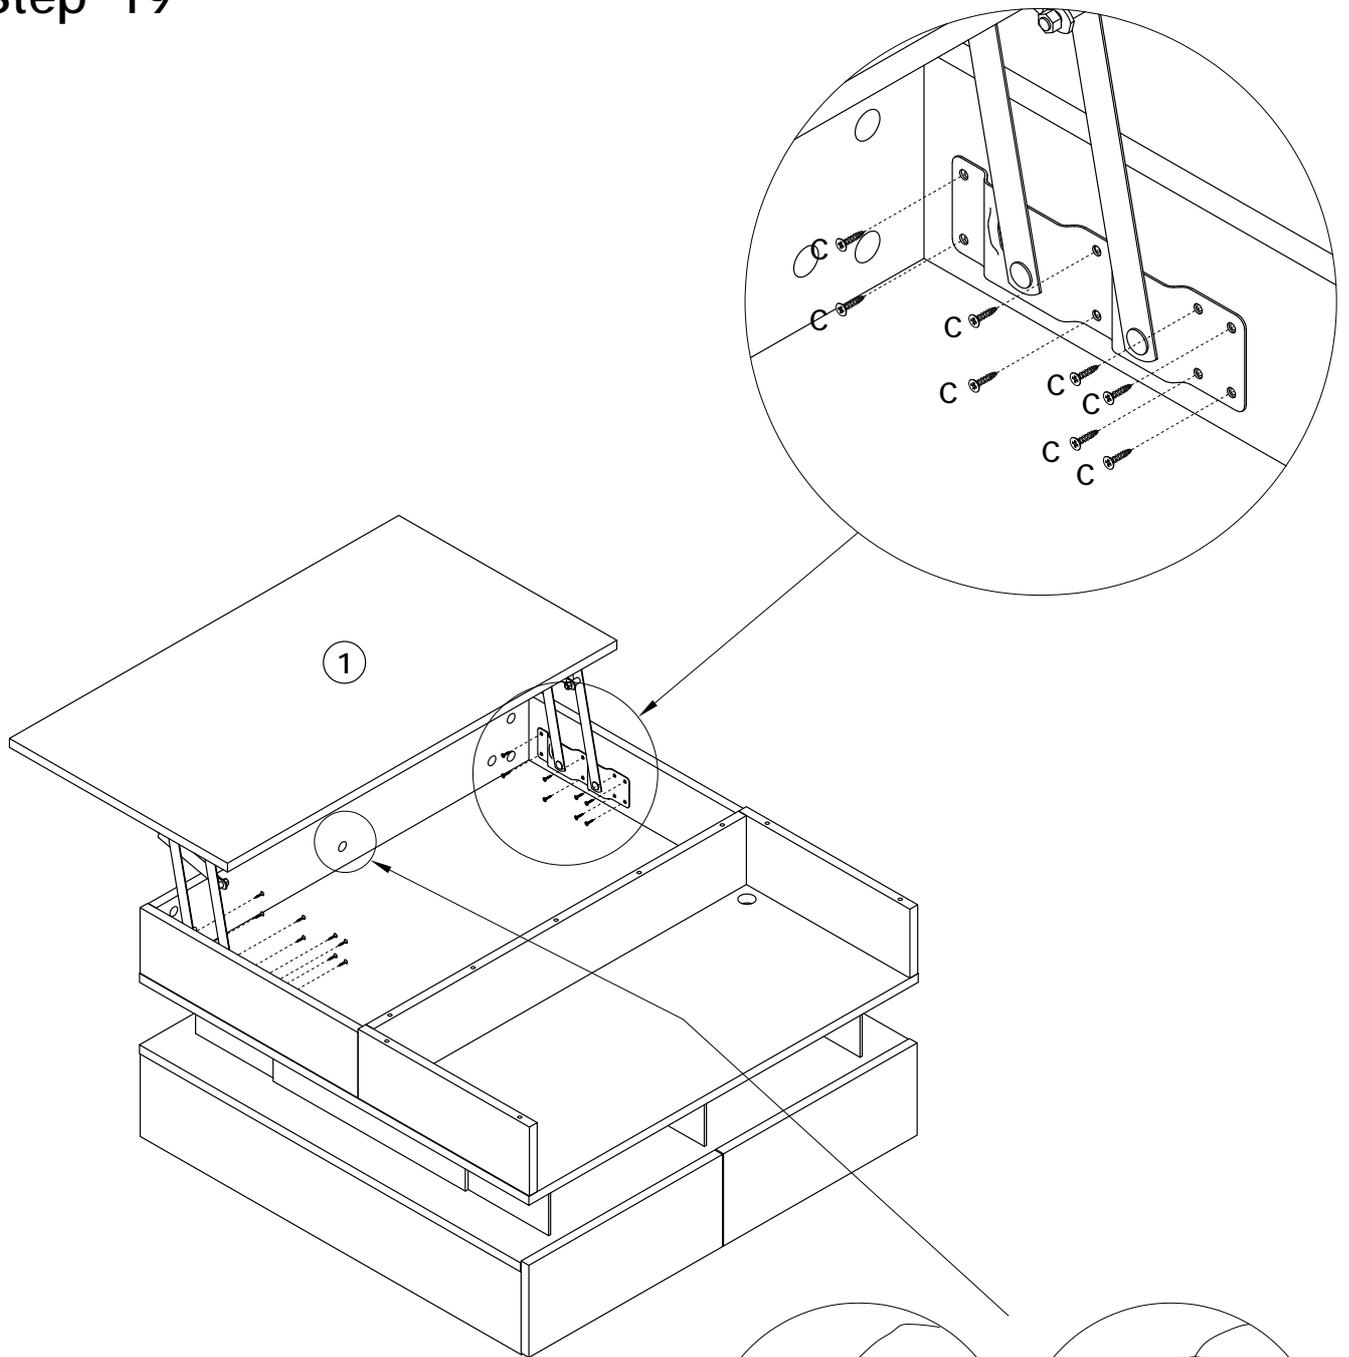





In order to make the product more beautiful, please paste hardware J on the exposed holes

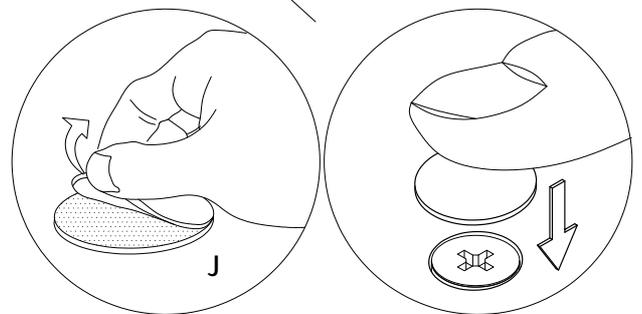

<p>(C)</p>  <p>3.5*14mm Screw x 16</p>	<p>(J)</p>  <p>Hole to stick x 30</p>
---	--

Assembly Instructions

Step 10

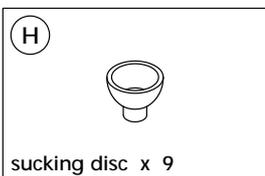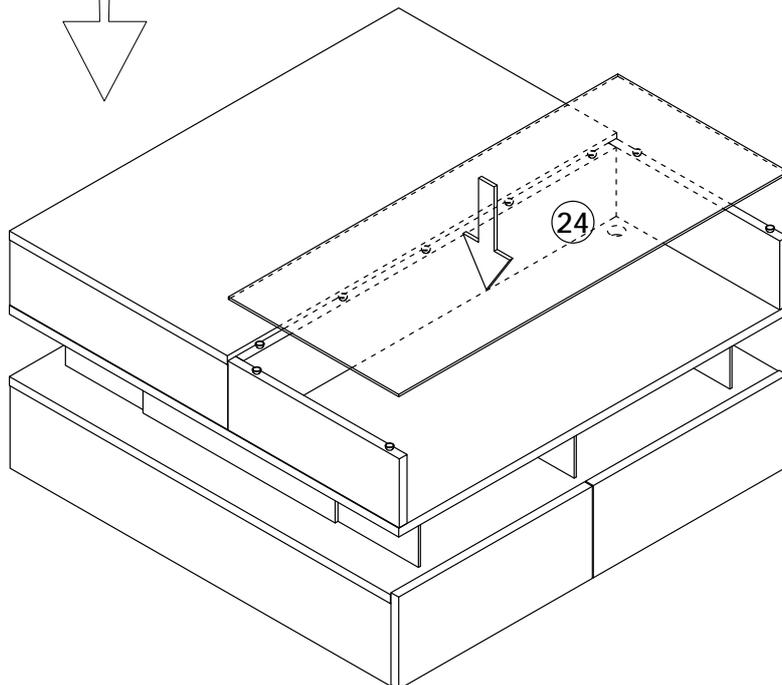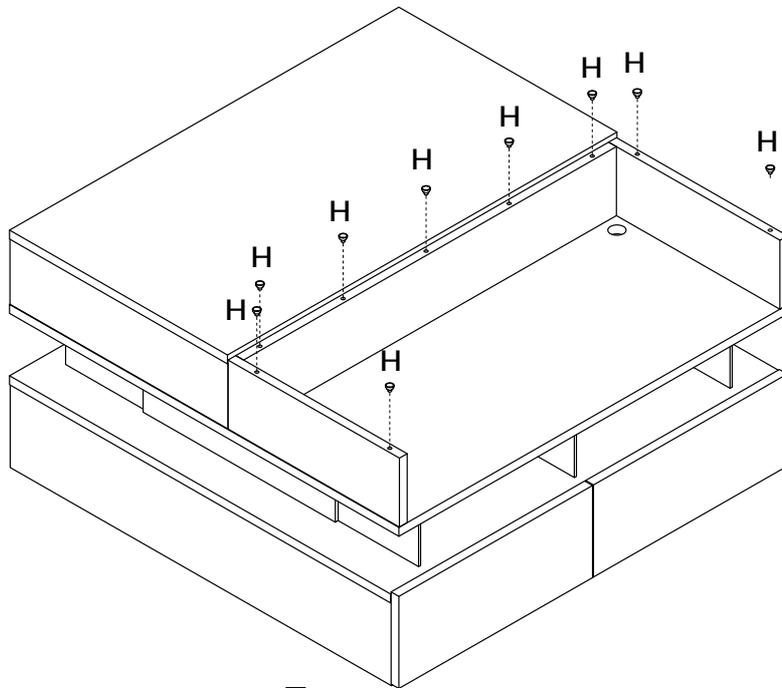

Assembly Instructions

Step 11

