





ASSEMBLY INSTRUCTION

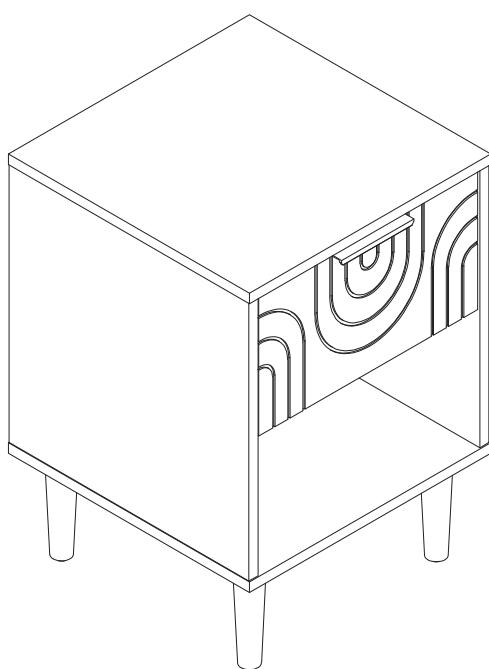

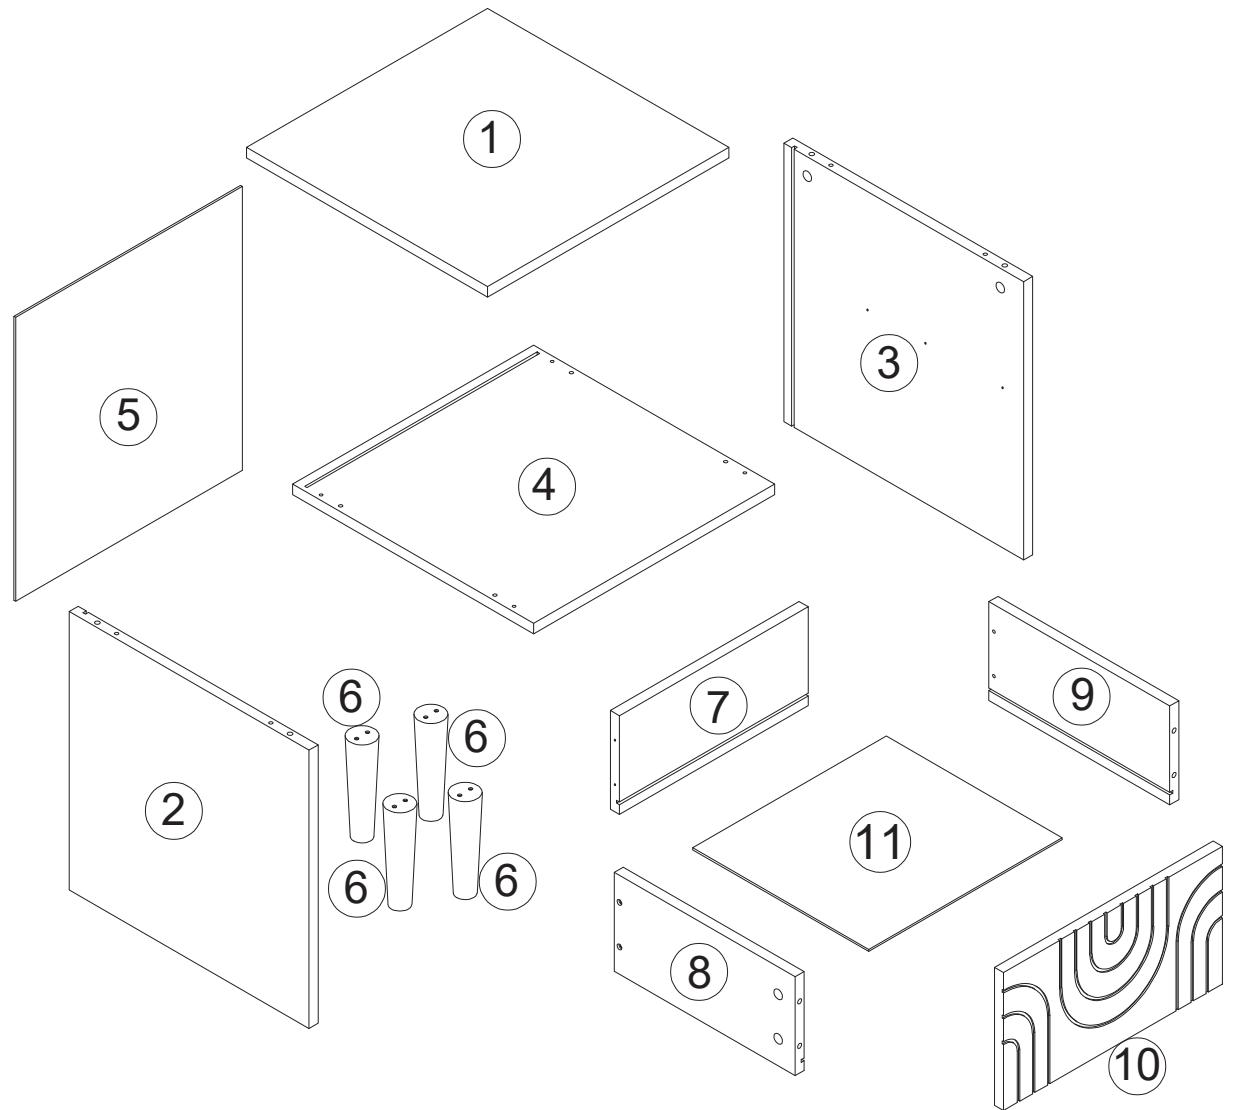


A×8	B×8	C×8	D×14 3×12mm	E×4	F×16 4×14mm	G×8 4×35mm
H×8 4×30mm	I×1	J×4	K×4 3×14mm	L×4	CL×1	DL×1
CR×1	DR×1					


STEP 1

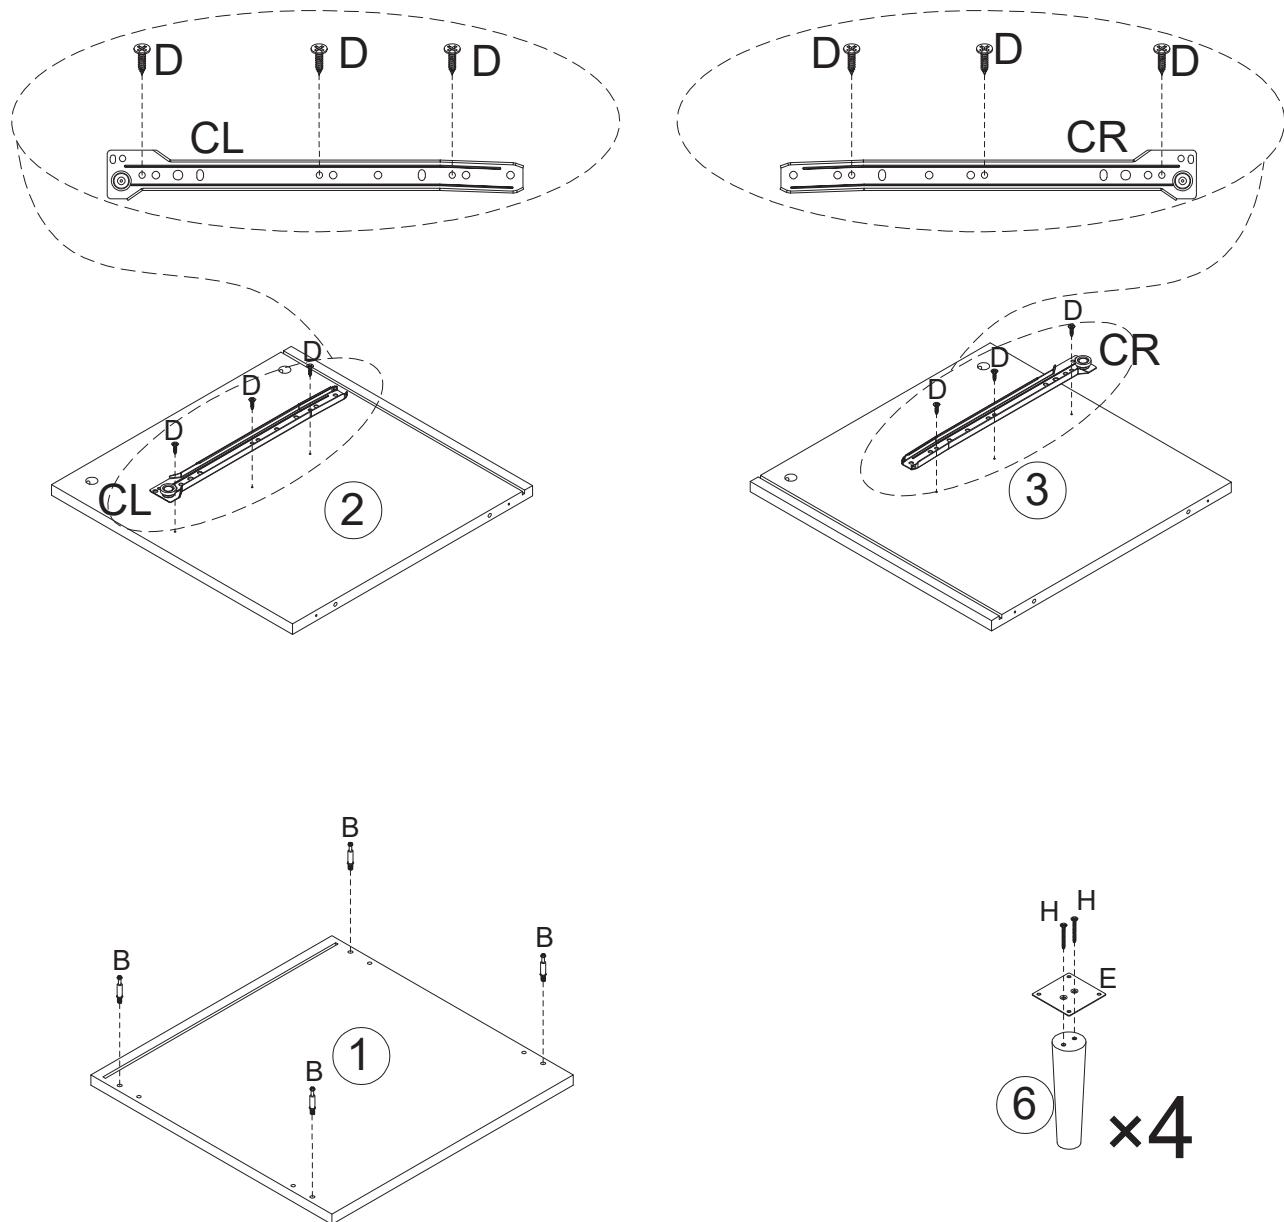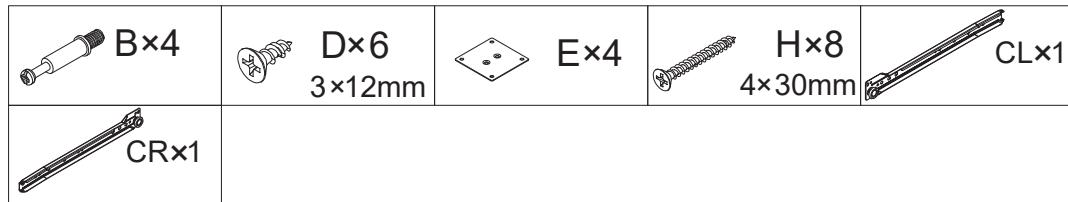



STEP 2

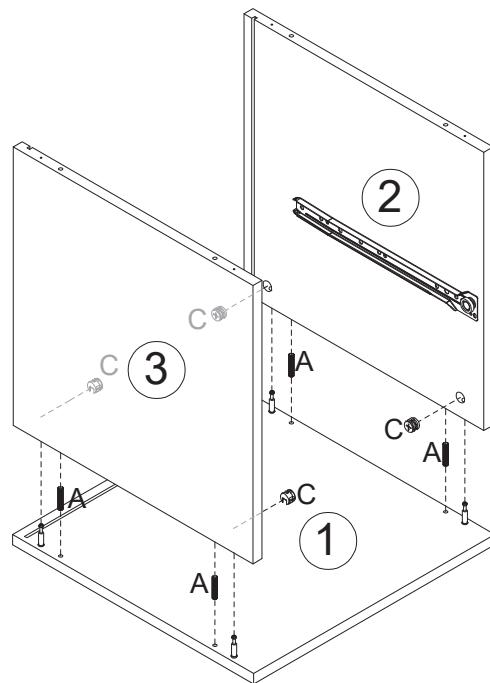




STEP 3

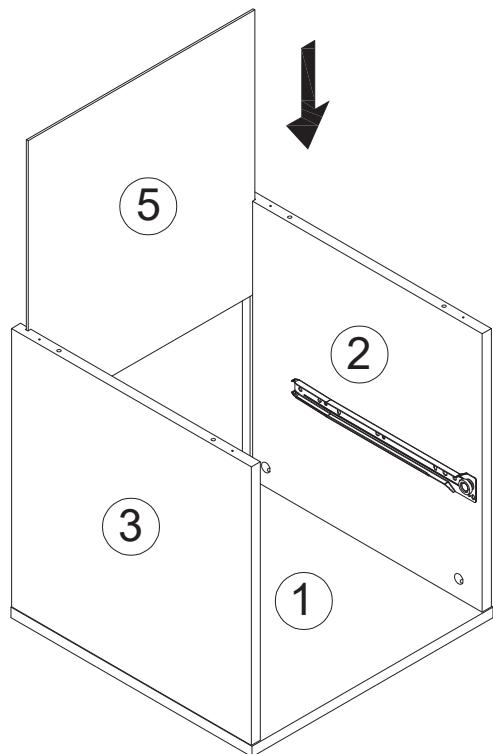

STEP 4

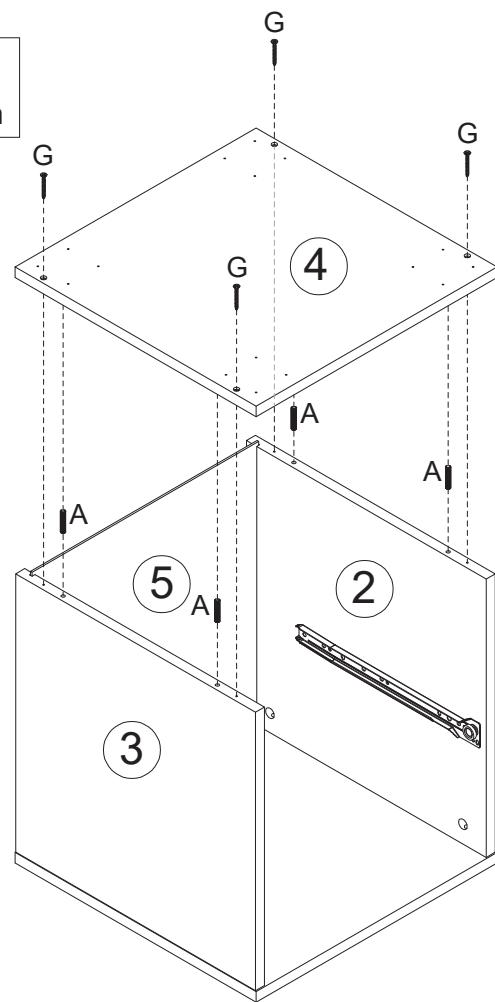



STEP 5

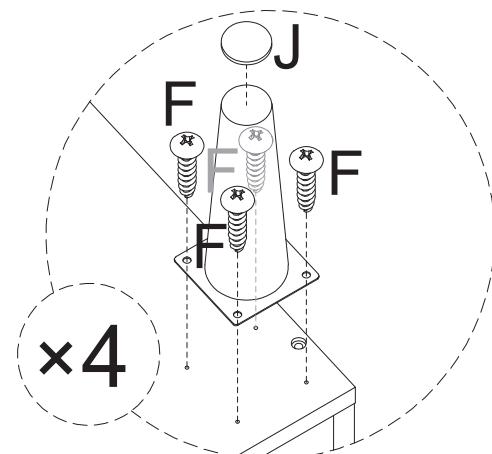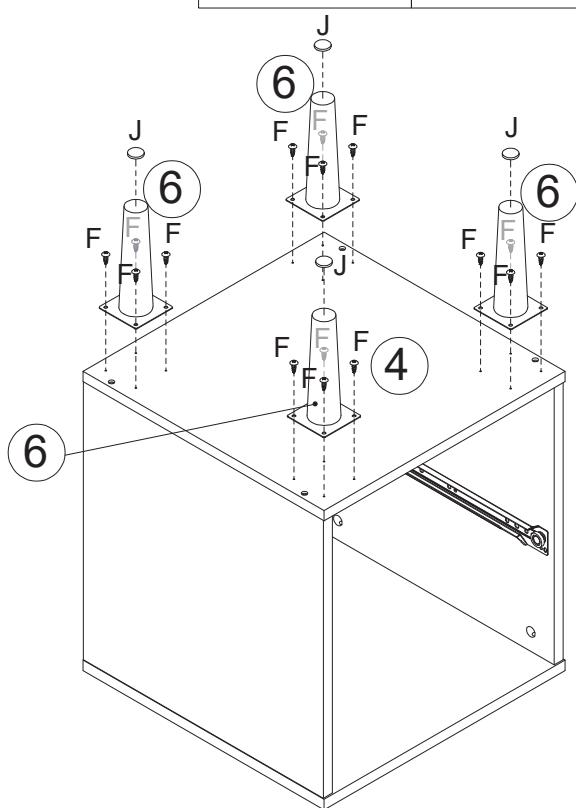

For better stability, tighten the wooden legs with a manual screwdriver.


STEP 6

	$L \times 8$		$K \times 8$
			$3 \times 14\text{mm}$

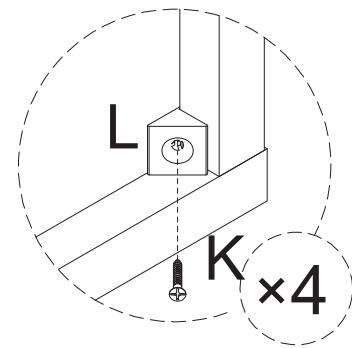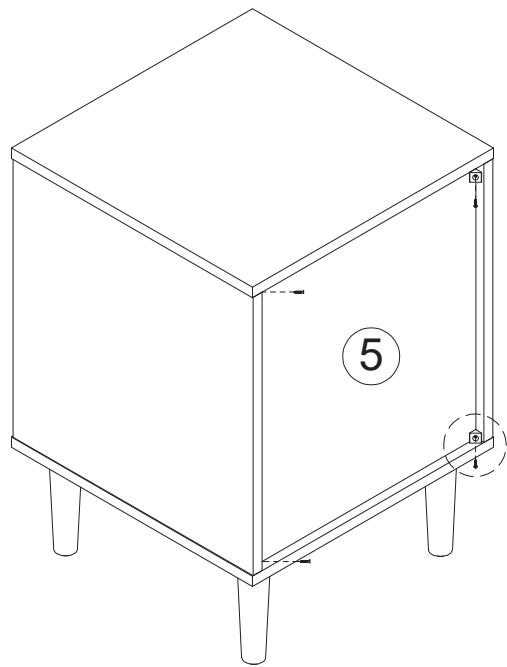


STEP 7

	$B \times 4$		$D \times 2$
	$I \times 1$		$3 \times 12\text{mm}$

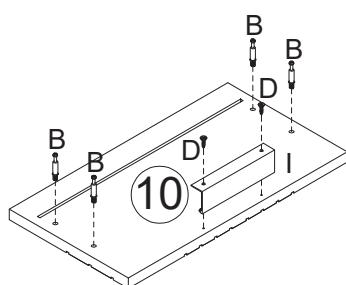


STEP 8

	$G \times 4$
	$4 \times 35\text{mm}$

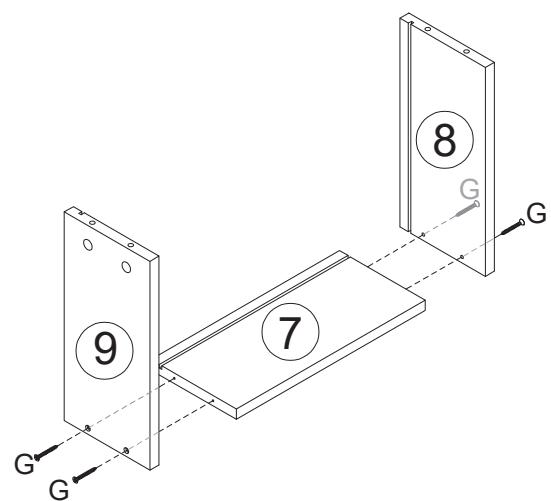


STEP 9

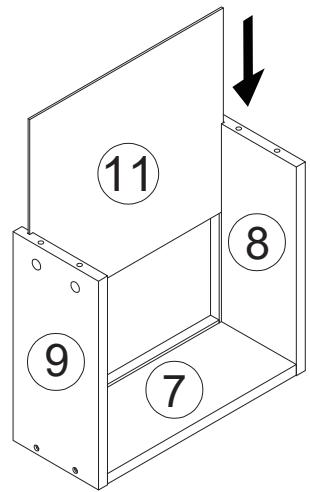


STEP 10

C×4

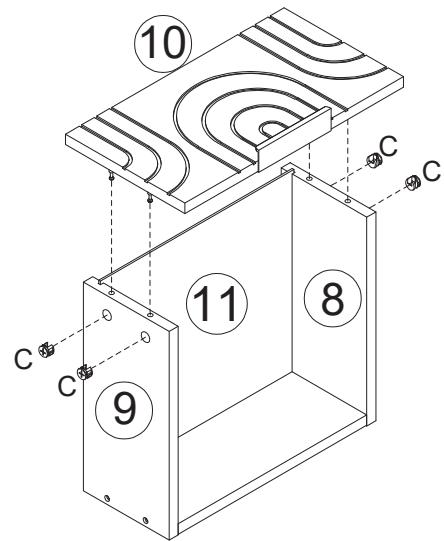

STEP 11

D×6
3×12mm DL×1 DR×1

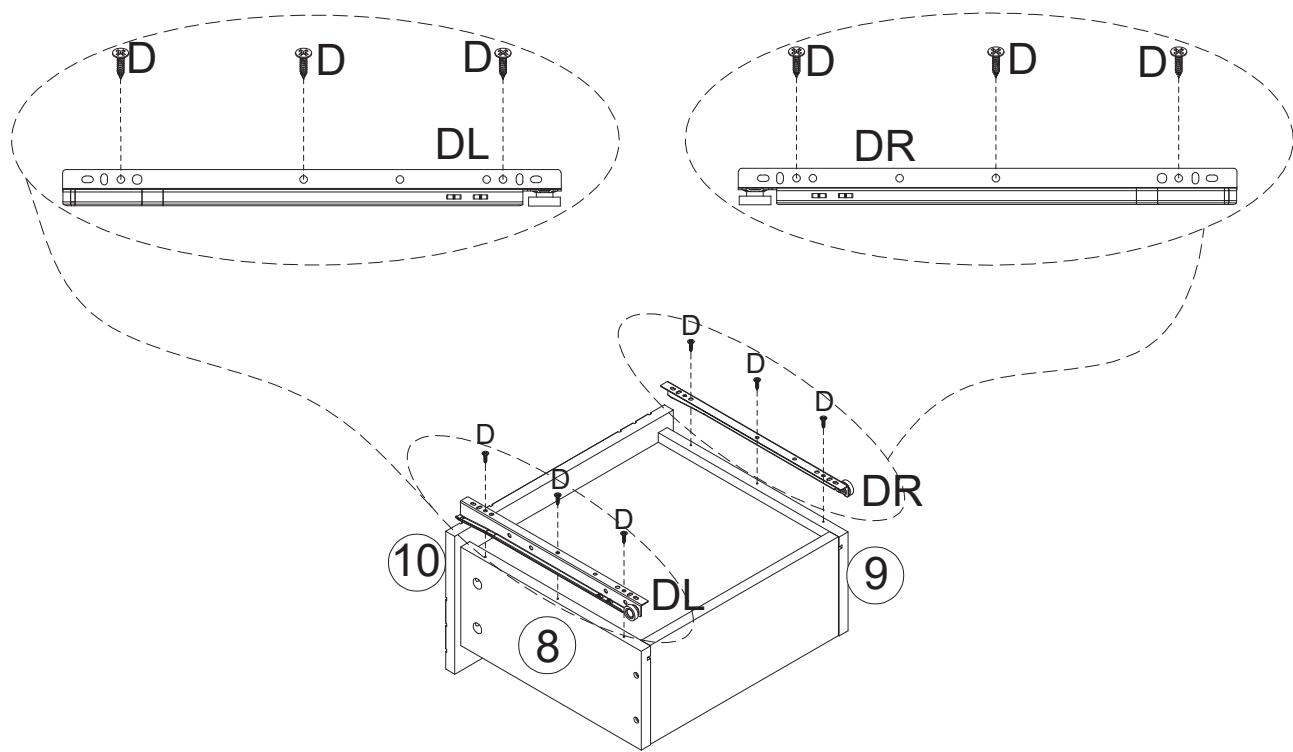

STEP 12

Drawer Installation Tip

Tilt the drawer downward toward the cabinet to align the rollers, then push it in smoothly. Adjust if the panel looks uneven.

