
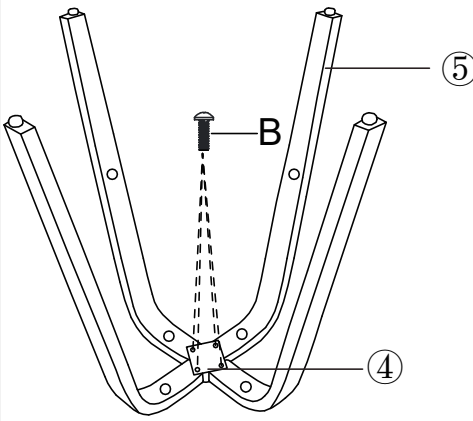

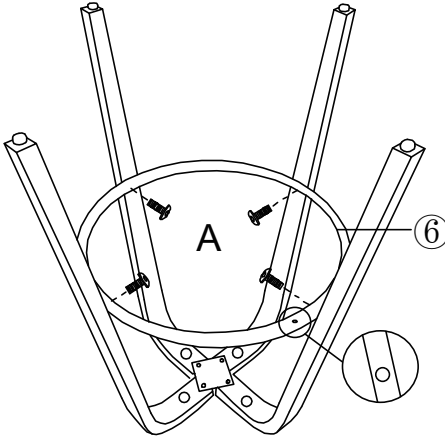

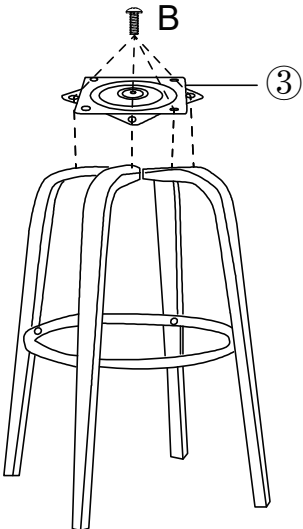

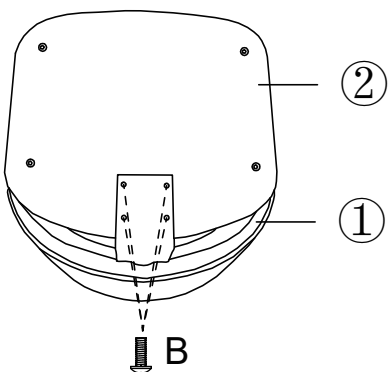
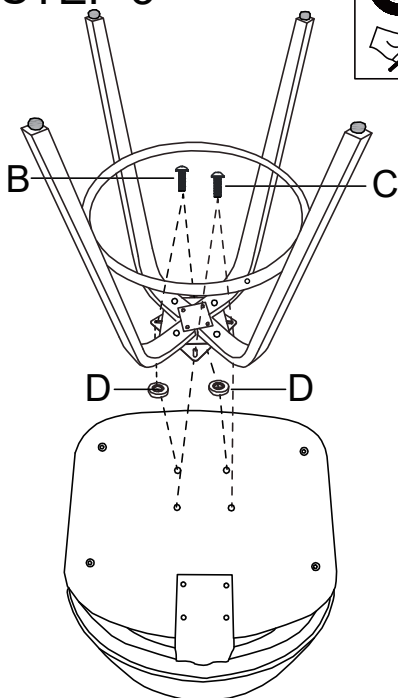


Assembly Instruction

①*1pc		A*4+1EXT	 M6*35MM
②*1pc		B*14+1EXT	 M6*20MM
③*1pc		C*2+1EXT	 M6*16MM
④*1pc		D*2	
⑤*4pcs			
⑥*1pc		G*1	 M6

STEP 1  	STEP 2  	STEP 3   Fasten All screws indicate on Step 1 & Step 2.
STEP 4  	STEP 5  	STEP 6  