



Assembly Instruction

①*2pcs		A*4+1EXT	 M6*35MM
②*1pc		B*10+1EXT	 M6*20MM
③*1pc		C*4+1EXT	 M6*25MM
④*1pc		D*2+1EXT	 M6*30MM
⑤*4pcs		E*2+1EXT	 M6*25MM
⑥*1pc		F*2+1EXT	 M6*16MM
⑦*1pc		H*2	
		G*1	 M4-M6



STEP 1

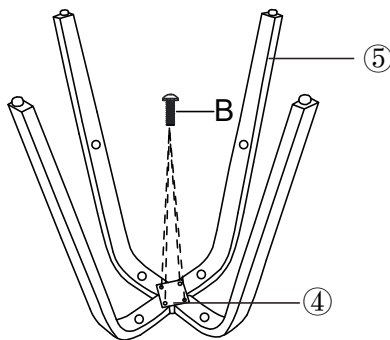

STEP 2


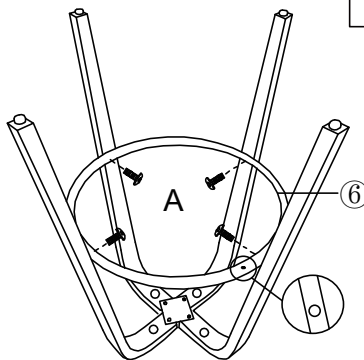


STEP 3

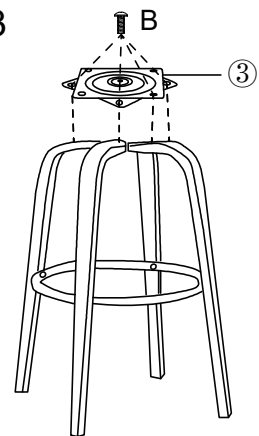



Fasten All screws indicate on Step 1 & Step 2.


STEP 4

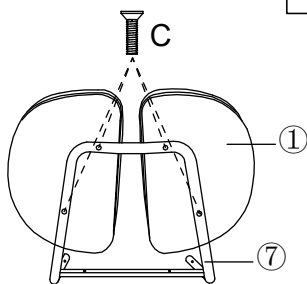

STEP 5

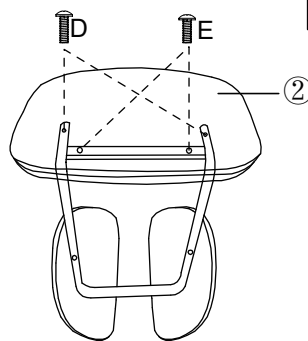

STEP 6

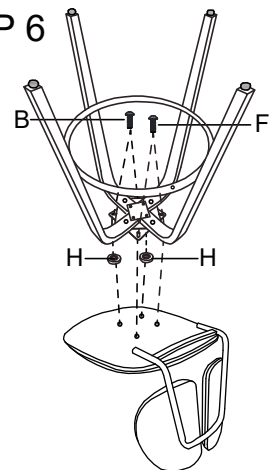

STEP 7

