

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at

tip_restraint_help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over


1. NEVER put a TV or other heavy objects on top of this product.
2. Do not stand on the product.

 WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ol style="list-style-type: none">1. ALWAYS install tipover restraint provided.2. NEVER put a TV on this product.3. NEVER allow children to stand, climb or hang on drawers, doors, or shelves.4. NEVER open more than one drawer at a time.5. Place heaviest items in the lowest drawers.6. Do not defeat or remove the drawer interlock system.
	<p><i>This is a permanent label. Do not remove!</i></p>







Assembly Instructions

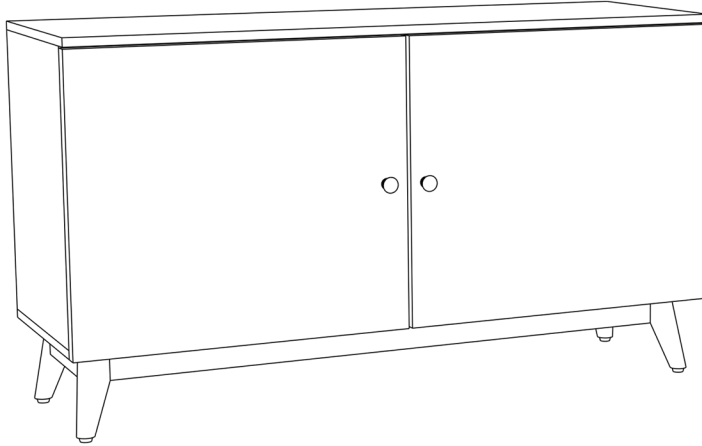Caution : You must read this before you proceed




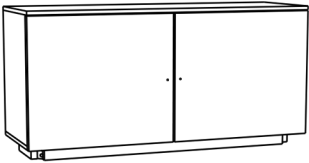







Cabinet

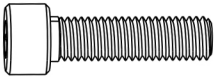

Parts List

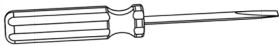
Label	Picture	Description	Qty.
A		Wooden Structure	1
B1		Leg (Pre-installed Buffer)	1
B2		Leg (Pre-installed Buffer)	1
B3		Leg (Pre-installed Buffer)	1
B4		Leg (Pre-installed Buffer)	1
C		Knob	2

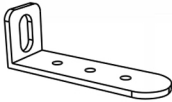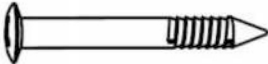Hardware

Label	Picture	Description	QTY
①		Allen Bolt (6x35 mm)	9
②		Washer (25 mm)	9
③		Allen Wrench	1
④		Screwdriver (not provided)	1
⑤		Hammer (not provided)	1
⑥		Power Drill (not provided)	1
⑦		Metal Bracket	2
⑧		Wall Plug Screw (M4x30mm)	3
⑨		Wall Plug (6x30mm)	3
⑩		Product Screw (M6x20mm)	3
⑪		Washer (20mm)	3

Assembly Preparation

**Before
Beginning
Assembly:**

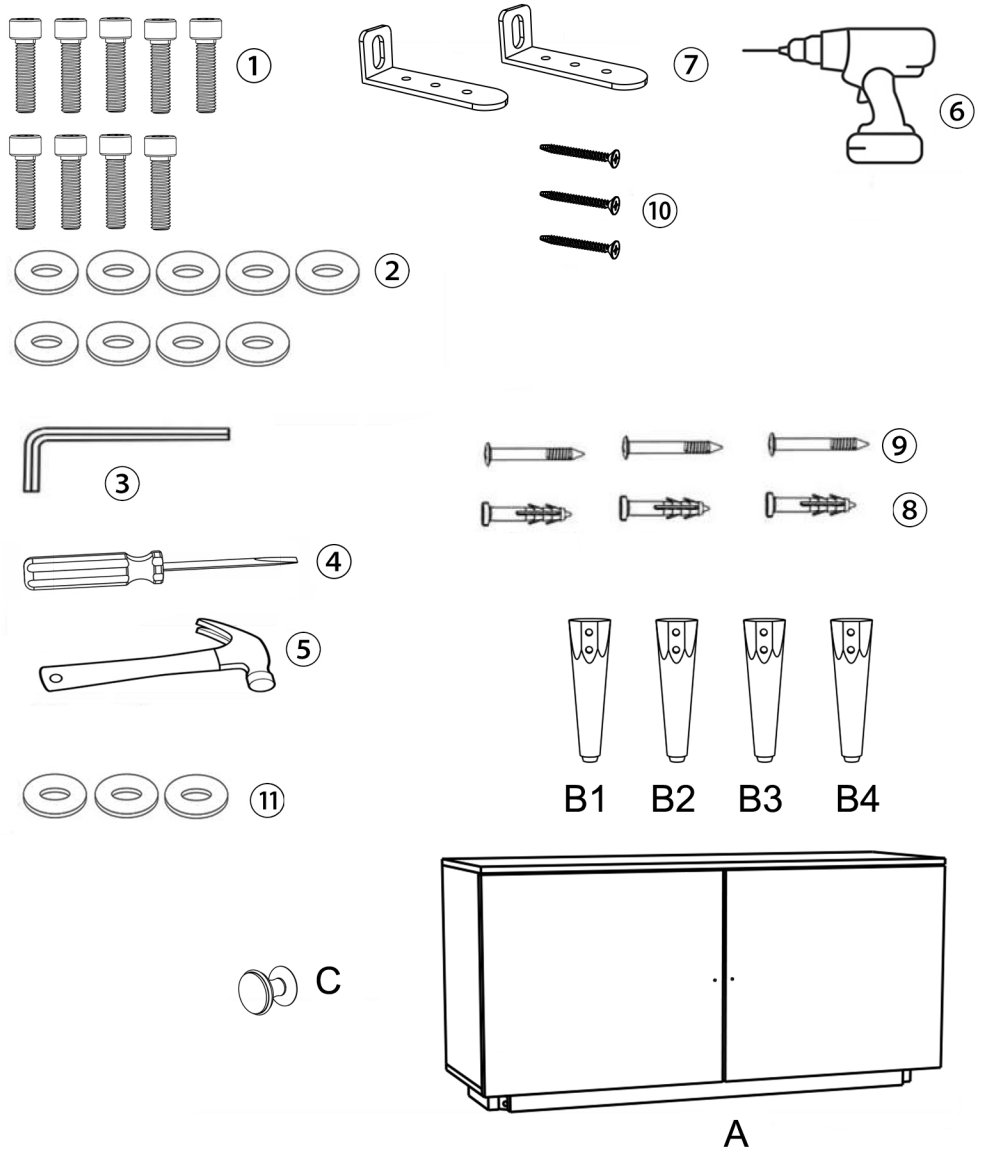

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

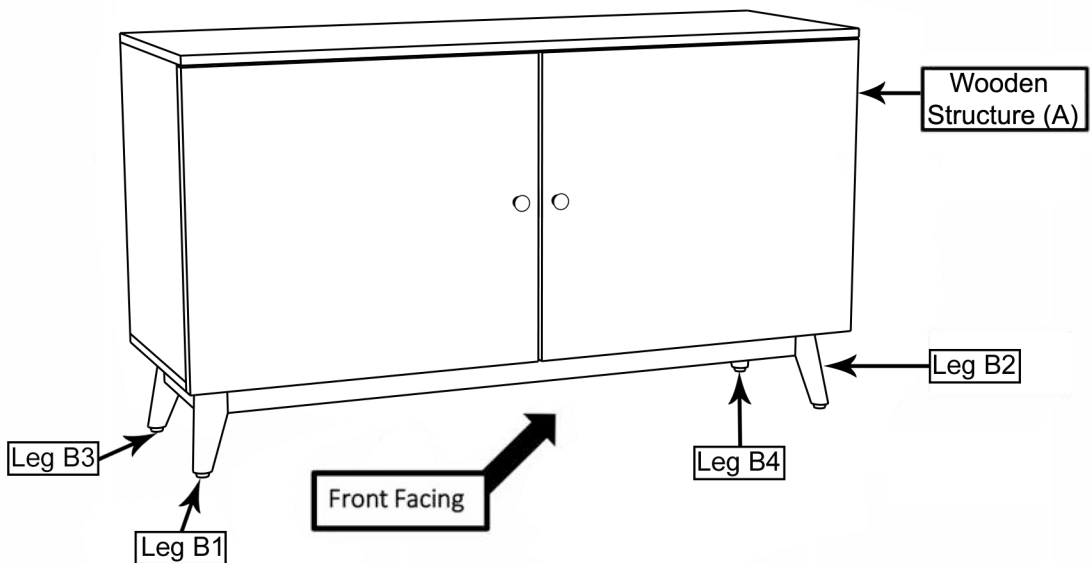

This Cabinet has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Step 1

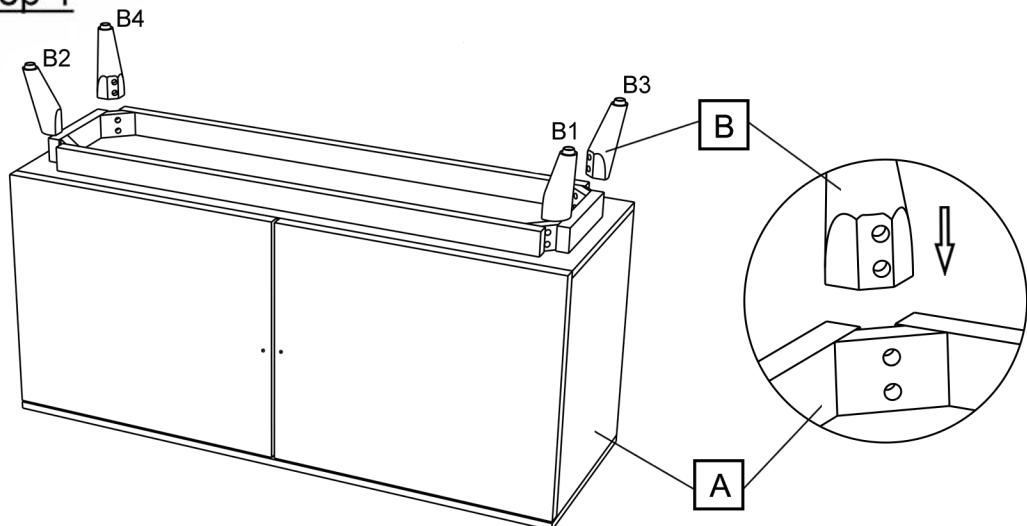

With assistance from your adult partner, Place the Cabinet Top (A) face down as shown in picture on clean & non-marring surface.

As shown in "Step 1" picture Affix the Leg B1, B2, B3 and B4 into the Top (A).


Step 2

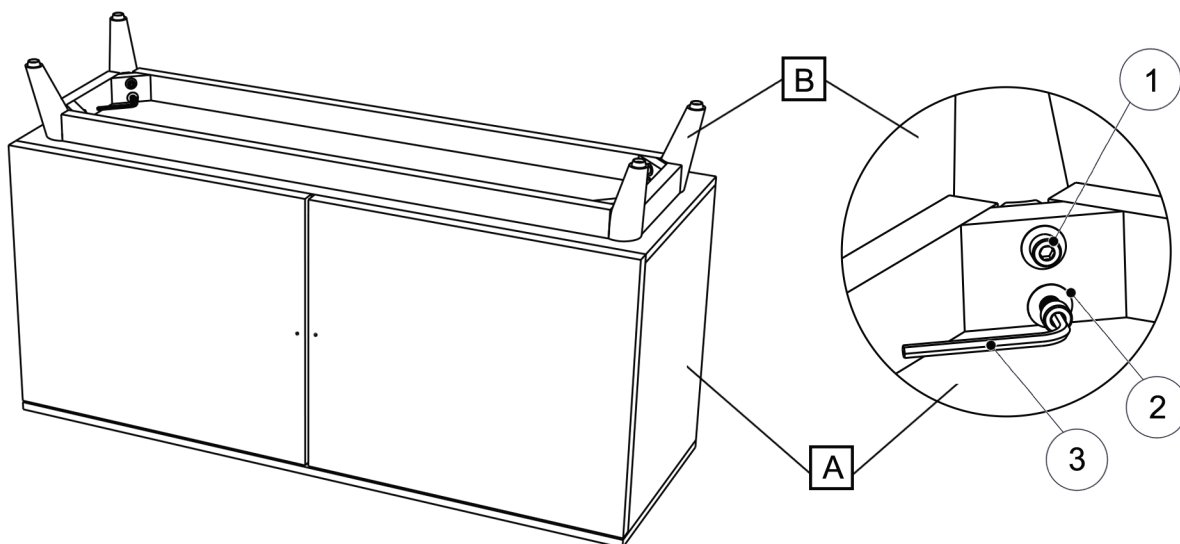


As shown in “Step 2” picture attach the Leg (B1,B2,B3,B4) into the Top (A) by using Allen Bolt (①), Washer (②) and Allen Wrench (③).

DO NOT FULLY TIGHTEN THE BOLTS.

Step 3

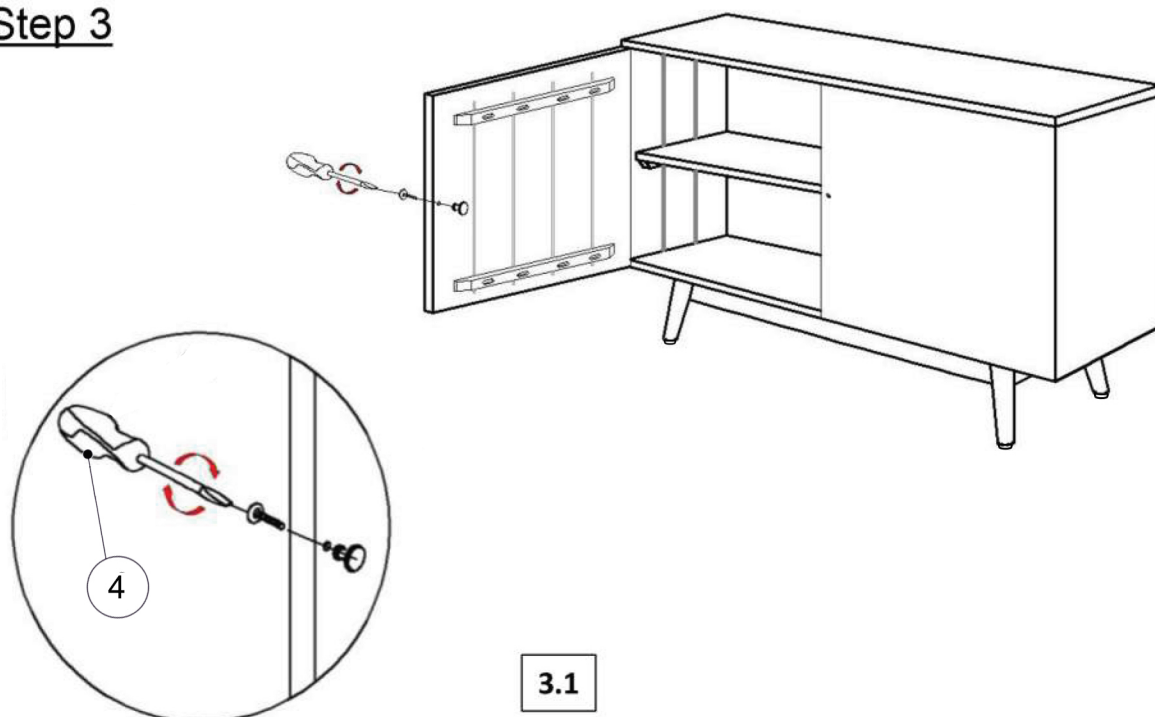

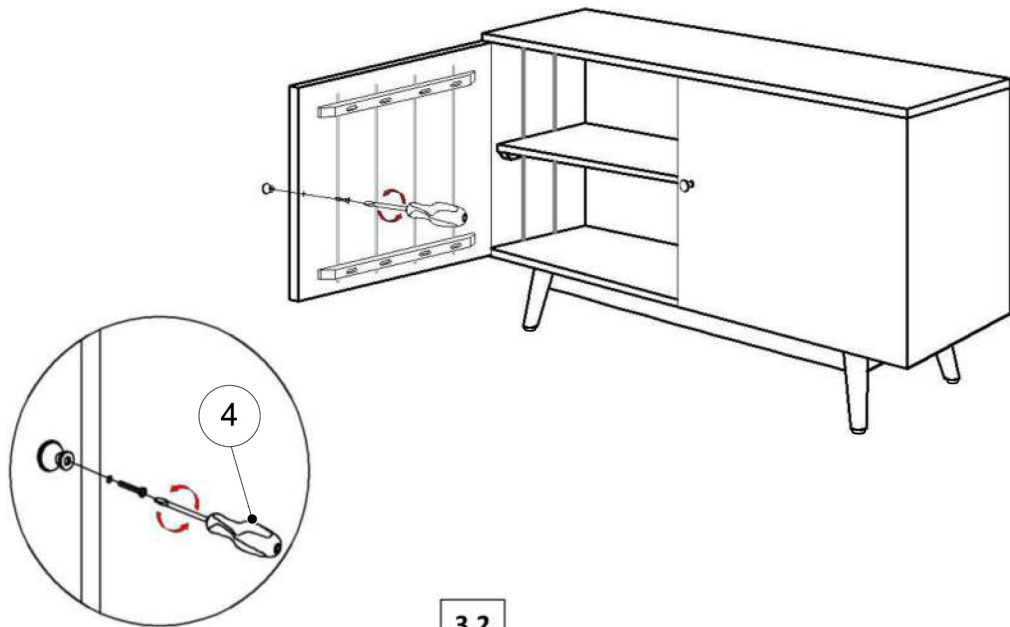


3.2

With help of your adult partner, Carefully stand the Cabinet.

3.1) Open the Door and de-attach the Knob (C) which is attached inside the Door in Anti-clockwise using Screwdriver (④).

3.2) Install the Knob (C) with the help of Screwdriver (④) clockwise as picture.

Step 4

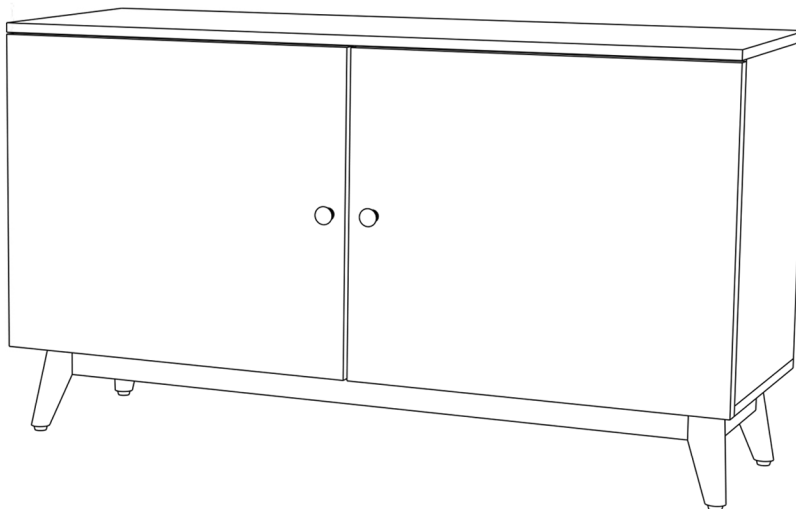

Check the product if stable and not wobbling. Once done, Tighten all the Legs to secure the Cabinet.


This Cabinet is now ready to use.

Caution: This Cabinet can only be used on flat, level surface.

Tipover Restraint Device Installation Instructions




Serious or fatal crushing injuries can occur from tipping furniture.
To help prevent tip-over: ALWAYS secure this furniture to the wall using
Tipover Restraint Device.
See product instructions for more ways to help prevent furniture tip-over.

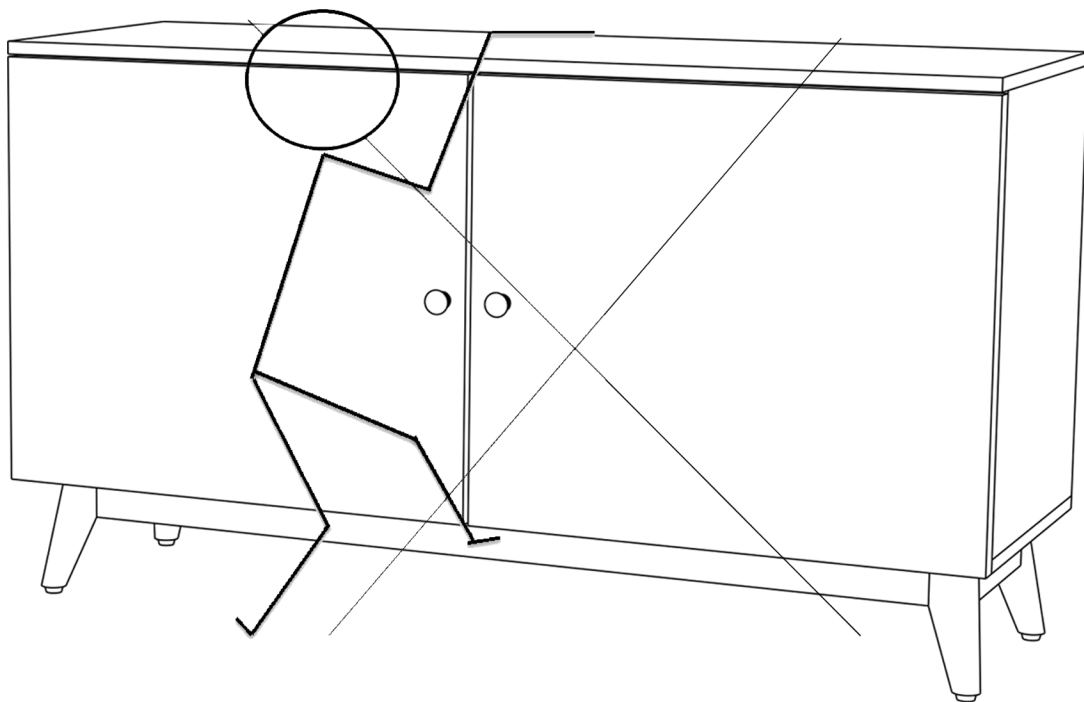

Usage For Tipover Restraint Device:

To secure Cabinet against the wall, attach two Metal Brackets (⑦) on wall.

Step 5

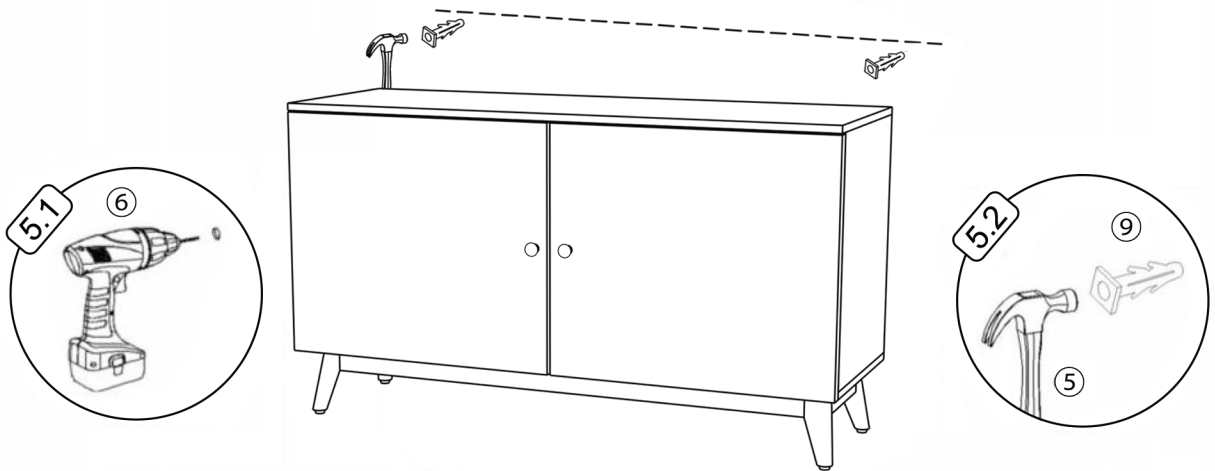

5.1) Drill two holes on wall at 5 cm below from the height of Cabinet as Metal Brackets (7) on Cabinet with Power Drill (6).

You can mark these points in two ways as below:


1) Move the Cabinet back to the wall. Mark two points same width as Cabinet on the wall.

Note: The Metal Brackets need to be secured to solid, Load bearing surface. Please use a stud finder (not supplied) if needed to locate the wall frame.

2) Measure the Height of Metal Brackets (7) with ruler/measuring tape and mark on wall to keep them accurate and same height and width of the Cabinet.


5.2) Insert Wall Plugs (9) into drilled holes on wall with Hammer (5).

Step 6

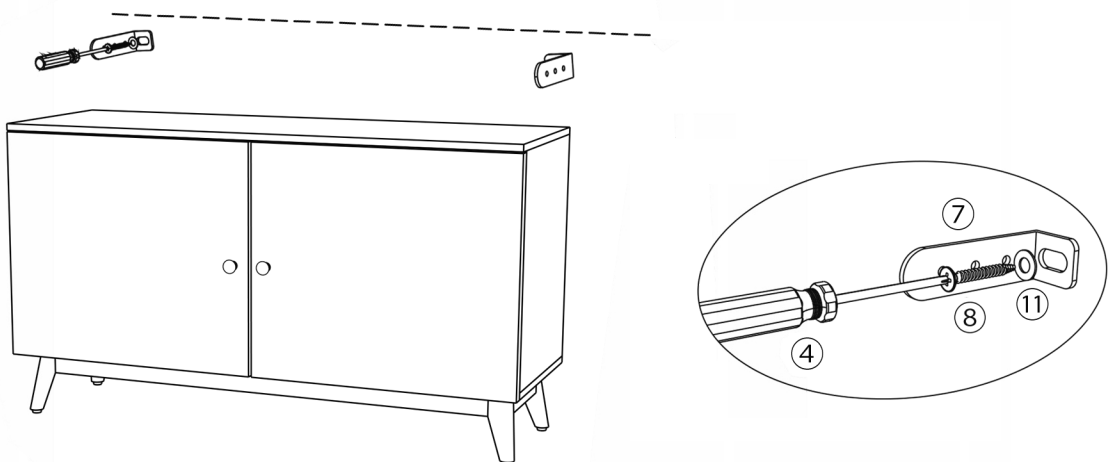

Attach Metal Brackets (7) to Wall Plugs (9) using Wall Plug Screws (8) and Washer (11) with Screwdriver (4).

Step 7

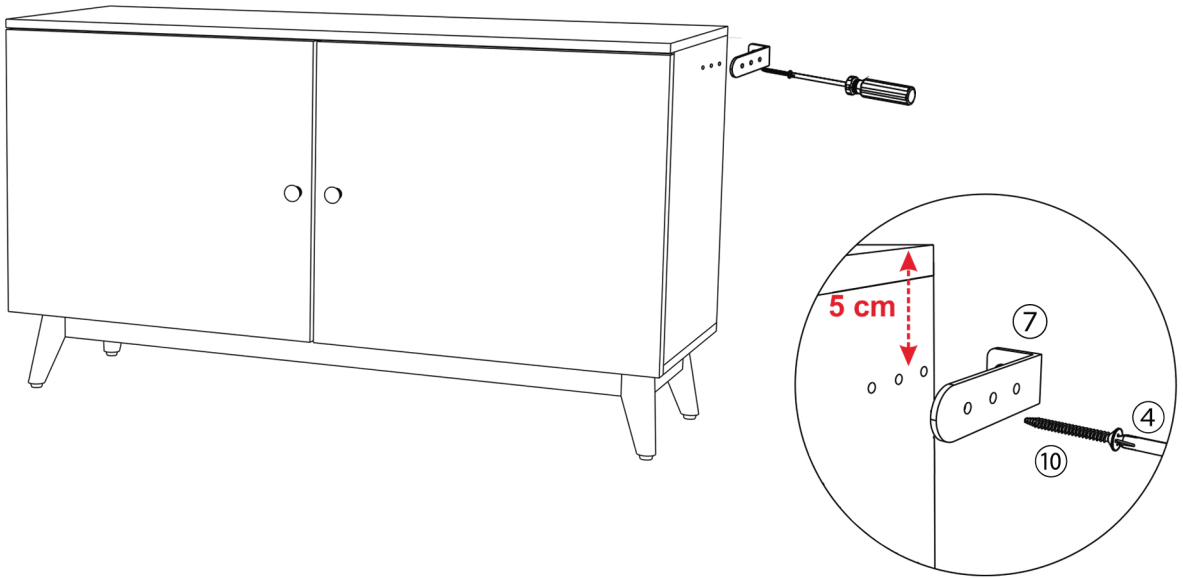












Move Cabinet to the wall, Customer can choose one of 3 hole for assembly same as other side.

Connects the Metal Brackets (⑦) to Cabinet with help of Product Screw (⑩) and Screwdriver (④) same as other side.

This Cabinet is now ready to use.

Caution: This Cabinet can be used on flat, level surface.

Care & Maintenance

-  ● Furniture may scratch floors. We recommend using furniture pads to protect your floors.
-  ● Do not put hot items directly on furniture surface.
-  ● Do not clean furniture with harsh cleansers or polish.
-  ● Do not place furniture under direct sunlight.
-  ● Do not place furniture near heating or cooling vents.
-  ● Do not write on furniture without a padded barrier to protect the surface.
-  ● Do not place furniture outside . For indoor use only.
-  ● Not for commercial use. For residential use only.
-  ● Stains may be removed with mild soap solution and damp cloth.
-  ● Children should not climb or jump on the furniture.
-  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.