

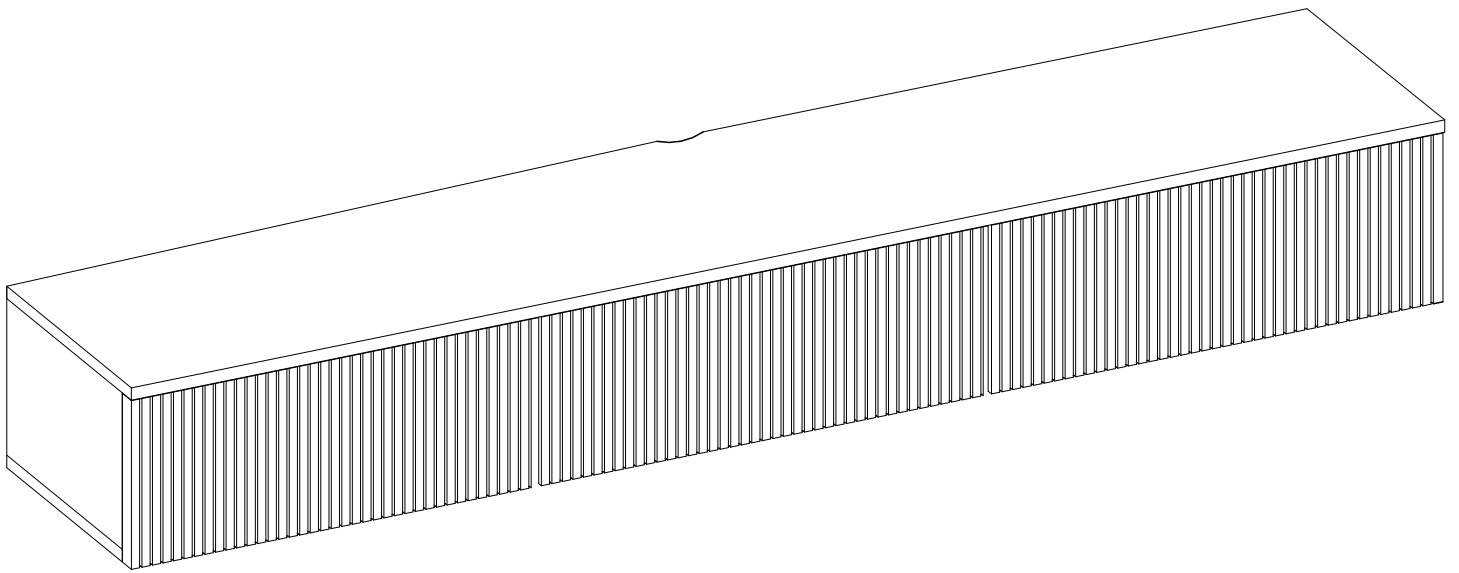
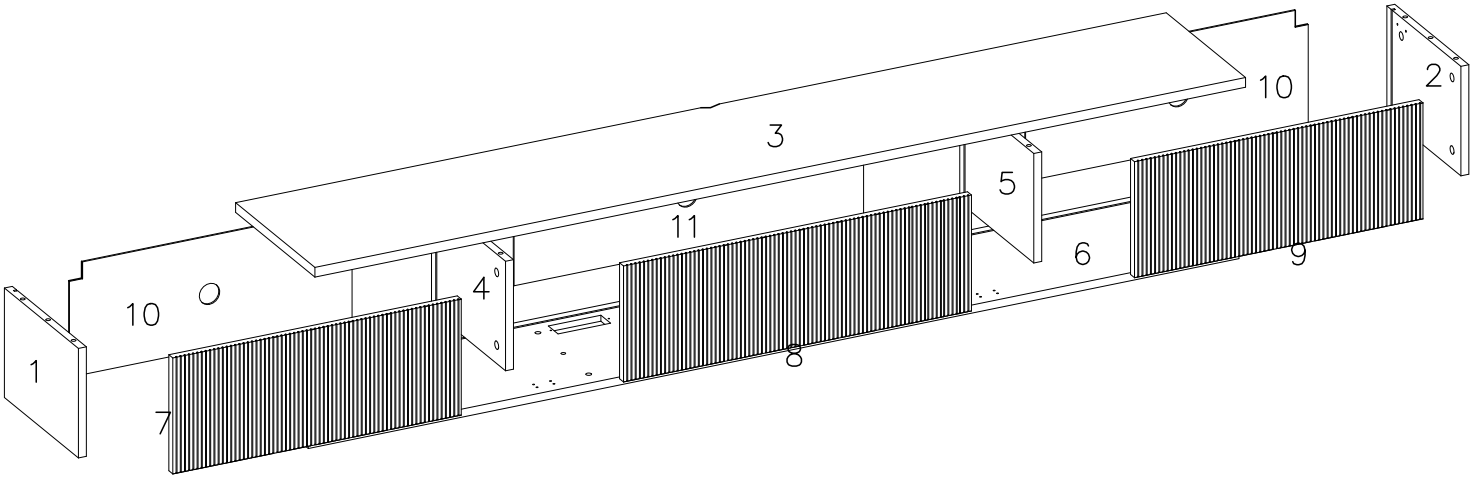




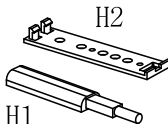
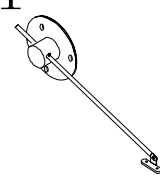
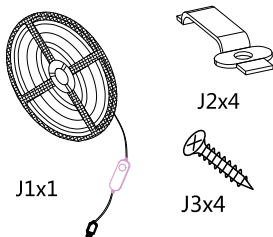













DS-TS002B-6

DS-TS002W-6

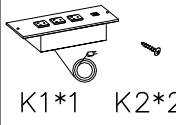

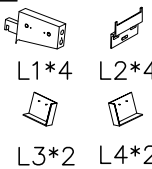


A  16pcs	B  8pcs	C  69pcs	D  8pcs	E  8pcs	F  8pcs	G  6pcs	H  3pcs
I  3pcs	J  1pc	K  1pc	L  1pc	M  12pcs	N  16pcs		

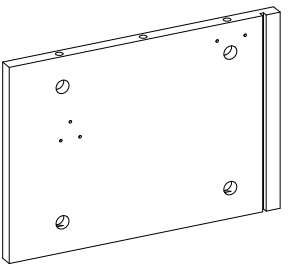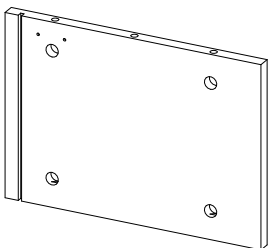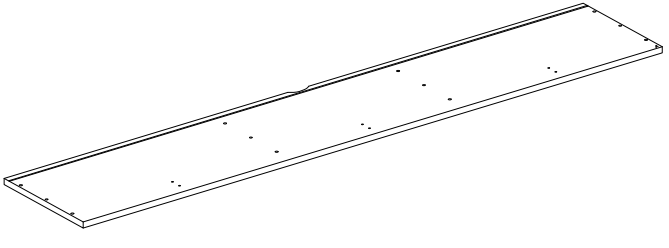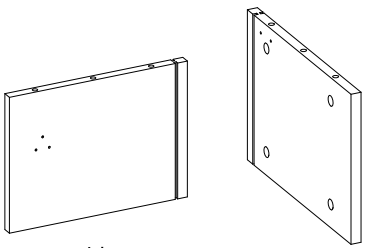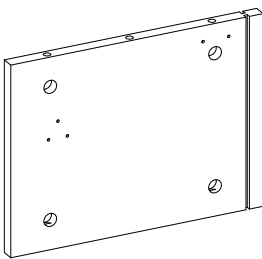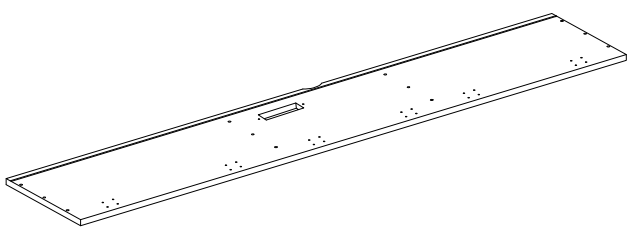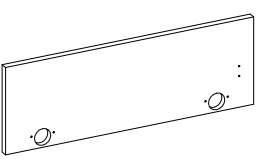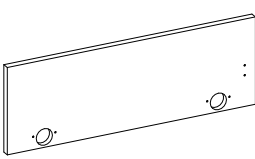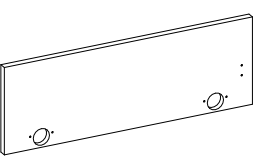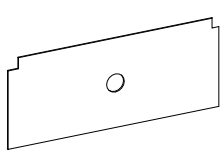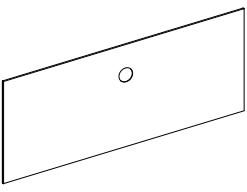1  270*278*15mm 1pc	2  270*278*15mm 1pc	3  1750*300*15mm 1pc
4  one side the other side 270*278*15mm 1pc	5  270*278*15mm 1pc	6  1750*279*15mm 1pc
7  581*280*15mm 1pc	8  576*280*15mm 1pc	9  581*280*15mm 1pc
10  571*280*3mm 2pcs	11  572*280*3mm 1pc	


Hardware installation demonstration

NOTE: Please make sure
"A1" hardware tightened
and can't be pulled out!


I

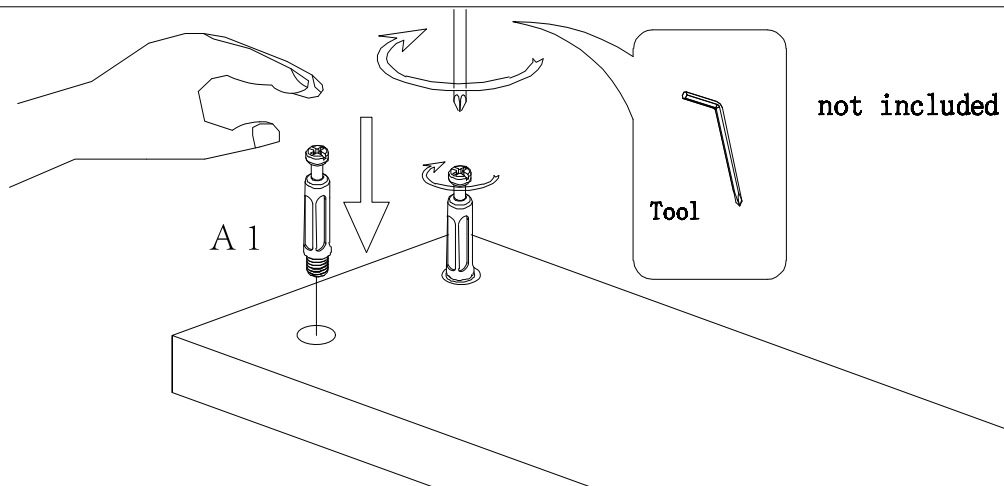







II

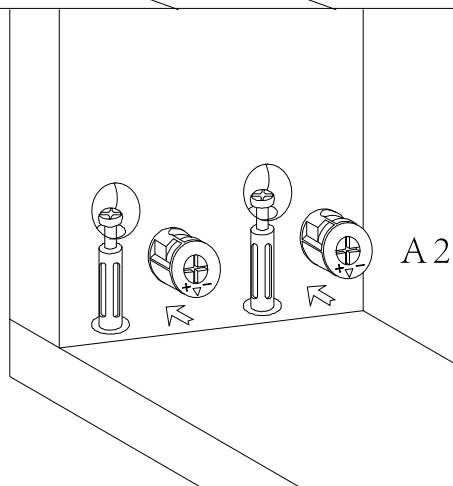

III




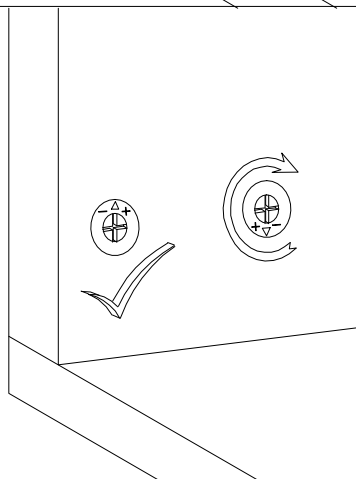


STEP 1

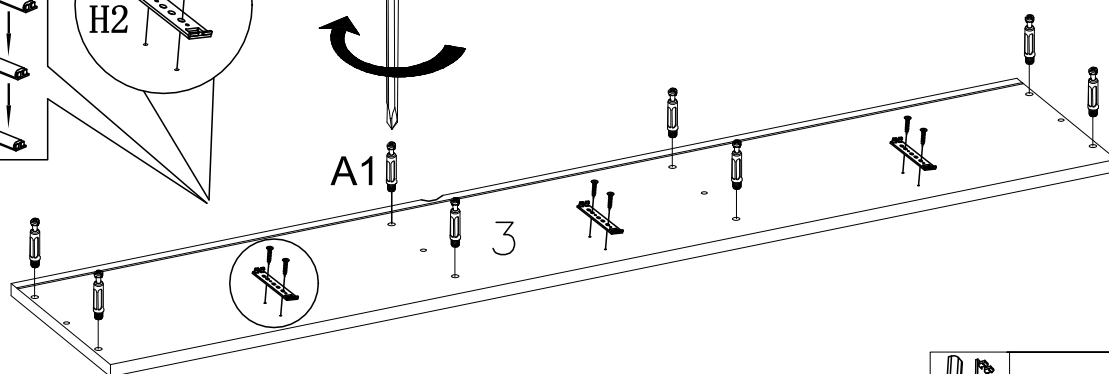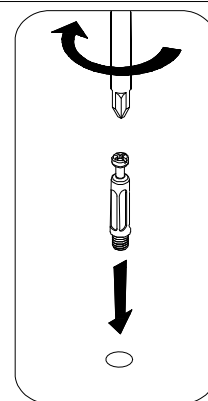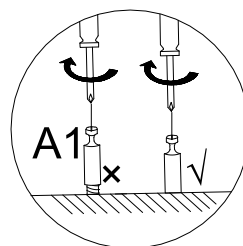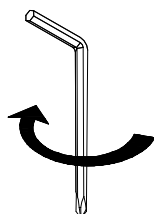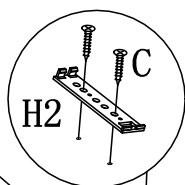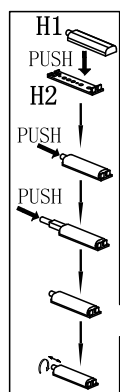


	H × 3PCS
	C × 6PCS
	A1 × 8PCS

STEP 2

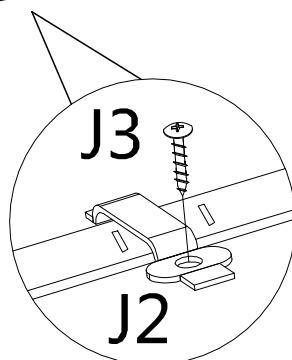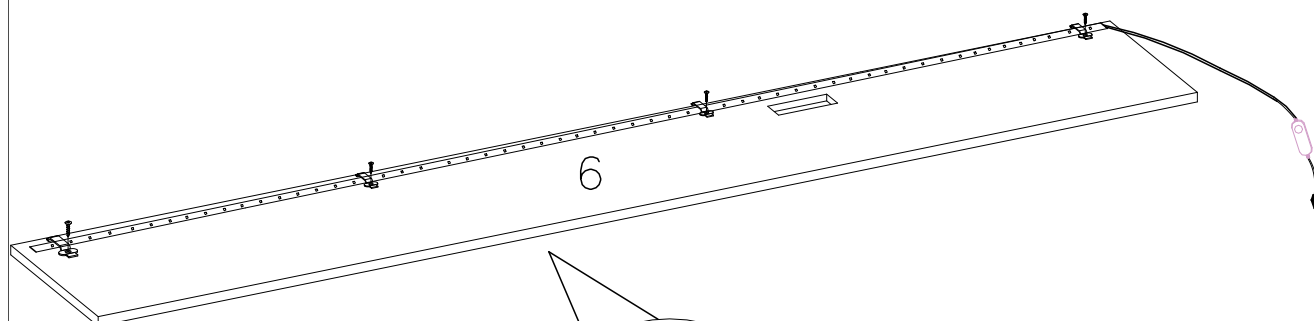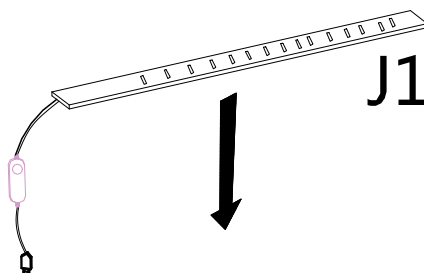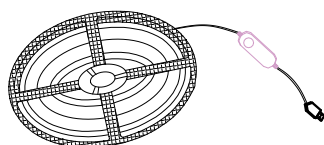


	J1 × 1PC
	J2 × 4PCS
	J3 × 4PCS

STEP 3

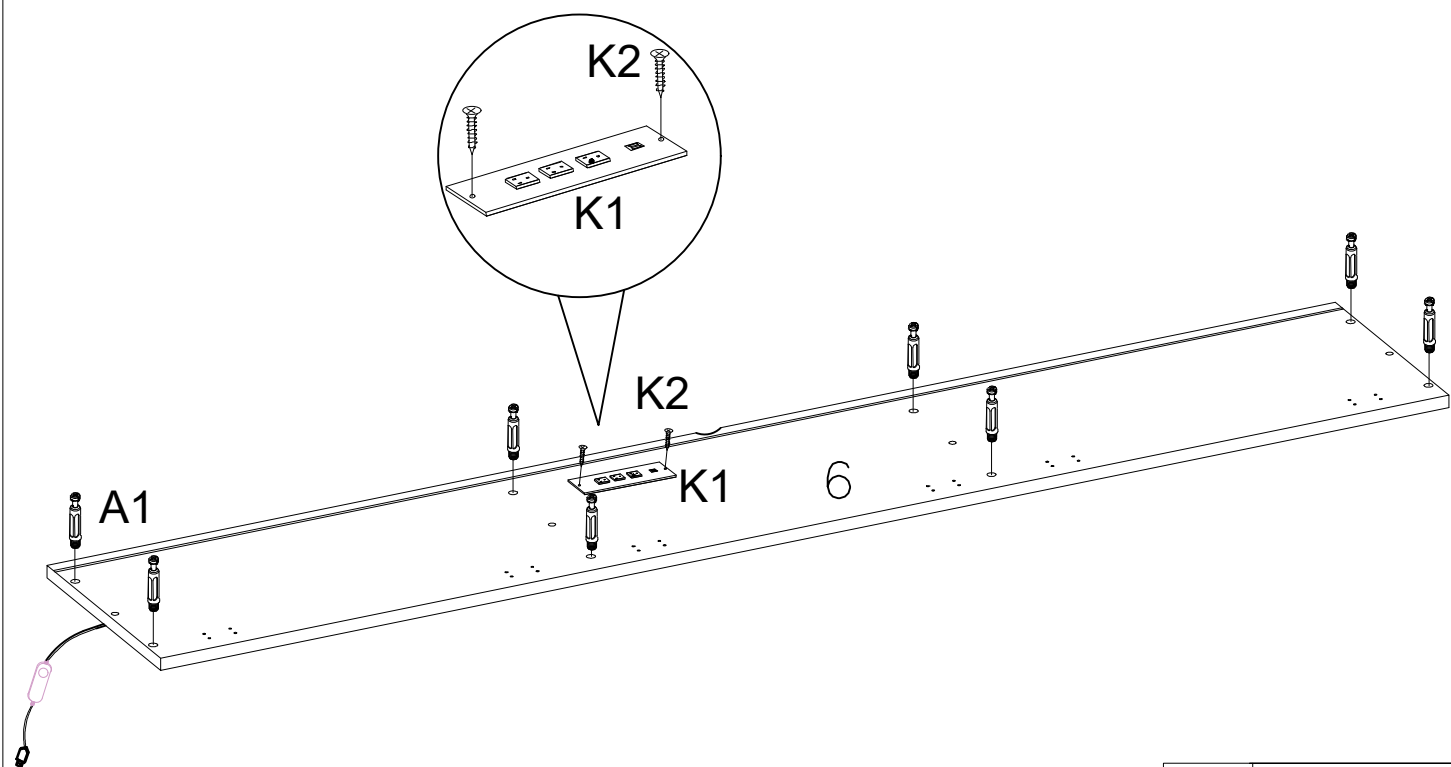


			K1× 1 PC
	K2× 2PCS		A1× 8PCS

STEP 4

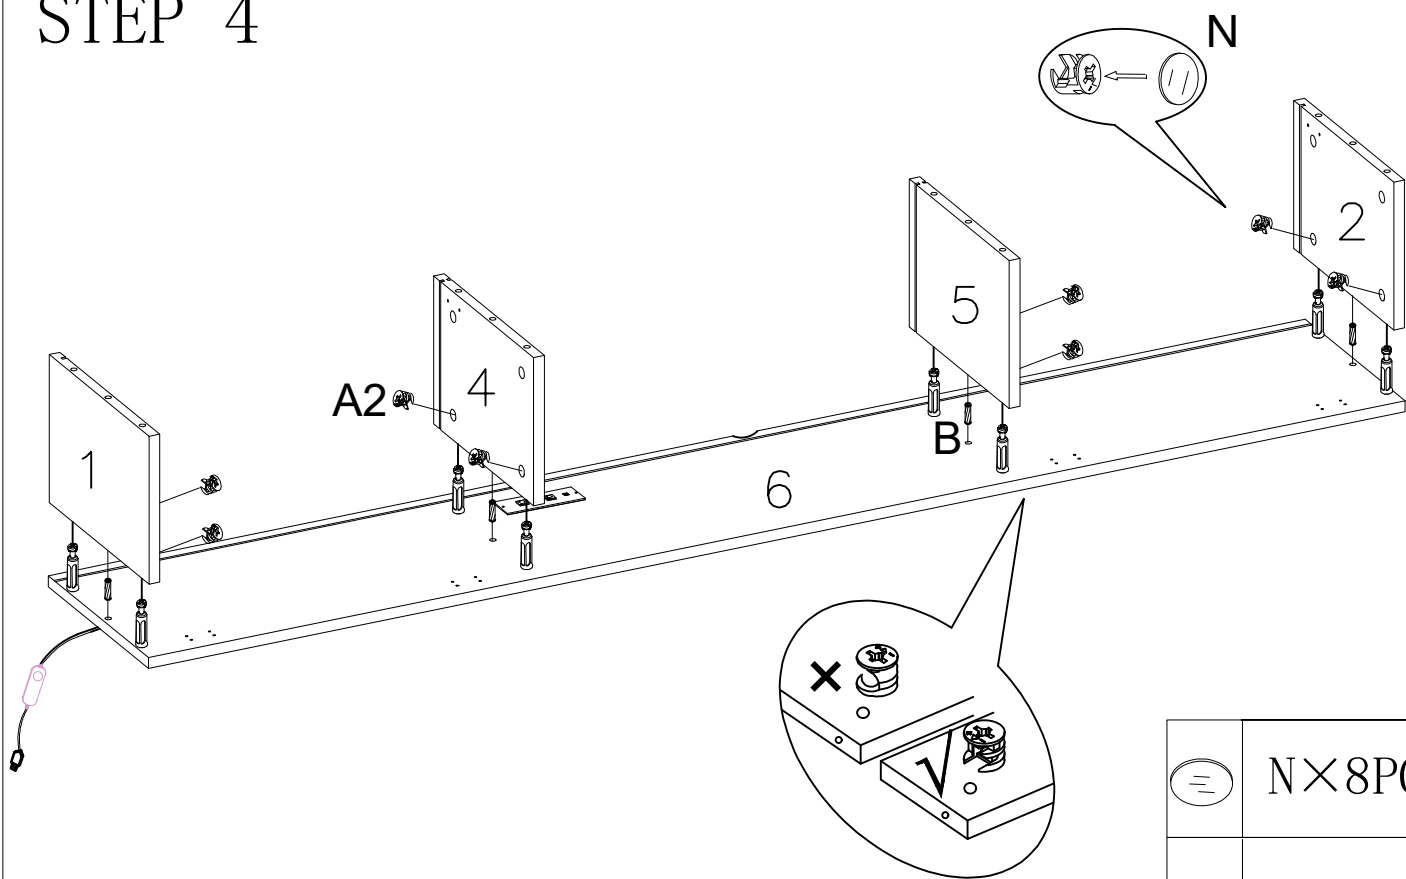


	N×8PCS
	A2× 8PCS
	B× 4PCS

STEP 5

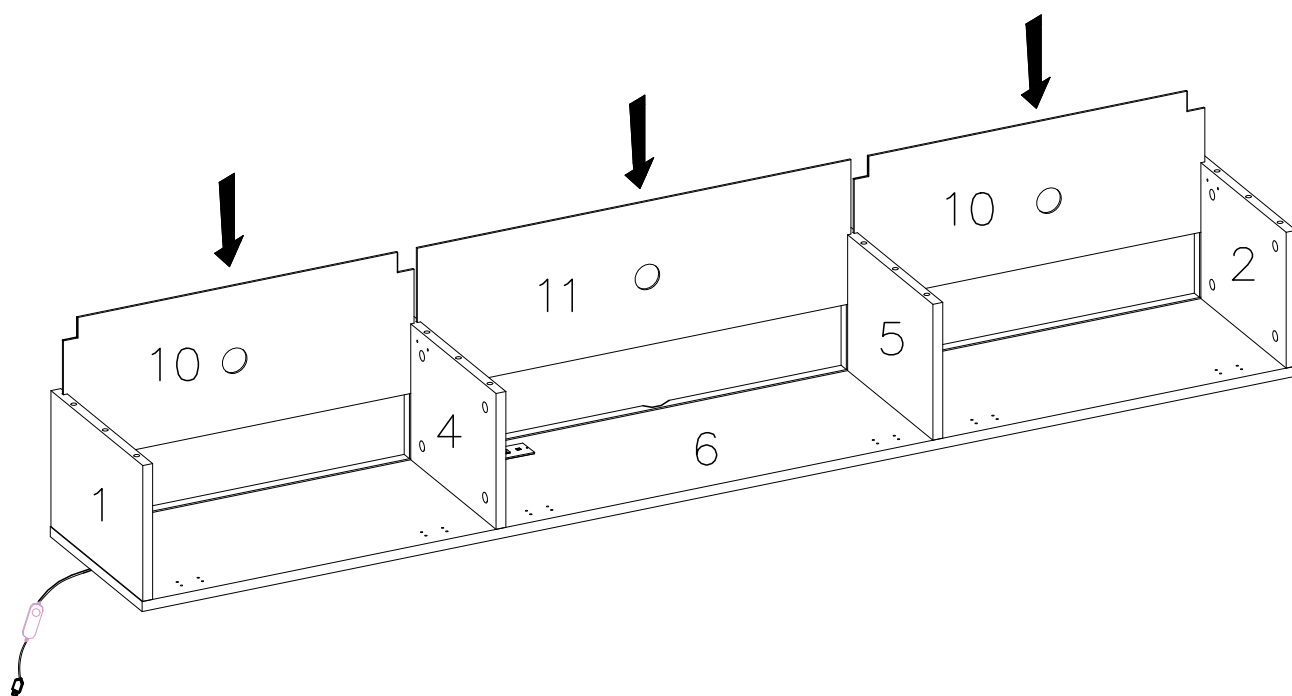


STEP 6

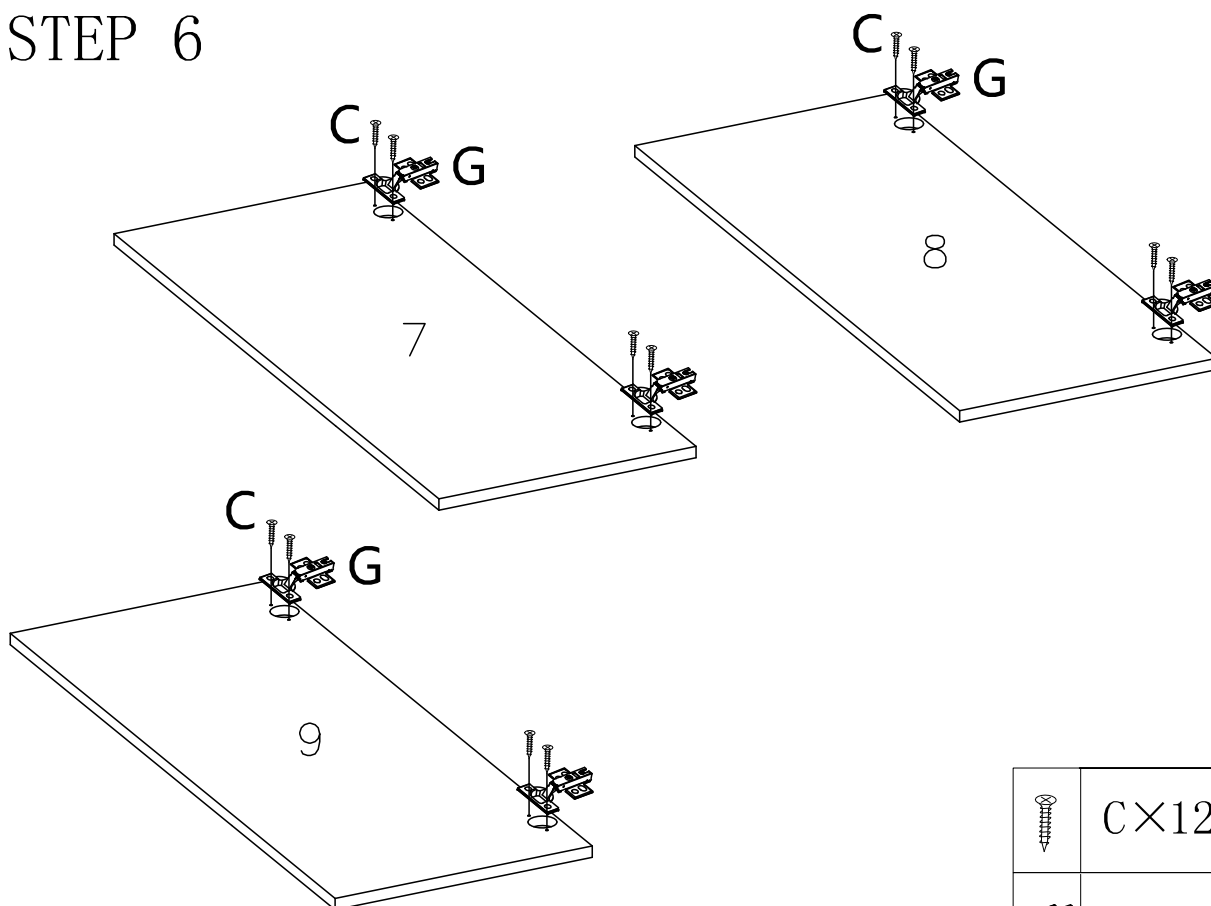


	C × 12PCS
	G × 6PCS

STEP 7

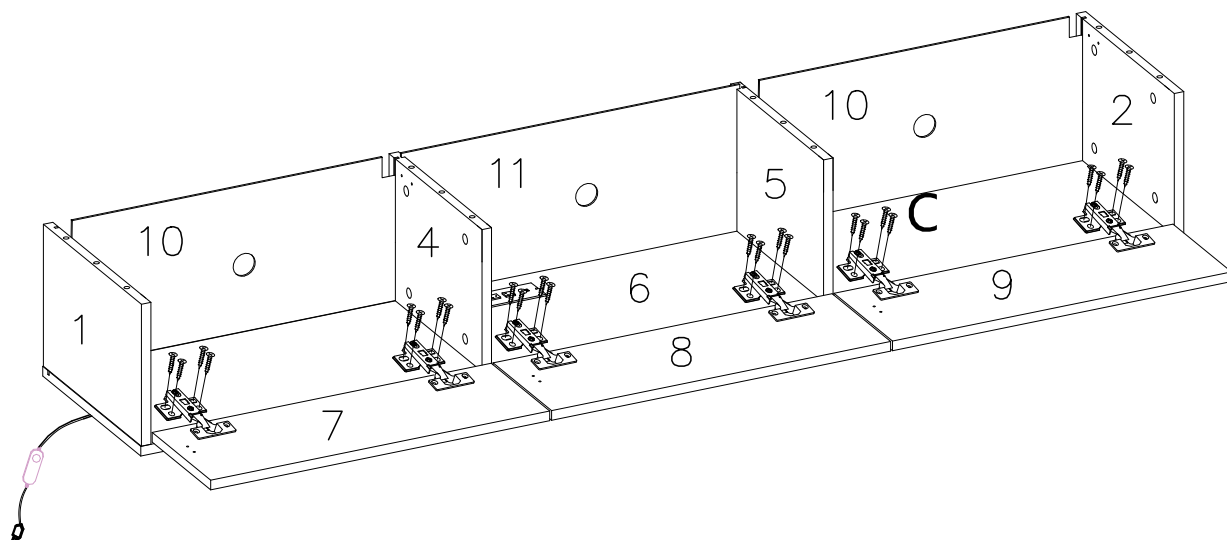


	C × 24PCS
---	-----------

STEP 8

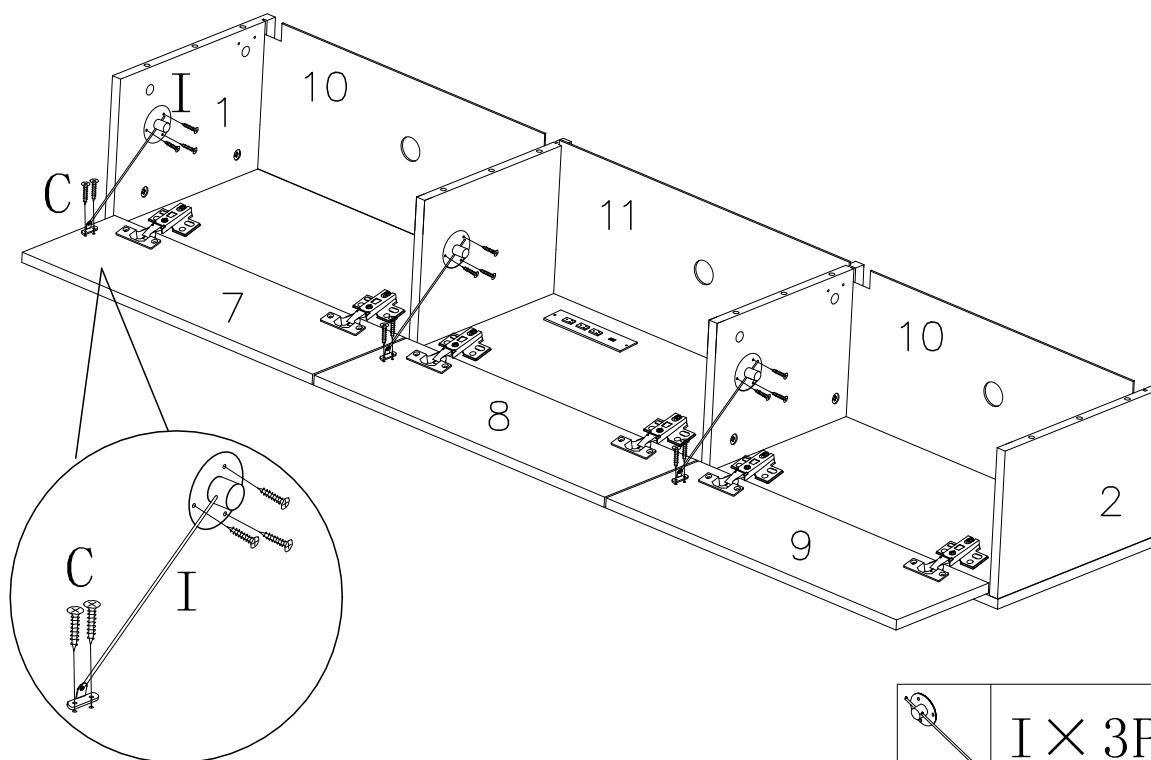


	I × 3PCS
	C × 15PCS


STEP 9

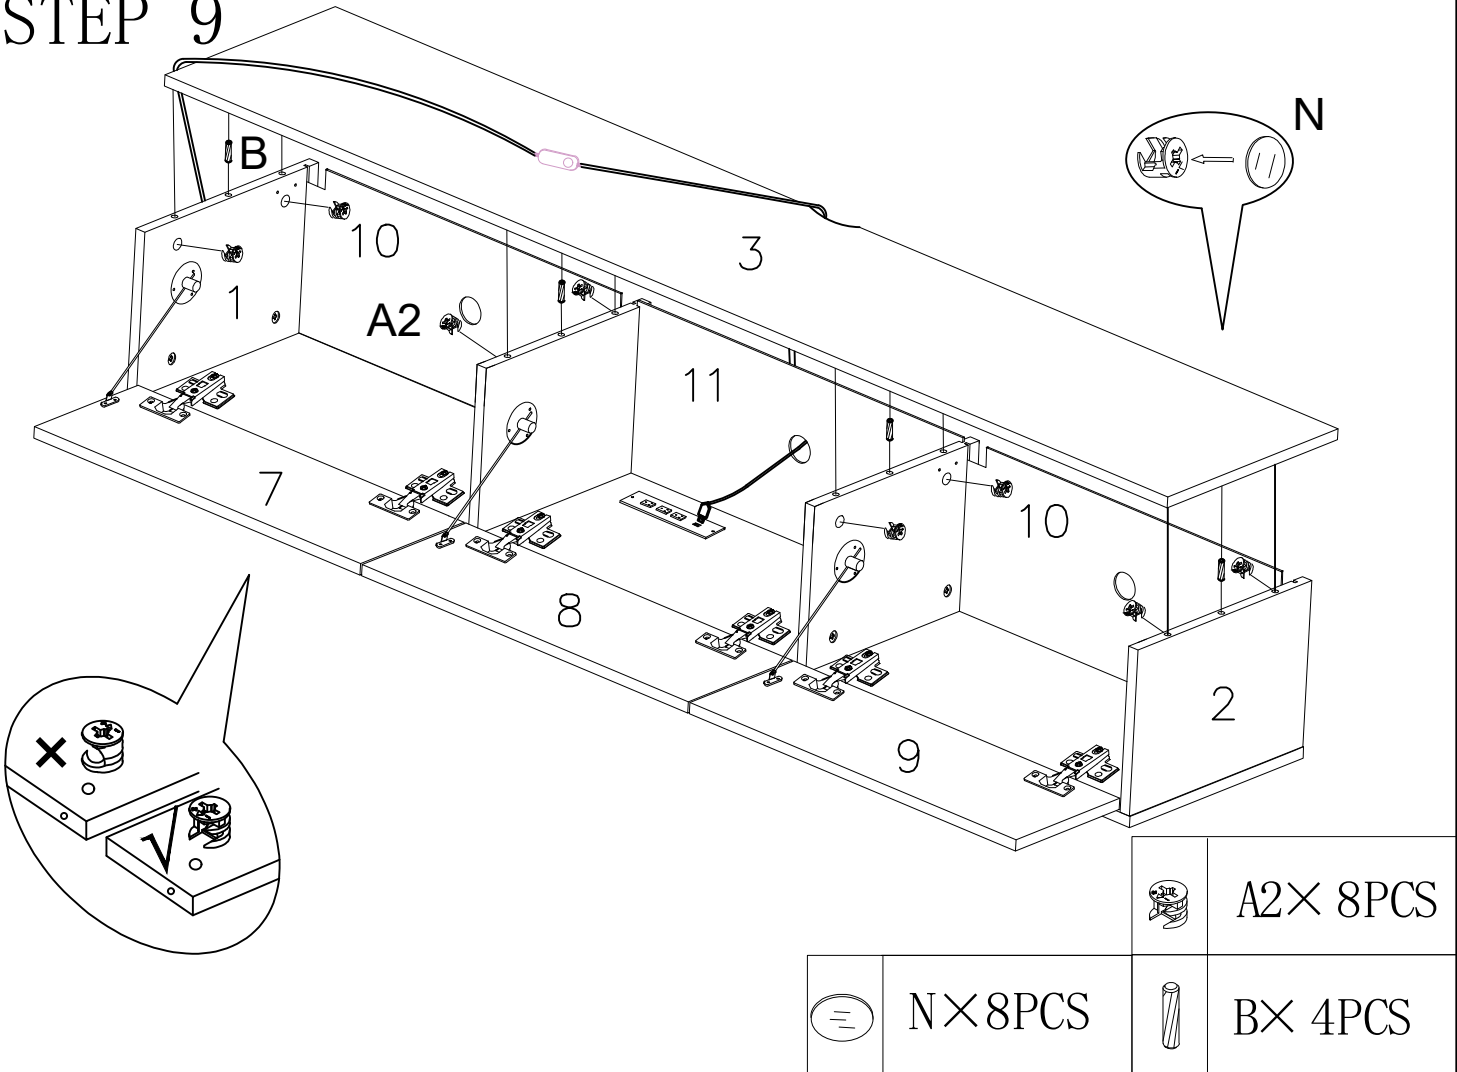

STEP 10




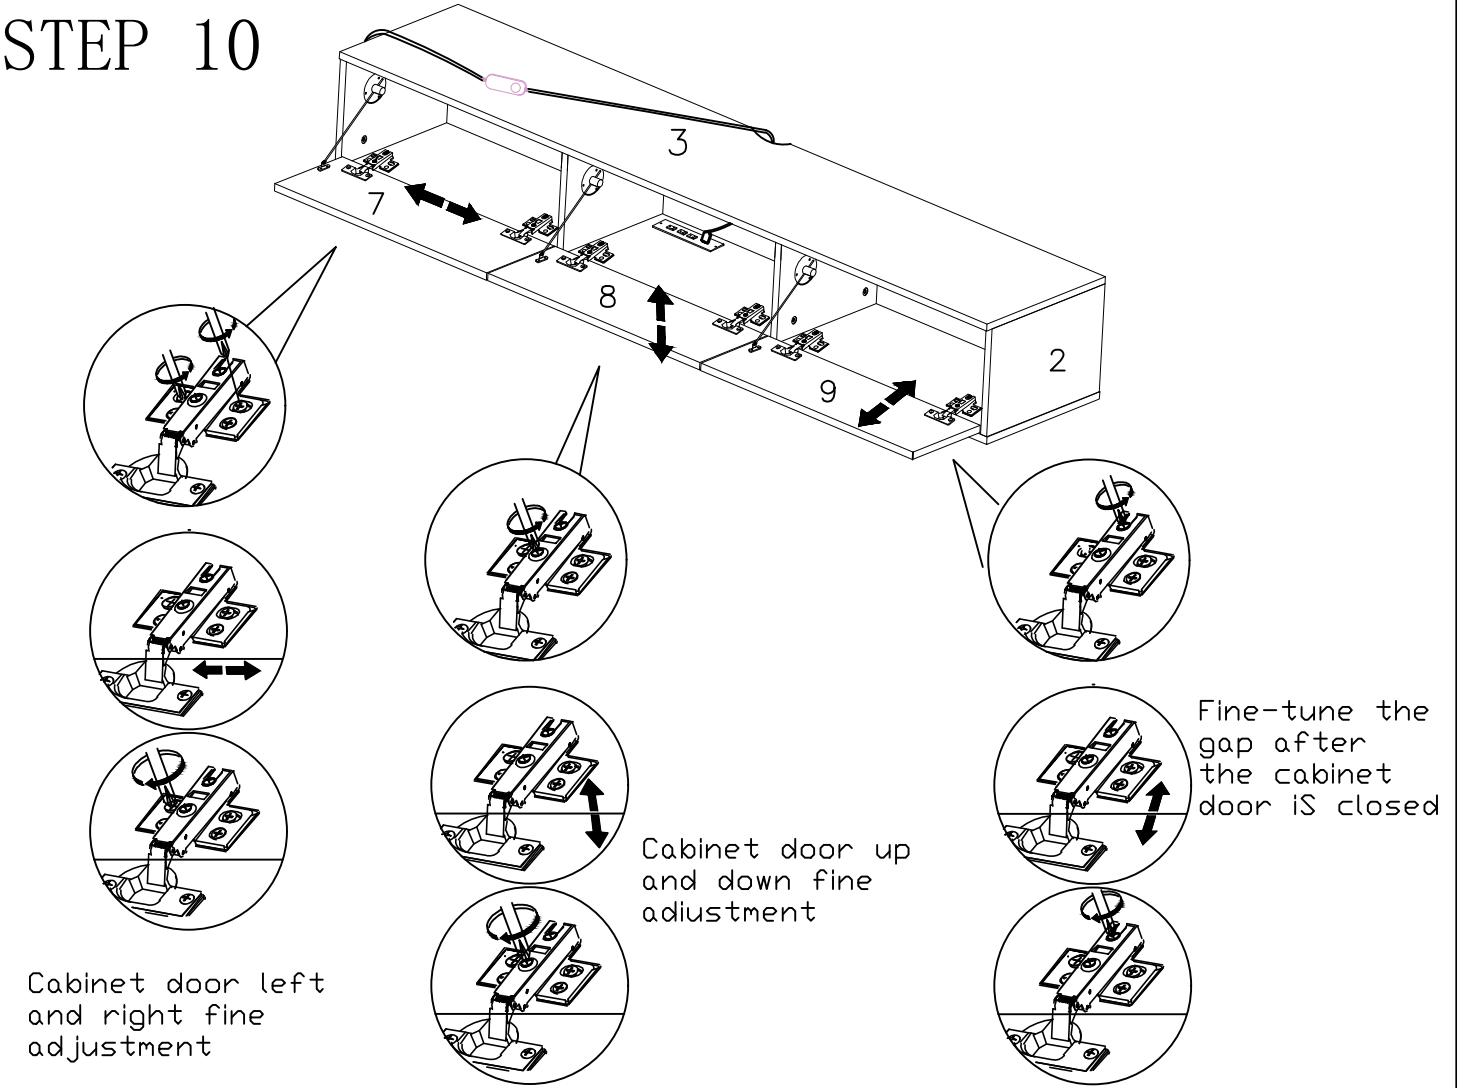


STEP 11

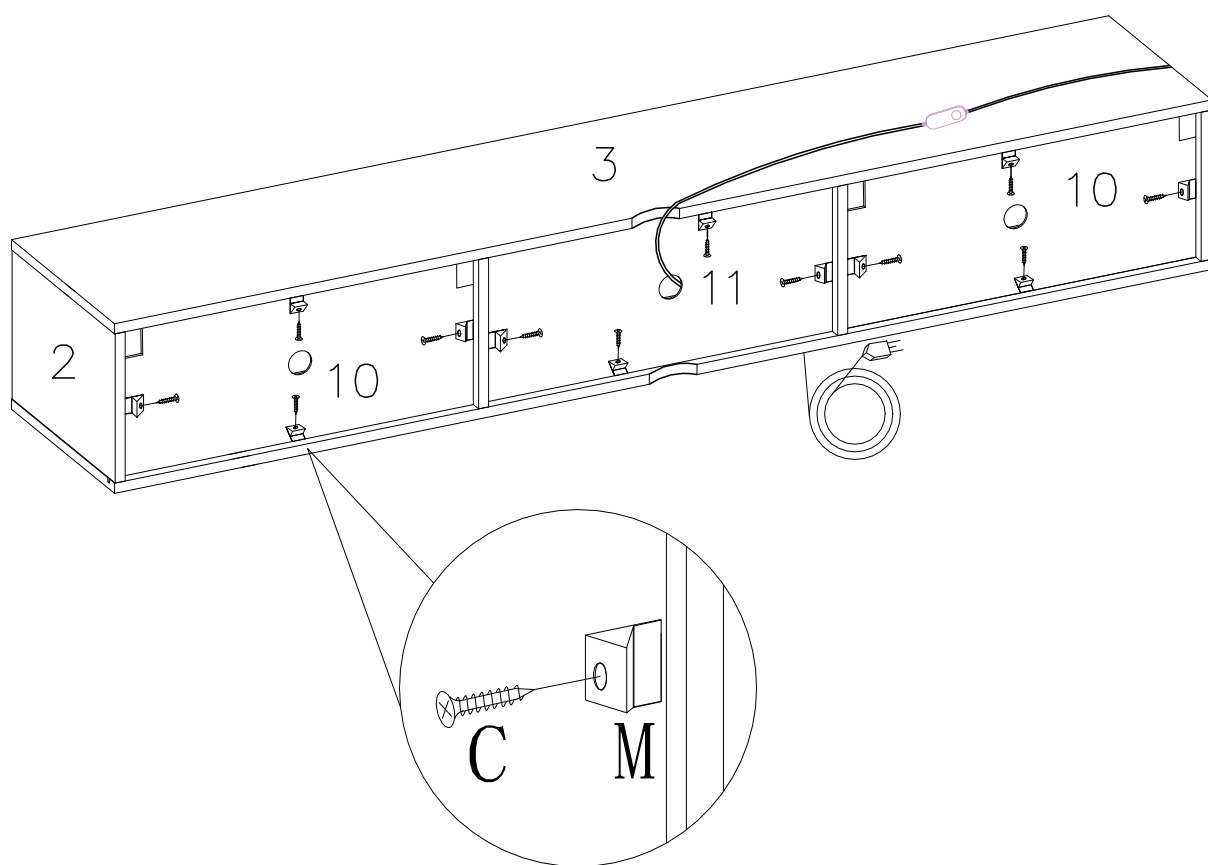


	C× 12PCS
	M× 12PCS

STEP 12

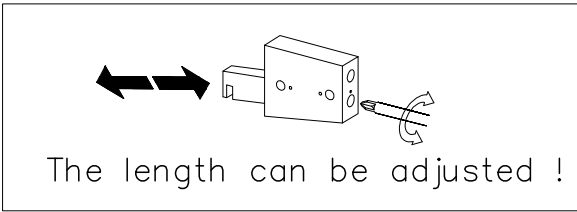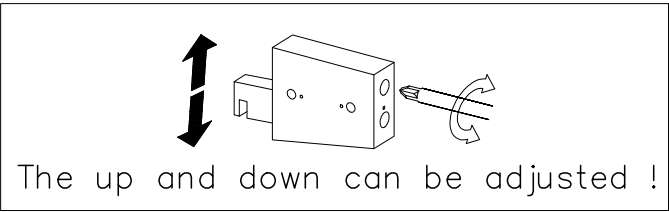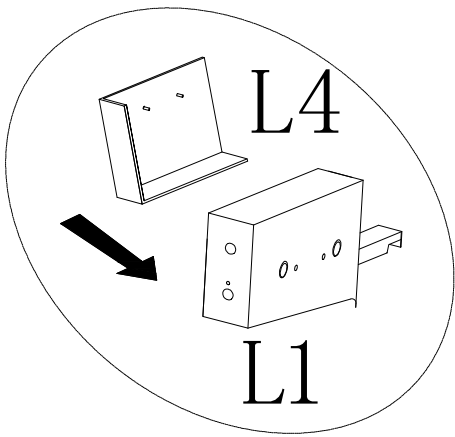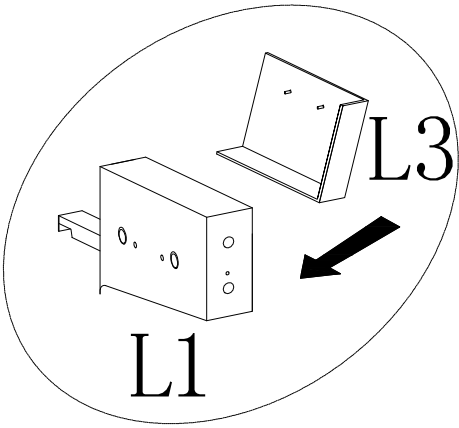


STEP 13

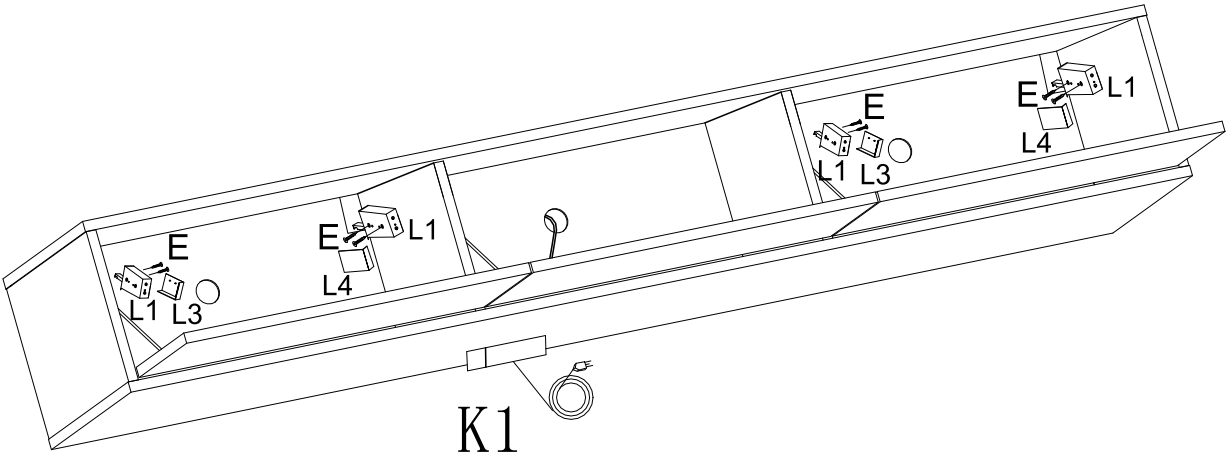


	E× 8PCS		L3× 2PCS
	L1× 4PCS		L4× 2PCS

STEP 14

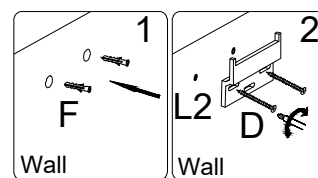



NOTE : dimension distance must be right !

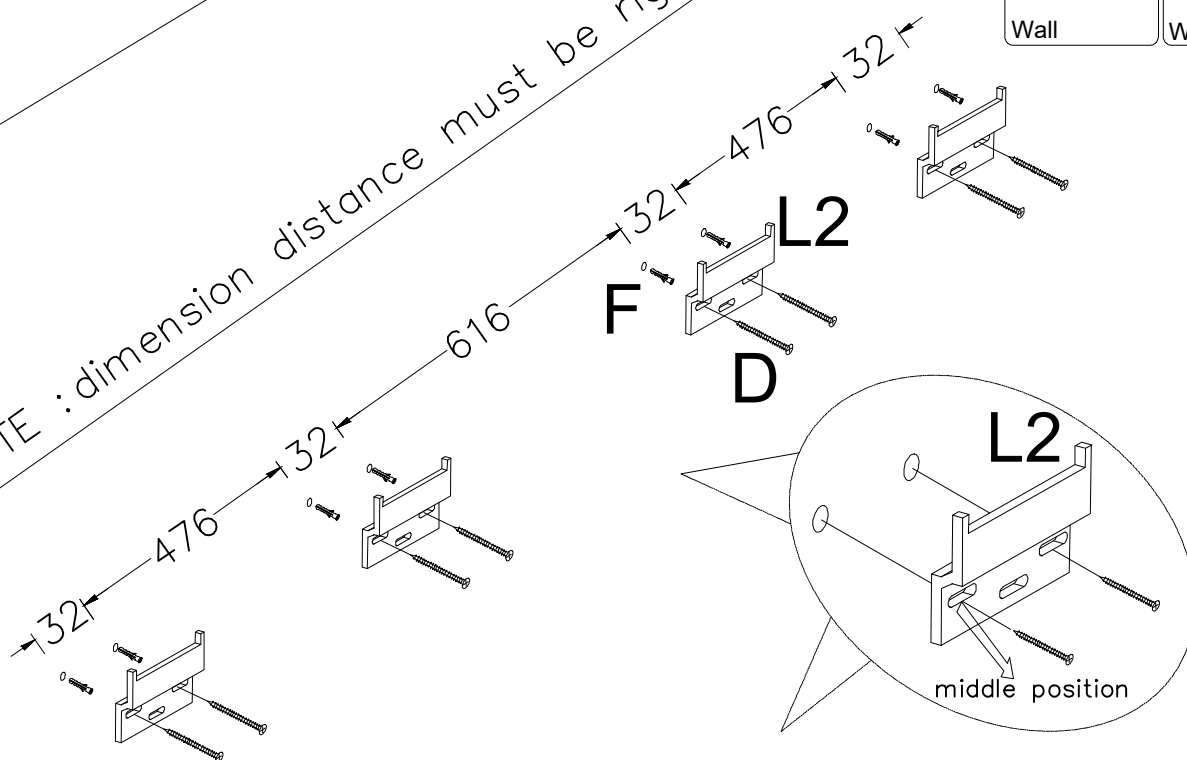

	DX 8PCS		FX 8PCS		L2X 4PCS
---	---------	---	---------	---	----------

STEP 15

NOTE : same horizontal position

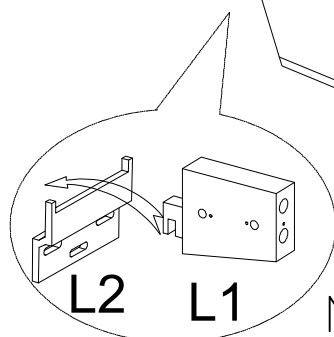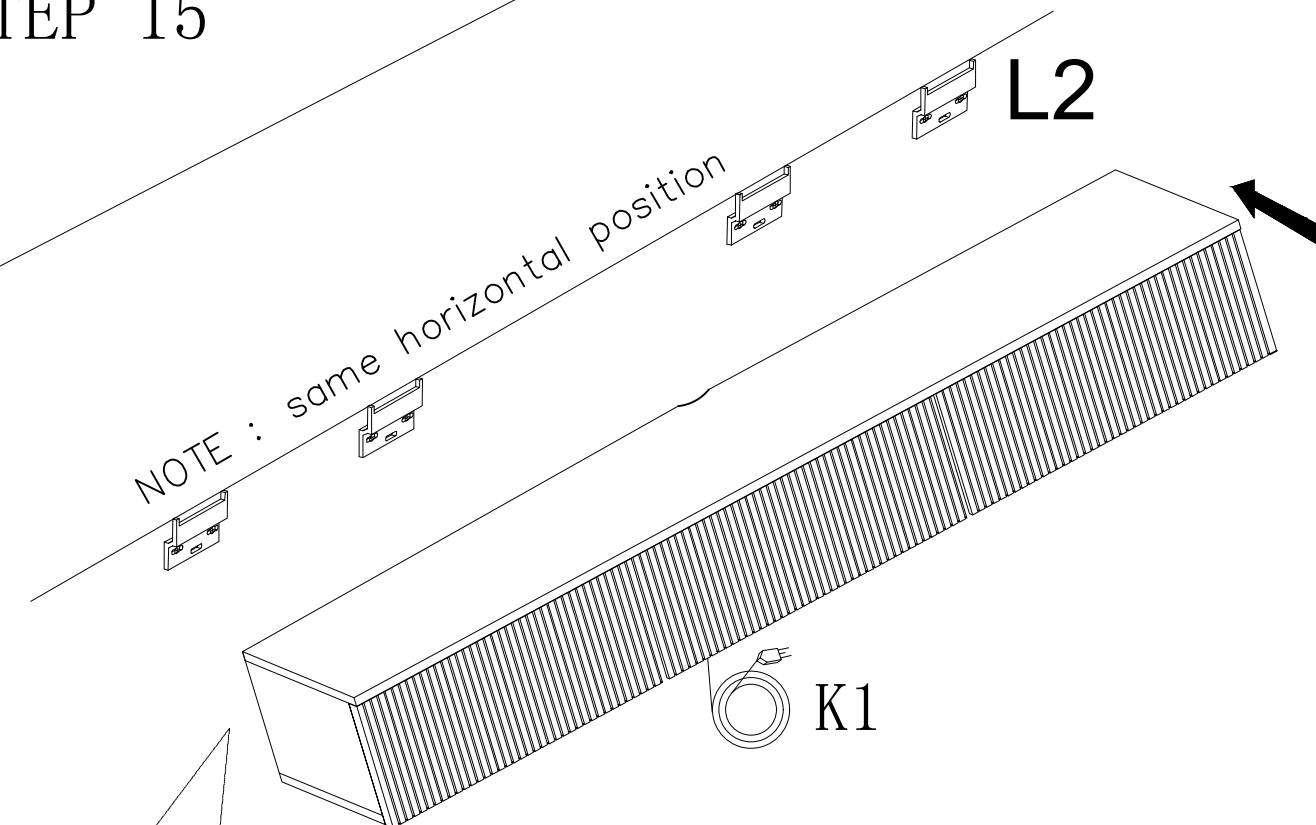

NOTE : install the cabinet on the L2 !