

---

INSTRUCTION MANUAL  
10CZLXCT01-90NA-FW


## Before Using Product

- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.










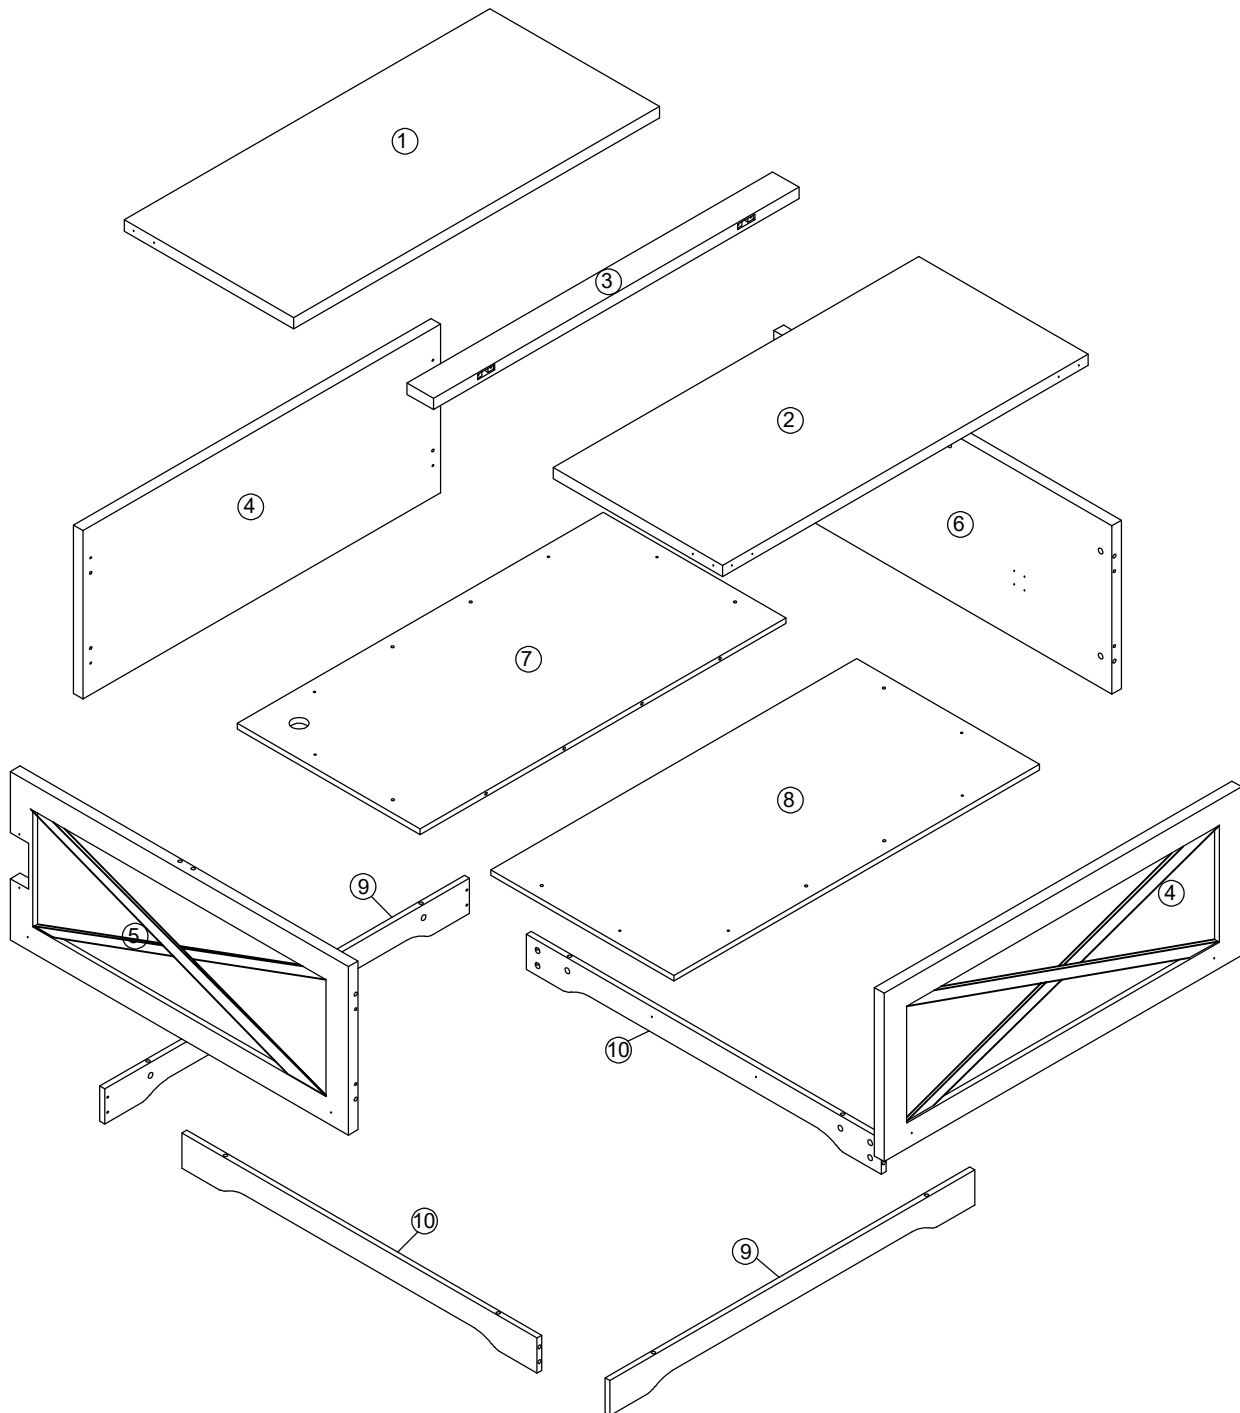








## WARNING

- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

# Product disassembly diagram




# Hardware List

<p>A</p>  <p>6*35 (31PCS)</p>	<p>B</p>  <p>Ø12 (31PCS)</p>	<p>C</p>  <p>6*30 (23PCS)</p>	<p>D</p>  <p>M6×10mm (4PCS)</p>	<p>E</p>  <p>4*11 (62PCS)</p>
<p>F</p>  <p>(8PCS)</p>	<p>G</p>  <p>(1PCS)</p>	<p>H</p>  <p>(10PCS)</p>	<p>I</p>  <p>(2PCS)</p>	<p>J</p>  <p>Ø4×16mm (27PCS)</p>
<p>K</p>  <p>(1PCS)</p>	<p>L</p>  <p>(1PCS)</p>	<p>M</p>  <p>(2PCS)</p>	<p>N</p>  <p>(2PCS)</p>	<p>O</p>  <p>(19PC)</p>
<p>P</p>  <p>(1PCS)</p>	<p>Q</p>  <p>(1PCS)</p>	<p>R</p>  <p>(8PCS)</p>	<p>S</p>  <p>Ø5×50mm (9PCS)</p>	


# Panel List

①




900\*417\*25mm  
Lateral plate \*1

②




900\*417\*25mm  
Lateral plate \*1

③

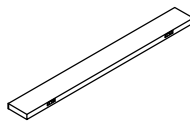


900\*65\*25mm  
Small panel \*1

④

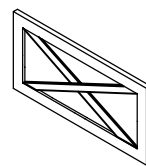


880\*359\*25mm  
dam-board \*2

⑤

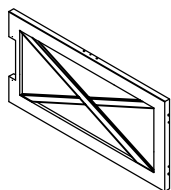


832\*359\*25mm  
right-side plate\*1

⑥

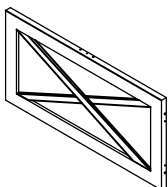


832\*359\*25mm  
left side plate \*1

⑦

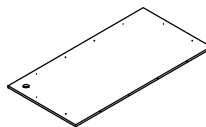


450\*900\*12mm  
baseplate \*1

⑧

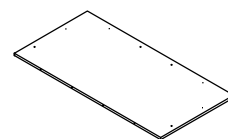


450\*900\*12mm  
baseplate \*1

⑨

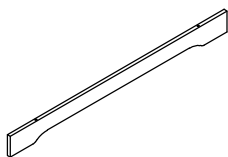


898\*75\*12mm  
baseboard \*2

⑩

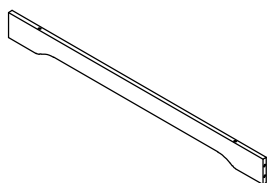


874\*75\*12mm  
baseboard \*2

# Assembling the unit with camlocks and wood dowels.



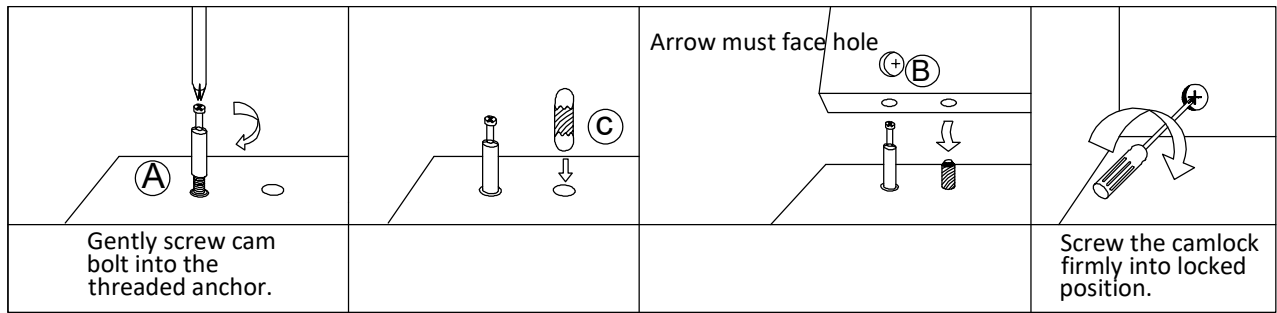


## Assembly instructions





### Step 1

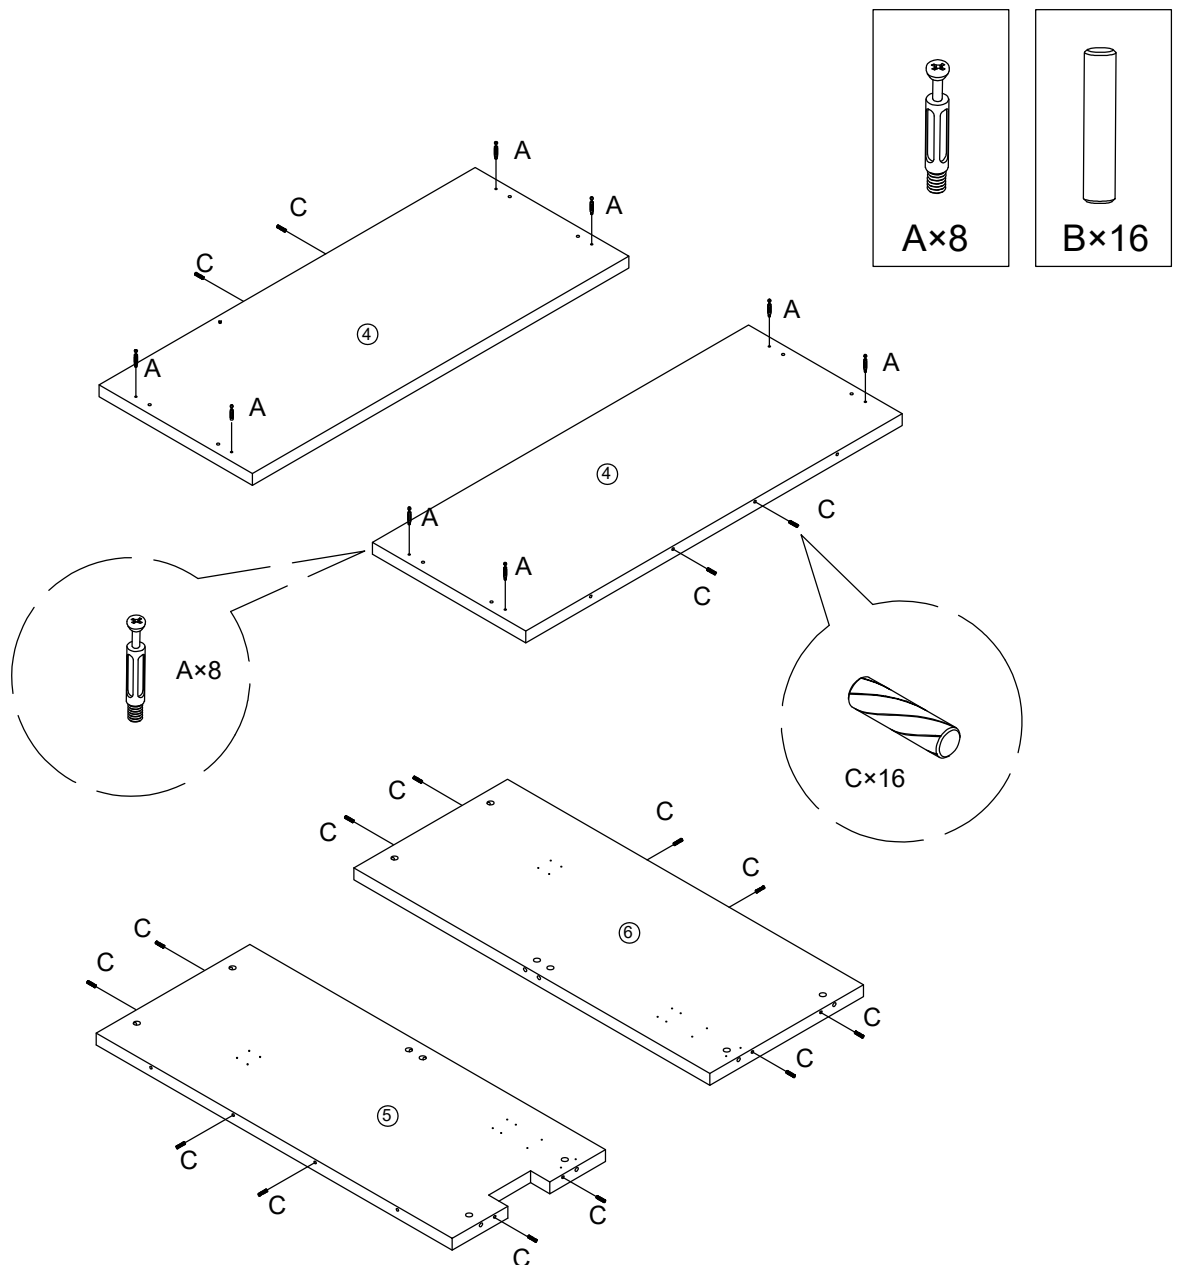

## Step 2

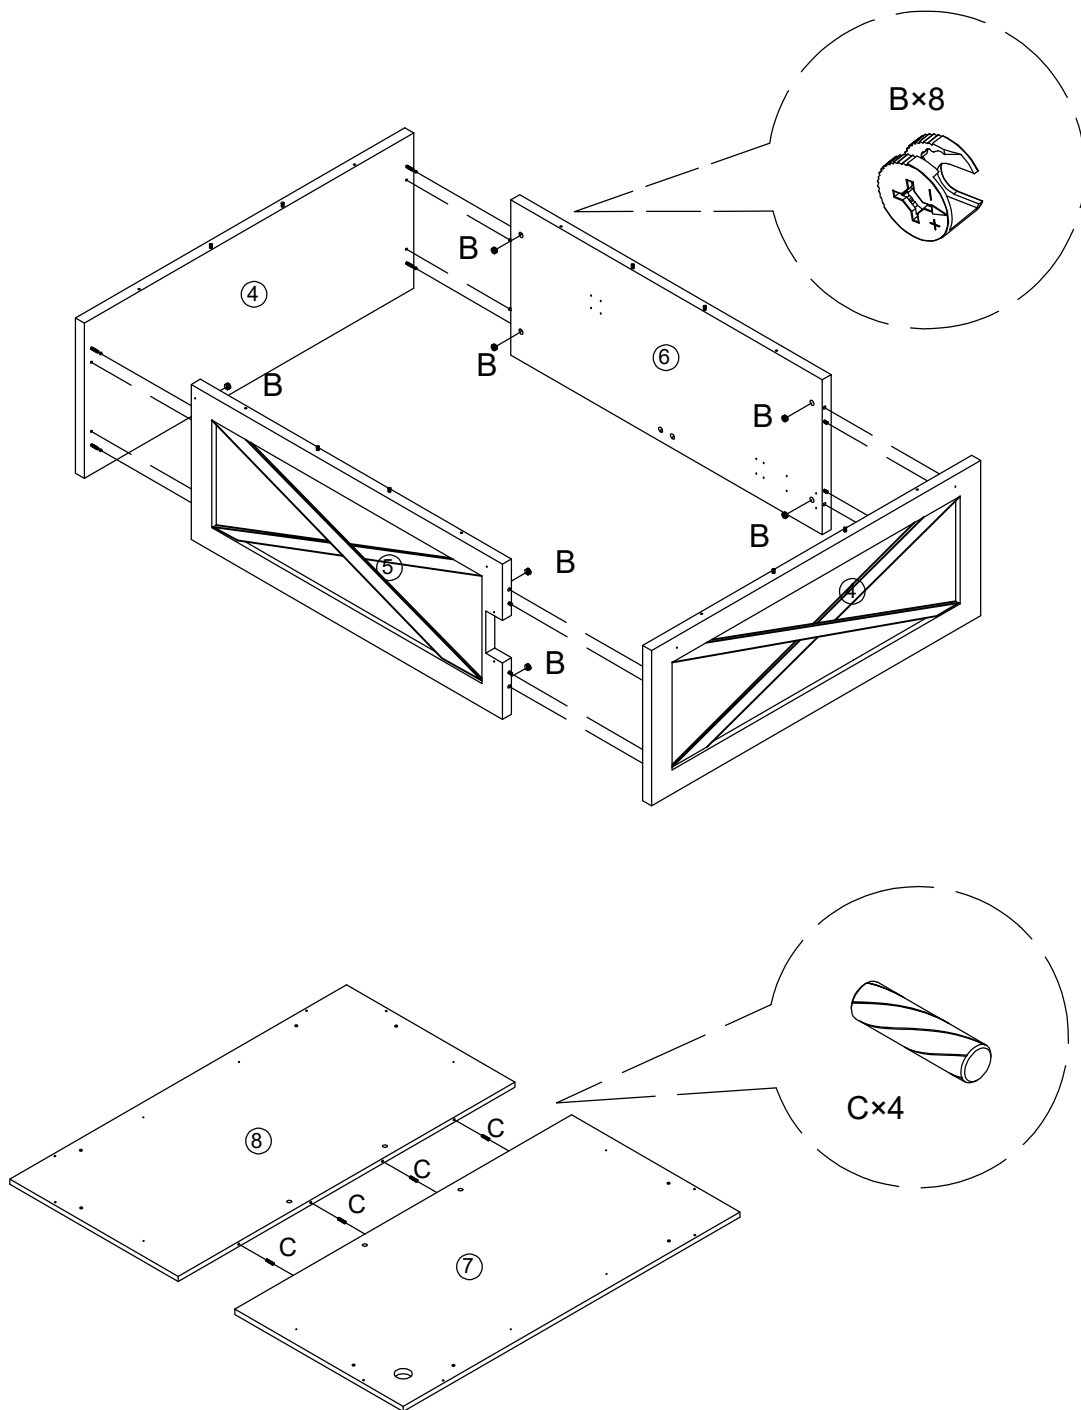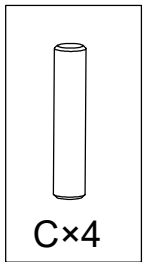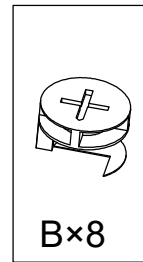

## Step 3

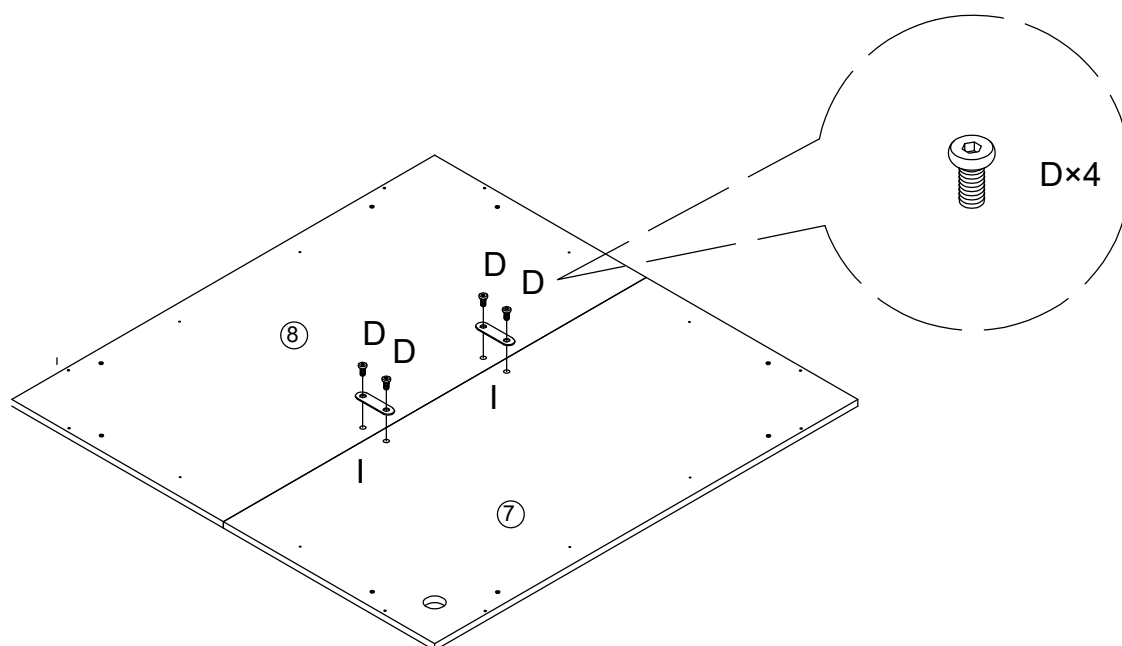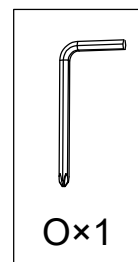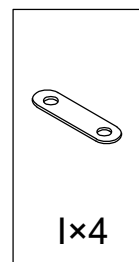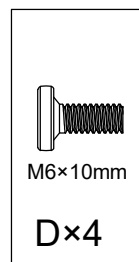




## Step 4





S×8

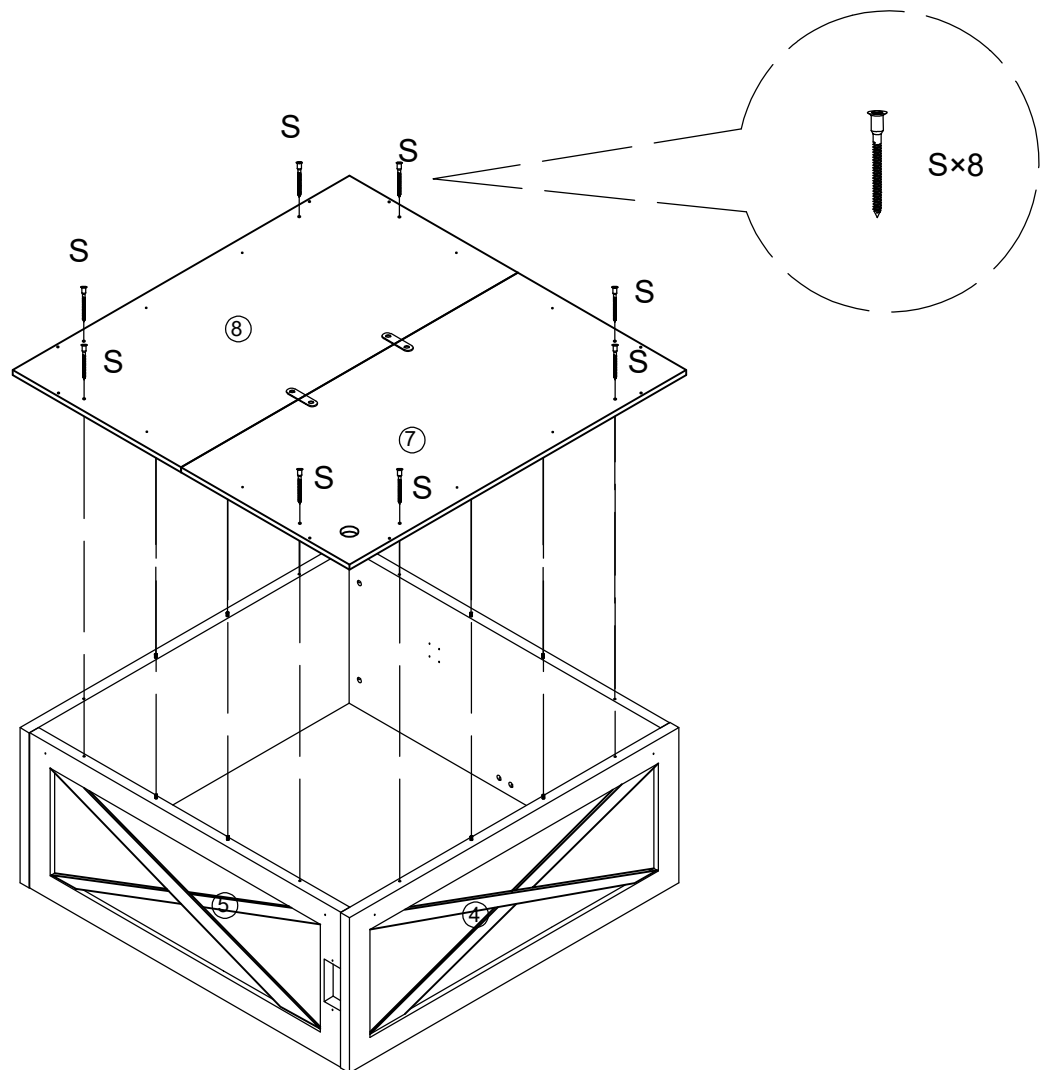

## Step 5





A×16

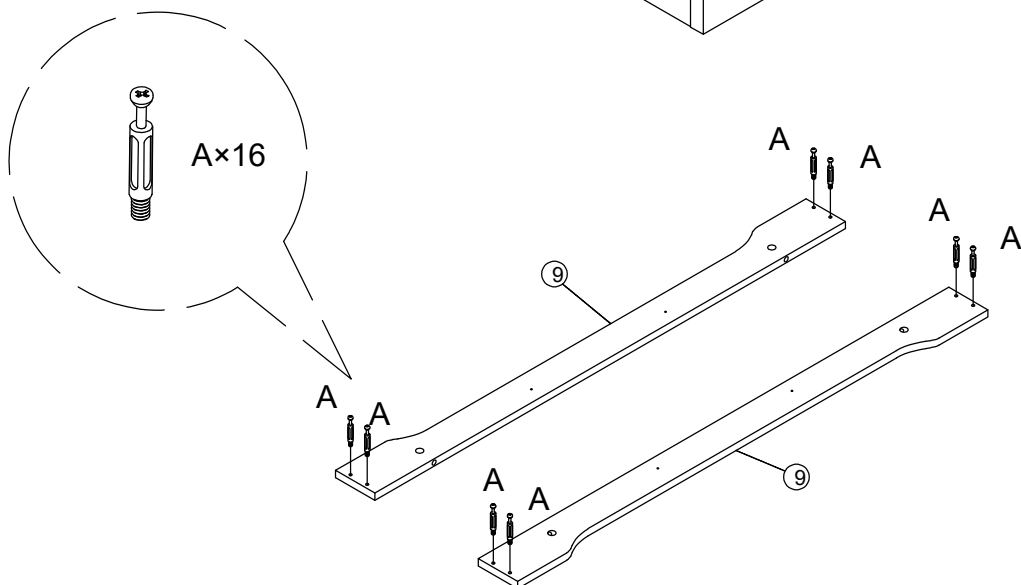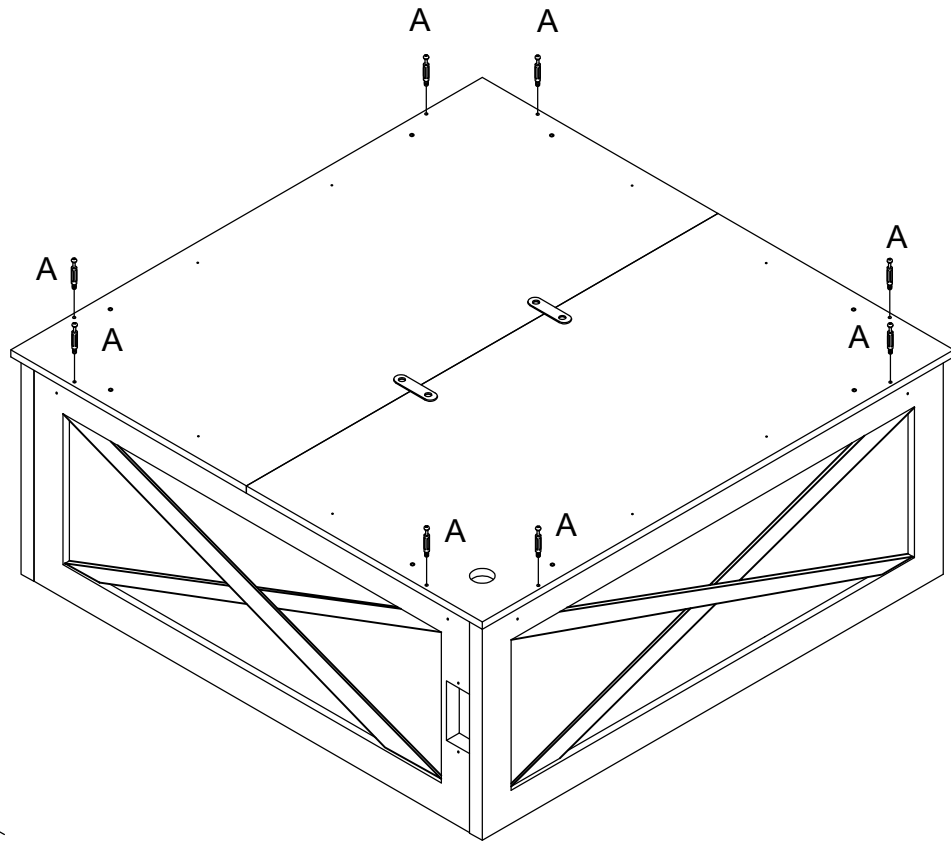






## Step 6




B×16

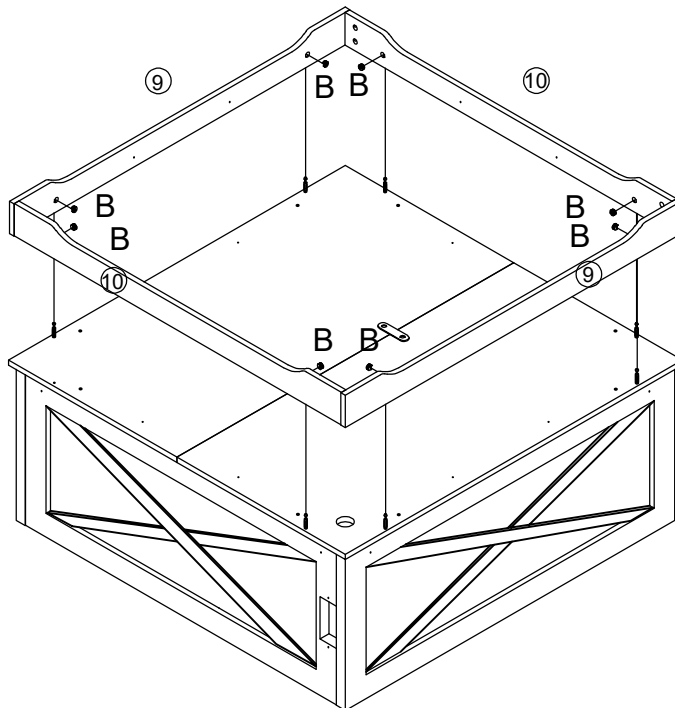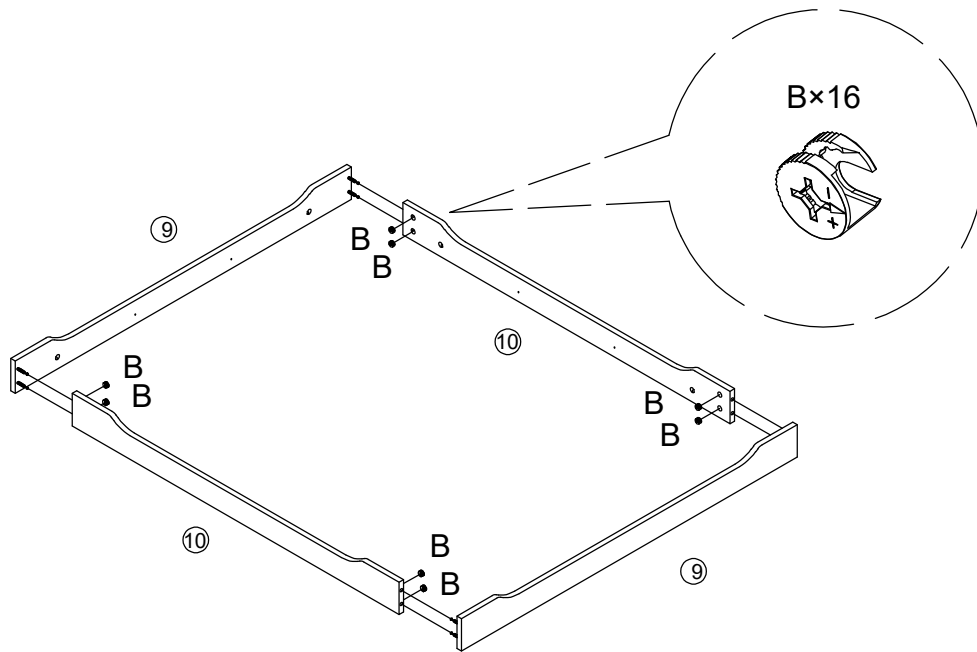





## Step 7

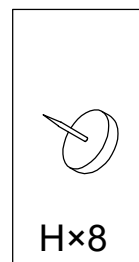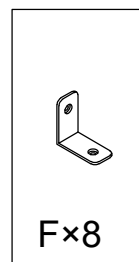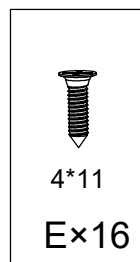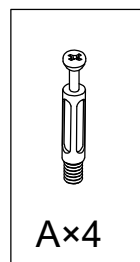





Need to bring your own hammer

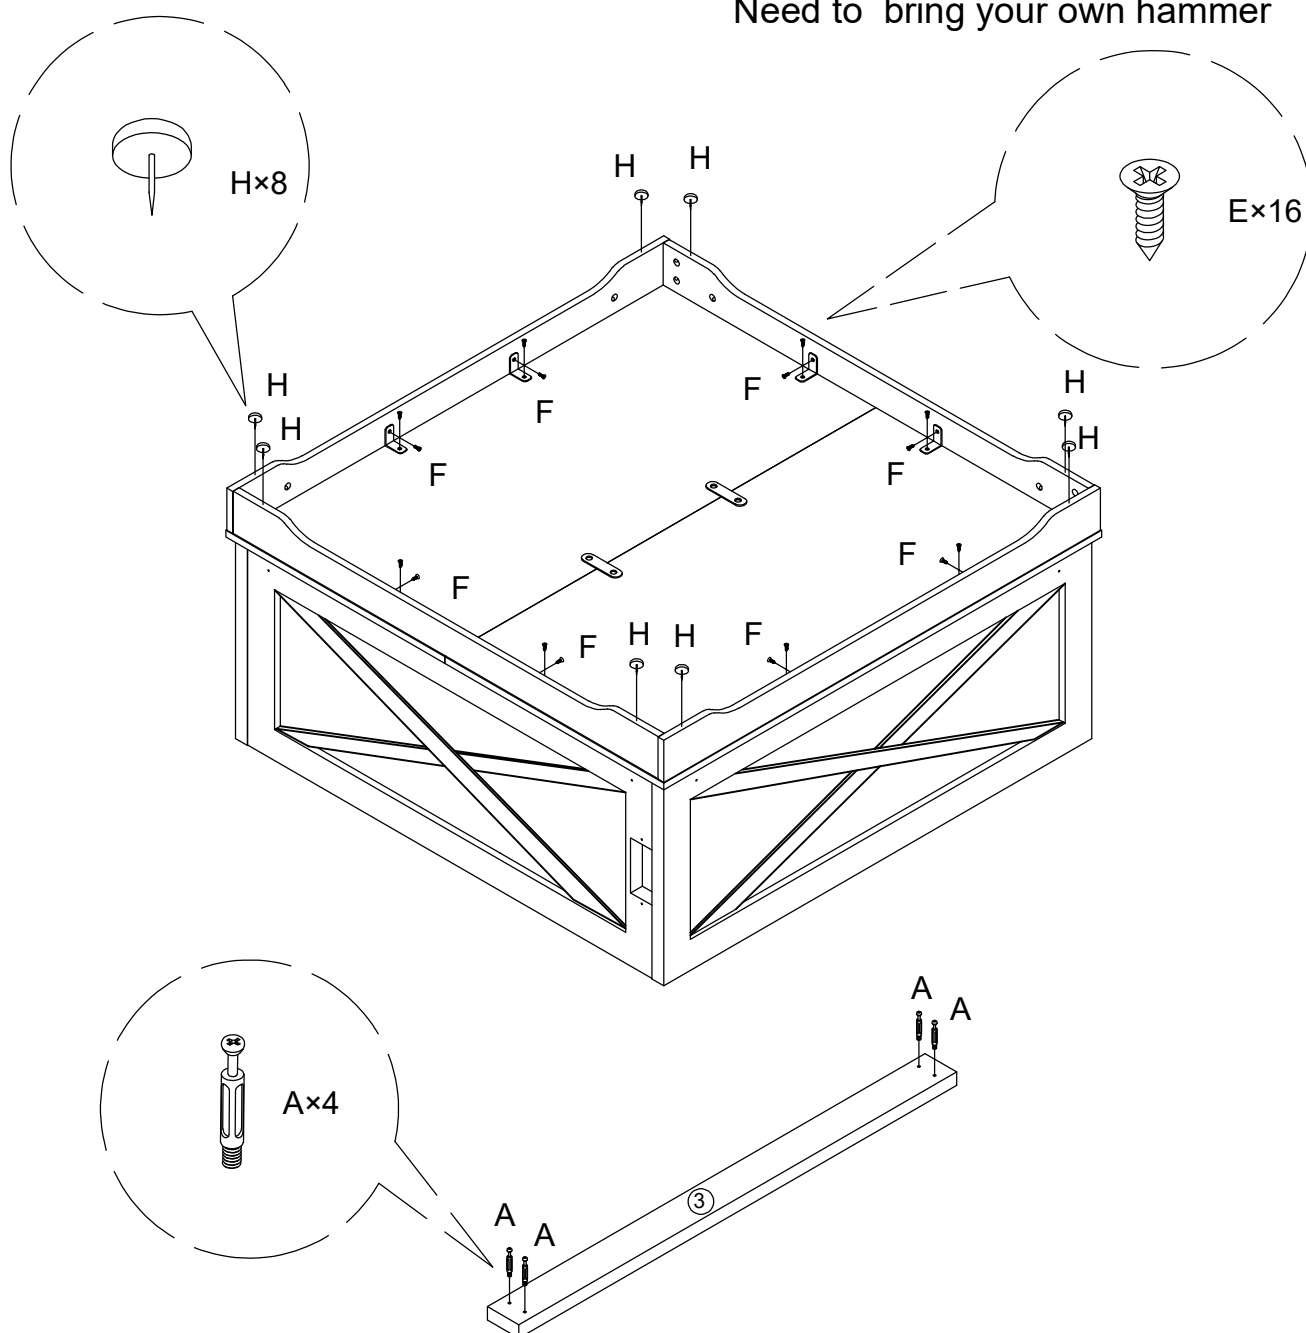

## Step 8

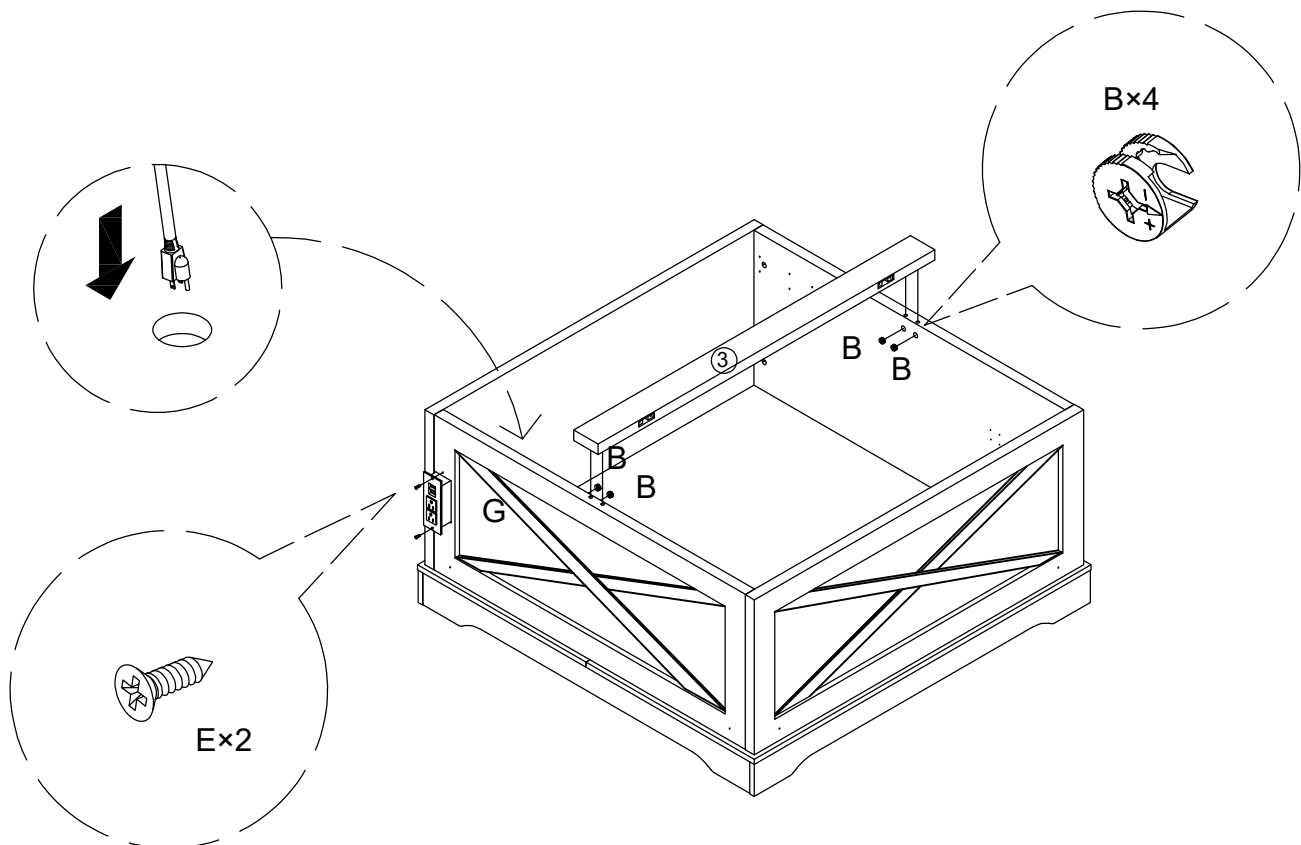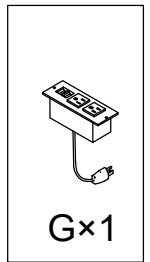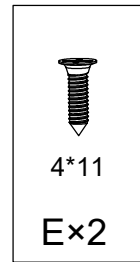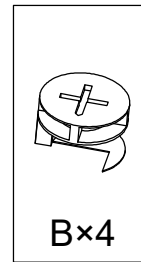


## Step 9

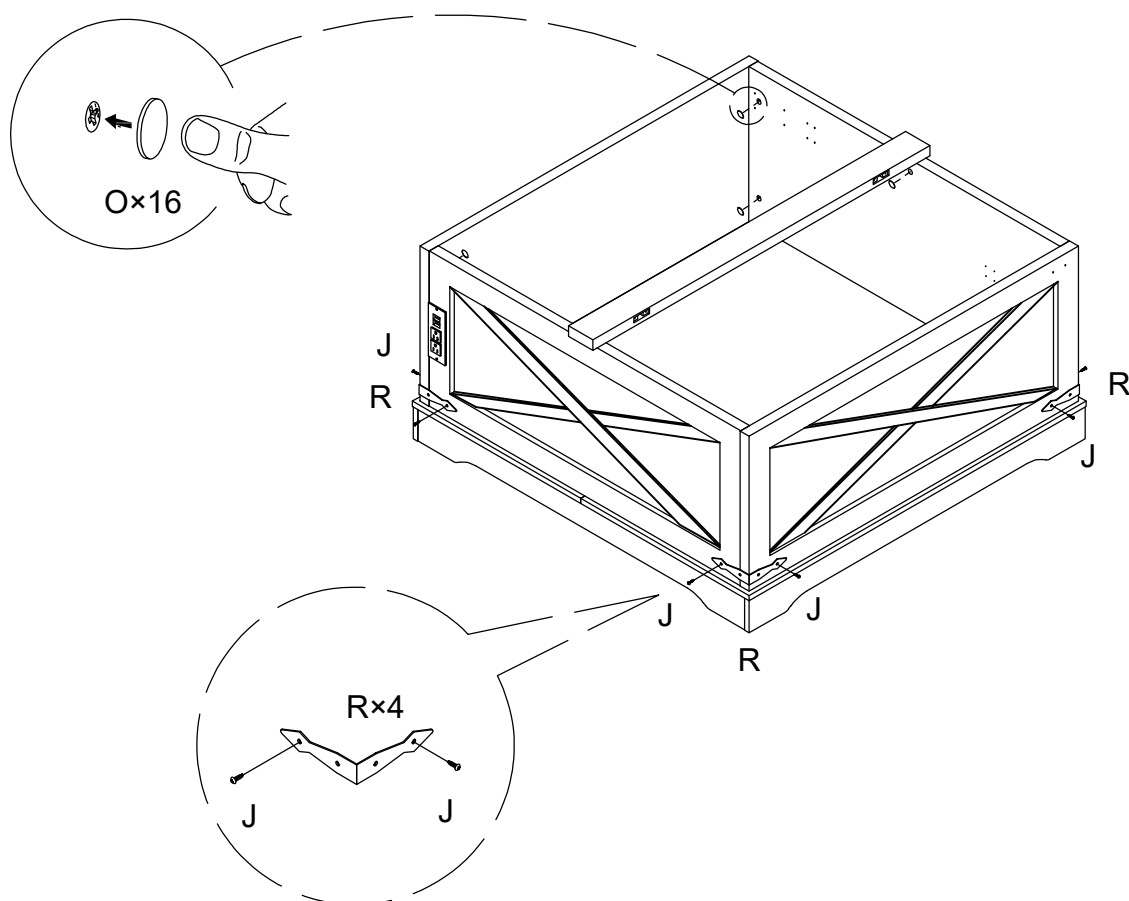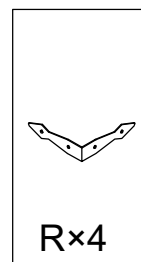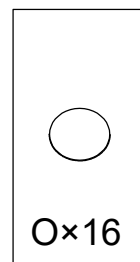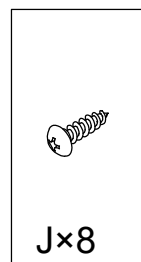



## Step 10





Jx16





Rx4

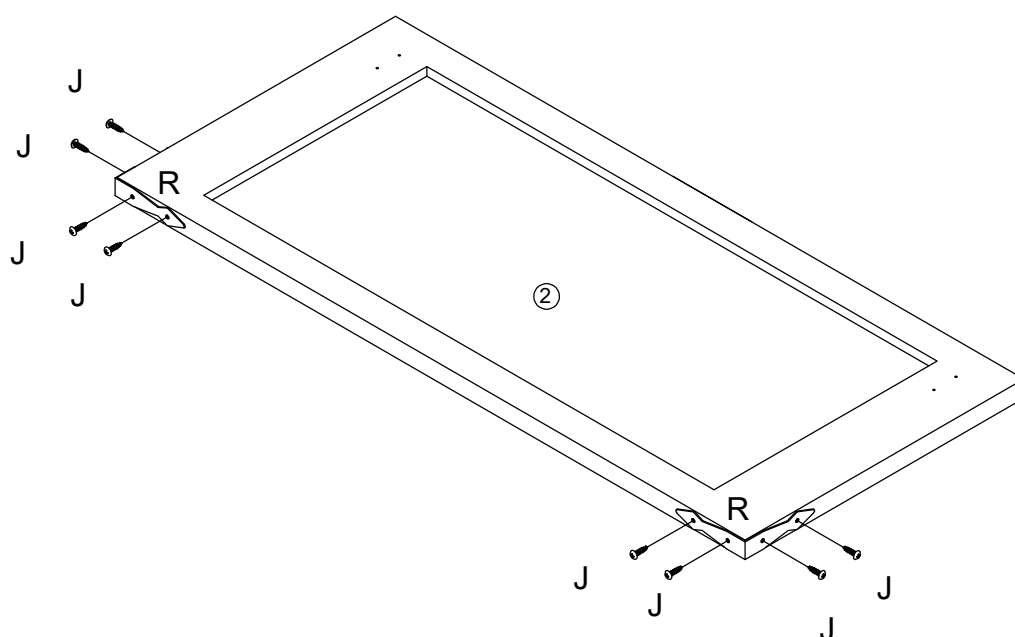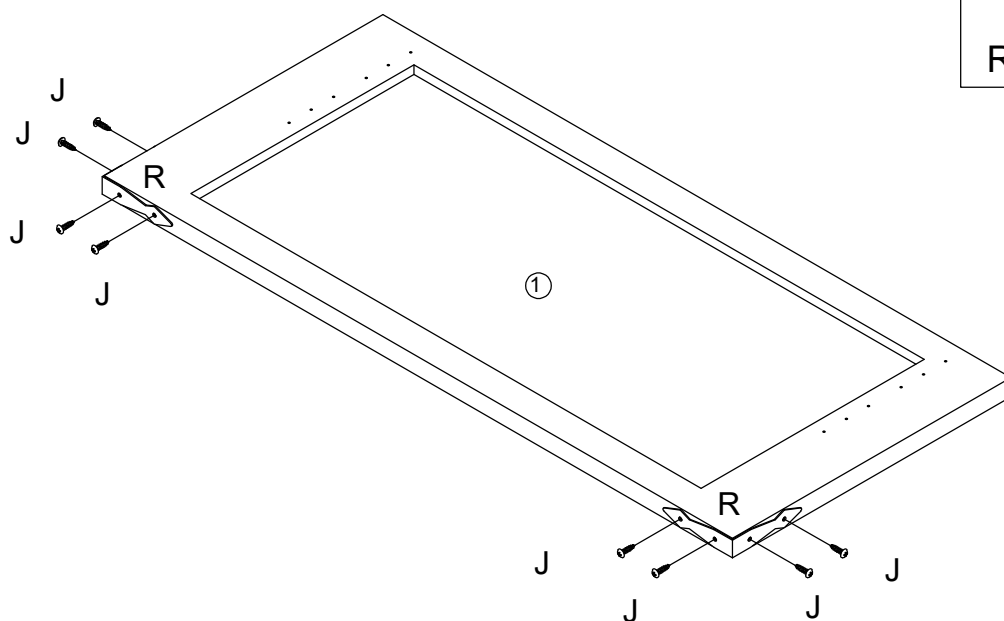

## Step 11

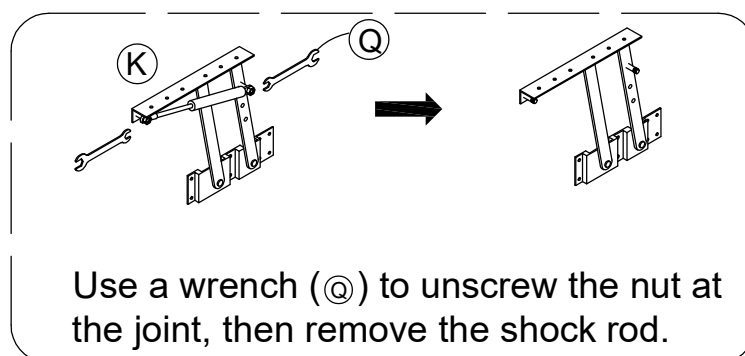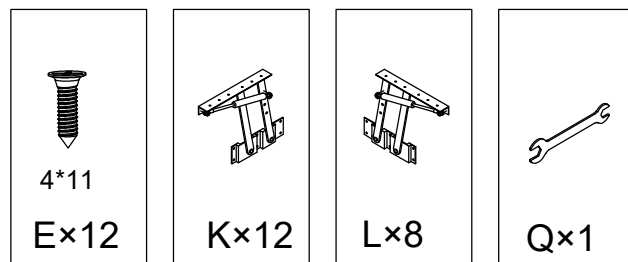

Note: (Ⓚ) and (Ⓛ) about points, pay attention to distinguish when installing

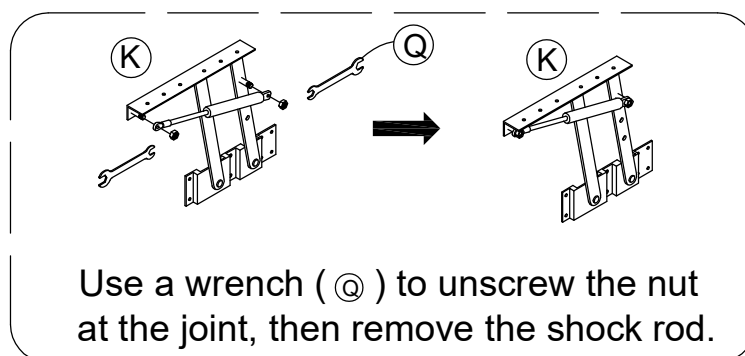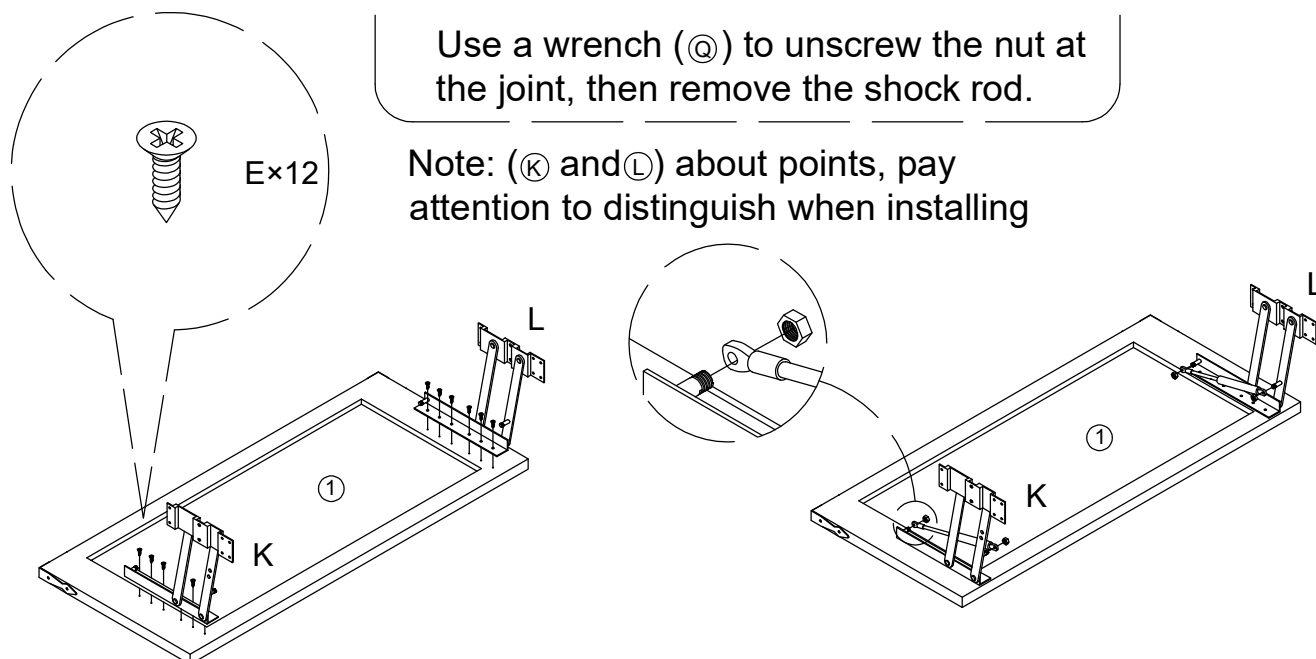





## Step 12





4\*11

E×16

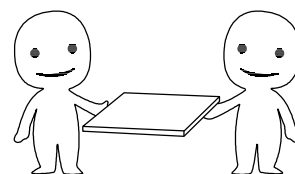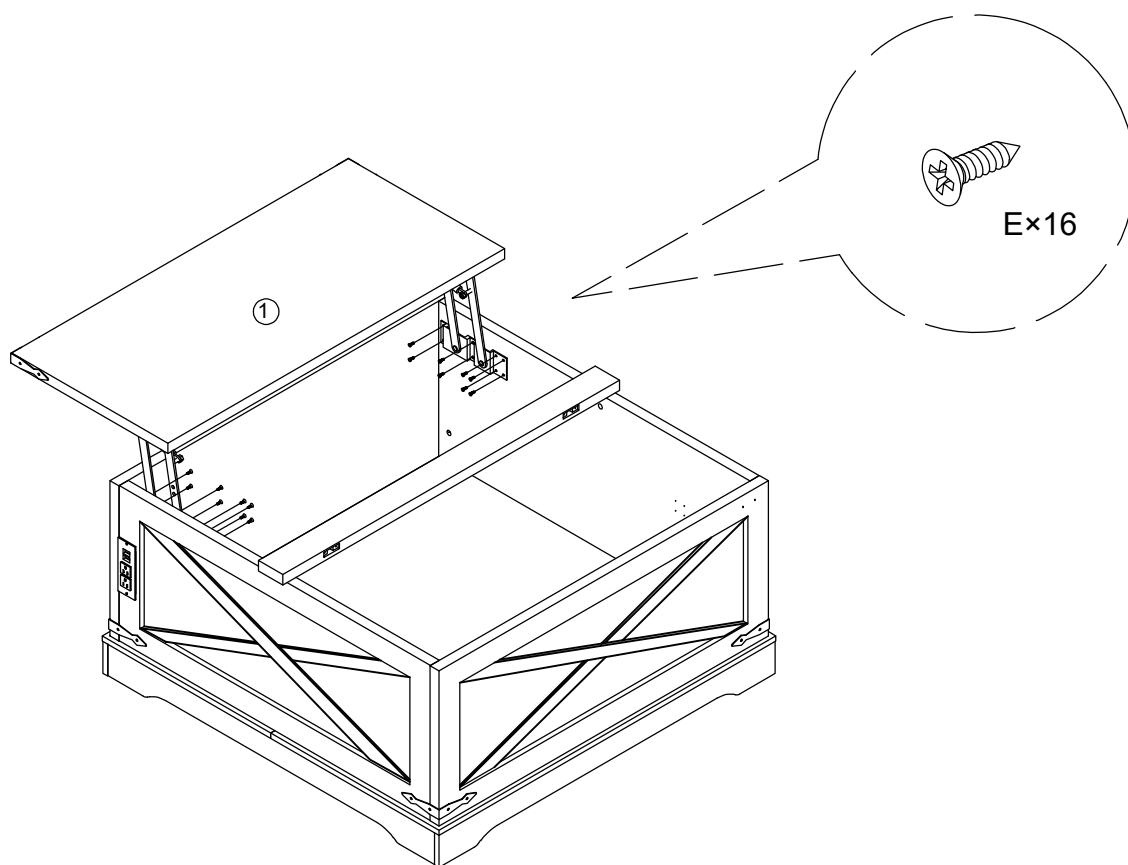

Need a duo

## Step 13

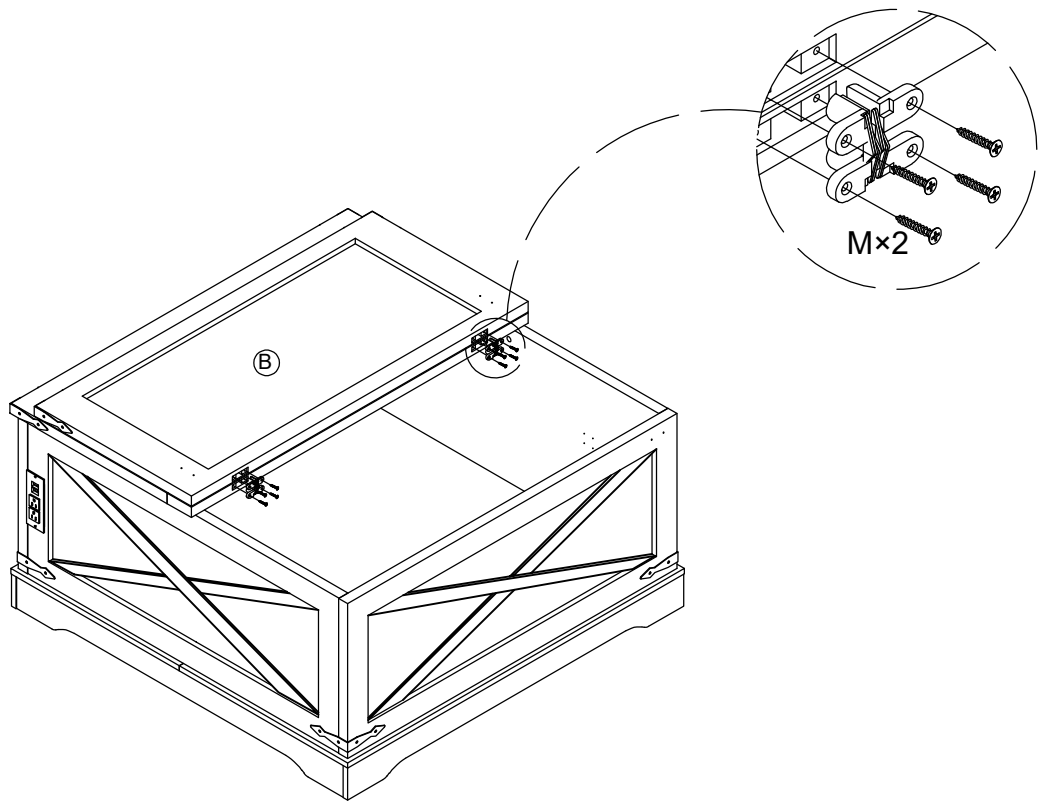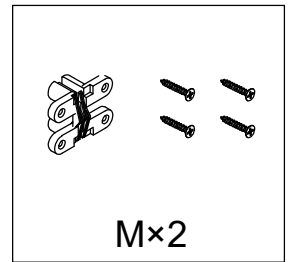

## Step 14



4\*11

E×12



N×2

