




assemble and move this model.

# OPTION 1: **OPTION 2:**

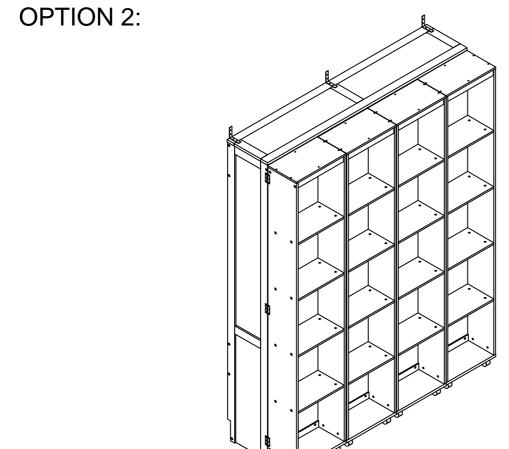

2/39

## WARNING.

IMPORTANT SAFETY REQUIREMENTS - Bed Attachment to Wall. For Your Safety, the Murphy Bed MUST BE ATTACHED to the Wall.

Seek Certified Professional Consultant / Contractors for their Services to:

- 1.) DETERMINE the WALL Type in Your Home;
- 2.) PRECISE HARDWARE that suits to the Wall Type in Your Home;
- 3.) INSTALL/ATTACH of the Murphy Bed to the Wall in Your Home;
- 4.) VALIDATE the Murphy Bed is appropriately and securely installed/attached.


The choice of wall anchoring hardware depends on the type of wall. This Murphy Bed is delivered with HARDWARE SCREWS suited for attachment to WOOD STUDS in walls. Any STUDS type detected with your Consultant-Contractors to be NOT WOOD STUDS - DISCARD and DO NOT USE these SCREWS. Use the hardware suitable for your wall material.

Seek the professional advice of your Consultant-Contractor and procure the appropriate hardware and brackets for the attchment of the Murphy Bed to the Wall.

FAILURE TO ADHERE TO THE ABOVE INSTRUCTIONS MAY RESULT IN SERIOUS and/or SEVERE INJURIES or Death caused by the detachment of the Murphy Bed from the Wall.


### SAFETY PRECAUTION:

- 1.) MAXIMUM Mattress Weight suited to your murphy bed: 77 lbs (35 kg); MAXIMUM mattress thickness: 8 inches (20 cm);
- 2.) ENSURE ADULTS ONLY throughout the entire assembly and attachment.
- **3.) KEEP ALL Children, Non-Ambulatory persons and Pets** at bay during the entire assembly and attachment.

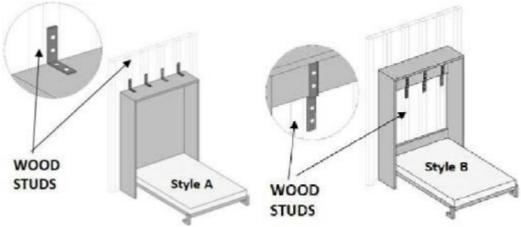


NOT DRAWN TO SCALE.


3/39

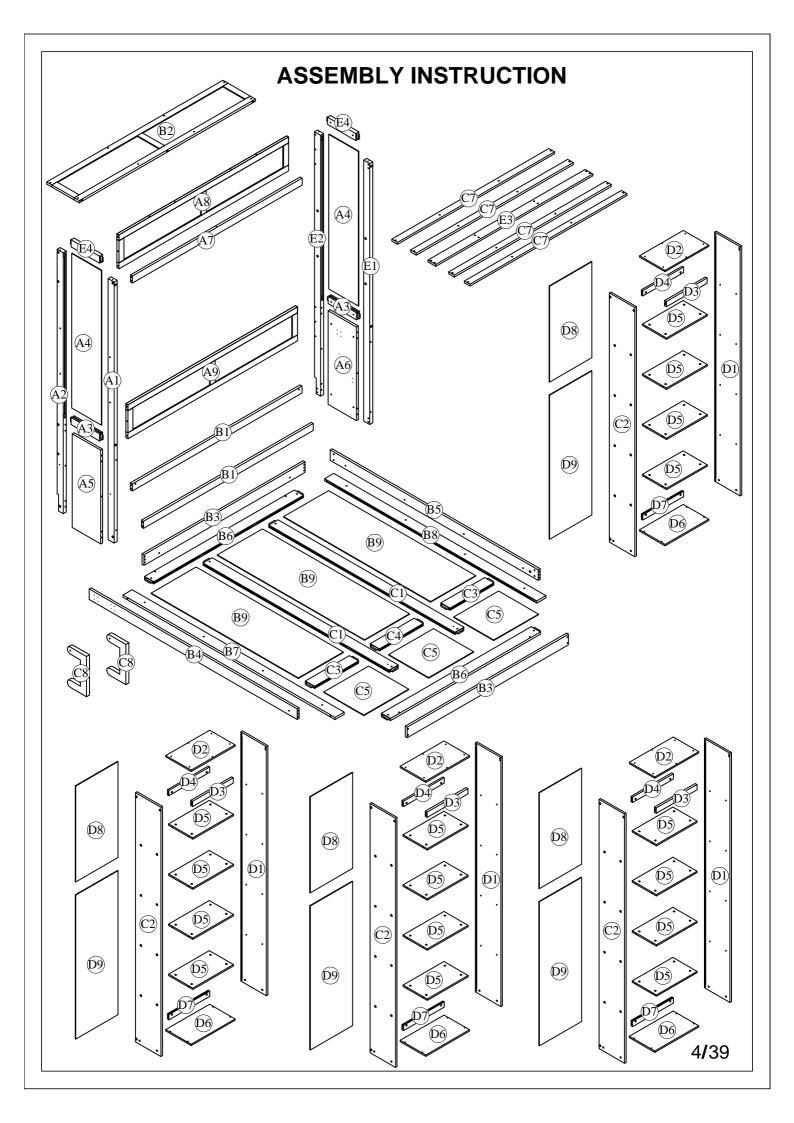


	D1	
<u></u> /		
eft side Panel-4pcs	Right side Panel-4pcs	

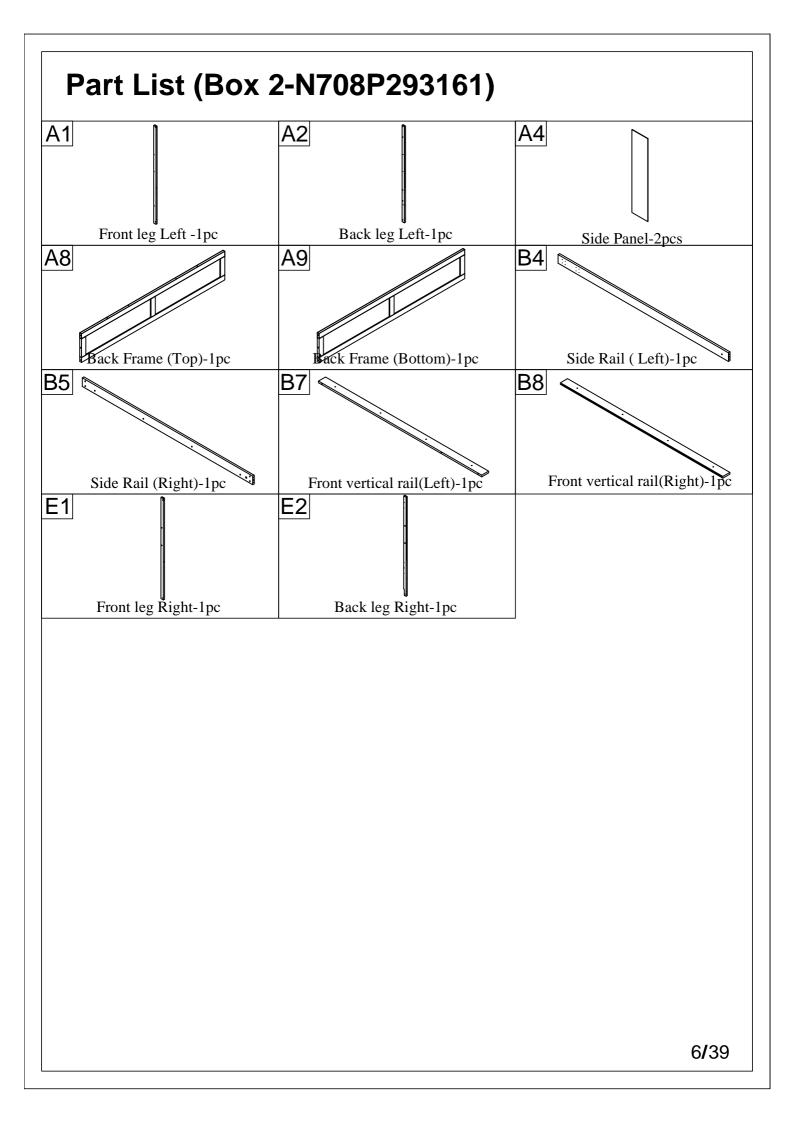


## Part List & Hardware List (Box 3-N708P293162)

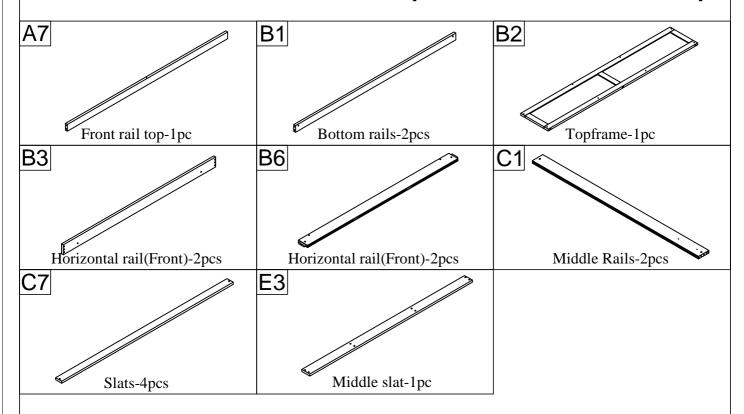



## Part List & Hardware List (Box 4-N708P293163) **A3 A5 A6** Horizontal rail (Middle)-2pcs Left Panel (Bottom)-1pc Right Panel (Bottom)-1pc **B9** C3 C4 Front Panel(Bottom)-3pcs Crossbar-2pcs Middle Crossbar-1pc C5 D2 C8 Front Panel(Top)-3pcs Woodleg-2pcs Top panel-4pcs D4 D5 D3 Back Rail (Top)-4pcs Front Rail (top)-4pcs Shelf Panel-16pcs D6 D7 D8 Back Rail(Bottom)-4pcs Bottom panel-4pcs Back panel (Top)-4pcs **E4** D9 Horizontal rail (Top)-2pcs Back panel (bottom)-4pcs 8/39

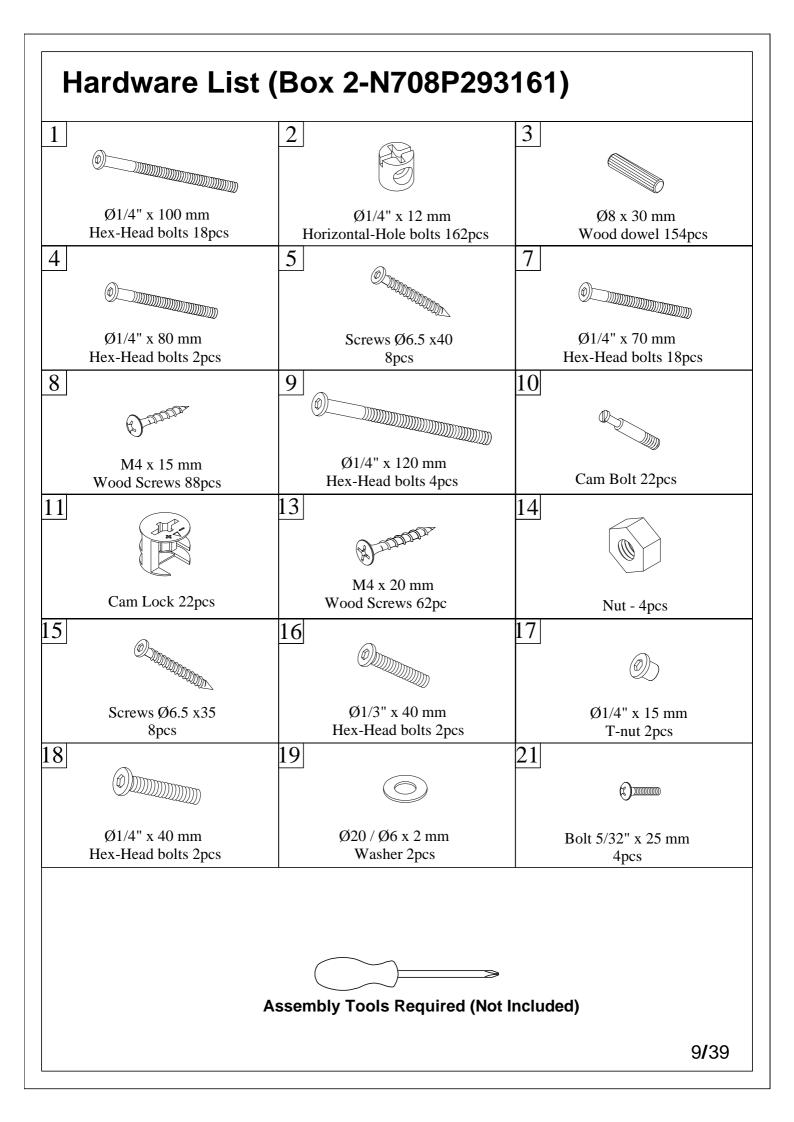


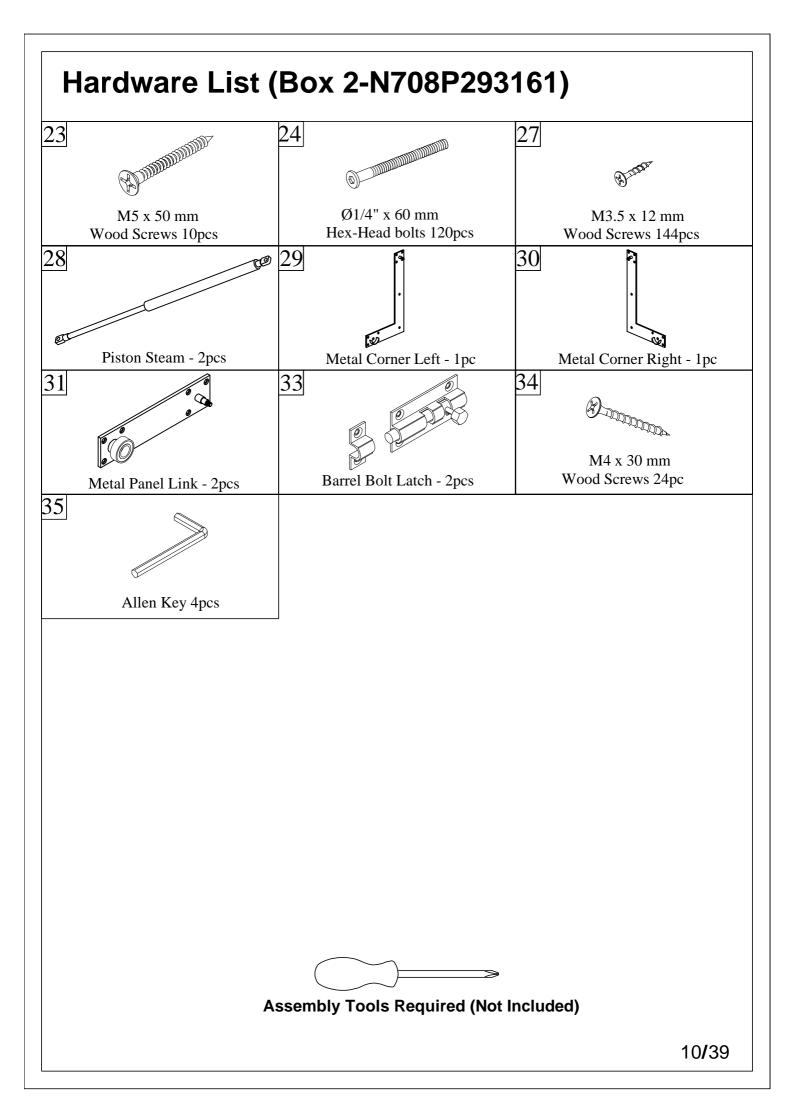



# Hardware List (Box 3-N708P293162) 6 Straight Steel Panel 4pcs Metal Angle - 18pcs 20 Handle - 2pcs 22 Rotationable Wheel - 8pcs Metal Angle - 16pcs 32 Rotationable Wheel - 4pcs




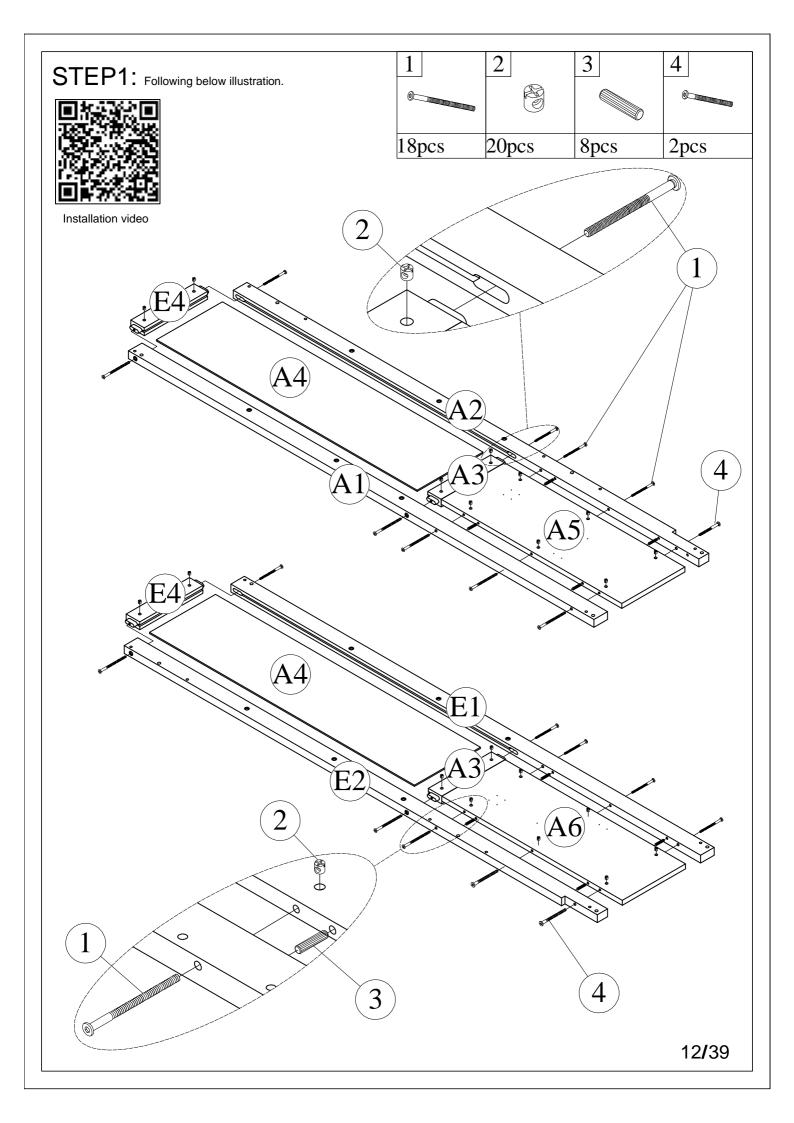


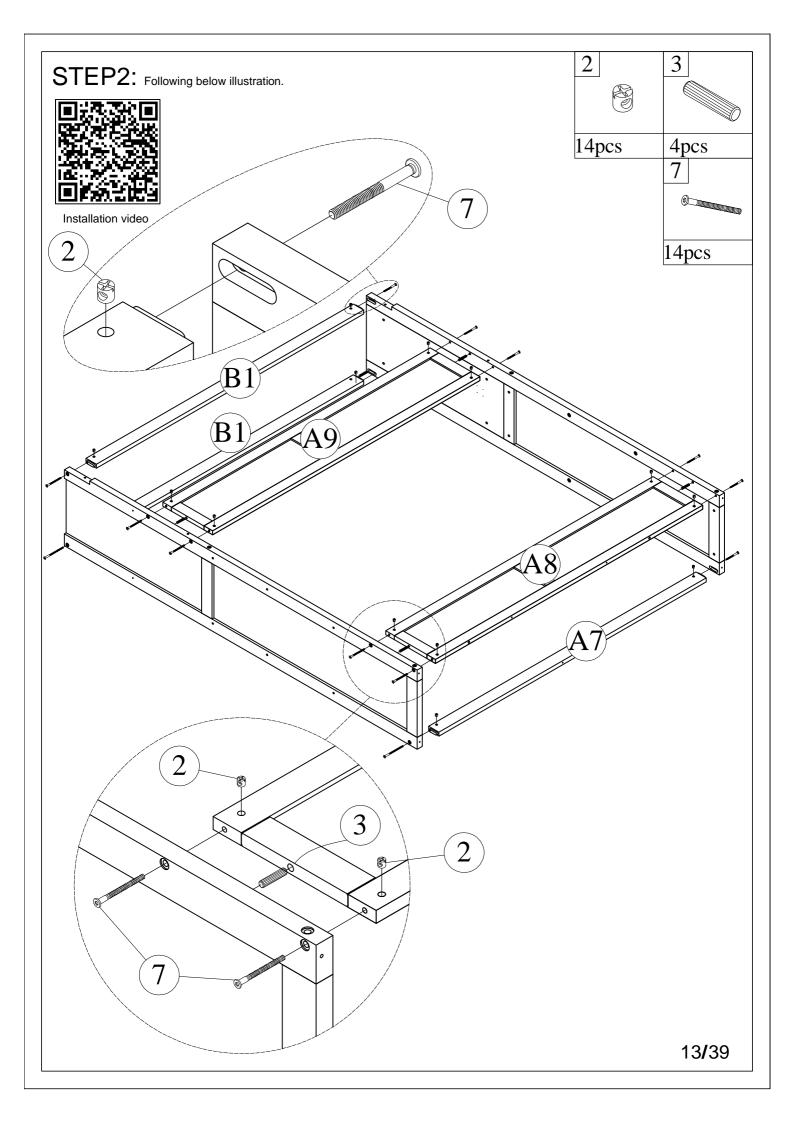


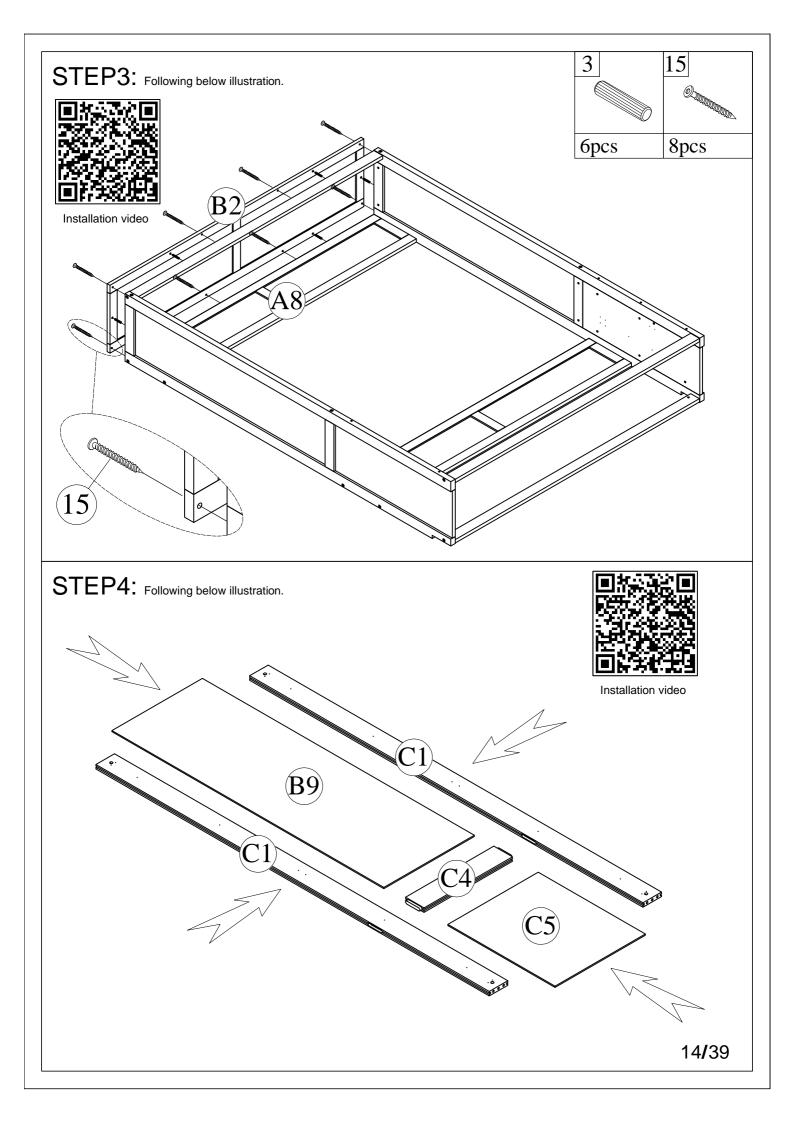


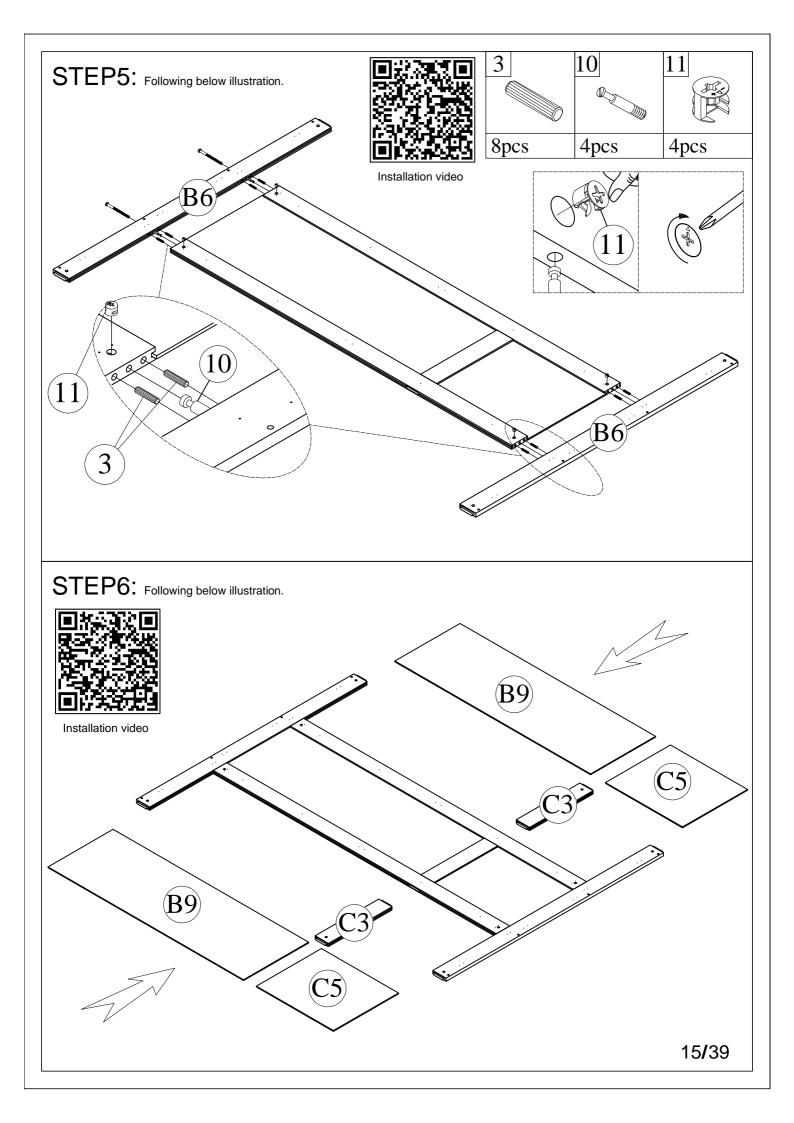


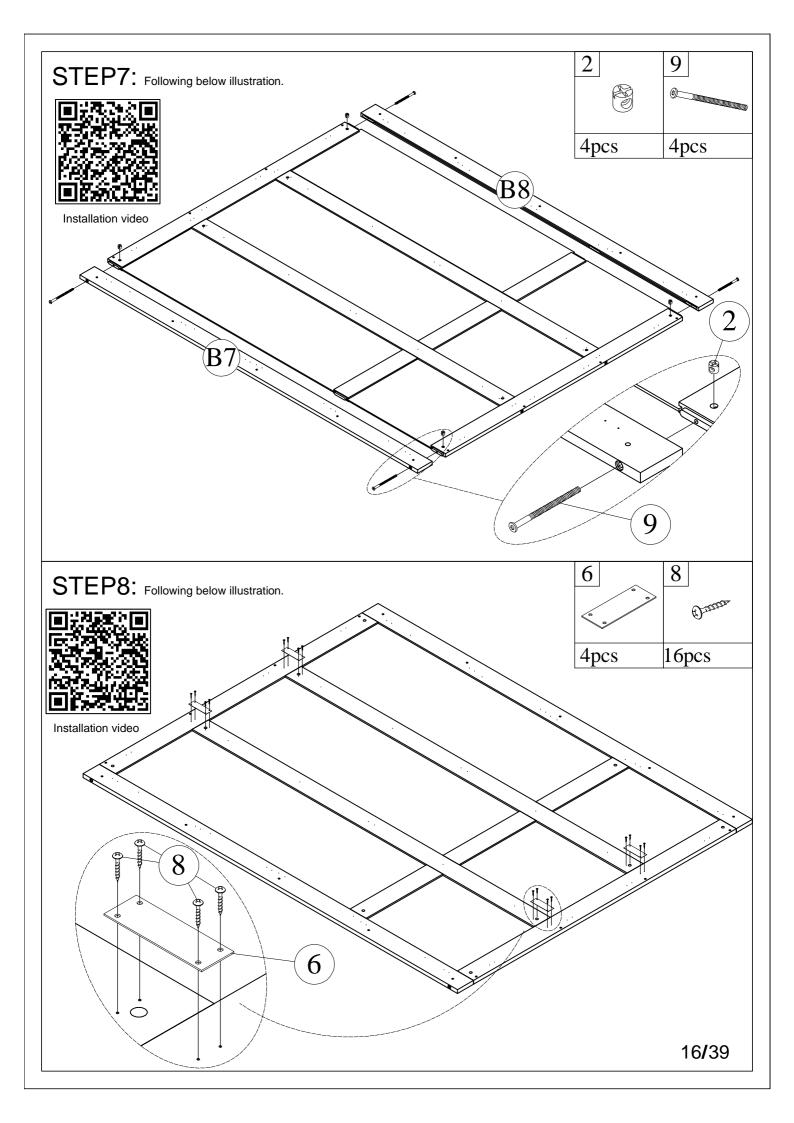


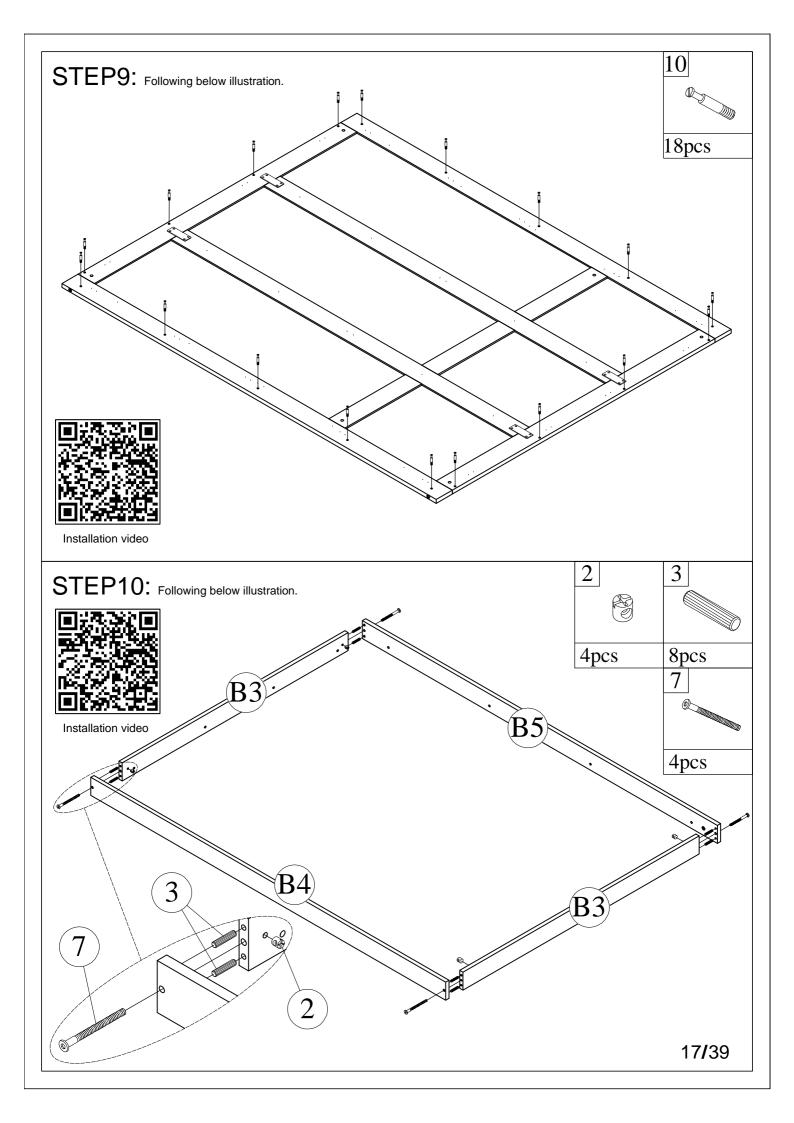


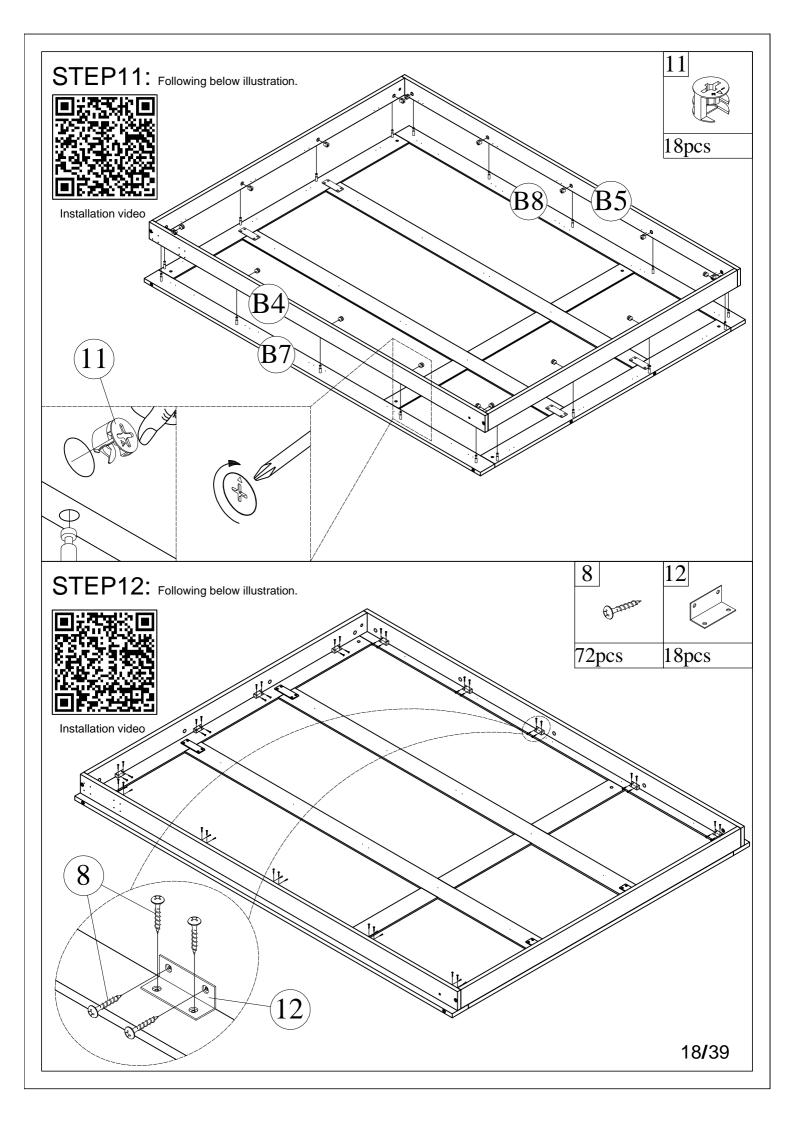


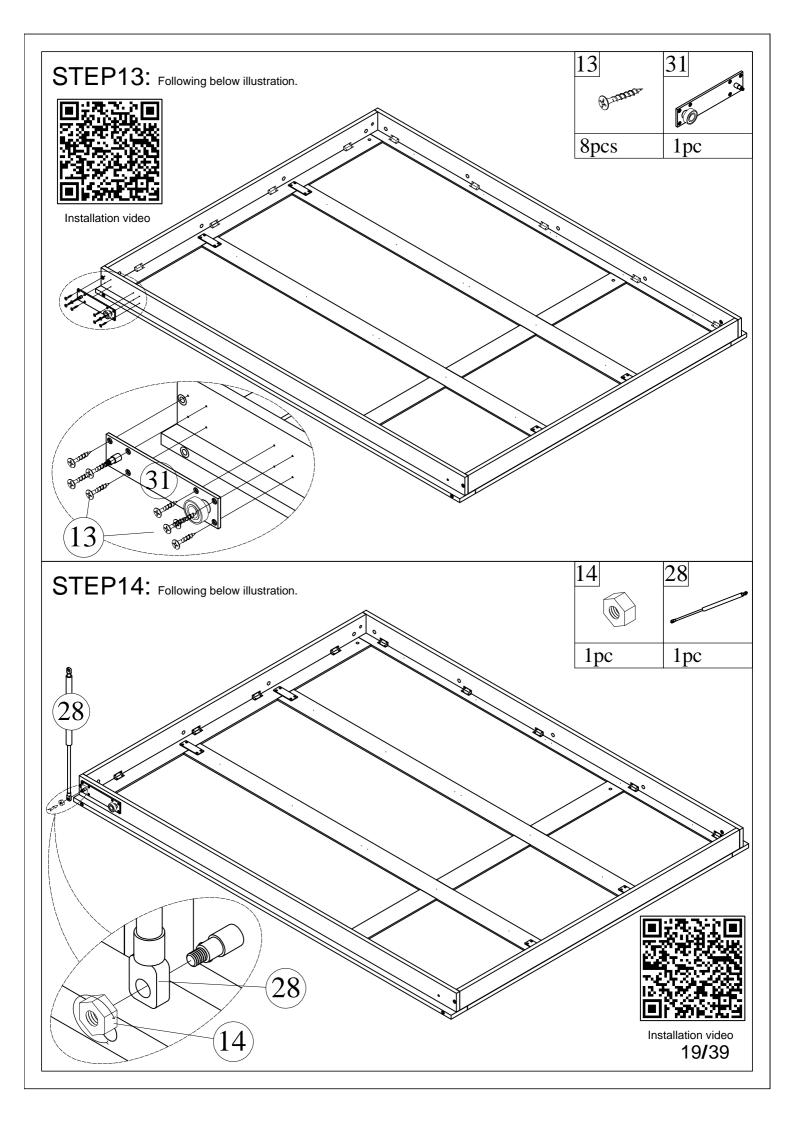


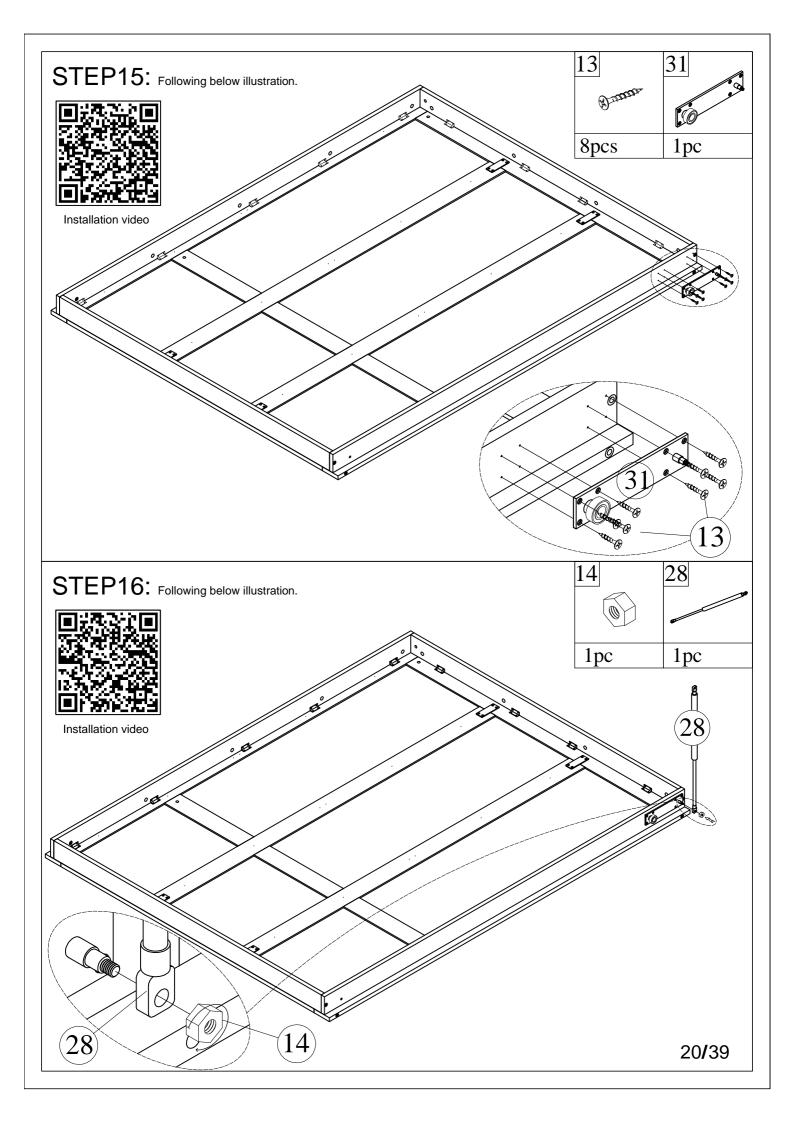


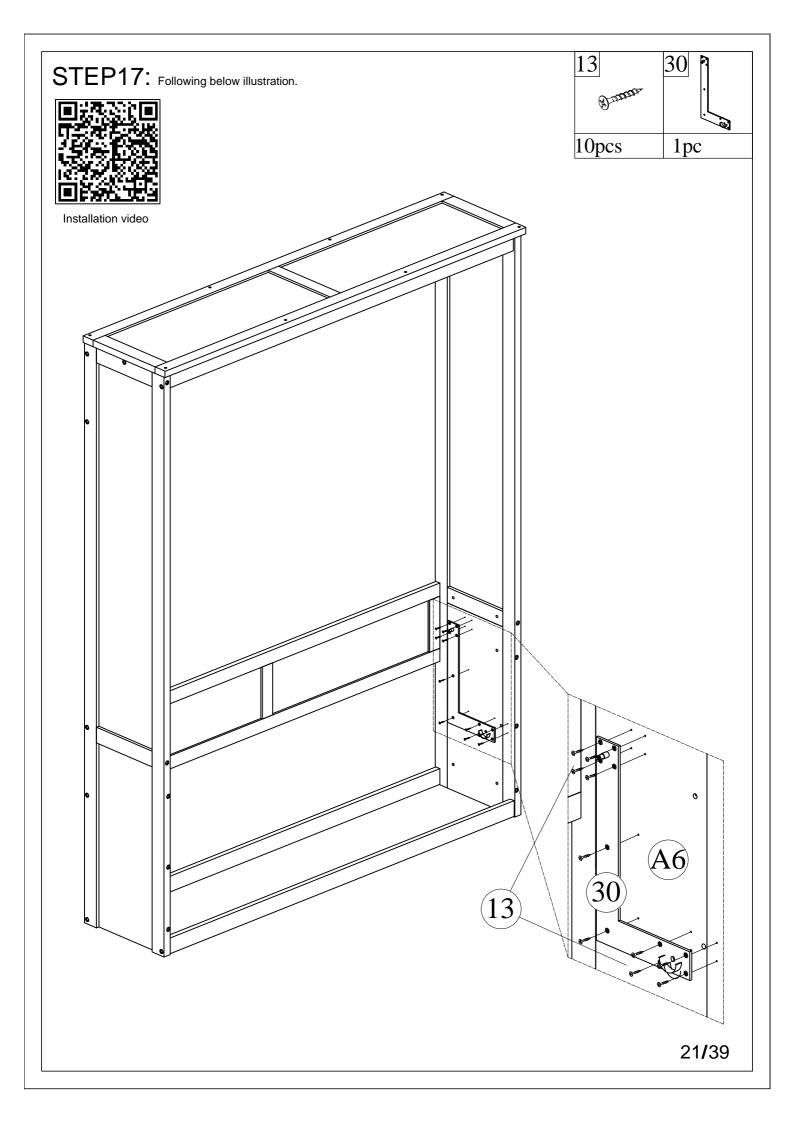


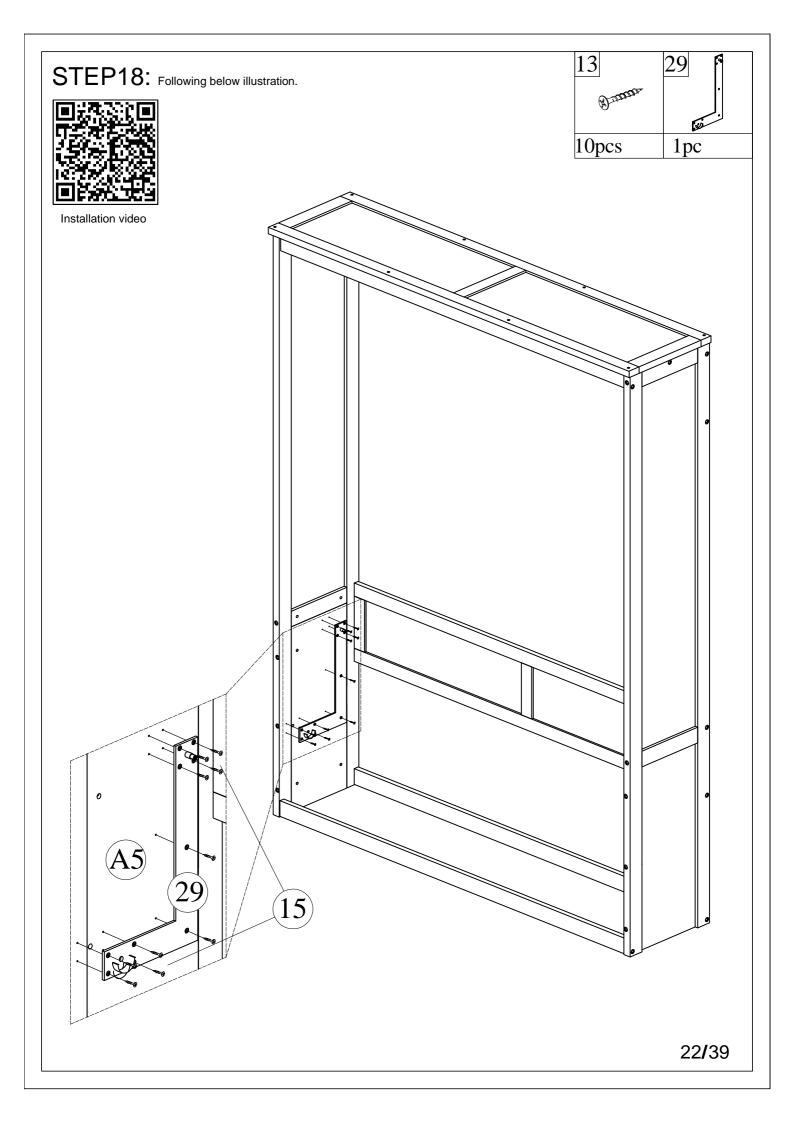


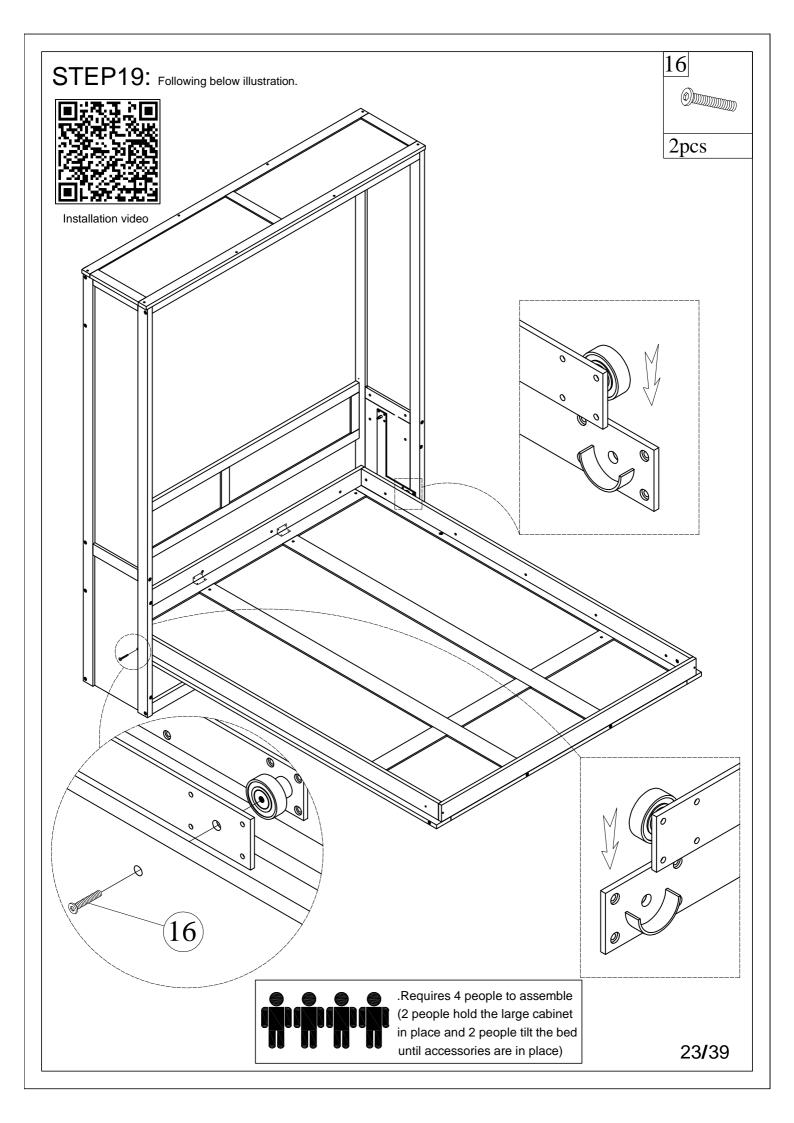

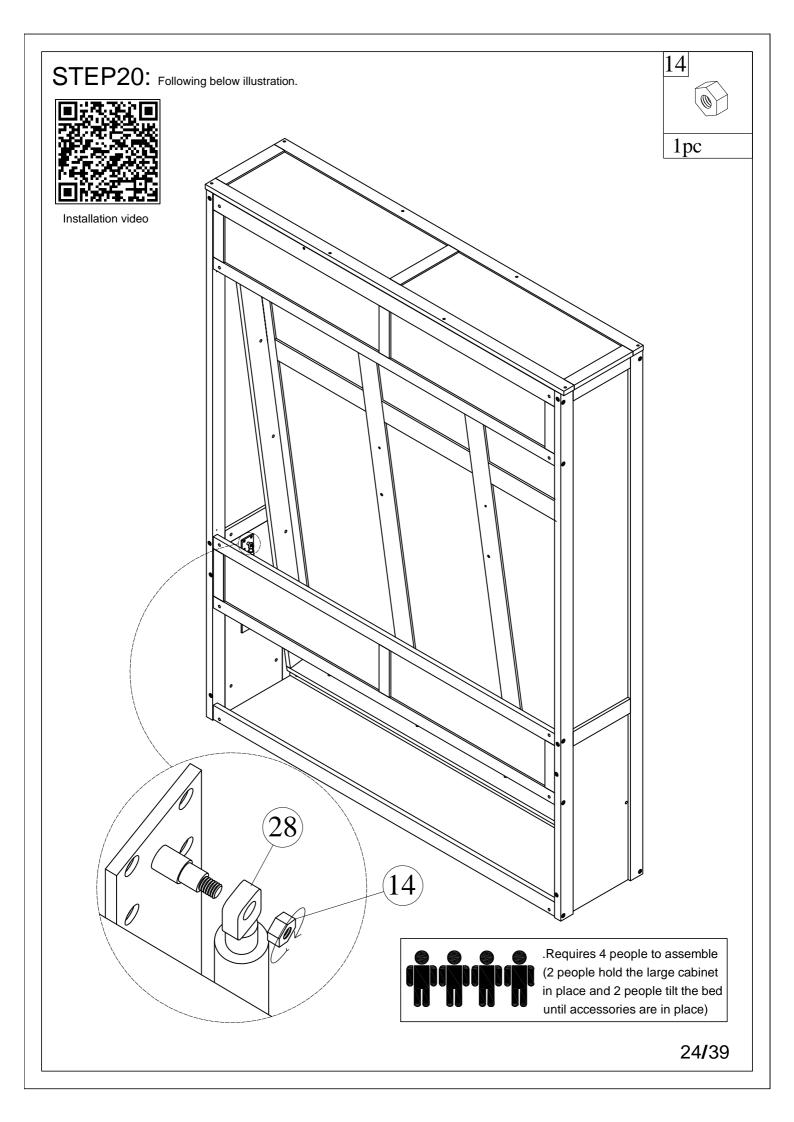


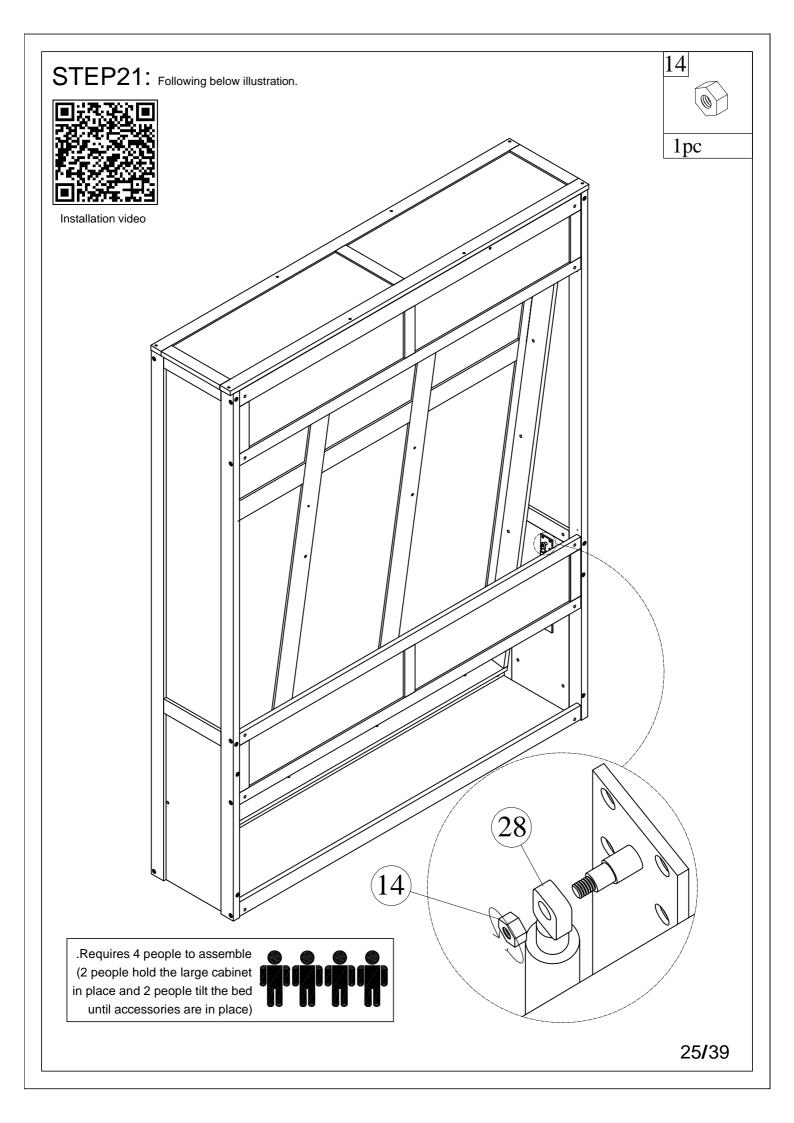


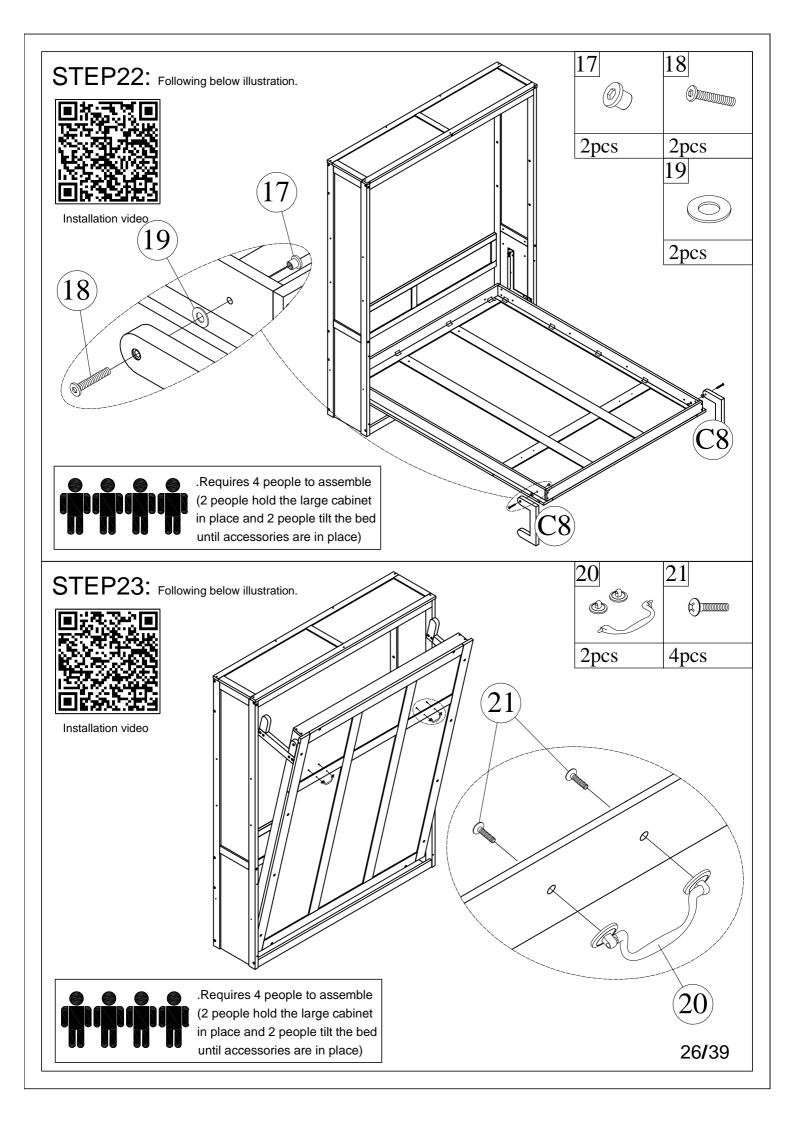

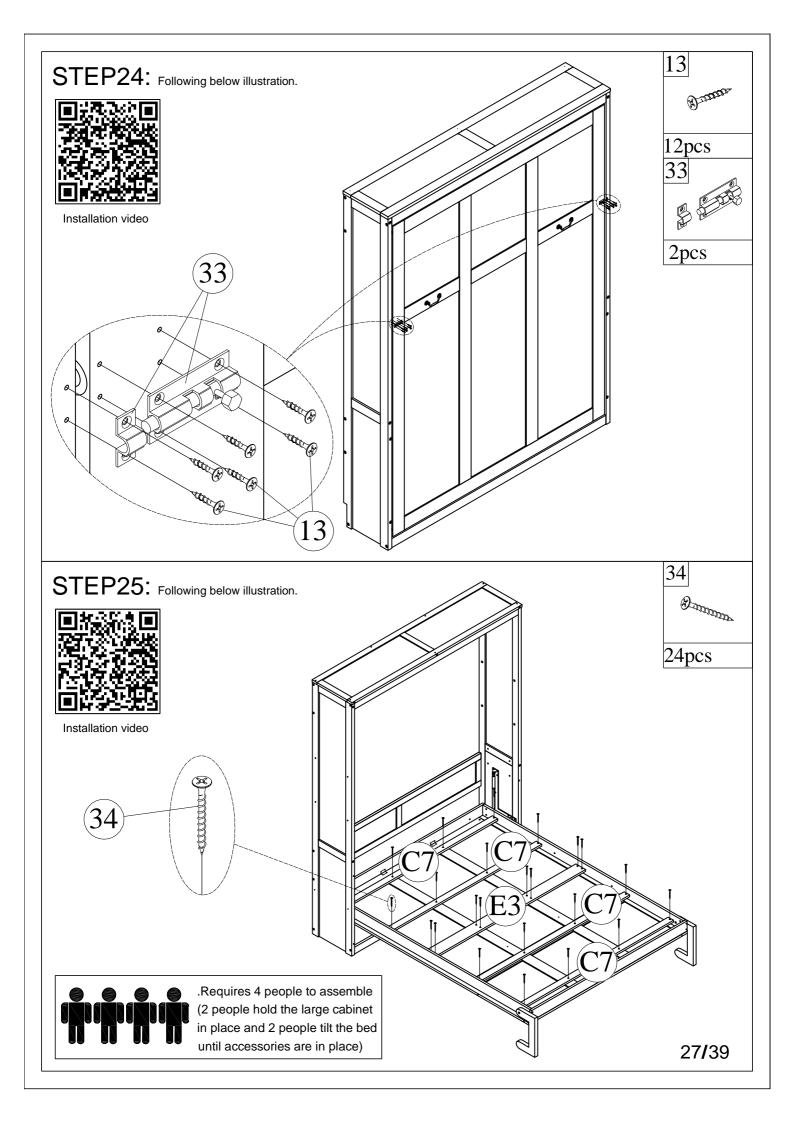

1- Determine the position of the bed in the room.

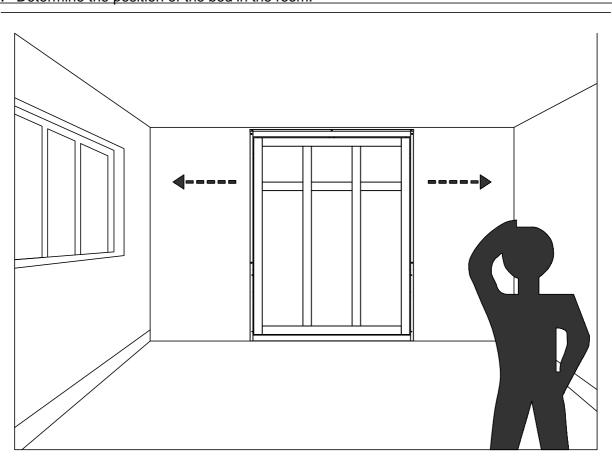

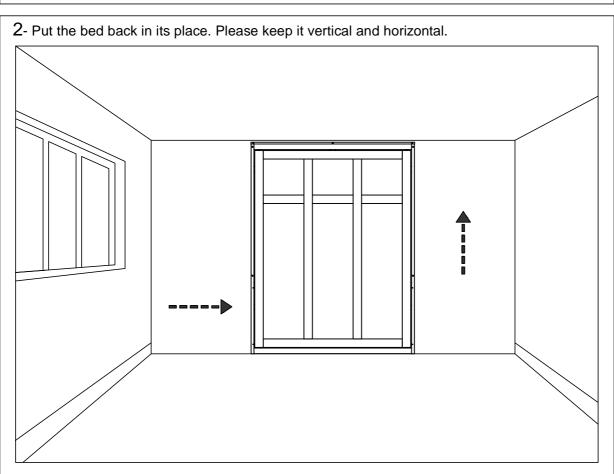

## Wall attached item only:

## A guide to wall mounting and fixings



Warning

Wall fixing screws are not included, since different wall materials require different types of screws /

Please ensure you use the correct screws / fixings for your type of walls and seek professional advice if you

are not sure.

Failure of the product due to incorrect fixings is the responsibility of the installer.

Important: When drilling into the walls always check that there are no hidden wires or pipes etc.


## Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breezeblock, concrete, stone or wood.

# 1. Genral Purpose wall plug

1


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general - purpose wall plugs can be used.



*\\\\* 


2. Plasterboard wall plug.

For use when attaching light loads on to plasterboard partitions.




3. Cavity Fixing wall plug

For use with plasterboard partitions or hollow wooden doors.




4. Cavity Fixing - Heavy Duty wall plug

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.




5. Hammer Fixing wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.



6. Shield Anchor wall plug - Heavy loads

For use with heavier load such as TV and HI-Fi speskers and satellite dishes etc.



Care and maintenance

Safety: Periodically check all fittings and wall fixings to ensure they have not come loose and retighten as necessary.

