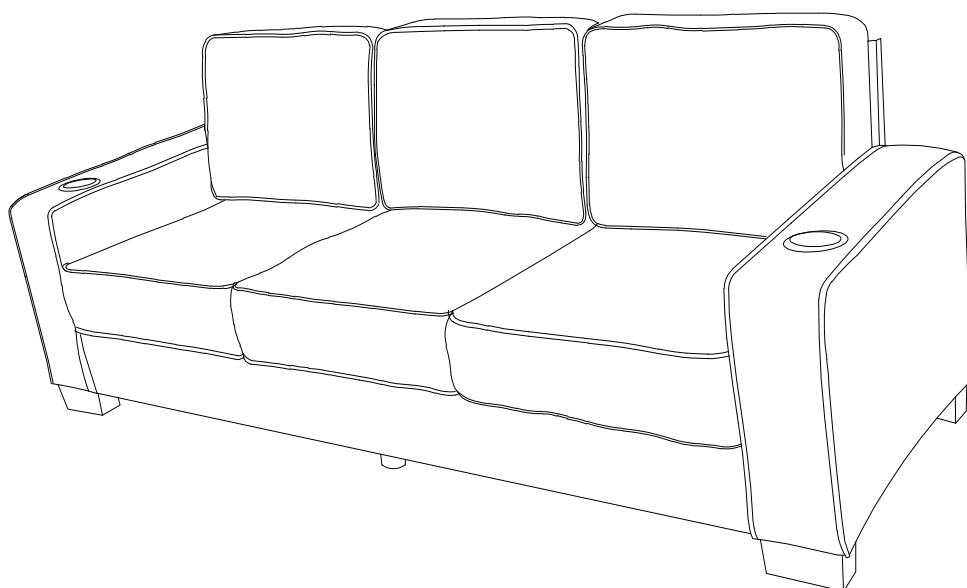
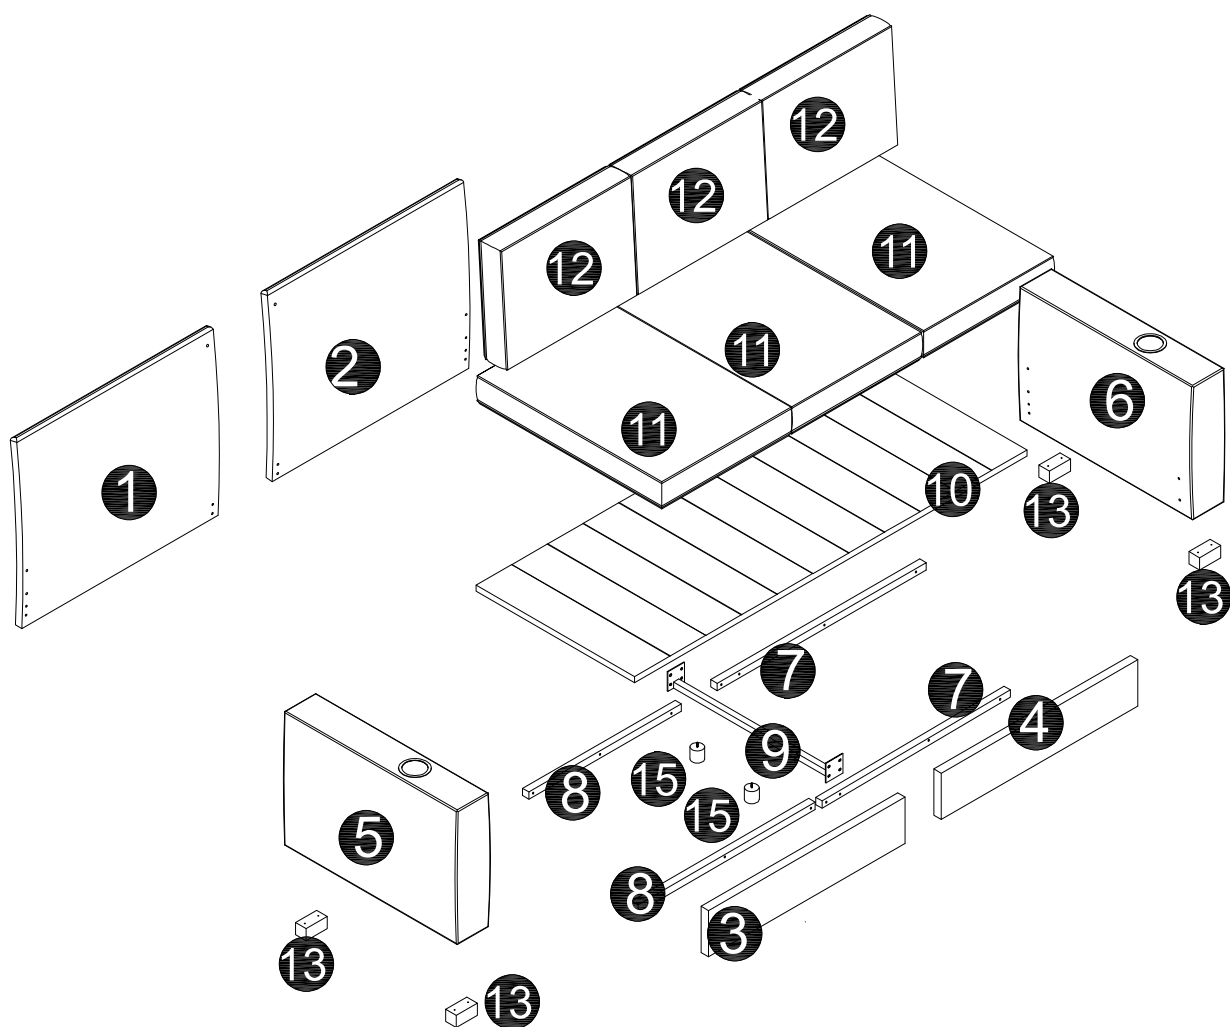
















# Assembly installation













# Parts List



# Parts List


Part Number	Picture	Description	QTY	Part Number	Picture	Description	QTY
①		Backrest (L)	1	⑨		Metal Frame	1
②		Backrest (R)	1	⑩		Ribs	1
③		Vertical water baffle(L)	1	⑪		SEAT CUSHION	3
④		Vertical water baffle(R)	1	⑫		BACK CUSHION	3
⑤		Armrests(L)	1	⑬		Couch feet	4
⑥		Armrests (R)	1	⑮		Midfoot	2
⑦		Long sticks R	2				
⑧		Short sticks L	2				

# Hardware List

Part Number	Picture	Description	QTY	Part Number	Picture	Description	QTY
Ⓐ		Screw M8x25	34	Ⓕ		L-shaped corner code (large)	4
Ⓑ		Screw M8x40	14	Ⓖ		L-shaped corner code (small)	2
Ⓒ		Gasket	48	Ⓗ		Back joint	1
Ⓓ		Spring the gasket	34	Ⓘ		Inner Hexagon Wrench	1
Ⓔ		Screws M4x60	8	Ⓙ		Screwdriver	1


# COUCH FOLDING STEPS
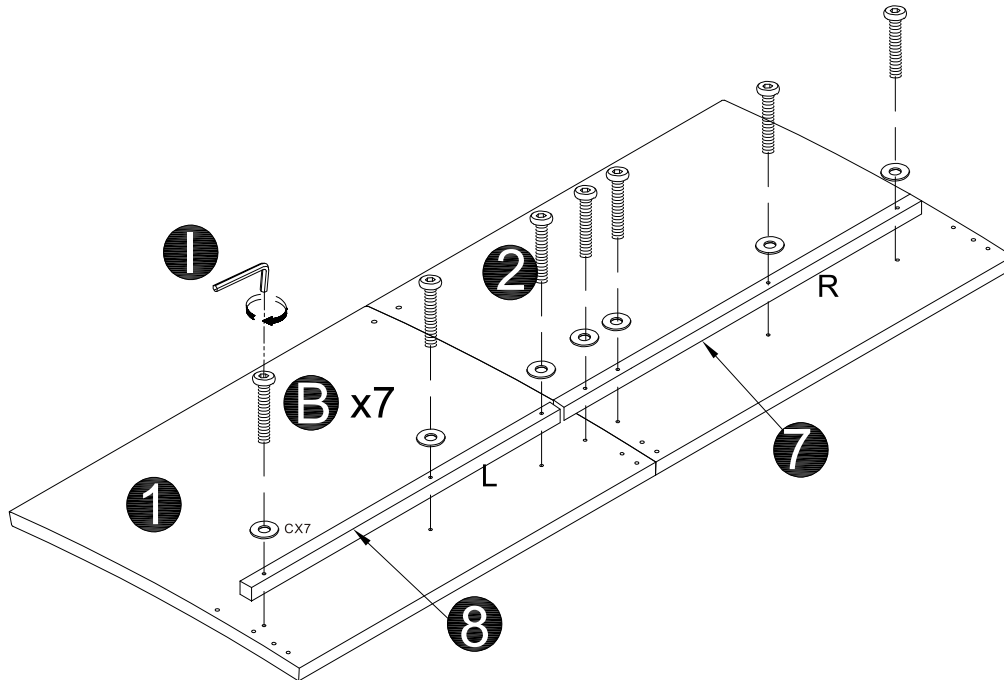
## Step1



Use hardware B to pass through hardware C and fix numbers 7 and 8 onto numbers 1 and 2


## Step2

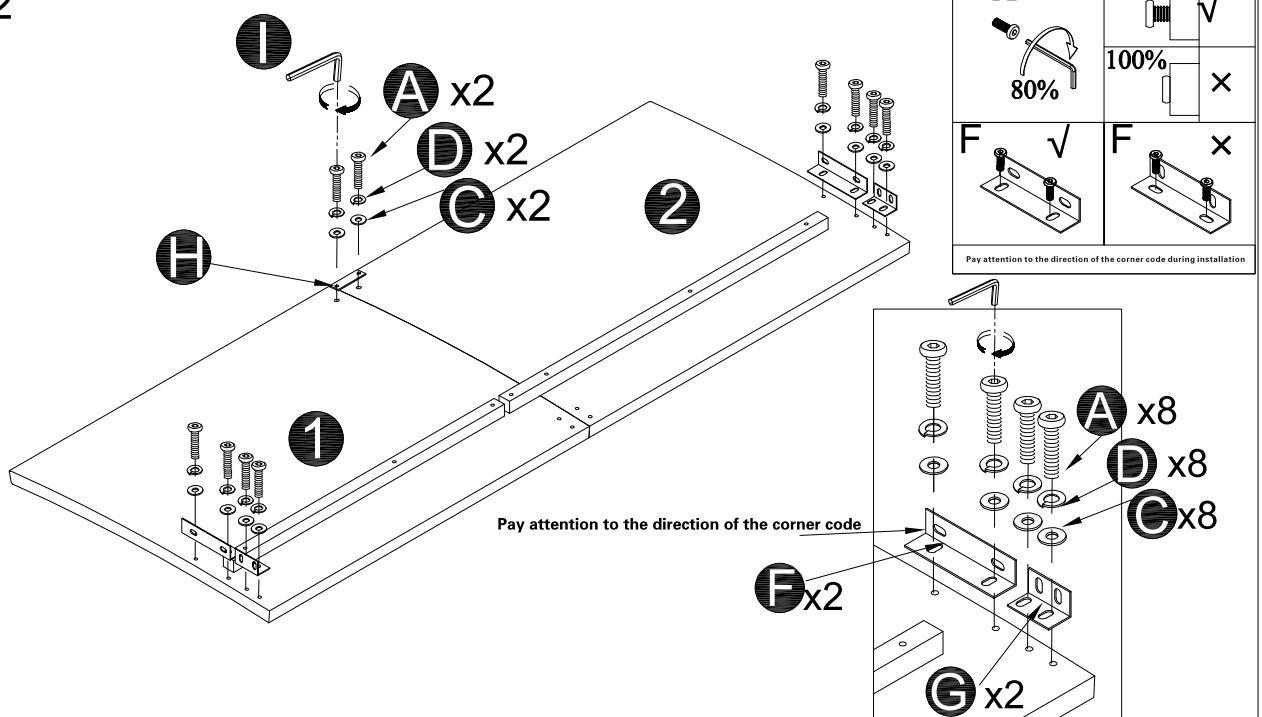

Use hardware A to pass through hardware D and C, and fix hardware I&F&G on screws 1 and 2 as long as they lock to 80%


## COUCH FOLDING STEPS
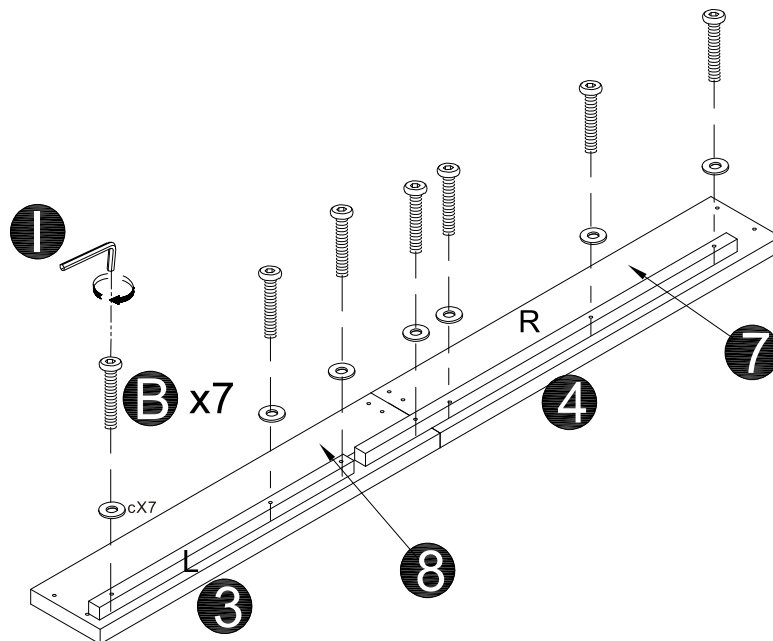
### Step3



**Use hardware B to pass through hardware C and fix numbers 7 and 8 onto numbers 3 and 4**

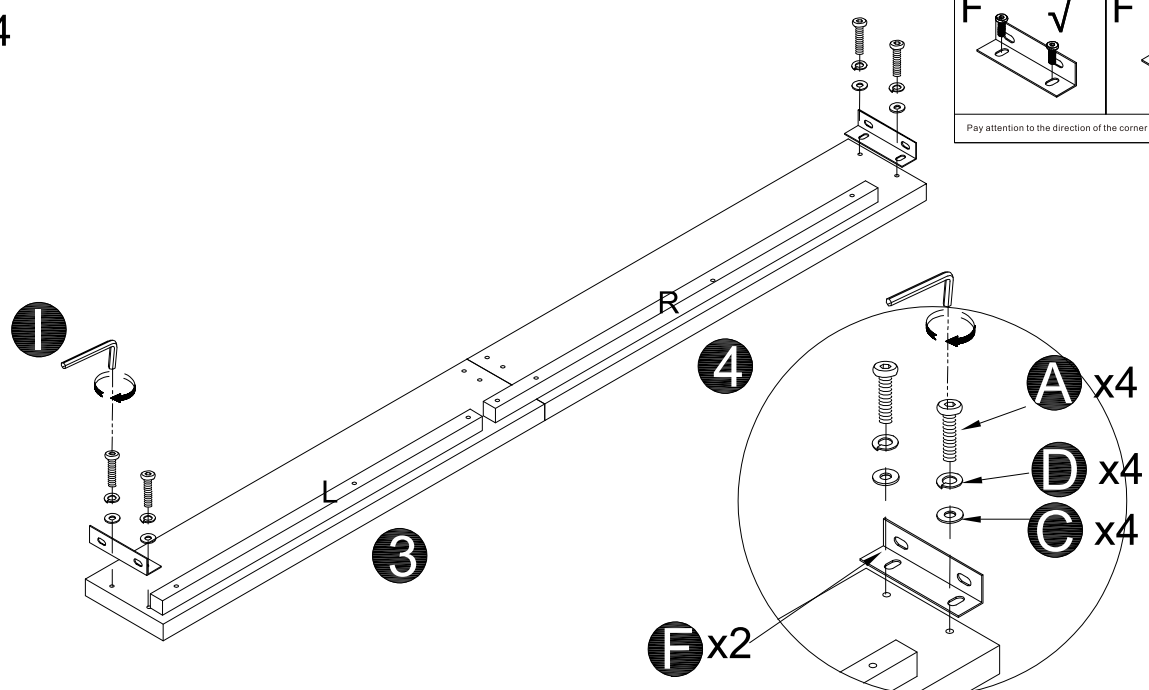
## Step4



**Use hardware A to pass through hardware D and C, and fix hardware F on numbers 3 and 4 (as long as the screw is locked to 80%)**


# COUCH FOLDING STEPS
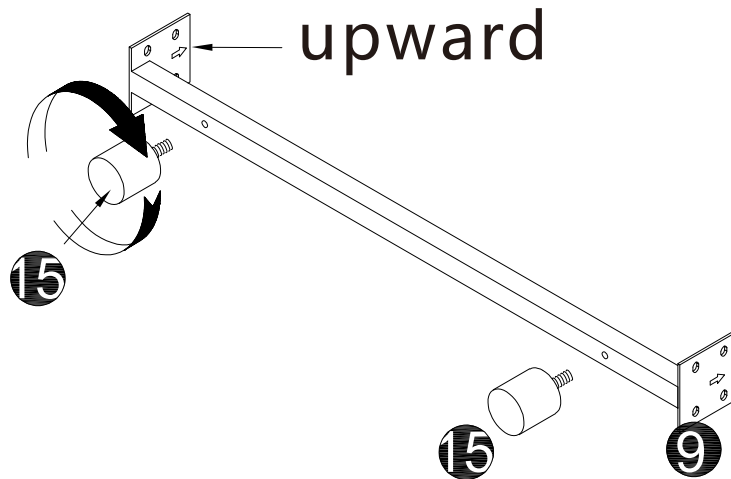
## Step5



## Install No.15 on No.9

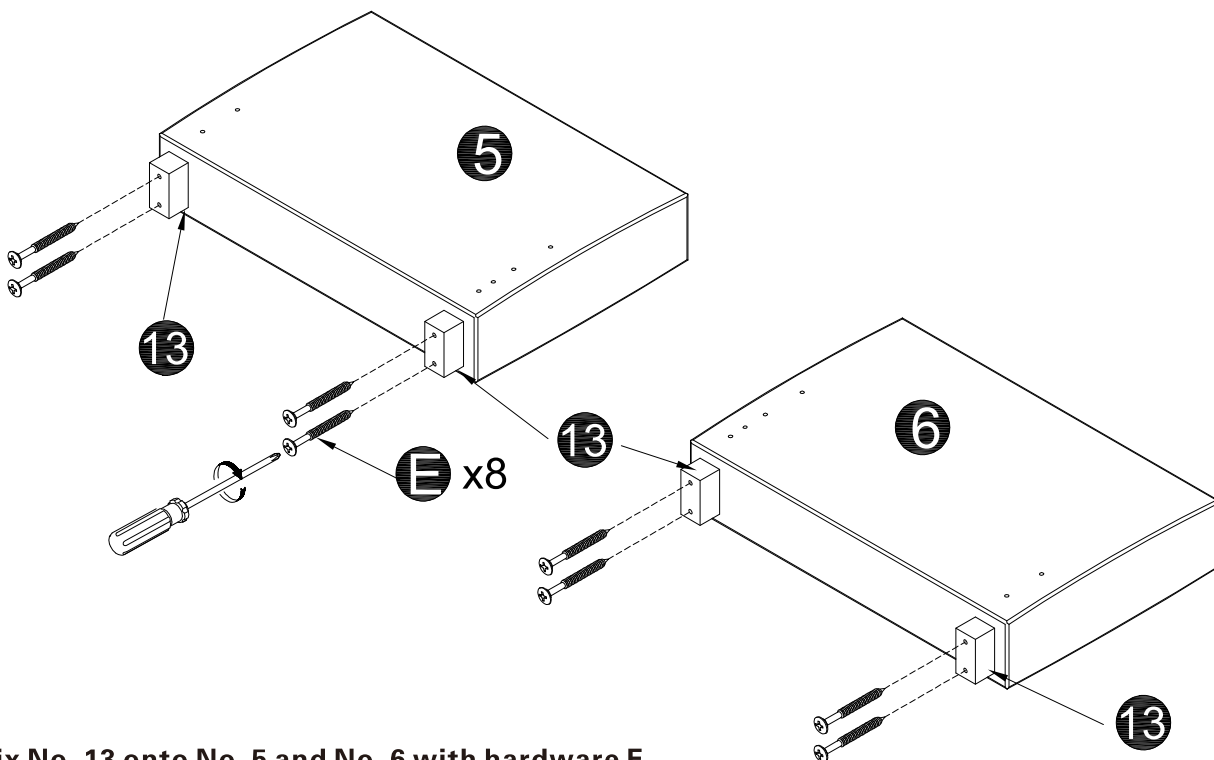
## Step6



Fix No. 13 onto No. 5 and No. 6 with hardware E


# COUCH FOLDING STEPS
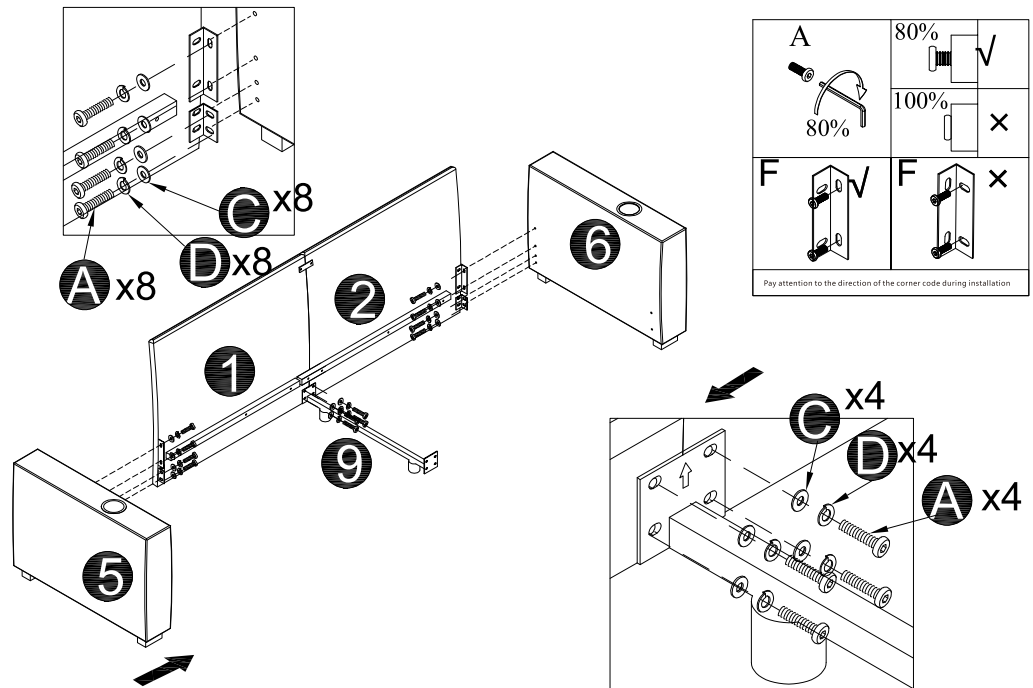
## Step7



Connect the components of the front group together by threading hardware A through hardware D and C according to the diagram. All screws only need to be locked to 80%


## Step8

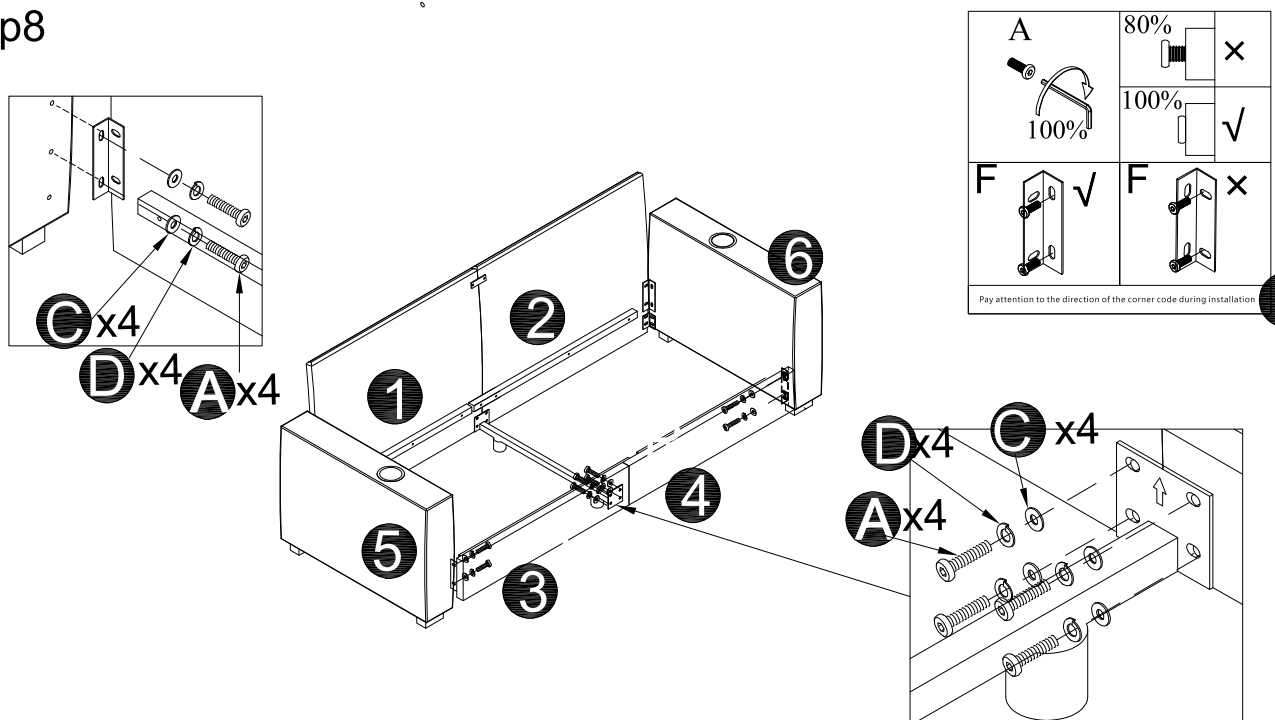

Connect the components of the front group together by threading hardware A through hardware D and C according to the diagram. All screws only need to be locked to 100%

# COUCH FOLDING STEPS

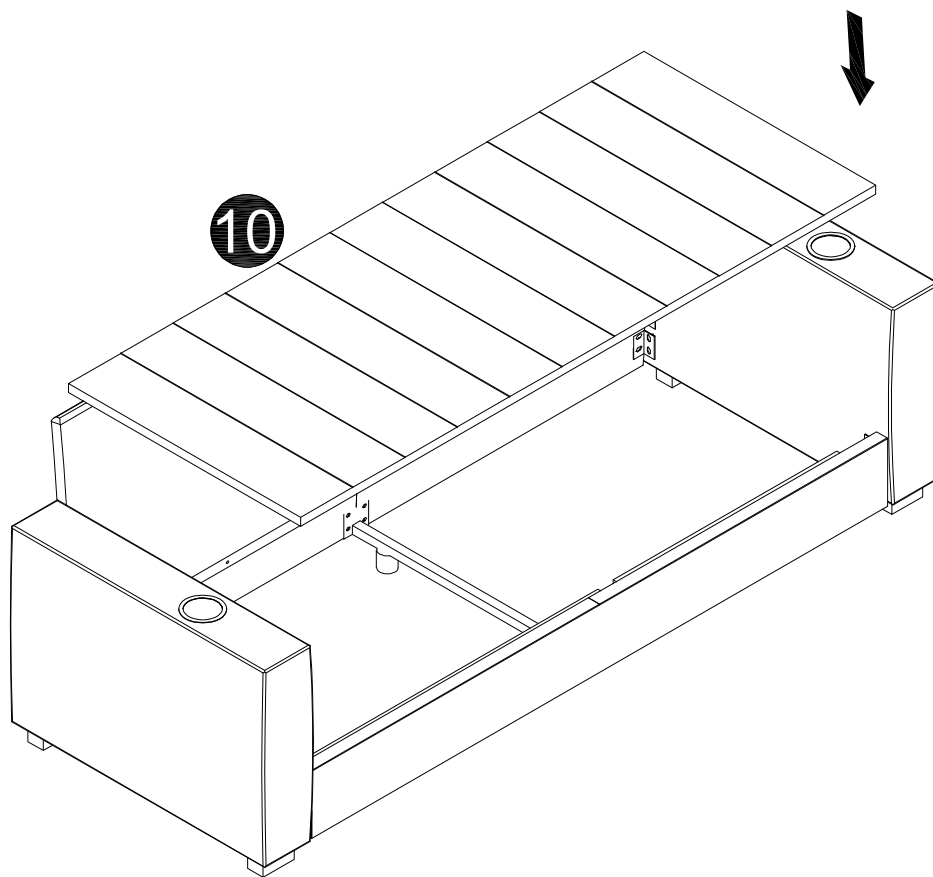Step9




**Put the 10th in the group box**




# COUCH FOLDING STEPS

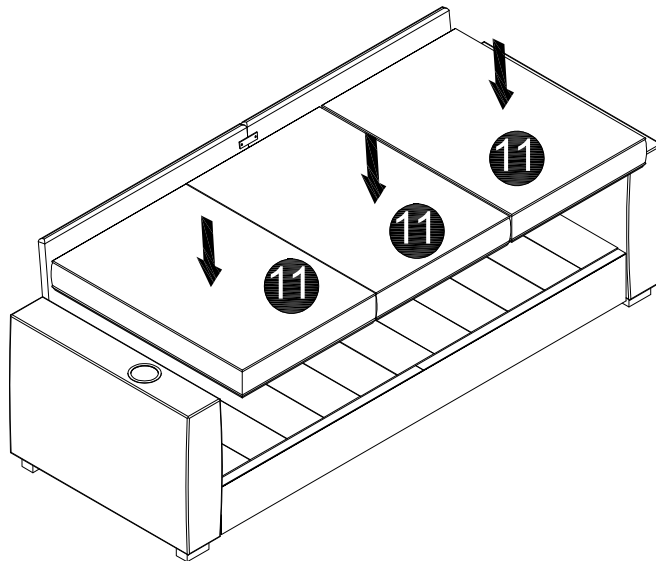Step10



**Put the 11th in the group box**

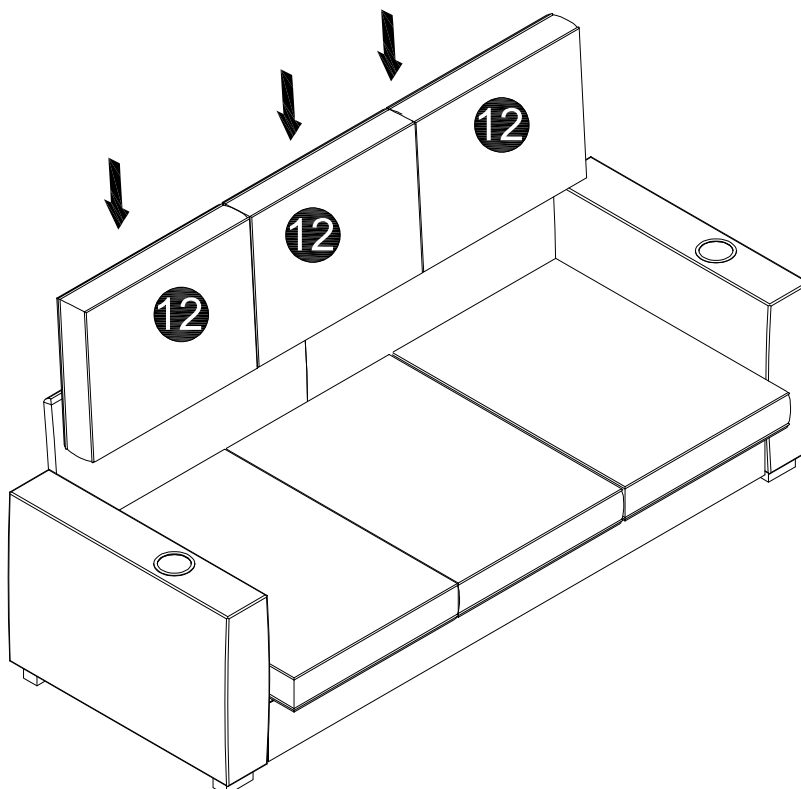Step11



**Put the 12th in the group box**