






17

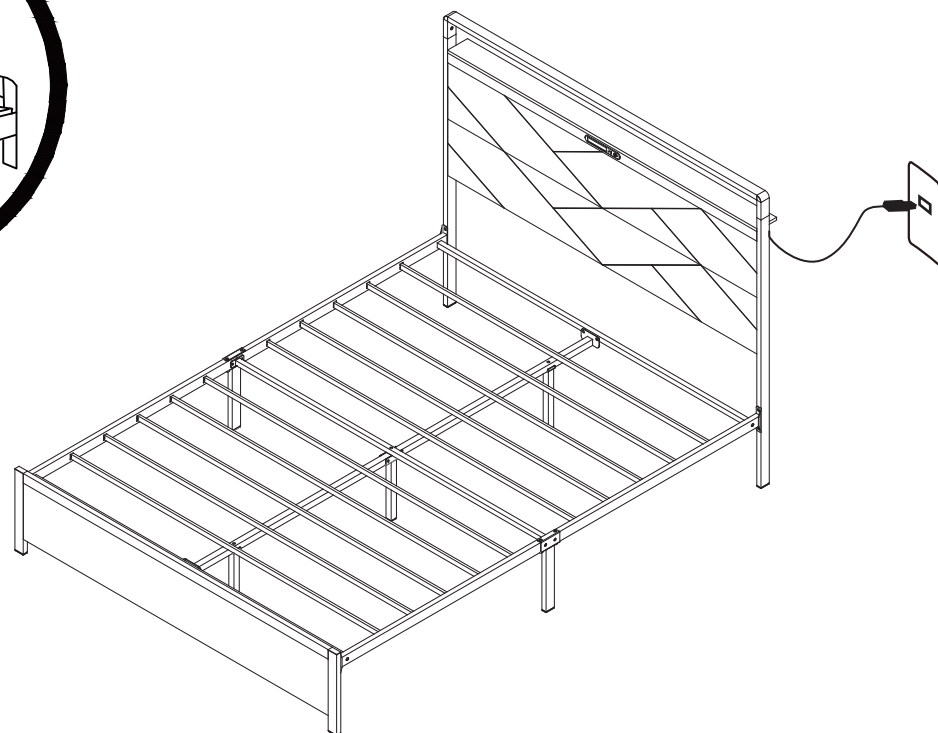


Finish

BED FRAME

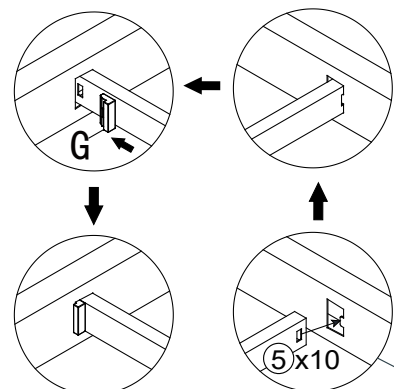
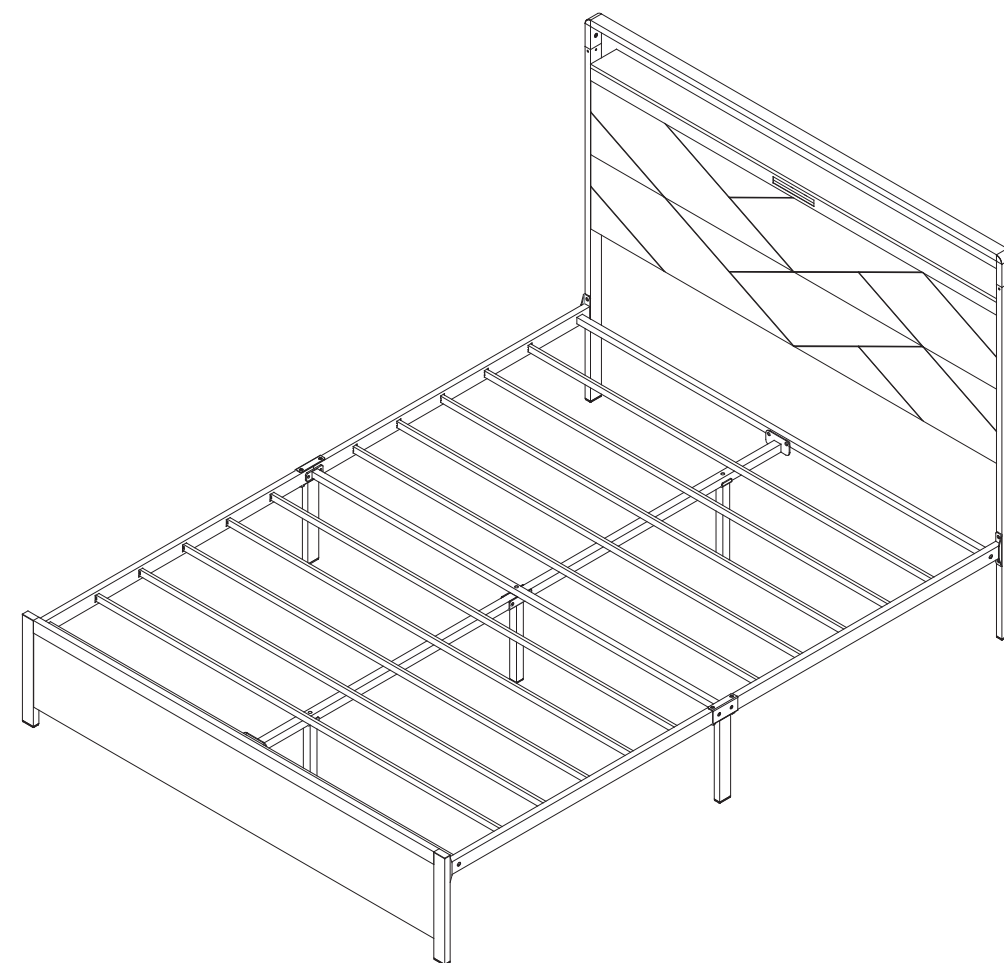



16

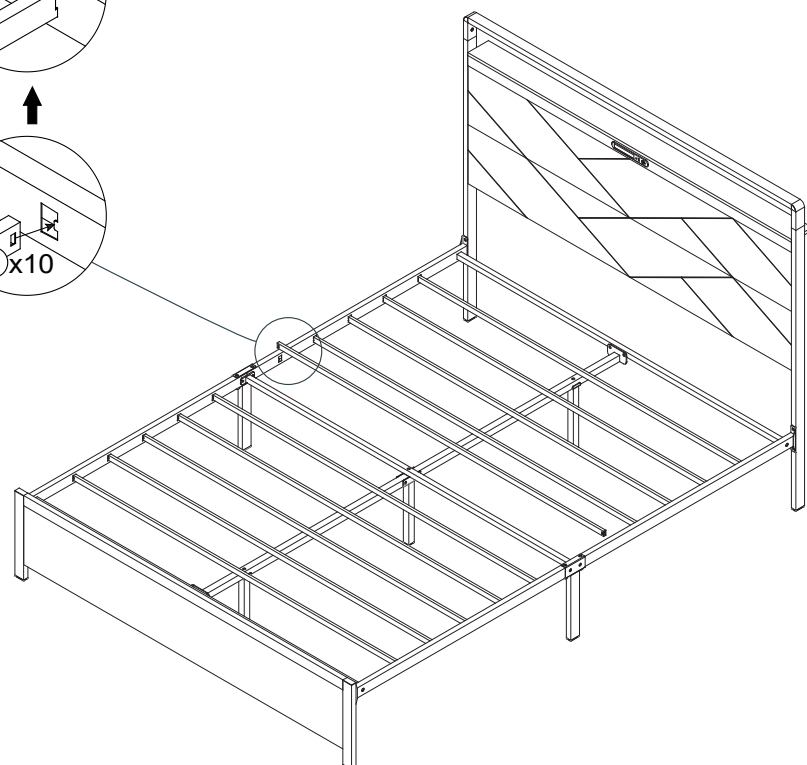

G		20pcs
---	--	-------


Thank you for choosing our products, please assemble and use it following the instructions.

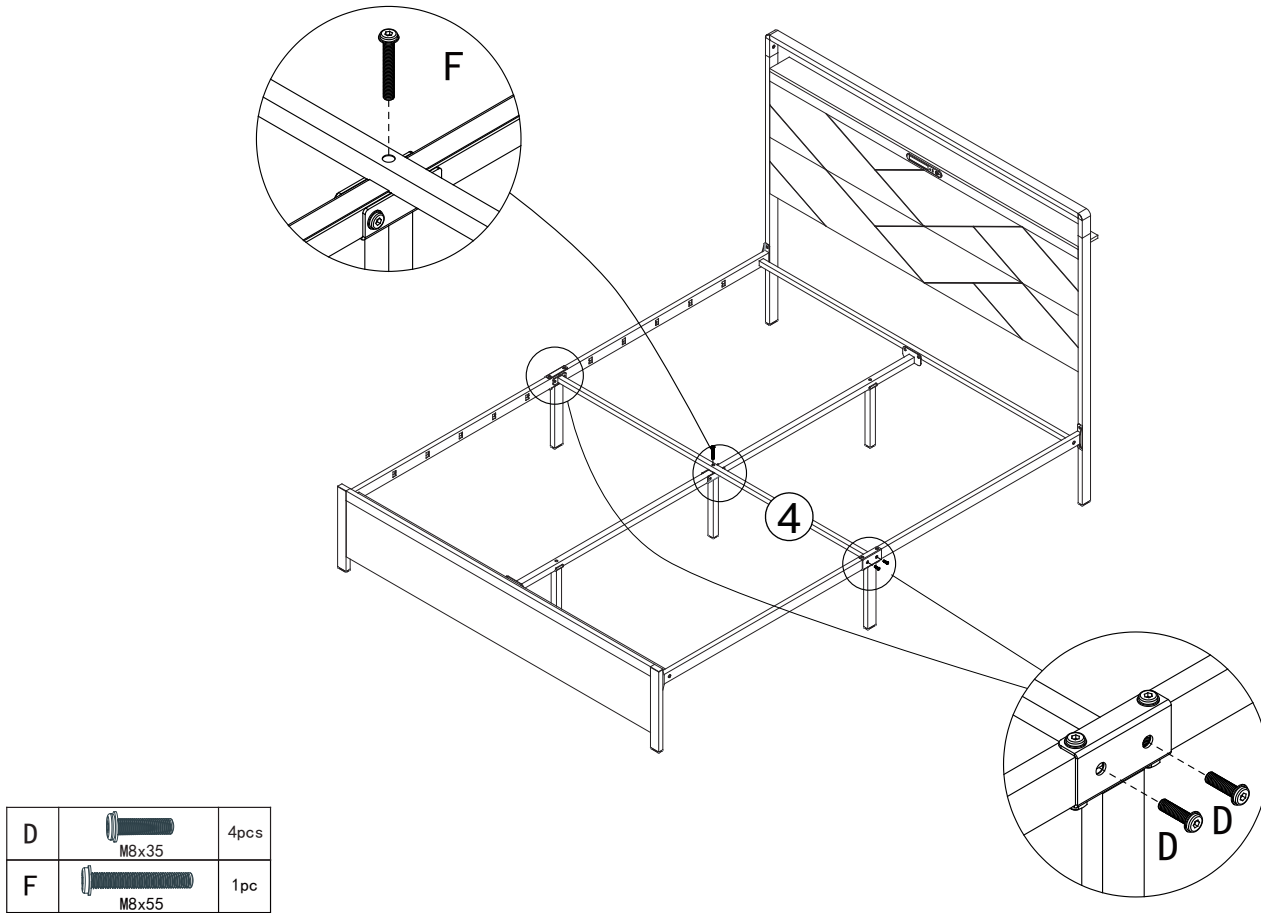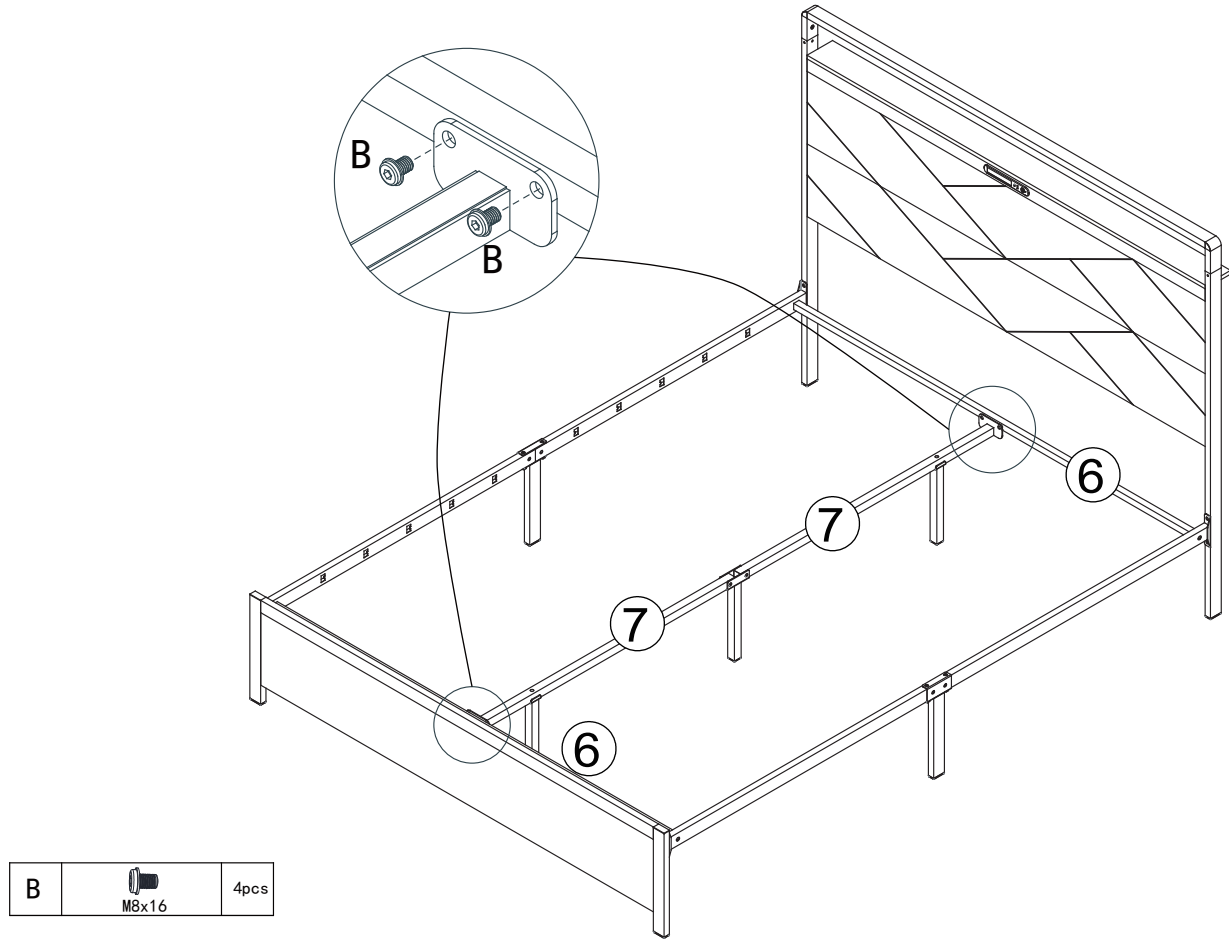

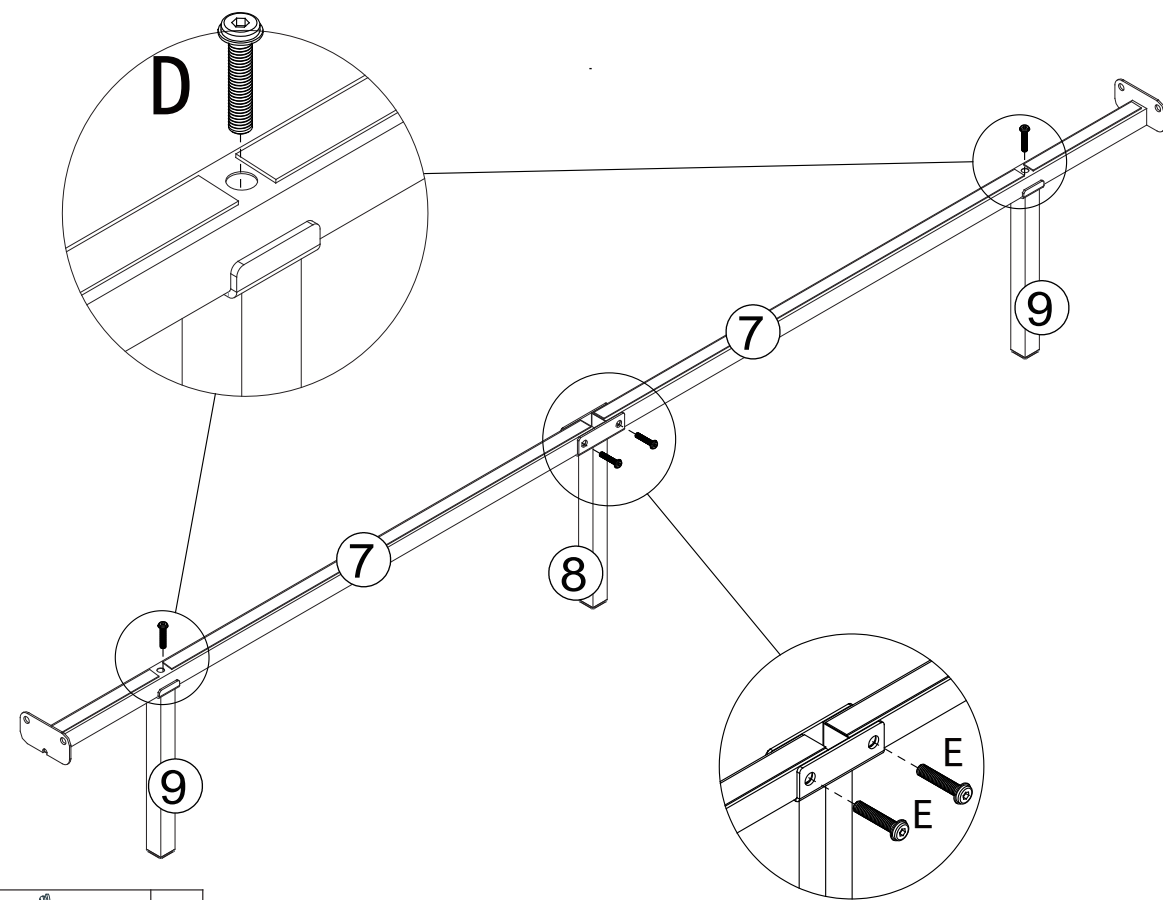


D		M8x35	2pcs
E		M8x45	2pcs

! Do not fully tighten the screws yet.

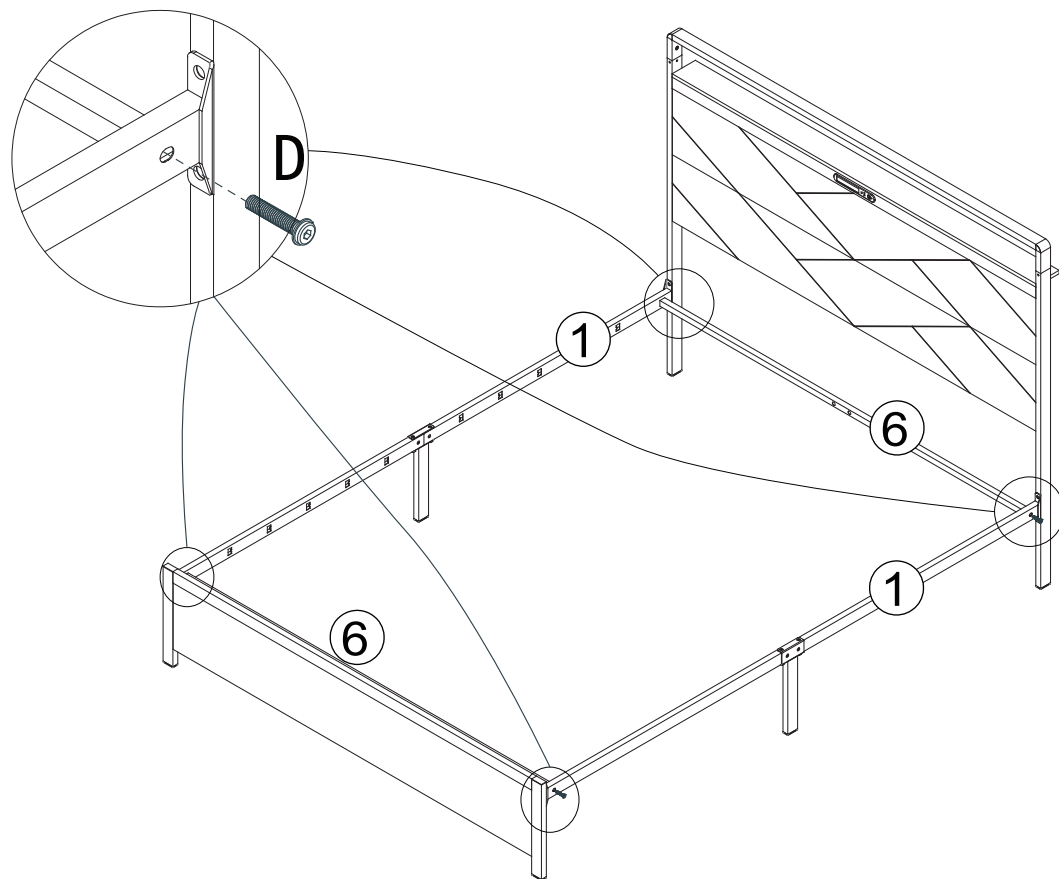

D		M8x35	4pcs
---	---	-------	------

Assembly Instruction





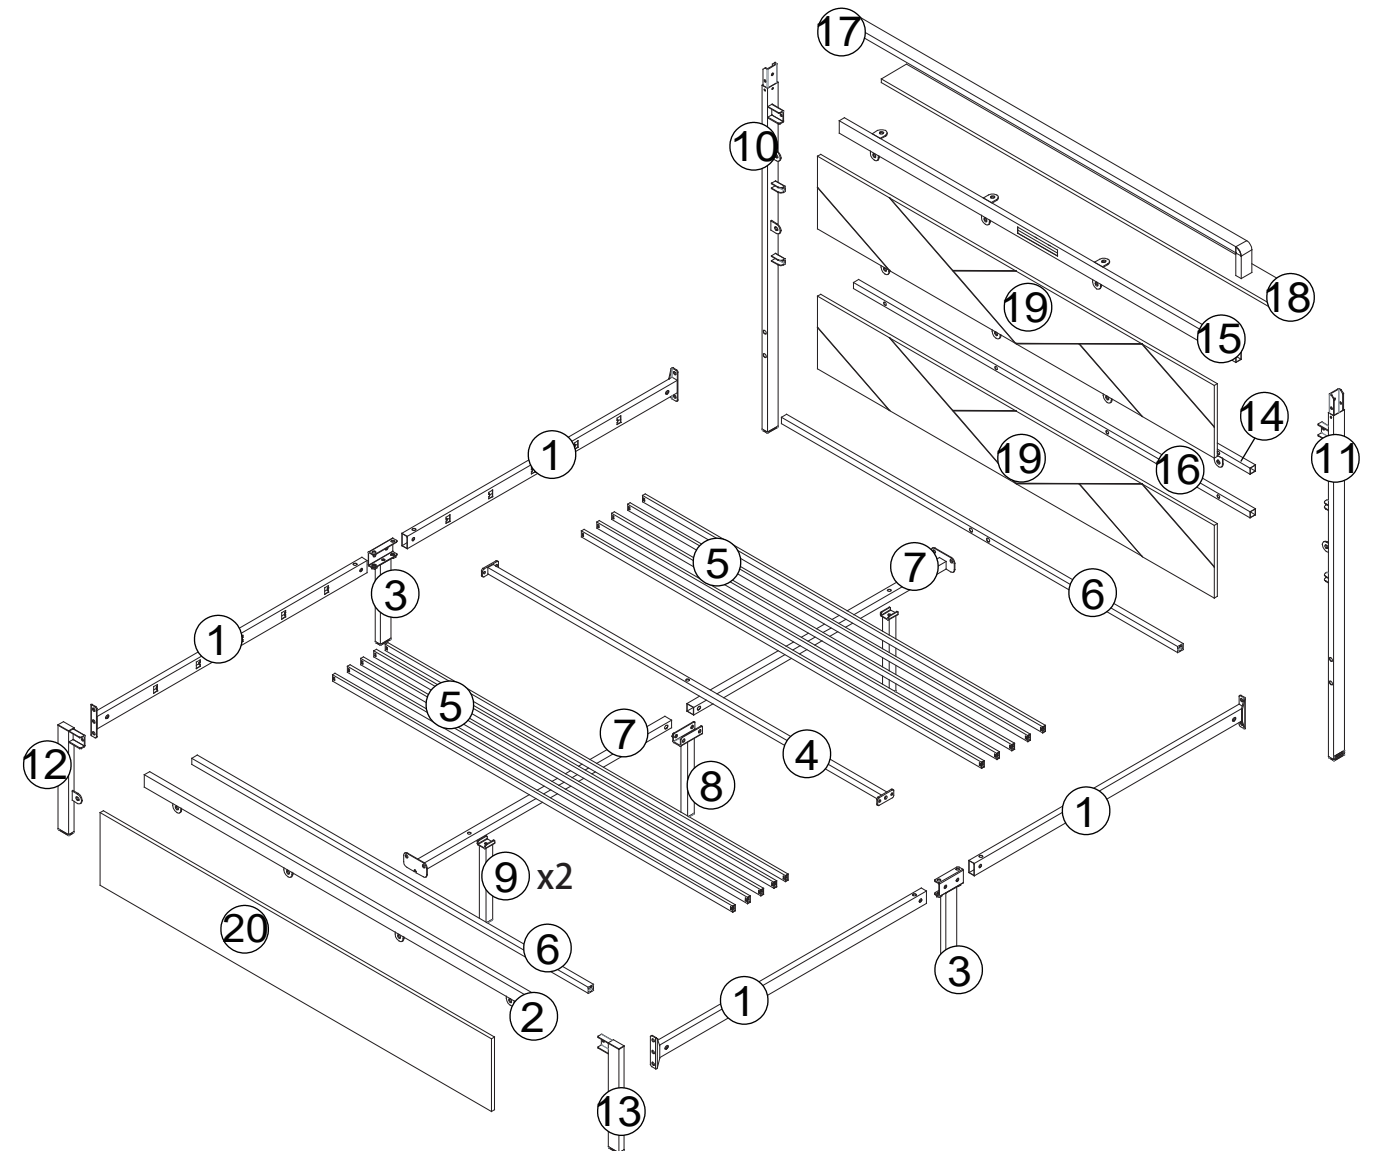


Important Note



HARDWARE NOTE :

1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

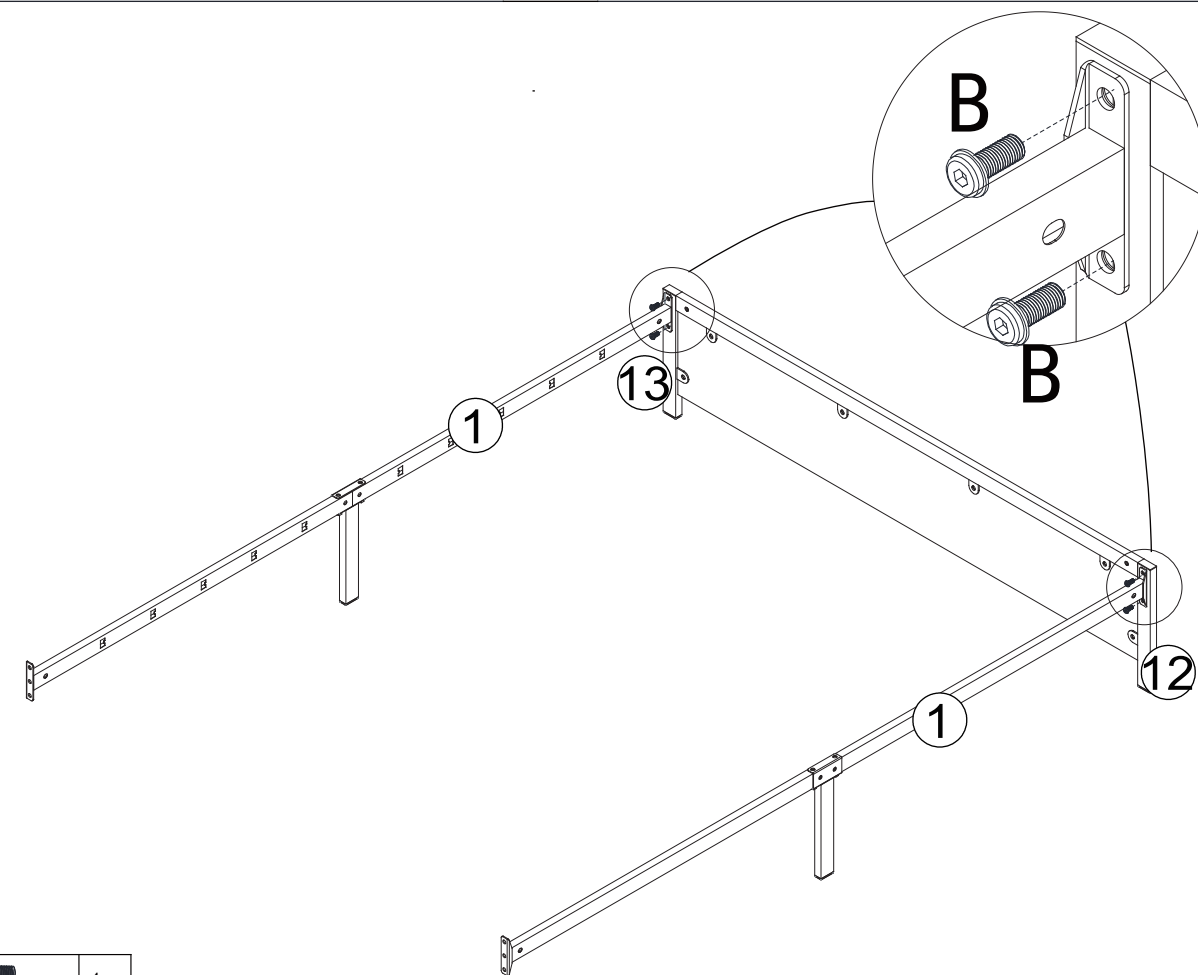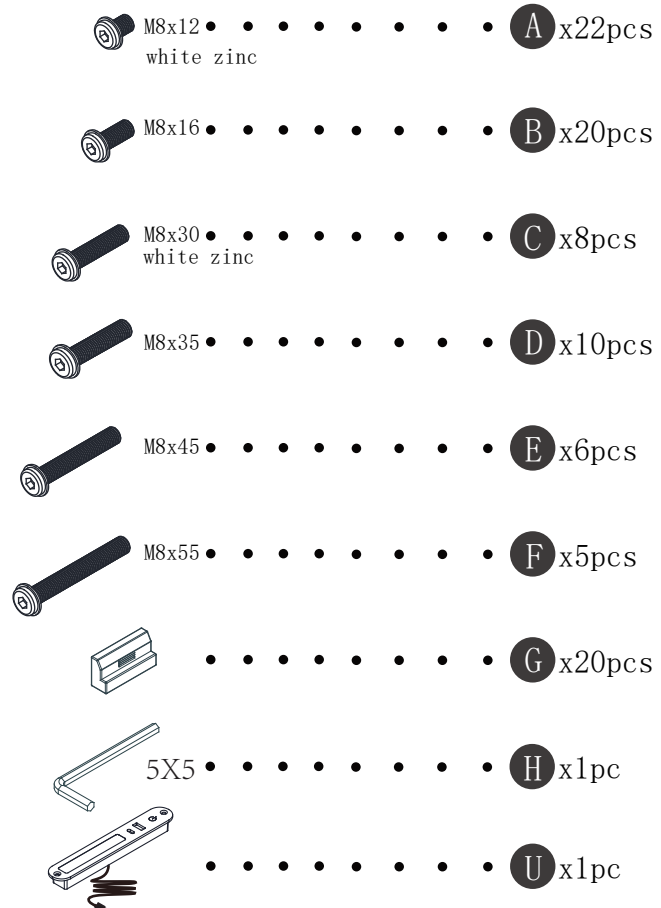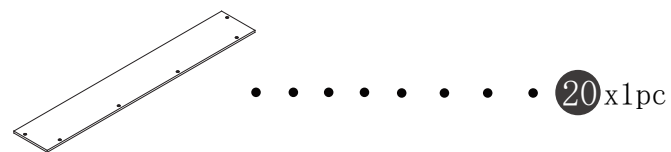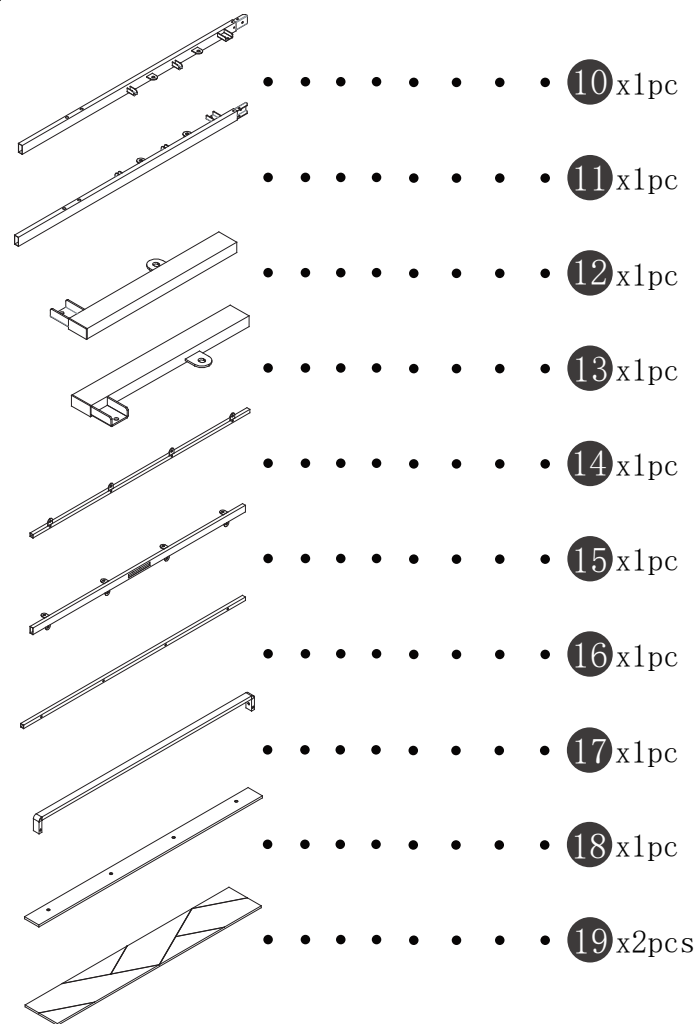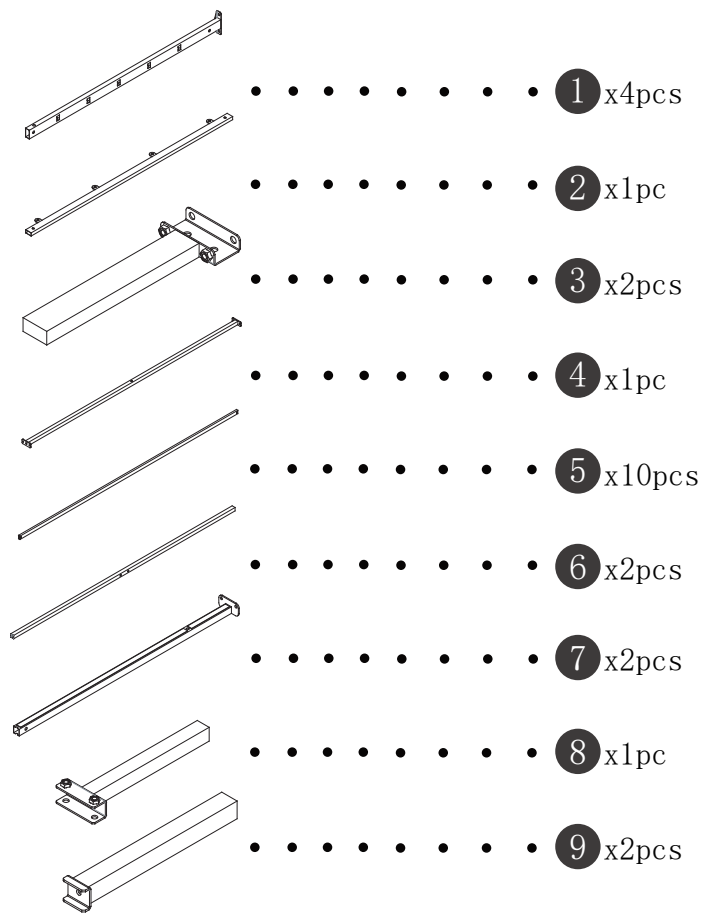


9

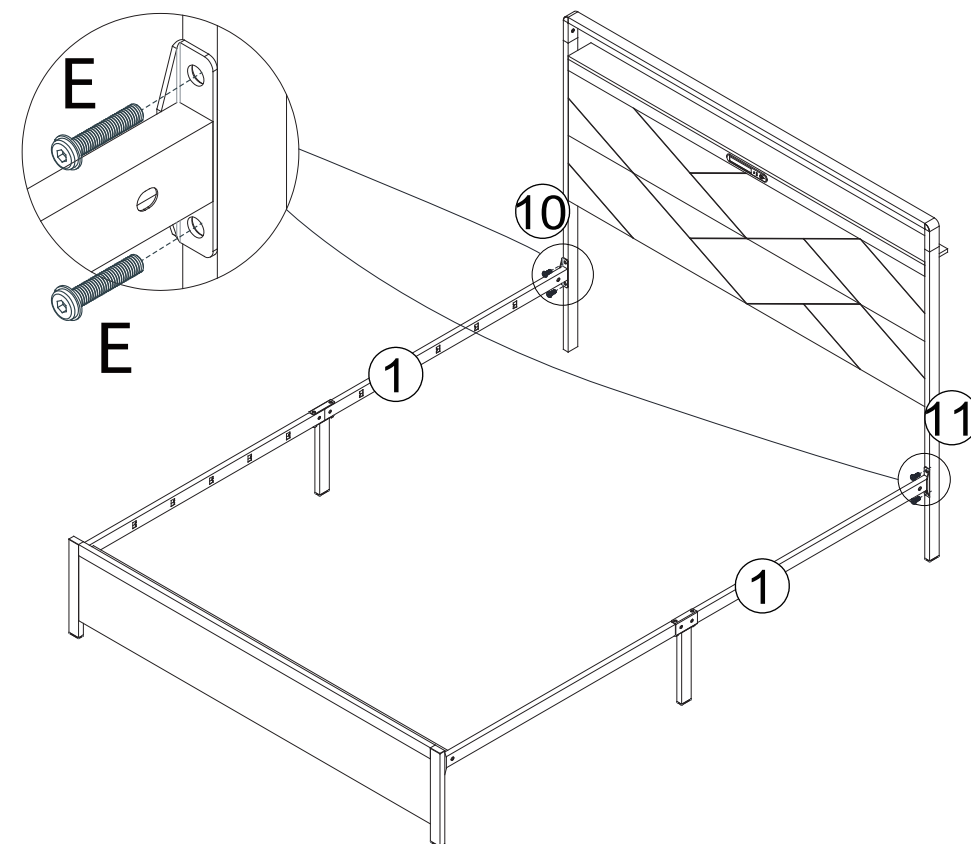

10


7

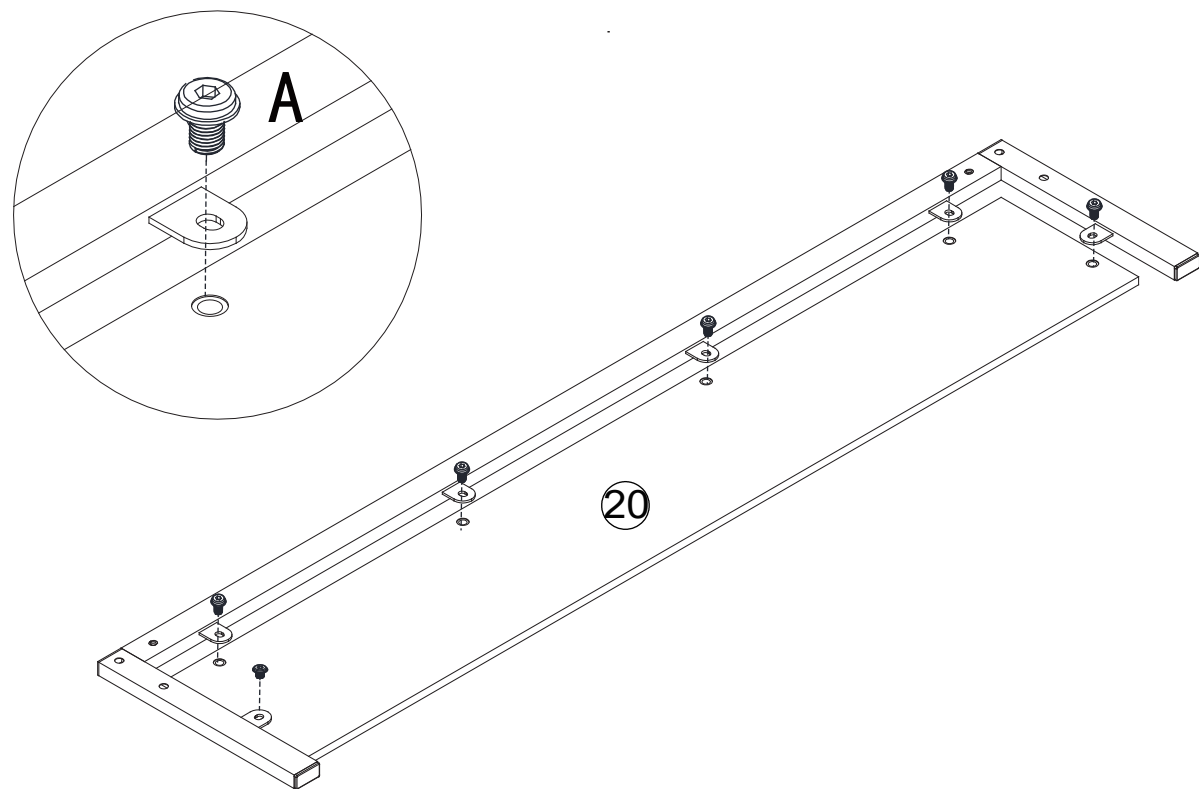

A		6pcs	white zinc
M8x12			


1

NOTE: Please press the socket tightly

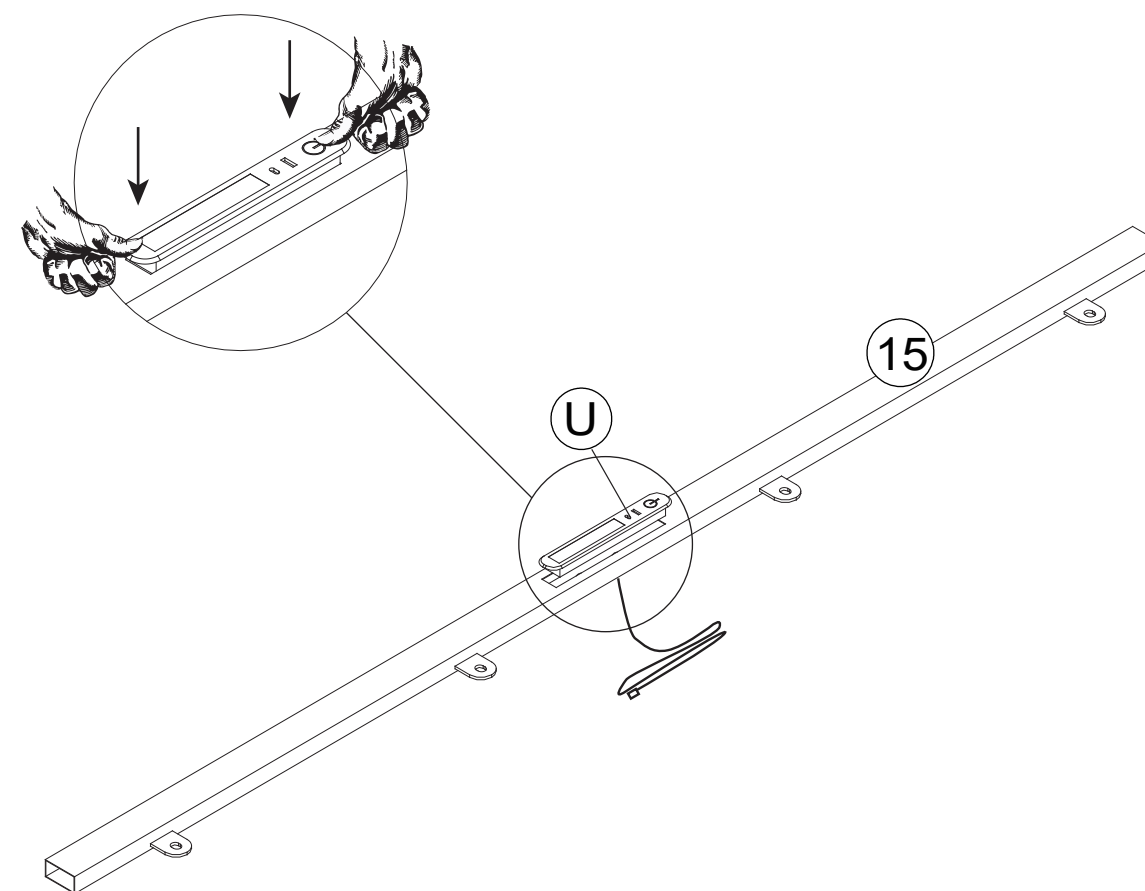

8


x2

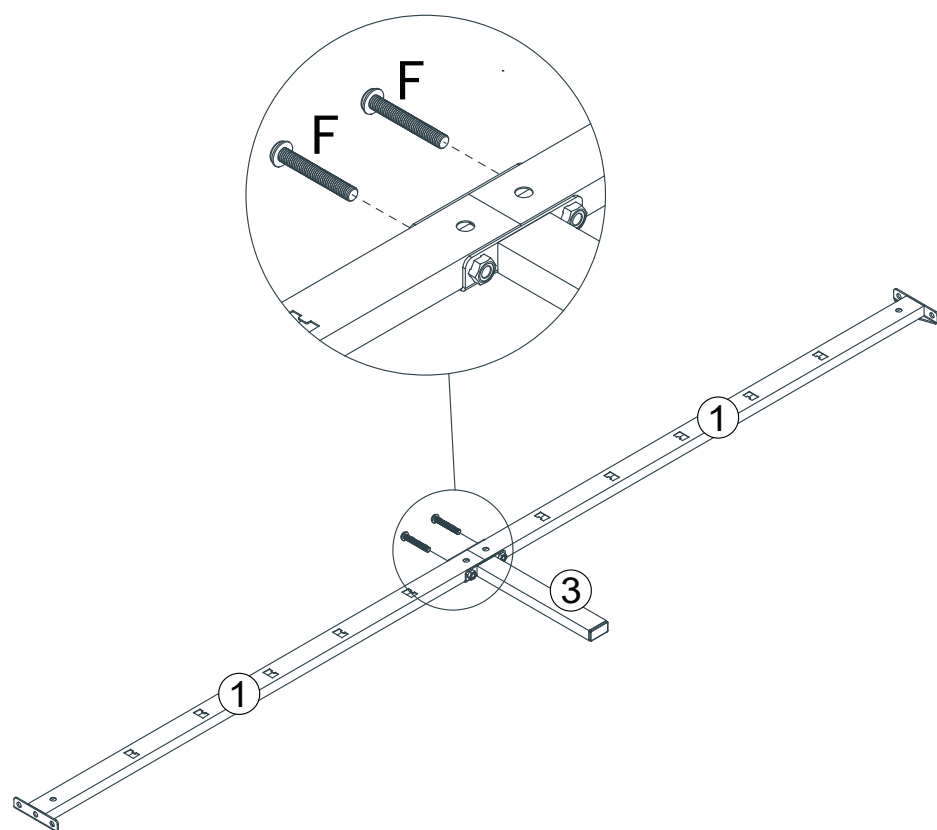

F		4pcs
M8x55		


7

2

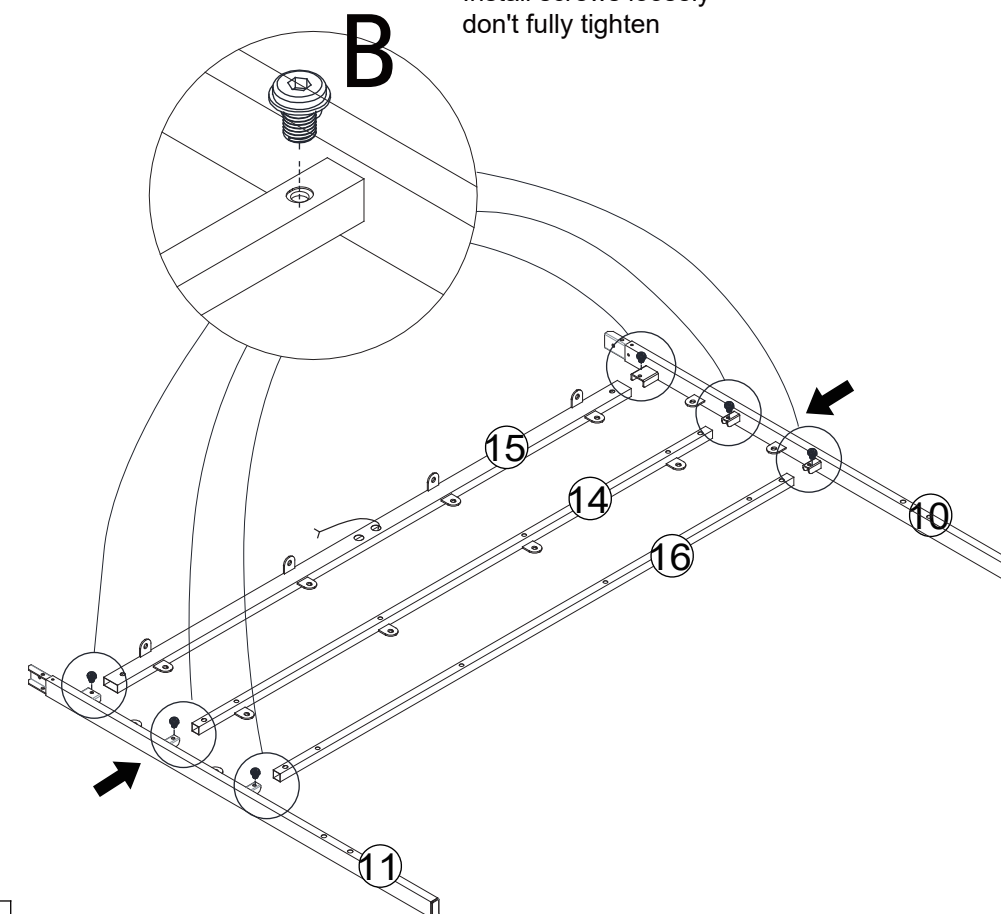Install screws loosely
don't fully tighten

B		6pcs
M8x16		


4

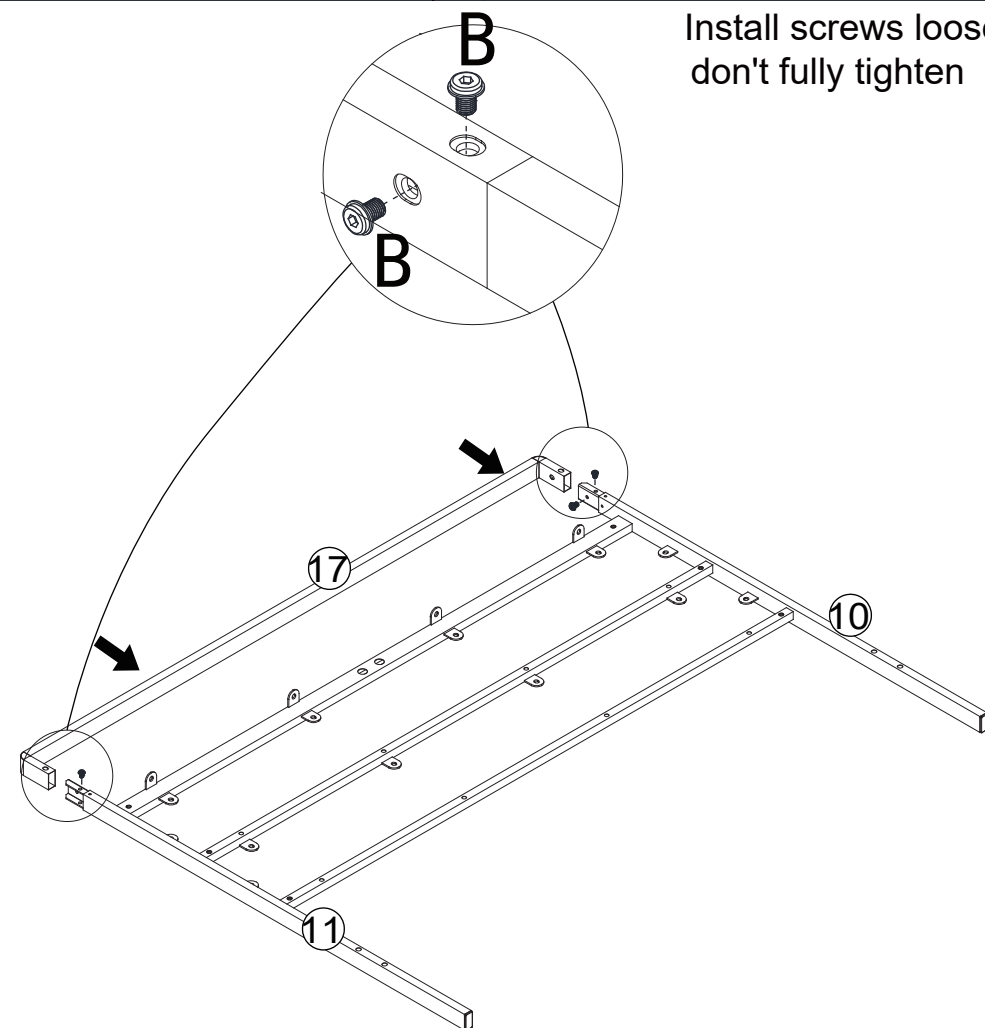

Install screws loose
don't fully tighten

3


B		M8x16	4pcs
---	---	-------	------

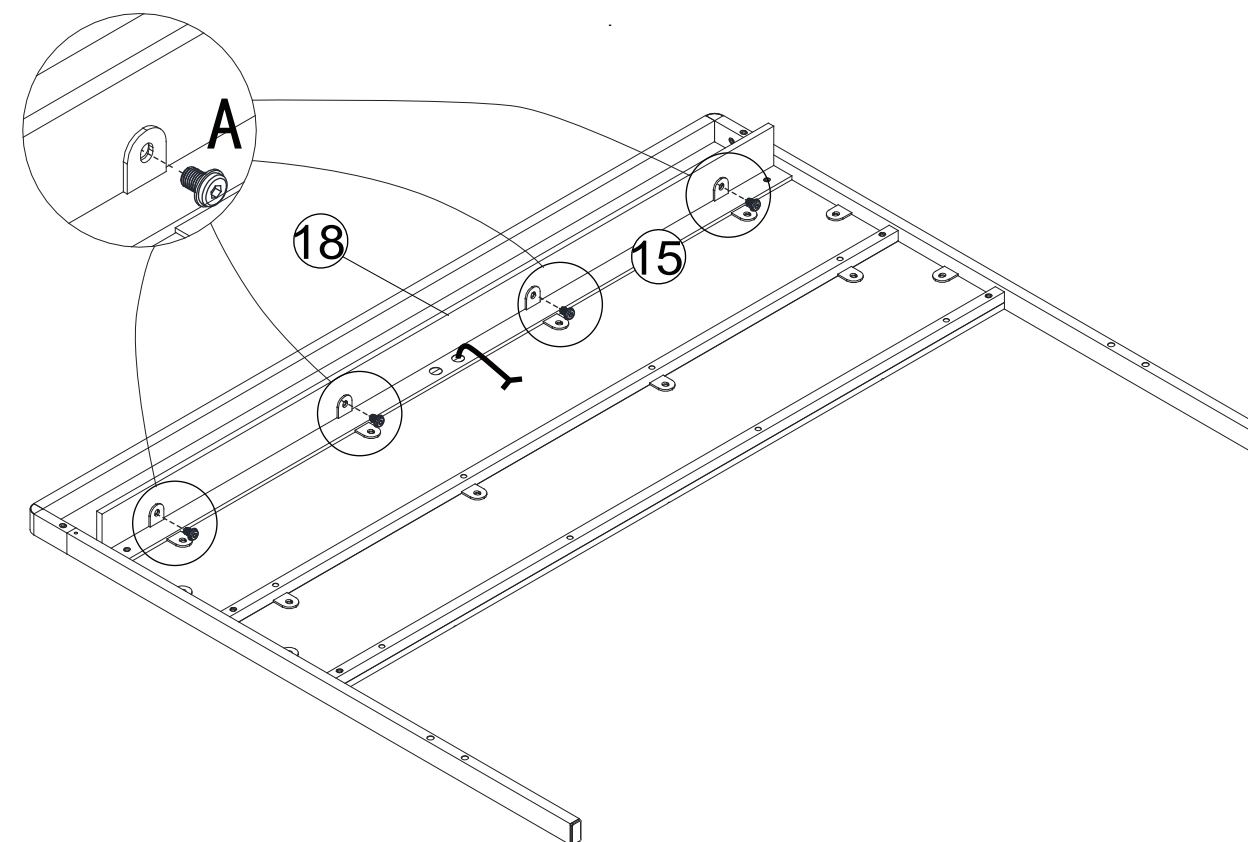


A		M8x12	4pcs white zinc
---	---	-------	-----------------

Lock all screws tightly

5

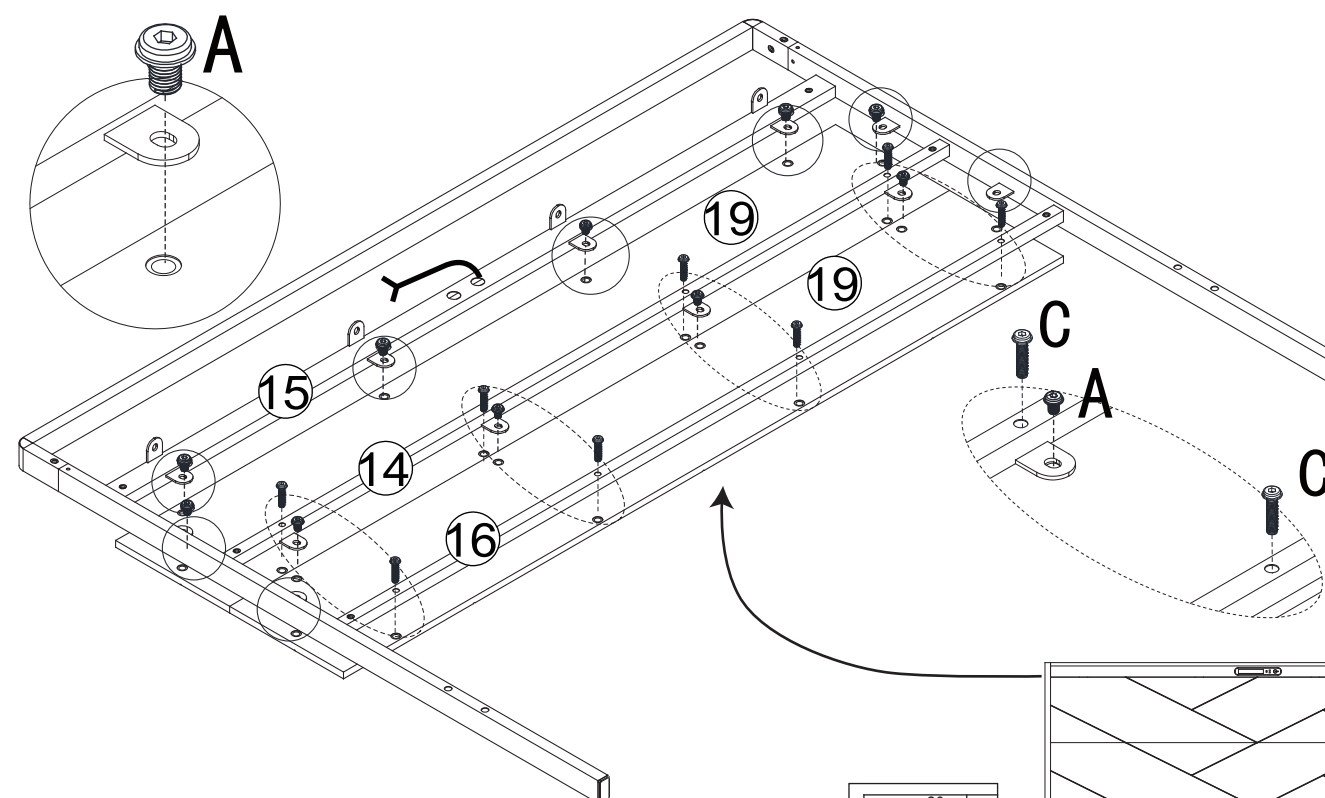


A		M8x12	12pcs white zinc
C		M8x30	8pcs

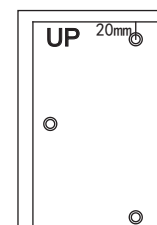

Front

Back

4

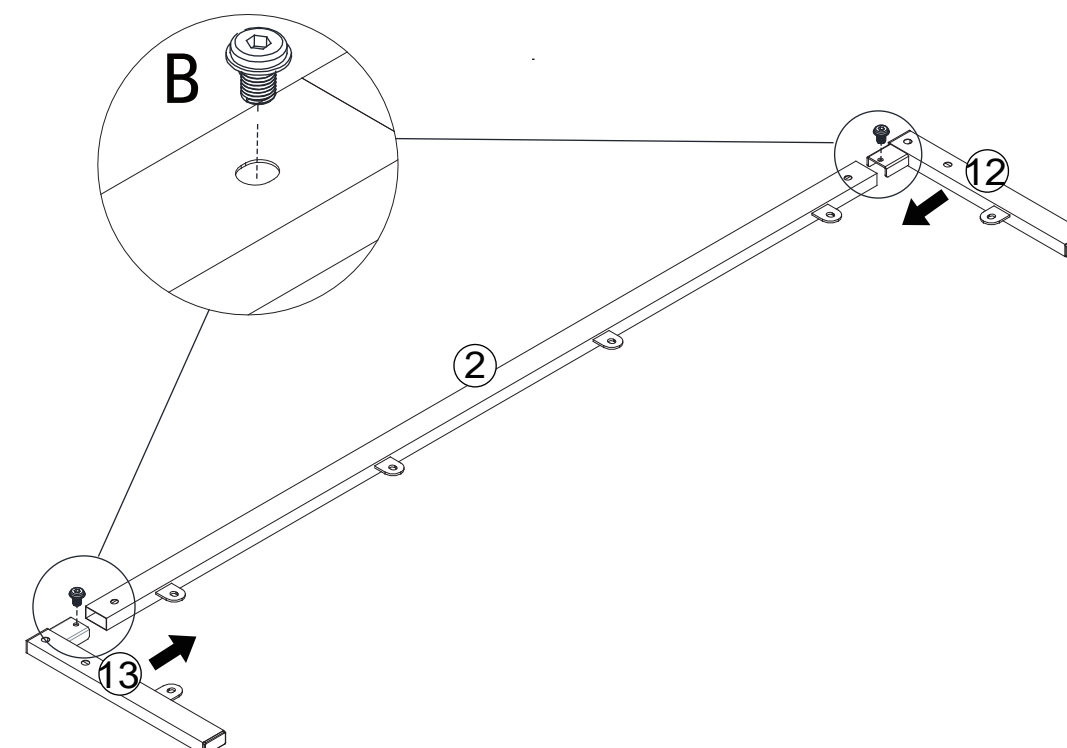

B		M8x16	2pcs
---	---	-------	------

6

5

6