

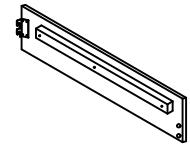
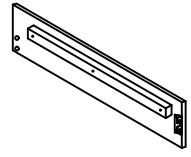





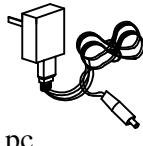


ASSEMBLY INSTRUCTIONS


QUEEN BED WITH LED CHANNEL HEADBOARD

A Headboard	B Footboard	C Side Rail C	D Side Rail D
			
1 pc	1 pc	2 pcs	2 pcs
E Headboard Leg	F Footboard Leg	G Side Rail Leg	H Slat
			
2 pcs	2 pcs	2 pcs	2 sets (6 pcs per set)
I Center Rail	J Support Leg	K JCBB Bolt M8 x 20mm	L JCBC Bolt M6 x 30mm
			
2 pcs	4 pcs	8 pcs	14 pcs
M JCBC Bolt M6 x 50mm	N JCBC Bolt M6 x 60mm	O CSK Screw M4 x 32mm	P Spring Washer M6
			
2 pcs	4 pcs	24 pcs	6 pcs
Q Flat Washer M6	R Allen Key M4	S Allen Key M5	T Leveler 30mm
			
8 pcs	1 pc	1 pc	4 pcs
U Plug			
			
1 pc			

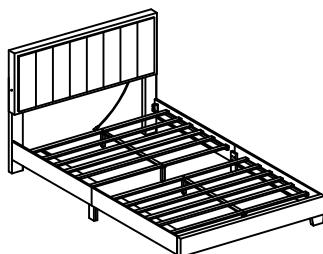


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Attach the Footboard Leg (F) to the Footboard (B) using JCBC Bolt (M) with the Allen Key (R).

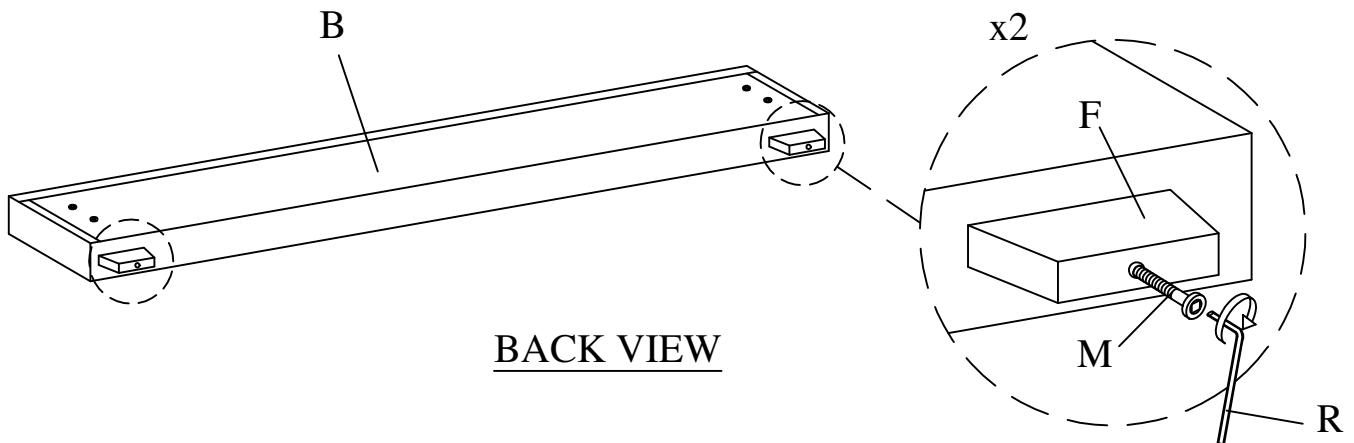


2 Attach the Headboard Leg (E) to the Headboard (A) using JCBC Bolt (L) and Spring Washer (P) with the Allen Key (R).

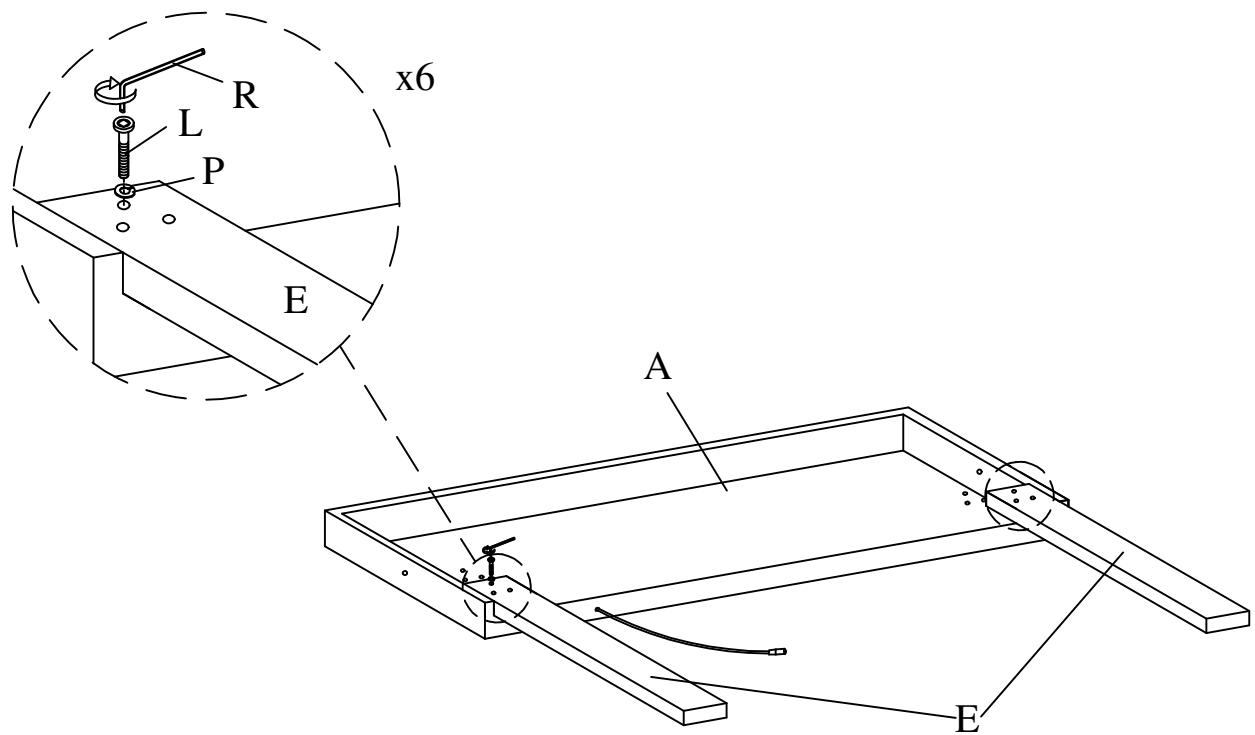


BACK VIEW


3 Attach JCBB Bolt (K) to the Headboard Leg (E) and Footboard (B) with the Allen Key (S). DO NOT fully tighten the JCBB Bolt (K).

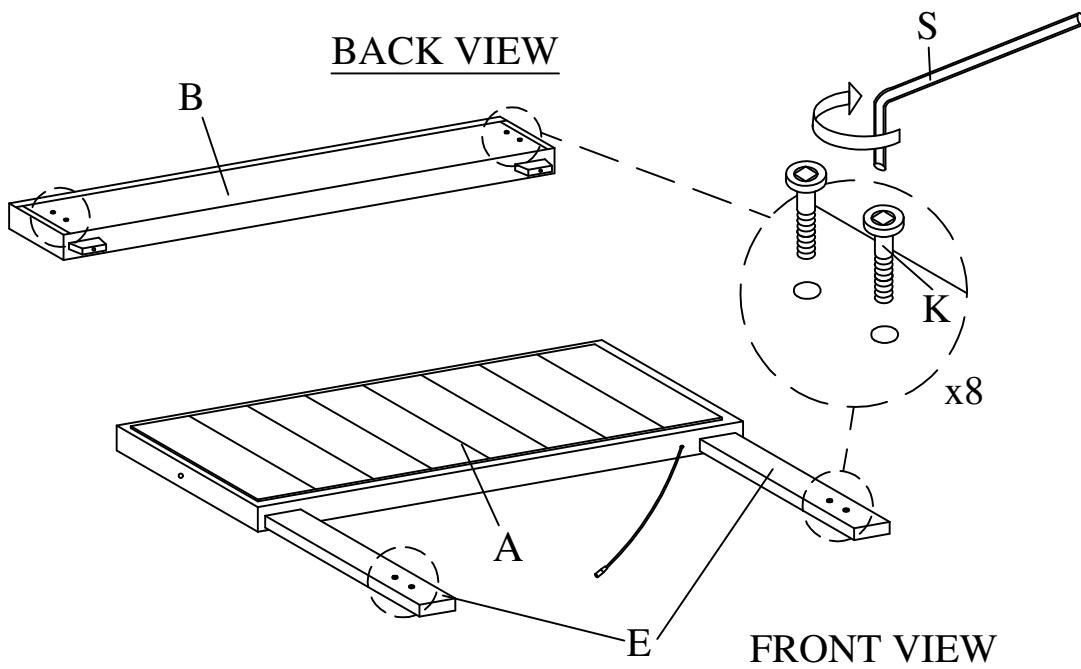


4 Attach the Side Rail Leg (G) to the Side Rail (C & D) using JCBC Bolt (L) and Flat Washer (Q) with the Allen Key (R).

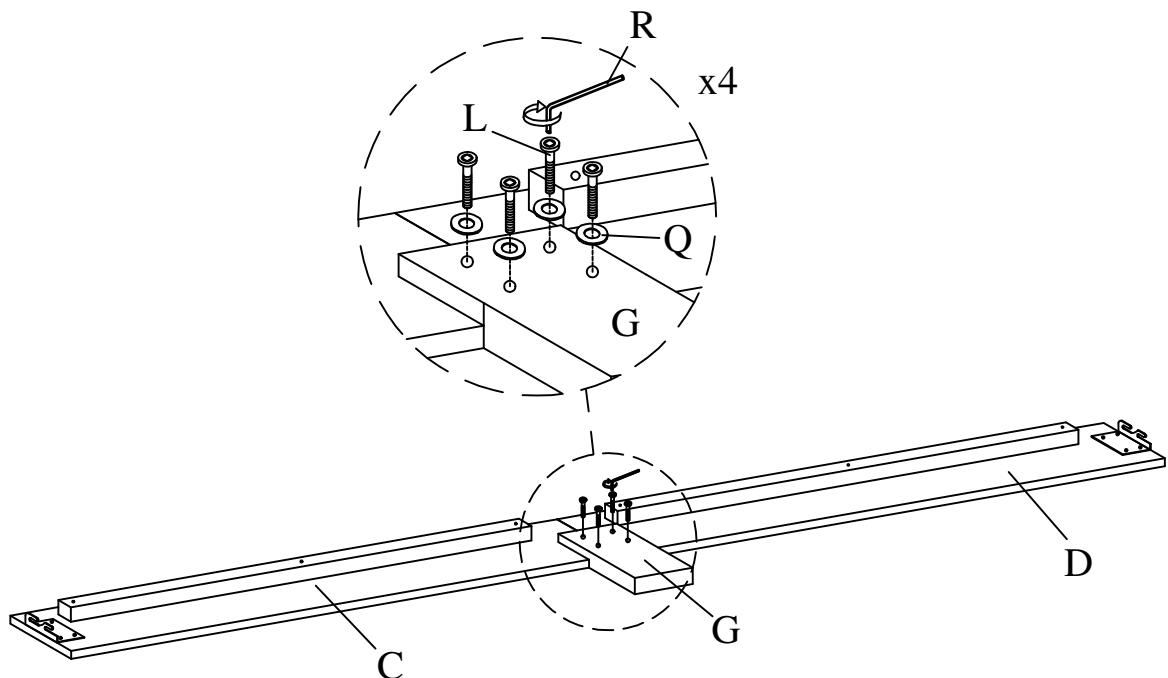


5 Attach the Side Rail (C & D) to the Headboard Leg (E) and Footboard (B) by pushing the bracket down to fit it.

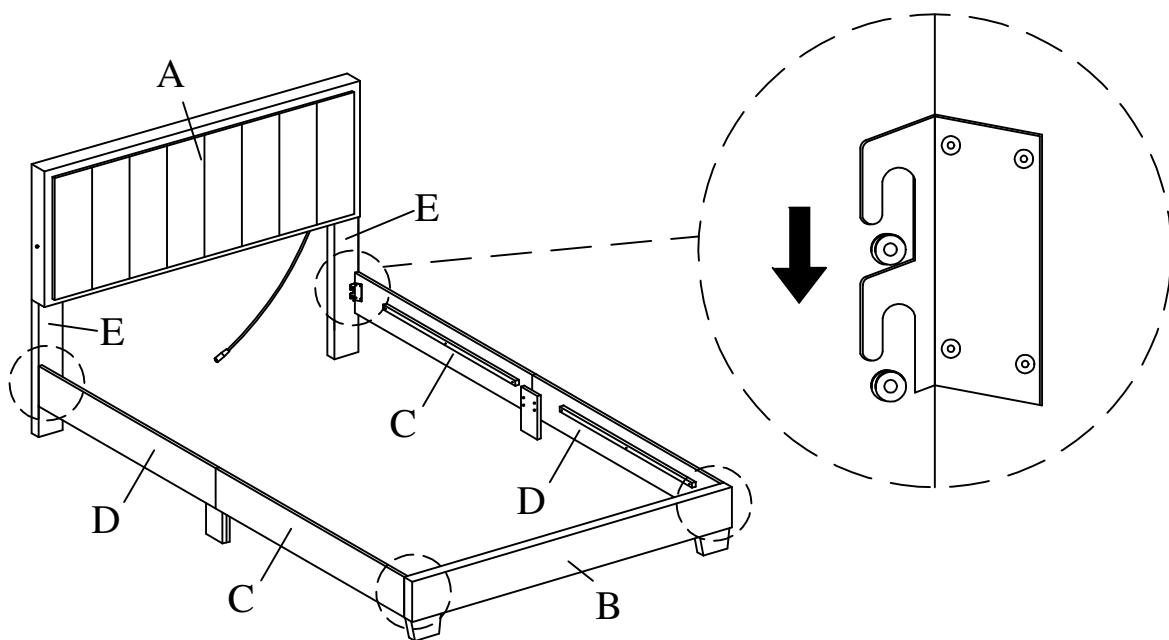


6 Attach the Leveler (T) to the Support Leg (J).

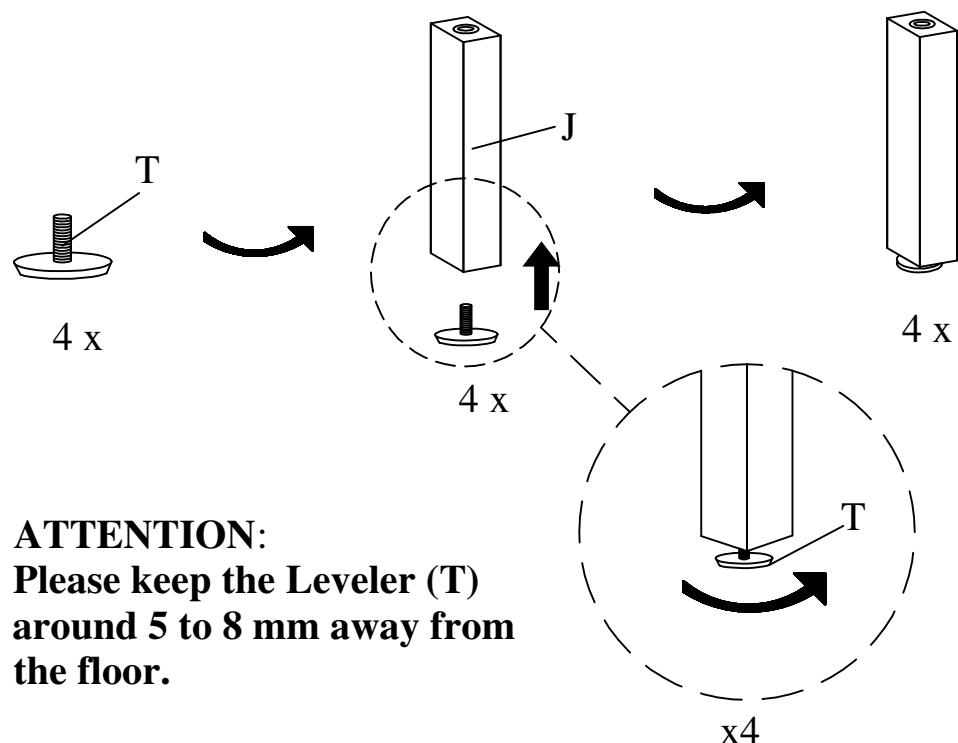


7 Attach the Center Rail (I) and Support Leg (J) to the Slat (H) using JCBC Bolt (N) with the Allen Key (R).

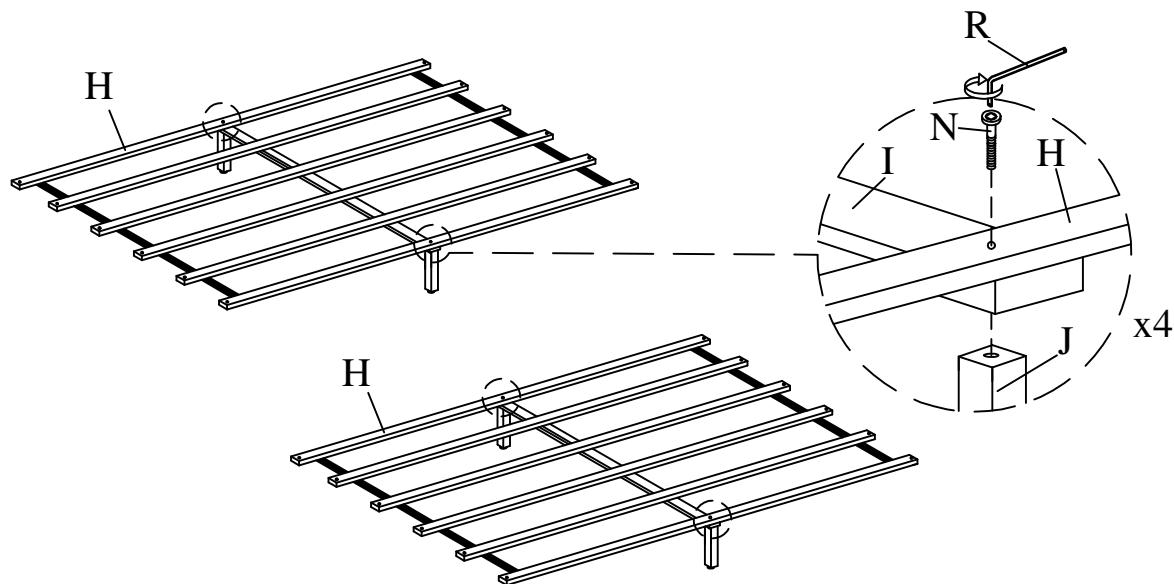

8 Tighten JCBB Bolt (K) on the Headboard Leg (E) and Footboard (B) with the Allen Key (S). Then, attach the Slat (H) to the Side Rail (C & D) using CSK Screw (O) with a screwdriver (not provided). The distance of the slats should be sufficient to obtain desirable bed stability.

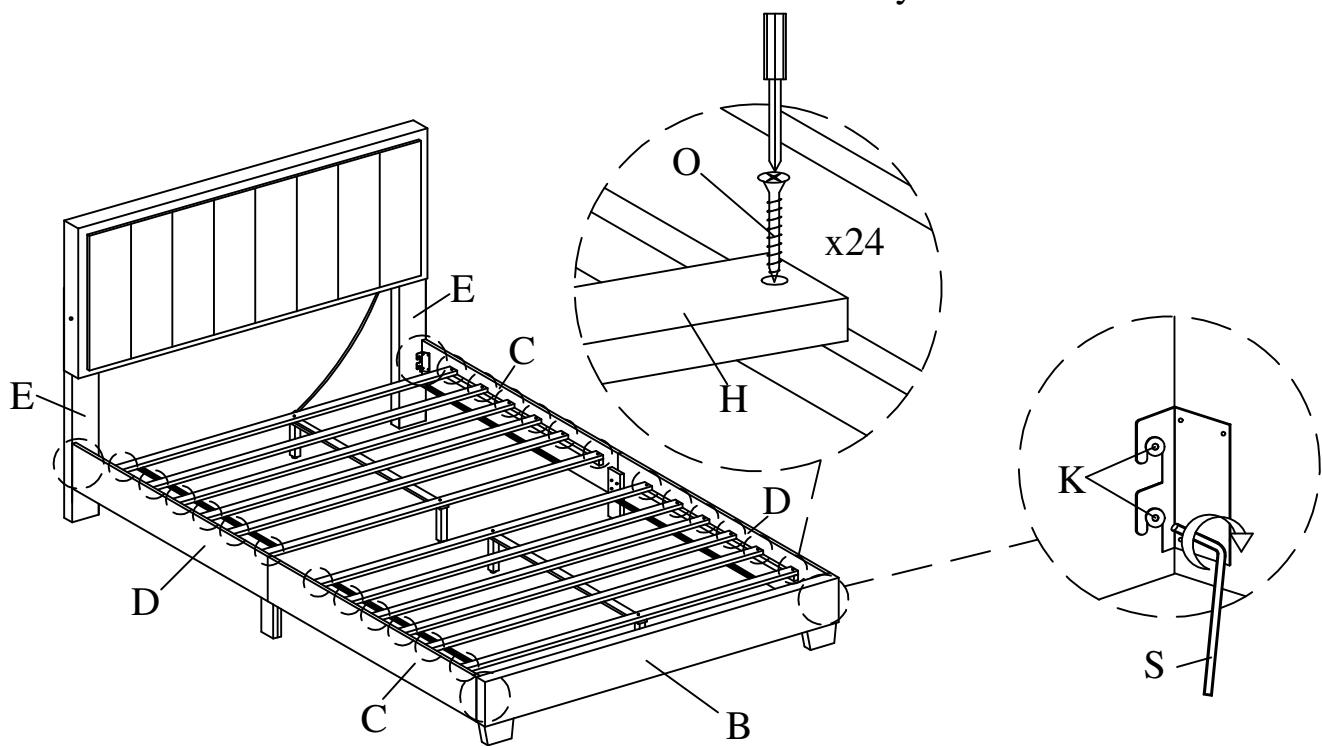

9 Install the Plug (U) to the back of the Headboard (A).

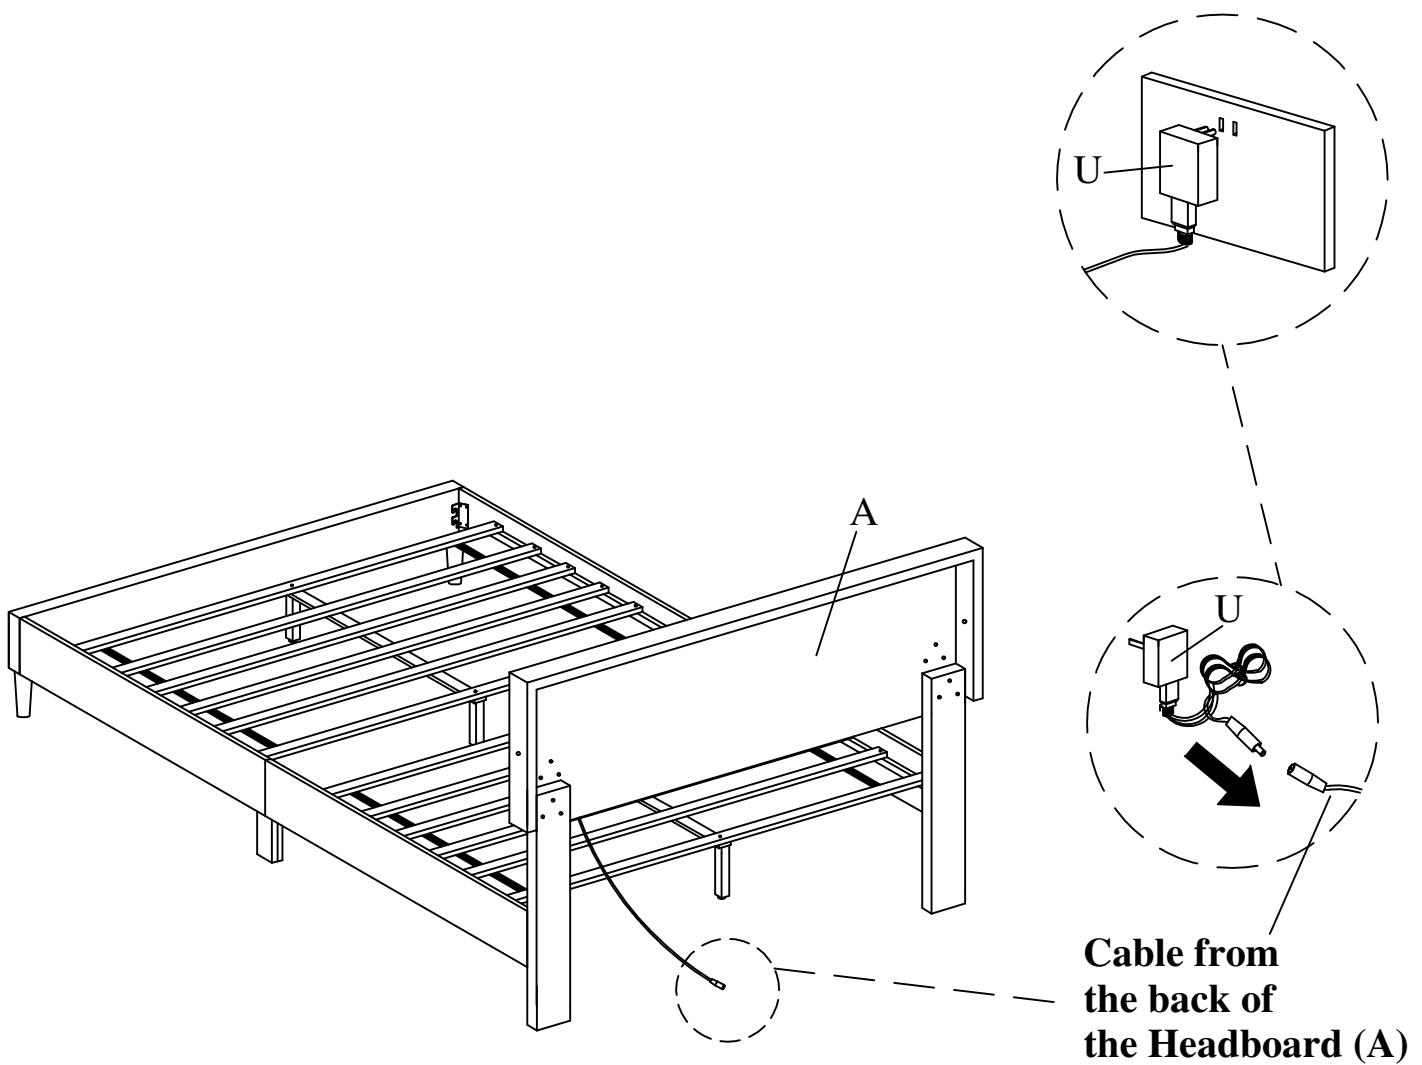

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.